



A MITEL
PRODUCT
GUIDE

Unify OpenStage M3/M3 Plus Unify OpenStage M3 Ex/M3 Ex Plus

on HiPath Cordless Office
HiPath 3000

Operating Instructions
05/2025

Notices

The information contained in this document is believed to be accurate in all respects but is not warranted by Mitel Europe Limited. The information is subject to change without notice and should not be construed in any way as a commitment by Mitel or any of its affiliates or subsidiaries. Mitel and its affiliates and subsidiaries assume no responsibility for any errors or omissions in this document. Revisions of this document or new editions of it may be issued to incorporate such changes. No part of this document can be reproduced or transmitted in any form or by any means - electronic or mechanical - for any purpose without written permission from Mitel Networks Corporation.

Trademarks

The trademarks, service marks, logos, and graphics (collectively “Trademarks” appearing on Mitel’s Internet sites or in its publications are registered and unregistered trademarks of Mitel Networks Corporation (MNC or its subsidiaries (collectively “Mitel, Unify Software and Solutions GmbH & Co. KG or its affiliates (collectively “Unify” or others. Use of the Trademarks is prohibited without the express consent from Mitel and/or Unify. Please contact our legal department at iplegal@mitel.com for additional information. For a list of the worldwide Mitel and Unify registered trademarks, please refer to the website: <http://www.mitel.com/trademarks>.

© Copyright 2025, Mitel Networks Corporation

All rights reserved

Contents

Safety notes	2
Using the OpenStage M3 Ex and OpenStage M3 Ex Plus handsets in potentially explosive working environments	2
Using OpenStage M3, OpenStage M3 Plus, OpenStage M3 Ex and OpenStage M3 Ex Plus . .	3
Using the battery pack for OpenStage M3 and OpenStage M3 Plus	3
Compliance with BGR 139 (personal alarm functionality)	4
WEEE mark	4
Controls, parts of the device	5
Operating instructions	6
Alarm functionality	6
Putting the handset into service	7
Checking the package contents	7
Removing the protective cover	7
Installing the charger	7
Fitting the attachment clip	8
Inserting the battery	9
Charging and using the battery	12
Inserting the dummy plug or connector	12
Connecting a corded headset	13
Connecting a USB data cable	13
Setting the handset display language	14
Setting the system display language	15
Description of controls	16
Function keys	16
Control key	17
Display keys	17
Menu icons in the main menu	18
Conducting calls – the basic functions	20
Activating/deactivating the handset	20
First seize the line, then dial	21
Dial first, then seize the line	21
Manual redial	22
Callback	23
Consultation	24
Answering or rejecting a call	25
Picking up a call in a call pickup group	25
Ending a call	25
Forwarding calls	26
Activating or deactivating the keypad lock	27
After leaving the radio network	27

Conducting calls – enhanced functions 28

Speakerphone mode	28
Conducting calls with the headset	29
Corded headset	29
Cordless headset	29
Number redial	31
Automatic redial	31
Deleting a redial entry or list	31
Adding a telephone number to the redial list	32
System speed dialling	33
System speed dialling, individual	33
System phonebook	34
Telephone database (LDAP)	35
The handset's phonebook	37
Saving an entry	38
Finding and dialling an entry	38
Dialling an entry with the speed dialling digit	39
Viewing an entry	39
Changing an entry	39
Marking a VIP (Very Important Person) entry	40
Deleting an entry or phonebook	40
Displaying available memory	40
Sending an entry or phonebook to the handset or system	41
Directed assignment of an MSN (multiple subscriber number)	42
Making calls using identification codes	43
Using the handset as a second line	44
Deactivating the phone number display	45
Directed call transfer	46
Activating/deactivating do not disturb	46
Call charge display	47
Call tracing	47
Entrance telephone	48
TDS telephone data service	49
Activating control relays	50
Sending a signal to the network	51
External call forwarding with a multiple subscriber number	51
Using night service	52
Using dual-tone multifrequency signalling	53
Parking/activating calls	54

Conducting calls – with multiple users 55

Call waiting	55
Call waiting tone off/on	56
Disabling/enabling automatic call waiting	57
Busy override	58
Transferring a call (joining)	58
Placing a call on hold	59
Toggling (switching between calls)	59
Conducting a conference	60
Using the second call function	62

Group functions 63

Activating/deactivating group calls	63
Ringing group on	65

UCD (Universal Call Distribution)	66
Mulap group (Multiple Line Application)	70

Message functions 71

Leaving a message/advisory message	71
Sending/calling text messages	72
Answering a message or voicemail message	73
Caller list	74

Additional functions 76

Handset alarm clock function	76
Handset appointment reminder function	77
System appointment function	79
Selecting a base	80
Setting the base	81
Speed dialling	81
Changing display key assignments	82
Data communication with the PC	82
Bluetooth interface	83
Activating/deactivating Bluetooth mode	83
Registering Bluetooth devices	84
Editing the list of known (trusted) devices	85
Phonebook transfer	87

Setting the handset 88

Setting the speaker volume	88
During a call	88
In idle status	88
Setting advisory tones	89
Activating/deactivating the vibration alert	89
Setting the ringer	90
Setting ringing tones and pictures with resource directory	91
Viewing screensavers and caller pictures / Playing sounds	91
Renaming and deleting screensavers/caller pictures/sounds	92
Checking the available memory	93
Activating or deactivating the ringer	93
Activating or deactivating the alerting tone	93
Activating/deactivating automatic call answering	94
Setting the date and time	94
Setting the display	95
Setting the conversion list for vCard transfer	99
Setting the menu view	99
Resetting the defaults	100

Telephone blocking 102

Handset telephone lock	102
Telephone lock code programming	103
Locking/unlocking the handset	103
Central telephone lock / Locking/unlocking other handsets	105

System functions 106

Calling functions via the menu	106
--	-----

Calling functions via codes	106
Functions and codes	107

Personal alarm functionality 109

Alarm statuses	109
Terms	109
Alarm types (overview)	112
Activating monitoring	113
Prealarm	113
Technical warning on the handset	114
Sending an emergency alarm signal/calling for assistance	115
Deactivating monitoring	116
Function test when activating Alarm Mode and PNG Mode	117

Appendix 118

Troubleshooting	118
Cleaning the handset	119
General specifications	120
Handset	120
DECT	120
Bluetooth	120
Battery	120
Handset operating times/charging times	121
Charging shells	121
Accessories	122
Directives and standards	122
EU directives	122
Ex protection standards	122
Protection rating	122
EMC/Safety Standards	122
Writing and editing text	123
Setting upper/lower case or digits	123
Writing names	124
Accessing additional functions via the PC interface	124
Declaration of conformity	125
EU-TYPE EXAMINATION CERTIFICATE	127

Index 130

Safety notes

Using the OpenStage M3 Ex and OpenStage M3 Ex Plus handsets in potentially explosive working environments

This handset fulfils the requirements of the ATEX Directive and meets the required EN and IEC standards (see the appendix in the operating manual). See also the notes in the declaration of conformity.

OpenStage M3 Ex and OpenStage M3 Ex Plus were designed for use in potentially explosive working environments (Ex zones) and in compliance with fire prevention regulations. Local and operational factors may lead to an explosive atmosphere in an Ex zone. Therefore, please observe the following Ex safety notes:

Handset:



- The handset may only be operated in Ex zones where it is certified. Refer to the appendix in the operating manual, the device identification and the EC type examination certificate. A copy of the prototype verification certificate IExU13ATEX1052 can be found in the appendix of this operating manual.
- Users must check the handset for damage and verify that it is operating correctly before using it in the Ex zone. A damaged handset or a handset that is not fully functional may not be brought into or used in the Ex zone.
- The following requirements must be met to satisfy the Ex protection and IP rating IP 65 (casing protection) in an Ex zone:
 - The battery compartment seal must not be damaged.
 - The cover of the battery compartment must be tightly screwed on.
- Deactivate the handset immediately and remove it from the Ex zone if the following situations occur:
 - You notice damage to the handset.
 - If liquids have seeped into the handset.
- Repair a damaged handset immediately.
- Only service employees with Ex zone training and authorisation should repair and service the handset.
- When swapping out a malfunctioning device/battery, the technician must return the malfunctioning device/battery to the manufacturer while specifying the customer data.
- Inappropriate use of the handset will result in revocation of its certification for use in Ex zones.

Battery pack:



- Only use the approved battery pack (see © Seite 120). Ex authorisation is only valid and the handset can only be operated if this battery pack is installed. Other battery packs are strictly prohibited. If they are used, Ex protection is no longer valid.
- Never open the handset battery compartment in an Ex zone. Battery pack removal, charging or transportation is not permitted in these zones.

Charging the battery pack:



- The battery pack may only be charged:
 - Outside the Ex zone
 - While inside the handset
 - Using the supplied charging unit.
 - The charging unit should only be used outside the Ex zone.
-

 **Headset:**

- A corded headset may not be used in the Ex zone. Only Ex authorised Bluetooth headsets may be used. For more information, consult your system administrator.
-

 **USB cable connection:**

- Data may not be transferred via USB cable in the Ex zone.
-

Using OpenStage M3, OpenStage M3 Plus, OpenStage M3 Ex and OpenStage M3 Ex Plus

 **Attention:**

- Do not use OpenStage M3 and OpenStage M3 Plus handsets in potentially explosive environments!
 - Please observe local safety regulations when using the handset.
 - The ringer, signal tones and handsfree talking (speakerphone mode) are played over the loudspeaker. Do not hold the handset to your ear when it rings, when a signal tone is emitted or if speakerphone mode is switched on. Otherwise you may seriously and permanently impair your hearing.
 - A transmitter signal is emitted by your handset. Please observe local safety regulations.
 - Handsets can interfere with the operation of medical equipment. Please observe the technical requirements of the relevant environment (hospital, for instance).
 - The handset can cause unpleasant humming in hearing aids.
-

 **Caution:**

- To avoid mutual interference, do not operate the handset in the vicinity of electronic equipment.
 - Only use the charging shell provided to charge the handset.
 - If you give your handset to someone else, remember to include the operating manual with it.
-

Using the battery pack for OpenStage M3 and OpenStage M3 Plus

 **Attention:**

- Only use the original battery pack from the manufacturer of the OpenStage M3/ OpenStage M3 Plus!
 - Do not use a standard rechargeable battery pack. This can result in serious injury and material damage (risk of explosion, degradation of battery pack cladding, functional interference and handset damage).
 - Avoid contact with fire and water.
-

Compliance with BGR 139 (personal alarm functionality)

Only for OpenStage M3 Plus and OpenStage M3 Ex Plus!

Notes:

- For BGR-compliant operation as a personal alarm signal device with a voice communication capability (PNG-S), the handset must operate in conjunction with an alarm server. Handset operation without an alarm server is not BGR-compliant.
- The alarm functionality cannot be deactivated by the user. Deactivation is only possible via a control call from the alarm server.
- For compliance with BGR 139, the handset may only be configured by specially qualified technicians. The PNG configuration menu is PIN-protected to prevent unauthorised configuration changes. The PIN should be kept secret.

Attention:

- The pre-alarm volume starts low and gradually rises until it becomes very loud. Users should be aware of this.
- The battery pack must always be sufficiently charged for the anticipated period of operation. The battery pack's charging capacity diminishes over its life. It should therefore be replaced by specially qualified technicians when capacity levels become insufficient (discharging accelerates over time). If necessary, consult your safety officer.

WEEE mark

Notes:

- All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.
- For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service, the shop where you purchased the product or your sales representative.



Controls, parts of the device



- 1 Alarm and emergency call key (red)
- 2 LED for indicating mode activation and alarm status
- 3 Example of a 2.5 mm jack for headset (not for OpenStage M3 Ex/ OpenStage M3 Ex Plus)
- 4 Earpiece
- 5 Display
- 6 Display keys
- 7 Control key
- 8 Speakerphone key
- 9 Talk key
- 10 Star key
- 11 Microphone

- 12 Jack for pull cord or dummy connector
- 13 Hash key
- 14 Number keys
- 15 On-hook and on/off key
- 16 Message key
- 17 Volume key (+/-)
- 18 Battery cover
- 19 Mini USB connection (under battery cover)
- 20 Screw for battery cover
- 21 Tone ringing/speakerphone loudspeaker
- 22 Notch for attachment clip (both sides)

How to use the keys: ⑦ Seite 16

Operating instructions

These operating instructions describe your handset and its functions on your communications system.

All functions that can be performed via your handset are described here. If some of the required functions are not available on your handset, it may be due to one of the following:

- The function is not configured for you or your handset - please contact your system administrator.
- Your communications platform does not feature this function - please contact your contract partner for the communications system.

Alarm functionality

 **Only** for OpenStage M3 Plus and OpenStage M3 Ex Plus!

OpenStage M3 Plus and OpenStage M3 Ex Plus offer personal alarm functionality with voice communication capability. A device with this functionality is also described in abbreviated form as PNG (personal alarm device) or as PNG-S (personal alarm device with voice communication capability).

A manual alarm can be triggered via an alarm key. Sensors detect non movement, man down and escape states, which can be signalled as automatic alarms.

An integrated time alarm function is used to determine whether the person being monitored is still responsive. A pull cord is used to check whether the OpenStage M3 Plus is still on the monitored person.

OpenStage M3 Plus and OpenStage M3 Ex Plus optionally monitor the following operating functions:

- Battery charging
- Synchronicity with DECT base
- Communication with an alarm server

A technical warning is reported on the handset in the event of a malfunction.

For more information on the alarm functionality please refer to Kapitel , "Personal alarm functionality".

Putting the handset into service

Checking the package contents

- Handset
- Battery pack
- Accessory pack containing the following:
 - Battery cover
 - Screw for battery cover
 - Allen key
 - Attachment clip
 - Holder for attachment clip
 - Dummy plug (OpenStage M3 and OpenStage M3 Ex only)
 - Connector with cord for man down alarm (OpenStage M3 Plus and OpenStage M3 Ex Plus only)
- Document "Information on Handset"
- Document "Safety Notes"

Removing the protective cover



Remove the protective cover from the display before putting the handset into service.

Installing the charger

The charger is designed for operation in closed, dry rooms within a temperature range of +5 °C to +45 °C.

Position the charger on a level, non-slip surface.

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out.



Please note:

- Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices.
 - Protect your handset from moisture, dust, corrosive liquids and fumes.
-

1. Connect the flat plug from the power adapter to the charger.
2. Plug the power adapter into the plug socket.



To disconnect the flat plug from the charger, press the release button and disconnect the flat plug.




Fitting the attachment clip

1. Press the attachment clip pin on the back of the handset until the tabs on the sides engage audibly in the recesses on the phone.



2. Slide the attachment clip onto the pin as it clicks audibly into place.

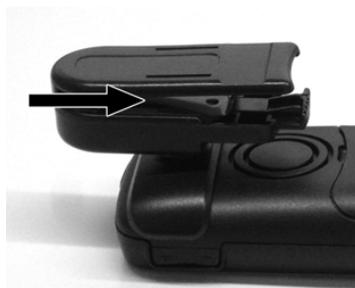

3. Secure the handset with the attachment clip to the belt. To do this, open the brackets by squeezing the free end and attach it to the belt.



To remove the handset, press the opener on the attachment clip and slide the handset from the pin.



➡ While you are wearing the handset on the belt you will be able to read the display without having to remove the handset, see ⑦ Page 98.


Inserting the battery

The handset is supplied with an approved battery. The battery is not charged when supplied. It is first charged in the handset.

- ➡
- Do not remove the battery in Ex zones.
 - Please observe the safety notes ⑦ Page 2.
 - Only use approved batteries ⑦ Page 120.
 - Open the battery compartment in a dust-free environment only.
 - Your phonebook entries and all settings remain stored even if you remove the battery. The date and time settings will be reset.
 - Only remove the battery if it is defective. The battery's life diminishes each time it is removed.


Opening the battery compartment

1. Loosen and remove the screw from the battery cover with the Allen key.
2. Insert a suitable screwdriver into the recess between the housing and battery cover, turn it and then raise the battery cover.
3. Lift up the battery cover from the housing.

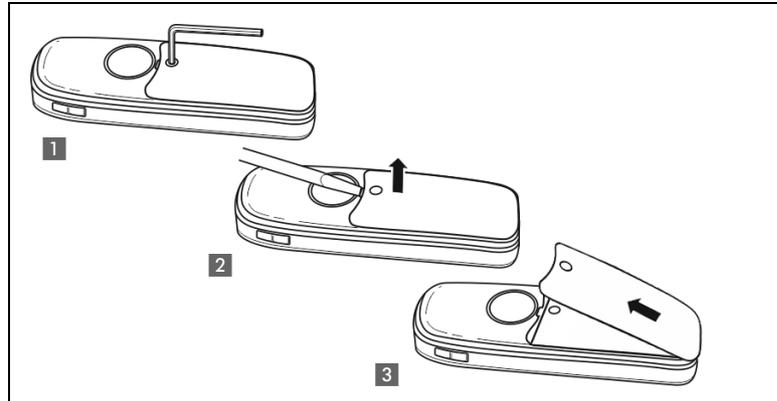


Inserting the battery

Insert the battery pack (at an angle, nose first and the contacts facing down). Then press it down into the compartment until the battery pack's positioning clip firmly snaps into place.

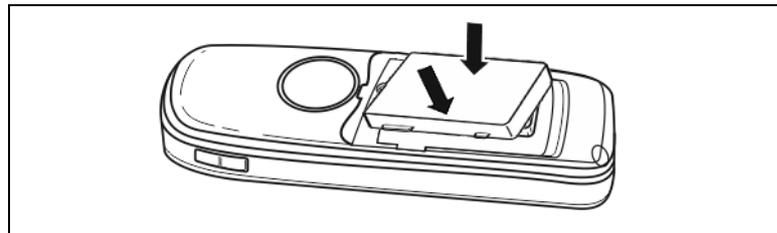


Inserting the sealing cover

1. Remove the sealing ring if present.
2. Insert the sealing cover (1) with the labelled side facing up and press firmly into place on all sides, making sure it fits correctly. The protrusions on the side (2) of the sealing cover must fit precisely into the designated notches on the side. The protrusions should be visible externally when the cover is attached and are used for checking that the sealing is in place and fitted correctly.

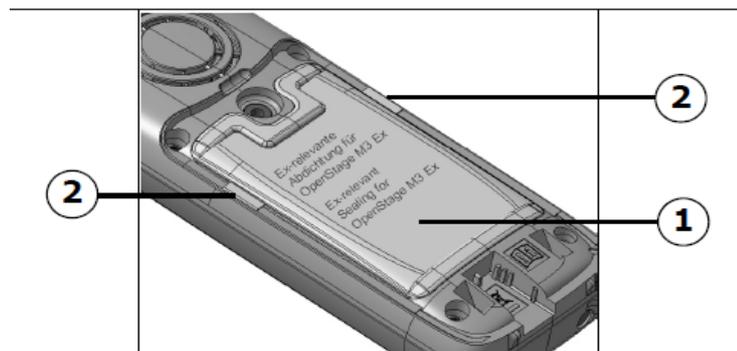

Closing the battery compartment

1. Replace the battery cover at the bottom of the housing into the recesses.
2. Then press down the battery cover until it rests firmly on the seal.
3. Insert and tighten the Allen screw.

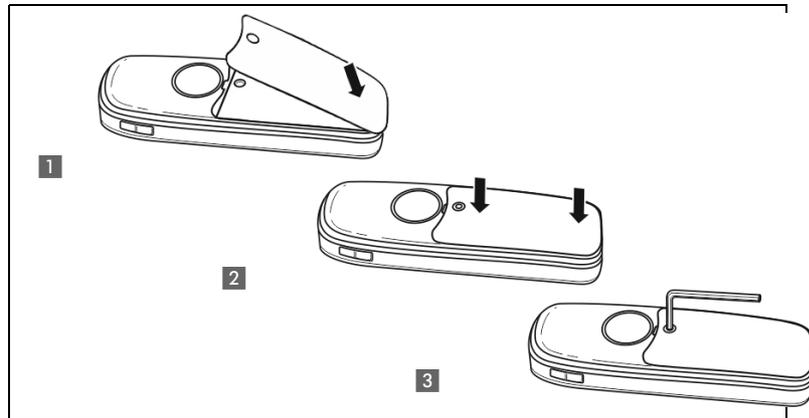

4. Check visually that the sealing cover has been attached and is correctly fitted. The two yellow protrusions that are visible on the sides of the sealing cover must fit precisely into the notches.



Charging and using the battery

To charge the battery, insert the handset into the charging shell with the keypad facing forwards.



Important:

Only place the handset in the designated charger. (For order numbers see © Page 121).


The charging status is indicated by the charge status LED.



- Initial charging: Charge the battery for at least 10 hours without a break, regardless of the charging status icon.
- For future charging: you can replace your handset in the charging shell each time it has been used. Charging is electronically controlled which ensures that the battery is charged optimally.
- The capacity of the Ex battery pack can diminish due to ageing to the extent that it is no longer sufficient (increasingly faster discharge) for the intended operating life. The Ex battery pack must then be replaced by appropriately trained service personnel.

Inserting the dummy plug or connector

Insert the dummy connector (1) / connector with cord (2) into the recess provided. Make sure the dummy connector is positioned correctly.

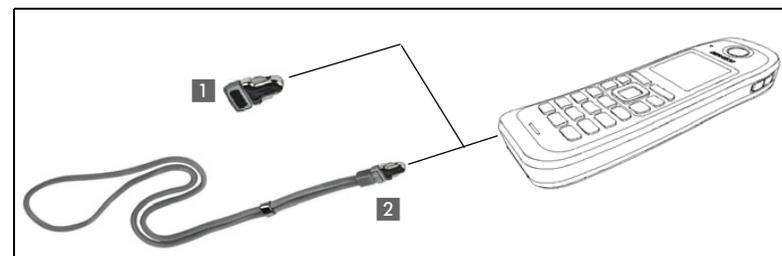

If you do not require the man down alarm function on the OpenStage M3 Plus or OpenStage M3 Ex Plus you can also use the connector without a cord as a dummy connector.




Regardless of whether or not a cord is used, the handset can be placed with the connector inserted in the charger. Run the cord out from the front of the charger.

Connecting a corded headset

Not for OpenStage M3 Ex and OpenStage M3 Ex Plus!

You can connect a headset with a 2.5 mm jack plug to the left side of your handset.

1. To do this, open the rubber cover using your finger nail and bend it outward.
2. Insert the jack plug into the socket.

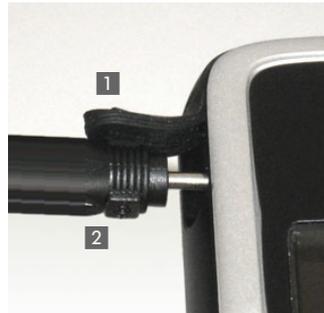

The headset volume corresponds to the setting for the earpiece volume [⑦ Page 88](#).

Use a Bluetooth headset for Ex-proof equipment, [⑦ Page 83](#).

Connecting a USB data cable

The USB cable must not be connected in Ex zones!

You can connect a USB data cable into the port under the battery cover of your handset.

1. To do this, open the battery cover, as when inserting the battery [⑦ Page 9](#).
2. Insert the mini-USB plug into the socket.



Setting the handset display language

If your preferred language for handset display texts is not set as the default, you can set this yourself.

Opening the main menu

Open the handset's main menu.

Opening the first submenu

Select the menu icon and confirm.

Opening the second submenu


Select the menu item and confirm.

Selecting a language

Select and confirm the language you require.

Press the On-hook key to end the operation.

-
- • If you inadvertently set a display language that you do not understand, press " " and then select the correct language.
 - If you want to reset the default display language: [🔗 Page 100](#).
 - You can also change the language of the display texts for the communications system: [🔗 Page 15](#).
-

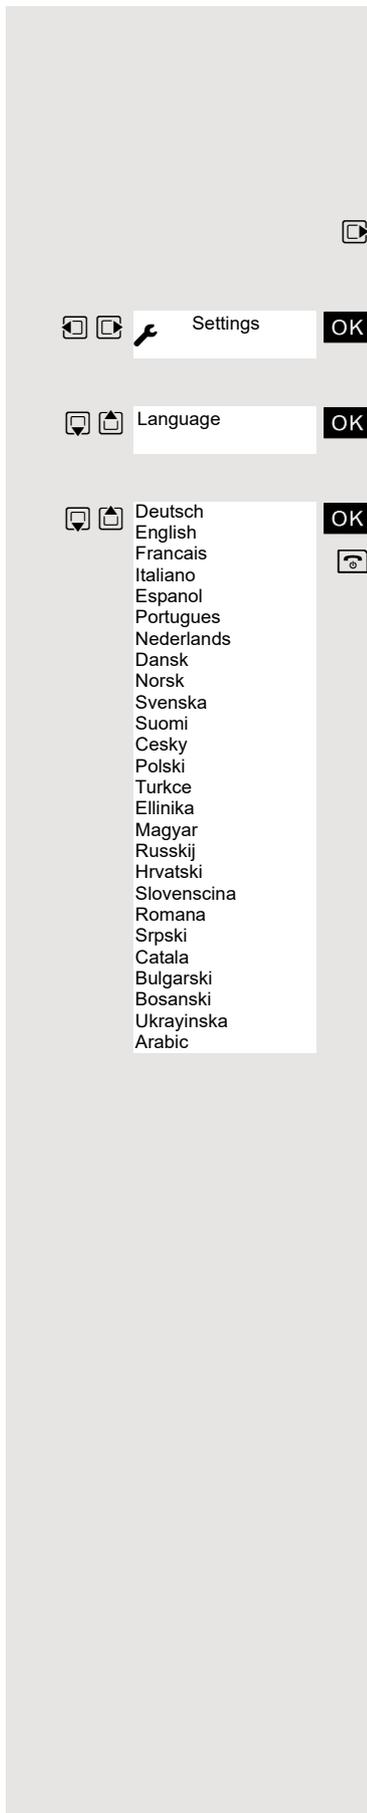

Setting the system display language

If you wish to change the language of the display texts, then you must also change the system language on the handset. A different language can be set for every handset on the system.

Press and hold the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.


Select the menu item and confirm.

Select the menu item and confirm.

Select and confirm the language you require.

Press the On-hook key to end the operation.

 A description of further settings can be found from [Page 88](#).

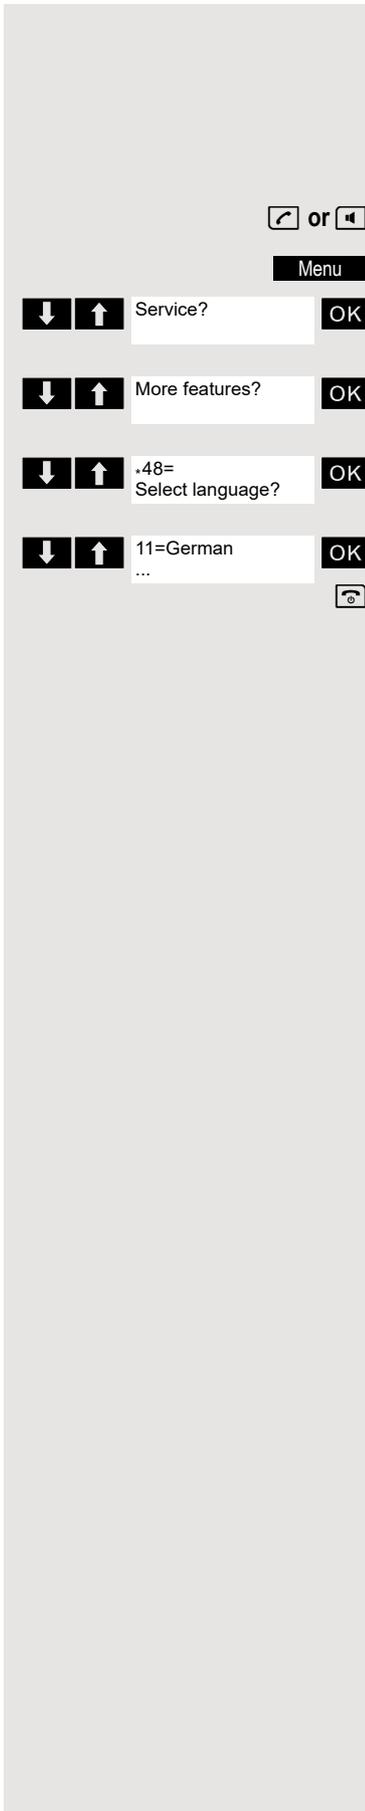

Description of controls

Function keys

The following function keys are available:

Key	Name	Usage
		<ul style="list-style-type: none"> • End a call • Cancel functions • Go back to the next menu level up • Activate or deactivate the handset
		<ul style="list-style-type: none"> • Answer a call • Dial a phone number • Open the redial list • Access telephone system functions
		<ul style="list-style-type: none"> • Answer a call • Dial a phone number • Toggle between handset and speakerphone mode • Access telephone system functions
		<ul style="list-style-type: none"> • Access message lists
		<ul style="list-style-type: none"> • When entering the phone number: <ul style="list-style-type: none"> – Press and release: Insert "*" – Press and hold: Insert "R" • In editor mode (string): Show all special characters • In idle status: Press and hold to switch on/off the ringer
		<ul style="list-style-type: none"> • When entering the phone number: <ul style="list-style-type: none"> – Press and release: Insert "#" – Press and hold: Insert a dialling pause (for example between the prefix and the phone number or when checking a mailbox) • In editor mode (string): Toggle between uppercase and lowercase and digits • In idle status: Press and hold to switch on/off the keypad lock
		<ul style="list-style-type: none"> • For triggering a manual alarm or emergency call
		<ul style="list-style-type: none"> • Adjust the volume for ringtones • When conducting a call: Adjust the volume in handset and speakerphone mode and for the headset

Control key


The control key is assigned different functions depending on the operating situation:

Situation	 Press top of key	 Press bottom of key	 Press left side of key	 Press right side of key
In idle status	Call volume	Open the handset's phonebook	-	Open the handset's main menu
During a call	Call volume	Open the handset's phonebook	-	Select "Loudspeaker Vol", "GAP DTMF", "Base Settings"
In the main menu	Select a menu icon	Select a menu icon	Select a menu icon	Select a menu icon
In lists and menus	Next-higher item in the list	Next-lower item in the list	Next menu level up, cancel	Select an entry (OK)
In the input field	Move the cursor up one line	Move the cursor down one line	Move the cursor to the left	Move the cursor to the right
Change values	-	-	Reduce value	Increase value

The centre key (central key of control key) has an OK function for confirming/adopting a selection.

Display keys


The handset has two display keys, each with one or two functions. When the key is allocated two functions, press the right or left side of the key to select the corresponding function. The display key assignment depends on the operating status.

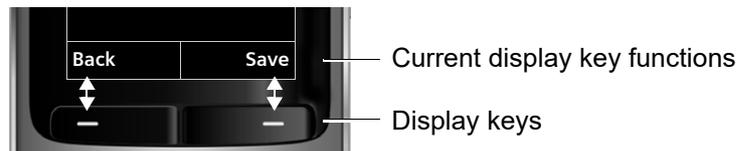

Some important display keys include:

Icon	Usage
	
	
	
	
	
	

 Menu icons in the main menu



The handset's main menu can be opened by right-clicking or pressing the centre key of the control key.

The menu icons are selected by pressing the left/right and top/bottom of the control key.

Alternatively, you can also press one of the numerical keys, e. g. **4** for "Alarm Clock" or **9** for "Settings".

Menu options that are only available in expert mode are marked with the • icon. Expert mode can be set by switching the menu view from simplified to complete. To set, see [Page 99](#).

Icon	Name	Usage
	Resource Directory	Manage images and tones: <ul style="list-style-type: none"> • Screensavers • Caller Pictures • Sounds • Capacity
	Bluetooth	Configure Bluetooth interface: <ul style="list-style-type: none"> • Activation • Search for Headset • Search Data Device • Known Devices • Own Device
	Additional Features	Alarm and emergency call configuration: <ul style="list-style-type: none"> • [Mode] Activation • Configuration (only with Service PIN) • Operating Mode (only with Service PIN, only with OpenStage M3 Plus and OpenStage M3 Ex Plus) • Display Rotate (only with OpenStage M3 Plus and OpenStage M3 Ex Plus) <p>For information on configuring and selecting the operating mode, see the "Alarm and Emergency Call Configuration" Service Manual.</p>
	Alarm Clock	Configure alarm call function.
	Call Lists	Open call list if calls are available.
	Voice Mail	Call mailbox if voicemail calls are available on the network answering machine.
	Organizer	Manage appointments: <ul style="list-style-type: none"> • Calendar • Missed Alarms
	Directory	Manage phonebook.

Icon	Name	Usage
	Settings	<p>Configure handset:</p> <ul style="list-style-type: none">• Date/Time• Audio Settings<ul style="list-style-type: none">– Handset Volume– Advisory Tones– Vibration– Ringtones (Handset)• Display + Keypad<ul style="list-style-type: none">– Screensaver– Large Font– Colour Schemes– Display Backlight– Keypad Illumination– Auto Keylock• Language• Registration<ul style="list-style-type: none">– Register Handset– Select Base (only if registered on several systems)• Telephony<ul style="list-style-type: none">– Auto Answer– Aera Codes• System<ul style="list-style-type: none">– Handset PIN– Handset Reset– Base Reset• Menu View<ul style="list-style-type: none">– Simplified– Complete

Conducting calls – the basic functions

You can use your handset to make both internal and external calls.

Internal calls are calls that

- you make within the range of a communications system, for example, within your company,
- you make between networked communications systems, for example, to different company locations.

External calls are calls that you conduct with users of the public telephone network.

Activating/deactivating the handset



Press the On-hook key until the activation or deactivation is confirmed by a signal.

PIN

If the default PIN has not been changed (0000), the handset is ready for operation as soon as it is switched on. If a PIN was set, it must be entered before the handset can be operated.

Enter the PIN.

Confirm your entry. The handset is ready to use.

Please enter
PIN:



OK

Displaying the connection quality

The strength of the incoming signal is displayed by the "receive field strength" icon in idle status:

	Flashing, no reception
	Low receive field strength
	50% receive field strength
	75% receive field strength
	100% receive field strength


The radio range is different indoors and outdoors Page 120. Please consult your system administrator in the event of range problems.

Charging the battery

You may only use the charging shell provided for the handset.

The handset charges when sitting in the charging shell, even when deactivated.

If the handset deactivates because the battery is flat, it automatically reactivates and is ready for operation as soon as you place it in the charging shell. The charging operation starts. If a PIN was set, it must be entered first to allow charging to start.

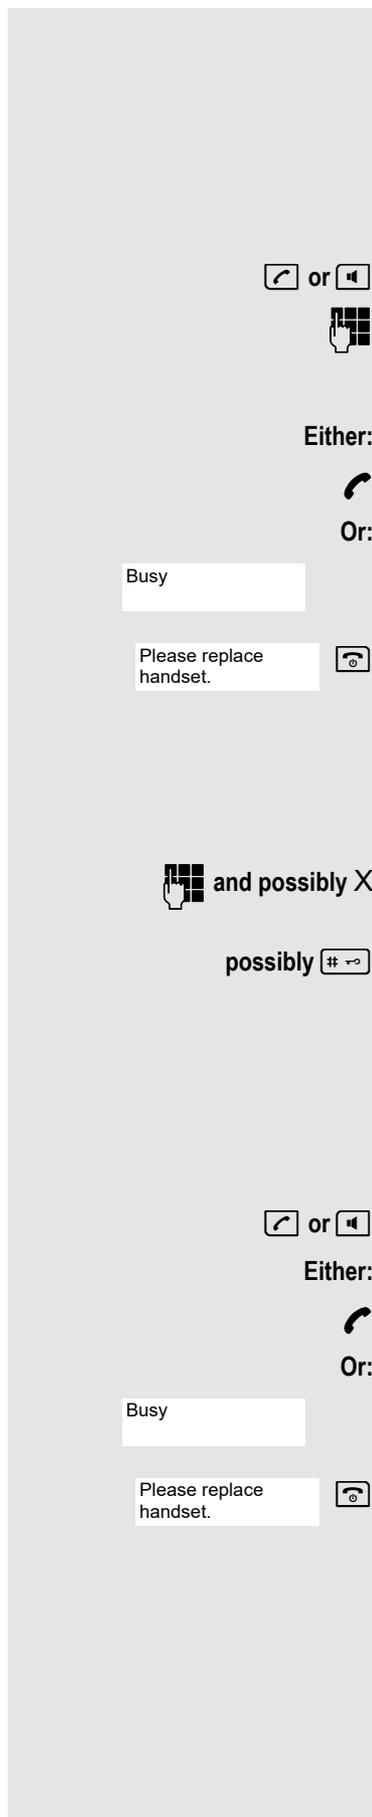

Language

If your preferred language for the display texts is not set, you can set this yourself [🔗 Page 14](#).

First seize the line, then dial

When the handset is in idle status: Press and hold the Talk or Speakerphone key.

Enter the number you wish to dial. The user is called.

Typing errors cannot be corrected. In case of typing errors: Press the On-hook key.

Either:



The user answers. You are conducting the call.

Or:

Busy

The user is busy or rejects the call. You are routed to the other party's mailbox (if configured) or can program a callback request [🔗 Page 23](#).

Please replace handset.



Press the On-hook key to end the operation.

Dial first, then seize the line

Dialling preparation

Enter the required phone number and correct individual characters as necessary using the "Delete" display key.

Insert a dial pause. A "P" appears between the digits entered. You may have to insert a pause, for example, between the prefix and the phone number or when checking a mailbox.

 The dialling preparation function is also available with number redial and when dialling from the handset's phonebook ().

Dialling



Press the Talk or Speakerphone key. The user is called.

Either:



The user answers. You are conducting the call.

Or:

Busy

The user is busy or rejects the call. You are routed to the other party's mailbox (if configured) or can program a callback request [🔗 Page 23](#).

Please replace handset.



Press the On-hook key to end the operation.

Manual redial

The last 20 phone numbers dialed are saved in the redial list. A phone number that was dialed several times is only saved once.

When the handset is in idle status: Press the Talk or Speakerphone key briefly. The redial list is displayed.

Select the required telephone number.

If you want to see details of the selected phone number: Press the display key.

Press the Talk or Speakerphone key briefly. The connection is set up.

Open the redial menu. The menu contains the following functions  Page 31:

- Copy to Directory
- Automatic Redial
- Display Number
- Delete Entry
- Delete all

Select the menu item and confirm.

Change or complete the phone number, for example, with DDIA.

Press the Talk or Speakerphone key briefly. The connection is set up.



Callback

This function enables you to call a user who does not answer or whose line is busy. The Callback function enables you to contact him as soon as he hangs up or re-uses his telephone. Please note that a line is signalled as busy when it is being called by another user. You can continue to use your handset without restriction when a callback has been booked.

You can also send a callback request as a message [☎ Page 72](#). This function can also be called by entering the code [☎ Page 106](#).

Booking a callback

The number is dialled. You hear the busy tone or the user does not answer.

Save the callback request.

Press the On-hook key to end the operation.

You receive a callback

You will receive the callback as soon as the user you want has hung up or the first time he uses his telephone. The following appears on your handset display "Callback:...".

Press the Talk or Speakerphone key briefly. The connection is set up.

 Callbacks are repeated until a connection is established or until the callback is deleted. A handset can initiate up to five callbacks and can be the destination for up to five callback requests. If these conditions are met, any further callbacks are rejected.

Deleting a callback request

Press and hold the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Select the entry.

Open the additional menu.

Select the menu item and confirm.

Press the On-hook key to end the operation.



Consultation

You interrupt your call to consult with a user (including external users) and then resume the original call.

You are conducting a call.

Activating and conducting an enquiry/consultation call

Activate enquiry. The current call is placed "on hold", so that the first user waits.

Enter the phone number for the consultation call.

The number is dialled. The user answers. The consultation starts.

The second user is busy or does not answer

Press the display key to cancel the consultation. You are reconnected with the first partner.

During the consultation you can

- book a callback [🔗](#) Page 23,
- activate call waiting [🔗](#) Page 55,
- busy override [🔗](#) Page 58 or
- press the menu key to send a callback or message to the second partner.

The consultation is ended and you return to the waiting call

The second user hangs up. You are reconnected with the first partner.

Either:

Or:


Open the system menu.

Select the menu item and confirm.

You will be connected to the first party again. The second partner hears the busy tone and hangs up; an OpenStage handset hangs up automatically.

However, you can also

- toggle between the partners [🔗](#) Page 59,
- set up a conference [🔗](#) Page 60 or
- transfer the waiting partner to the second partner [🔗](#) Page 58.

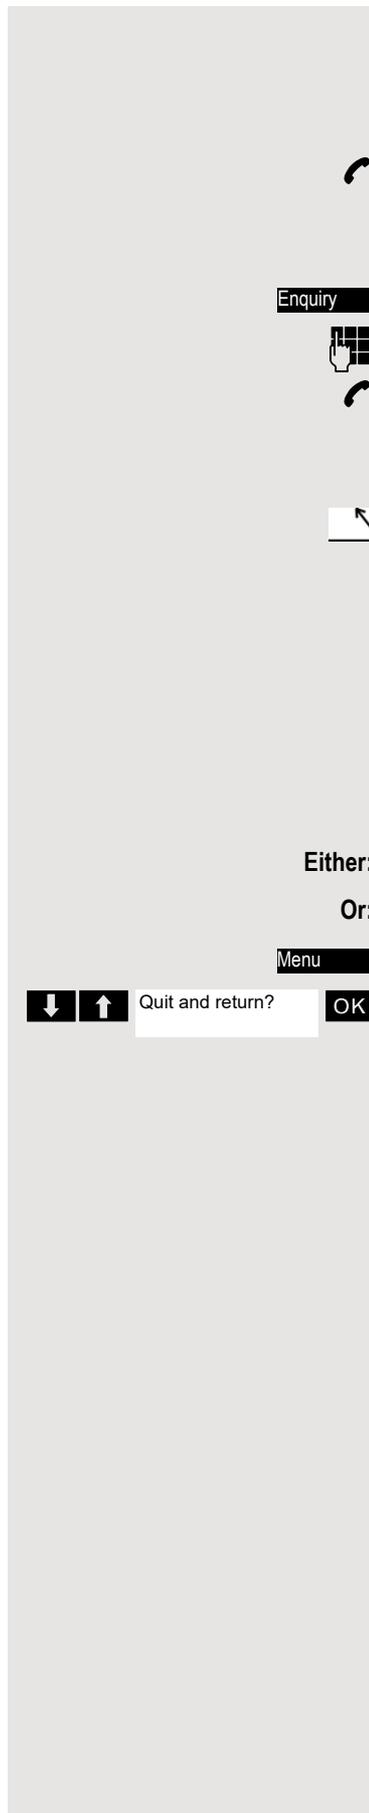

Answering or rejecting a call

Accepting a call

Your handset rings [ⓘ Page 94](#). The caller information appears on the display. The name and/or telephone number of the caller can be displayed. You have the following options for answering a call:

The handset is in the charging shell: Remove the handset from the charging shell (only works if "Auto Answer" is active) [ⓘ Page 94](#).

The handset is not in the charging shell. Press the Talk key or Speakerphone key.

When you have accepted the call you can:

- transfer the call [ⓘ Page 58](#),
- place the call on hold and consult with someone else in the room [ⓘ Page 59](#),
- place the call on hold and call a second partner [ⓘ Page 24](#) in order to forward [ⓘ Page 58](#) or toggle the call [ⓘ Page 59](#) or to set up a conference [ⓘ Page 60](#).

Rejecting a call

If you do not wish to be disturbed, you can reject the call.

Confirm the message displayed with one of the two display keys. The call is rejected and the caller hears the busy tone. You are routed to the other party's mailbox (if configured) or can program a callback request [ⓘ Page 23](#).

Picking up a call in a call pickup group

You can use your handset to pick up calls to telephones within your call pickup group (set by the service engineer). This is also possible when you are conducting a call.

Prerequisite:

You hear that a telephone in your call pickup group is ringing.

Press and hold down the Talk key. The message "Call for:" appears on the display.

Open the system menu.


Select the menu item and confirm.

You are conducting the call.

Ending a call

Press the On-hook key briefly or place the handset in the charging shell.

The call charges are displayed, depending on the communications system.

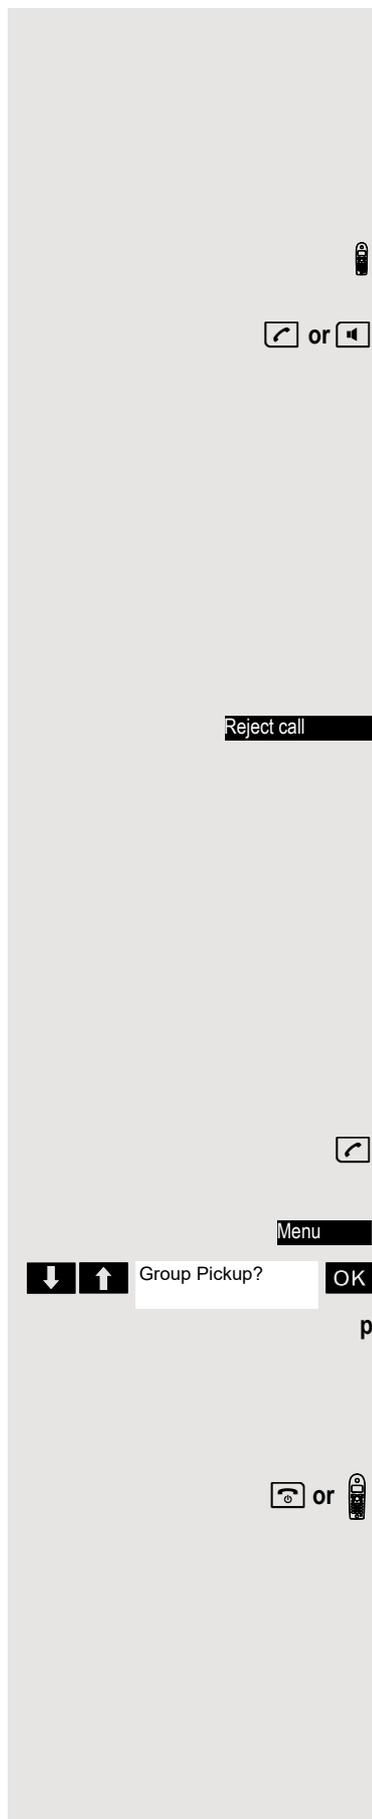

Forwarding calls

This function is for when you leave your desk for a while and want certain calls to be forwarded to your new location. The forwarding destination for internal calls can be any internal or external phone number. The destination number is usually an external phone number because you can be reached internally any-time by means of your handset.

Activating call forwarding

Press and hold the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Enter the destination number.

Save the settings.

Press the On-hook key to end the operation.

 The external code must be entered before external phone numbers.

Deactivating call forwarding

Prerequisite:

The room monitor function is activated.

Press and hold the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Press the On-hook key to end the operation.



Activating or deactivating the keypad lock

This feature protects against accidentally pressing buttons when the handset is in a pocket, for example. The keypad lock turns off automatically when a call comes in and turns back on when the call has ended.



Press the hash key until the activation or deactivation is confirmed by a signal.

A key icon on the display indicates that the keypad lock is active.

After leaving the radio network

The message "No base" flashes on the display. The handset repeatedly attempts to synchronise with a base. The intervals between synchronisation attempts increase on account of the integrated power saving function.

You can switch off your handset to save the battery.

Conducting calls – enhanced functions

Speakerphone mode

Features

Speakerphone mode offers you the following advantages:

- Other persons can listen to and participate in the call.
- Your hands are free.
- When dialling, you can hear the ring tone, for example, without having to lift the handset to your ear.

Speakerphone mode can be used effectively up to a background noise level of 50 dB (A).

Activating speakerphone mode

Speakerphone mode can be activated during a call, when dialling or when answering a call:



Press the speakerphone key. Inform the other party when you want to activate the speakerphone to let others listen in.



Make sure you switch back to handset mode before you return the telephone directly to your ear. In this way you can avoid causing damage to your hearing.

Switching between speakerphone and handset mode



Press the speakerphone key. The handset switches from speakerphone to handset mode or vice versa.



If you wish to replace the handset in the charging shell during a call, for example, because the battery is flat, hold down the Speakerphone key to prevent the call from being disconnected.

Setting the speakerphone volume

The volume can be set during the call Page 88.

Conducting calls with the headset

The handset can be used with a corded and cordless headset.

Corded headset

 **Not** for OpenStage M3 Ex and OpenStage M3 Ex Plus!

You can connect a corded headset via the jack on the side of the handset, see [Page 13](#). The headset must have a (2.5 mm) jack plug.

The earpiece and microphone functions are activated on the headset once it is connected.

Cordless headset

You can use a cordless Bluetooth headset with your handset. This means your hands are free while making calls and there are no annoying cables, for example, when you are working at your computer or when you are on the road.

Your Bluetooth headset must be registered on your handset before you can use it for the first time. After this, you can continue to use your Bluetooth headset until you decide to deregister it.

-  • If you register a headset, any headset that is already registered will be overwritten.
- If you would like to use a headset with your handset that is already registered at another device (e.g. a handset), please deactivate this connection before you start the registration process.
 - Theoretically, third parties can tap Bluetooth connections.
 - To improve protection against unauthorised tapping, deregister any devices you no longer require.

During a call, a second caller is not signalled at the Bluetooth headset.

Registering a Bluetooth headset at the handset

Set the headset to login mode (see the user manual supplied with your headset).

Open the handset's main menu.


Select the menu icon and confirm.


Select the menu item and confirm. The handset searches for a Bluetooth headset and sets up a wireless connection. The names of the devices found are displayed.

Select the required headset.

Press the display key.

Select the menu item and confirm.

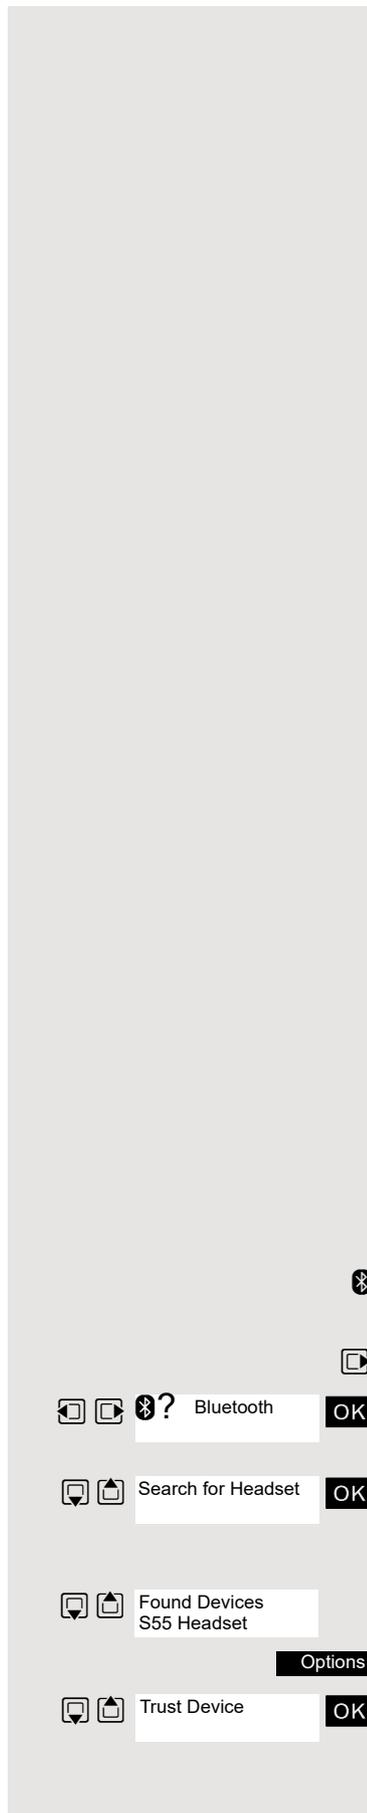

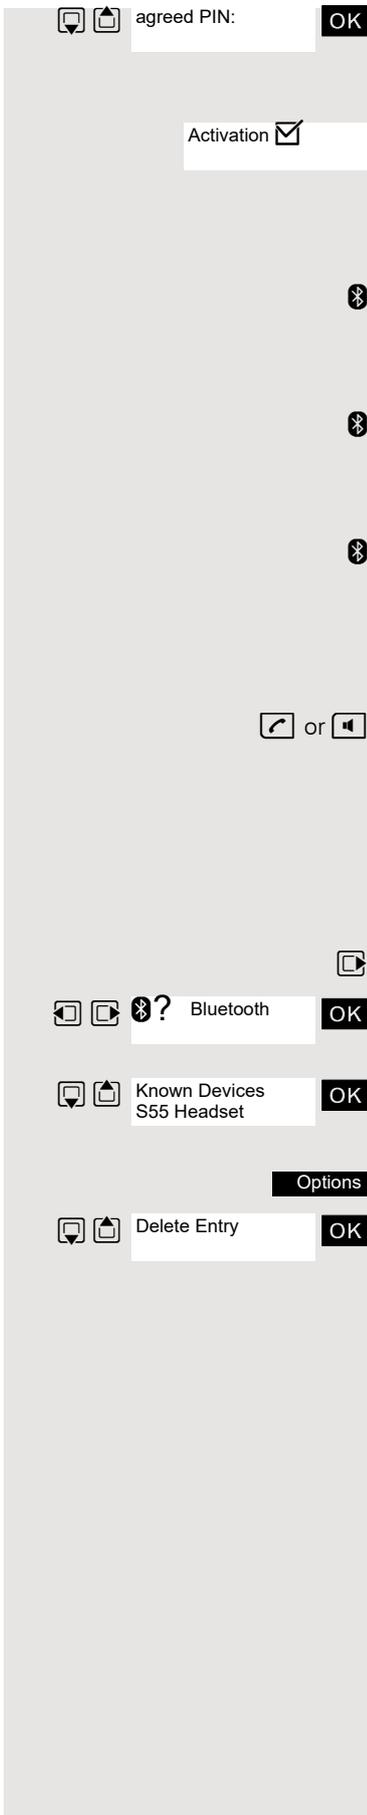

If necessary, enter and confirm the Bluetooth PIN for your headset (see the user manual supplied with your headset). The device is saved in the list of known devices.

The Bluetooth interface is automatically activated on your handset. The active Bluetooth function is ticked.

Conducting calls via the Bluetooth headset

If a Bluetooth headset is registered at the handset, the Bluetooth headset is activated immediately upon dialling.

Accepting a call on the Bluetooth headset

The headset uses a call tone to signal an incoming call. Press the Talk key on the Bluetooth headset (see the user manual supplied with your headset).

Number redial

To redial a number, double-click the Talk key on the headset.

Switching from the Bluetooth headset to the earpiece or speakerphone during a call

You are conducting a call via the Bluetooth headset.

Press the Talk key or Speakerphone key on the handset. The Bluetooth headset is disconnected. You can continue the call directly on the handset.

Deregistering the Bluetooth headset at the handset

To improve protection against unauthorised tapping, deregister the Bluetooth headset at the handset if you no longer wish to use it.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm. The name of the registered or detected Bluetooth headset is displayed.

Press the display key.

Select the menu item and confirm. The Bluetooth headset is deregistered and can no longer be detected by the handset.

Number redial

The last 20 phone numbers dialled are saved in the redial list. A phone number that was dialled several times is only saved once.

If you tried to call a party from the handset's telephone directory, the name of the party is displayed in case of number redial. For information on manual number redial, see [Page 22](#).

Automatic redial

The phone number is automatically redialled ten times at 20-second intervals. Speakerphone mode is automatically activated, the Talk key flashes. The function is deactivated after ten unsuccessful attempts and when a call is made in the interim.

Press the Talk key. The redial list is displayed.

Select the required telephone number.

Press the display key.

Select the menu item and confirm. Automatic redial is activated.

The user answers. Press the Talk key and conduct the call.

Or:

If you wish to cancel the function: press the Display key or any key.

Deleting a redial entry or list

Press the Talk key. The redial list is displayed.

Select the required telephone number.


Press the display key.

Select the menu item and confirm. The telephone number is deleted.

Or:

Select the menu item and confirm. The redial list is deleted.

Press the On-hook key to end the operation.

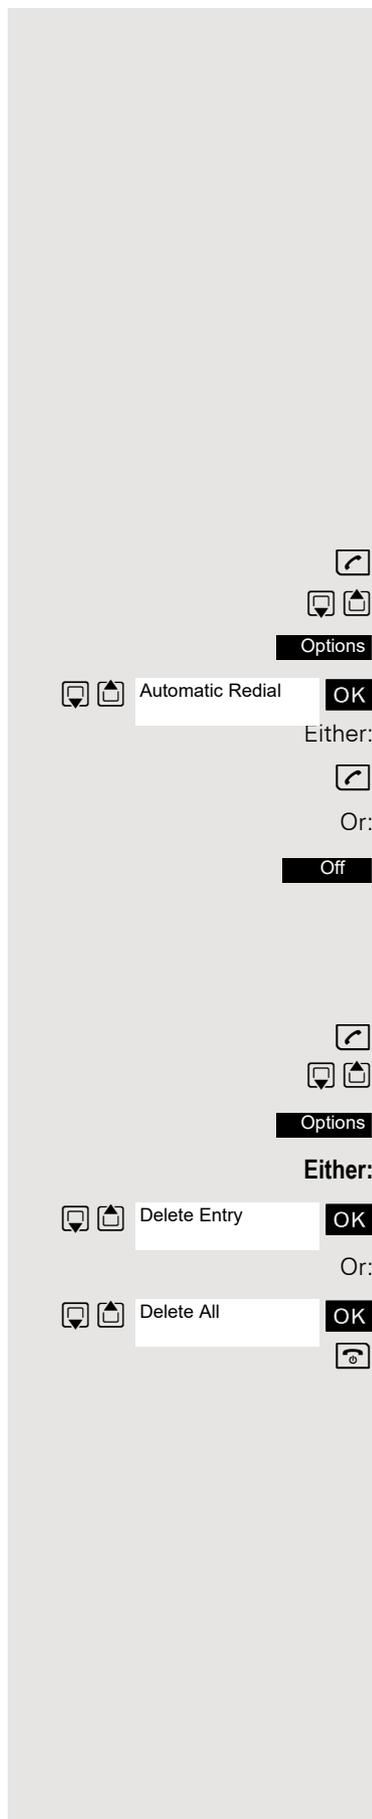

Adding a telephone number to the redial list

During dial preparation, you can add a number from your handset's redial list to your phonebook.

Press the Talk key briefly. The redial list is displayed.

Select the required telephone number.

Press the display key.

Select the menu item and confirm. The phonebook is displayed.

Select the menu item and confirm. The following selection mask appears:



1 Phone (Mobile)

2 Phone (Office)

3 Phone (Home)

Select the icon for the required phone number type under which the phone number is to be added.

Confirm your entry.

Enter the remaining contact information, such as the first name and surname. For further information, see [Page 37](#) and [Page 38](#).



System speed dialling

Your system administrator can save up to 1000 external phone numbers as system speed dialling destinations in your communications system. You can dial these speed dialling destinations with a three-digit code (000 - 999).

Dialling a system speed dialling destination

Press and hold the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm. This function can also be activated directly by entering the appropriate code ☺ Page 106.

Enter the required code (3 digits, 000 - 999).

 The saved speed dialling destinations and the associated codes can be obtained from the organisational unit responsible for administering the communications system.

Dialling a system speed dialling destination with suffix-dialling or a DID number

System speed dialling destinations can be saved in your communications system and then dialled by means of suffix-dialling or DDIA. These speed dialling destinations let you enter an additional suffix-dialling or DID number up to five seconds after entering the three-digit service code. If you do not make an entry within this time frame, the default suffix-dialling number, for example, "0" for the exchange, is dialled.

Press and hold the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the required code (3 digits, 000 - 999).


Within five seconds: enter the suffix-dialling or DID number.

System speed dialling, individual

You can save up to ten external phone numbers as speed dialling destinations for your handset in your communications system. These speed dialling destinations are dialled using a 2-digit code (*0 to *9). Please note that you may need to save an external code in front of the phone number.

This function can also be called by entering the code ☺ Page 106.



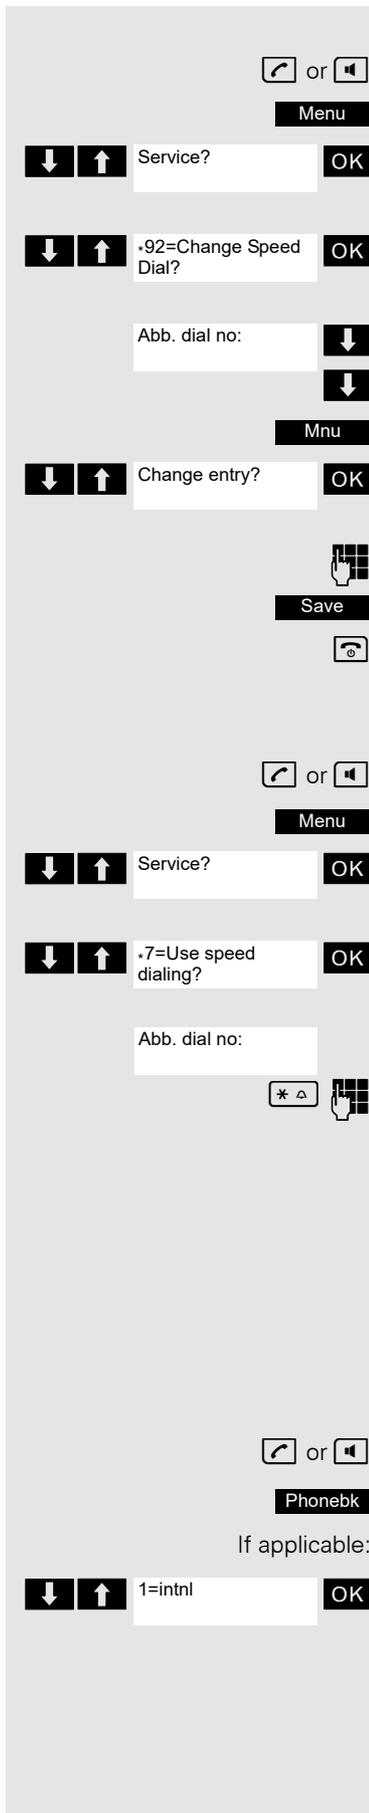

Setting up an individual speed dialing destination

Press and hold the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Call the first destination.

Call the next destination.

Open the additional menu.

Select the menu item and confirm.

Enter the external phone number (with external code).

Save the settings.

Press the On-hook key to end the operation.

Dialling an individual speed dialing destination

Press and hold the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the code for the speed dialing destination.

System phonebook

If the system administrator has entered a name for at least one internal user or system speed dialing destination, then you can use the system phonebook for dialling.

Opening the system phonebook

Press and hold the Talk or Speakerphone key.

Open the system phonebook. The first entry is displayed on the screen.

If several phonebooks have been configured: Select the menu item and confirm.



Finding an entry

Enter the first letters of the name you are looking for (see ☎ Page 36). The name is searched for. The search result becomes more precise as each letter is entered, i.e. the number of names found is reduced.

Select the user you want.

Dial entry

Confirm your selection. The selected number is called.

Quitting the phonebook

Press the display key.

 Phone numbers dialed from the system phonebook are not stored in the redial list.

Telephone database (LDAP)

If your company has an LDAP telephone database and access to it is configured in your communications system, you can query it with your handset. This LDAP telephone database can contain far more entries than the phonebook on your communications system or your handset. The LDAP telephone database is installed on an LDAP server. This telephone database is accessed over the LDAP Internet protocol (Lightweight Directory Access Protocol).


This function can also be called by entering the code ☎ Page 106.

Activating the LDAP telephone database

Press and hold the Talk or Speakerphone key.

Press the display key.

If several phonebooks have been configured: Select the menu item and confirm.

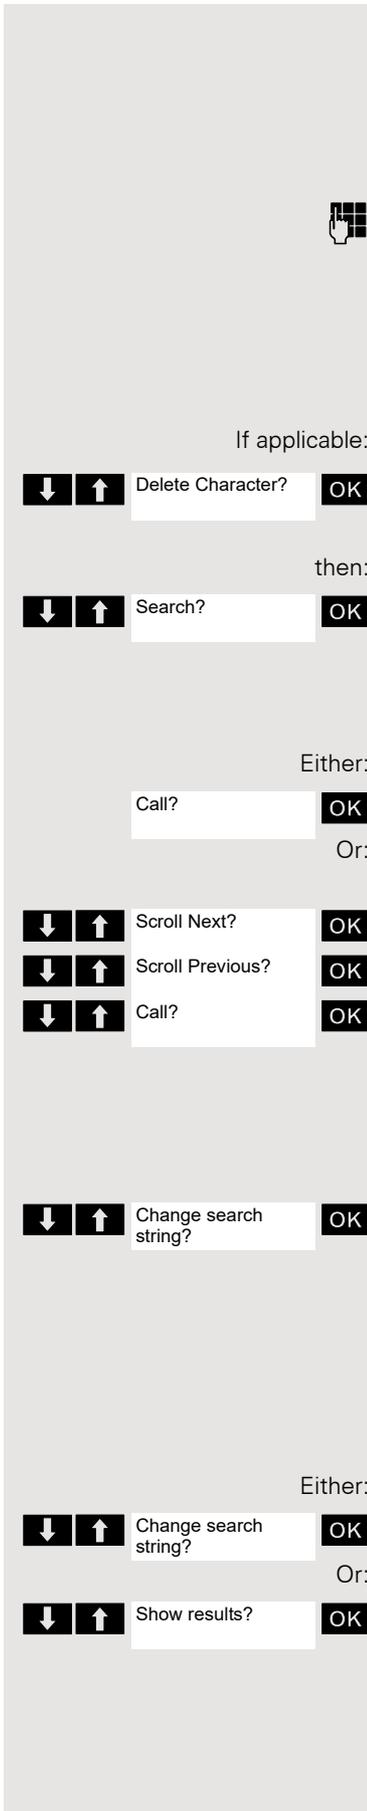

Entering a name and finding an entry

You can now enter the name via the handset's keypad. Each key is assigned several letters and each letter is selected by pressing the key an appropriate number of times. For example, you have to press the "7" key three times to enter an "r".

Enter the name you want to find (maximum 16 characters). Partial entries are accepted, for example "mei" for Meier. The more characters entered, the more precise the search result.

If configured, you can search for first and last names. First and last names must be separated by a space. Do this by pressing the "0" key. Partial entries are accepted, for example, "mei P" for "Meier Peter".

If you wish to delete an incorrect letter entered by mistake: Select the menu item and confirm.

Select the menu item and confirm. The system starts to search for the entry. This can take a few seconds. The entries found are then displayed.

Selecting an entry

If a single entry is found, it is displayed.

Select the menu item and confirm. The user is called.

If more than one entry is found, the first entry is displayed. A maximum of 50 hits can be displayed.

If you wish to scroll forward: Select the menu item and confirm.

If you wish to scroll backward: Select the menu item and confirm.

Select the menu item and confirm. The user is called.

If no entries were found

If no entries were found, you can extend the search range by deleting some of the characters entered.

Select the menu item and confirm. You can now change your search entry.

If too many entries were found

The hit list is not displayed in full if more than 50 entries matching your search query were found. We recommend narrowing down the search by entering more characters. However, even if you do not do this, you can still display the entire hit list, select the required entry and call the selected party.

Select the menu item and confirm. You can now change your search entry.

Select the menu item and confirm. The hit list is displayed.

The handset's phonebook

You can save contact information for frequent call partners in the phonebook. Once a phone number has been saved in this way you no longer have to enter it in full when you want to call someone. All you have to do is select the required phonebook entry.


You can save a total of 500 entries at most in the phonebook.

Gigaset QuickSync ⓘ Page 82 is a software application for transferring data between your cordless OpenStage phone and your PC. You can use it at your phone to load data from your PC to your OpenStage over a USB data cable or Bluetooth and synchronise contacts with Microsoft Outlook, Microsoft Outlook Express and contacts in Microsoft Windows.

You can save the following contact information for every entry in the phonebook:

Information	Explanation
First Name*, Surname	A name must be entered in at least one of the fields. Each name can contain up to 16 characters.
Phone (Home), Phone (Mobile)*, Phone (Office)*	A number must be entered in at least one of the fields. Each number can contain up to 32 digits.
E-Mail*	E-mail address with up to 60 characters. The special character "@" can be inserted after pressing the asterisk key.
Anniversary	You can select either "On" or "Off". If "On" is selected: <ul style="list-style-type: none"> • Anniversary (Date): Day/month/year, 8 digits* • Anniversary (Time): Hour/minute, 4 digits, for reminder call • Anniversary (Signal): Type of signalling, acoustic or visual (time need not be specified)
	Mark an address book entry as a VIP (Very Important Person) by assigning a specific ringtone to it.
Caller Picture*	Display a picture for an incoming call when CLIP is active. Caution: This function is not supported by the system and should therefore not be used.

* = new for vCard format

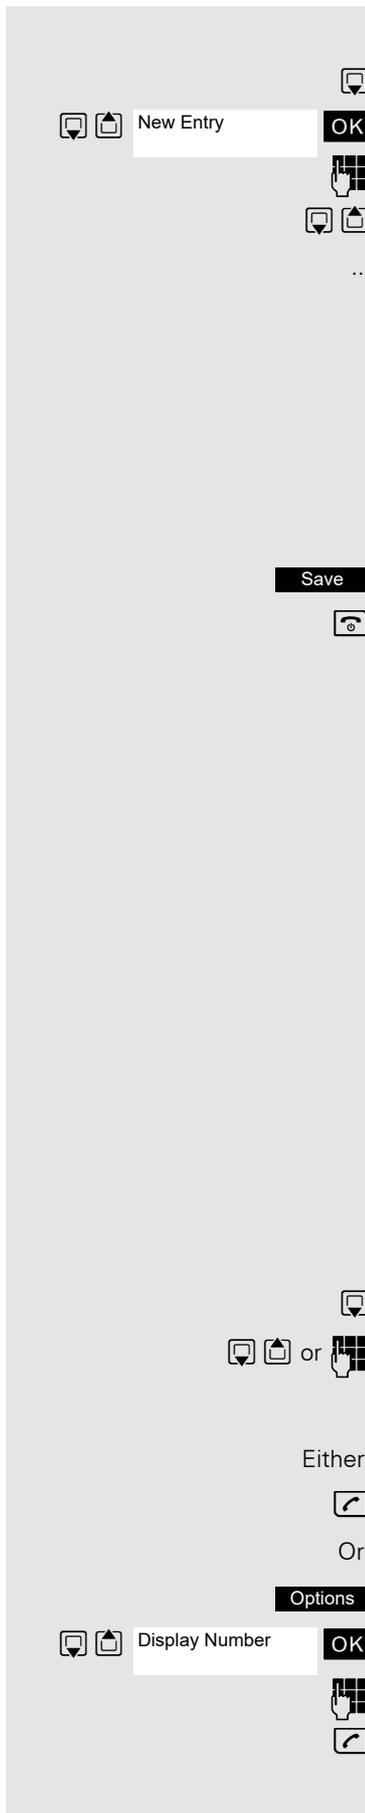

Saving an entry

Open the phonebook.

Select the menu item and confirm. The input mask is displayed.

Enter the relevant information, see above.

Jump to the next line.

etc.

Functions for text input:

# ↵	Switches mode from abc to Abc, from Abc to 123 and from 123 to abc If predictive text is off: press the key briefly. If predictive text is on: press and hold down the key.
X	Deletes the letter to the left of the cursor.
* Δ	Opens the table of special characters.

Save the settings.

Press the On-hook key to end the operation.

Changing the sequence of entries:

The phonebook entries are generally sorted in alphabetical order by surname. Spaces and digits have first priority here. If the phonebook only contains a subscriber's first name, this is listed instead of the surname in the sequence.

The sort sequence is as follows:

1. Space
2. Digits (0 - 9)
3. Letters (alphabetical)
4. Other characters

If you want to change the sequence of entries in the alphabetical list, you could insert a space or a digit before the first letter of the surname. These entries then move to the top of the phonebook. Names preceded by an asterisk are listed at the end of the phonebook.

Finding and dialling an entry

Open the phonebook.

You can scroll to the required entry or enter the first letter of the relevant entry. If necessary, press a key several times in succession to enter the required letter (e. g. press 7 three times for r).


Press the Talk key. The assigned phone number is dialled.

Open the menu.

Select the menu item and confirm. The number is displayed.

Change or complete the phone number, for example, with DDIA.

Press and hold down the Talk key.

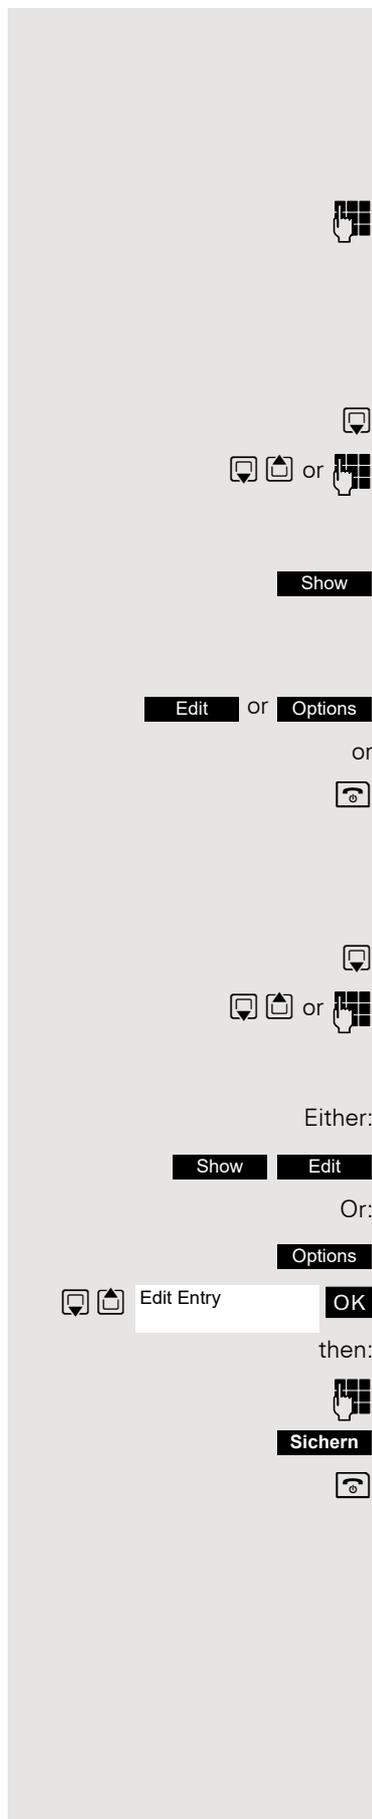

Dialling an entry with the speed dialling digit

You can call up and dial the phone number associated with an entry to which you assigned a speed dialling digit by simply pressing this speed dialling digit
 ⓘ Page 81.

Press and hold down the required speed dialling digit. The assigned phone number is dialled.

Viewing an entry

Open the phonebook.

You can scroll to the required entry or enter the first letter of the relevant entry. If necessary, press a key several times in succession to enter the required letter.

Press the display key. The entry's data is displayed.

Changing to the list

Select

Press the On-hook key to return to the list.

Changing an entry

Open the phonebook.

You can scroll to the required entry or enter the first letter of the relevant entry. If necessary, press a key several times in succession to enter the required letter.

Press the display keys one after the other. The entry's data is displayed.


Press the display key.

Select the menu item and confirm. The entry's data is displayed.

Enter changes.

Press the display key.

Press the On-hook key to return to the list.

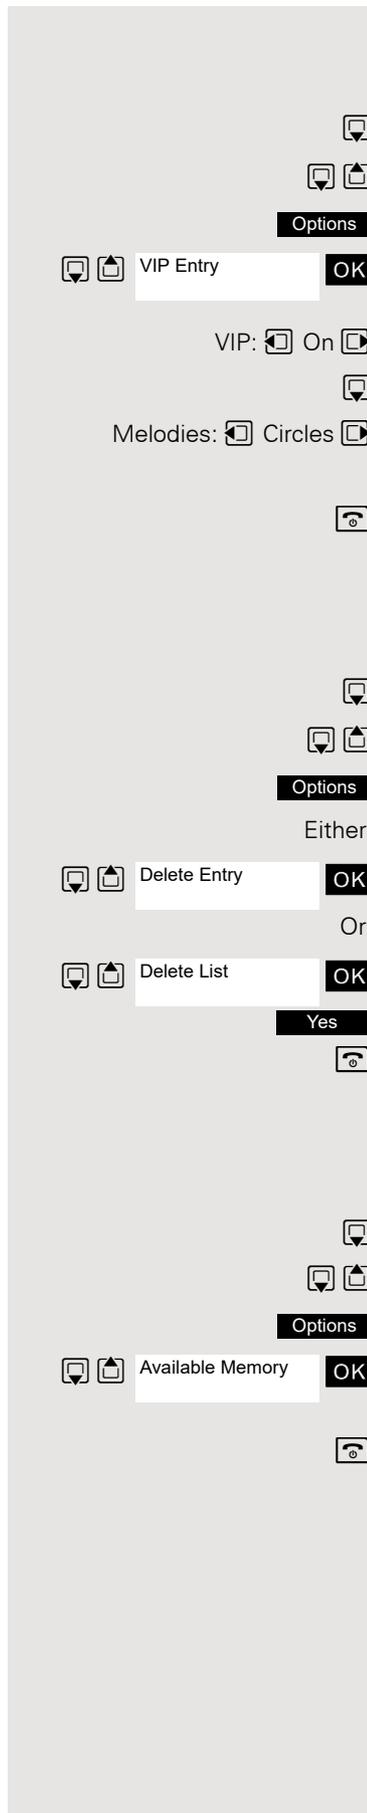

Marking a VIP (Very Important Person) entry

An incoming call for a VIP-marked entry is signalled with a VIP ringtone.

When the handset is idle: Open the phonebook.

Select the entry you want.

Open the menu.

Select the menu item and confirm. The input mask for marking a VIP entry is displayed.

Activate the VIP marking.

Move the cursor down one line.

Select a melody, for example "Circles".

Press the On-hook key to end the operation.

Deleting an entry or phonebook

Open the phonebook.

Select the entry you want.

Press the display key.

Select the menu item and confirm. The telephone number is deleted.

Select the menu item and confirm. A security check question appears.

Confirm the security check question. The phonebook is deleted.

Press the On-hook key to end the operation.

Displaying available memory

Open the phonebook.

Select any entry.

Press the display key.

Select the menu item and confirm. The amount of memory used and available is displayed.

Press the On-hook key to end the operation.

Sending an entry or phonebook to the handset or system

You can send individual entries or the entire phonebook to other handsets or to the communications system.

For phonebook transfer in vCard format via Bluetooth see [⌚ Page 83](#).

If your handset and the recipient's handset have phone numbers between 1 and 99, you can send or receive a list or entry directly from one handset to the other. If the handsets' phone numbers start at 100, you must first send the list or entry to the communications system. The recipient can then use his or her handset to download the list or entry from the communications system.

Restrictions when copying over the communications system

The entries in the handset's phonebook are stored in vCard format [⌚ Page 37](#). The communications system, however, uses another format. This can cause loss of phonebook entry information. The features that are new for the vCard format are indicated in the table [⌚ Page 37](#) by "new for vCard format". The phone numbers are not affected.

Sending a list/entry

Open the phonebook.

Select the entry you want.

Press the display key.

Options

Either:

 **OK**

Or:

 **OK**

then:




Enter the station number. The following phone numbers are possible:


- 1... 98 – the list or entry is sent directly to the recipient's handset.
- 00 – the list or entry is sent to the communications system and can then be downloaded by any handset.
- 99 – The list or entry is sent to the communications system and can then only be downloaded by your handset.

OK

Confirm your entry. The list or entry is sent.

If a phone number from 1 to 98 was dialed, the list or the entry is automatically received by the recipient's handset.

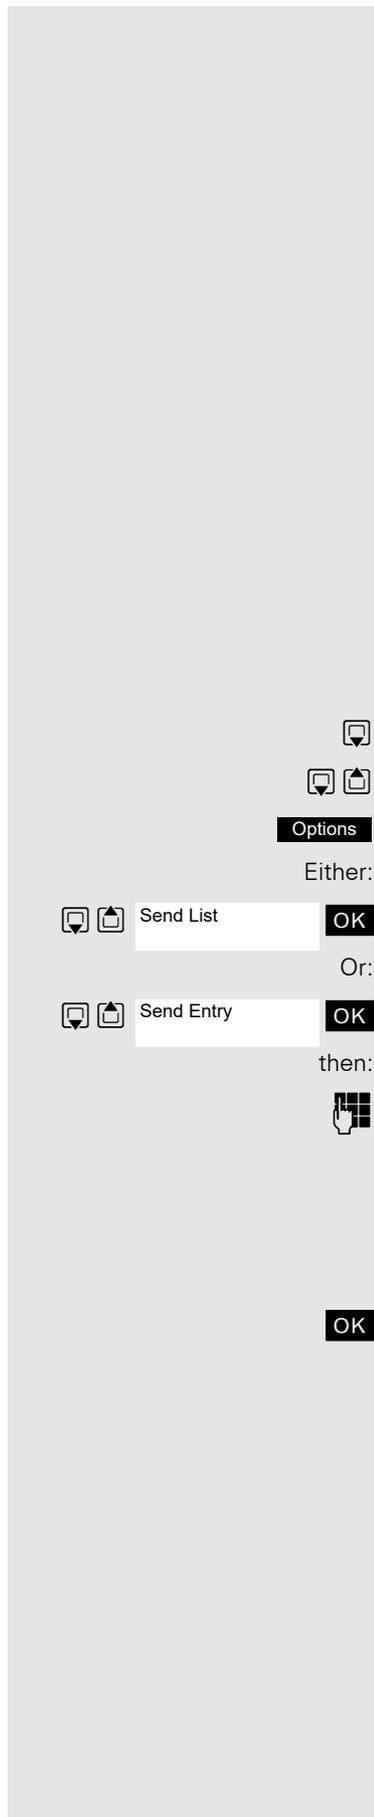

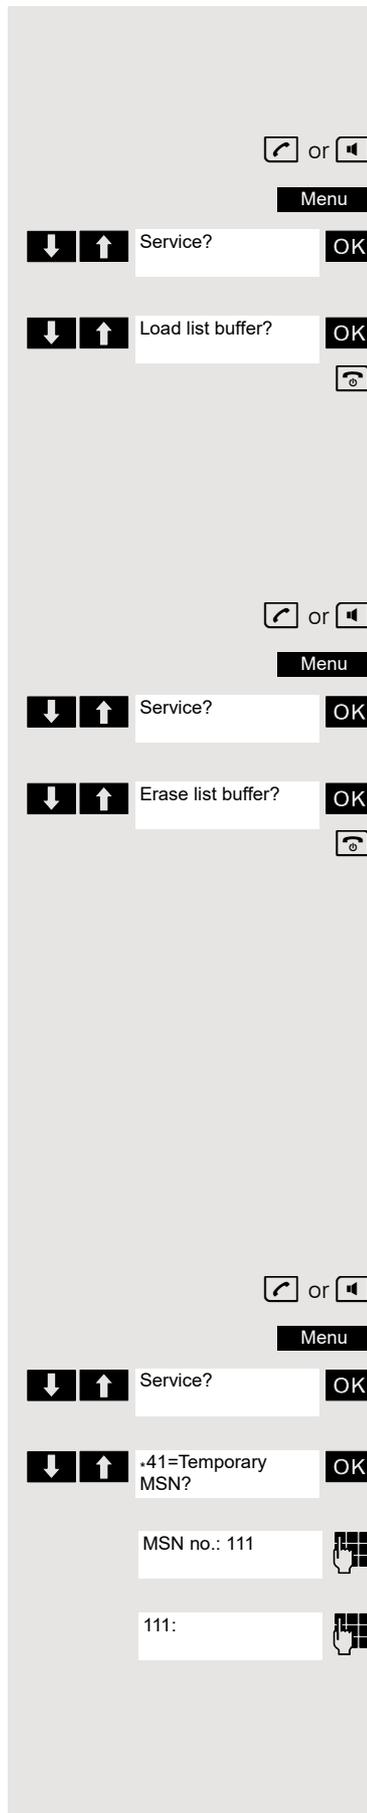

Loading a list or entry from the communications system

Prerequisite: You sent an entry or list to the communications system by dialling the phone number 00 or 99.

Press and hold the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Press the On-hook key once. You will receive a call from the system and the transfer starts once you answer this call.

Deleting a list or entry in the communications system

Prerequisite: A currently unused list or entry is saved on the communications system.

Press and hold the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm. The handset starts to delete the list/entry.

Press the On-hook key to end the operation.

Directed assignment of an MSN (multiple subscriber number)

Multiple subscriber numbers are phone numbers belonging to an ISDN multiple device line. They are used for the directed addressing of terminals, for example when a fax machine has a separate number. Before selecting an external connection, you can directly assign a configured multiple subscriber number. The assigned number then appears on the called party's display.

This function can also be called by entering the code ☎ Page 106.

Press the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the required multiple subscriber number.

Enter the required external phone number. The phone number is dialled.

Making calls using identification codes

In the case of calls you make to external partners, you can enter and charge the call costs on the basis of individuals, customers, accounts and private calls, for example, by means of account codes. The account code (ACCT) can contain up to 11 characters and is included in the data printout. The ACCT is only transferred after a call has been completed. The ACCT can be entered before and during the external call.

 The call costs can only be assigned using call detail recording software, which must be set up by service personnel.

This function can also be called by entering the code ☎ Page 106.

Press the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the required account code (optional).

Save the settings.

Enter the external phone number. The phone number is dialled.

 If a call is transferred, the costs are still assigned to the ACCT entered.



Using the handset as a second line

You can use your mobile phone for an outgoing call as if it were another line (temporary phone).

This function can also be called by entering the code ☎ Page 106.

Press and hold the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.


Enter the internal phone number for the relevant line.


Enter the code (lock code) for the relevant line ☎ Page 103. Do not use the default phone code (00000) for the user.

If there is no personal code for the relevant line, the system will prompt you to enter the code.

Enter the number you wish to dial. The phone number is dialled.

The "Temporary phone" function is discontinued again after the call is complete.

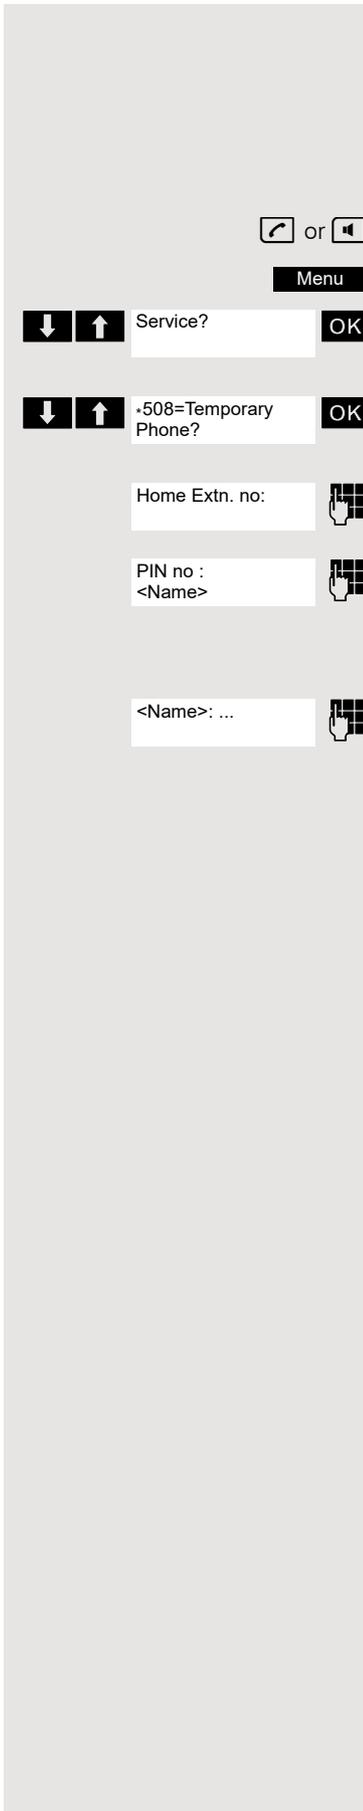

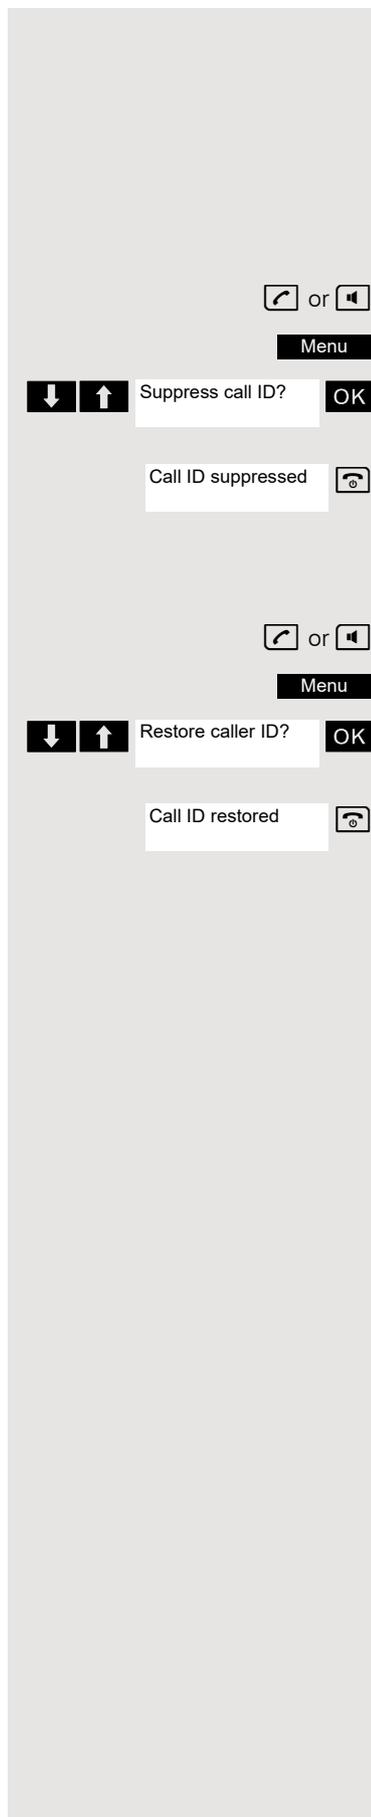

Deactivating the phone number display

Your service engineer can deactivate the display of your phone number and name on the called party's display for external outgoing calls. You can also activate and deactivate the phone number display on your own handset yourself.

Deactivating the phone number display

Press and hold the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Press the On-hook key to end the operation.

Activating the phone number display


Press and hold the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Press the On-hook key to end the operation.

 Activation and deactivation of the phone number display relates to external or networked connections. An external provider must support this function.

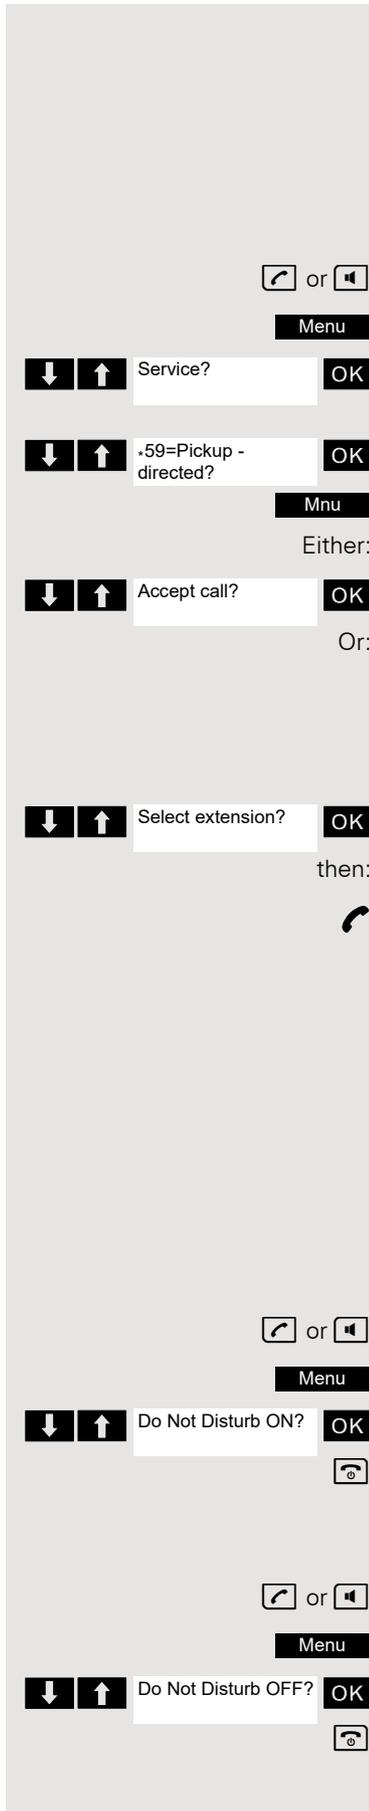

Directed call transfer

You can transfer calls to other telephones to your handset. This is also possible when you are conducting a call.

This function can also be called by entering the code ☎ Page 106.

Another telephone rings.

Press and hold the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm. The called user is displayed.

Open the additional menu.

Select the menu item and confirm.

 If several users are called simultaneously, only the first user called is displayed. However, you can transfer by entering the phone number of any of the users called.

Select the menu item and confirm.

You are conducting the call.

Activating/deactivating do not disturb

You can block calls to your handset on a temporary basis, while still being able to make calls yourself. Internal callers hear the busy tone, while external callers reach another telephone defined by the service engineer (intercept position). Authorised internal callers automatically override the DND feature after five seconds.

Activating do not disturb

Press and hold the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Press the On-hook key to end the operation.

Deactivating do not disturb

Press and hold the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Press the On-hook key to end the operation.

Call charge display

After a call has ended, the display shows the connection charges for the current call as standard. If the costs are to be displayed continuously during an outgoing call, this function must be requested from the carrier.

 If a call is transferred, the costs are assigned to the telephone to which the call was transferred from this point onwards.

You can check and display the call charges for your phone number as a total for a period that can be set by the service engineer.

First the call charges for the last charged call are displayed. The total call charges are displayed after five seconds.

This function can also be called directly by entering the code ⑦ Page 106.

Press and hold the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Press the On-hook key to end the operation.

Call tracing

You can apply to your carrier for "call tracing" on malicious calls. An authorised extension is then in a position to request the identification of the phone number.

This also works for 30 seconds after the malicious caller has hung up. However, you should not hang up.

This function can also be called by entering the code ⑧ Page 106.

You receive a malicious call.


Do not hang up.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm. The caller is identified in the attendant console.

Press the On-hook key to end the operation.

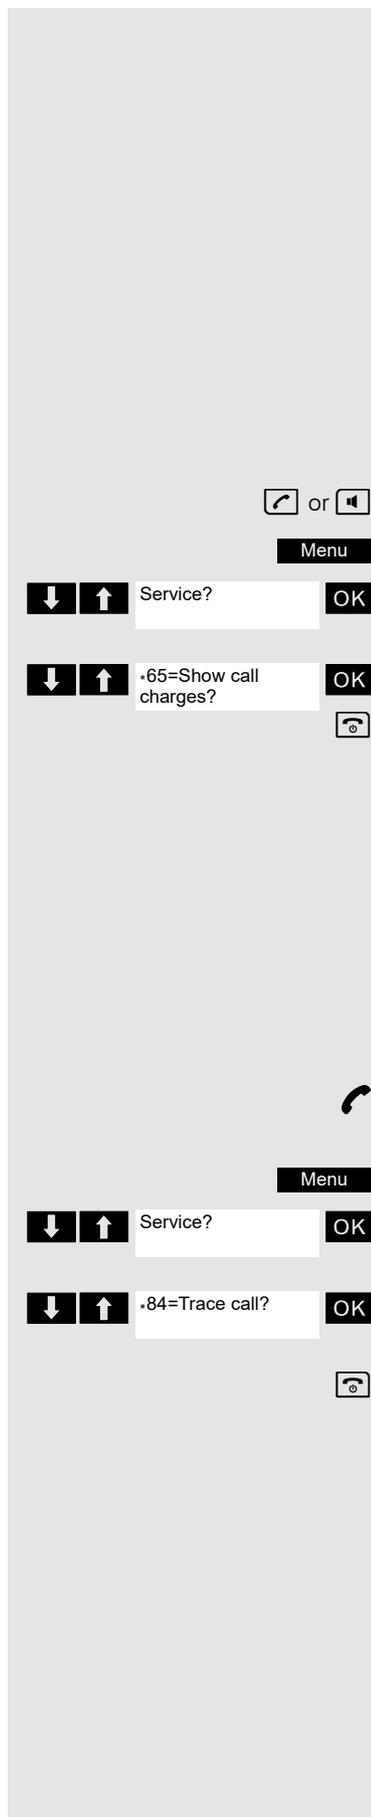

Entrance telephone

If the service engineer has set up an entrance telephone, you can speak to the door intercom and activate the door opener from your handset.

Some of the functions described below can also be called directly by entering the relevant code ⑦ Page 106.

Talking to a visitor by means of the door opener equipment

Your handset rings.

Either:



Press the Talk key within 30 seconds. You are connected to the entrance telephone immediately.



Enter the internal phone number for the door opener. You are connected to the door opener.

Using the handset to open the door opener during a call

Select the menu item and confirm.

Using the handset to open the door opener without holding a conversation

Press and hold the Talk or Speakerphone key.


Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the internal phone number for the door opener. The door is opened.

Press the On-hook key to end the operation.

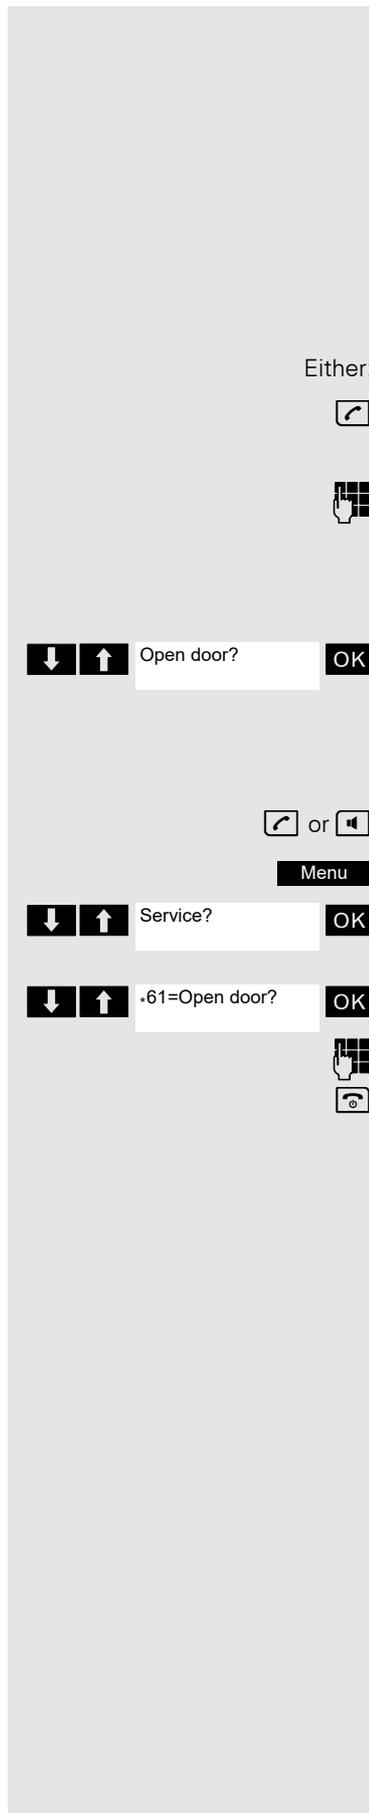



Activating the door release

This function only works if it has been configured by the service engineer.

Press and hold the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Follow the user guidance system from this point onwards. Enter the internal phone number of the door opener, as well as the code and type of door release:

- 1=enable with ring,
- 2=enable w/o ring,
- 3=change password.

Confirm your entries.

Press the On-hook key to end the operation.

 Standard code 00000. To change the code, confirm option "3=change password". Follow the user guidance system.

Deactivating the door opener

Press and hold the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Press the On-hook key to end the operation.

TDS telephone data service

You can use your mobile phone to operate connected computers and their programs, for example, access hotel services or information systems.

This function can also be called by entering the code ☎ Page 106.

Press and hold the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Press the "#" key and enter the required code (0... 9).

The connected computer responds. The computer will guide you through the data entry process. It will process your entries directly.

Press the On-hook key to end the operation.

Activating control relays

The service engineer can set up a maximum of 4 control relays that enable various equipment (for example, door opener) to be activated and deactivated.

It is possible to access a specific control relay. Depending on the configuration, the control relays can be

- activated and deactivated automatically, or
- activated and deactivated automatically on the basis of a timer.

Prerequisite: The service engineer has set up at least one switch.

This function can also be called by entering the code ☎ Page 106.

Activating a control relay

Press and hold the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Follow the user guidance system from this point onwards. Enter the required switch code (1... 4).

Press the On-hook key to end the operation.

Deactivating a control relay

Press and hold the Talk or Speakerphone key.


Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Follow the user guidance system from this point onwards. Enter the required switch code (1... 4).

Press the On-hook key to end the operation.

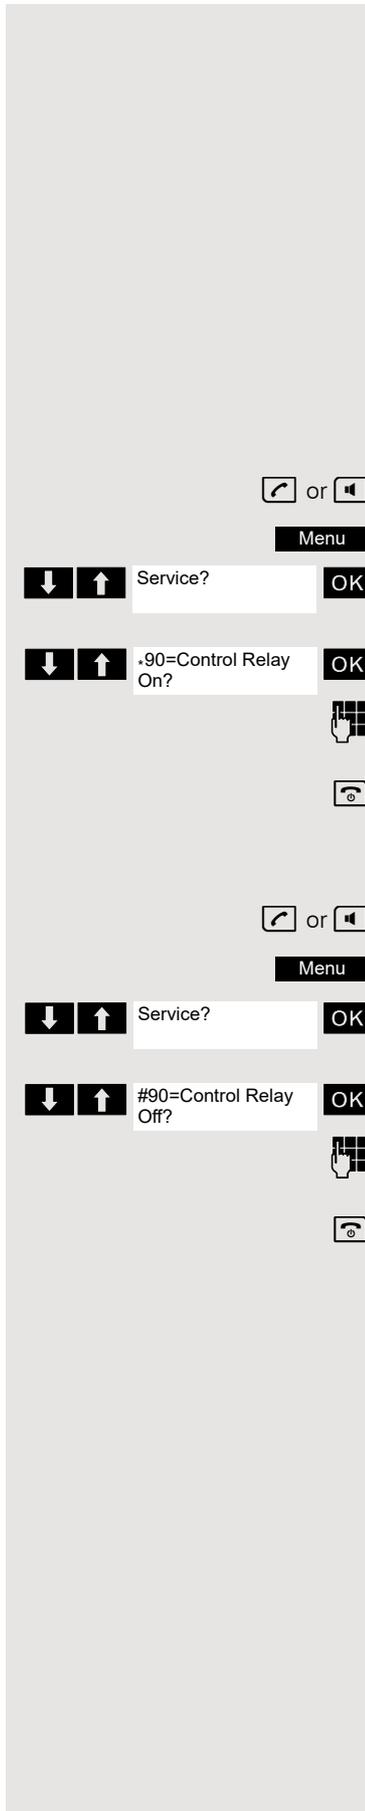



Sending a signal to the network

To enable ISDN-type services/features to be started via analogue lines (for example, call waiting when a line is busy, three-way conference calls, etc.), you must send a signal to the network before dialling the service code and/or phone number.

This function can also be called by entering the code ☎ Page 106.

You have an external connection.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the service code and/or the phone number.

External call forwarding with a multiple subscriber number

If your communications system is connected to an ISDN multiple device line, then you can forward all incoming calls from the public network through your multiple subscriber number (MSN) to an external destination.

There are three types of forwarding:

- Calls are forwarded immediately (1=immediate call forwarding).
- Calls are forwarded after a certain time (2=unanswered calls).
- Calls are only forwarded when the line is busy (3=when busy).

Activating call forwarding to a "trunk"

Press and hold the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter and confirm your own multiple subscriber number.


Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the destination number (without the external code).

Save the settings.

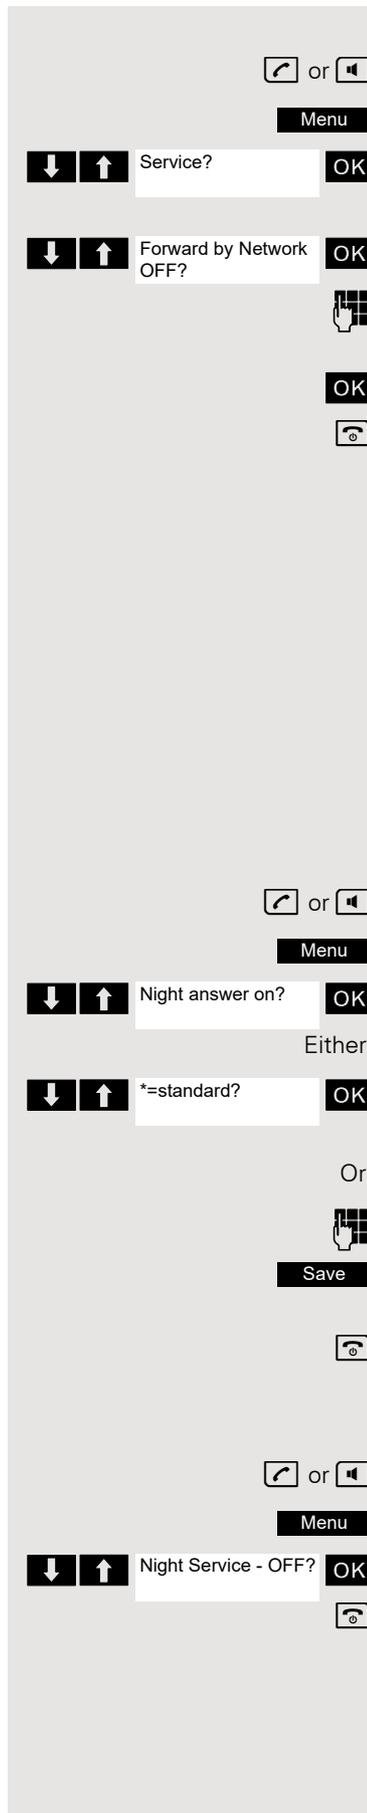

Deactivating call forwarding to a "trunk"

Press and hold the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Follow the user guidance system from this point onwards (enter a multiple subscriber number or DID and forwarding type).

Confirm your entries.

Press the On-hook key to end the operation.

Using night service

In night service mode, for example, during lunch breaks or after office hours, all external calls are forwarded to a particular internal telephone (night station). The night station can be defined by the service engineer (= standard night service) or by you (= temporary night service). When night service is active, the night station assumes the function of the intercept station.

Activating night service

Prerequisite: A service engineer must have activated the function for you.

Press and hold the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

"Standard night service" is configured.

Enter your internal station number.

Save the settings.

"Temporary night service" is configured.

Press the On-hook key to end the operation.

Deactivating night service

Press and hold the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Press the On-hook key to end the operation.

Using dual-tone multifrequency signalling

Your handset operates on the basis of digital information transmission. However, certain applications, for example answering machines, can only be operated using analogue technology. For this you have to send signals using the dual-tone multifrequency signalling (DTMF) process.

Depending on how your system is configured (automatic tone dialling on or off - to be configured by the service engineer) you must first switch to DTMF dialling. This means, for example, that you can communicate with a variety of voice storage systems.

You will find further details in the operating instructions for the relevant applications.

Automatic tone dialling is not active

During a connection you have to first switch to dual-tone multifrequency signalling.

You are conducting a call.

Open the system menu.


Select the menu item and confirm.

Select the menu item and confirm.

Enter the numbers. All entries are sent as DTMF signals.

Automatic tone dialling is active

Enter the numbers. All entries are sent as DTMF signals.

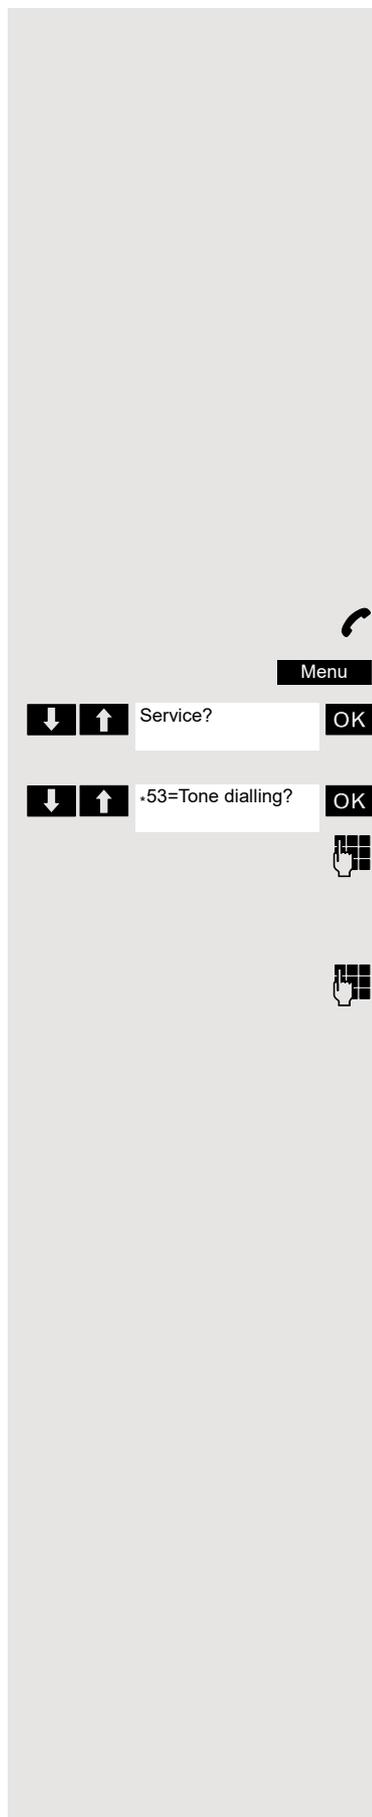

Parking/activating calls

You can park up to ten calls (i.e. place them on hold) to conduct another call in the interim or to continue them on other telephone in your communications system.

Parking a call

You are on a call you wish to park.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the parking position number (0... 9) and note it down.

If the parking position number entered is already in use, you have to enter another one.

Picking up a specific parked call

Prerequisite:

One or more calls have been parked. Your handset is in stand-by status.

Press and hold the Talk or Speakerphone key.


Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the parking position number you have noted.

 If a parked call is not picked up, it returns to the station from which it was parked after a certain time (= recall). The following appears on the display "Recalling: (phone no. or name)" or "recalling from (phone no. or name)".

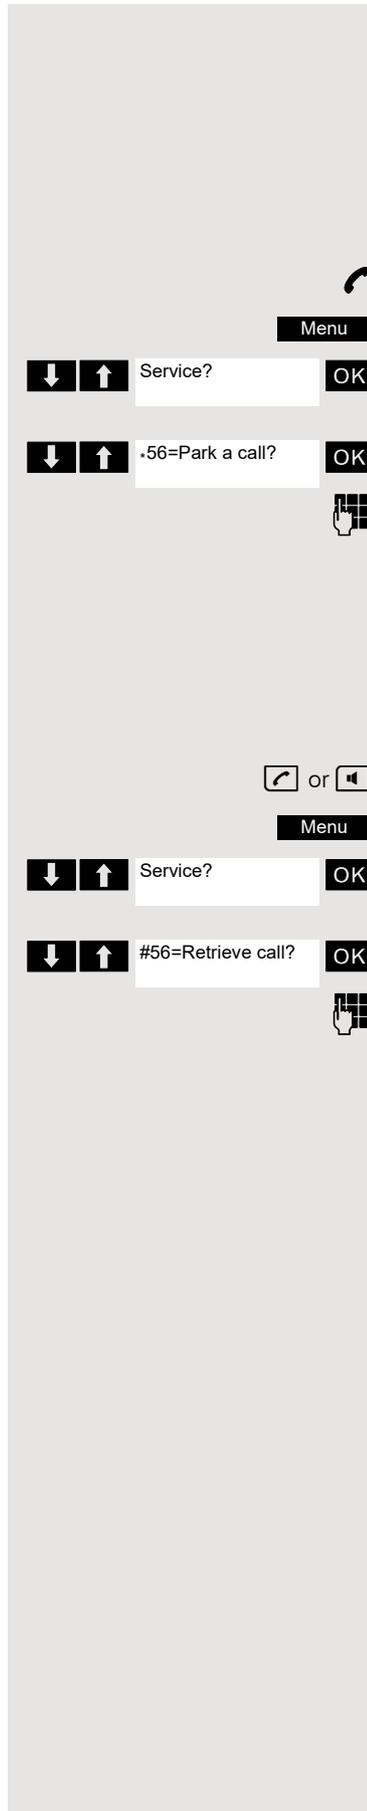

Conducting calls – with multiple users

Call waiting

You need to speak to a user in your communications system urgently, even though his line is busy. You can send a call waiting signal during his call to let him know you want to talk to him. The user either answers immediately or you will be automatically connected to him when he has finished his call.

This function is only available if it has been configured by the service engineer.

The user is busy. You want to use call waiting.

Wait until the message "Camp-on" appears on the display (ringing tone).

You receive a call waiting signal (second call)

You are still available to other callers, even though you are on the telephone. The call waiting signal informs you of the second call while you are conducting a call. You can answer this call without ending the first call.

You are on a call and hear a call waiting signal.

If you want to answer the second call, you can either place the first call on hold (the first caller waits) or end the first call.

Placing the first call on hold and answering the second call

Answer the second call.

Talk to the second caller. The first caller waits. His call is on hold. You can now:

- toggle between the two callers ☎ Page 59 or
- set up a conference ☎ Page 60.

2ndCall



Ending the second call

Open the system menu.

Select the menu item and confirm.

Or:



Press the On-hook key. The following message appears on the display: "Recalling". Your telephone rings.



Press the Talk key to talk to the first caller again.

Ending the first call



Press the On-hook key. The first call is ended. Your telephone rings.



Press the Talk key and answer the second call.

Ending both calls



Press the On-hook key. Your handset rings.



Press the Talk key to talk to the other caller again.



Press the On-hook key. Both calls are ended.

Call waiting tone off/on

You can suppress the call waiting tone for external calls.

Deactivating the call waiting tone



Press and hold the Talk key or press and hold the Speakerphone key.

Menu

Open the system menu.



Waiting tone off?

OK

Select the menu item and confirm.



Press the On-hook key to end the operation.

Activating the call waiting tone



Press and hold the Talk key or press and hold the Speakerphone key.

Menu

Open the system menu.



Waiting tone on?

OK

Select the menu item and confirm.



Press the On-hook key to end the operation.

Disabling/enabling automatic call waiting

You can disable/ enable automatic call waiting signalling for a second call during a telephone conversation.

Disabling the call waiting tone

Press and hold the Talk key or press and hold the Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Press the On-hook key to end the operation.

Enabling the call waiting tone


Press and hold the Talk key or press and hold the Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Press the On-hook key to end the operation.

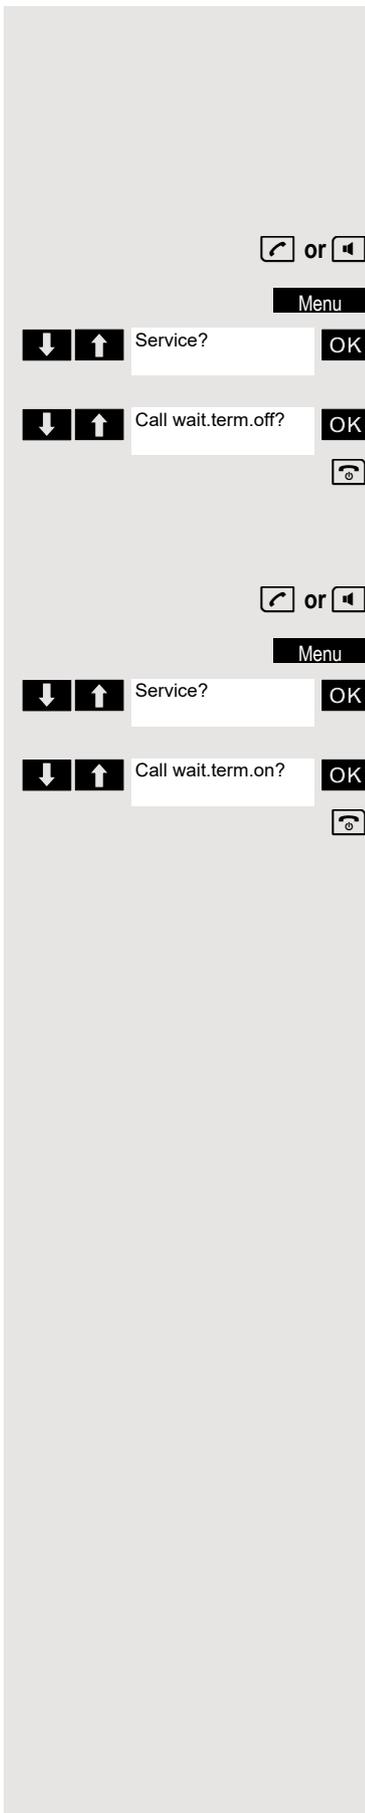



Busy override

You need to speak to an internal user urgently, even though his line is busy. The "Override" function allows you to interrupt the ongoing call to pass on a message.

This function is only available when the code has been input and if it has been configured by the service engineer.

The user is busy.

Call the function.

Enter the phone number of the busy user.

The override is established. The user name or phone number, to whom/which the call has been transferred, is displayed.

Override is ended when you replace the handset.

During override

- all users hear an override tone and everything that is said,
- all users see the following message on the display "Override:....." .

Transferring a call (joining)

Transferring a call means that you wish to hand over a call you are conducting on your handset to another user.

Transferring (without announcing the call transfer)

You can use this function to forward a call you answered to another user.

Open the system menu.

Select the menu item and confirm.

The current call is placed "on hold", so that the first user waits.

Enter the phone number of the user to whom the call is to be transferred.

The number is dialled.

Either:



Press the On-hook key. The target user's phone rings. He picks up the call by lifting the handset.

Or:

Menu

Open the system menu.


Select the menu item and confirm.

Press the On-hook key. The target user's phone rings. He picks up the call by lifting the handset.

You receive a recall:

- immediately if you have made a mistake,
- 45 seconds after the transfer if the destination user does not answer.

If you do not answer recalls, another telephone defined by the service engineer is called (intercept station).

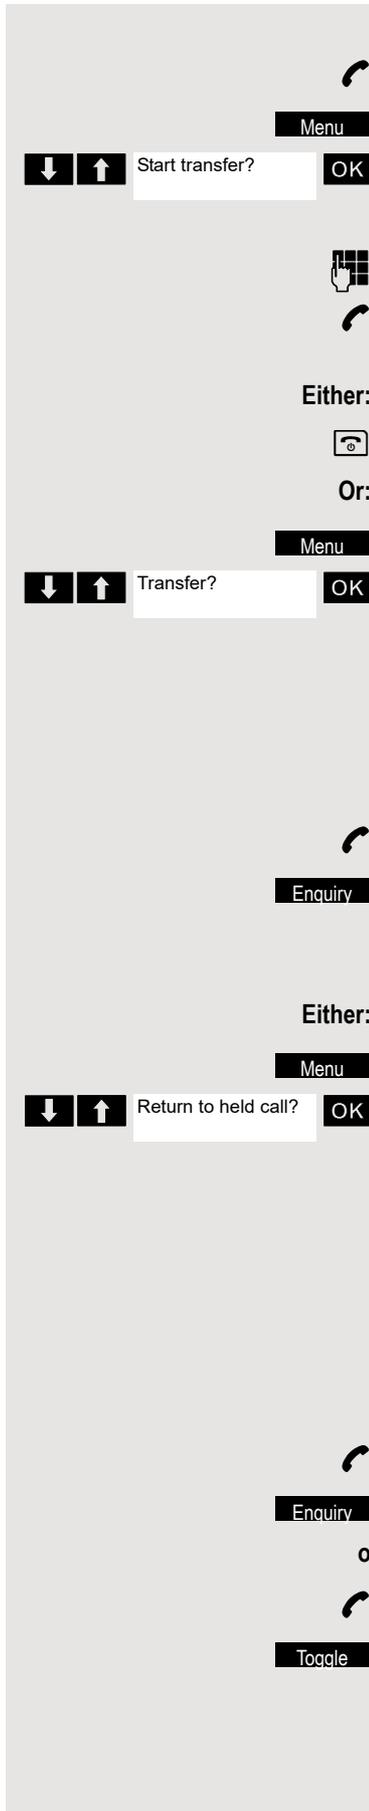

Transferring (with announcement of call transfer)

You can use this function to forward a call you answered to another user.

Open the system menu.

Select the menu item and confirm.

The current call is placed "on hold", so that the first user waits.

Enter the phone number of the user to whom the call is to be transferred.

The number is dialled. The user answers. You announce the call presently on hold.

Either:



Press the On-hook key. The user takes the call.

Or:

Open the system menu.

Select the menu item and confirm.

Placing a call on hold

You can interrupt a call temporarily if, for example, you want to talk to someone else in the room. The line is placed "on hold".

You are conducting a call.

Press the display key. The current call is placed "on hold", the user waits.

Resuming the call with the waiting user

Open the system menu.

Select the menu item and confirm.

You are reconnected to the partner.

Toggling (switching between calls)

The Toggle function allows you to switch between two users without allowing them to speak to each other directly. The two users can be either external or internal users. You can also withdraw from the calls and connect the two users with each other. You can also start a conference.

You are conducting a call.

Press the display key. The current call is placed "on hold", the user waits.

Enter the phone number of the second user.

The second user answers.

Press the display key to switch between the two calls.

When you end the call, both users are still connected (only possible with 2 external users if the "Transit" feature is activated by your service engineer).

Conducting a conference

You can connect up to 5 internal or external partners with each other in a telephone conference. You can include up to 4 external users in the conference.

For information purposes, you will hear an alerting tone every 30 seconds during a conference call (can be disabled - ask your service engineer).

Setting up a conference

You decide to set up a conference while talking to a user.

You are on a call and wish to start a conference.

Open the system menu.

Select the menu item and confirm.

Enter the phone number of the new user.

The user is free and answers the phone. You announce the conference.

Open the system menu.

Select the menu item and confirm.

You and your two partners are connected in a conference call.

Forming a conference

A conference has not yet been set up. However, you are already connected to two users and are toggling between them. You now want to form a conference involving all partners.

You are talking to one user.

Open the system menu.

Select the menu item and confirm.

You and your two partners are connected in a conference call.

Expanding a conference

You can expand an existing conference to include up to five users.

You are connected with two or more partners in a conference call.

Open the system menu.

Select the menu item and confirm. Conference is placed "on hold", the users wait.

Enter the phone number of the new user.


The user is free and answers the phone. You announce the conference.

Open the system menu.

Select the menu item and confirm. The new user is included in the conference call.

Ending a conference

You are connected with two or more partners in a conference call.

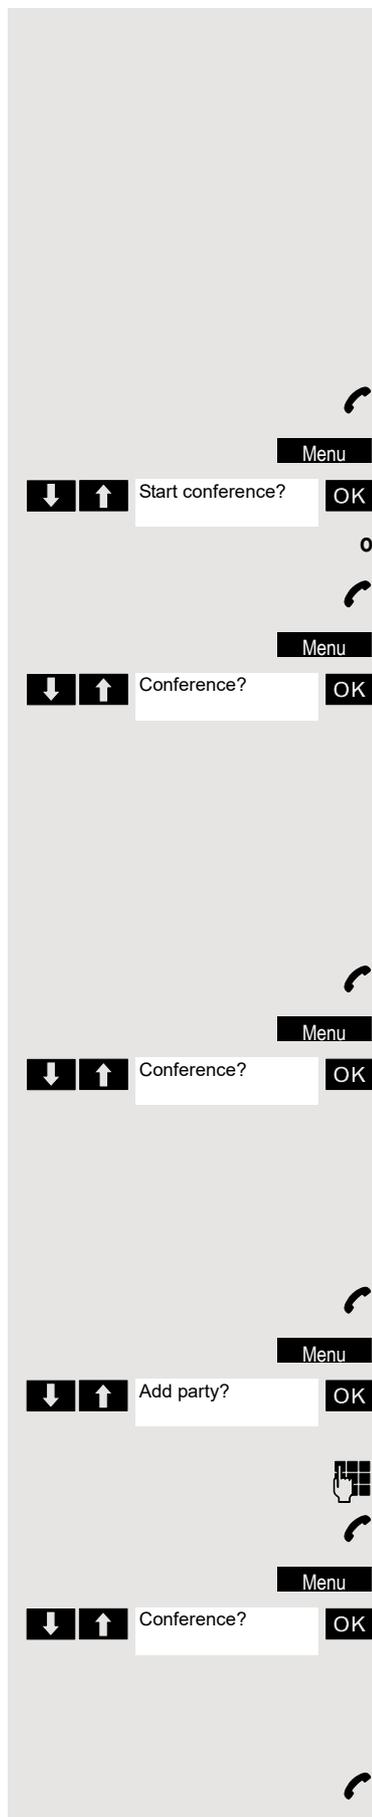



Open the system menu.

Select the menu item and confirm. The conference is ended.

Leaving a conference

Press the On-hook key. You exit the conference.

When one user leaves the conference, the other two users remain connected.

Viewing the names of conference parties

As the convener of the conference, you can view the names of all conference parties.

You are connected with two or more partners in a conference call.

Viewing the conference parties list

Open the additional menu.

Select the menu item and confirm. The first party is displayed.

View other parties.

Closing the conference party list

Open the additional menu.

Select the menu item and confirm. The conference party list is closed.

or
Press the display key to close the list.

Disconnecting a party from the conference

As the convener of the conference, you can disconnect users from the conference.

You are connected with two or more partners in a conference call.


Open the system menu.

Select the menu item and confirm. The first party is displayed.

Display the required party.

Select the menu item and confirm.

Select the menu item and confirm. The relevant party is disconnected from the conference.

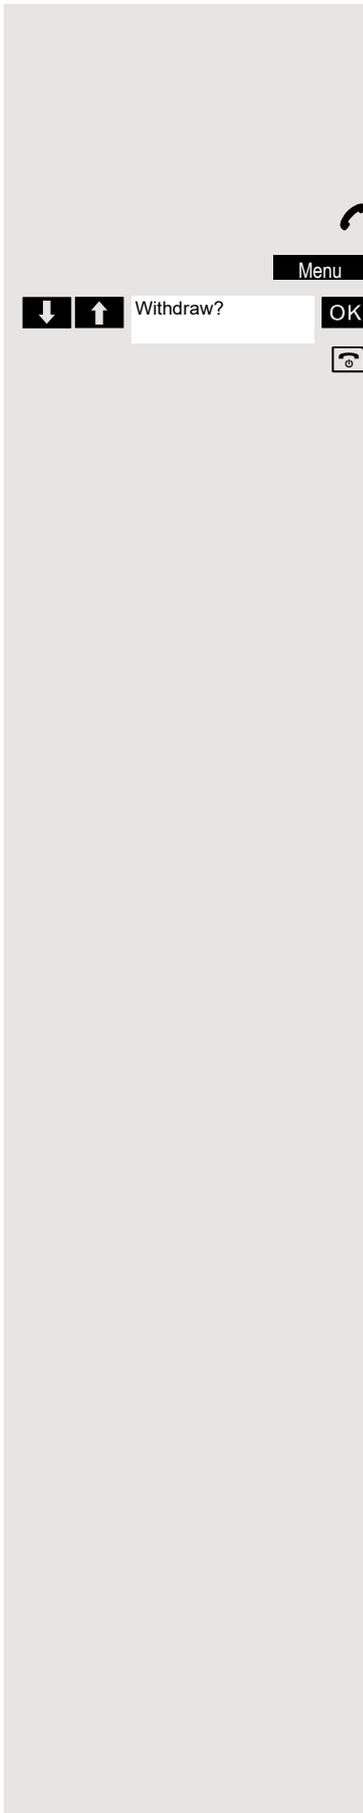

Connecting parties

As the conference convener, you can leave the conference and thereby connect the other parties with each other. If you were previously connected with two or more parties, the other parties remain in a conference. Otherwise, the remaining two users conduct a one-to-one call.

You are connected with two or more partners in a conference call.

Open the system menu.

Select the menu item and confirm. The first party is displayed.

Press the On-hook key. You leave the conference; the remaining parties are connected with each other.

Using the second call function

The second call is an incoming call that is signalled on your handset during a call (call waiting) and that can be queried by you (for example, [📞 Page 55](#)).

A second call can be answered in the following call states:

- You are on a single call,
- You are on a consultation call,
- You are holding a conference,
- You are on a call which you intend to add to a conference,
- You are toggling between two partners.

Group functions

Activating/deactivating group calls

If this has been configured by the service engineer, you belong to one or more groups of internal users that can be reached at a hunt group or group call phone number. Calls are signalled on all telephones in the group either in succession (=hunt group) or simultaneously (=group call), until a member of the group answers the call. Every user in the group can also remain available under his own phone number.

You can leave and re-join specific groups or leave and re-join all groups.

These functions can also be called directly by entering the relevant code
 ⓘ Page 106.

You belong to a hunt group or group call group

Use this function to leave or re-join the hunt group or group.

 
Press and hold the Talk key or press and hold the Speakerphone key.

Open the system menu.

Select the menu item and confirm. You have now left the hunt group or group.


Select the menu item and confirm. You have now re-joined the hunt group or group.

Press the On-hook key to end the operation.



Menu

 Either:



Leave hunt group?


Or:



Join hunt group?

then:



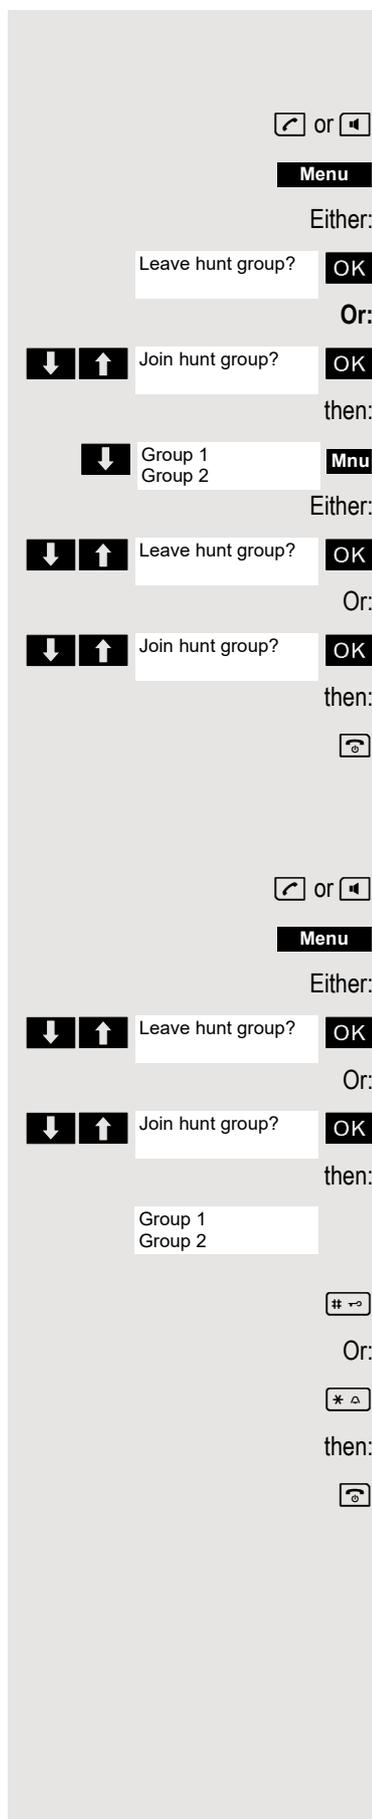

You belong to multiple groups

Leaving and re-joining individual groups

Press and hold the Talk key or press and hold the Speakerphone key.

Open the system menu.

Either:

Leave hunt group? **OK**

Select the menu item and confirm.

Or:

↓ ↑ Join hunt group? **OK**

Select the menu item and confirm.

then:

↓ Group 1
Group 2 **Mnu**

Select the required group and call the additional menu.

Either:

↓ ↑ Leave hunt group? **OK**

Select the menu item and confirm. You have now left the selected group.

Or:

↓ ↑ Join hunt group? **OK**

Select the menu item and confirm. You have now joined the selected group.

then:



Press the On-hook key to end the operation.

Leaving and re-joining all groups

Press and hold the Talk key or press and hold the Speakerphone key.

Open the system menu.

Either:

↓ ↑ Leave hunt group? **OK**

Select the menu item and confirm.

Or:

↓ ↑ Join hunt group? **OK**

Select the menu item and confirm.

then:

Group 1
Group 2

The list of groups is displayed.



Press the hash key. You have now left all groups.

Or:



Press the star key. You have now joined all groups.

then:



Press the On-hook key to end the operation.

Ringing group on

You can have calls to your handset signalled acoustically on up to five other telephones. The call is received by the person who answers the call first.

Adding users to a group

First user

Press and hold the Talk key or press and hold the Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Open the additional menu.

Confirm the option shown.

Enter the required internal phone number.

Save the settings.

Other users:

Open the additional menu.

Select the menu item and confirm.

Enter the required internal phone number.

Save the settings.

Press the On-hook key to end the operation.

Deleting users

Press and hold the Talk key or press and hold the Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

The number of parties added is displayed.

Open the additional menu.


Select the menu item and confirm. The first user added is displayed.

Scroll to the required user.

Open the additional menu.

Select the menu item and confirm. The addition of the first user is cleared.

Press the On-hook key to end the operation.

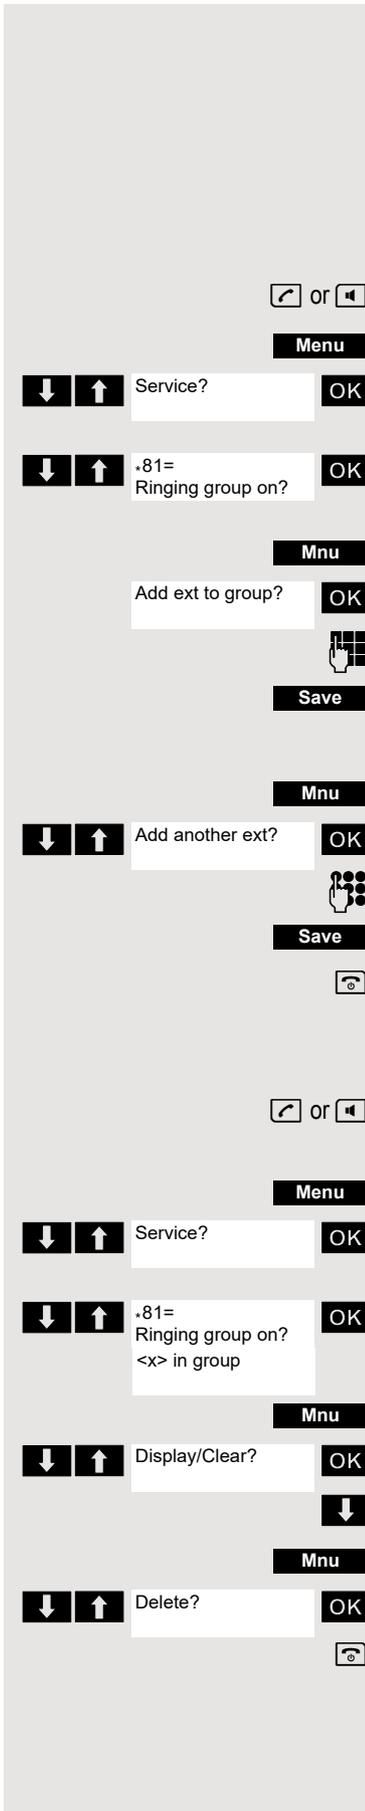

UCD (Universal Call Distribution)

This function enables calls to be distributed in a team. An incoming call is always delivered to the team member who has been idle longest. Team members can also work in separate rooms, for example, on the company's premises and at a teleworking station. The teams (call distribution groups) and team members are set up by the service engineer.

Logging on/off

You must log on and off at the system when you start/finish work.

Register

Press and hold the Talk key or press and hold the Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Enter your identifier number (assigned by the service engineer).

Press the On-hook key to end the operation.

Logging off

Press and hold the Talk key or press and hold the Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Press the On-hook key to end the operation.

Logging on/off temporarily

You can log on or off at the system temporarily, for example, during break times.

Register

Press and hold the Talk key or press and hold the Speakerphone key.

Open the system menu.


Select the menu item and confirm.


Select the menu item and confirm.

Select the menu item and confirm.

Press the On-hook key to end the operation.

Logging off

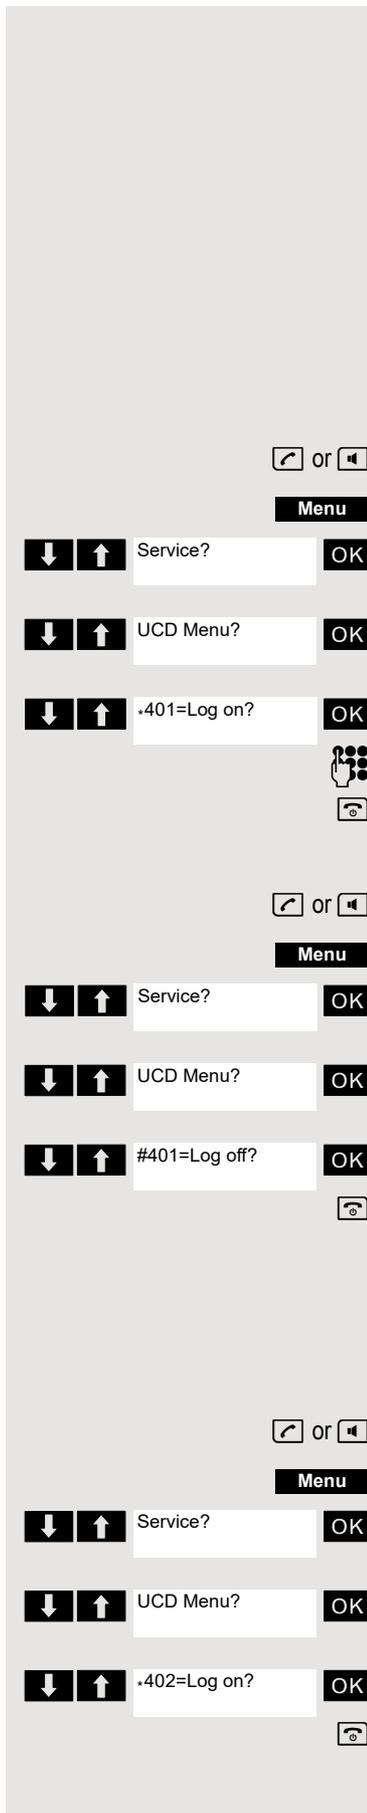

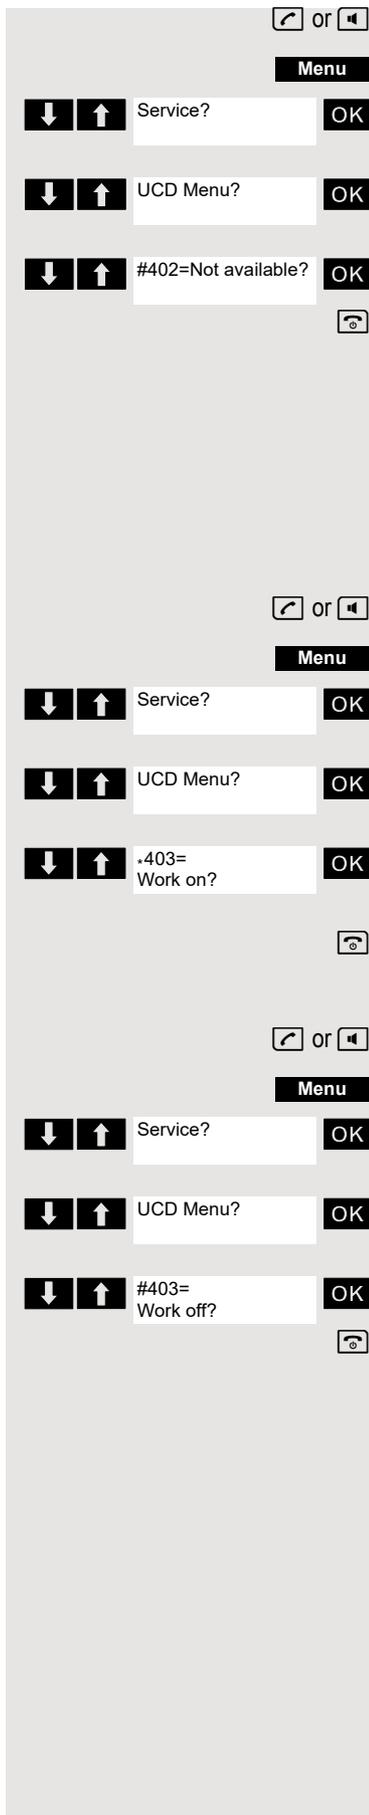

Press and hold the Talk key or press and hold the Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Press the On-hook key to end the operation.

Wrap-up time

If you need more time than the actual call lasts, you can request/activate a wrap-up time for the last call. This can be a fixed length of time or, alternatively, you must deactivate the wrap-up time yourself (log back on).

Requesting time

Press and hold the Talk key or press and hold the Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Press the On-hook key to end the operation.

Logging back on

Press and hold the Talk key or press and hold the Speakerphone key.


Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Press the On-hook key to end the operation.

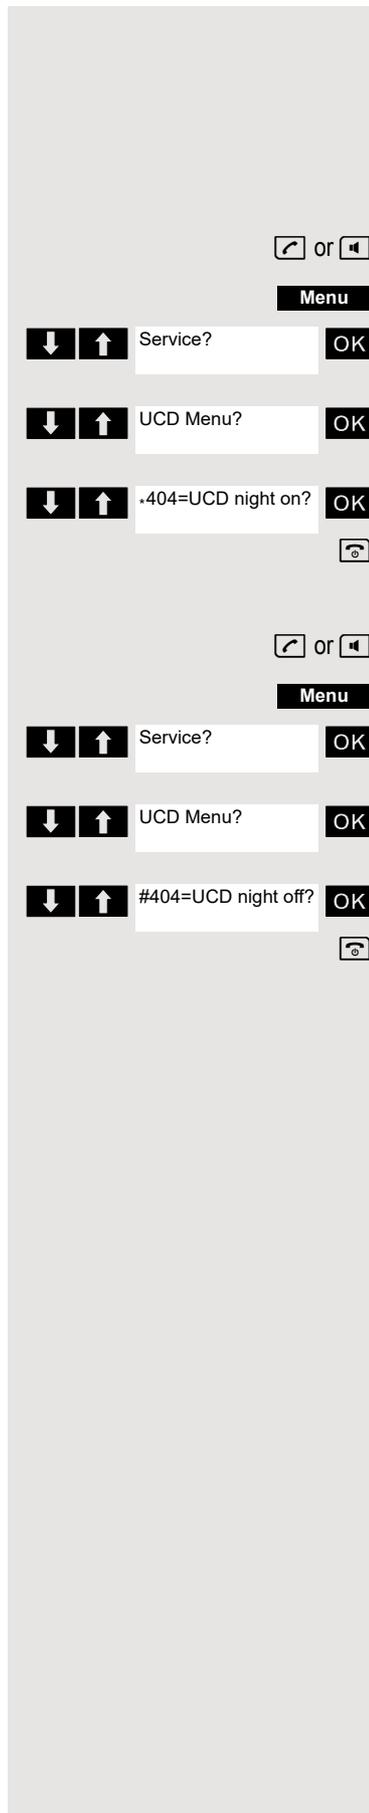

UCD night service

UCD night service is a separate night service for call distribution. It is not affected by the system night service.

All incoming calls are forwarded to a special call distribution destination.

Night destination on

Press and hold the Talk key or press and hold the Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Press the On-hook key to end the operation.

Night destination off

Press and hold the Talk key or press and hold the Speakerphone key.


Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Press the On-hook key to end the operation.

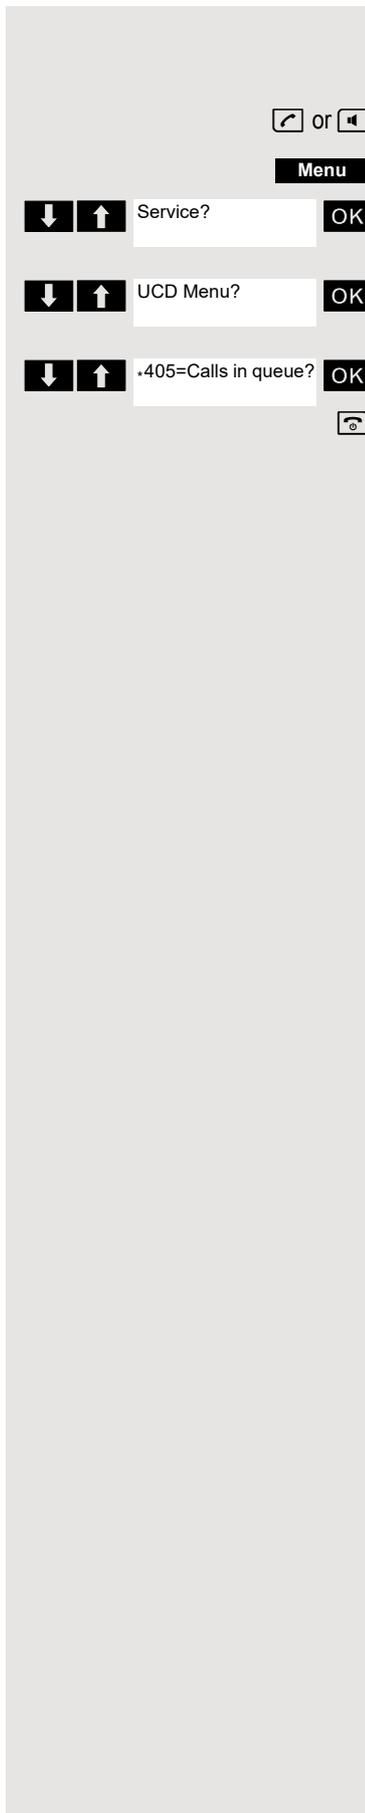

Display the number of waiting calls

You can check the number of waiting calls for the group.

Press and hold the Talk key or press and hold the Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Press the On-hook key to end the operation.

Mulap group (Multiple Line Application)

If your handset's line belongs to a Mulap group (Multiple Line Application), then you can

- answer calls for the group (press the Talk key in group calls)
- make external telephone calls under the group phone number (the group phone number is stored in the called party's caller list, for example)
- activate and deactivate the group call function for your handset's line
- forward the lines of the Mulap group to internal or external destinations

Activating/deactivating group calls

Press and hold the Talk key or press and hold the Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Press the On-hook key to end the operation.

Forwarding a Mulap line

You can immediately forward internal and/or external calls to your lines to different internal or external telephones (destinations) (external destinations are also possible if the system is configured accordingly).

If you activate call forwarding for a line, this shall apply to all line keys of your group for this line.



Message functions

The message functions enable you to react to voicemail/callback services of the communication system or of other users or to initiate information features yourself.

Leaving a message/advisory message

A number of advisory messages are stored in your communication system that can be automatically sent to the caller when an internal call is not answered (in the case of handsets and telephones with display). These advisory messages can be selected and supplemented in part by you:

- 0 = Will return at:
- 1 = On vacation until:
- 2 = I am out until:
- 3 = Out all day
- 4 = Out to lunch
- 5 = Not available
- 6 = Home phone:
- 7 = Contact:
- 8 = Avail at:
- 9 = Am in room:

These advisory messages are standard texts and may have been changed in your communication system.

Activating an advisory message

Press and hold the Talk key or press and hold the Speakerphone key.

Open the system menu.



Menu



Advisory msg. on?

OK

Either:



0 = Will return at:
1 = On vacation until:

OK

If necessary



Save

Or:



Enter message text

OK



Select the menu item and confirm.

Select the required advisory message.

Expand the message as necessary.

Save the settings.


Select the menu item and confirm.

Enter the required advisory message.



You can enter the text via the handset's keypad. Each key is assigned several letters and each letter is selected by pressing the key an appropriate number of times. For example, you have to press the "7" key three times to enter an "r".

Typing errors can be corrected: activate delete mode by double-clicking the hash key and then use the hash key to delete a character.

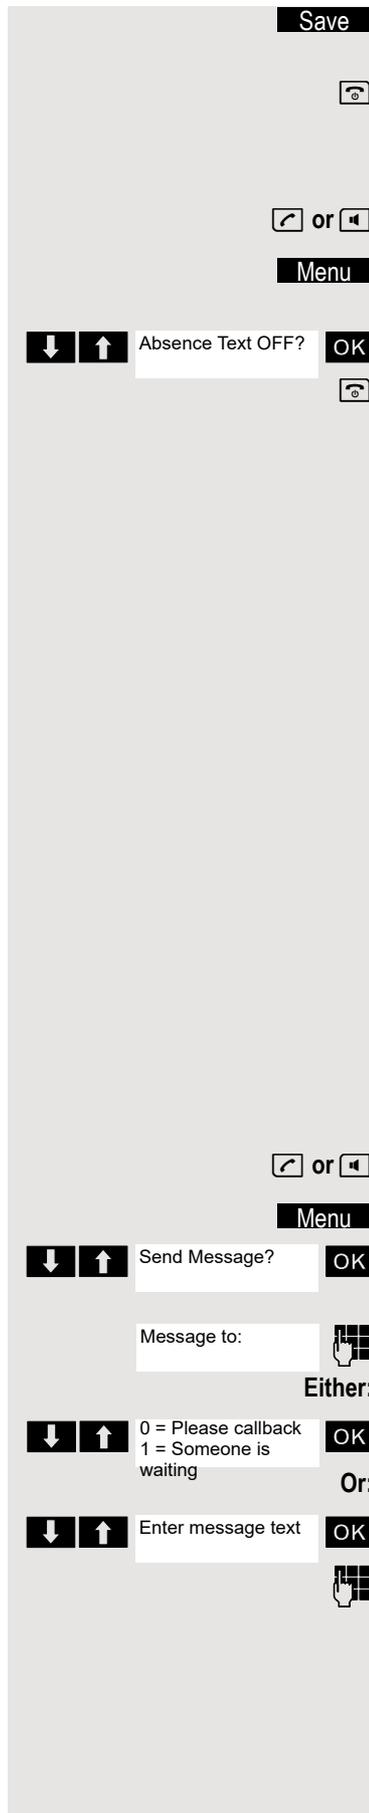

Save the message.

Press the On-hook key to end the operation.

Deactivating an advisory message

Press and hold the Talk key or press and hold the Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Press the On-hook key to end the operation.

Sending/calling text messages

You can send short messages to individual internal users or to groups of internal users. These must have a handset or telephone with display. These text messages can be selected and supplemented in part by you:

- 0 = Please call back
- 1 = Someone is waiting
- 2 = Appointment
- 3 = Urgent call
- 4 = Do not disturb
- 5 = FAX waiting
- 6 = Dictation please
- 7 = Please make copies
- 8 = Please make coffee
- 9 = Ready to depart

These text messages are standard texts and may have been changed in your communication system.

Send a text message

Press and hold the Talk key or press and hold the Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Enter the phone number for the required internal user or the group.

Select the required advisory message.

Select the menu item and confirm.

Enter the required text message.

Typing errors can be corrected: activate delete mode by double-clicking the hash key and then use the hash key to delete a character.

 You can enter the text via the handset's keypad. Each key is assigned several letters and each letter is selected by pressing the key an appropriate number of times. For example, you have to press the "7" key three times to enter an "r".

then:

Send



Press the display key.

Press the On-hook key to end the operation.

Answering a message or voicemail message

An advisory message appears and the message key flashes when one or more information messages or voicemails have been received for you.

Viewing a new message

Either:



Press the message key.

Or:



Press and hold the Talk key or press and hold the Speakerphone key.

Menu

Open the system menu.



Select the menu item and confirm.



Select the required message and confirm your selection.

then:

Msg. from:
...

Mnu

Open the additional menu.



Select the menu item and confirm.

Mnu

Open the additional menu.



Select the menu item and confirm. The time of the message is displayed.

Either:

Mnu

Open the additional menu.



Select the menu item and confirm. You call back the sender.

Or:



Select the menu item and confirm. The entry is deleted.

then:



Press the On-hook key to end the operation.


Checking for a new voicemail message

Either:



Press the message key.

Or:

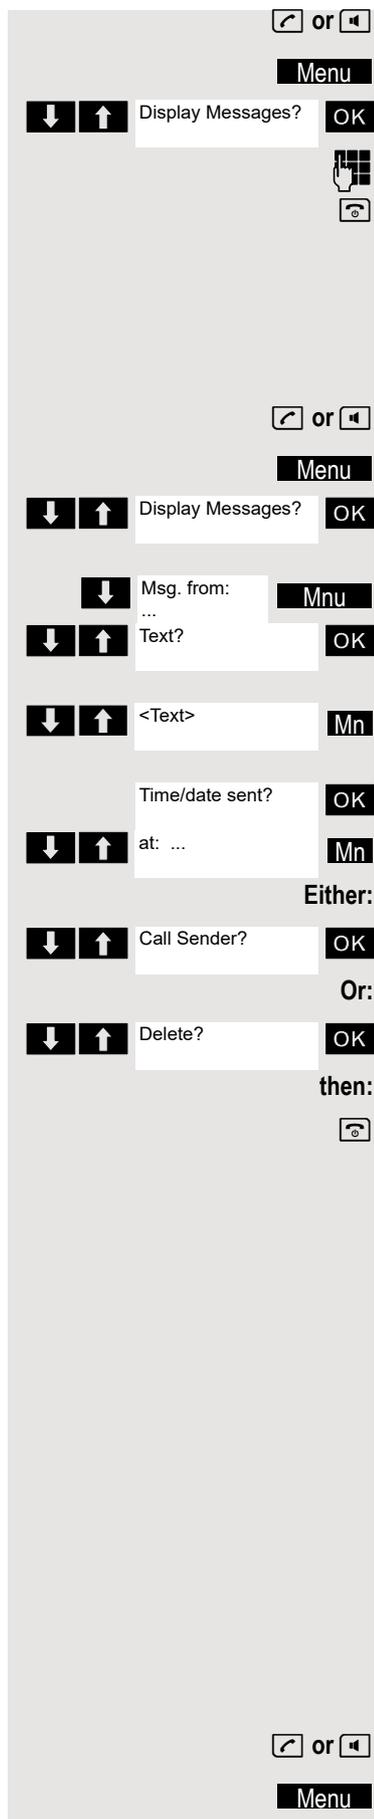

- Press and hold the Talk key or press and hold the Speakerphone key.
- Open the system menu.
- Select the menu item and confirm.
- Follow the user guidance system from this point onwards.
- Press the On-hook key to end the operation.

Checking for an old text message

Old messages that have not been deleted cannot be displayed using the message key . To view these messages, proceed as follows:

- Press and hold the Talk key or press and hold the Speakerphone key.
- Open the system menu.
- Select the menu item and confirm.

- Select the required message and call the additional menu.
- Select the menu item and confirm.

Open the additional menu.

- Select the menu item and confirm. The time of the message is displayed.
- Open the additional menu.

Select the menu item and confirm. You call back the sender.

Select the menu item and confirm. The entry is deleted.

Press the On-hook key to end the operation.

Caller list

If you are unable to answer an external and/or internal call, this call request is stored in a caller list. If you belong to a hunt group or group call group, these call requests are also stored.


Your telephone stores up to ten calls in chronological order. Each call is assigned a time stamp. The display starts with the latest call request still not called. When several calls are received from one caller, the number of calls is shown.

During a call, you can save the other caller's phone number to your caller list.

 If configured by the service engineer, the phone numbers for all external calls answered are saved automatically.

Selecting a call request

- Press and hold the Talk key or press and hold the Speakerphone key.
- Open the system menu.

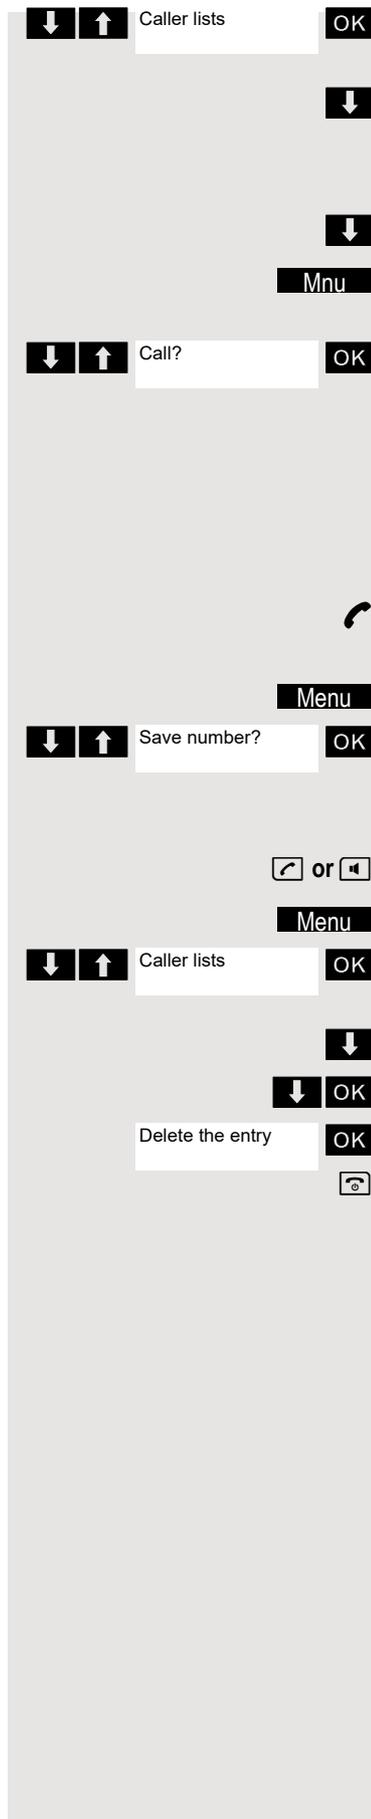

Select the menu item and confirm. The caller lists for missed calls and answered calls are displayed.

Select a call request.

Calling back a caller

Select the party

Open the additional menu.

Select the menu item and confirm. The connection is set up.



The caller is automatically deleted from the caller list when a connection is finally set up. Call requests for groups (hunt group/group call) are also deleted if a member of the group has set up the connection.

Adding a caller to the caller list

During a call, you can save the other party's phone number in your caller list, for example, to remind you to call again later.

Open the system menu.

Select the menu item and confirm. The caller's phone number is saved.

Deleting a caller from the caller list

Press and hold the Talk key or press and hold the Speakerphone key.

Open the system menu.

Select the menu item and confirm. The caller lists for missed calls and answered calls are displayed.

Select the caller list.

Select the party.

Select the menu item and confirm. The entry is deleted.

Press the On-hook key to end the operation.

Additional functions

Handset alarm clock function

When the alarm clock is activated, it rings every day or every day from Monday to Friday at the set time. The alarm clock is deactivated during automatic number redial.

 The alarm will only sound with the set melody if the handset is in idle status. During a call, the alarm is only signalled by a short tone.


Prerequisite: The date and time must be set.

Setting the alarm clock

The handset is in idle status.

Open the handset's main menu.

Select the menu icon and confirm. The input mask for setting the alarm is displayed.

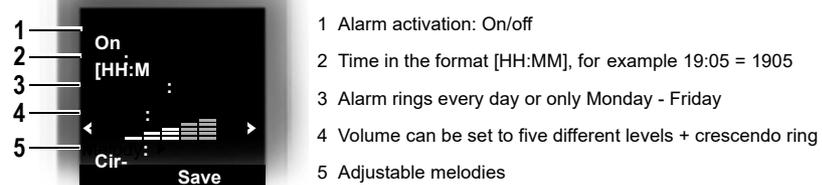

Define the setting.

Move the cursor down one line.

Enter the time.

Move the cursor down one line.

etc.

Save the settings.

The alarm clock is activated.

 
Press the On-hook key to end the operation.

Deactivating an alarm/repeating after a pause

The alarm rings for 60 seconds. The  symbol appears on the display. If you do not press anything, the alarm repeats after five minutes and then deactivates.

During the alarm:

Press the display key. The wake-up call is deactivated.



...

Save


¼



Either:

Off

Or:

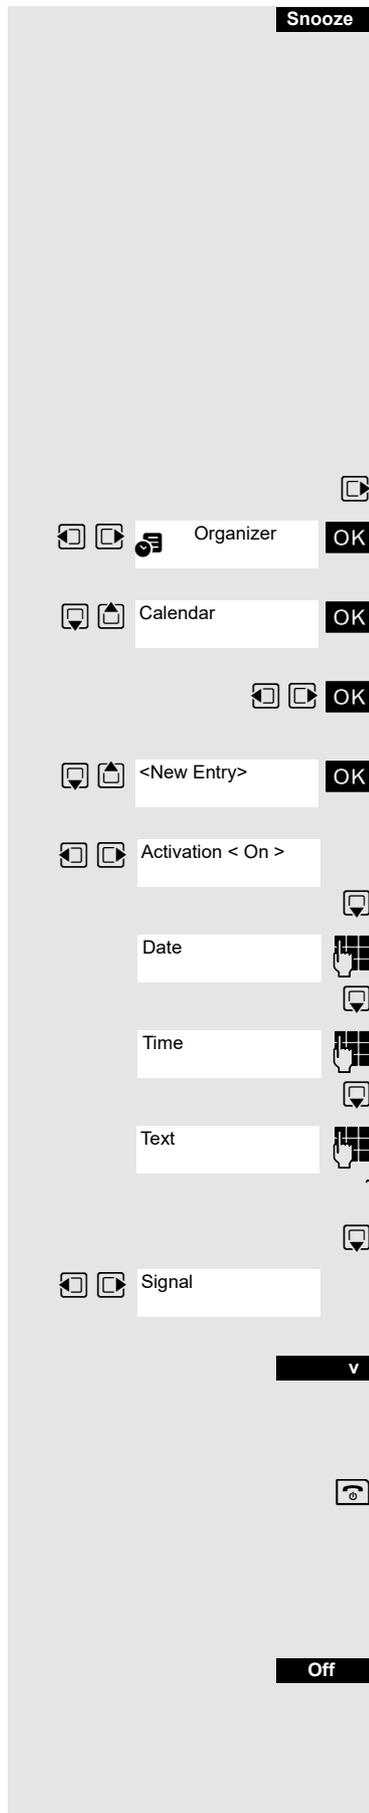

Press the display key or any key. The alarm deactivates and is repeated after five minutes. The alarm is repeated twice and then permanently deactivated.

Handset appointment reminder function

You can use your handset to remind yourself of up to 30 appointments. The handset must be in idle status at the time of the appointment reminder. The appointment reminder function is deactivated during automatic number redial. The date and time must be set.

Saving an appointment

The handset is in idle status.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm. The current month's calendar is displayed with the current day marked.

Select and confirm the required day for the new appointment reminder. The input mask for entering a new appointment reminder appears.

Select and confirm the menu item or select an existing appointment entry. The "New Entry" option only appears if an appointment entry already exists.

Define the setting.

Move the cursor down one line.

Enter the date, for example 11 November = 1111.

Move the cursor down one line.

Enter the time, for example 19:05 = 1905.

Move the cursor down one line.

Enter the name for the appointment reminder.

If applicable, delete the old text.

Move the cursor down one line.

Define a melody to signal appointments.

Save the settings.

The appointment reminder function is activated. The check mark after the appointment indicates that the appointment is active.


Press the On-hook key to end the operation.

Confirming an appointment reminder call

An appointment reminder call is signalled in the same way as an incoming call.

Press the display key during the appointment reminder call.

If you do not confirm the appointment reminder call, it will be stored in a missed dates list.

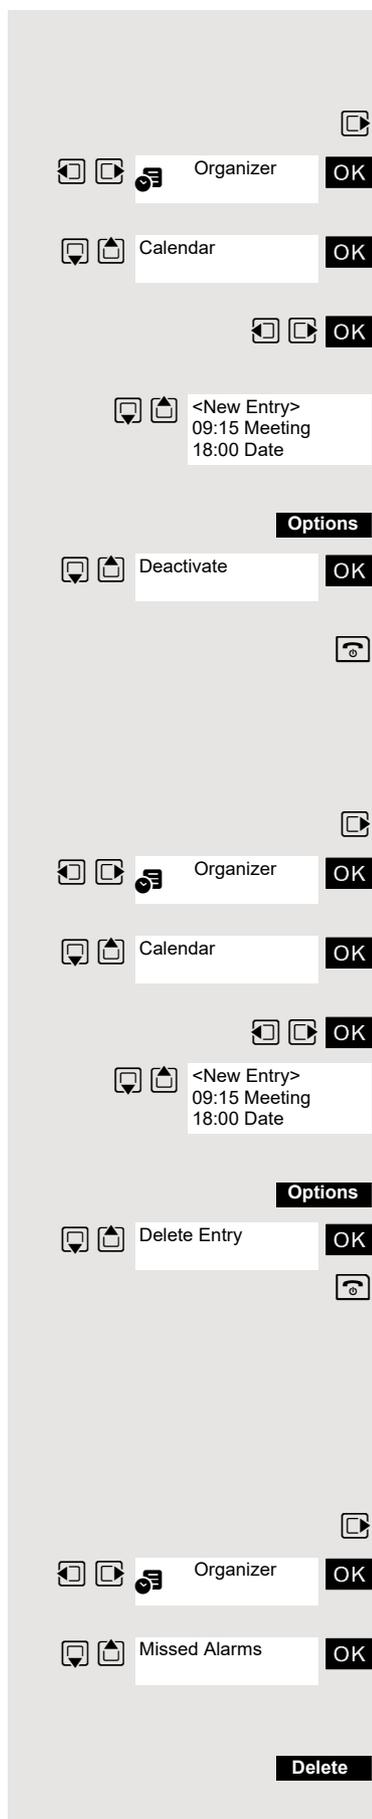

Deactivating an appointment reminder

The handset is in idle status.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm. The calendar for the current month is displayed.

Select and confirm the required day with at least one available appointment. The list of appointments is displayed.

Select the appointment reminder that you want to deactivate.

Open the additional menu.

Select the menu item and confirm. The selected appointment reminder is deactivated (check mark removed).

Press the On-hook key to end the operation.

Deleting an appointment

The handset is in idle status.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm. The calendar for the current month is displayed.

Select and confirm the date you want. The list of appointments is displayed.

Select the appointment reminder that you want to delete.

Open the additional menu.

Select the menu item and confirm. The appointment is deleted.

Press the On-hook key to end the operation.

Displaying an unconfirmed appointment

If you have not confirmed an appointment reminder call, the  icon and the number of **new** entries are shown on the display. This unconfirmed appointment must also be saved in a missed dates list.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm. The date and time of the unconfirmed appointment are displayed. If 10 entries are already stored in the list, the next appointment reminder will delete the oldest entry.

Delete entry manually from the list

System appointment function

You can use your handset to enter a single appointment for the next 24 hours or an appointment that recurs on a daily basis.

When the appointment is due, your handset rings for approx. 20 seconds to remind you of your appointment. The entered appointment appears on the display. This appointment call is deleted when you confirm it. Alternatively it is deleted automatically after it has been repeated 5 times at one-minute intervals.

This function can also be called by entering the code ☎ Page 106.

Saving an appointment

Press and hold the Talk key or press and hold the Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the required time.

Note the required data format: Appointment at (HHMM); HH = two-digit hour setting mm = minutes, two digits Example: 0905 for 9.05 (= 9.05 a.m.) or 1430 for 14.30 (= 2.30 p.m.).

Either:

Select the menu item.

Or:

Select the menu item and confirm.

then:

Save the settings.

Press the On-hook key to end the operation.

Deleting/checking entered appointments

Press and hold the Talk key or press and hold the Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Open the additional menu.


Select the menu item and confirm.

Or:

Select the menu item and confirm.

Press the On-hook key to end the operation.



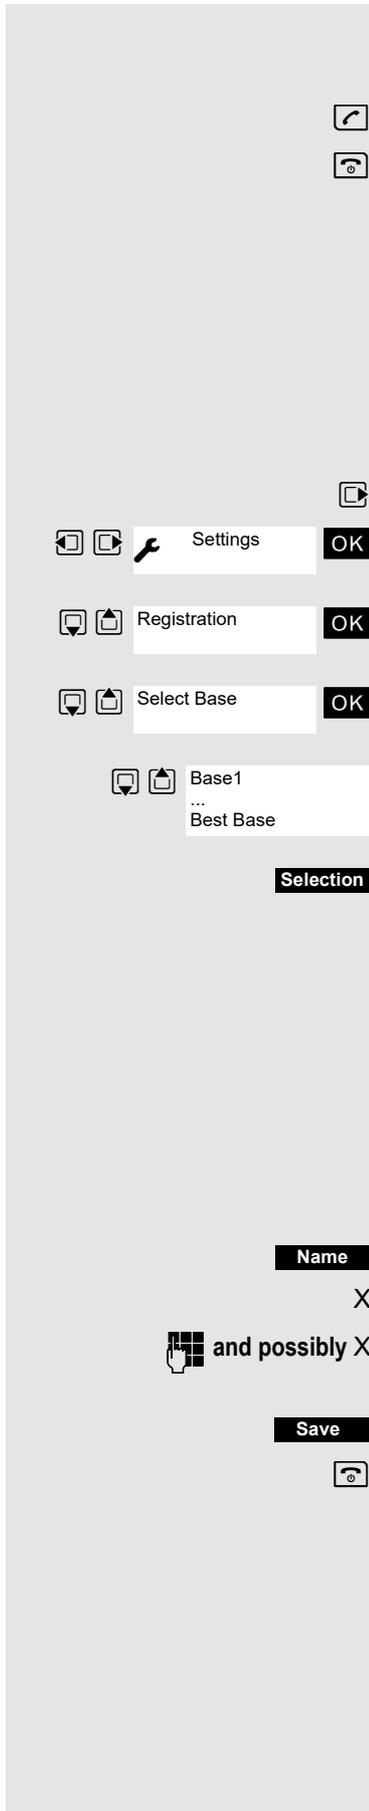

Confirming an appointment

The handset rings and the appointment is displayed.

Press the Talk key.

Press the On-hook key. The appointment is confirmed.

Selecting a base

If your handset is registered at multiple bases (cordless systems), then you can set a specific base or the base with the best reception as the base to be used. The handset then switches automatically to this base.

You can change the base name that is displayed on the handset at any time.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Select the required base.

Select base. The selected base is ticked:

- Base 1 - 4: Selecting base n defines one specific HiPath cordless system where the handset is registered.
- Best Base: If the handset is registered at multiple cordless systems, it automatically switches to one of these systems when it enters the relevant range. Example: The handset is registered at the Gigaset home base as well as at the cordless system in the company.

Changing the base station name

You can change the name of the base station.

Press the display key.

Delete text.

Enter the required text and correct individual characters as necessary using the "Delete" display key.

Save the settings.

Press the On-hook key to end the operation.

The new base station name is now displayed in idle status.

The cordless system overwrites the display information "Name base station" with the own phone number as soon as an incoming or outgoing call is initiated. In this case, the name of the base station only reappears after the handset has been switched off and back on again.

Setting the base

 Cannot be set on HiPath 3000.

You can configure individual settings on your system with your handset depending on how your system is configured.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Select the required menu item and confirm.

Speed dialling

You can program the number keys **0 +** and **2 ABC** to **9 WXYZ** with a phone number. You then dial the number by pressing the key.

Configuring speed dialling

Press the required number key **briefly**.

If this key is not already programmed with a function, the number key can be assigned a new phone number.

Press the display key.

If the key is already programmed with a function, it appears on the left display key.

Press the display key.


Select the required phone number from the phonebook and confirm.

Press the display key to delete the assignment.

Dial a phone number

Press and **hold** the number key programmed with the required phone number. The phone number is dialled.

If the number key has not been assigned a phone number, the list appears for you to select a phone number.

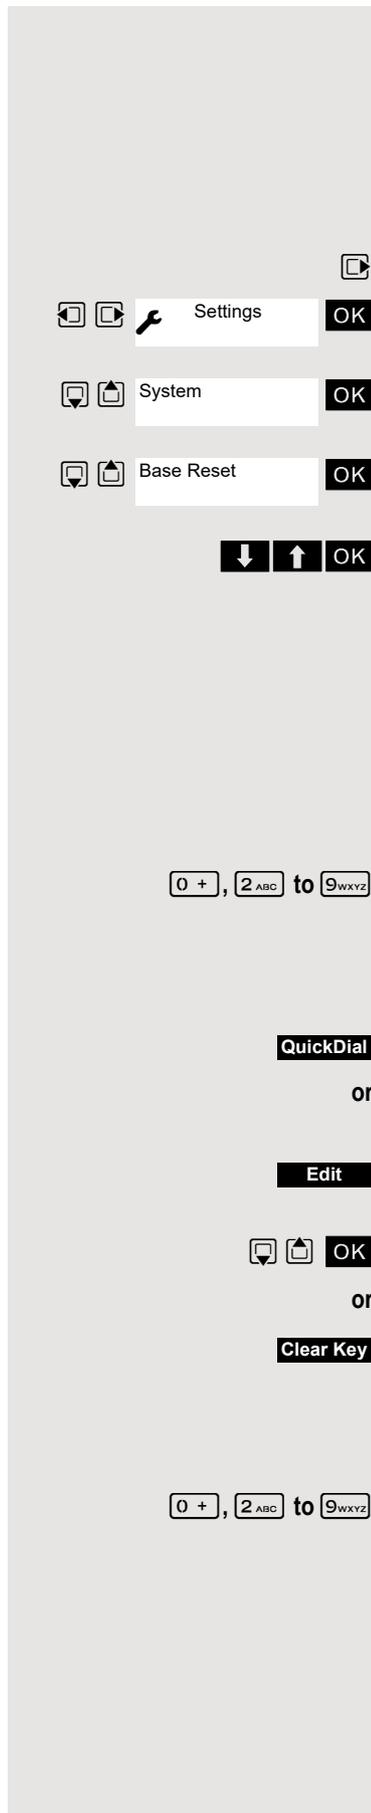

Changing display key assignments

You can assign functions to display keys and/or change the current assignment. The function is then started by pressing the key.

Changing the assignment

Press and **hold** the required display key.

A list of the functions that can be programmed on the key is displayed. The following functions are available for selection:

- INT (not available on HiPath 3000, HiPath 500)
- Alarm Clock
- Calendar
- Bluetooth
- Redial

Select and confirm an entry.

Calling the function

Press the required display key **briefly**.

The function is selected.

Data communication with the PC

To enable your handset to communicate with the PC, the **Gigaset QuickSync** program must be installed on your PC (free to download at http://wiki.unify.com/wiki/DECT_Handset_accessory).

After installing "Gigaset QuickSync", connect the handset to your computer using Bluetooth ⑦ Page 83 or via a USB data cable ⑦ Page 13.

Transferring data

Start the "Gigaset QuickSync" program. You can now:

- Synchronise your handset's address book with Outlook
- Download caller pictures (BMP, JPG, GIF) from the computer to the handset
- Download pictures (BMP, JPG, GIF) as screensavers from the PC to the handset
- Download sounds (ringer melodies) from the PC to the handset

"Data Transfer" is shown on the display during data transfer between the handset and PC. During this time, the keypad is disabled and incoming calls are ignored.

Bluetooth interface

Before you can use your Bluetooth device, activate Bluetooth, ensure the devices are visible and then register the handset.

You can register one Bluetooth headset at the handset. You can also register up to five data devices (PCs, PDAs and handsets) to send and receive address book entries as vCards or exchange data with the computer (🔗 Page 87).

To use the phone numbers, dialling codes (country and area code) must be stored in the directory (🔗 Page 99).

You will find a description of how to operate your Bluetooth devices in the user guides for these devices.

➡ Note:

The mobile phone will not be accessible when activating or deactivating Bluetooth.

Third parties can tap Bluetooth connections.

Activating/deactivating Bluetooth mode

You can deactivate the Bluetooth interface if you do not need it for extended periods of time. This increases your handset's standby time.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

The active Bluetooth function is ticked.

Confirm again to activate.



Registering Bluetooth devices

The distance between the handset in Bluetooth mode and the activated Bluetooth device (headset or data device) should be no more than 10 m.

To connect a Bluetooth headset, see [Page 29](#).

If the Bluetooth connection is not yet established between the handsets, perform the following steps:

Searching on your handset

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm. The handset searches for Bluetooth-enabled devices. This may take a few minutes. If devices are found, these will be shown in a list.

Select the required device, for example, the other handset.

Trusting the device

Press the display key.

Select the menu item and confirm.


Enter the Bluetooth PIN and confirm (default: 0000). The device is saved in the list of known devices.

Cancelling/repeating current search

Press the display key to cancel the search.

Press the display key.

Select and confirm the menu item in order to repeat the search.

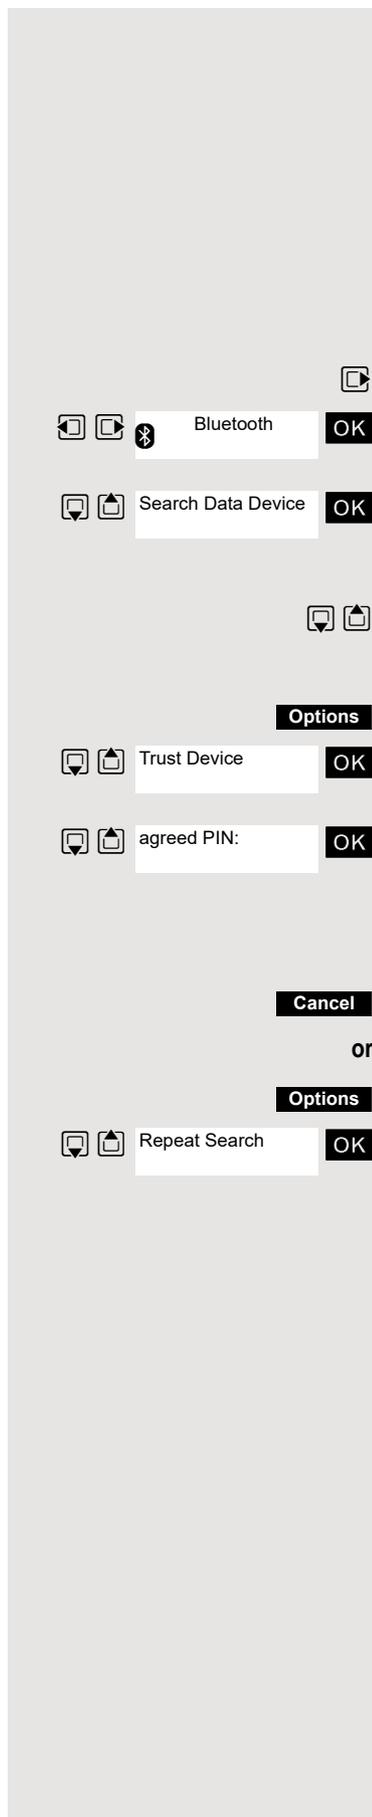



Confirming the connection on the other device

Enter and confirm identical Bluetooth PINs within a few seconds (default: 0000). If you were not fast enough, repeat the previous steps.

Confirm the prompt.

The Bluetooth connection is established. The two devices can now exchange data in vCard format.

Editing the list of known (trusted) devices

Opening the list

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

A corresponding icon appears next to each device name in the list displayed:

Icon	Explanation
	Bluetooth headset
	Bluetooth data device

Viewing entries

Select the entry.

Press the display key. Device name and address are displayed.

Press to switch back to the overview.

Deregistering Bluetooth devices

Select the entry.

Press the display key.

Select the menu item and confirm.

Changing the name of a Bluetooth device

Select the entry.

Press the display key.

Select the menu item and confirm.

Rename.

Press the display key.

Rejecting/accepting an unregistered Bluetooth device

If a Bluetooth device that is not registered in the list of known devices tries to connect with the handset, you will be prompted on the display to enter the PIN for the Bluetooth device (bonding).

Rejecting

Press the On-hook key **briefly**.

Accepting

Enter the PIN for the Bluetooth device **you want to accept** and confirm.

If you have accepted the device, you can use it temporarily (i.e. as long as it is within receiving range or until you deactivate the handset) or save it to the list of known devices.

Following PIN confirmation

Press the display key to add the device to the list of known devices.

Press the display key to use the device temporarily.

Changing the Bluetooth name of own handset

You can change the handset name used to identify it on the display of another Bluetooth device.


Select the menu icon and confirm.

Select the menu item and confirm.

Press the display key.

Rename.

Press the display key.

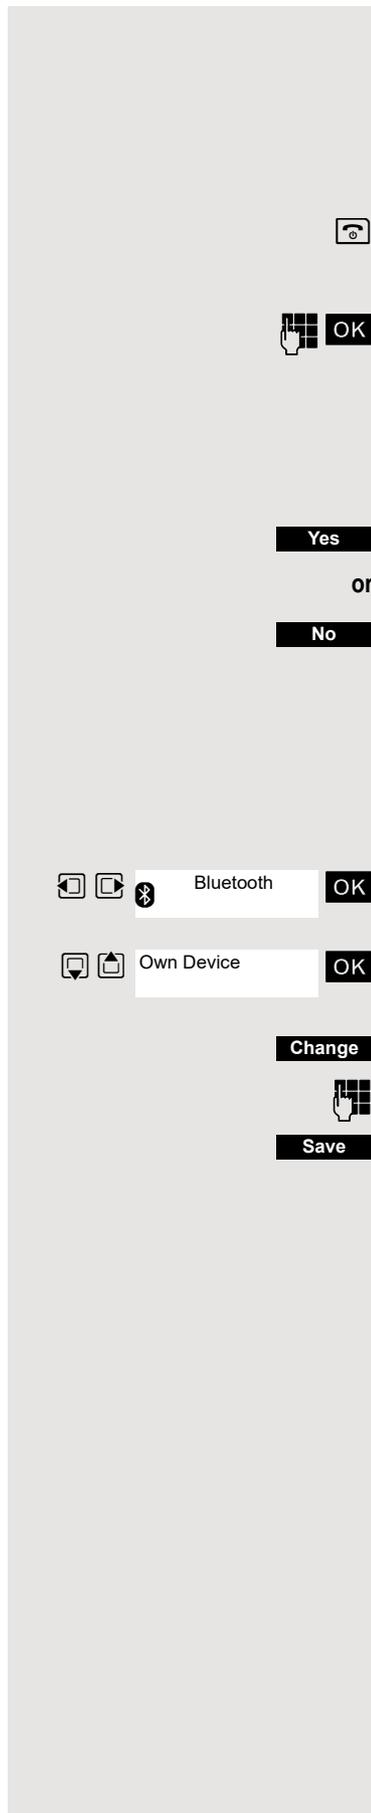

Phonebook transfer

 To transfer the phonebook data between handsets or with the system without using Bluetooth, see [Page 41](#).

Prerequisite: The Bluetooth connection between the devices is established [Page 84](#).

Open the phonebook.

Select the entry.

Press the display key.


Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Select and confirm the target device or the other handset. The vCard data is sent to the target device.

Now follow the instructions on your handset display.

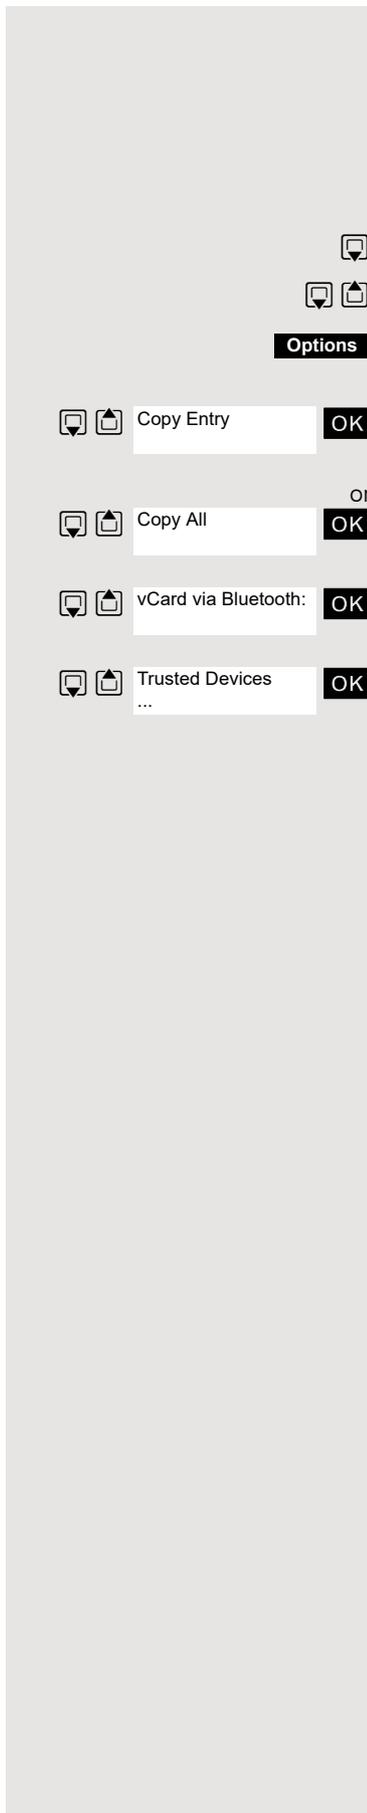

Setting the handset

You can change the standard settings of the handset if you are not happy with them.

Setting the speaker volume

During a call

You can adjust the speaker volume during a call via the earpiece or speakerphone using a menu function. The relevant volumes are adjustable depending on whether you are conducting the call via the earpiece or speakerphone.

You are conducting a call.

Press the control key to open the **Handset Volume** menu.

Adjust the earpiece or speakerphone volume.

Save the settings.

The setting will be saved automatically after approx. 3 seconds.

In idle status

You can change the speaker volume via the menu or using the  key in idle mode.


Changing the volume via the menu:

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.


Select the menu item and confirm.

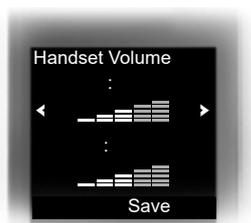

Select the required menu item.

Define the setting.

Press the display key.

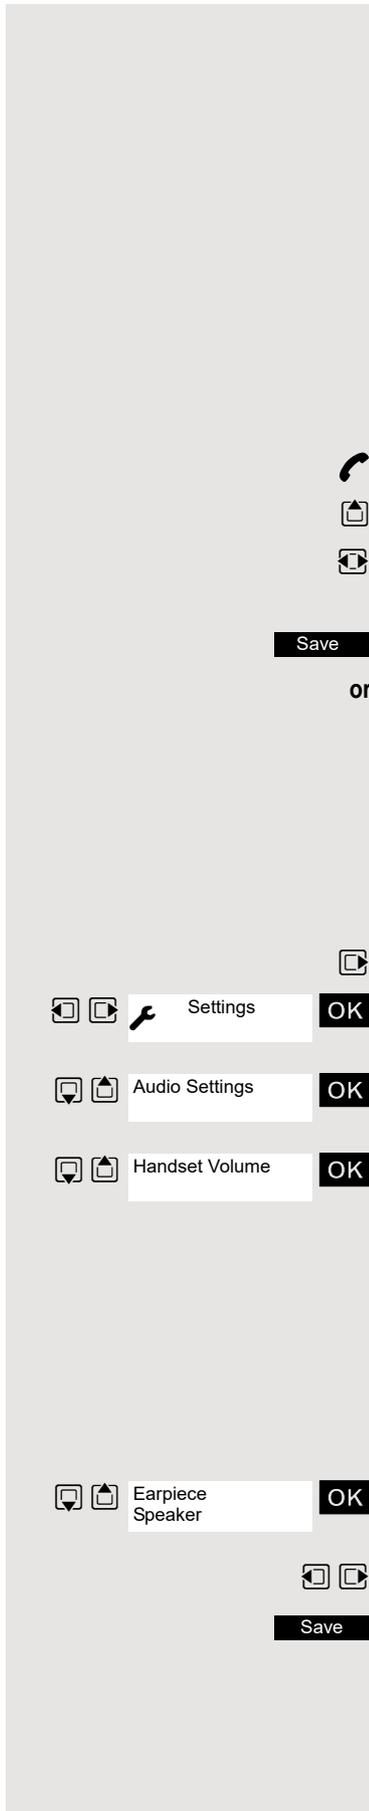


Setting advisory tones

 Can only be set if this menu item is visible. To set, see [Page 99](#).

The advisory tones have the following meaning:

Advisory	Explanation
Key Tones	Every key press is confirmed.
Confirmation	<ul style="list-style-type: none"> Confirmation tone when saving inputs/settings and when placing the handset in the charging shell Error beep (decreasing tone sequence) to signal incorrect inputs End-of-menu beep at the menu end
	The batteries must be charged.

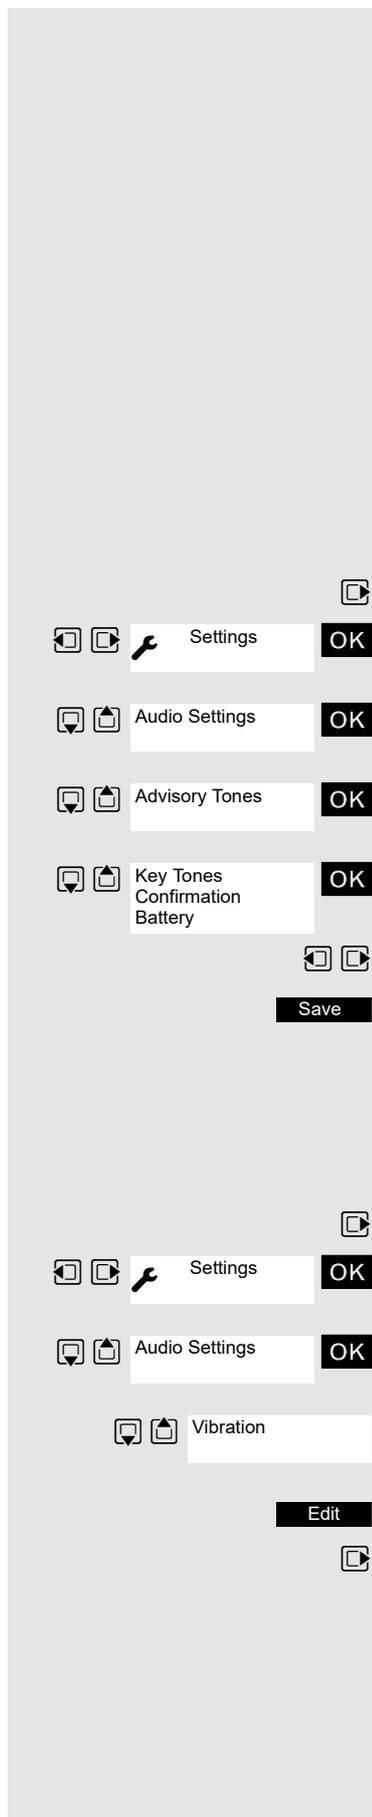

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Select the required menu item.

Activate or deactivate.

Save the settings.

Activating/deactivating the vibration alert

Incoming calls and other messages are indicated by a silent alert.

Open the handset's main menu.


Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item.

Press the display key.

Activate or deactivate.

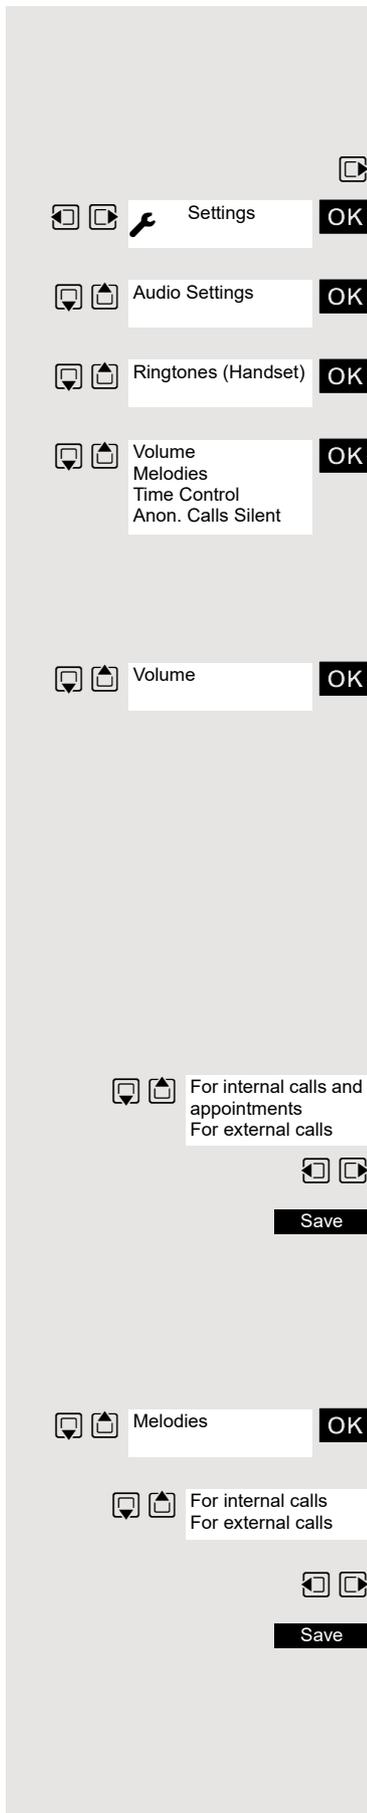

Setting the ringer

Tones and melodies are saved on your handset. If you select the menu items **Volume** and **Melodies**, the ringtone sounds at the current setting.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Select the required menu item and confirm.

 The "Anon. Calls Silent" function is not available on your communications system.

Setting the volume

Select the menu item and confirm.

You can choose between three ringer volumes as well as a crescendo ring (volume increases gradually).



Select the required menu item.

Define the setting.

Press the display key.

Setting melodies

You can set ringing tones differently on your handset for different calls to help you differentiate between calls and appointments:

Select the menu item and confirm.


Select the required menu item.

Define the setting.

Press the display key.

Setting time control for external calls

Specify a time period when you do not want the telephone to ring, for example during the night.

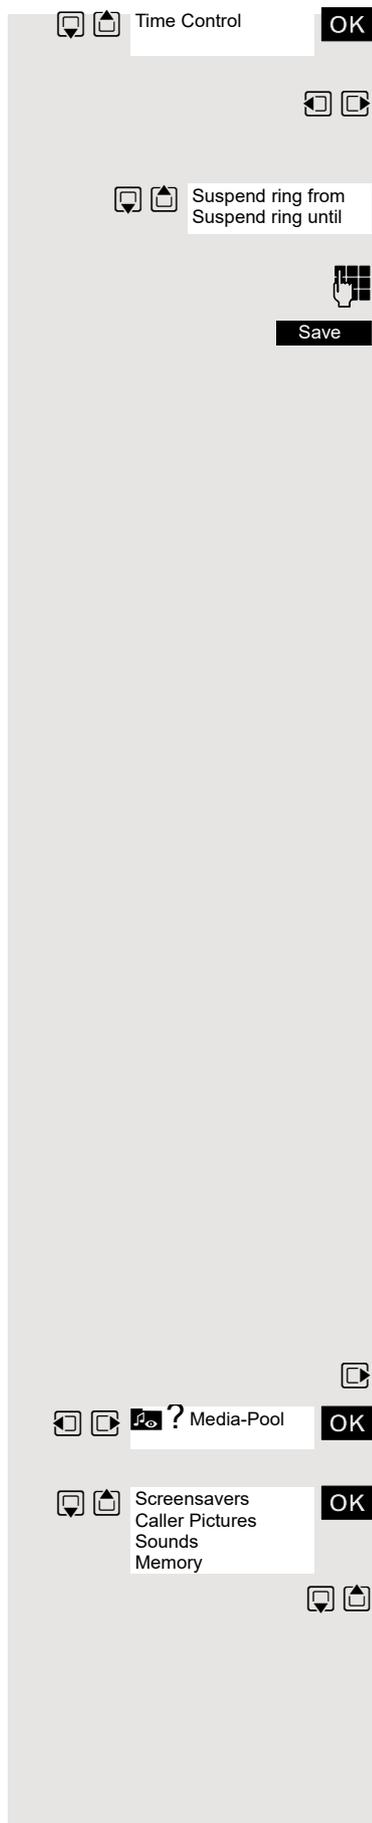

Select the menu item and confirm.

Specify **On** or **Off**.

If active:

Select the required menu item.

Enter the time.

Save the settings.

Setting ringing tones and pictures with resource directory

Your handset's resource directory is used to manage sounds that you can use as ringing tones and pictures that you can use as screensavers. The resource directory can manage the following media types:

Type	Format
Sounds: Ringtones Monophonic Polyphonic Imported sounds	Internal Internal Internal WMA, MP3, WAV
Pictures: Caller picture Screensaver	BMP, JPG, GIF 128 x 86 pixels 128 x 160 pixels

Your handset comes with a number of mono- and polyphonic sounds and pictures pre-installed. You can listen to the available sounds and display the pictures.

You can download pictures and sounds from a PC [Page 82](#). If there is not enough memory available, you must first delete one or more pictures or sounds.


Viewing screensavers and caller pictures / Playing sounds

Open the handset's main menu.

Select the menu icon and confirm.

Select the required menu item and confirm.

Select the entry.

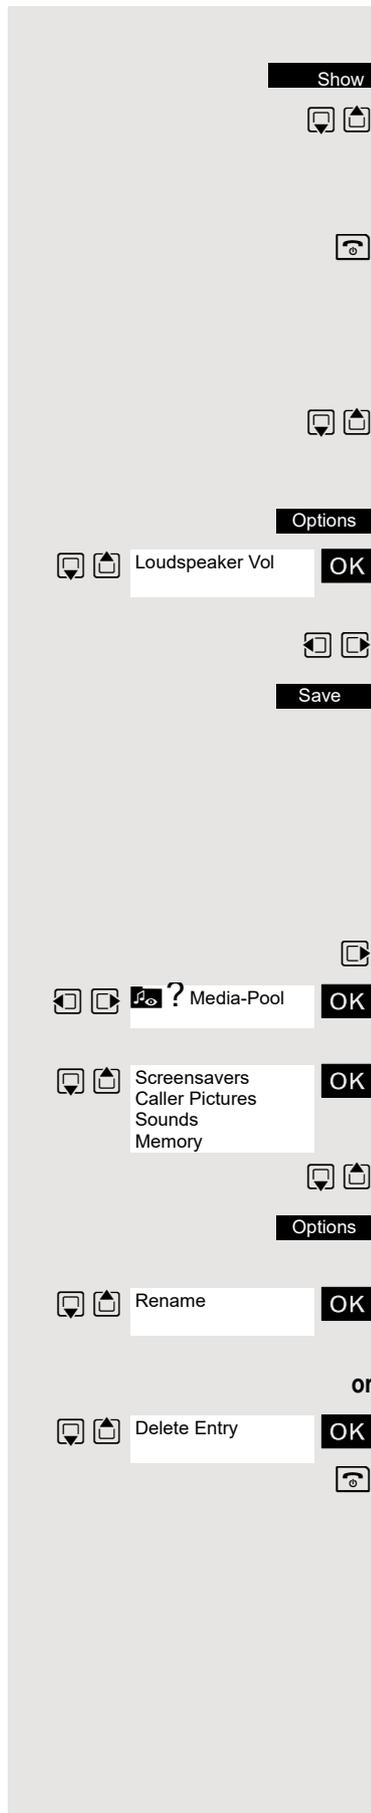

Screensavers/caller pictures

Press the display key.

Toggle between the pictures.

If you have saved a picture in an invalid file format, you will see an error message after selecting the entry.

Press to exit the menu level.

Sounds

The selected sound is played immediately.

Toggle between the sounds.

You can set the volume during playback.

Press the display key.

Select the menu item and confirm.

Adjust the volume.

Save setting.

Renaming and deleting screensavers/caller pictures/sounds

You selected an entry.

Open the handset's main menu.

Select the menu icon and confirm.

Select the required menu item and confirm.

Select the entry.

Press the display key. If a picture/sound is blocked (🔒), the options are not available.

Select the menu item and confirm. The name of the entry can be modified. Length: up to 16 characters. Then confirm your entry.

or

Select the menu item and confirm. The entry is deleted.

Press to exit the menu level.



Checking the available memory

You can show how much memory is left.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Activating or deactivating the ringer

Deactivating the ringer

Hold down the key until a confirmation tone is emitted. The  icon appears on the display.

Activating the ringer

Hold down the key until a confirmation tone is emitted.

Activating or deactivating the alerting tone

You can activate an alerting tone instead of the ringing tone. A short beep sounds for a call instead of the ringing tone.

If the handset is in a call pickup group, a pickup call is also signalled by the alerting tone.

Activating the alerting tone

Hold down the key until a confirmation tone is emitted.

Beep on Press the display key within three seconds.

The alerting tone is activated. The volume of the alerting tone is coupled with the volume of the external ringer.

Deactivating the alerting tone

Hold down the key until a confirmation tone is emitted.

Activating/deactivating automatic call answering

 Can only be set if this menu item is visible. To set, see [Page 99](#).

This function allows you to accept calls by removing the handset from the charging shell.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item.

Press the display key. The activated function is ticked () and can be deactivated by selecting it once more.

Setting the date and time

The date and time setting can be used to ensure that the date and time are assigned correctly to incoming calls and in order to use the alarm.

The handset date and time are automatically set when you set up a call to another station. If your communications system does not support this function, you can set the date and time manually.

Either:

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Or:

If the date and time have not yet been set:

Press the display key.

then:


Enter the date, for example 22.09.2007 = 22092007.

Move the cursor down one line.

Enter the time, for example 19:05 = 1905.

Save the settings.

 If your communications system does not automatically set the date and time, you must check the setting from time to time and if necessary, correct it.

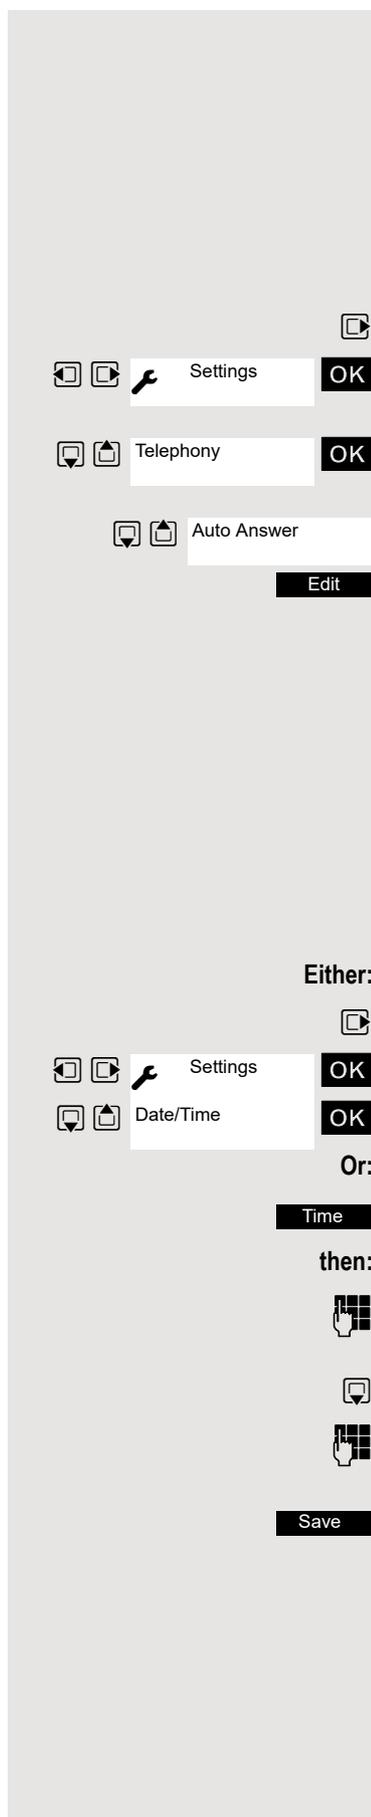

Setting the display

A number of options are available for setting the display. You can set the screensaver (screen picture), the colour scheme, the font size and the display lighting.

Screensaver/slide show

A picture or slide show (all the pictures are displayed one after the other) from the resource directory [Page 91](#) or the time can be displayed as a screensaver when the handset is idle. This will replace the idle status display. The calendar, date, time and name are covered as a result.

The screensaver is not displayed in certain situations, for example during a call or if the handset is signed off.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item.

Press the display key.

Activation:

Activate or deactivate.

Selection:


Move the cursor down one line.

Select the required entry. **Digital Clock** and **Analog Clock** show the current time as a screensaver in large digits on the display.

The selected screensaver is displayed.

Save the settings.



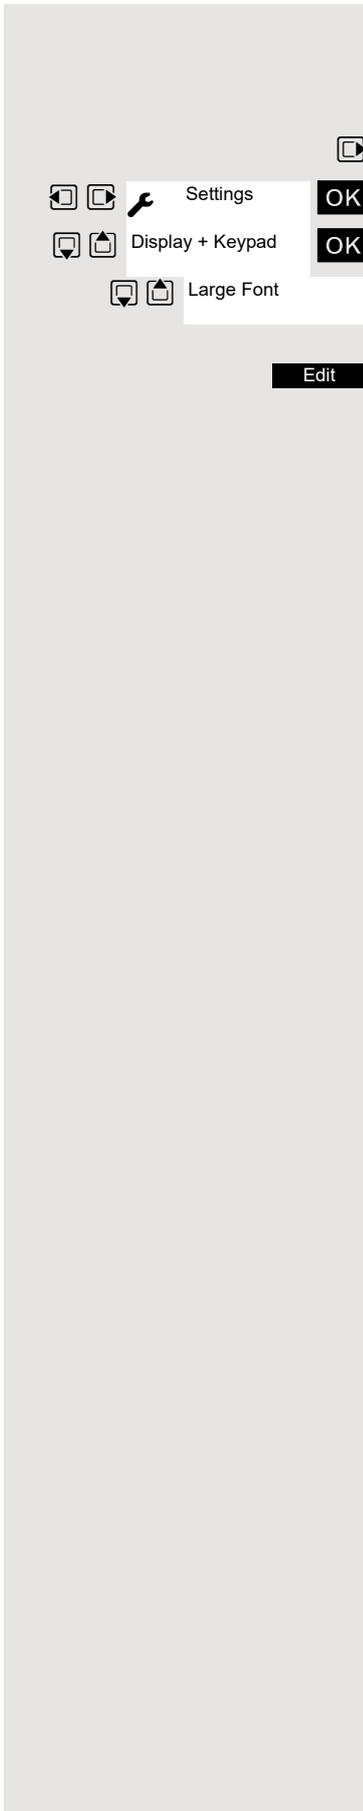

Setting large font

You can increase the font size of print and symbols in call lists and the directory to improve readability.

Open the handset's main menu.


Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item.

Press the display key.

 = on).

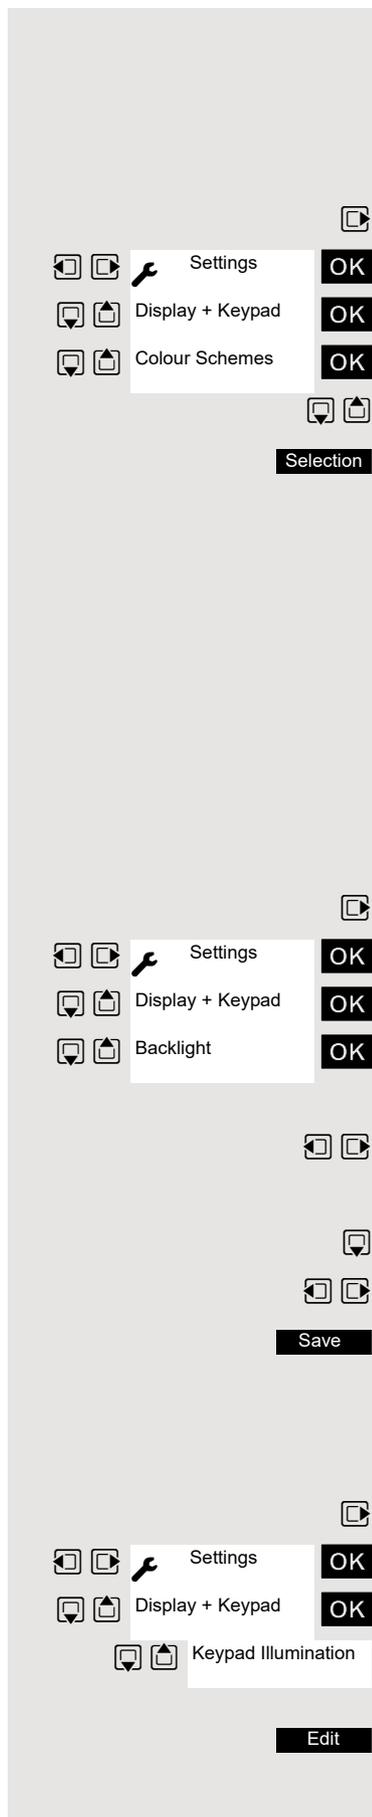

Colour scheme

Five colour schemes are saved on your handset. By selecting a colour scheme you define the colours to be used for the font, menu items and background. If you change to a different colour scheme during a setting, it is immediately previewed to show how it will appear later for all menus.

- Open the handset's main menu.
- Select the menu icon and confirm.
- Select the menu item and confirm.
- Select the menu item and confirm.
- Select the entry.
- Press the display key.

Illumination

Can only be set if this menu item is visible. To set, see [7](#) Page 99.

You can set whether the display should light up when the handset is in or out of the base/charging shell. If it is activated, the display stays dimmed. When the display backlight is disabled, the display lights up again the next time any key is pressed, without any other keystroke action.

This setting impacts the battery life.

- Open the handset's main menu.
- Select the menu icon and confirm.
- Select the menu item and confirm.
- Select the menu item and confirm.

In charger:

Activate or deactivate.

Out of charger:

Move the cursor down one line.

Activate or deactivate.

Save setting.

Setting keypad illumination

You can activate and deactivate keypad illumination.

- Open the handset's main menu.
- Select the menu icon and confirm.
- Select the menu item and confirm.
- Select the menu item.

Press the display key. = on).

Rotating the display automatically

Only OpenStage M3 Plus and OpenStage M3 Ex Plus!

You can activate and deactivate the automatic position-dependent rotation of the information on the display.

When activated, the display is rotated by 180° (upside down) in non movement and call statuses when you move the handset from a vertical to a horizontal position.

This setting is useful if you are wearing the handset on a belt and you would like to see the display in the event of an alarm or call without having to remove the handset from the belt. You can then read the information on the display by simply tilting the handset outwards.


Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item.

Press the display key.

 = on).

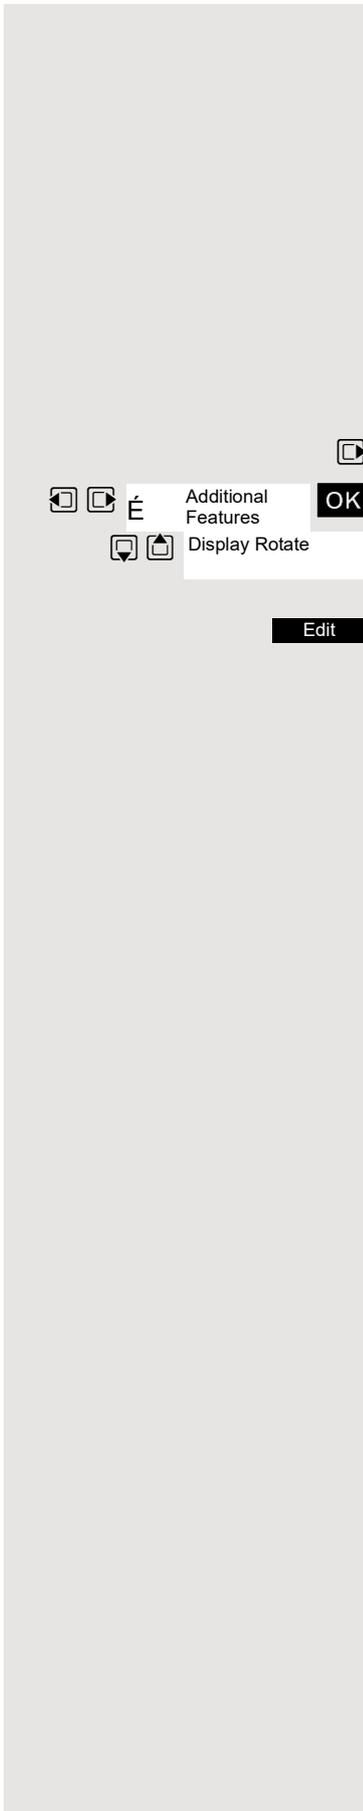

Setting the conversion list for vCard transfer

➔ Can only be set if this menu item is visible. To set, see ⑦ Page 99.

See also **Gigaset QuickSync** ⑦ Page 82,

Phone numbers are usually specified as follows in e-mail programs, such as Microsoft Outlook for example: +49 (30) 11111111. The handset is unable to use this format, however, to dial the phone number. If the phone number above is a local fixed network number, it is converted to 011111111, for instance, when dialled. The conversion pairs are defined in the conversion table and can be modified if they deviate from the default values.

Consult your system administrator about the conversion rules that apply to your handset.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item and confirm. The conversion table is displayed.

Change entry

Press the up/down control key to navigate to another input field; Press the left/right control key to move the cursor within an input field.

Save setting.

Press the On-hook key to end the operation.

Setting the menu view

You can decide whether only a selection of the most important menu items or all menu items are to be shown in the menus.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select and set **Simplified** or **Complete**.

Press the On-hook key to end the operation.



Resetting the defaults

 Can only be set if this menu item is visible. To set, see [Page 99](#).

This function allows you to reset your mobile phone to the defaults, for example, if you want to pass it on to someone else or reset it.

The handset features are handled as follows:

Feature	Action
Sound settings	are reset
Language	set to English
System registration	is retained
Phonebook	is retained
Redial list	is retained
Date/Time	is retained
Entries in the calendar	are retained
Content of resource directory	is retained

Resetting

Open the handset's main menu.


Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item and confirm. A security check question appears.

Confirm the security check question. The handset is returned to the default.

 For information about deleting the phonebook see: [Page 40](#).

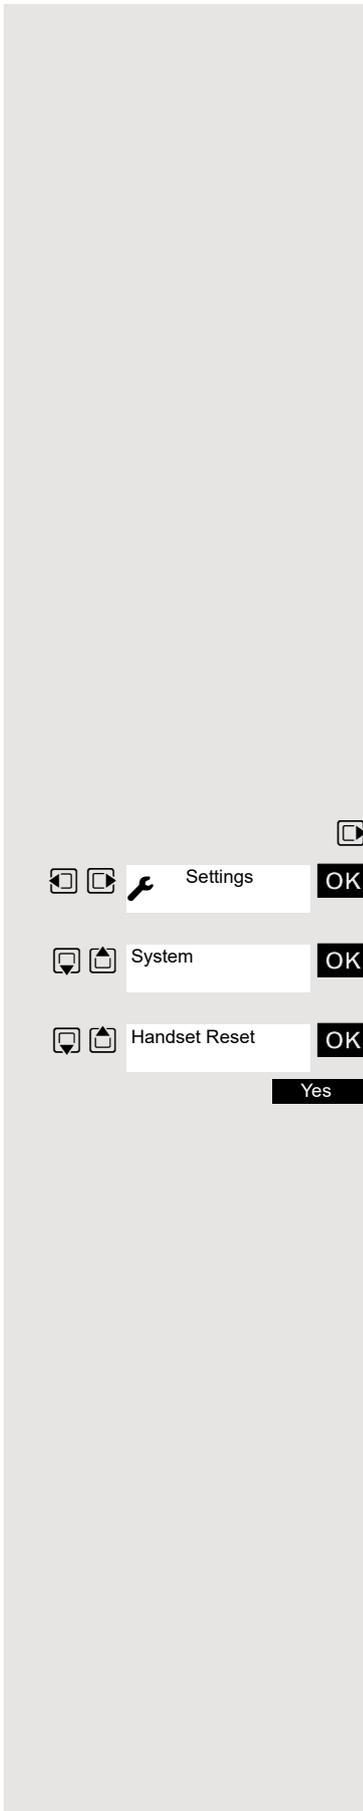

Default settings

Setting	Explanation/notes	Levels	Default state
Tones and signals	Ringer volume	5	5
	Ringer melody, external	20	01
	Ringer melody, internal	20	03
	Alerting tone	-	off
	Earpiece volume	5	3
	Volume in speakerphone mode	5	3
	Timed reminder		
	Melody	20	Sonic
	Volume	5	Cannot be set
	Key tones, audible each time a key is pressed	-	on
	Warning tone, audible approximately five minutes before the battery expires	-	on
Confirmation tone, indicates whether actions were successful or unsuccessful	-	on	
Auto. answer	Call is automatically accepted by removing the handset from the charging shell	-	on
Select base	Select the base	4	retained
Lighting	Display lighting	-	in charging shell: on/out of charging shell: off
Screen picture	Display in idle status	-	None
Character set	Available character set	-	Standard
Language	Select different languages:	26	English
Bluetooth	Bluetooth activation	-	off

Telephone blocking

Handset telephone lock

 Can only be set if this menu item is visible. To set, see [Page 99](#).

You can protect your handset against theft by entering a 4-digit numerical code (PIN) to lock it.

The PIN is preset to "0000" (default). The handset does not prompt for a PIN in this setting. As soon as you have changed the PIN you will need to enter it when you turn on the handset. You can protect your handset from unauthorised access with the telephone lock [Page 103](#).


Enter the value "0000" again to deactivate the PIN.

 If you have forgotten your PIN, please contact Unify Service. It will be reset at your own expense. The handset is returned to the default state (see [Page 100](#)).

Attention:

The registration and phonebook are also lost however in the process! The delivery status is restored.

Entering a new PIN

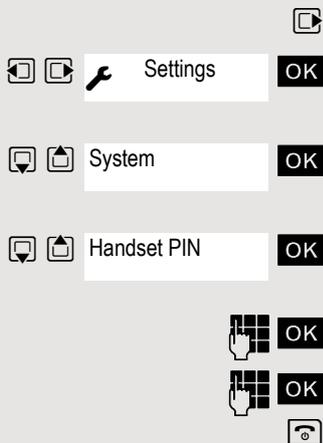

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Enter and confirm the old PIN. If a PIN has not yet been set, then enter "0000".

Enter and confirm the new PIN.

Press the On-hook key to end the operation.

Battery charging when PIN lock active

If the handset deactivates because the battery is flat, it automatically reactivates as soon as you place it in the charging shell. The charging operation starts. If you have already set a PIN, you must enter it so that the handset can receive calls.

Telephone lock code programming

You can protect your handset against unauthorised access (thereby safeguarding personal data) by entering a 5-position code to lock and unlock it. To change a code, first enter the old code and then key in the new code twice.

Press and hold the Talk key or press and hold the Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the old code (5 digits, default "00000").

Enter the new PIN, for example, 11111 (5 digits).

Re-enter the new PIN.

Press the On-hook key to end the operation.

 If you have forgotten your PIN, contact your service engineer for help. He will be able to reset your PIN to "00000". It is also possible to open your handset from a central station, for example, from the attendant terminal.

Locking/unlocking the handset

You can lock your handset to prevent external dialling and programming, thereby preventing unauthorised use in your absence, for example. Prerequisite: You have defined a personal code or use the default code "00000".

Locking the handset

Press and hold the Talk key or press and hold the Speakerphone key.


Open the system menu.


Select the menu item and confirm.

Enter the PIN code (5 digits, default "00000").

Press the On-hook key to end the operation.

 Even though it is locked, you can still use your handset to answer external calls and make internal calls. When an external connection is established, the following message appears on the display "Telephone Lock Active". Your handset can also be locked from a central station  Page 103.

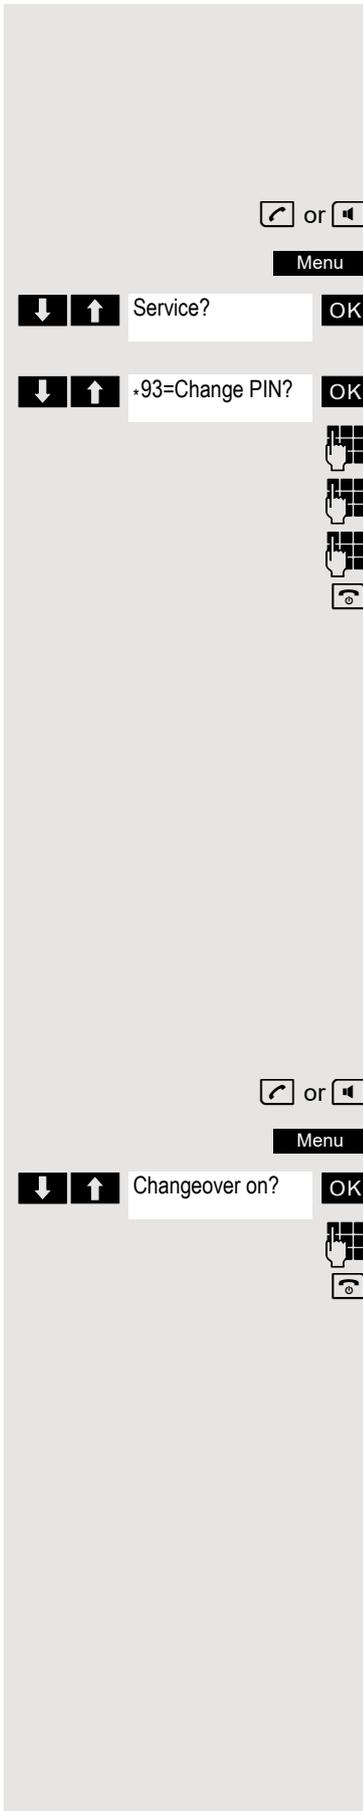

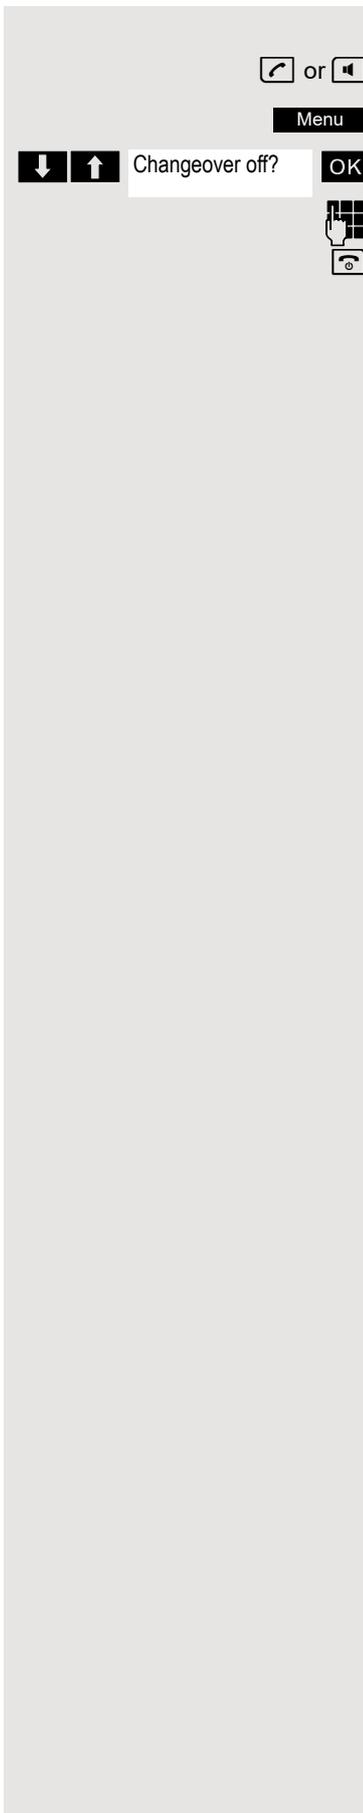

Unlocking the handset

Press and hold the Talk key or press and hold the Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Enter the PIN code (5 digits, default "00000").

Press the On-hook key to end the operation.

Central telephone lock / Locking/unlocking other handsets

If you have the appropriate authorisation, you can lock and unlock other handsets to prevent unauthorised use.

If the user has locked his handset and has forgotten the individual password he has set, you can unlock the phone again using this function.

Press and hold the Talk key or press and hold the Speakerphone key.

Open the system menu.


Select the menu item and confirm.

Select the menu item and confirm.

Enter a user's phone number.

Lock the handset. The following appears on the display: "Telephone locked".

Unlock the handset. The following appears on the display: "Telephone unlocked".

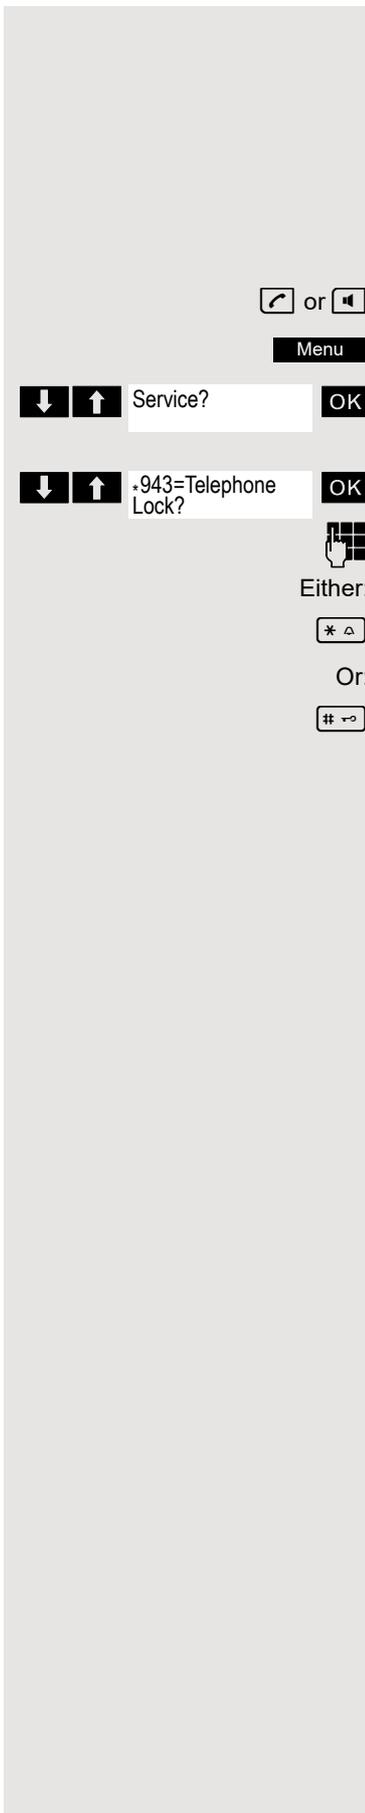

System functions

The system functions can be called up via the menu or directly by entering codes.

Calling functions via the menu

Press and hold the Talk key or press and hold the Speakerphone key.

Open the system menu.

Select and confirm the function.

Select the menu item and confirm.

Select and confirm the function.

Select the menu item and confirm.

Select the menu item and confirm.

Select and confirm the function.

Press to end the operation.


Calling functions via codes

Press and hold down the Talk key or press and hold the Speakerphone key.

Enter code according to table ⑦ Page 107.

Enter code according to table ⑦ Page 107.

Press the On-hook key to end the operation.

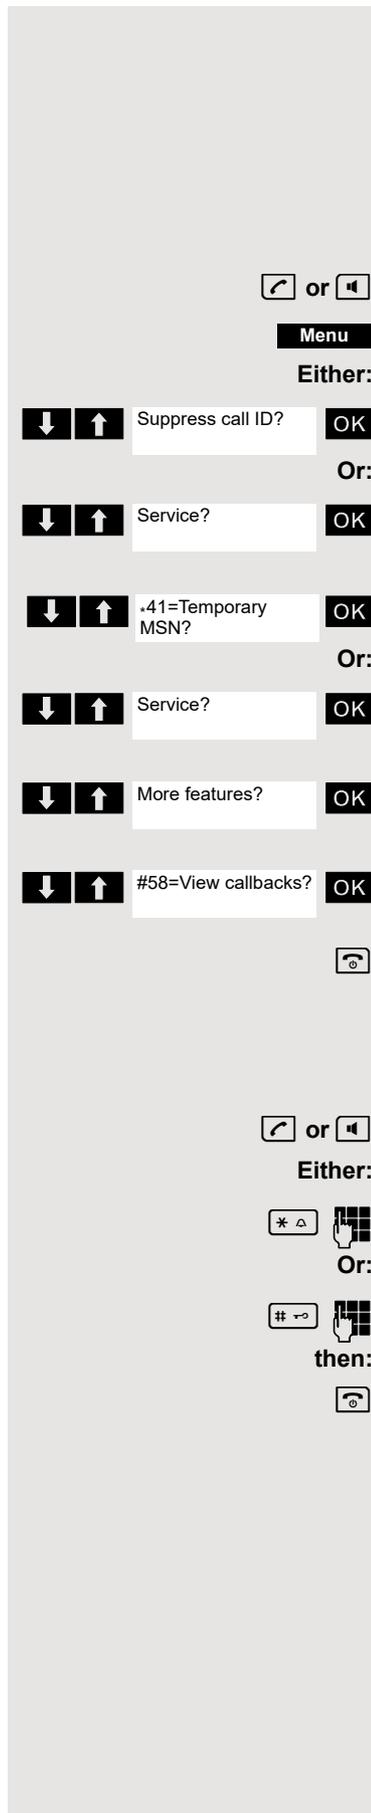

Functions and codes

Your service personnel may have assigned different codes to the following functions or some functions may not be available in your configuration.

Functions	Codes
Automatic call wait.term.on	* Δ 490
Automatic call wait.trm.off	# ↵ 490
Call waiting tone off	* Δ 87
Call waiting tone on	# ↵ 87
Accept call waiting	* Δ 55
Caller list	
- Call	# ↵ 82
- Saving a number	* Δ 82
Advisory msg. on	* Δ 69
Advisory msg. off	# ↵ 69
Do not disturb on	* Δ 97
DND off	# ↵ 97
UCD:	
- Log on	* Δ 401
- Log off	# ↵ 401
- Work on	* Δ 403
- Work off	# ↵ 403
- Available	* Δ 402
- Not available	# ↵ 402
- UCD night on	* Δ 404
- UCD night off	# ↵ 404
- Calls in queue	* Δ 405
Override (authorised telephone only)	* Δ 62
FWD for MULAP on	* Δ 501
FWD for MULAP off	# ↵ 501
Speaker call	* Δ 80
Trace call	* Δ 84
Temporary phone	* Δ 508
Messages	
- Sending	* Δ 68
- View sent message	# ↵ 68
Conference:	
- on	* Δ 3
- off	# ↵ 3
Call charge display	* Δ 65
Use speed dialling	* Δ 7
Change speed dial	* Δ 92
Toggling	* Δ 2
DTMF dialling	* Δ 53
Night answer on	* Δ 44
Night answer off	# ↵ 44
Park:	
- Park call	* Δ 56
- Retrieve call	# ↵ 56
Account code	* Δ 60

Functions	Codes
Callback	* Δ 58
View callbacks	# ↵ 58
Suppress phone number	* Δ 86
Restore phone number	# ↵ 86
Temporary phone number (MSN)	* Δ 41
Ringing group on	* Δ 81
Ringing group off	# ↵ 81
Hunt group/join hunt group	* Δ 85
Hunt group/leave hunt group	# ↵ 85
Control Relay On	* Δ 90
Control Relay Off	# ↵ 90
Change PIN	* Δ 93
Trunk flash)	* Δ 51
Language selection	* Δ 48
Locking the phone	* Δ 66
Unlocking the phone	# ↵ 66
Directory (system, LDAP)	* Δ 54
Tel. data service	* Δ 42
Timed reminder on	* Δ 46
Timed reminder off	# ↵ 46
Door opener on	* Δ 89
Door opener off	# ↵ 89
Door opener	* Δ 61
Pickup group	* Δ 57
Pickup, directed	* Δ 59
Forwarding on	* Δ 1
Forwarding off	# ↵ 1
Trunk FWD on	* Δ 64
Trunk FWD off	# ↵ 64
Forwarding after timeout off	# ↵ 495
Forwarding after timeout on	* Δ 495
Central telephone lock	* Δ 943
Return to held call	* Δ 0

Personal alarm functionality

The OpenStage M3 Plus and OpenStage M3 Ex Plus handsets are equipped with a sensor that allows them to be operated as a PNG-S.

These handsets are referred to below as personal alarm devices with voice communication capability, or by the abbreviation PNG-S.

Alarm statuses

Integrated sensors detect alarm statuses such as:

- Non movement
- Position detection (deviation from the upright position, e.g. the person has fallen)
- Intense motion (escape)
- Cyclical response monitoring (timed)
- Loss of PNG-S (via pull-away contact with cord)

Terms

Operating modes

The OpenStage M3 Plus and OpenStage M3 Ex Plus handsets can be used as personal alarm devices with voice communication capability (PNG-S) in Alarm Mode and PNG Mode. Various settings are performed on the handset for this purpose, which enable automatic or manual alerting.

The configuration may only be performed by appropriately trained service personnel for professional use (e.g. in accordance with BGR 139).

A service PIN is used to protect mode activation from unwanted changes by third parties.

The configuration of the operating modes is described in a separate service manual.

Alarm sensors

The alarm sensors detect operating states from which alarm situations can develop. The handset can detect and signal automatic alarms. These include non movement, man down, time, escape and pull cord alarms.

In addition to automatic alarms, there are also manual alarms, which are triggered by means of an alarm key.

Alarm key

The alarm key initiates a manual alarm. The alarm destination (default: phone number 112) can be configured. The alarm key also works even if monitoring mode is not activated.

When the alarm key is pressed, the current function is first interrupted or ended and the configured alarm function is then executed.

The alarm key and the keys for resetting the prealarms can be operated if a key lock is activated.



Attention:

If the alarm key is pressed while one of the following functions is active, the alarming signal can be executed with a delay:

- Phonebook/Record Pattern
- Phonebook/Copy Entry
- Phonebook/Delete All
- Phonebook/Copy All
- "Data Transfer" menu
- "Alarm Clock" menu
- "Media-Pool" menu
- Settings/ Date/Time
- Settings/Handset/Area Codes
- Data exchange via MPM Manager

Example: If the entire handset phonebook is deleted, this can mean that the alarming signal is delayed by approx. 2 minutes! This operating mode is not compliant with BGR 139.

Prealarms

The handset signals a prealarm in monitoring mode if an alarm is pending. The pending alarm can be prevented by resetting the reason for the alarm or pressing a prealarm reset button (any display key or "+/-" key).

Technical warning

The handset monitors operating states while in monitoring mode (e.g. battery charging, DECT ready to receive). If faults are detected, the user receives a warning.

Prealarm/technical warning signal

Prealarms and technical warnings can be signalled acoustically via the loudspeaker (signal, volume configurable) or silently via the vibration alarm.

Alarming signal

If an alarming signal is triggered, the handset automatically generates alarm calls to the configured alarm destination. The alerted party recognises the alerting party from the caller's phone number for example.

The alarm subscriber's phone number has to be transmitted for this purpose. The communications system used must support the caller ID function.

In order to ensure if at all possible that an alarm call reaches the configured alarm destination, the alarm calls are repeated cyclically. The duration and number of alarm calls can be predefined.

 **Note:**

In the case of alarm calls, call charges may be incurred for each alarm call.

The call duration and ringing interval are identical. The call duration and ringing interval are incremented by one second after each alarm call.

Communication with the alarm destination is only possible for the duration of the connection because of the automatic alarm call retry.

An alarm callback by the alarm server is possible for example if an alarm server is being used. This server ends the alarm retries and establishes a voice connection to the alerting PNG. The alarm callback is answered automatically by the PNG. Handsfree mode and handset mode are possible here.

 **Attention!**

Please note the legal requirements with respect to using this functionality. (Potential listening in option in the alarm status of the PNG).

Alarm signal

An alarm signal/positioning tone can be issued by the handset in order to locate the alerting party. Depending on the alarm type, it can be established whether or not a positioning tone is to be issued in the event of an alarm.

The manual alarm can also be triggered with/without a positioning tone depending on the situation:

- Longpress – no positioning tone
- Shortpress – positioning tone

Communication with the alarm destination is only possible when the alarm signal/positioning tone is active if the alarm signal/positioning tone is disabled manually with the "+" or "-" key. Manual suppression of the alarm signal can be configured. The alarm signal suppression is only effective for the duration of the connection.

Monitoring LED

The monitoring LED visually indicates the following PNG operating states:

Monitoring Off:	continuously off
Monitoring On:	flashing, 50 ms on/1000 ms off
Prealarm Active:	flashing, 500 ms on/500 ms off
Alarm:	continuously on
Technical Warning:	continuously on
Automatic Alarm Off:	flashing, 500 ms on/2000 ms off

Language support in Additional Features menu

The Additional Features menu is only available in German and English.

If you choose a language other than German when setting the language, the display output in the Additional Features menu will be in English.

Alarm types (overview)

Alarm Type	Explanation
Manual personal alarm	Triggered by pressing the red alarm key on the handset.
Automatic personal alarm	<p>Triggered independently by the handset after a specific time if a defined event occurs and the prealarm (see below) was not confirmed by the person in question:</p> <ul style="list-style-type: none"> • Person no longer moving (Non Movement) • Person falls (Man Down Alarm) • Person does not respond to the prealarm which is signalled if there is no input on the handset for a configurable period (Time Alarm) • Person loses the handset (Pull Cord Alarm; with pull cord) • Person is moving frantically (Escape Alarm) <p>The particular alarms that are activated on your handset depend on your handset's PNG configuration. Response times, prealarm times and acoustic alarm signals can likewise be set on the handset. The settings must be performed before the handset is commissioned initially.</p>
Technical warning	If a technical fault occurs on the handset, for example low battery charge, you will hear an error tone.
Prealarm	The prealarm sounds before an automatic personal alarm. If the prealarm is confirmed within a certain time by the user, the automatic personal alarm is not triggered.

Activating monitoring



Note:

The alarm functionality must be configured prior to initial use.

Press the centre key three times.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm. The procedure for activating the alarm functionality is started.

The handset immediately activates monitoring mode.

Shown on the display when the handset is in monitoring mode.

The monitoring LED on the handset flashes!

(flashing rhythm: 50 ms on/1000 ms off)

This menu option is now activated.



Note:

In monitoring mode: Do not remove the battery pack to ensure that monitoring is not interrupted.

Unavailable functions

The following functions are not available in monitoring mode because they would delay the alarming signal:

- Phonebook/Record Pattern
- Phonebook/Copy Entry
- Phonebook/Delete All
- Phonebook/Copy All

- "Data Transfer" menu
- "Alarm Clock" menu
- "Resource Directory" menu

- Settings/ Date/Time
- Settings/Handset/Area Codes

- Data exchange via MPM Manager

Prealarm


The prealarm signals a pending alarm. If you do not confirm this prealarm, the handset sends emergency alarm signals to the configured location.



Note:

If a prealarm is signalled during a call, you have to first confirm the prealarm in order to prevent the pending alarm. You can then continue the call.

A prealarm is indicated with Prealarm and the relevant alarm type on the display. The handset signals the prealarm by means of the configured warning tone.

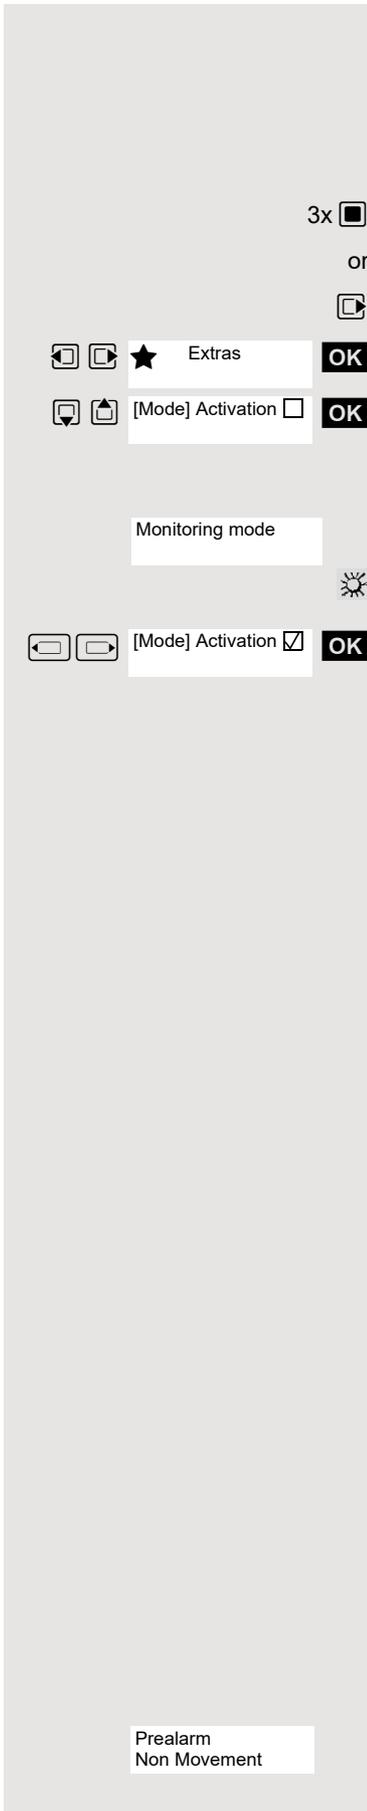

Either:

OK

Press any display key

Immediately press any display key or the volume key (+/-) in order to confirm the prealarm. The prealarm is reset and the pending alarm is prevented. This avoids a false alarm being issued.

Or:

Confirm triggering event

The prealarm can also be confirmed by resolving the triggering event, i.e.:

- Move handset (Non Movement)
- Move handset less (Escape Alarm)
- Position handset upright (Man Down Alarm)
- Reinsert inadvertently removed pull cord contact (cord)
- Confirm Time Alarm by pressing any key



Attention:

The prealarm only persists for a short time. This duration can be exceeded and therefore a false alarm induced. It is more reliable to confirm the prealarm using a display key.

Technical warning on the handset

The handset can be configured so as to allow the following operating functions to be monitored:

- Synchronicity with DECT base station
- Charge status of battery pack

If a technical fault is detected, the handset issues a warning signal, which can be reset like a prealarm. The reason for the fault is shown on the display.

If the fault persists, the warning signal is repeated after a configurable time.



Danger:

An alarming signal is no longer guaranteed. Exit the danger zone and resolve the cause of the fault!

Sending an emergency alarm signal/calling for assistance

In monitoring mode

The handset is in monitoring mode.

Automatic alarming signal

The alarm sensors in the handset recognise operating statuses that trigger an alarming signal.

Certain alarm types initially generate a prealarm (configurable). If you do not acknowledge this alarm, the handset sends emergency alarm signals to the configured alarm destination.

Manual alerting

Press the red alarm key on the handset. The handset sends emergency alarm signals to the configured alarm destination.

An existing call is automatically terminated. The handset repeatedly sends emergency alarm signals (maximum number of retries is configurable).

The necessary assistance measures are initiated by the location that received the emergency call following the alarming signal.



PNG Off

In alarm status

The handset has sent an emergency alarm signal and is consequently in alarm status.

In alarm status: Reset the alarm functionality

The handset is in alarm status.

Press the display key. The handset disables the alarm status/alarming signal and monitoring.

"PNG Off" is displayed again after every alarm call.

"PNG Off" is only displayed after five alarm calls. If "PNG Off" is not pressed, the handset repeats the alarm calls according to the configuration. The call duration and ringing interval are each extended by one second.


Remark:

If you do not want the alarm to be disabled on the handset, a configuration with an alarm server must be used.

Attention:

Pressing the "PNG Off" display key or pressing and holding (longpress) the On-hook key either cancels an alarm prematurely or ends it after it has already been triggered.

The monitoring LED on the handset is now extinguished!

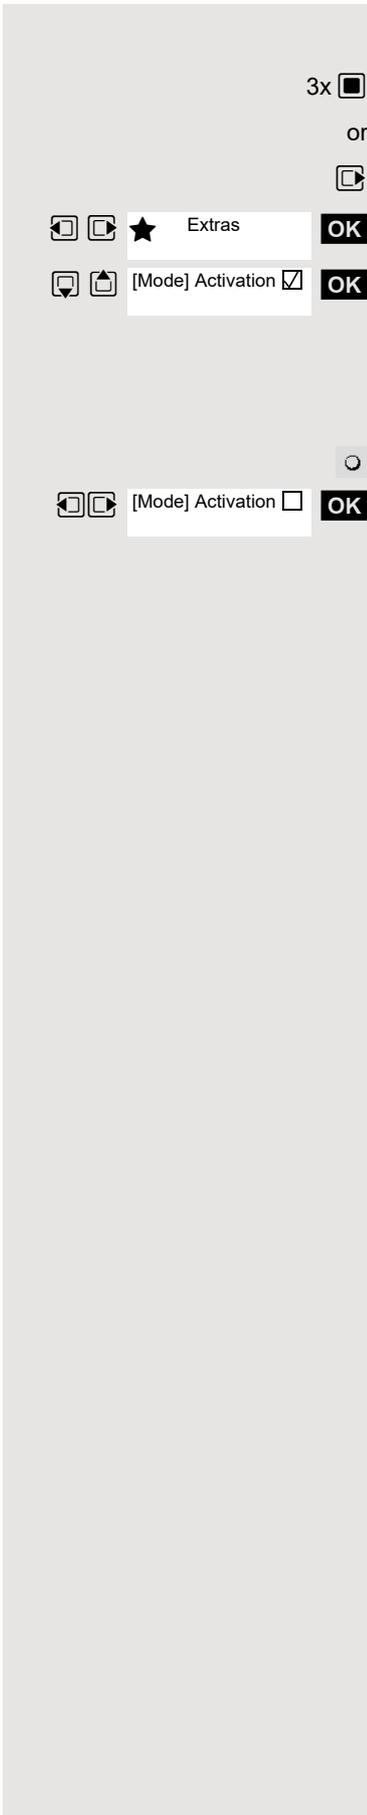

Deactivating monitoring

Press the centre key three times.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm. The procedure for disabling the alarm functionality is started.

The handset disables the alarm functionality automatically.

The handset is now no longer in monitoring mode.

The monitoring LED on the handset is now extinguished!

This menu option is now no longer activated.

The check box is not marked if the function is disabled. By selecting the function again you can activate it again (⌚ Page 113).

Function test when activating Alarm Mode and PNG Mode

A function test has to be performed before the Alarm Mode or PNG Mode is used. This test is performed automatically by the handset.

Please follow the instructions on the display.

1. Test: Charge status of battery pack

If the battery pack is adequately charged, no reference is made to the battery test.

If the battery charge is too low, the message "Battery low!" appears, the entire function test is cancelled and "Test Failed!" is displayed. Make sure the battery pack is adequately charged and start the startup procedure again!

2. Test: Alarm sensors (movement test)

Move the handset vigorously for a few seconds. An acknowledgement tone signals that the test has ended.

Shown on display if the test was successful. If not, the entire function test is cancelled and "Test Failed!" is displayed. Start the startup procedure again.

3. Test: Alarm sensors (non movement and man down test)

Hold the handset still for a few seconds or put it down. An acknowledgement tone signals that the test has ended.

Shown on display if the test was successful. If not, the entire function test is cancelled and "Test Failed!" is displayed. Start the startup procedure again.

4. Test: Alarm key

Press the red alarm key. An acknowledgement tone signals that the test has ended.

Shown on display if the test was successful. If not, the entire function test is cancelled and "Test Failed!" is displayed. Start the startup procedure again.

5. Test: Pull Cord Alarm

This test is only performed if the Pull Cord Alarm is activated on the handset.

Remove the cord and re-insert it. An acknowledgement tone sounds both when the cord is removed and when it is replaced.

Shown on display if the test was successful. If not, the entire function test is cancelled and "Test Failed!" is displayed. Start the startup procedure again.

Note:

If the function test fails repeatedly, shut down the handset immediately and send it to the manufacturer.

When the function test has ended, the handset automatically calls the alarm server and passes on the test result.

Look out for display and voice output from the alarm server.

Function Test
Shake Sensor

Please shake
handset

Test Passed!

Function Test
Position Sensor

Please hold handset
in vertical position

Test Passed!

Function Test
Emergency Key

Please press
emergency key

Test Passed!

Function Test
Pull Cord Alarm

Please detach and
attach cord to handset

Test Passed!

Appendix

Troubleshooting

Some malfunctions can be resolved without outside intervention. The following table provides a list of such malfunctions. All other malfunctions should be reported to the relevant service personnel.

Error	Possible cause	Remedy
No display.	The handset is not switched on. Batteries are empty.	Press the On-hook key until confirmation is received. Charge or replace the batteries.
You cannot dial an external number.	The handset is locked.	Unlock the handset.
No reaction to keystroke.	Keypad lock activated. The key is stuck.	Press the hash key until confirmation is received. Release the key.
De-crescendo tone sequence during input.	An incorrect entry was made.	Repeat key sequence while watching the display; where applicable, consult the operating instructions.
The line "Base n" flashes (n= 1 - 4).	The handset is outside the base radio range; radio signals too weak. Handset not registered. Intervals between synchronisation attempts are too long.	Come closer to the base radio range, change your position. Register the handset. Switch off the handset and switch it back on again.
No ringer on the handset.	The ringtone is deactivated. "Do Not Disturb" is activated.	Activate ringer. Deactivate "Do Not Disturb".
The following, for example, appears: Base 1 Outgoing and incoming calls and activation/deactivation are not possible.	Handset is blocked.	Remove the batteries from the handset and then re-insert them. Proceed as when loading batteries for first time ☺ Page 12.
The following appears: incomplete	Maximum input time was exceeded. The On-hook key was not pressed.	Avoid long pauses between keystrokes. Press the On-hook key.
The following appears: incomplete	The communication system is overloaded.	Wait and try again later.
The following appears: Currently not available	Function is currently not available. No connection available for the phone number dialled.	Wait and try again later. Enter the phone number correctly or call the attendant console.

Error	Possible cause	Remedy
The following appears: Not possible or: Incorrect entry. or: Key not programmed.	Speed-dial number not available, appointment entered incorrectly, entry blocked or not allowed, prerequisite not fulfilled (for example if there is no second partner for toggling), number dialled was incomplete.	Correct your input, select a permitted option, enter the phone number in full.
The following appears: no access	Blocked function was called.	Apply to the relevant service personnel for the COS for the blocked function.
The following appears: PIN incorrect	Incorrect PIN was entered.	Enter the correct PIN.
The following appears: not available	Phone number was not fully entered, the star or hash key was not pressed.	Enter the phone number correctly or as prescribed.
The following appears: protected	Data transfer is active.	Wait and try again later.

Cleaning the handset

Removing everyday dirt

To clean the handset and the charging shell, simply wipe them with a damp or anti-static cloth. Never use a dry cloth. Do not use abrasive cleaning agents.

After contact with liquids

1. Deactivate the handset immediately. Do NOT activate it!
2. Remove the batteries immediately. Leave the battery compartment open.
3. Allow the liquid to drain off:
 - Hold the handset in a horizontal position with the open battery compartment facing down.
 - Hold the handset in a vertical position with the open battery compartment facing down. Shake the handset gently, slightly tilting it back and forth.
 - Dab all components dry and then leave the handset in a warm spot (other than a microwave, oven, etc...) for at least 72 hours with open battery compartment and keypad facing down.

When it has fully dried out, you will usually be able to use it again.

Storage

To avoid damage, the handset should not be stored with sharp objects, such as knives or tools, etc. We recommend using a protective pouch  Page 122.

General specifications

Handset

Maximum sound pressure level according to TBR10, Annex D	less than 118 dB (A)
Weight incl. battery	approx. 100 g
Dimensions (W x H x D)	approx. 48 x 127 x 19 mm

DECT

DECT standard	Supported
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1880-1,900 MHz
Duplex method	Time multiplex, 10 ms frame length
Pulse repetition rate	100 Hz
Pulse transmission length	370 μ s
Channel grid	1,728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW, average power per channel 250 mW pulse power
Range	Up to 300 m outdoors, up to 50 m indoors
Environmental conditions in operation	+5 °C to +45 °C, 20 % to 75 % relative humidity

Bluetooth

Radio frequency range	2402-2,480 MHz
Transmission power	4 mW pulse power

Battery

Technology	Lithium ion (Li-Ion)
Voltage	3.7 V
Capacity	750 mAh
Type for OpenStage M3 and OpenStage M3 Plus	V30145-K1310-X363
Type for OpenStage M3 Ex and OpenStage M3 Ex Plus	V30145-K1310-X453

The handset is supplied with the recommended battery. Only an original battery may be used. Replacement batteries can be ordered if necessary from Unify Service.

Handset operating times/charging times

The operating time of your handset depends on the capacity and age of the battery and the way it is used. (All times are maximum possible times).

Stand-by mode (hours) ^a	200/160
Talktime (hours)	17
Charging time in charger (hours)	4

a without/with display backlight

Charging shells

European Union	S30852-H2486-R101
United Kingdom	S30852-H2486-L101
US (110V)	S30852-H2486-U101
Australia	S30852-H2486-C401

Accessories

Use only original accessories. This will avoid possible health risks and personal injury and also ensure that all the relevant regulations are complied with.

Source

For information on accessories (such as headsets, protective pouches), contact Unify at the following address:

http://wiki.unify.com/wiki/DECT_Handset_accessory

Directives and standards

The handset and accessories listed conform to the following EU directives and standards:

EU directives



Unify Software and Solutions GmbH & Co. KG hereby declares that the types of radio equipment OpenStage M3 Ex and OpenScape M3 Ex Plus comply with EU Directives 2014/53/EU, 2014/34/EU, and 2011/65/EU.

The full text of the EU Declaration of Conformity is available in the Declarations of Conformity section at the following website: <http://wiki.unify.com>.

Ex protection standards



- EN IEC 60079-0: Equipment – General requirements
- EN 60079-11: Device protection through intrinsic safety "i"
- EN 60079-31: Equipment dust ignition protection by enclosure "t"

Protection rating

IP 65 (6 = dust-proof, 5 = protected from splashes and low-pressure jets of water) in accordance with IEC 60529

EMC/Safety Standards

- Safety: EN 62368-1 / IEC 62368-1
- EMF/SAR: 99/519/EC (EU Council Recommendation), EN 50360; ICNIRP
- Acoustic Shock: ETSI EG 202 518, max. level 24 dBPa
- EMC: ETSI EN 301 489-1/6/17
- Radio:
 - ETSI EN 301 406
 - ETSI EN 300 328 (because of Bluetooth)
 - Radio-Coexistence-Test (because of Bluetooth)

Additional requirements

- ETSI ES 202 737 / ETSI ES 202 738
- TBR 22

Additional requirements for industrial environments:

- IEC 61000-6-2 Electromagnetic compatibility (EMC) Part 6-4: Generic standards – Emission standard for industrial environments

Writing and editing text

- Each key between 0 und 9 is assigned several letters and characters.
- Control the cursor with u v t s. Press and **hold** u or v to move the cursor **word by word**.
- Characters are inserted at the cursor position.
- Press the star key * to display the table of special characters. Select the required character and press the display key **Insert** to insert the character at the cursor position.
- Press and **hold** 0 to 9 to enter digits.
- Press display key **Ñ** to delete the **character** to the left of the cursor. Press and **hold** to delete the **word** to the left of the cursor.
- The first letter of the name of address book entries is automatically capitalised, followed by lower case letters.

Setting upper/lower case or digits

Repeatedly press the hash key # to change the text input mode.

123	Writing digits
Abc	Upper case ^a
abc	Lower case

^a First letter in capitals, all others in lower case

The active mode is indicated at the bottom right of the screen.

Writing names

- Enter the individual letters/characters by pressing the corresponding key.
The characters assigned to the key are shown in a selection line at the bottom left of the screen.
The selected character is highlighted.
- **Briefly** press the key several times in succession to select the required letter/character.

Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1	1									
2	a	b	c	2	ä	á	à	â	ã	ç
3	d	e	f	3	ë	é	è	ê		
4	g	h	i	4	ï	í	ì	î		
5	j	k	l	5						
6	m	n	o	6	ö	ñ	ó	ò	ô	õ
7	p	q	r	s	7	ß				
8	t	u	v	8	ü	ú	ù	û		
9	w	x	y	z	9	ÿ	ý	æ	ø	å
0	␣ ^a	.	,	?	!	← ^b	0			

a Space

b Line feed

Accessing additional functions via the PC interface

To enable your handset to communicate with the PC, the **Gigaset QuickSync** program must be installed on your PC (free to download a http://wiki.unify.com/wiki/DECT_Handset_accessory)

Transferring data

After installing **Gigaset QuickSync**, connect the handset to your computer ⑦ Page 13 using Bluetooth ⑦ Page 83 or USB data cable.

Start the **Gigaset QuickSync** program. You can now synchronise your handset directory with Outlook; download caller pictures (.bmp) and images (.bmp) as a screensaver and sounds (ringtones) from the computer to the handset (and vice versa) (see also ⑦ Page 82).

Declaration of conformity

Your handset is supplied for use within a specific country, which is displayed on the underside of the device. Country-specific requirements have been taken into consideration.

The device complies with the basic requirements of the R&TTE Directive and therefore displays the CE symbol.



EU Declaration of Conformity

Unify Software and Solutions GmbH & Co. KG

Otto-Hahn-Ring 6, 81739 Munich, Germany

declare that the declaration of conformity is issued under sole responsibility as manufacturer and belongs to the following product(s):

Product Identification	Applied Standards (refer to Table 1)
OpenStage M3 Ex (S30852-S2471-R121-x)	S1, S8, E5, E6, E8, E9, R1, R3, A1, A2, A3, H1
OpenStage M3 Ex Plus (S30852-S2471-R141-x)	S1, S8, E5, E6, E8, E9, R1, R3, A1, A2, A3, H1

The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:

- 2014/53/EU** Radio Equipment Directive (RED)
(Official Journal of the EU L153, 22.05.2014, p. 62-106)
- 2014/34/EU** Equipment for explosive atmospheres Directive (ATEX)
(Official Journal of the EU L96, 29.03.2014, p. 309-356)
- 2011/65/EU** Restriction of the use of certain Hazardous Substances Directive (RoHS)
(Official Journal of the EU L174, 01.07.2011, p. 88-110)

The conformity of the product described above with the provisions of the applied Directive(s) is demonstrated by compliance with the following standards / regulations:

Table 1

	No.	Harmonised Standard / Technical Specification
Safety	S1	EN 62368-1:2014 +A11:2017
	S8	EN 62479:2010
EMC	E5	EN 61000-6-2:2005 +AC:2005
	E6	EN 301 489-1 V2.1.1
	E8	EN 301 489-6 V1.4.1
	E9	EN 301 489-17 V3.1.1
Radio	R1	EN 300 328 V2.2.2
	R3	EN 301 406 V2.2.2
ATEX	A1	EN IEC 60079-0:2018
	A2	EN 60079-11:2012
	A3	EN 60079-31:2014
RoHS	H1	EN IEC 63000:2018

Ref. No.: EU-DoC 24-206

Unify Software and Solutions GmbH & Co. KG;
Registered office: Munich; Commercial register of the local court of Munich, HRA 103245; WEEE Reg. DE 27980375;
General Partner: Unify Funding GmbH; Managing Director: Markus Aicher, Gunnar Bell, Christian Jessel;
Registered office: Munich; Commercial register of the local court of Munich, HRB 172448



Notified Body for Quality Management System	
Body Name	CSA Group Netherlands B.V.
Address	Utrechtseweg 310 (B42), 6812AR ARNHEM, Netherlands
No. of Notified Body	2813

Notified Body for EU-Type Examination Certificate	
Body Name	IBEXU Institut für Sicherheitstechnik GmbH
Address	Fuchsmühlenweg 7, 09599 Freiberg, Germany
No. of Notified Body	0637
EU-Type Examination Certificate	IBEXU13ATEX1052, Issue 2

Designation: II 2G Ex ib IIC T4 Gb
 II 2D Ex tb IIIC T120°C Db
 -10°C ≤ Ta ≤ +55°C

 
Munich, 23. April 2024

i.U.
 Jörg Rieder
 Head Product Management Large Platforms & Desktop Devices

Ref. No.: EU-DoC 24-206

Unify Software and Solutions GmbH & Co. KG;
 Registered office: Munich; Commercial register of the local court of Munich, HRA 103245; WEEE Reg. DE 27980375;
 General Partner: Unify Funding GmbH; Managing Director: Markus Aicher, Gunnar Boll, Christian Jessel;
 Registered office: Munich; Commercial register of the local court of Munich, HRB 172448

EU-TYPE EXAMINATION CERTIFICATE

IBExU Institut für Sicherheitstechnik GmbH An-Institut der TU Bergakademie Freiberg	
[1]	EU-TYPE EXAMINATION CERTIFICATE - Translation
[2]	Equipment or protective systems intended for use in potentially explosive atmospheres, Directive 2014/34/EU
[3]	EU-type examination certificate number IBExU13ATEX1052 Issue 2
[4]	Product: DECT Handset Open Stage M3 Ex Open Stage M3 Ex Plus Type: S30852-S2471-R121-x Type: S30852-S2471-R141-x
[5]	Manufacturer: Unify Software and Solutions GmbH & Co. KG
[6]	Address: Otto-Hahn-Ring 6 81739 München GERMANY
[7]	This product and any acceptable variation thereto is specified in the schedule to this certificate and the documents therein referred to.
[8]	IBExU Institut für Sicherheitstechnik GmbH, notified body number 0637 in accordance with Article 17 of Directive 2014/34/EU of the European Parliament and of the Council, dated 26 February 2014, certifies that this product has been found to comply with the essential health and safety requirements relating to the design and construction of products intended for use in potentially explosive atmospheres given in Annex II to the Directive. The examination and test results are recorded in the confidential test report IB-19-3-0160.
[9]	Compliance with the essential health and safety requirements has been assured by compliance with: EN IEC 60079-0:2018, EN 60079-11:2012 and EN 60079-31:2014 except in respect of those requirements listed at item [18] of the schedule.
[10]	If the sign "X" is placed after the certificate number, it indicates that the product is subject to the specific conditions of use specified in the schedule to this certificate.
[11]	This EU-type examination certificate relates only to the design and construction of the specified product. Further requirements of the Directive apply to the manufacturing process and supply of this product. These are not covered by this certificate.
[12]	The marking of the product shall include the following: <div style="text-align: center;">  <p>Ex II 2G Ex ib IIC T4 Gb Ex II 2D Ex tb IIC T120 °C Db -10 °C ≤ Ta ≤ +55 °C</p> </div>
	<div style="display: flex; justify-content: space-between;"> <div style="width: 45%;"> <p>IBExU Institut für Sicherheitstechnik GmbH Fuchsmühlenweg 7 09599 Freiberg, GERMANY</p> <p>By order  Dipl.-Ing. [FH] Henker</p> </div> <div style="width: 45%; text-align: right;"> <p>Tel: + 49 (0) 37 31 / 38 05 0 Fax: + 49 (0) 37 31 / 38 05 10</p> <p>Certificates without signature and seal are not valid. Certificates may only be duplicated completely and unchanged. In case of dispute, the German text shall prevail.</p> <p>Freiberg, 2020-02-11</p> </div> </div> <div style="text-align: center; margin-top: 10px;">  -Seal- (notified body number 0637) </div>
	<div style="display: flex; justify-content: space-between;"> FB106100 1 Page 1/3 IBExU13ATEX1052 2 </div>

IBExU Institut für Sicherheitstechnik GmbH
An-Institut der TU Bergakademie Freiberg

[13]

Schedule

[14]

Certificate number IBExU13ATEX1052 | Issue 2[15] **Description of product**

The DECT handset for use in hazardous areas consists of a plastic case with integrated antenna and Li-ion battery. It can also be used with the appertaining leather case or carrying clip. The battery may only be charged outside the hazardous area using a charging station (NAG) or USB interface. The "x" in the type designation stands for a continuous character string to distinguish the equipment documentation.

Technical data

Ambient temperature range:	-10 °C up to +55 °C
DECT HF peak power:	< 159 mW
Bluetooth HF peak power:	< 2.5 mW
Degree of protection of the case:	IP 64 (EN 60529)

<u>Li-ion battery</u>	V30145-K1310-X453
Rated voltage:	3.7 V
Rated capacity:	1000 mAh

<u>Charger incl. plug-in power supply (NAG)</u>	S30852-H2486-R101/L101
Supply voltage:	230 V
Rated voltage:	10 V
Rated current:	637 mA (fuse 750 mA)

<u>USB interface</u>	internal connection in battery compartment
Rated voltage:	5.0 V
Rated current:	200 mA (fuse 250 mA)

*Variations compared to issue 1 of this certificate:**Variation 1*

The manufacturer address has changed.

Variation 2

The equipment also meets the requirements of the EN IEC 60079-0:2018 standard.

Variation x

Alternative components may be used.

[16] **Test report**

The test results are recorded in the confidential test report IB-19-3-0160 of 2020-02-11.

The test documents are part of the test report and they are listed there.

Summary of the test results

The DECT handset meets the requirements of explosion protection of Equipment Group II and Category 2G in type of protection intrinsic safety and category 2D for dust explosion protection by enclosure.

[17] **Specific conditions of use**

None

[18] **Essential health and safety requirements**

In addition to the essential health and safety requirements (EHSRs) covered by the standards listed at item [9], the following are considered relevant to this product, and conformity is demonstrated in the test report:

None

IBExU Institut für Sicherheitstechnik GmbH
An-Institut der TU Bergakademie Freiberg

- [19] **Drawings and Documents**
The documents are listed in the test report.

IBExU Institut für Sicherheitstechnik GmbH
Fuchsmühlenweg 7
09599 Freiberg, GERMANY

By order

J. Henker

Dipl.-Ing. [FH] Henker

Freiberg, 2020-02-11



Index

Numerics

2.5 mm jack 5

A

Accessories 122
 Account code 43
 Activating 20
 Advisory message 71
 Advisory tones 89
 Alarm clock 76
 Alarm functionality 109
 Alarm functionality (compliant with BGR 139)
 Alarm key 5
 Alarm functionality (not compliant with BGR 139)
 Alarm key 115
 Prealarm 113
 Sending an emergency alarm signal 115
 Alarm key 5, 16, 110
 Alarm sensors 110
 Alarm statuses 109
 Alarming signal 111
 Alerting tone 60, 93
 Allocating 58
 Answering a voicemail 73
 Answering calls 46
 Appointments
 ~ on handset 77
 ~ on system 79
 Activating 77
 Confirming 77, 80
 Deactivating 78
 Deleting 79
 Entering 79
 Viewing 79
 Attachment clip 5
 Audio functions 88
 Auto. call answering 94
 Auto. Redial 31
 Automatic call waiting 57
 Available memory 40

B

Base

 Changing the name displayed 80
 Selecting 80
 Setting 81
 Batteries
 Inserting 9
 Warning tone 101
 Battery cover 5
 Battery tone
 Function 101
 Setting 89
 Bluetooth 29
 Registering devices 84
 Bluetooth interface 83
 Busy override 58

C

Call answering group 25
 Call charges 43, 47
 Call forwarding 26
 Call forwarding to a fixed destination 26
 Call pickup group 25
 Call waiting 55
 Automatic ~ 57
 Call waiting tone off/on 56
 Callback 23
 Caller list 74
 Calling for assistance 115
 Calls
 Accepting 25
 Anonymous ~ 45
 Directed transfer 46
 Making 21
 Picking up 25
 Rejecting 25
 Central telephone lock 105
 Changing a phone number 39
 Changing display key assignments 82
 Charging status 12
 Cleaning 119
 Clip 5
 Code programming 103
 Code table 107
 Colour scheme, setting 97
 Conducting calls with the headset 29
 Conference 60
 Connecting parties 62
 Disconnecting 61
 Ending 60
 Expanding 60
 Leaving 61
 Setting up 60
 Viewing 61
 Confirmation tone

Function	101
Setting	89
Connecting parties	62
Connection quality	20
Consultation (second connection)	24
Control key	5, 17
Control relays	50
Converting prefixes	99
Copy All	41
Copy Entry	41
Copying the phonebook	41
Cord	5

D

DDIA with speed dialling	33
Deactivating	20
Deactivating/activating group calls	63
Declaration of conformity	125
Default state	100
Deleting	
Entry	31, 40
Phonebook	40
Redial list	31
Dialling	
A phonebook entry	38
After line seizure	21
Before line seizure	21
Dialling a number	38
Dialling preparation	21
Dimensions	120
Directed answering of calls	46
Directed assignment of an MSN	42
Directed transfer of calls	46
Directives	122
Display	5
Colour scheme	97
Lighting	97
Screensaver (screen picture)	95
Setting	95
Display keys	5, 17
Display lighting	97
Do not disturb	46
Door release	
Activating	49
Deactivating	49
DTMF dialling	53

E

Earpiece	5
EMC	3

Emergency call key	16
Entering codes	106
Entrance telephone	48
Entry	
Changing	39
Deleting	31, 40
Dialling	22, 31, 38
Marking as VIP	40
Saving	38
Searching for	39
Viewing	39
Escape Alarm	112
EU directives	122
Everyday dirt	119
External call forwarding	51

F

Function keys	16
Function Test	117
Functions and codes	107

G

Group Functions	63
-----------------	----

H

Handset	
Locking/unlocking	103
Locking/unlocking, other ~	105
Hash key	5, 16
Headset	29
Holding	59
Holding a call	59
Hunt group	63

I

Identification code	43
Individual system speed dialling	33

Information message, viewing 73
 Interface 83
 Interference with electronic equipment 3

J

Jack for headset 5
 Joining calls 58

K

Key tone
 Function 101
 Setting 89
 Keypad lock 27
 Keys
 Control key 17
 Display keys 17
 Function keys 16

L

Languages 112
 LDAP telephone database 35
 Leaving the radio network/re-registering 27
 LED 5, 112
 Line seizure 21
 Liquids 119
 Locking/unlocking the telephone 103
 Loudspeaker 5

M

Mailbox function 71
 Making anonymous calls 45
 Making calls 21
 Man Down Alarm 112
 Manual redial 22
 Memory 40
 Message
 Leaving 71
 Viewing 73
 Message functions 71
 Message key 5
 Message list 16
 Messages 71, 72
 Microphone 5
 Mini USB connection 5
 Monitoring
 Activating 113
 Deactivating 116
 Monitoring LED 112
 MSN 42, 51
 Mulap group
 Deactivating/activating group calls 70
 Forwarding a line 70
 Multiple subscriber number 42, 51

N

Night answer 52
 Non Movement Alarm 112
 Number
 Changing 39
 Dialling 21
 Dialling from the phonebook 38
 Saving 38
 Suppressing 45
 Number keys 5
 Number redial
 Adding a phone number 32
 Deleting an entry/list 31
 List 22, 31
 Manual 22
 Number, applying 38

O

On/off key 5, 16
 On-hook key 5, 16
 Opening/closing battery compartment 9
 Operating modes 109

- P**
- Parking a call 54
 - Parts of the device 5
 - Personal alarm
 - Automatic 112
 - Manual 112
 - Phonebook
 - ~ on handset 37
 - ~ on system 34
 - LDAP 35
 - Phonebook entries, sorting 38
 - Phonebook, copying 41
 - Picking up a call 25
 - PIN 20, 102, 103, 105
 - PNG functionality 109
 - Prealarm 112, 113
 - Prealarm signal 110
 - Prealarms 110
 - Programming keys
 - Changing the assignment 82
 - Speed dialling 81
 - Protective cover 7
 - Protective pouch 119
 - Pull cord 5
 - Pull Cord Alarm 112
- R**
- Radio range 20
 - Range problems 20
 - Recall 54, 58
 - Redial
 - Automatic 31
 - Registering devices (Bluetooth) 84
 - Rejecting a call 25
 - Resetting 100
 - Resource Directory 91
 - Ringing 90
 - Ringing group on 65
- S**
- Safety notes 2
 - Saving a phone number 38
 - Screw for battery cover 5
 - Second call 62
 - Second connection (enquiry) 24
 - Second line 44
 - Send
 - Entry 41
 - List 41
 - Service code groups 107
 - Setting the date 94
 - Setting the language
 - Handset 14
 - System 15
 - Setting the menu view 99
 - Setting the ringer 90
 - Setting the screen picture 95
 - Setting the screensaver 95
 - Setting the time 94
 - Showing call charges 47
 - SMS 72
 - Sorting phonebook entries 38
 - Sound pressure level, maximum 120
 - Speaker volume 88
 - Speakerphone key 5, 16
 - Speakerphone loudspeaker 5
 - Speakerphone mode 28
 - Speed dialling 81
 - Dialling 39
 - Suffix-dialling/DDIA 33
 - System 33
 - System (individual) 33
 - Star key 5, 16
 - Status LED 5
 - Storage 119
 - Suffix-dialling with speed dialling 33
 - Switching between calling partners 59
 - System speed dialling 33
 - System speed dialling, individual 33
- T**
- Talk key 5, 16
 - TDS telephone data service 49
 - Technical data 120
 - Technical warning 110, 112, 114
 - Technical warning signal 110
 - Telephone blocking 103
 - Telephone conference 60
 - Telephone lock 103, 105
 - Telephone volume 88
 - Temporary phone 44
 - Text message 72
 - Toggling 59
 - Tone ringing loudspeaker 5
 - Tones 89, 90
 - Trace call 47
 - Transfer 58
 - Transferring 58
 - Transferring a call 58
 - Troubleshooting 118
 - Trunk flash 51

U

UCD	66
UCD night service	68
USB	5

V

vCard	37, 41
Converting prefixes	99
Viewing a message	73
VIP	40
Volume	88
Volume key	5, 16

W

Wrap-up time	67
--------------------	----