

# OpenScape DECT Phone S5 on HiPath Cordless IP

## User Guide

A31003-D1000-U103-2-7619

Our Quality and Environmental Management Systems are implemented according to the requirements of the ISO9001 and ISO14001 standards and are certified by an external certification company.

© Unify Software and Solutions GmbH & Co. KG 12/2015  
Mies-van-der-Rohe-Str. 6, 80807 Munich/Germany

All rights reserved.

Reference No.: A31003-D1000-U103-2-7619

The information provided in this document contains merely general descriptions or characteristics of performance which in case of actual use do not always apply as described or which may change as a result of further development of the products. An obligation to provide the respective characteristics shall only exist if expressly agreed in the terms of contract.

Availability and technical specifications are subject to change without notice.

Unify, OpenScape, OpenStage and HiPath are registered trademarks of Unify Software and Solutions GmbH & Co. KG. All other company and product and service names are trademarks or registered trademarks of their respective holders.

# Contents

Overview .....	5
Using the user guide effectively .....	6
Safety notes .....	7
<b>Getting started .....</b>	<b>8</b>
Installing the charging cradle .....	8
Connecting the charging cradle (if included) .....	8
Setting up the handset for use .....	8
Changing the display language .....	9
Setting the date and time .....	9
Connecting the headset .....	10
Connecting the USB data cable .....	10
<b>Getting to know your telephone .....</b>	<b>11</b>
Control key .....	11
Volume keys .....	11
Menu guidance .....	12
Entering text .....	12
Incoming calls .....	14
<b>Directory .....</b>	<b>15</b>
Opening the directory .....	15
Directory entries .....	15
Creating an entry .....	15
vCard .....	17
<b>Calendar .....</b>	<b>18</b>
<b>Resource Directory .....</b>	<b>23</b>
<b>Bluetooth .....</b>	<b>24</b>
<b>Additional functions using the PC interface .....</b>	<b>26</b>
<b>Multiple handsets .....</b>	<b>28</b>
Registering a handset to multiple base stations .....	28
Registering/de-registering the handset .....	28

<b>Adjusting the handset settings</b> . . . . .	<b>29</b>
Display and keypad . . . . .	29
Large font . . . . .	29
Color scheme . . . . .	29
Activating/deactivating auto answer . . . . .	30
Changing the earpiece and speaker volume . . . . .	30
Ringtones . . . . .	30
Activating/deactivating the ringtone . . . . .	31
Activating/deactivating advisory tones . . . . .	31
Fast access to numbers and functions . . . . .	31
Assigning a number to digit keys (quick dial) . . . . .	31
Changing the handset PIN . . . . .	32
Resetting the handset to the default settings . . . . .	32
<b>System</b> . . . . .	<b>33</b>
Own area code . . . . .	33
Restoring the phone to default settings . . . . .	33
<b>Questions and answers</b> . . . . .	<b>34</b>
<b>Manufacturer's advice</b> . . . . .	<b>34</b>
Authorization . . . . .	34
Care . . . . .	35
Contact with liquid . . . . .	35
Technical data . . . . .	36
General specifications . . . . .	36
Character charts . . . . .	37
Standard characters . . . . .	37
Central Europe . . . . .	37
Cyrillic . . . . .	37
Greek . . . . .	37
Turkish . . . . .	37
Arabic . . . . .	38
<b>Display icons</b> . . . . .	<b>39</b>
<b>Menu overview</b> . . . . .	<b>40</b>
<b>Making calls to multiple parties</b> . . . . .	<b>42</b>
Transferring a call . . . . .	42
Toggling (switching between calls) . . . . .	43
Conducting a conference . . . . .	44
<b>Index</b> . . . . .	<b>45</b>




## Overview




- 1 **Display**
- 2 **Status bar**  
Icons display current settings and operating status of the phone
- 3 **Volume keys**  
for receiver/headset, ringtone, handsfree mode, alarm clock and appointment reminders
- 4 **Display keys**
- 5 **End call key, On/Off key**  
End call; cancel function;  
Go back one level ▶ Press *briefly*  
Return to idle status ▶ Press and *hold*  
Switch the handset on/off (in idle status) ▶ Press and *hold*
- 6 **Message key**  
Access to calls and message lists;  
*Flashes*: new message or new call
- 7 **Profile key**  
Switch between sound profiles ▶ Press *briefly*  
Switch the microphone off/ ▶ Press and *hold* on
- 8 **Hash key**  
Lock/unlock the keypad (in idle status) ▶ Press and *hold*  
Toggles between upper/lowercase and digits (when inputting text): ▶ Press *briefly*
- 9 **USB connection socket**  
For exchanging data between the handset and PC
- 10 **Microphone**
- 11 **Star key**  
Open special characters table (when inputting text) ▶ Press *briefly*  
Disable all ringtones ▶ Press and *hold*
- 12 **Headset port**  
(2.5 mm jack)
- 13 **Recall key**  
Insert a dialing pause (only for HiPath Cordless Office) ▶ Press *briefly*
- 14 **Talk key / Handsfree key**  
Accept call; dial number displayed; switch between receiver and handsfree mode  
Open redial list ▶ Press *briefly*  
Start dialing ▶ Press and *hold*
- 15 **Control key / Menu key**


## Using the user guide effectively

 
 
### Icons

	Warnings that if not heeded can result in injury to persons or damage to devices or also give rise to costs.
	Prerequisite for being able to carry out the following action.
	Important information regarding function and appropriate handling.

### Keys

Talk key / Handsfree key 


End call key 

Number / letter keys  to 

 Star key  / Hash key 






Message key  / Recall key 

Control key rim  / center 

Microphone key 

Display keys (→ p. 11), e.g. *OK, Back, Select, Change, Save*






### Select/confirm functions














 
Confirm selection using	<i>OK</i>
Go back one level using	<i>Back</i>
Change to idle display using	Press  and <i>hold</i>
Switch function on/off using	<i>Change</i> on  / off 
Activate/deactivate option using	<i>Select</i> activated  / deactivated 


### Procedures

**Example:** Activating/deactivating automatic call answering

Illustration in the user guide

▶  ▶ ... use  to select  *Settings* ▶ *OK* ▶  *Telephony* ▶ *OK* ▶ *Auto Answer* ▶ *Change* ( = on)












Step	Follow this procedure
▶ 	When in idle status, press the <b>center</b> of the control key. The main menu opens.
▶  	Use the control key  to navigate to the  icon.
▶ <i>OK</i>	Select <i>OK</i> to confirm (or press the center of the control key  ). The submenu <i>Settings</i> opens.
	 Alternative icon for the submenu <i>Settings</i> on some handsets: 
▶  <i>Telephony</i>	Use the control key  to select the entry <i>Telephony</i> .
▶ <i>OK</i>	Select <i>OK</i> to confirm (or press the center of the control key  ). The submenu <i>Telephony</i> opens.
▶ <i>Auto Answer</i>	The function to switch auto answer on/off appears as the first menu item.
▶ <i>Change</i>	Select <i>Change</i> to activate or deactivate (or press the center of the control key  ). Function is activated  / deactivated  .

 Not all of the functions described in this user guide are available in all countries or from all network providers and systems.

Recent manuals in PDF format under  
→ [wiki.unify.com/wiki/OpenScape\\_DECT\\_Phone\\_S5](http://wiki.unify.com/wiki/OpenScape_DECT_Phone_S5)



## Safety notes

	<p>Be sure to read this user guide and the safety precautions before using your telephone. Explain their content and the potential hazards associated with using the device to your children.</p> <p>The device cannot be used in the event of a power failure. It is <b>not</b> possible either to make <b>emergency calls</b>.</p> <p>Emergency numbers also <b>cannot</b> be called when the keypad lock is activated.</p>
	Do not use the device in environments with a potential explosion hazard (e.g. paint shops).
	The devices are not splash-proof. For this reason, do not install them in a damp environment such as bathrooms or shower rooms.
	Use only the power adapter indicated on the device.
	Use only <b>rechargeable batteries</b> that correspond to the <b>specification</b> (see "Technical data"), as this could otherwise result in significant health risks and personal injury. Rechargeable batteries that are noticeably damaged must be replaced.
	If you give your handset to a third party, make sure you also give them the user guide.
	Remove faulty devices from use or have them repaired by our Service team, as they could interfere with other wireless services.
	Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to the hands or face. Send the device to our Service department to be repaired.
	<p>Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you may seriously and permanently impair your hearing.</p> <p>Your handset is compatible with the majority of digital hearing aids on the market. However, perfect function with all hearing aids cannot be guaranteed.</p> <p>The telephone may cause interference in analog hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.</p>
	<p>Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.</p> <p>If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your handset, see "Technical data").</p>
	To prevent loss of hearing, avoid listening at high volume over long periods of time.

## Getting started

### Contents of the package

- One *handset*,
- One battery cover,
- Two batteries,
- One charging cradle,
- One belt clip,
- One user guide.

### Installing the charging cradle

The charging cradle is designed for operation in closed, dry rooms within a temperature range of +5 °C to +45 °C.

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out.




Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices.

Protect the telephone from moisture, dust, corrosive liquids and fumes.

Pay attention to the range of the base station. This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The range is reduced when *Maximum Range* is deactivated.

### Connecting the charging cradle (if included)

- ▶ Connect the flat plug of the power adapter **1**.
- ▶ Plug the power adapter into the power socket **2**.

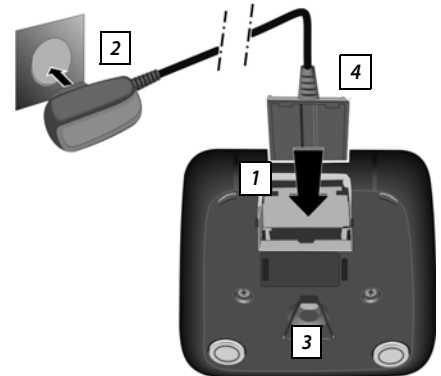

To remove the plug from the charging cradle again:

- ▶ Disconnect the power adapter from the mains power supply.
- ▶ Press the release button **3**.
- ▶ Pull out the plug **4**.

### Setting up the handset for use

The display is protected by a plastic film. ▶ *Please remove the protective film!*

### Inserting the batteries




Only use rechargeable batteries as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.





- ▶ Insert the batteries (for correct +/- direction, see diagram).
- ▶ Fit the battery cover from the top.
- ▶ Press the cover until it clicks into place.
- To re-open the battery cover:
  - ▶ Insert a fingernail behind the notch at the top of the cover and slide the cover downwards.

### Charging the batteries

- ▶ Charge the batteries fully prior to first use in the base station/charging cradle. The batteries are fully charged when the power icon  disappears from the display.



The handset may only be placed on the designated base station or charging cradle.



The battery may heat up during charging. This is not dangerous.

After a while, the charge capacity of the battery will decrease for technical reasons.

Handsets contained in the package have already been registered to the base station. In the event that a handset is not registered however (indicated by "*Please register handset*"), please contact the administrator.

### Attaching the belt clip




 
The handset has notches on each side for attaching the belt clip.

- Attaching the belt clip: ▶ Press the belt clip onto the back of the handset until the tabs on the clip engage in the notches.
- Removing the belt clip: ▶ Press the center of the belt clip firmly with your thumb. ▶ Press the nail of the thumb on your other hand up between the clip and the casing. ▶ Slide the clip upwards to remove.



### Changing the display language




You can change the display language if the telephone has been set to an incomprehensible language.

- ▶ Press the middle of the control key .
- ▶ Press the keys **[9]** and **[5]** *slowly* in succession ... the language settings display appears and the set language (e.g. English) is highlighted ( = selected).
- ▶ Select a different language: ▶ Press the control key  until the desired language is marked in the display, e.g. French ▶ press the key on the right directly underneath the display to activate the language.
- ▶ To revert to idle status: ▶ Press the End call key  and *hold*





### Setting the date and time


Set the date and time so that the date and time can be assigned correctly to incoming calls and to enable the alarm to be used.

- ▶ Press the display key **Time**
- or, if the date and time have already been set:
  - ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶ **Date/Time** ▶ **OK**




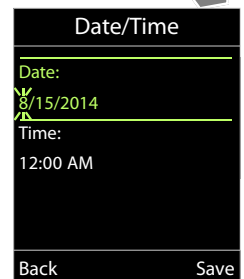
The active cursor position flashes ▶ ... use  to change the cursor position ▶ ... use  to switch between cursor positions

Enter date:

- ▶ ... use  to enter the day, month and year in 8-digit format, e.g. **[1][5][0][8][2][0][1][4]** for 15/08/2014.

Enter the time.

- ▶ ... use  to enter hours and minutes in 4-digit format, e.g. **[0][7][1][5]** for 07:15.



To save settings:

- ▶ Press the display key **Save** ... the message **Saved** is shown on the display and you hear a confirmation tone ... the telephone returns to the **Settings** menu item.

### Connecting the headset


- ▶ Connect a headset with a 2.5 mm jack to the left side of the handset **1**.  
The headset volume corresponds to the setting for the earpiece volume (→ p. 30).



### Connecting the USB data cable

For exchanging data between the handset and PC:

- ▶ Connect the USB data cable with micro-USB plug into the USB socket at the bottom of the handset **1**.

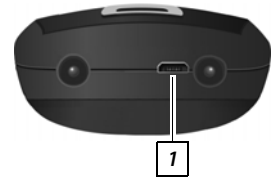


Connect the handset *directly* to the PC, *not* via a USB hub.

## Getting to know your telephone


### Switching the handset on/off

Switch on: ▶ When the handset is switched off, press the End call key  and **hold**

Switch off: ▶ When the telephone is in idle status, press the End call key  and **hold**

### Locking/unlocking the keypad

The keypad lock prevents any accidental use of the telephone.

Lock/unlock the keypad: ▶  Press and **hold**





When a call is indicated on the handset, the keypad automatically unlocks and you can accept the call. It then locks again when the call is finished.

It is not possible to call emergency numbers either when the keypad lock is activated.

### Control key



The control key enables you to navigate the menus and input fields and also to call up certain functions depending on the situation.

In the description below, the side of the control key (up, down, left, right) that you have to press in the different operating situations is marked in black, for example  for "press right on the control key" or  for "press the center of the control key".

#### In idle status

Open the directory

Open the main menu

Open the system menu

 Press **briefly**

 or 



#### In submenus, selection and entry fields

Confirm a function



#### During a conversation

Open the directory

Switch the microphone off/on

Select the left display  
(only for HiPath Cordless Enterprise)

Adjust the loudspeaker volume for receiver and handsfree mode


 









### Volume keys

Set volume for **receiver/headset, ringtone, handsfree mode** and indicating **appointments**: ▶ Press the volume keys  /  on the right side of the handset

### Display keys

The display keys perform a range of functions depending on the operating situation.

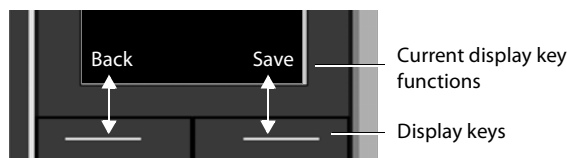

Display key icons → p. 39





The display keys have a function preset by default in idle status. Change the assignment: → p. 32

## Menu guidance


The functions of your telephone are displayed on a menu that consists of several levels. Menu overview → p. 40.

### Main menu

In idle status: ▶ Press the **center**  of the control key ▶ ... use the control key  or number keys 1 to 9 to select a submenu ▶ **OK**


The main menu functions are shown in the display as icons. The icon for the selected function is highlighted in color and the name of the associated function appears in the display header.

Example

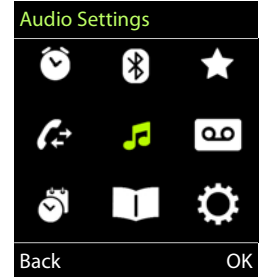

### Submenus


The functions in the submenus are displayed as lists.

To access a function: ▶ ... use the control key  to select a function ▶ **OK**


Return to the previous menu level:

▶ Press the display key **Back**


or

▶ Press the End call key  **briefly**

Example

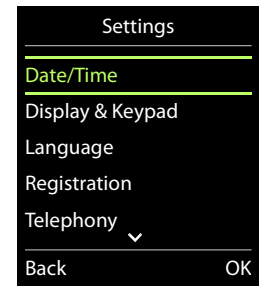

### Returning to idle status



▶ Press the End call key  and **hold**





If no key is pressed, the display will **automatically** change to idle status after around 2 minutes.

## Entering text


 
 
### Input position




- ▶ Use  to select an input field. A field is activated when the cursor is flashing inside it.
- ▶ Use  to move the position of the cursor.


### Correcting incorrect entries

 - Delete **characters** to the left of the cursor: ▶  Press **briefly**
- Delete **words** to the left of the cursor: ▶  Press and **hold**

### Entering letters/characters

Multiple letters and numbers are assigned to each key between  and  and the  key. As soon as a key is pressed, the possible characters are displayed at the bottom of the display. The selected character is highlighted.

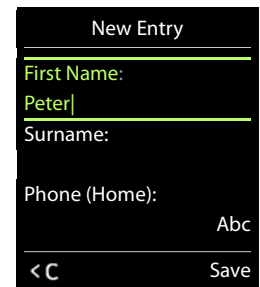


- Select letters/digits: ▶ Press the key **briefly** several times in succession
- Switch between lowercase, uppercase and number entry mode: ▶ Press the hash  key  
When editing a directory entry, the first letter and each letter following a space are automatically in uppercase.
- Enter special characters: ▶ Press the star key  ▶ ... use  to navigate to the desired character ▶ **Insert**



The availability of special characters depends on the character set of the handset, → Character set tables p. 37.

## Making calls

### Making calls

- ▶ ... use  to enter a number ▶ press the Talk key  briefly
- Cancel dialing: ▶ Press the End call key 





When the display backlight is off (→ p. 29), the display lights up again the next time any key is pressed. **Digit keys** appear on the display for pre-dialing, **other keys** have no further function.

### Dialing from the directory

- ▶ ... use  to open the directory ▶ ... use  to select an entry ▶ press the Talk key 

If multiple numbers are entered:

 


- ▶ ... use  to select a number ▶ press the Talk key  ... the number is dialed




 
For fast access (quick dial): Assign numbers from the directory to the digit or display keys (→ p. 31).

### Dialing from the redial list











The redial list contains the 20 numbers last dialed with the handset.

- ▶ Press the Talk key  briefly ... the redial list is opened ▶ ... use  to select an entry ▶ press the Talk key 

If a name is displayed:

- ▶ **View** ... the number is displayed ▶ ... use  to browse numbers if required ▶ ... when the desired number is reached, press the Talk key 

### Managing entries in the redial list



 
- ▶ Press the Talk key  briefly ... the redial list is opened ▶ ... use  to select an entry ▶ **Options** ... possible options:
  - Copy an entry to the directory: ▶  **Copy to Directory** ▶ **OK**
  - Copy the number to the display:
    - ▶  **Display number** ▶ **OK** ▶ ... use  to amend or add numbers if necessary ... use  to save as an entry in the directory
  - Delete the selected entry: ▶  **Delete entry** ▶ **OK**
  - Delete all entries: ▶  **Delete all** ▶ **OK**
- Set automatic line seizure:
  - ▶  **Automatic Redial** ... The selected number is automatically dialed at fixed intervals (at least every 20 seconds). The handsfree key flashes; "open listening" is activated.
    - The participant answers: ▶ Press the Talk key  ... the function is terminated
    - The participant does not answer: The call is terminated after approx. 30 seconds. The function is terminated after pressing any key or after ten unsuccessful attempts.

### Dialing in to extension systems (Delayed Extension Dialing)


When dialing in to a large corporate network (PBX systems), it is possible to dial an extension number directly after dialing the dial-up number.




The telephone number is saved in the directory as follows: Dial-in number, 2 stars, extension number (e.g. 1234567\*\*128).

- ▶  Open directory ▶ ... use  to select an entry ▶ press the Talk key  ... the phone dials the number before the \*\* ... possible options:

Dial a saved extension: ▶ *Dial Ext.*


Dial a different extension: ▶ ... use  to enter a number ▶ *Dial Ext.*

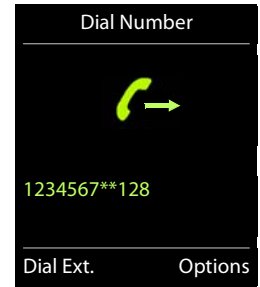

### ***Incoming calls***

An incoming call is indicated by ringing, by a display on the screen and by the flashing Talk key .

Accept a call:

- Press the Talk key or  or ▶ *Accept*
- If *Auto Answer* is activated (→ p. 30): ▶ Remove the handset from the charging cradle
- Accept a call on the bluetooth headset → p. 24

Switch off ringtone: ▶ *Silence* ... the call can be accepted for as long as it is shown on the display


### ***Information about the caller***

The caller's phone number is displayed. If the caller's phone number is saved in the directory, the name is displayed.

 

### ***During a conversation***

#### ***Handsfree mode***

Activating/deactivating handsfree mode during a call and when establishing a connection:

- ▶ Press the handsfree key 

Placing the handset in the charging cradle during a call:

- ▶ Press the handsfree key  and hold down ▶ ... place the handset in the charging cradle hold ▶ ...  for a further 2 seconds

#### ***Call volume***

Applies for the current mode (handsfree, receiver or headset):

- ▶ Press the volume keys  /  or  ▶ ... use  /  or  to set the volume ▶ *Save*




The setting is automatically saved after around 3 seconds, even if *Save* is not pressed.

#### ***Muting the microphone***

When the microphone is switched off, callers will no longer hear you.





Switch the microphone on/off during a call:

- ▶ Press and hold the microphone key .

## Directory

The local directory is unique to the handset. However, it is possible to send entries to other handsets (→ p. 17).






 




### Opening the directory

- ▶ Press  briefly in idle status
- or
- ▶  ▶ ... use  to select  **Directory** ▶ **OK**


### Directory entries

- Number of entries: up to 500
- Information: First name and surname, up to three telephone numbers, e-mail address, anniversary with alert, VIP ringtone with VIP icon, CLIP picture
- Length of the entries: Numbers: max. 32 digits.  
First name, surname: max. 16 characters  
E-mail address: max. 64 characters.

### Creating an entry

- ▶  ▶  <New Entry> ▶ **OK** ▶ ... use  to switch between the entry fields and enter data for the entry:.
- Names / numbers:**
- ▶ ... use  to enter first names and/or surnames, at least one number (personal, office or mobile) and an e-mail address, if applicable
- Anniversary:**
- ▶ ... use  to activate/deactivate **Anniversary** ▶ ... use  to enter the date and time ▶ ... use  to select the type of alert (**Visual only** or a ringtone)
- Caller Melody (VIP):**
- ▶ ... use  to select the ringtone that will indicate a call from the participant ... if a **Caller Melody (VIP)** has been assigned, the entry will appear in the directory with the  icon.
- Caller Picture:**
- ▶ ... use  to select a picture that is to be displayed during a call from the participant (→ Resource Directory, p. 23).
- Save entry: ▶ **Save**

Example

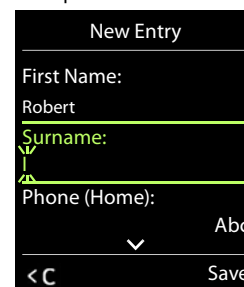

New Entry

First Name:  
Robert

Surname:  
v

Phone (Home):  
Abc

< C Save










An entry is only valid if it contains at least one number.



For **Caller Melody (VIP)** and **Caller Picture**: the telephone number of the caller must be supplied.

### Searching for/selecting a directory entry




- ▶  ▶ ... use  to browse searched names
  - or
  - ▶  ▶ ... use  to enter initial letters (max. 8 letters) ... the display jumps to the first name starting with these initial letters ▶ ... use  to continue browsing to the desired entry, if needed
- Scroll through directory: ▶  ▶  Press and **hold**



### Displaying/changing an entry

- ▶  ▶ ... use  to select an entry ▶ **View** ▶ ... use  to select the field to be changed ▶ **Edit**
- or
- ▶  ▶ ... use  to select an entry ▶ **Options** ▶ **Edit entry** ▶ **OK**

---

**Deleting entries**



Delete the *selected* entry: ▶  ▶ ... use  to select an entry ▶ *Options* ▶  *Delete entry* ▶ *OK*

Delete *all* entries: ▶  ▶ *Options* ▶  *Delete all* ▶ *OK*

---

**Setting the order of the directory entries**

Directory entries can be sorted by first name or surname.

▶  ▶ *Options* ▶  *Sort by Surname / Sort by First Name*

If no name was entered, the default telephone number is shown in the surname field. These entries appear at the beginning of the list, regardless of how the entries are sorted.

The sort order is as follows:

Space | Digits (0-9) | Letters (alphabetically) | Other characters.

---



**Displaying the number of entries available in the directory**

▶  ▶ *Options* ▶  *Available Memory* ▶ *OK*




### Copying number to the directory



The number is displayed or highlighted.

- When dialing a number:
  - ▶ Press the display key .
- From a list, e.g. the call list or the redial list.
  - ▶ **Options** ▶  **Copy to Directory** ▶ **OK**.

Create a new entry:

- ▶ **<New Entry>** ▶ **OK** ▶ ... use  to select a number type ▶ **OK** ▶ complete entry ▶ **Save**

Add number to an existing entry:

- ▶ ... use  to select an entry ▶ **OK** ▶ ... use  to select a number type ▶ **OK** ... the number is entered or a prompt to overwrite an existing number is displayed ▶ ... if required, answer the prompt with **Yes/No** ▶ **Save**

### vCard



An external call interrupts the transfer.

Caller pictures and sounds are not transferred. Only the date is transferred for an anniversary.

#### **Both handsets support vCards:**

- No entry with the name is available: a new entry is created.
- An entry with the name is already available: the entry is expanded to include the new numbers. If the entry contains more numbers than allowed by the recipient handset, a second entry is created with the same name.

#### **The recipient handset does not support vCards:**

A separate entry is created and sent for each number.

#### **The sending handset does not support vCards:**

A new entry is created on the receiving handset and the transferred number is added to the **Phone (Home)** field. If an entry with this number already exists, the copied number is discarded.






### Copying a vCard using Bluetooth

Copy directory entries in vCard format, for example to exchange entries with a mobile phone.



Bluetooth mode is activated (→ p. 24)

The other handset/mobile phone supports Bluetooth.

- ▶  ▶ ... use  to select an entry if needed ▶ **Options** ▶  **Copy Entry / Copy All** ▶  **vCard via Bluetooth** ... the **Known Devices** list is displayed (→ p. 25) ▶ ... use  to select a device ▶ **OK**

### Receiving a vCard using Bluetooth

If a device in the **Known Devices** list (→ p. 25) sends a vCard to your handset, a directory entry is automatically created and a message is shown on the display.


If the sending device is not in the list: ▶ ... use  to enter the PIN of the **sending** Bluetooth device ▶ **OK** ... the copied vCard is available as a directory entry

## Calendar

You can remind yourself of up to **30 appointments**.

The current day is outlined in white in the calendar, while numbers are highlighted in color on days with appointments. When a day is selected, it will be outlined in color.

Assign calendar call-up to a display key → p. 32.

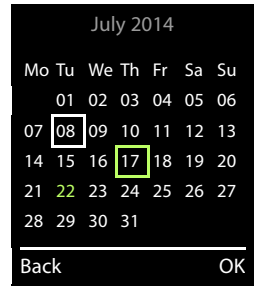

### Saving appointments to the calendar



 
- ▶ ▶ ... use to select **Organiser** ▶ **OK** ▶ **Calendar** ▶ **OK** ▶ ... use to select the desired day ▶ **OK** ... then
  - Switch on/off: ▶ **Activation:** ... use to select **On** or **Off**
  - Enter date: ▶ **Date** ... the selected date is set by default ▶ ... use to enter a new date
  - Enter the time: ▶ **Time** ▶ ... use to enter the hours and minutes of the appointment
  - Set the name: ▶ **Text** ▶ ... use to enter a description of the appointment (e.g. evening meal, meeting)
  - Set alarm tone:
    - ▶ **Signal** ▶ ... use to select the melody of the reminder alarm or deactivate acoustic signaling
  - Enter information for the appointment:
    - ▶ ... use to select **Date**, **Time**, **Text** and **Signal** in succession ▶ ... use or in each case to set the value ▶ **Save**
  - Save appointment: ▶ **Save**



### Notification of appointments/anniversaries

Anniversaries are transferred from the directory and displayed as an appointment. An appointment/anniversary is displayed in idle status and the selected ringtone plays for 60 seconds as a notification.

- Acknowledge and stop the reminder: ▶ Press the display key **OFF**
- Modify the ringtone volume permanently: ▶ ... Press the volume keys / during the reminder



### Displaying missed (unacknowledged) appointments/anniversaries

The following appointments and anniversaries are saved in the **Missed Alarms** list:

- The appointment/anniversary call was not acknowledged.
- The appointment/anniversary was notified during a call.
- The handset was switched off at the time of the appointment/anniversary.

The last 10 entries are stored. The icon and the number of new entries are shown on the display. The most recent entry appears at the top of the list.

#### Opening the list

- ▶ Press the message key ▶ **Missed Alarms:** ▶ **OK** ▶ ... use to browse through the list of any appointments

or




- ▶ ▶ ... use to select **Organiser** ▶ **OK** ▶ **Missed Alarms** ▶ **OK**

Every entry is displayed with number or name, date and time. The most recent entry appears at the top of the list.

- Delete an appointment/anniversary: ▶ **Delete**

---

### **Displaying/changing/deleting stored appointments**

▶  ▶ ... use  to select  **Organiser** ▶ **OK** ▶  **Calendar** ▶ **OK** ▶ ... use  to select the day ▶ **OK** ... the appointment list is displayed ▶ ... use  to select the date ... possible options:

Display appointment details:

▶ **View** ... The appointment settings are displayed


Change ▶ **View** ▶ **Edit**

appointment:

or ▶ **Options** ▶  **Edit entry** ▶ **OK**


Activate/deactivate appointment:

▶ **Options** ▶  **Activate/Deactivate** ▶ **OK**

Delete ▶ **Options** ▶  **Delete entry** ▶ **OK**

appointment:

Delete all appointments for a day:

▶ **Options** ▶  **Delete all Appoints.** ▶ **OK** ▶ **Yes**

## Alarm clock



The date and time have been set.

### Activating/deactivating the alarm clock and setting the wake-up time

- ▶ ▶ ... use to select **Alarm Clock** ▶ **OK** ... then
  - Switch on/off: ▶ **Activation:** ... use to select **On** or **Off**
  - Set wake-up time: ▶ **Time** ▶ ... use to enter hours and minutes
  - Set days: ▶ **Occurrence** ▶ ... use to switch between **Monday-Friday** and **Daily**
  - Set the volume: ▶ **Volume** ▶ ... use to set the volume in 5 increments or select **crescendo** (increasing volume)
  - Set alarm: ▶ **Melody** ▶ ... use to select a ringtone for the alarm
  - Enter wake-up data: ▶ ... use to enter **Time**, **Occurrence**, **Volume** and **Melody** in succession ▶ ... use or in each case to set the value ▶ **Save**
  - Save setting: ▶ **Save**

The icon and the wake-up time are displayed on the idle display when the alarm clock is activated.

### Alarm

An alarm is shown on the display and indicated by the selected ringtone melody. The alarm sounds for 60 seconds. It is then repeated after 5 minutes if no key is pressed. The alarm is disabled for 24 hours after the second retry.



During a call, the alarm is only indicated by a short tone.

### Switching off / repeating the alarm after an interval (snooze mode)

Deactivate the alarm: ▶ **OFF**

Repeat the alarm (snooze mode): ▶ **Snooze** Press or any key ... the alarm is switched off and repeated after 5 minutes.

## Protecting against unwanted calls

### Time control for external calls




The date and time have been set.

Enter a time period during which the handset is not to ring to indicate external calls, for example during the night.

- ▶ ▶ ... use to select **Audio Settings** ▶ **Ringtones (Handset)** ▶ **OK** ▶ **Time Control** ▶ **OK** ▶ ... then
- Switch on/off: ▶ use to select **On** or **Off**
- Enter the time: ▶ use to switch between **Suspend ring. from** and **Suspend ring. until** ▶ ... use to enter the start and end of the period in 4-digit format
- Save: ▶ **Save**

Example

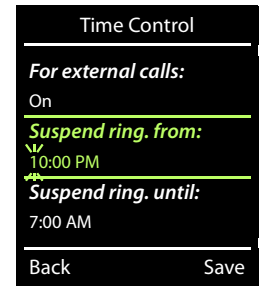

Time control only applies to the handset for which the setting is configured.

The telephone will continue to ring for numbers that have been assigned to a VIP group in the directory.

### Switching off the ringtone when in the charging cradle

The handset will not ring when placed in the charging cradle. A call is only indicated on the display.

- ▶ ▶ ... use to select **Audio Settings** ▶ **Ringtones (Handset)** ▶ **OK** ▶ **Silent Charging** ▶ **Change** ( = ringtone is switched off when in charging cradle)

---

### ***Other functions***

The phone also offers other functions:

- Resource Directory for saving sounds for ringtones and images that can be used as caller images (CLIP pictures) or as screensavers
- Additional functions via the PC interface with ***Gigaset QuickSync***: sync handset phonebook with Outlook, download images and sounds from the computer to the handset, update the firmware

## Resource Directory

Sounds for ringtones and images that can be used as caller images (CLIP pictures) or as screensavers are saved in the handset's resource directory. A range of monophonic and polyphonic sounds and pictures have been pre-set but further images and sounds can be downloaded using a PC (→ p. 26).

### Media types:

Type	Format
<b>Sound</b> Ringtones Monophonic Polyphonic Imported sounds	Internal Internal Internal WMA, MP3, WAV
<b>Picture</b> CLIP picture Screensaver	BMP, JPG, GIF 128 x 86 pixels 128 x 160 pixels

If there is not enough memory available, you must first delete one or more pictures or sounds before others can be saved.

### Managing CLIP pictures/sounds






- ▶ ▶ ... use to select **Additional Features** ▶ **OK** ▶ **Resource Directory** ▶ **OK** ... possible options:
  - View CLIP picture: ▶ **Caller Pictures** ▶ **OK** ▶ ... use to select picture ▶ **View** ... the selected picture is displayed
  - Play sound: ▶ **Sounds** ▶ **OK** ▶ ... use to select sound ... the selected sound is played
    - Set volume: ▶ **Options** ▶ **Volume** ▶ **OK** ▶ ... use to select the volume ▶ **Save**
  - Rename picture/sound:
    - ▶ select **Caller Pictures / Sounds** ▶ **OK** ▶ ... use to select sound/image ▶ **Options** ▶ **Rename** ▶ ... use to delete name, use to enter a new name ▶ **Save** ... the entry is saved with the new name
  - Delete picture/sound: ▶ Select **Caller Pictures / Sounds** ▶ **OK** ▶ ... use to select sound/image ▶ **Options** ▶ **Delete entry** ... the selected entry is deleted



The relevant options are not available if a picture/sound cannot be deleted.

### Checking the memory

Display the available memory for screensavers and CLIP pictures.

- ▶  ▶ ... use  to select  **Additional Features** ▶ **OK** ▶  **Resource Directory** ▶ **OK** ▶  **Capacity** ▶ **OK** ... the percentage of available memory is displayed

## Bluetooth

The handset is able to use Bluetooth™ to communicate wirelessly with other devices that also use this technology, for example for exchanging directory entries.



Bluetooth is activated and the devices have been registered to the handset.

The following devices can be connected:

- A Bluetooth headset



The headset features the **Headset** or **Handsfree Profile**. If both profiles are available, the handsfree profile is used to communicate.



It may take 5 seconds to establish a connection, whether a call is accepted using the headset or transferred to the headset, or a call is made from the headset.


- Up to 5 data devices (PCs, PDAs or mobile telephones) for the transmission of address book entries as a vCard or for the exchange of data with the computer (→ S. 26).

To use the phone numbers, dialing codes (international and local area code) must be saved to the telephone.

Operating Bluetooth devices → User guides for devices

### Activating/deactivating Bluetooth mode

- ▶  ▶ ... use  to select  **Bluetooth** ▶ **OK** ▶  **Activation** ▶ **Change** ( = activated)  
If the local area code is still not saved: ▶ ... use  to enter the local area code ▶ **OK** (→ p. 33)

When in idle status, the activated Bluetooth mode is indicated on the handset by the  icon.



### Registering Bluetooth devices

The distance between the handset in Bluetooth mode and the activated Bluetooth device (headset or data device) should be no more than 10 m.



The registration of a headset overwrites a previously registered headset.

If a headset is to be registered that is already registered with a different device, this connection must be deactivated before registering.

- ▶ ▶ ... use to select **Bluetooth** ▶ **OK** ▶ **Search for Headset / Search Data Device** ▶ **OK** ... the search starts (may take up to 30 seconds) ... the names of found devices are displayed ... possible options:
  - Register device: ▶ **Options** ▶ **Trust Device** ▶ **OK** ▶ ... use to enter the PIN of the Bluetooth device to be registered ▶ **OK** ... the device is added to the list of known devices
  - Display information about a device:
    - ▶ ... use to select a device, if necessary ▶ **View** ... the device name and device address are displayed
  - Repeat search: ▶ **Options** ▶ **Repeat Search** ▶ **OK**
  - Cancel search: ▶ **Cancel**

### Editing the list of known (trusted) devices

#### Opening the list

- ▶ ▶ ... use to select **Bluetooth** ▶ **OK** ▶ **Known Devices** ▶ **OK** ... the known devices are listed, an icon indicates the type of device
  - Bluetooth headset
  - Bluetooth data device

If a device is connected, the corresponding icon is shown in the display header instead of .

#### Editing entries

- ▶ ▶ ... use to select **Bluetooth** ▶ **OK** ▶ **Known Devices** ▶ **OK** ▶ ... use to select an entry ... possible options:
  - View an entry: ▶ **View** ... the device name and device address are displayed ▶ To go back, press **OK**
  - De-register a Bluetooth device:
    - ▶ **Options** ▶ **Delete entry** ▶ **OK**
  - Edit name: ▶ **Options** ▶ **Edit Name** ▶ **OK** ▶ ... use to edit the name ▶ **Save**



If an active Bluetooth device is de-registered, it may try to re-connect as a "non-registered device".

### Rejecting/accepting a non-registered Bluetooth device

If a Bluetooth device that is not registered in the list of known devices tries to connect with the handset, you will be prompted on the display to enter the PIN for the Bluetooth device (bonding).

- Reject: ▶ Press the End call key **briefly**.
- Accept: ▶ ... use to enter the PIN of the Bluetooth device to be accepted ▶ **OK** ▶ ... wait for PIN confirmation ... then
  - Add the device to the list of known devices: ▶ **Yes**
  - Use the device temporarily: ▶ **No** ... the Bluetooth connection can be used as long as the device is located within the transmission range or until it is switched off

### Changing the Bluetooth name of the handset

The handset is shown by this name on another Bluetooth device.

- ▶ ▶ ... use to select **Bluetooth** ▶ **OK** ▶ **Own Device** ▶ **OK** ... the name and the device address are shown ▶ **Change** ▶ ... use to change the name ▶ **Save**

## Additional functions using the PC interface



The *Gigaset QuickSync* program has been installed on the computer.

Free to download at → [wiki.unify.com/wiki/OpenScope\\_DECT\\_Phone\\_S5](http://wiki.unify.com/wiki/OpenScope_DECT_Phone_S5)

QuickSync functions:

- Sync the handset's directory with Outlook
  - Upload CLIP pictures (.bmp) from the computer to the handset
  - Upload pictures (.bmp) as screensavers from the computer to the handset
  - Upload sounds (ringtone melodies) from the computer to the handset
  - Update the firmware
- ▶ Connecting the handset to the computer via Bluetooth (→ p. 24) or via a USB data cable (→ p. 10).



Connect the handset *directly* to the PC, *not* via a USB hub.

### Transferring data



Data transfer using Bluetooth:

- The computer has Bluetooth capability.
- A USB data cable is not plugged in. If a USB data cable is plugged in during an existing Bluetooth connection, the Bluetooth connection is interrupted.

- ▶ Launch the *Gigaset QuickSync* program on the computer.

The message *Data transfer in progress* is shown on the display while data is being transferred between the handset and PC. During this time, it is not possible to enter any data using the keypad and incoming calls are ignored.

### Carrying out a firmware update



- ▶ Connect the telephone and PC using a *USB data cable* (→ p. 10) Launch ▶ *Gigaset QuickSync* ▶ Establish the connection to the handset
- ▶ Start the firmware update in *Gigaset QuickSync* . . . Information about this can be found in the *Gigaset QuickSync* help

The update process may take up to 10 minutes (not including the download time).



Do not interrupt the process and do not remove the USB data cable.

The data is first downloaded from the online update server. The amount of time this takes depends on the speed of the Internet connection.



The display on your phone is switched off and the Message key  and the Talk key  start flashing. Once the update is complete, your phone will automatically restart.

### Procedure in the event of an error

 
If the update procedure fails or the phone does not work properly following the update, repeat the update procedure:

- ▶ End the "*Gigaset QuickSync*" program on the PC ▶ Remove the USB data cable from the phone ▶ Remove the battery (→ p. 8) ▶ Replace the battery
- ▶ Carry out the firmware update again as described above

If the update procedure fails several times or you can no longer connect to the PC, carry out an *Emergency Update*:

- ▶ End the "*Gigaset QuickSync*" program on the PC ▶ Remove the USB data cable from the phone ▶ Remove the battery (→ p. 8)
- ▶ Press and hold keys **4** and **6** at the same time with the forefinger and middle finger ▶ Replace the battery
- ▶ Release keys **4** and **6** . . . the Message key  and the Talk key  flash alternately
- ▶ Carry out the firmware update as described above







Always save pictures and sounds uploaded onto the handset on the PC also, as they are deleted during an *Emergency Update*.

## Multiple handsets

### Registering a handset to multiple base stations

The handset can be registered to up to four base stations. The active base station is the base station to which the handset was last registered. The other base stations remain saved in the list of available base stations.

▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **Registration** ▶ **OK** ▶ **Select Base** ▶ **OK** ... possible options:

Change active base station: ▶ ... use  to select the base station or **Best Base** ▶ **Select** ( = selected)

**Best Base:** The handset chooses the base station with the best reception as soon as it loses connection to the current base station.

Change name of a base station:

▶ ... use  to select a base station ▶ **Select** ( = selected) ▶ **Name** ▶ change name ▶ **Save**

### Registering/de-registering the handset

A handset can be registered to up to four base stations (systems).



Please contact your service engineer concerning registering and de-registering handsets.

## Adjusting the handset settings

### Changing the language

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Language** ▶ OK ▶ ... use to select the language ▶ **Select** ( = selected)

If the handset has been changed to an incomprehensible language:

- ▶ ▶ Press the keys **9** **5** *slowly* in succession ▶ ... use to select the correct language ▶ press the right display key

### Display and keypad

#### Screensaver

A dialog or analog clock, Info Services and a range of pictures can be selected to be displayed as a screensaver when in idle status.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Display & Keypad** ▶ OK ▶ **Screensaver** ▶ **Edit** ( = on) ... then
  - Switch on/off: ▶ **Activation:** ... use to select **On** or **Off**
  - Select screensaver:
    - ▶ **Selection** ▶ ... use to select a screensaver (**Digital Clock / Analog Clock** / <Pictures > / **Slideshow**)
  - View screensaver: ▶ **View**
  - Save selection: ▶ **Save**

The screensaver is activated approx. 10 seconds after the display has changed to idle status.

All pictures from the **Screensaver** folder of the **Resource Directory** (→ p. 23) are available for selection.

#### End screensaver

- ▶ Press the End call key *briefly* ... the idle display appears

#### Large font

You can increase the font size of text and icons in call lists and in the directory in order to improve legibility. Only one entry is shown in the display and names are abbreviated if necessary.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Display & Keypad** ▶ OK ▶ **Large Font** ▶ **Edit** ( = on)

#### Color scheme

The display may appear in a range of color combinations.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Display & Keypad** ▶ OK ▶ **Colour Schemes** ▶ OK ▶ ... use to select the desired color scheme ▶ **Select** ( = selected)

#### Display backlight

The display backlight always illuminates when the handset is taken out of the base station/charging cradle or a key is pressed. Any **digit keys** that are pressed appear on the display for pre-dialing.

Switch the display backlight on/off when in idle status:

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Display & Keypad** ▶ OK ▶ **Display Backlight** ▶ OK ... then
  - Backlight in the charging cradle:
    - ▶ **In Charger:** ... use to select **On** or **Off**
  - Backlight when not in the charging cradle:
    - ▶ **Out of Charger** ▶ ... use to select **On** or **Off**
  - Save selection: ▶ **Save**



The handset's standby time may be significantly reduced if the display backlight is activated.

### Switching the keypad illumination on/off

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Display & Keypad** ▶ OK ▶ **Key Illumination** ▶ **Change**  = on

### Activating/deactivating automatic keypad lock

Automatically lock the keypad when the handset has been in idle status for around 15 seconds.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Display & Keypad** ▶ OK ▶ **Auto Keypadlock** ▶ **Change**  = on

### Activating/deactivating auto answer

When set to auto answer, the handset accepts an incoming call as soon as it is removed from the charging cradle.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Telephony** ▶ OK ▶ **Auto Answer** ▶ **Change**  = on

Regardless of the **Auto Answer** setting, the connection ends as soon as you place the handset back in the charging cradle. Exception: Press and hold the handsfree key for a further 2 seconds while placing the handset in the charging cradle.

### Changing the earpiece and speaker volume

You can set the volume of the earpiece and speaker at 5 levels independently of each other.

#### During a conversation

- ▶ Press the volume keys / on the right side of the handset
- or
- ▶ **Handset Volume** ▶ ... use to select the volume ▶ **Save** ... the setting is saved



The setting will be saved automatically after approx. 3 seconds without saving.

#### In idle status


- ▶ ▶ ... use to select **Audio Settings** ▶ OK ▶ **Handset Volume** ▶ OK ... then
  - For the earpiece: ▶ **Earpiece:** ... use to set the volume
  - For the speaker: ▶ **Speaker** ▶ ... use to set the volume
  - Save setting: ▶ **Save**

### Ringtones

#### Ringtone volume

- ▶ ▶ ... use **Audio Settings** ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶ **Volume** ▶ OK ▶ ... use to select **For internal calls and alarms** or **External Calls** ▶ ... use to set the volume in 5 increments or in crescendo mode (increasing volume) ▶ **Save**

Example

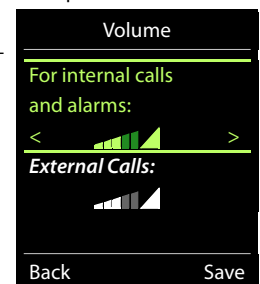

When the telephone rings, you can permanently change the ringtone volume using volume keys (louder) or (quieter).



### Ringtone melody

Set a variety of ringtones for internal and external calls.


- ▶  ▶ ... use  **Audio Settings** ▶ OK ▶  **Ringtones (Handset)** ▶ OK ▶  **Melodies** ▶ OK ▶ ... use  to select the connection ▶ ... use  to select the ringtone/melody in each case ▶ **Save**

### Activating/deactivating the ringtone


#### Deactivating the ringtone permanently

- ▶ Press and hold the  key. The icon appears in the status bar 

#### Activating the ringtone permanently





- ▶ Press and hold the  key.

#### Deactivating the ringtone for the current call

- ▶ **Silence** Press Silence or the End call key 











### Activating/deactivating the vibration alarm

Incoming calls and other messages are indicated by a vibration.

 
 

- ▶  ▶ ... use  **Audio Settings** ▶ OK ▶  **Silent Alert** ▶ **Change**  = on)

### Activating/deactivating advisory tones

The handset notifies acoustically about different activities and statuses. These advisory tones can be activated/deactivated independently of each other.

- ▶  ▶ ... use  **Audio Settings** ▶ OK ▶  **Advisory Tones** ▶ OK ... then
  - Tone when keys are pressed: ▶ **Key Tones:** ... use  to select **On** or **Off**
  - Confirmation/error tone after making entries, advisory tone when a new message has been received:
    - ▶  **Confirmation** ▶ ... use  to select **On** or **Off**
  - Warning tone when there are fewer than 10 minutes of talktime remaining (every 60 seconds):
    - ▶  **Battery** ▶ ... use  to select **On** or **Off**
  - Warning tone when the handset is moved out of range of the base station:
    - ▶  **Out of Range:** ... use  to select **On** or **Off**
  - Save setting: ▶ **Save**

### Fast access to numbers and functions

**Number keys:** The keys  and  to  can each be assigned a **number from the directory**.

**Display keys:** The left and right display keys have a **function** preset by default, but the keys can be re-assigned.

The number is then dialed or the function started by simply pressing a key.

### Assigning a number to digit keys (quick dial)



You have to assign a number to the digit key.

- ▶ Press and **hold** the digit key
- or
- ▶ Press the digit key **briefly** ▶ Press the display key **Quick Dial**

The directory opens.

- ▶ ... use  to select an entry ▶ OK ▶ ... use  to select a number if required ▶ OK ... the entry is saved to the digit key




If you delete or edit the entry in the directory at a later date, this will not affect the assignment to the number key.


**Dialing a number**


- ▶ Press and **hold** the digit key ... the number is dialed immediately
- or
- ▶ Press the digit key **briefly** ... the number/name (possibly in abbreviated form) is shown on the left display key ▶ ... press the display key ... the number is dialed

**Changing the digit key assignment**

- ▶ Press the digit key **briefly** ▶ **Change** ... the directory is opened ... possible options:
  - Change the assignment: ▶ ... use  to select an entry ▶ **OK** ▶ ... select a number if required ▶ **OK**
  - Delete the assignment: ▶ **Clear Key**

**Assigning display keys, changing assignments**

- ▶ Press and **hold** the left or right display key in idle status ... the list of possible key assignments is opened ▶ ... use  to select a function ▶ **OK** ... possible options:

<b>Quick Dial</b>	Assign a number from the directory to the display key (→ p. 31)
<b>Alarm Clock</b>	Set and activate/deactivate the alarm clock (→ p. 20)
<b>Calendar</b>	Open the calendar (→ p. 18)
<b>Bluetooth</b>	Open the Bluetooth menu (→ p. 24)
<b>Redial</b>	Show the redial list (→ p. 13)
<b>More Functions...</b>	▶ <b>OK</b> ▶ ... use  to select other function
<b>Call Lists</b>	Show the call list (→ p. 54)
<b>Call Divert</b>	Activate/deactivate call forwarding (→ p. 77)

**Starting a function**

With the telephone in idle status: ▶ Press the display key **briefly** ... the assigned function is executed

**Changing the handset PIN**

The handset is PIN-protected to prevent unauthorized use (default setting: **0000**). Each time you turn on the handset, the PIN is requested.

Change the handset's 4-digit PIN (default setting: **0000**):

- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **System** ▶ **OK** ▶  **Handset PIN** ▶ **OK** ▶ ... use  to enter the current handset PIN ▶ **OK** ▶ ... use  to enter the new handset PIN ▶ **OK**

**Resetting the handset to the default settings**

Reset any individual settings and changes that you have made.

- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **System** ▶ **OK** ▶  **Handset Reset** ▶ **OK** ▶ **Yes** ... the handset's settings are reset

The following settings are **not** affected by the reset:

- Registration of the handset to the base station
- Date and time
- Directory entries and call lists
- SMS lists



## System

### Date and time

To ensure you have the correct time for incoming calls and to use the alarm clock and calendar, for example, the date and time have to be set.

If the date and time have not yet been set on the handset, the display key *Time* appears.

▶ Press the display key *Time*

or

▶ ▶ ... use to select **Settings** ▶ **OK** ▶ **Date/Time** ▶ **OK** ... then

Set the date: ▶ **Date:** ... use to enter the day, month and year in 8-digit format.  
e.g. 1 4 0 1 2 0 1 4 for 14/01/2014

Set the time: ▶ **Time** ▶ ... use to enter hours and minutes in 4-digit format  
e.g. 0 7 1 5 for 07:15

Save setting: ▶ **Save**

### Own area code

The area code (international and local area code) must be saved on the phone in order to transfer phone numbers (e.g. in vCards)


Some of these numbers are already preset.

▶ ▶ ... use to select **Settings** ▶ **OK** ▶ **Telephony** ▶ **OK** ▶ **Area Codes** ▶ **OK** ▶ Check (pre-)set area code

Edit the number:

▶ ... use to select/switch entry field ▶ ... use to change entry position ▶ ... delete digit if appropriate ▶ ... use to enter digit ▶ **Save**

Example

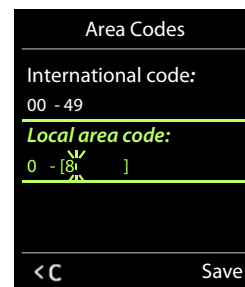

### Restoring the phone to default settings


When the settings are reset

- the date and time are retained,
- handsets are still registered,
- the system PIN is retained,
- **Maximum Range** is activated and **No Radiation** is deactivated.

▶ ▶ ... use to select **Settings** ▶ **OK** ▶ **System** ▶ **OK** ▶ **Base Reset** ▶ **OK** ▶ ... use to enter the system PIN ▶ **OK** ▶ **Yes** ... the base station is restarted. The restart takes around 10 seconds.

## Questions and answers

### *The display is blank.*

- The handset is not switched on. ▶  Press and **hold**
- The battery is empty. ▶ Charge the battery or replace it (→ p. 8)

### *"No Base" flashes on the display.*

- The handset is outside the range of the base. ▶ Reduce the distance between the handset and base

### *"Please register handset" flashes on the display.*

- The handset is not yet registered or was de-registered when another handset was registered. ▶ Register the handset again

### *The handset does not ring.*

- The ringtone is deactivated. ▶ Activate the ringtone (→ p. 31)
- The phone does not ring during a specific period or for certain numbers.
  - ▶ Check the time control for external calls (→ p. 21)

### *The other party cannot hear you.*

- The handset is "muted". ▶ Reactivate the microphone (→ p. 14)

### *The caller's number is not displayed.*

- **Calling Line Identification (CLI)** is not enabled for the caller. ▶ The *caller* should ask the network provider to enable Calling Line Identification (CLI).
- **Calling Line Identification Presentation (CLIP)** is not supported or enabled by the network provider. ▶ Ask the network provider to enable Calling Line Identification Presentation (CLIP).
- The phone is connected via a PABX or a router with an integrated PABX (gateway) that does not forward all information.
  - ▶ Reset the system: Pull out the power plug briefly. Reinsert the plug and wait until the device restarts.
  - ▶ Check the settings on the PABX and activate phone number display if necessary. To do this, search for terms such as CLIP, calling line identification, telephone number identification, caller ID, ... in the system user guide or ask the system manufacturer.

### *You hear an error tone when keying in (descending tone sequence).*

- Action has failed/invalid input. ▶ Repeat the process. Read the display and refer to the user guide if necessary.

### *No time is specified for a message in the call list.*

- The date/time are not set. ▶ Set the date and time.

### *Registration or connection problems with a Bluetooth headset.*

- ▶ Reset the Bluetooth headset (see the user guide for the headset).
- ▶ Delete the registration data on the handset by de-registering the device (→ p. 24).
- ▶ Repeat the registration process (→ p. 25).

## Manufacturer's advice

### **Authorization**

Depending on the variant, this device is intended for analog phone lines in the German/Luxembourg or Austrian network (see device label).

Country-specific requirements have been taken into consideration.

We, Unify Software and Solutions GmbH & Co. KG, declare that this device meets the essential requirements and other regulations laid down in Directive 1999/5/EC.

The EU declaration of conformity for your country under 1999/5/EC can be found at:

[wiki.unify.com/wiki/Declarations\\_of\\_Conformity#Cordless\\_Phones](http://wiki.unify.com/wiki/Declarations_of_Conformity#Cordless_Phones).

This declaration may also be available in the files "International Declarations of Conformity" or "European Declarations of Conformity" in some cases.

Therefore please also read these files.

**CE 0682**

---

### Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority. Dispose of batteries in the green boxes designated as "common collection system for batteries" at specialist retailers.

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.



This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local authority refuse center or waste disposal service.

---

### Care

Always use a **damp** or antistatic cloth to clean the device. Do not use solvents or microfiber cloths.

**Never** use a dry cloth as this can cause a static charge.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Not all substances have been tested due to the wide variety of chemical products available on the market.

Impairments to high-gloss finishes can be carefully removed using display polishes for mobile phones.

---

### Contact with liquid

If the device comes into contact with liquid:

- 1 **Disconnect it from the power supply.**
- 2 **Remove the batteries and leave the battery compartment open.**
- 3 Allow the liquid to drain from the device.
- 4 Dab all components dry.
- 5 Place the handset in a dry, warm place for **at least 72 hours** with the battery compartment open and keypad (if applicable) facing down (**not** in a microwave, oven, etc..).
- 6 **Do not switch on the device again until it is completely dry.**

When it has fully dried out, you will usually be able to use it again.

## Technical data

### Batteries

Technology:	2 x AAA NiMH
Voltage:	1.2 V
Capacity:	750 mAh

### Handset operating times/charging times

The operating time of your handset depends on the capacity and age of the battery and the way it is used. (All times are maximum possible times).

Standby time (hours) *	165
Talktime (hours)	12
Operating time with 1.5 hrs of calls per day (hours) *	95
Charging time in base station (hours)	5
Charging time in charging cradle (hours)	7

\* without display backlight (Setting the display backlight → p. 29)



The operating times of the phone can be extended by using a more powerful battery.

### Power consumption of base station

In standby mode:	Handset in charging cradle	approx. 1.2 W
	Handset not in charging cradle	approx. 0.55 W
During a call:		approx. 0.65 W

### General specifications

DECT standard	Supported
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1880-1,900 MHz
Duplex mode	Time division multiplexing, 10 ms frame length
Pulse repetition rate	100 Hz
Pulse transmission length	370 µs
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW, average power per channel, 250 mW pulse power
Range	Up to 50 m indoors, up to 300 m outdoors
Base station power supply	230 V ~/50 Hz
Environmental conditions for operation	+5 °C to +45 °C; 20 % to 75 % relative humidity
Dialing mode	DTMF (tone dialing)/ PD (pulse dialing)

### Bluetooth

Radio frequency range	2402-2480 MHz
Transmission power	4 mW pulse power

## Character charts

### Standard characters

Press the relevant key the indicated number of times.

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1	1									
2	a	b	c	2	ä	á	à	â	ã	ç
3	d	e	f	3	ë	é	è	ê		
4	g	h	i	4	ï	í	ì	î		
5	j	k	l	5						
6	m	n	o	6	ö	ñ	ó	ò	ô	õ
7	p	q	r	s	7	ß				
8	t	u	v	8	ü	ú	ù	û		
9	w	x	y	z	9	ÿ	ý	æ	ø	å
0	← <sup>1)</sup>	.	,	?	!	← <sup>2)</sup>	0			

- 1) Space
- 2) Line break

### Central Europe

Press the relevant key the indicated number of times.

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1	1	Š	š							
2	a	b	c	2	ą	ä	á	â	ć	ç
3	d	e	f	3	đ	ę	ě	é	ê	
4	g	h	i	4	í	î				
5	j	k	l	5	ł					
6	m	n	o	6	ń	ñ	ó	ö	õ	ô
7	p	q	r	s	7	ř	ß	ś	š	
8	t	u	v	8	t'	ű	ü	ú	û	
9	w	x	y	z	9	ý	ź	ż	ž	
0	← <sup>1)</sup>	-	.	0						

- 1) Space

### Cyrillic

Press the relevant key the indicated number of times.

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1	1									
2	а	б	в	г	2	а	б	с		
3	д	е	ё	ж	з	3	д	е	ф	
4	и	й	к	л	4	г	h	i		
5	м	н	о	5	ж	к	л			
6	п	р	с	6	м	н	о			
7	т	у	ф	х	7	р	q	r	s	
8	ц	ч	ш	щ	ъ	8	t	u	v	
9	ы	ь	э	ю	я	9	w	x	y	z
0	← <sup>1)</sup>	.	,	?	!	← <sup>2)</sup>	0			

- 1) Space
- 2) Line break

### Greek

Press the relevant key the indicated number of times.

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x
1	1											
2	α	β	ά	2	α	β	с					
3	δ	ε	φ	ε	3	δ	е	ф				
4	γ	η	ι	ή	ί	ϊ	ϊ	4	g	h	i	
5	κ	λ	5	ж	к	л						
6	μ	ν	ο	ω	ό	ώ	6	m	n	o		
7	π	ρ	ς	σ	ψ	7	p	q	r	s		
8	θ	τ	8	t	u	v						
9	ζ	ξ	υ	χ	ύ	ϋ	ϋ	9	w	x	y	z
0	← <sup>1)</sup>	.	,	?	!	← <sup>2)</sup>	0					

- 1) Space
- 2) Line break

### Turkish

Press the relevant key the indicated number of times.

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1	1									
2	a	b	c	ç	2	ä	á	à	â	ã
3	d	e	f	3	ë	é	è	ê		
4	g	ğ	h	ı	ı	4	ï	í	ì	î
5	j	k	l	5						
6	m	n	o	ö	6	ñ	ó	ò	ô	õ
7	p	r	s	ş	7	q	ß			
8	t	u	ü	v	8	ú	ù	û		
9	y	z	9	w	x	ÿ	æ	ø	å	
0	← <sup>1)</sup>	.	,	?	!	← <sup>2)</sup>	0			

- 1) Space
- 2) Line break

**Arabic**

Press the relevant key the indicated number of times.

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x
1	1										
2	a	b	c	2	ث	ج	ح	خ			
3	d	e	f	3	ا	ب	ة	ت	أ	إ	آ
4	g	h	i	4	ظ	ط	ع	غ			
5	j	k	l	5	س	ش	ص	ض			
6	m	n	o	6	د	ذ	ر	ز			
7	p	q	r	s		ي	ى	ء	ئ		
8	t	u	v		م	ن	ه	و	ف		
9	w	x	y	z		ف	ق	ك	ل		
0	ا	.	,	؟	!	←	0				

- 1) Space
- 2) Line break

## Display icons

The following icons are displayed dependent on the settings and the operating status of your telephone.

### Icons in the status bar

Icon	Meaning
	Signal strength ( <i>No Radiation</i> off) 1% - 100% white, if <i>Maximum Range</i> on; green, if <i>Maximum Range</i> off
	Red: no connection to the base station
	<i>No Radiation</i> activated: white, if <i>Maximum Range</i> on; green, if <i>Maximum Range</i> off
	<i>Profile Silent</i> activated (ringtone switched off)
	"Beep" ringtone activated

Icon	Meaning
	Keypad lock activated
	Battery charge status: White: between 11% and 100% charged Red: less than 11% charged Flashing red: battery almost empty (approx. 5 minutes of talktime left)
	Battery is charging (current charge status) 0% - 100%

### Display key icons

Icon	Meaning
	Last number redial
	Delete text

Icon	Meaning
	Open the directory
	Copy number to the directory

### Display icons to indicate ...

Icon	Meaning
	External call
	Internal call
	Establishing a call (outgoing call)
	Connection established
	No connection established/ connection terminated

Icon	Meaning
	Reminder for appointment
	Reminder for anniversary
	Wake-up call

### Other display icons


Icon	Meaning
	Alarm clock is on, display with alarm time
	Action complete (green)
	Action failed (red)

Icon	Meaning
	Information
	(Security) prompt
	Please wait...

## Menu overview



Not all of the functions described in this user guide are available in all countries or from all network providers.

Open the main menu: ► press this key when the handset is in idle mode 



**Alarm Clock**

→ p. 20



**Bluetooth**

→ p. 24

Activation
Search for Headset
Search Data Device
Known Devices
Own Device

→ p. 24

→ p. 25

→ p. 25

→ p. 25

→ p. 25



**Additional Features**

Resource Directory
--------------------

→ p. 18



**Call Lists**

→ p. 54



**Audio Settings**

Handset Volume
Advisory Tones
Silent Alert
Ringtones (Handset)

→ p. 30

→ p. 31

→ p. 31

→ p. 30

Volume
Melodies
Time Control
Silent Charging

→ p. 31

→ p. 21

→ p. 21



**Answer Machine**

No function



**Organiser**

Calendar
Missed Alarms

→ p. 18

 
→ p. 18



**Directory**

→ p. 15





**Settings**

Date/Time		→ p. 33
Display & Keypad	Screensaver	→ p. 29
	Large Font	→ p. 29
	Colour Schemes	→ p. 29
	Display Backlight	→ p. 29
	Key Illumination	→ p. 30
	Auto Keypadlock	→ p. 30
Language		→ p. 29
Registration	Register Handset	→ p. 28
	De-register Handset	→ p. 28
	Select Base	→ p. 28
Telephony	Auto Answer	→ p. 30
	Area Codes	→ p. 33
System	Handset Reset	→ p. 31
	Handset PIN	→ p. 32
	Base Reset	→ p. 33


# Making calls to multiple parties

## Transferring a call

Transferring a call means that you wish to hand over a call you are conducting on your handset to another user.

### Transfer (without announcing the transfer)

You can use this function to forward a call you answered to another user.

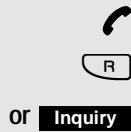

Press the key shown.

Press the display key. The current call is placed "on hold", so that the first user waits.



Enter the phone number of the user to whom the call is to be transferred. The current call is placed "on hold", so that the first user waits.



The number is dialed.




Press the End call key. The destination user's phone rings. He or she picks up the call by lifting the handset.

You receive a recall:

- If the required user does not answer for some time after the transfer.

### Transfer (announcing the transfer)

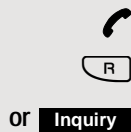

You can use this function to forward a call you answered to another user.

Press the key shown.

Press the display key. The current call is placed "on hold", so that the first user waits.



Enter the phone number of the user to whom the call is to be transferred.



The number is dialed. The station answers. You announce the call presently on hold.



Press the End call key. The user takes the call.

## Toggling (switching between calls)

The Toggle function allows you to switch between two users without allowing them to speak to each other directly. The two users can be either external or internal users. You can also withdraw from the calls and connect the two users with each other. You can also start a conference.

You are conducting a call.



Press the key shown.

or **Inquiry**

Press the display key. The current call is placed "on hold", so that the first user waits.



Enter the phone number of the second user.



The second user answers.

**Toggle**

Press the display key to switch between the two calls.

When you end a call, the two users are connected with each other (not possible when both users are external).

## Conducting a conference

You can connect up to 3 internal or external partners with each other in a telephone conference.

### Setting up a conference

You decide to set up a conference while talking to a user.

You are on a call and wish to start a conference.

Press the key shown.

or **Enquiry**

Press the display key.



Enter the phone number of the new user.



The user is free and answers the phone. You announce the conference.

**Menu**

Open the system menu.

**↓ ↑** Conference **OK**

Select the menu item and confirm.

You and your two partners are connected in a conference call.

### Ending a conference

You are connected with two or more partners in a conference call.

Open the system menu.

**Menu**

**↓ ↑** Sub. 1 hang up? **OK**

Select the menu item and confirm. The first party is disconnected from the conference.

**↓ ↑** Sub. 2 hang up? **OK**

Select the menu item and confirm. The second party is disconnected from the conference.



Press the End call key. The conference is ended.

### Leaving a conference

Press the End call key. You exit the conference.

When one user leaves the conference, the other two users remain connected.



# Index

- A**
- Advisory tones ..... 31
  - Alarm ..... 20
  - Alarm clock ..... 20
    - switching on/off ..... 20
  - Anniversary, see Appointment
  - Appointment
    - displaying missed ..... 18
    - missed ..... 18
    - notification ..... 18
    - setting ..... 18
  - Assigning number key ..... 31
  - Authorization ..... 34
  - Automatic
    - answer ..... 30
    - redial ..... 13
- B**
- Base station
    - changing ..... 28
    - changing the name ..... 28
    - restoring to default settings ..... 33
    - setting ..... 33
  - Battery
    - charge status ..... 39
    - charging ..... 9
    - inserting ..... 8
  - Best Base ..... 28
  - Bluetooth ..... 24
    - activating ..... 24
    - changing device name ..... 25
    - copying directory (vCard) ..... 17
    - de-registering devices ..... 25
    - list of known devices ..... 25
    - registering devices ..... 25
- C**
- Calendar ..... 18
  - Call
    - accepting ..... 14
    - external ..... 13
  - Call answering ..... 30
  - Caller Melody (VIP) ..... 15
  - Calling
    - external ..... 13
  - Caring for your device ..... 35
  - Changing
    - display language ..... 29
    - earpiece volume ..... 30
    - speaker volume ..... 30
  - Changing device names (Bluetooth) ..... 25
  - Character charts ..... 37
  - Charge status of the batteries ..... 39
  - Charging cradle (handset)
    - connecting ..... 8
    - installing ..... 8
  - CLIP picture ..... 31
    - viewing in resource directory ..... 23
  - CLIP picture, in directory ..... 15
  - Color scheme ..... 29
  - Conference
    - ending ..... 44
    - leaving ..... 44
    - setting up ..... 44
  - Connect with base station ..... 28
  - Connecting the headset ..... 9
  - Contact with liquid ..... 35
  - Control key ..... 5, 11
  - Correcting incorrect entries ..... 12
- D**
- Delayed extension dialing ..... 13
  - De-registering devices (Bluetooth) ..... 25
  - Dialing
    - from the directory ..... 13
    - from the redial list ..... 13
    - using quick dial ..... 31
  - Directory ..... 15
    - copying numbers ..... 17
    - copying vCard (Bluetooth) ..... 17
    - creating an entry ..... 15
    - dialing numbers ..... 13
    - entry ..... 15
    - memory ..... 16
    - opening ..... 15
    - order of entries ..... 16
    - searching ..... 15
    - selecting an entry ..... 15
    - sending entry/list to handset ..... 17
  - Display
    - backlight ..... 29
    - changing display language ..... 29
    - color scheme ..... 29
    - memory in the directory ..... 16
    - missed appointment/anniversary ..... 18
    - screensaver ..... 29
    - setting ..... 29
  - Display icons ..... 39

Display keys .....	5, 11
assigning .....	31
icons .....	39
Do not disturb .....	31
switching off ringtone when in charging cradle .....	21
time control .....	21

## E

Earpiece volume .....	14
End call key .....	5, 13
Entering special characters .....	12
Entering special letters .....	12
Entering text .....	12
Entering umlauts .....	12
Environment .....	35
Extension systems, dialing in (delayed extension dialing) .....	13

## F

Fast access .....	13, 31
Firmware update .....	26

## G

Getting started .....	8
Gigaset QuickSync .....	22

## H

Handset	
advisory tones .....	31
automatic keypad lock .....	30
changing the settings .....	29
changing to a different base station .....	28
changing to best reception .....	28
color scheme .....	29
connecting the charging cradle .....	8
display backlight .....	29
display language .....	29
earpiece volume .....	14, 30
idle status .....	12
keypad illumination .....	30
muting .....	14
registering .....	28
registering to another base station .....	28
restoring to default setting .....	31
setting up for use .....	8
speaker volume .....	14, 30
switching on/off .....	11
using multiple .....	28
Handset charging time .....	36, 37
Handset operating time .....	36, 37

Handsfree key .....	14
Handsfree mode .....	14
Hash key .....	5
Headset (Bluetooth) .....	24
Headset port .....	10
Hearing aids .....	7
Help .....	34

## I

Icons	
alarm clock .....	20
indications .....	39
on display keys .....	39
status bar .....	39
Idle status	
returning to .....	12
Illumination, keypad .....	30
Indications, icons .....	39

## K

Key 1 (fast access) .....	5
Key, assigning .....	31
Keypad illumination .....	30
Keypad lock, automatic .....	30
Keys	
control key .....	5, 11
display keys .....	5, 11
end call key .....	5, 13
fast access .....	5
handsfree .....	14
hash key .....	5
menu .....	11
message key .....	5
on/off key .....	5
profile key .....	5
recall key .....	5
star key .....	5
talk key .....	5
volume .....	11
volume keys .....	5

## L

Language, display .....	9, 29
Liquids .....	35
List	
known devices (Bluetooth) .....	25
Locking/unlocking the keypad .....	11
Lower/upercase .....	12

**M**

Making calls	
accepting a call .....	14
external .....	13
Medical equipment .....	7
Melody	
ringtone for internal/external calls .....	31
Memory in the directory .....	16
Memory, resource directory .....	24
Menu key .....	11
Message key .....	5
Microphone .....	5
switching on/off .....	14
Missed appointments/anniversaries .....	18
Muting the handset .....	14

**N**

Number	
copying to the directory .....	17
saving in the directory .....	15
Numbers	
entering .....	12

**O**

On/off key .....	5
------------------	---

**P**

Package contents .....	8
PC interface .....	26
Phone	
setting .....	33
Picture	
as CLIP image .....	23
as screensaver .....	23
deleting .....	23
formats .....	23
renaming .....	23
Picture CLIP .....	31
Power adapter .....	7
Power consumption .....	36
Profile key .....	5
Protection from calls .....	31

**Q**

Questions and answers .....	34
-----------------------------	----

**R**

Range .....	8
Recall .....	42
Recall key .....	5
Redial list .....	13
Registering (handset) .....	28
Registering devices (Bluetooth) .....	25
Resource directory .....	22, 23, 31
memory .....	24
viewing CLIP picture .....	23
Ringtone	
changing .....	30
melody for internal/external calls .....	31
switching off when in charging cradle .....	21
time control .....	21
Ringtones .....	30

**S**

Safety notes .....	7
Screensaver .....	29
Searching in directory .....	15
Setting the date .....	9, 33, 41
Setting the system .....	33
Setting the time .....	9, 33, 41
Setting up for use, handset .....	8
Signal strength .....	39
Signal tone, see Advisory tones	
Snooze mode (alarm clock) .....	20
Sound	
deleting .....	23
format .....	23
playback .....	23
renaming .....	23
Sounds for ringtones .....	23
Speaker .....	14
Speaker volume .....	14
Star key .....	5
Status bar .....	5
icons .....	39
Switching between calling partners .....	43

**T**

Talk key .....	5
Technical data .....	36
Time control for external calls .....	21
Toggle/connect .....	43
Transfer .....	42
Troubleshooting	
general .....	34

## U

Update .....	26
Upper/lowercase .....	12

## V

Vibration alarm .....	31
VIP group, classify directory entry .....	15
VIP ringtone .....	15
Volume	
earpiece .....	30
handset speaker volume .....	30
handset speaker/earpiece volume .....	14
speaker .....	30
Volume keys .....	5, 11

## W

Warning tone, see Advisory tones