



OpenScape Desk Phone CP600/CP600E OpenScape 4000

User Guide HFA

A31003-C1000-U114-4-7619

Provide feedback to further optimize this document to edoku@unify.com.

As reseller please address further presales related questions to the responsible presales organization at Unify or at your distributor. For specific technical inquiries you may use the support knowledgebase, raise - if a software support contract is in place - a ticket via our partner portal or contact your distributor.

Our Quality and Environmental Management Systems are implemented according to the requirements of the ISO9001 and ISO14001 standards and are certified by an external certification company.

Copyright © Unify Software and Solutions GmbH & Co. KG 02/2019

All rights reserved.

Reference No.: A31003-C1000-U114-4-7619

The information provided in this document contains merely general descriptions or characteristics of performance which in case of actual use do not always apply as described or which may change as a result of further development of the products. An obligation to provide the respective characteristics shall only exist if expressly agreed in the terms of contract.

Availability and technical specifications are subject to change without notice.

Unify, OpenScape, OpenStage and HiPath are registered trademarks of Unify Software and Solutions GmbH & Co. KG. All other company, brand, product and service names are trademarks or registered trademarks of their respective holders.

Important Notes

	For safety reasons, the phone should only be supplied with power as follows: <ul style="list-style-type: none"> • using the appropriate original power supply unit, • over a LAN with PoE (Power over Ethernet), which complies with the IEEE 802.3af standard.
	Never open the telephone! Should you encounter any problems, consult system support.
	Use only original accessories! The use of other accessories is hazardous and will render the warranty, extended manufacturer's liability, and the CE and other markings invalid.

Symbol



The device conforms to the EU Directive as attested by the CE marking. The CE Declaration of Conformity and, where applicable, other existing declarations of conformity as well as further information on regulations that restrict the usage of substances in products or affect the declaration of substances used in products can be found in the Unify Expert WIKI at <http://wiki.unify.com/> under the "Declarations of Conformity" section.



The adjacent symbol indicates that any electrical and electronic products installed and sold in countries of the European Union to which the WEEE2 Directive 2012/19/EU applies should be disposed of separately from the municipal waste stream in appropriate collection systems.

Information concerning the proper disposal of your Unify product in the business-to-business market segment is available from your local sales representative in Unify or partner sales.

Software update

During a software update, the phone must not be disconnected from the power supply unit and/or the LAN. An update action is indicated by messages on the display and/or by flashing LEDs.

Care and cleaning instructions

- Never spray the phone with liquids as the penetrating fluids can lead to malfunctions or may damage the device.
- Do not use substances such as alcohol, chemicals, solvents or scouring agents, as these substances can lead to surface damage.
- Clean the phone with a soft and slightly damp cloth.

Online resources

This document along with additional information is available online at: <http://www.unify.com/> → Support.

Technical notes, current information about firmware updates, frequently asked questions, and lots more can be found on the Internet at: <http://wiki.unify.com/>.

License information

- More information about the EULA and Open Source licenses you can find on the Web interface, section "Licenses" → page 165.

Installation location information

- The telephone may only be operated using the LAN cabling internally in the building. The device should be connected to the IP infrastructure using a shielded LAN cable: Cat-5 for 100 Mb/s or Cat-6 for 1000 Mb/s. Make sure in the building installation that this cable shielding is earthed.
- The telephone is designed for operation in a sheltered environment within a temperature range of 5 °C to 40 °C.
- Putting the telephone in a room with higher levels of dust can result in a reduced service life of the device.
- Do not place the device in direct sunlight or other sources of direct heat. This is liable to damage the electronic components and the casing.
- Do not install the phone in bath or shower rooms.

Contents

Important Notes	3
Symbol	3
Software update	3
Care and cleaning instructions	3
Online resources	3
License information	4
Installation location information	4
General information	11
About this manual	11
Icons used in the manual	12
Displays for describing operation	12
Selected action	12
Action not selected	13
Conversation display	13
Service	15
Intended use	15
Telephone type information	15
Speakerphone quality and display legibility	15
Multi-line phone	15
Getting to know the OpenScape Desk Phone CP600/CP600E	16
The User Interface of Your Telephone	16
Ports on the underside of the phone	17
Using network ports more efficiently	18
OpenScape Key Module 600	18
Keys	19
softkeys	19
Audio controls	19
Mode keys	19
Navigator	20
Dialpad	21
Different display interfaces	23
Conversations	23
Main menu	23
Context-dependent displays	25
Action with softkey	25
Action via dialpad	26
Action with navigation key	26
Operating your OpenScape Desk Phone CP600/CP600E . . .	27
Navigating in menus	27
Conversations	28
Opening details of a conversation or conducting a call	29
Editing conversations	30
Searching for conversations or contacts	33
Display the history of a conversation	34
Deleting conversations	35
Telephony interface	36
Telephony view	36

Programmable keys	38
Programmable keys in the Favorites menu	38
Programmable keys on the OpenScape Key Module 600	40
Meaning of LED displays on Function keys	40
Display function of the function keys	41
User settings	42
User settings	43
Administration	47
Setting up the phone	48
Display	48
Display adjustment	48
Display brightness	48
Energy saving mode	49
Contrast for the OpenScape Key Module 600	50
Brightness for the OpenScape Key Module 600	51
Idle screen	52
Idle screen activate	52
Upload your images for Idle screen	53
Screen type set-up for the Idle screen	53
Automatic start of the Idle screen	54
Set up display time for Idle screen	55
Audio	56
Change connection volumes	56
Adjust ringer volume in call or while idle	56
Deactivate the ringer	57
Activate alert tone	57
Room acoustic	58
Ringer	59
Setting headset port use	60
Call settings	61
Activate/deactivate second call	61
Central speed dial numbers	61
Speed dial with extension	62
Individual speed dial numbers	62
Programming function keys	63
Function keys setup	63
Setting up a selected dialing key	64
Making calls	66
Receiving a call	66
Answering a call via the handset	66
Answering a call via the loudspeaker (speakerphone mode)	66
Answering a call via the headset	66
Answering a call with the DSS key	67
Accepting calls for a colleague in the team	67
Selectively picking up a call	68
Addressed via speakerphone (direct speaking)	68
Switch microphone on/off	69
Ending a call	69
Dialing/Calling	70
Dialing with handset off	70

Dial with the handset on-hook	70
Dialing with connected headset	70
Choose from conversations	71
Calling with a direct station select (DSS) key	71
Redial	71
Returning a missed call	71
Using speed dial	72
Forwarding calls	73
Use call forwarding	73
Using callback	76
Saving a callback	76
Accepting a callback	76
Checking/deleting a saved callback	77
During the call	78
Switch to speakerphone	78
Switching to the handset	78
Open listening in the room during a call	78
Parking a call	79
Call second individual (consultation)	81
Transferring a call	81
Accepting a second call (Call waiting)	82
Carry out DMTF-suffix/dial tone	83
Rollover	83

Using Bluetooth 84

Discoverability	84
Pairing	84
Pairing NFC-enabled devices	84
Using a Bluetooth headset	85
Connecting the Bluetooth headset	85
Testing a Bluetooth headset	86
Transferring contacts	87
Receiving a vCARD	87
Sending a vCard	88
Using a Bluetooth conference phone	89
Using a Bluetooth device	90
Incoming HFAG call	90
Connected HFAG call	90
Outgoing HFAG call	91
HFAG call states in Main Menu Screen	92
HFAG call states in Conversations Screen	93
Anonymous mode	94
Using Bluetooth keyboard	95
Keyboard pairing modes	96
Using Bluetooth "Remote button"	97
Trigger on reconnect	99
Bluetooth settings	100
Activating and deactivating Bluetooth	100
Changing the Bluetooth name of your OpenScape CP600	100
Managing Bluetooth devices	101
Blacklist for Bluetooth devices	105
Removing a Bluetooth device from the blacklist	106
Eddystone Beacon	106

Phoning on several lines (multi-line)	108
Line keys	108
Line usage	109
Preview	110
Accepting calls on the line keys	111
Accepting calls in the order provided	111
Answering a prioritized call	111
Activating/deactivating ringing mode (call)	112
Forwarding calls for lines	112
Call transfer	113
Dialing with line keys	114
Call waiting with a direct station select (DSS) key	115
During the call	116
Holding calls on line keys	116
Holding and then reaccepting a call on a line key	116
Exclusively holding and reaccepting a call on a line key	116
Directed line pickup	117
Saved number redial for a particular line (stored phone number)	117
Most recent extension number dialed for a particular line	118
Saving an extension number for “saved number redial to line”	118
Line mailbox	119
Retrieving messages	119
Identifying the line used	120
Alternately phoning on several lines	120
Ending connection on a line key	120
Entering a call on a line (three-way)	121
Allowing or preventing entry	121
Preventing entry	122
Witness or tape connection	123
Accepting calls for the manager in the secretarial office	124
Accepting calls for the manager during a call	124
Switching calls directly to the manager	125
Accepting calls on the manager’s phone	125
Accepting a call for another “Management/Secretarial” team	125
Using the second phone for the manager	126
Activating/deactivating second call for the manager	126
Using buzz function	127
Messenger calls	127
Setting a representative for the secretarial office	127
Other settings and functions	128
Save appointments	128
Appointment function	128
Save appointments	128
Using timed reminders	129
Using a different phone for a call in the same way as your own	129
Identify yourself on another phone	129
Switch off identification on another device	130
Set your own connection to another phone (Mobility)	131
Mobility variants	131
Connect to “guest telephone”	131
Connect to “home phone” again	133

Transfer connection to next phone	134
OpenScope 4000 as house call system (intercom system)	135
System-wide voice calling	136
Speaker call in a group	137
Announcement (Broadcast) to all members of a management group	139
Forward calls for another connection	140
Save destination for other phone - Activate call forwarding	140
Save destination for fax /PC/busy stations- call forwarding activated	141
Check/turn off call forwarding for other phone	142
Check/deactivate call forwarding for fax/PC/busy stations	143
Change call forwarding for other connection	143

Special functions for parallel call (ONS) 144

Leaving/entering a hunt group	145
---	-----

Private / Security 146

Activating/deactivating do not disturb	146
Speaker call protect on/off	147
Caller ID suppression	147
User password	147
Locking the phone to prevent misuse	150
Locking the phone in the system	150
Lock local phone	150
Secure calls	153
Query status in idle mode	153
Querying the status when connected	153
Information about secure calls	153
Identifying anonymous callers ("tracing")	154

Local phone settings 155

Audio settings	155
Volumes	155
Set local ringtones	156
Select and configure call type	156
Ringer mode	157
Insecure call alert	158
Block dialing for outgoing calls	158
Setting up Exchange access	159
SD-Card	160
Displaying network information	161
Resetting user data	163
Initiating the reset	163

Web interface 165

General	165
Launching the web interface	165
.	165
Licenses	165
Administrator pages	165
User pages	166
User menu	166

Fixing problems	170
Responding to error messages on the display	170
Contact partner in case of problems	171
 Key terms	 172

General information

About this manual

This document contains general descriptions of the technical options, which may not always be available in individual cases. The required features must therefore be individually defined in the terms of the contract.

If a particular function on your phone is not available to you as described, this may be due to one of the following reasons:

- The function is not configured for you and your telephone. Please contact your system administrator.
- Your communication platform does not feature this function. Please contact your sales partner for information on how to upgrade.

This User Guide is intended to help you familiarize yourself with the OpenScape Desk Phone CP600/CP600E and all of its functions. It contains important information on the safe and proper operation of the OpenScape Desk Phone CP600/CP600E. These instructions should be strictly complied with to avoid operating errors and ensure optimum use of your multifunctional telephone in the network.

This User Guide should be read and followed by every person installing, operating or programming the OpenScape Desk Phone CP600/CP600E.



For your own protection, please read in detail the section dealing with safety. Follow the safety instructions carefully in order to avoid endangering yourself or other persons and to prevent damage to the unit.

These operating instructions are designed to be simple and easy to understand. Providing clear step-by-step instructions for operating the OpenScape Desk Phone CP600/CP600E.

Administrative tasks are dealt with in a separate manual. The Quick Reference Guide contains quick and reliable explanations of frequently used functions.

Icons used in the manual

Tips



Refers to a setting established via the web-interface.



Indicates additional important information in relation to handling.



Indicates required intervention by the administrator.

Displays for describing operation

Selected action

Original illustration on display



Step-by-step illustration in the User Guide

A dark background is not used in the step-by-step illustration in order to ensure legibility in the User Guide.

The information area on the left is shown in a left-aligned field.

When an action is selected, it will be shown right-aligned in green. The action is executed by selecting the softkey.

The selected function can alternatively be confirmed using the **OK** key on the navigator (→ page 20).

Andre-Marie Ampere
3336

Consult

OK

Action not selected

Illustration on display



Step-by-step illustration in the User Guide


Start transfer



If an action is not selected, it is shown right-aligned in a light color. The associated softkey is also shown. The action can be executed by pressing the softkey without the action being selected.

Conversation display

When the phone is idle, the first entry in the conversation list is selected.

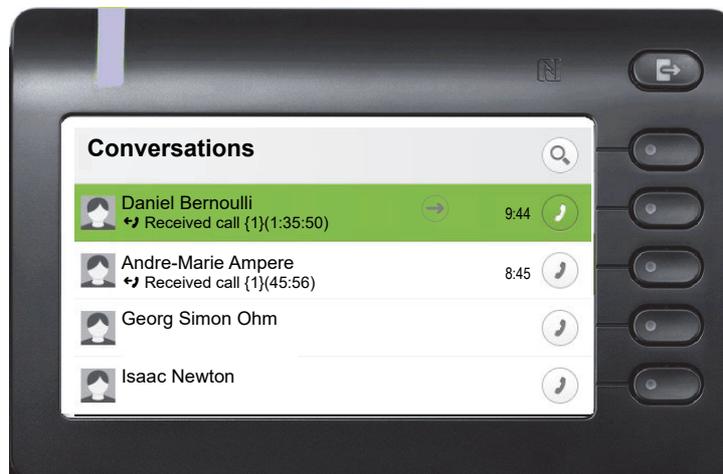

Information displayed for a selected conversation

Daniel Bernoulli 11:22

Received call {1} (1:35:50)

If a conversation (contact and history at the same time) is selected in the list, it is highlighted in green. This description is only used if it aids understanding. This is the usually what is displayed:

Service



The service department can help you only if you experience problems or defects with the phone itself.

Should you have any questions regarding operation, your specialist retailer or network administrator will be glad to assist you. For queries regarding connection of the telephone, please contact your network provider.

If you experience problems or defects with the phone, please dial the service number for your country.

Intended use

The OpenScape Desk Phone has been developed as a device for voice transmission and connection via a LAN, and should be placed on a desk or mounted on a wall. Any other use is regarded as unintended.

Telephone type information

The identification details (exact product designation and serial number) of your telephone can be found on the underside of the base unit. Specific details concerning your communication platform can be obtained from your administrator. Please have this information ready when you contact the service department regarding faults or problems with the product.

Speakerphone quality and display legibility

- To ensure good speakerphone quality, the area in front of the telephone (front right) should be kept clear.
The optimum handsfree distance is approx. 50 cm.
- Proceed as follows to optimize display legibility:
 - Turn the phone and tilt the display so that you can view the display head-on and thus eliminate reflections.

Multi-line phone

Your OpenScape Desk Phone CP600/CP600E is a "multi-line telephone." This means that multiple lines can be configured, which is not the case with single-line phones. Each line is assigned an individual phone number that you can use to make and receive calls.

Getting to know the OpenScape Desk Phone CP600/CP600E


The following sections describe the most frequently used controls and displays.

The User Interface of Your Telephone



1	You can make and receive calls as normal using the handset .
2	The graphic display permits intuitive operation of the phone → page 23. Please note that the screen is greyscale on CP600E.
3	Use the Menu key to open the main menu.
4	Use the Navigator to navigate through the applications on your telephone → page 20.
5	You can use the softkeys to activate a function or open a menu → page 19.
6	The audio keys are provided to allow you to optimally configure the audio features on your telephone → page 19.
7	Incoming calls, new voice messages, and missed calls are visually signaled via the notification LED → page 40.
8	The dialpad can be used to enter phone numbers and write text → page 21.
9	Use the call forwarding key to open a menu where you can set up variable call forwarding, for example, if UC is not used → page 24.
10	NFC transmitter (logo: ) for simple Bluetooth pairing → page 84. Please note that Bluetooth and NFC are available only on CP600.

Ports on the underside of the phone

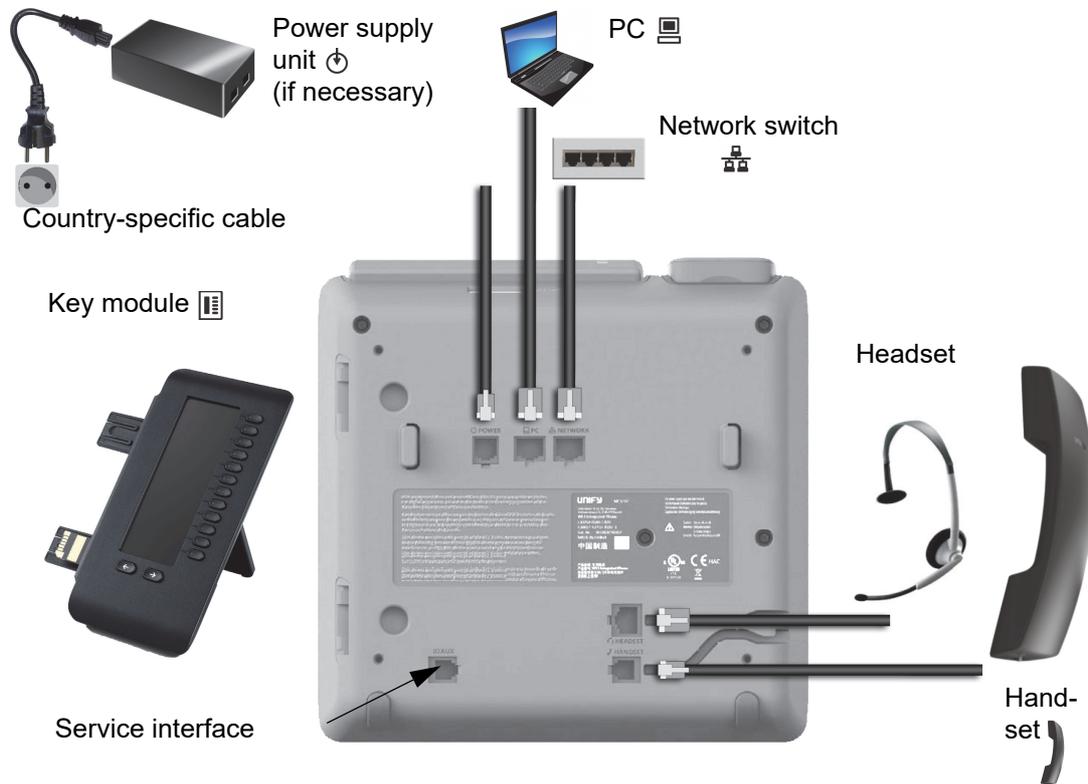

Properties of your OpenScape Desk Phone CP600/CP600E

Display type	4.3" color graphic display, 480 x 272 pixels. Please note that the screen is greyscale on CP600E.
Illuminated display	✓
Full-duplex hands-free listening	✓
Headset	✓
Bluetooth 2.1 BR/EDR and Bluetooth 4.1 LE → page 100.	✓ Please note that Bluetooth is not available on CP600E.
10/100/1000 Mbps Switch → page 18	✓
Web-Based Management (WBM) → page 165	✓
notification LED (red/green/orange)	✓
OpenScape Key Module 600 optional	✓

Using network ports more efficiently

The OpenScape Desk Phone CP600/CP600E has a Gigabit Ethernet switch. This means that you can also connect a PC with a Gigabit LAN port to the LAN directly via the phone. The option for connecting the telephone and PC must first be activated on the telephone by your administrator.



Using this connection option saves one network port for each switch used and requires shorter network cables.

OpenScape Key Module 600

The OpenScape Key Module 600 is a key module attached to the side of the phone that provides an additional 12 illuminated, programmable Function keys at two levels. These keys can be populated and used according to your needs → page 38.



The diagram shows the OpenScape Key Module 600. You can attach up to four OpenScape Key Module 600s to OpenScape Desk Phone CP600 and up to two OpenScape Key Module 600s to OpenScape Desk Phone CP600E.

Keys

softkeys



Key	Function when key is pressed
	Activates the function of the left display option or opens another menu. Used in the Favorites menu as a Function key → page 38.

Audio controls

Audio keys



Key	Function when key is pressed
	Activate/deactivate the loudspeaker → page 66.
	Use headset → page 66.
	Activate/deactivate microphone (also for speakerphone mode) → page 69.

Volume

Use the controls to adjust the properties of your phone, for example the volume.



Mode keys

You can switch to the relevant application using these keys.



Key	Function when key is pressed
	Switch to the main menu → page 23.
	Configure call forwarding → page 24.

Navigator

This control allows you to navigate in lists and perform actions in the selected area.

Operation	Functions when key is pressed
 Press the  key.	In conversation mode: <ul style="list-style-type: none"> • Open subscriber information In settings: <ul style="list-style-type: none"> • Go down one level
 Press the  key.	In lists and menus: <ul style="list-style-type: none"> • One level back In input fields: <ul style="list-style-type: none"> • Delete character to the left of the cursor
 Press the  key.	In lists and menus: <ul style="list-style-type: none"> • Scroll down • Press and hold: Skip to the end of the list/menu
 Press the  key.	In lists and menus: <ul style="list-style-type: none"> • Scroll up • Press and hold: Skip to the start of the list/menu
 Press the  key.	Execute an action for the selected entry.

Dialpad

Numeric input

If you enter a number when the telephone is in idle mode, for example, an input field opens automatically for numeric input. Only the digits 0 to 9 as well as the * and # characters can be entered via the keypad in "123 mode" (indicated at the left margin of the input field).




➡ Alphanumeric labeling of dial keys is also useful when entering vanity numbers (letters associated with the phone number's digits as indicated on the telephone spell a name, e.g. 0700 - PATTERN = 0700 - 687837).

Text input

In cases where text input is possible, you can use the dialpad to input text, punctuation, and special characters in addition to the digits 0 to 9 and the hash and asterisk symbols. To do this, press the numerical keys repeatedly.

Example: To enter the letter "U" in the "Company" field, press the number **8^{TUV}** key on the dialpad twice. All available characters for this key are displayed during input. After a short while, the character in focus is displayed in the input field.

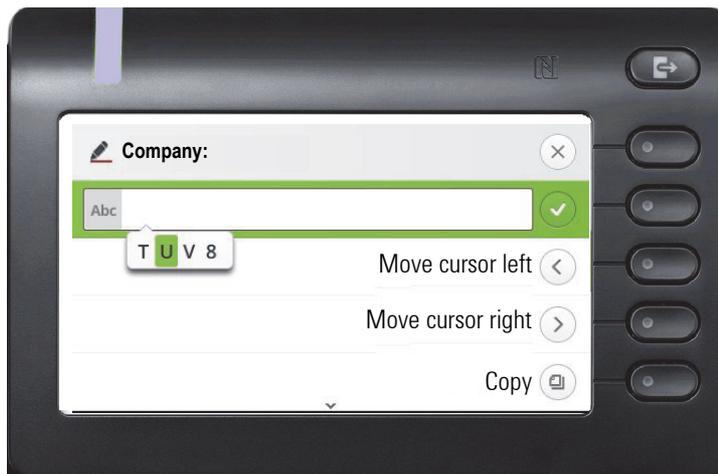

➡ If you want to enter a number in an alphanumeric input field, hold down the corresponding key to bypass the character selection.

Complete your input:



Press the softkey for to complete your input.

Character overview (depends on the current language setting)

Key	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x	14x	15x	16x	17x
	1	ل	;	=	\$	\	&	[]	{	}	%					
	a	b	c	2	ä												
	d	e	f	3													
	g	h	i	4													
	j	k	l	5													
	m	n	o	6	ö												
	p	q	r	s	7	ß											
	t	u	v	8	ü												
	w	x	y	z	9												
	0	+															
	..	*	¹	#	,	?	!	,	"	+	-	()	@	/	:	_

Multi-function keys

Key	Function during text input	Function when held down
	Type special characters.	<ul style="list-style-type: none"> • 2 seconds: Ringer off • 3 seconds: Beep sound instead of ringer
	Switch between uppercase and lowercase text and number entry. <ul style="list-style-type: none"> • Abc mode • ABC mode • 123 mode 	Activate the phone lock → page 150.
	Type special characters (not in 123 mode)	



Different display interfaces

Your Open Scape Desk Phone CP600 is fitted with a color graphic display → page 17, in which different contents are displayed depending on the particular situation.

Your Open Scape Desk Phone CP600E is fitted with a greyscale graphic display → page 17, in which different contents are displayed depending on the particular situation.



Conversations

The conversations list is called in the main menu with the Conversations option and is a collection of contact data and data from the call log. See → page 28 for detailed information.

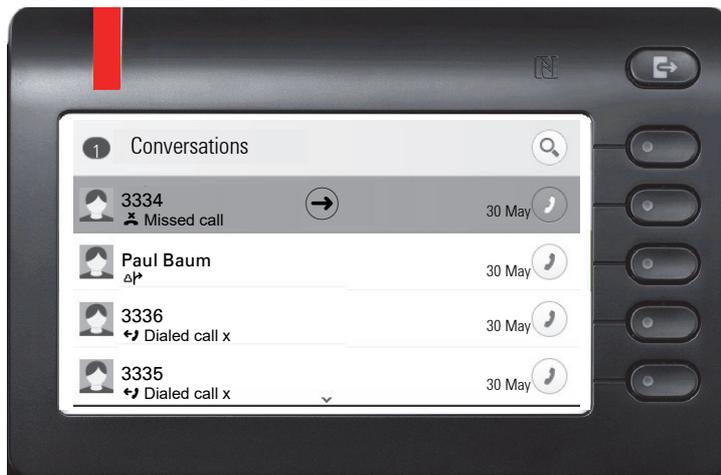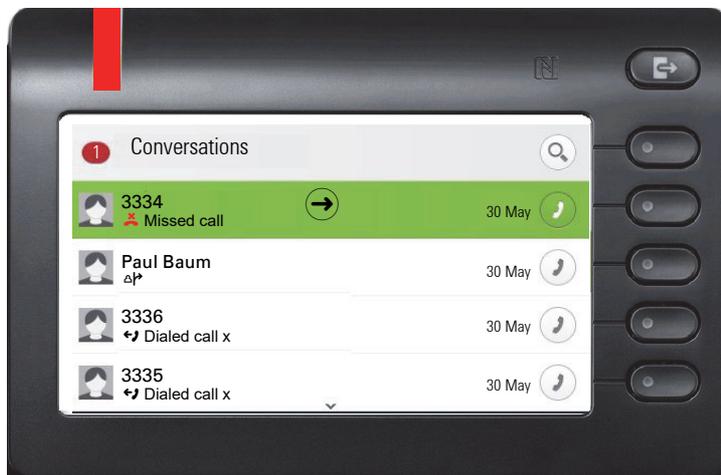

Main menu

Use the  key to access the main menu in any situation. The time, day of the week, and date, as well as the subscriber's own phone number, are displayed in the Notification area. The main menu can do much more, as can be seen from the screenshot. As the name suggests, it is the starting point for the entire menu tree. However, as telephony features take priority on a telephone, it is the conversation list that is used as the start display.

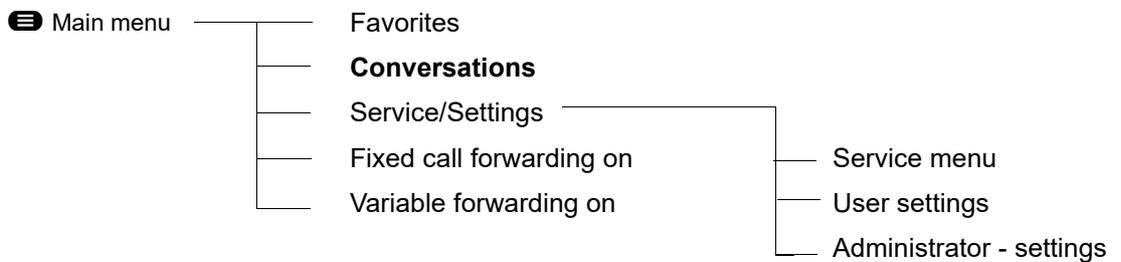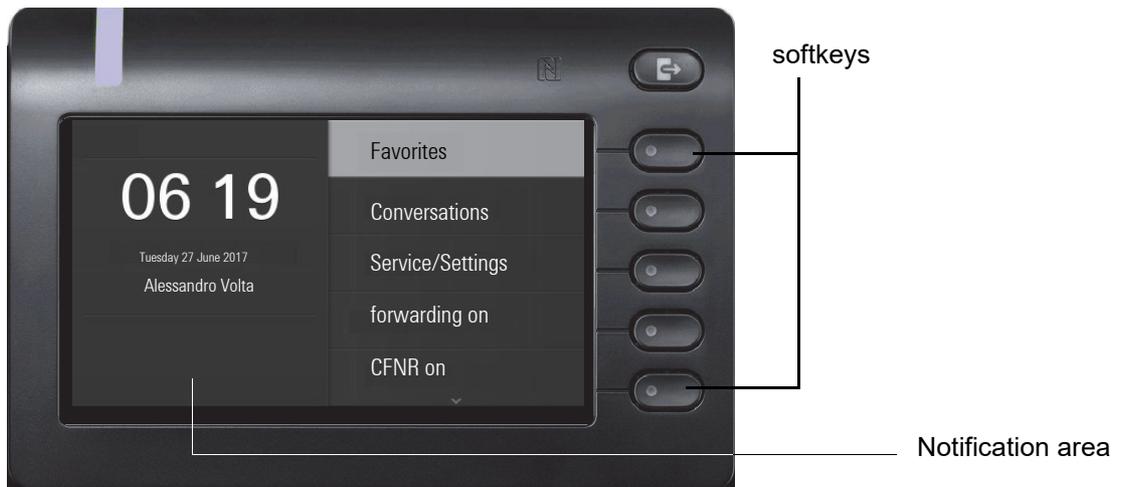

Moreover, different icons represent different situations and options:

Icon	Meaning
	The ringer is deactivated → page 57
	The ringer is set to a beep → page 57
	The "Do not disturb" function is activated → page 146
	The phone lock is activated → page 150
	The Bluetooth function is activated → page 84

Context-dependent displays

Depending on the situation, the graphic display on your OpenScape Desk Phone CP600/CP600E shows different content, to which you can respond intuitively.

Action with softkey



Press the top softkey to start an alphanumeric search → page 33.



Use the softkey to dial the respective subscriber.

You can select a conversation beforehand using the navigator keys  and  and open the details of the conversation with the  key → page 29.


Action via dialpad

Press any key on the dialpad to start dialing a phone number with automatic phone number search.



As soon as you enter the first digits, an input field opens for selecting the phone number and you will be shown conversations that match the input to date in the corresponding positions. If the conversation is already shown in the list before your input is complete, you can dial the number immediately using the associated softkeys → page 29 or start a call with a new number.

Action with navigation key

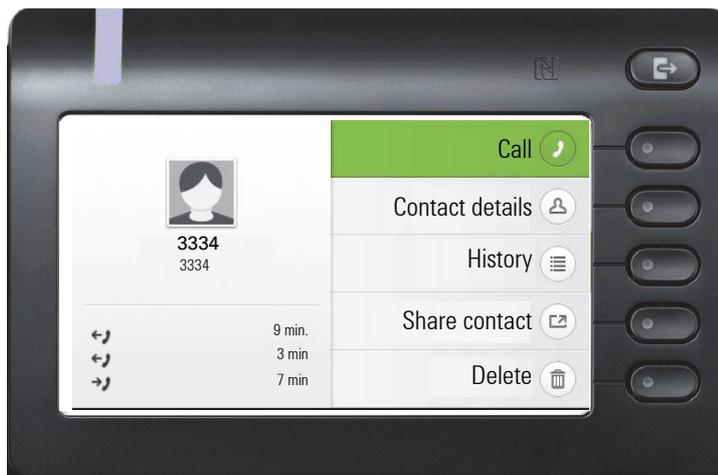

You can open a selected conversation using the navigator's  key in order to see the associated details → page 25.

Operating your OpenScape Desk Phone CP600/CP600E

The following descriptions provide an overview of how to operate your phone.

 Before looking at the functions and settings, you should set up the User password to protect your phone against unauthorized use → page 147.

Navigating in menus

Browsing lists

You can use the navigator keys to scroll through entries and confirm the functions you want → page 20.

Opening context menus

If the arrow  appears beside a selected entry, a context menu is available for this entry → page 25.

Conversations

A conversation is a contact with a call history. New conversations are created or updated for

- a previously answered call
- an outgoing call
- a missed call
- an Exchange entry following automatic synchronization
- receipt of a vCard via Bluetooth

A telephone number is automatically supplemented with a name if this information is available from the communication system or the telephone number is found in a company directory (LDAP).

The list is ordered chronologically based on the last interaction. The latest interaction appears at the top of the list. Active calls are displayed before the conversations.




The status of a conversation is displayed with icon and text.

Icon	Text
	Active call
	Missed call (current)
	Missed call (old)
	Dialed call
	Answered call

Opening details of a conversation or conducting a call


You can open a selected conversation using the navigation key  or start a call using the softkey  or the navigation key . If a conversation is not selected, you can start a call using the softkey .

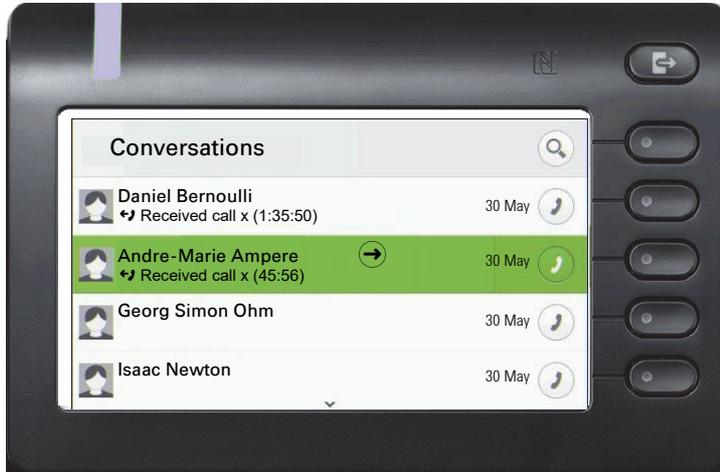


If you open the details of the conversation using the  key, you will be shown the following for example:



Editing conversations

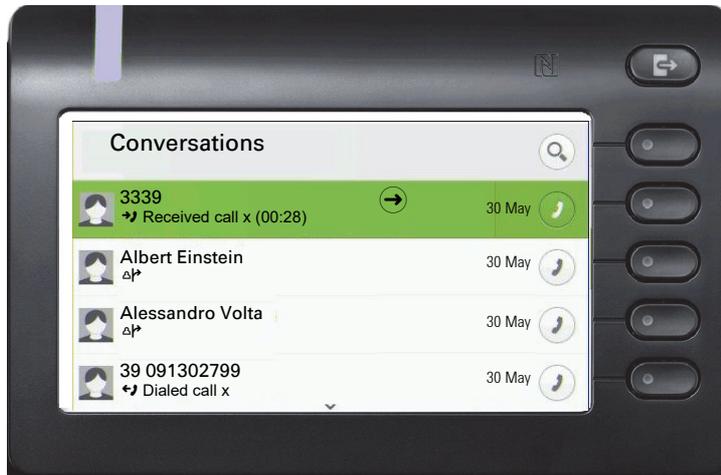

Open the details of the conversation using the  key.

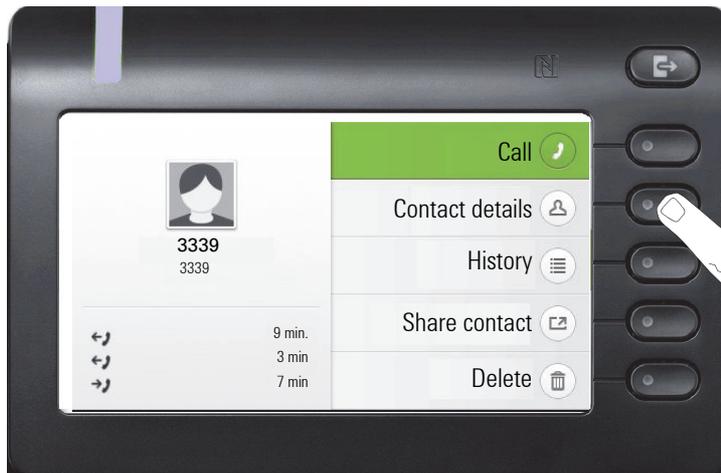

Use the softkey to open the "Contact details" menu.



Press the softkey for  to access edit mode. You can complete the following fields for a contact:

- Last name:
- First name:
- Work 1:
- Work 2:
- Mobile:
- Home:
- Company:
- Address 1:
- Address 2:
- Position:
- E-mail:
- Avatar:




Press the softkey for  to enter the last name.



Delete the digits using the  key and enter the last name. Press the softkey in the input field to complete the input for this field.



Use the  or  key to switch, for example, to "First name" and enter the first name here if appropriate.

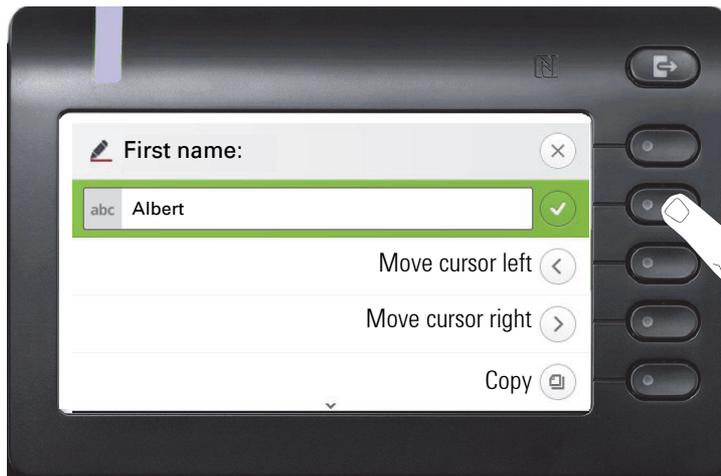

Enter the first name and complete the input for this field with the softkey.



Save the contact data. You can add missing entries subsequently.

These inputs or changes to existing information are stored locally in the phone.

Searching for conversations or contacts

There are several ways to search for conversations or contacts. If you know the telephone number, you can,

lift the handset or


press the speaker key or

press the headset key

and begin entering the digits.



You can immediately dial a located subscriber whose phone number contains the number, e.g. 33 in this case, by pressing the softkey.

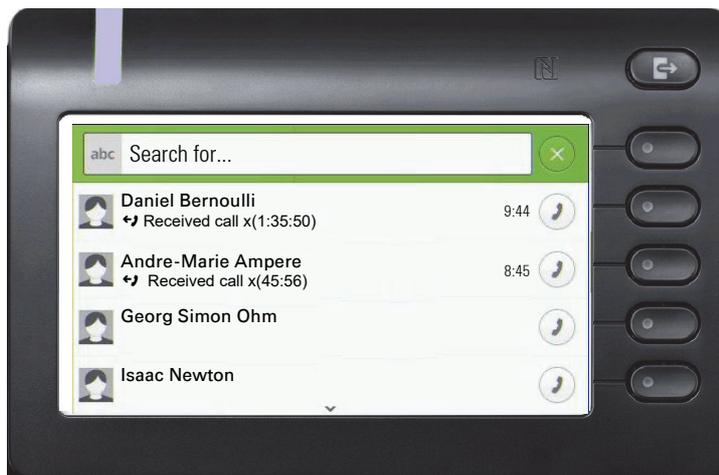


You can start a targeted alphanumeric search for a contact in any directory (telephone, Exchange, or LDAP server) using the first softkey  in the conversation list.


Use the  key to switch from alphanumeric to numeric.

Display the history of a conversation


The current history of a conversation is shown directly in the conversation list. The histories of other calls can be viewed under Details or also directly with the History option during a call.

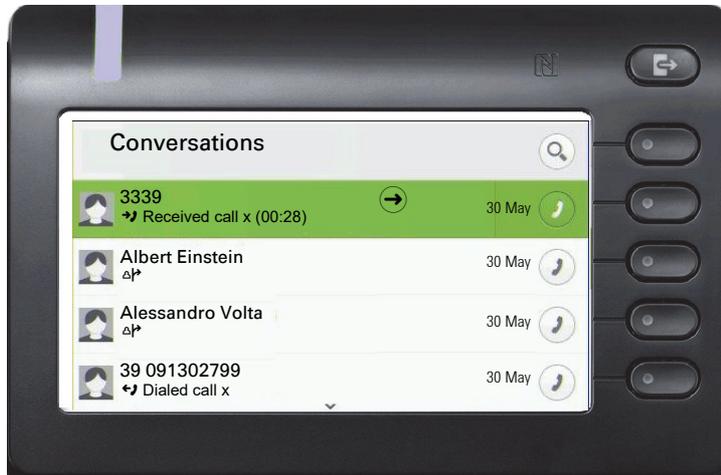

Open the details of the conversation using the  key.

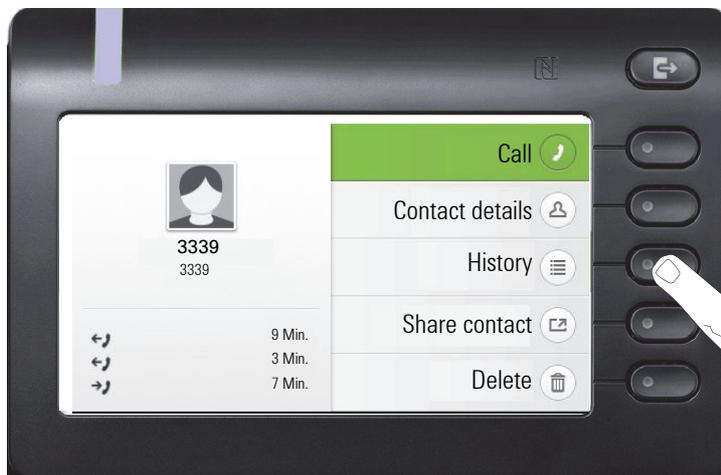


The latest three histories are shown in the information field on the left below the name/number of the subscriber. Press the softkey for  to view a list of the last 10 possible histories. Then scroll if necessary using the  or  key.

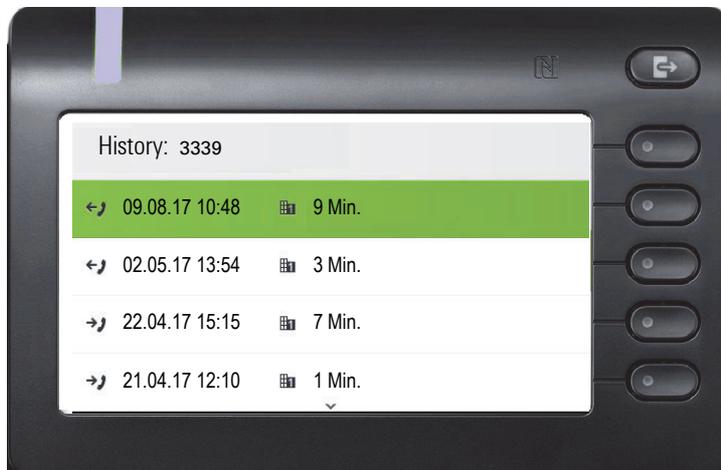


Deleting conversations

If you have for example selected a subscriber mistakenly and you do not wish to call them and must hang up, this call will appear in your call history. You can delete this entry again immediately. Entries for incoming calls that you no longer need or entries from V-Cards can also be removed from the list.

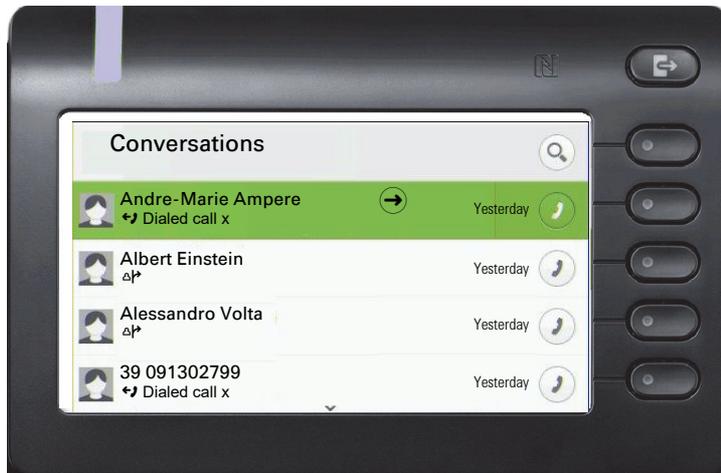

Open the relevant entry using the Navigator key .

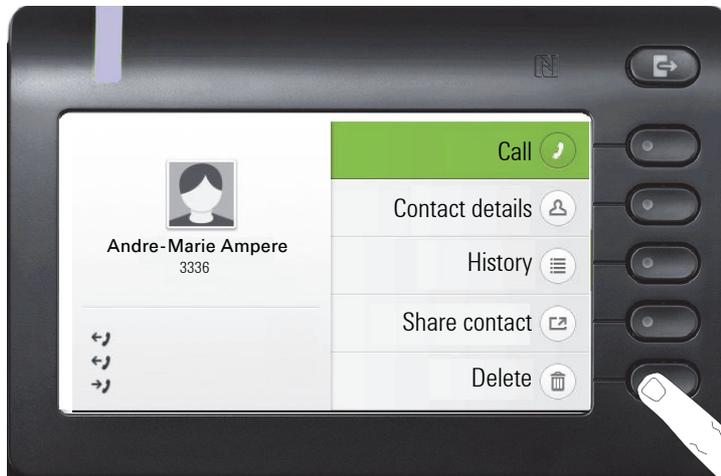

Press the softkey for  to delete the entry. There is no confirmation prompt.

Telephony interface

Telephony view

Incoming call

Your phone rings and the notification LED flashes. In addition to the "classic" telephone features, additional information and functions are offered on the display:



When conducting a call:



Switching to a different menu during a call

Use the  or  keys to open the main menu and from there, for example, change the Brightness of the display in the Settings.



Selecting the first softkey will take you back to the previous display.

Icons in call state



Icon	Meaning
	The phone rings
	After dialing, the other subscriber's phone rings
	The call is active.
	Your call partner has placed the call on hold.
	The voice connection is secure.
	The voice connection is not secure.

Programmable keys

Programmable keys are available to you in the Favorites menu or on an optionally connected OpenScape Key Module 600 → page 40.

Programmable keys in the Favorites menu

Through the Favorites menu you have 16 programmable keys (four pages each with four keys), to which you can save functions and phone numbers. You can program preferred functions that are not offered in menus. It makes sense to assign a key to "Layer switching" to reach the second level. To program this key, follow these steps:



Open the following menu using the softkey for Favorites:



Press the softkey for  to set up the first page with four possibilities.




Press the second softkey to populate the first of four function keys on page 1.



Press the second softkey to switch to the list of functions.



Use the  key to select the "Change." Confirm with the softkey.

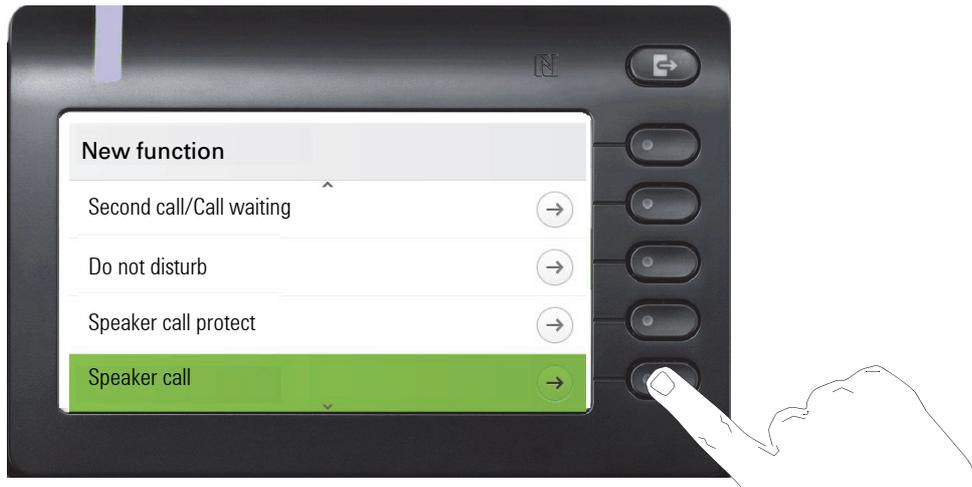

Select the desired function via the softkey and confirm with "Enter."

Programmable keys on the OpenScape Key Module 600

The OpenScape Key Module 600 has 12 keys to which you can assign functions or numbers at two levels. Use the  and  keys to switch to the required level when using a function or selected dialing key.

 Increase the number of programmable function or selected dialing keys by connecting an additional key module → page 18.

The OpenScape Key Module 600 has display lines, each of which is assigned to a key. The name of the function or a destination, an action icon, and a status icon are displayed.

The status of a function is shown by the LED display for the corresponding key.


 Line and direct station selection (DSS) keys can only be programmed by the administrator via the Service menu → page 47.

Meaning of LED displays on Function keys

Status LED	Meaning of Function key
 Off	The function is deactivated.
 LED is flashing ¹	Indicates the status of the function (e.g. green or red).

¹ In this manual, flashing key LEDs are identified by this icon, regardless of the flashing interval. The flashing interval represents different statuses, which are described in detail in the corresponding sections of the manual.

Display function of the function keys

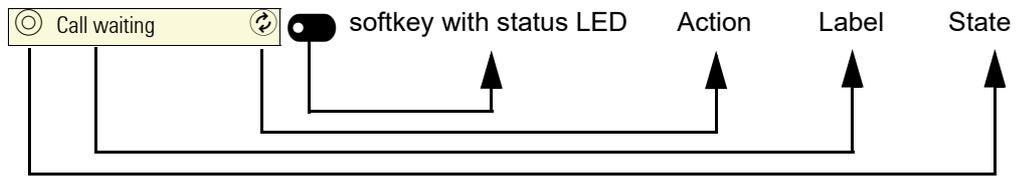


User settings

Use the  key to open the main menu and then switch to the settings.



The menu consists of a configuration area both for users and for administrators.

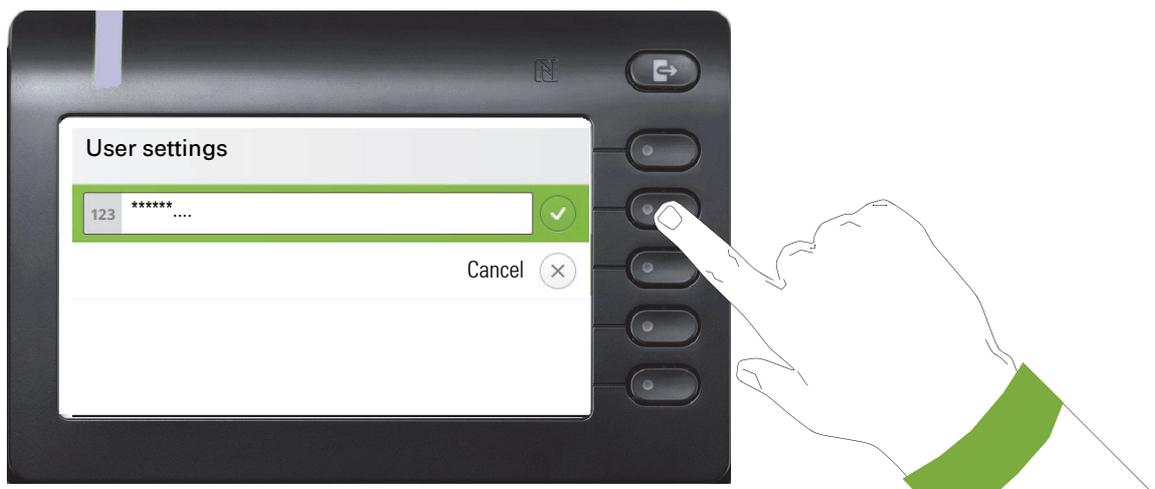


If you have already assigned a user password, you must enter it here. You can find out how to set up the password at → page 147.

User settings

Menu

You can adjust local settings for your OpenScape Desk Phone CP600/CP600E using the "User settings" menu.

The menu structure consists of several levels.

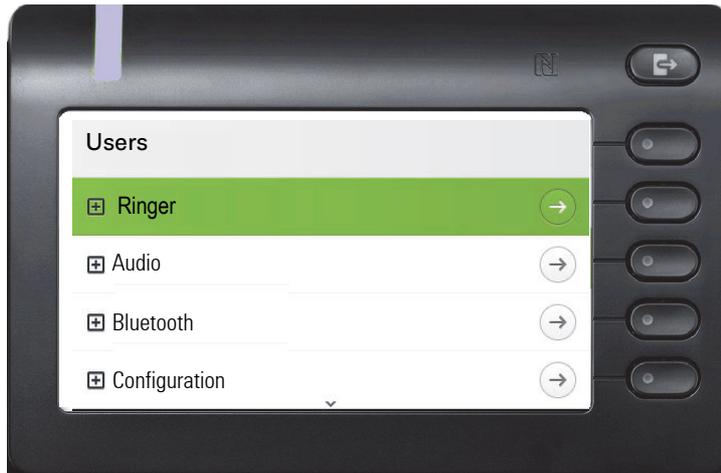

➡ You can also configure all settings via the **Web interface** of your OpenScape Desk Phone CP600/CP600E → page 165.

Switches

The menus contain switches for activating and deactivating functions. Example:



Press the softkey on "Insecure call alert" to enable the function. The switch is moved to the right. Alternatively you can use **OK** to operate the switches.



Press the softkey for  to save your new setting.

Parameters

You can set values in some submenus.



Press the softkey for  to open the setting.



Press the softkey for example on Echoing. The setting is changed and you return to the previous menu.



Exit the menu.

Levels

You can use menus with levels to adjust the volume or brightness, for example. An example of display brightness is given here. Switch to the telephone settings menu



and open the display menu with the softkey.



Open the menu for the brightness setting



Adjust the brightness to the desired level. Use the **- +** key to do this. The display is adjusted immediately.



Complete the setting by pressing the softkey for .



Save your new settings.

Administration

You can access the administration area via the "Admin" function and by entering the administration password.

Refer to the administration manual for your phone for more detailed information on this topic.

 During a software update, the phone must not be disconnected from the power supply unit, the LAN line or the phone line.

An update action is indicated by messages on the display and/or by flashing LEDs.

Setting up the phone

Display

Display adjustment


You can tilt the display unit. Adjust the display unit so that you can clearly read the screen.

Display brightness

You can customize the display brightness according to your current lighting conditions.

You can also configure this setting via the Web interface → page 165.

If nec. Press the Main Menu key.

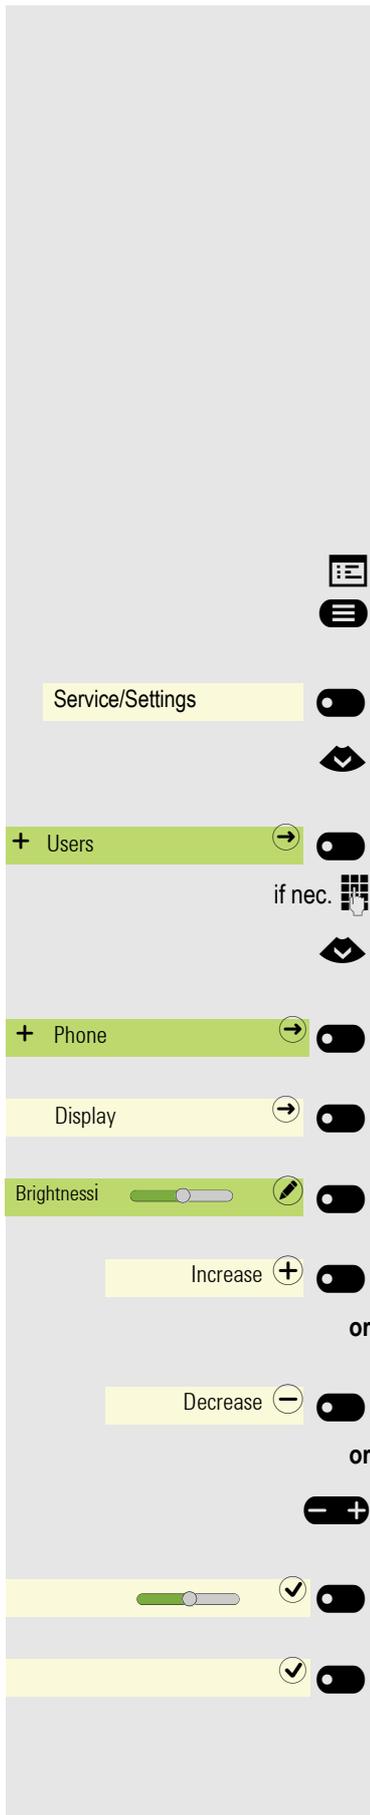

Open using the softkey

Select "Users."

Open using the softkey

if nec. Enter and confirm the User password.

Select "Phone."

Open using the softkey.

Open using the softkey.

Open using the softkey.¹

Use the softkey to brighten the display.

or

Use the softkey to dim the display


or

Adjust using the toggle key

Confirm the setting with the softkey.

Save the settings.

1. The display shows the current setting

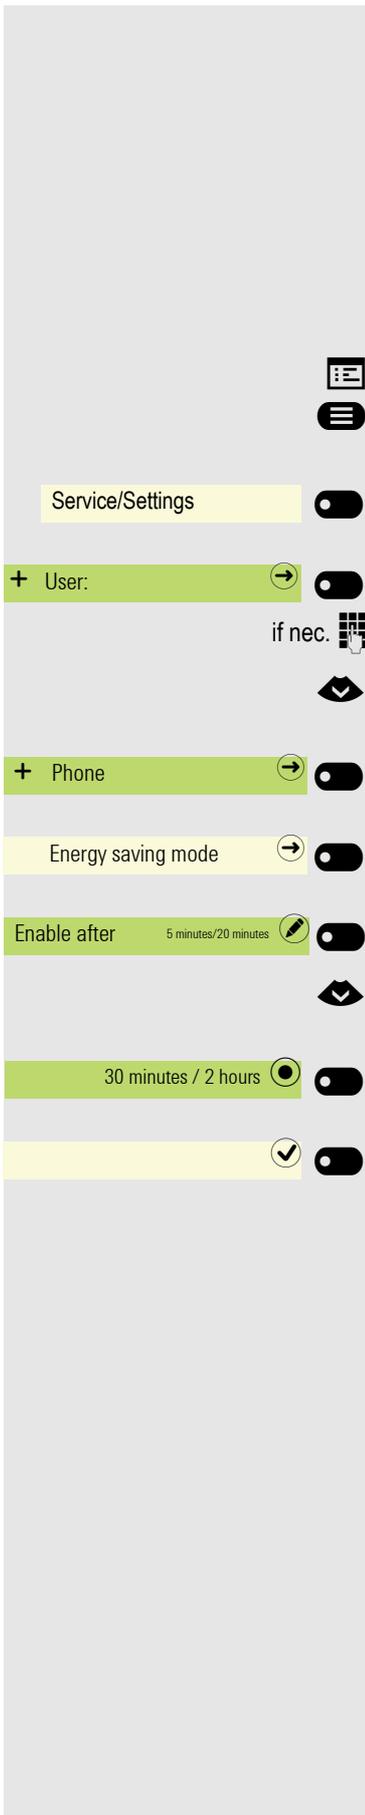

Energy saving mode

Select the inactivity time after which the OpenScape CP 600/600E should automatically dim or turn off the backlight.

You can select the following time combinations for backlight dim / switch off:

- 1 minute/5 minutes
- 5 minutes/20 minutes
- 30 minutes/2 hours
- 45 minutes/4 hours
- 60 minutes/8 hours

You can also configure this setting via the Web interface → page 165.

If nec. Press the Main Menu key.

Open using the softkey.

Open using the softkey.

if nec. Enter and confirm the User password.

Select "Phone".

Open using the softkey.

Open using the softkey.


Open using the softkey.¹

Select the new time in the list

Using the softkey, confirm the new background lighting settings.

Save the setting with the softkey.

1. The display shows the current setting

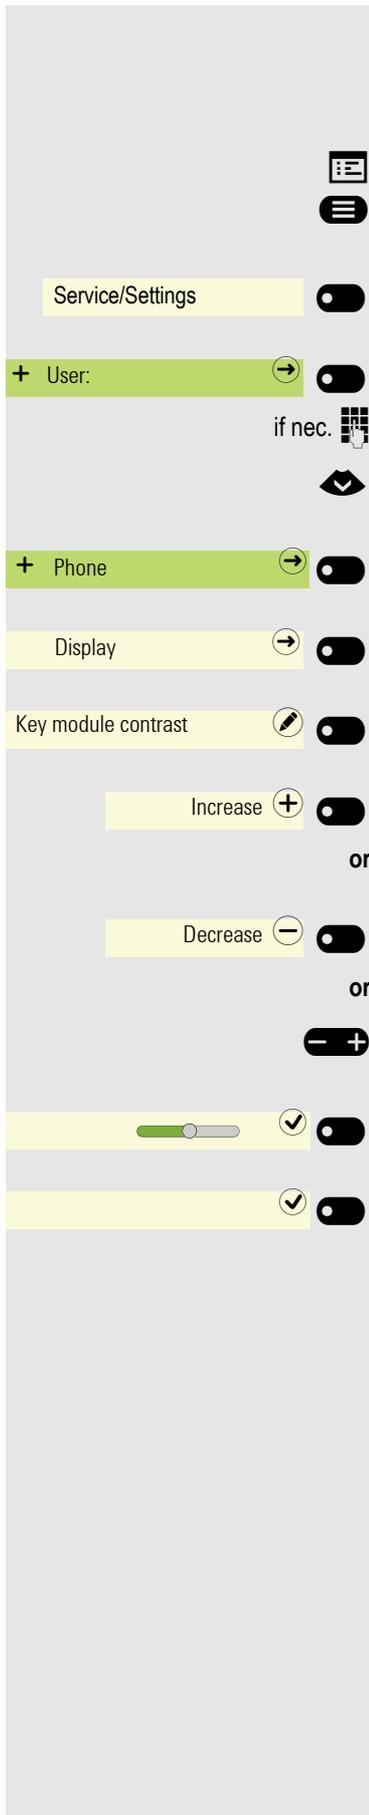

Contrast for the OpenScape Key Module 600

If you have connected an OpenScape Key Module 600, you can adjust the key label contrast to suit your ambient lighting.

You can also configure this setting via the Web interface → page 165.

If nec. Press the Main Menu key.

Open using the softkey.

Open using the softkey.

if nec.

Enter and confirm the User password.



Select "Phone".

Open using the softkey.

Open using the softkey.

Open using the softkey.¹

Increase (+)

Use the softkey to increase the contrast.

or

Decrease (-)

Use the softkey to reduce the contrast.

or



Adjust using the toggle key

Confirm the setting with the softkey.

Save the settings.

1. The display shows the current setting

Brightness for the OpenScape Key Module 600

When you have connected a OpenScape Key Module 600, you can adjust the key label brightness to suit your ambient lighting.

You can also configure this setting via the Web interface → page 165

If nec. Press the Main Menu key.

Open using the softkey.

Open using the softkey.

if nec.  Enter and confirm the User password.

Select "Phone".

Open using the softkey.

Open using the softkey.

Open using the softkey.¹

Use the softkey to brighten the display.

or

Use the softkey to dim the display.


or

Adjust using the toggle key

Confirm the setting with the softkey.

Save the settings.

1. The display shows the current setting

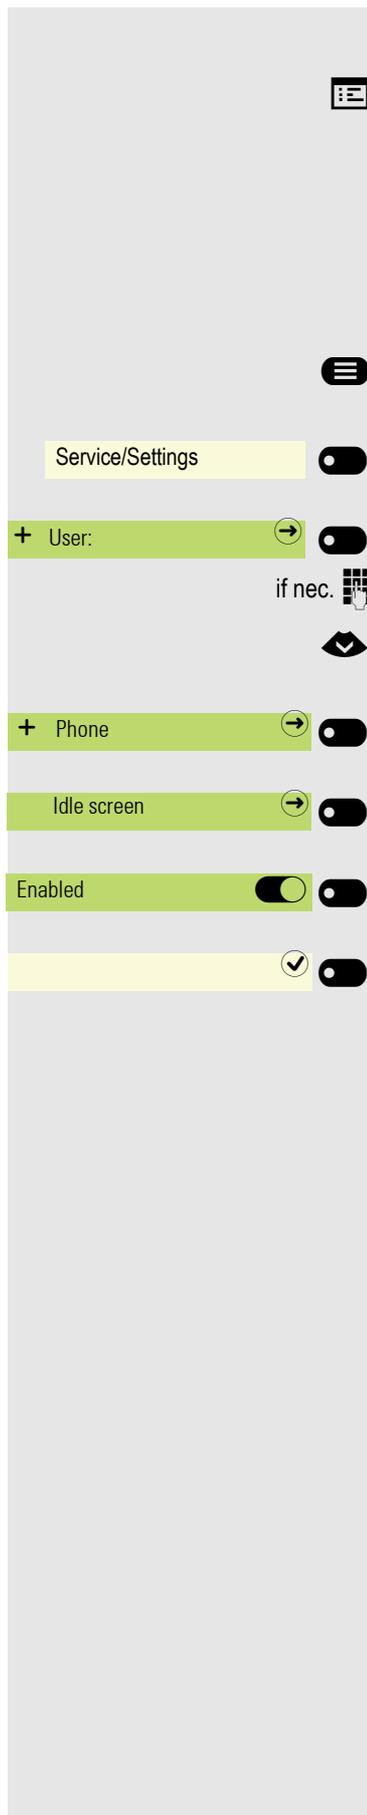

Idle screen

You can also configure the screensaver settings via the Web interface. → page 165

Idle screen activate

Activate a Idle screen for idle mode.

If nec. Press the Main Menu key.

Open using the softkey.

Open using the softkey.

if nec. Enter and confirm the User password.

Select "Phone".

Open using the softkey.

Open using the softkey.

Activate with the softkey.

Save the setting by selecting the softkey.

Upload your images for Idle screen

To install your own images for Idle screen, transfer the images using the Web interface → page 165.

Once you have opened the web interface click "File transfer" and "Slideshow images," then click "Choose the image file you wish."

Search for suitable images on your computer or in the network and save your search results. You can upload several images in succession.

Your new images will be used next time you start the Idle screen.

Screen type set-up for the Idle screen

If nec. Press the Main Menu key.

Open using the softkey.

Open using the softkey.

if nec. 

Enter and confirm the User password.



Select "Phone".

Open using the softkey.

Open using the softkey.


Open using the softkey.¹



Select other option

Confirm using the softkey to set up a slide show, for example.

Save the setting by selecting the softkey.

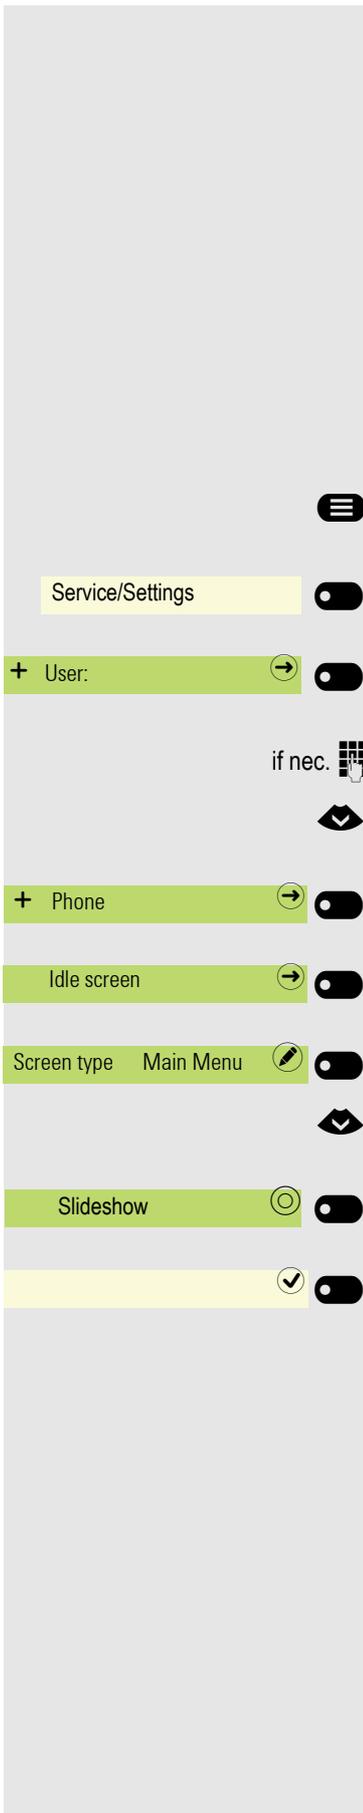


1. The display shows the current setting

Automatic start of the Idle screen

Select how long OpenScape CP 600/600E should be idle before the Idle screen screensaver automatically activates.

You can choose from the following settings:

- 0 minutes (deactivated)
- 5 minutes
- 10 minutes
- 20 minutes
- 30 minutes
- 60 minutes
- 120 minutes

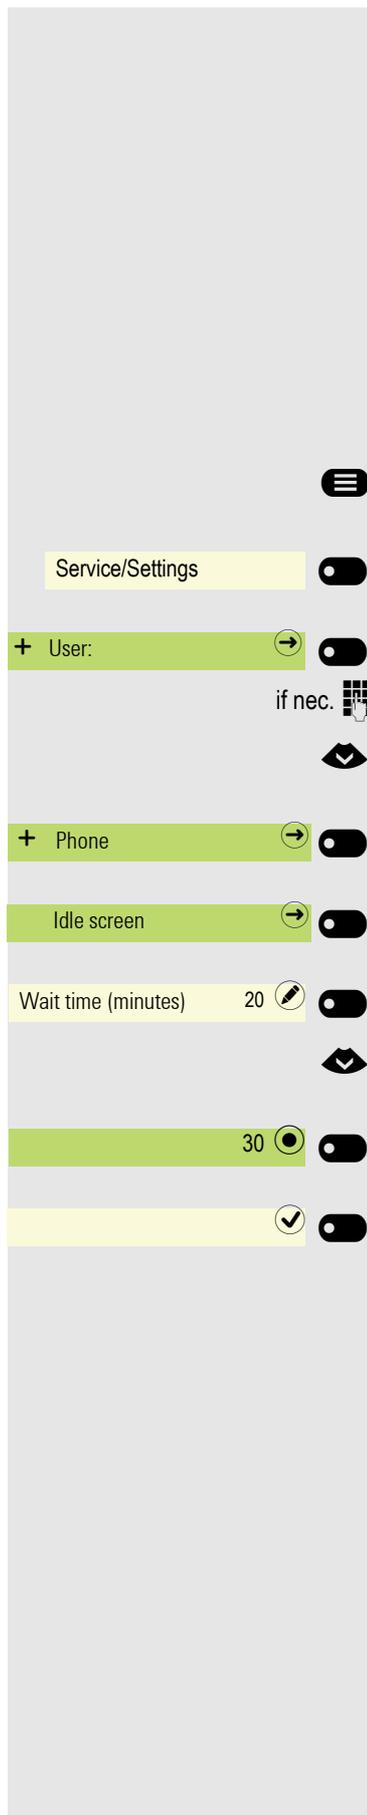

If nec. Press the Main Menu key.

Open using the softkey.

Open using the softkey.

if nec.  Enter and confirm the User password.

 Select "Phone".

Open using the softkey.

Open using the softkey.

Open using the softkey.¹

 Select the new time in the list

Confirm with the softkey to set the new time.


Save the setting with the softkey.

1. The display shows the current setting

Set up display time for Idle screen

Set the intervals at which the Idle screen images change here. The following fade times are possible:

- 5 seconds
- 10 seconds
- 20 seconds
- 30 seconds
- 60 seconds

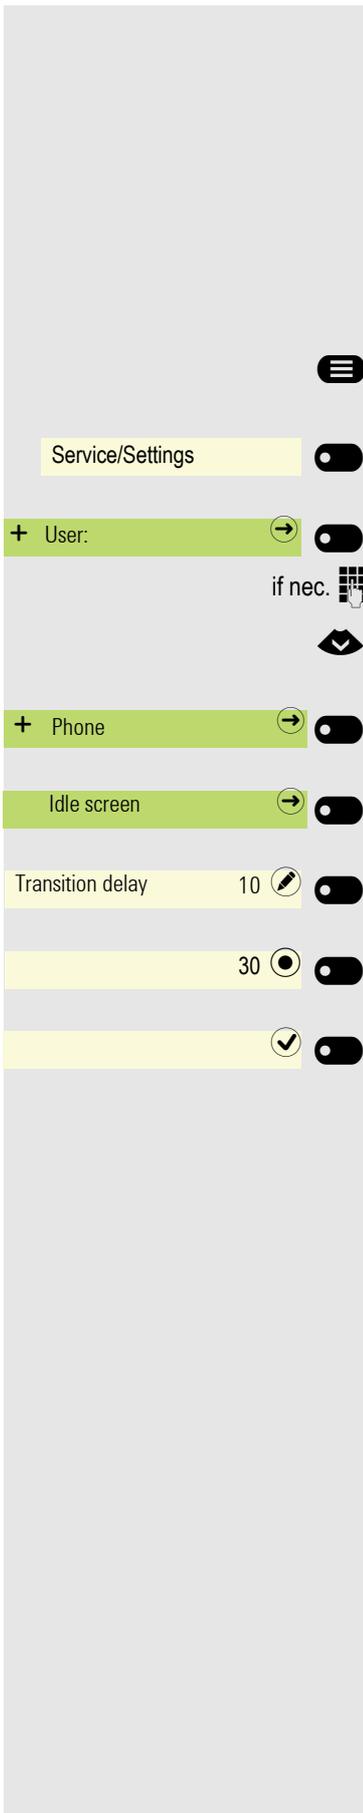

If nec. Press the Main Menu key.

Open using the softkey.

Open using the softkey.

if nec.  Enter and confirm the User password.

Select "Phone".

Open using the softkey.

Open using the softkey.

Open using the softkey.¹

Confirm with the softkey to set the new time.

Save the setting with the softkey.

1. The display shows the current setting

 
Audio

Change connection volumes

Change the following settings:

- Handset volume
- Speaker volume
- Headset volume
- Call loudspeaker volume


You can also adjust volume settings from the user menu → page 43.



Set volume louder or quieter. Press the key until you reach the desired volume.

Adjust ringer volume in call or while idle

 You can also adjust volume settings from the user menu → page 43.



Press the key until you reach the desired volume.

Deactivate the ringer

If you do not want to be disturbed by the phone ringing for an incoming call, you can switch the ringer off.

Deactivating



Hold down the key until the "ringer off" icon appears.



Activating



Hold down the key until the "ringer off" icon goes out.



Mute active ringer



You can mute the active ringer for an incoming call and only for that call. Long press the key while the phone is ringing and only the active ringer is muted. Ringer mode is not changed.

If you want to change the ringer mode, see the section "Deactivating" → page 57 and "Activating" → page 57.


Activate alert tone

You can turn the ringer off and select a short alert tone instead.



Hold down the key until the notification and icon for "Activate alert tone" appears on the display.



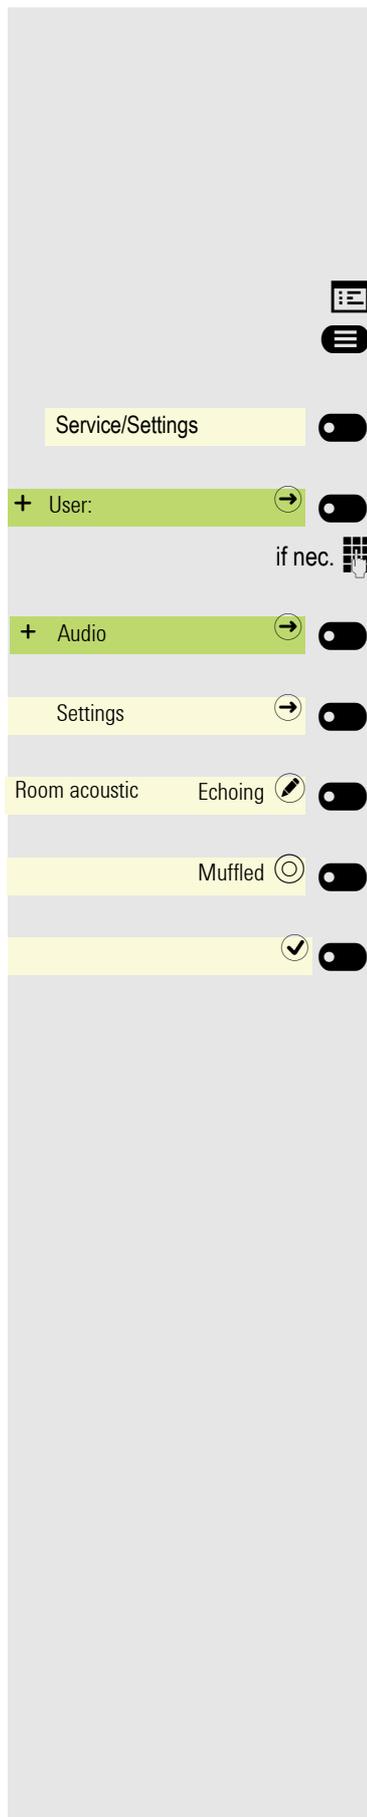

Room acoustic

To ensure that the other party can hear you properly in speakerphone mode, you can adjust the phone to the room acoustics by choosing one of the following room character conditions:

- Normal
- Echoing
- Muffled

You can also configure this setting via the Web interface → page 165.

If nec. Press the Main Menu key.

Open using the softkey.

Open using the softkey.

if nec.  Enter and confirm the User password.

Open using the softkey.


Open using the softkey.

Open using the softkey.¹

Use the softkey to set to Muffled, for example.

Save the setting by selecting the softkey.

1. The display shows the current setting

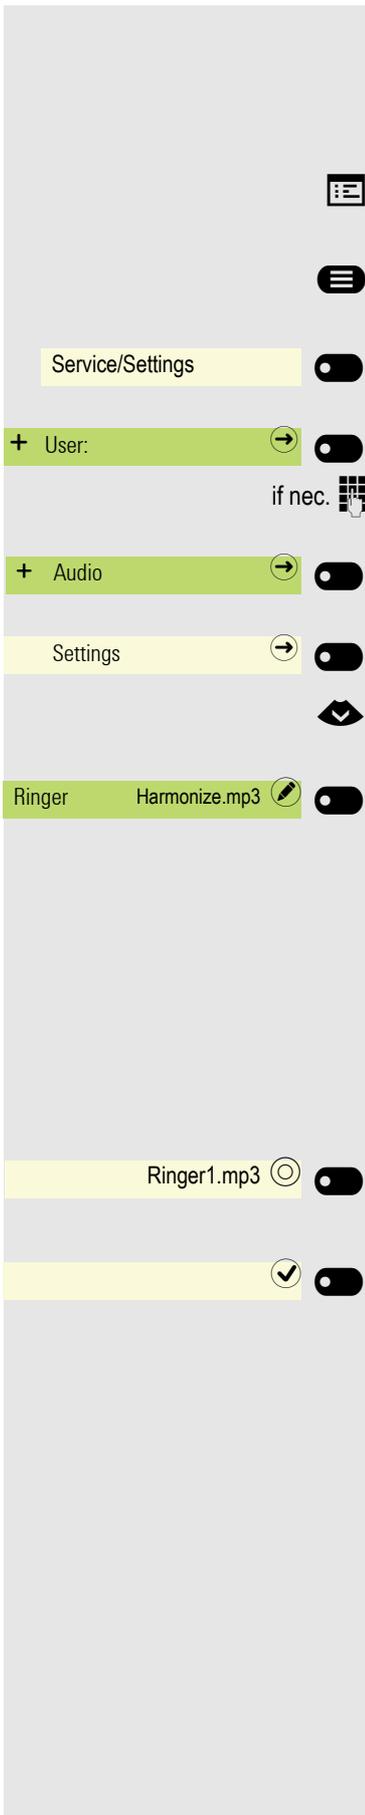

Ringer

Select your preferred ring tone from the available audio files. If no individual audio files are available, the "Pattern" ring tone is preset. To upload your own files in ".mp3" or ".wav" format, please consult your administrator.

You can also configure this setting via the Web interface → page 165.

If nec. Press the Main Menu key.

Open using the softkey.

Open using the softkey.

if nec.  Enter and confirm the User password.

Open using the softkey.

Open using the softkey.

Switch to Ringer.

Open using the softkey.¹

You will be offered the following default options:

- Pattern
- Harmonize.mp3
- Ringer1.mp3
- Ringer2.mp3
- Ringer3.mp3
- Ringer4.mp3
- Ringer5.mp3
- Ringer6.mp3

Confirm with the softkey to switch. You will immediately hear the associated ringer melody.

Save the setting with the softkey.

1. The display shows the current setting

Setting headset port use

You can also configure this setting via the Web interface → page 165.

If nec. Press the Main Menu key.

Open using the softkey.

Open using the softkey

if nec.  Enter and confirm the User password.

Open using the softkey.

Open using the softkey.

Select the headset port.


Open using the softkey.¹

You will be offered the following options:

- Wired headset
- Cordless headset
- Conference unit

Confirm with the softkey to switch.

Save the setting with the softkey.

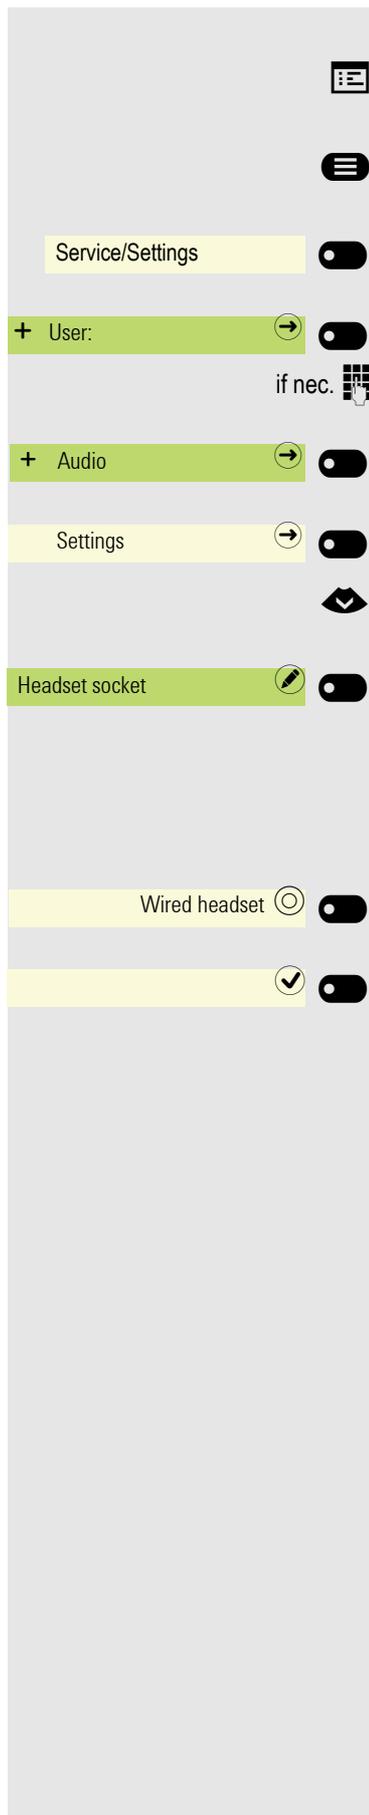

1. The display shows the current setting

Call settings

Activate/deactivate second call

You can determine whether or not you would like to accept second calls (call waiting) during a conversation.

 If your telephone belongs to an ONS group (parallel calls → page 144), please note the following special features:

In addition to triggering an alert tone on the engaged telephone, the second call will also be signaled with a ring tone on the other telephones in the ONS group.



Switch? ▾

Open menu → page 19.

Select and confirm.

Second call? ▾

Select and confirm.

Turn on? ▾

Select and confirm.

or

Turn off? ▾

Select and confirm.

Central speed dial numbers

 Speed dial numbers are set up by your responsible administrator.

Speed dial numbers are stored in the system.

The central speed dial directory can be obtained, e.g. in printed format, from your responsible administrator.

Speed dial with extension



Speed dial numbers with sequences are set up by your responsible administrator.

Functions including the dialing number and further access codes can be saved to a speed dial number.

Since the number of characters for a speed dial entry is limited, speed dial numbers (up to 10) can also be linked together in order to handle longer sequences.

Example:

When you leave the office, you want to block your telephone and simultaneously activate call forwarding. Both of these actions can be stored as a sequence using a speed dial number.

Likewise, in order to unlock the phone and cancel the call forwarding, a speed dial number can be stored.

Individual speed dial numbers



This function must be set up by your responsible administrator.

The keys **0+** to **9 wxyz** can be assigned to 10 frequently used phone numbers.

Open menu → page 19.

Confirm.

Select and confirm.

Press the required line key. When the relevant key is selected, the call number is displayed.

Confirm.

Enter the phone number.

Confirm.

Your entry is saved.

Use speed dial → page 72.



Destinations? ▾

Speed dial? ▾



New entry? ▾



Save? ▾

Programming function keys

Through the Favorites menu, you have 16 programmable keys (four pages each with four keys), to which you can save functions and phone numbers. You can program preferred functions that are not offered in menus. It makes sense to first assign a key as a "Shift key" to reach the second level.

This functions in the same way as for the Key Module KM600.

Function keys setup

 The selection of available functions depends on the configuration. Please ask your administrator if you are missing a function.

Example: Configure a second call

Hold down the Function key on the OpenScape Key Module 600 to which a function is to be assigned until the programming prompt is displayed.

or



If nec. Press the Main Menu key.

Favorites

Open using the softkey.

Favorites (1/2)

Page 1



Select desired page (1 to 4).

Press and hold the Function key to be programmed.



Select "Assign telephony function"

Assign telephony function



Confirm.

Change

Confirm.



Select "Second call/Call waiting"


Second call/Call waiting



Confirm.

Save

Confirm. The key is programmed.

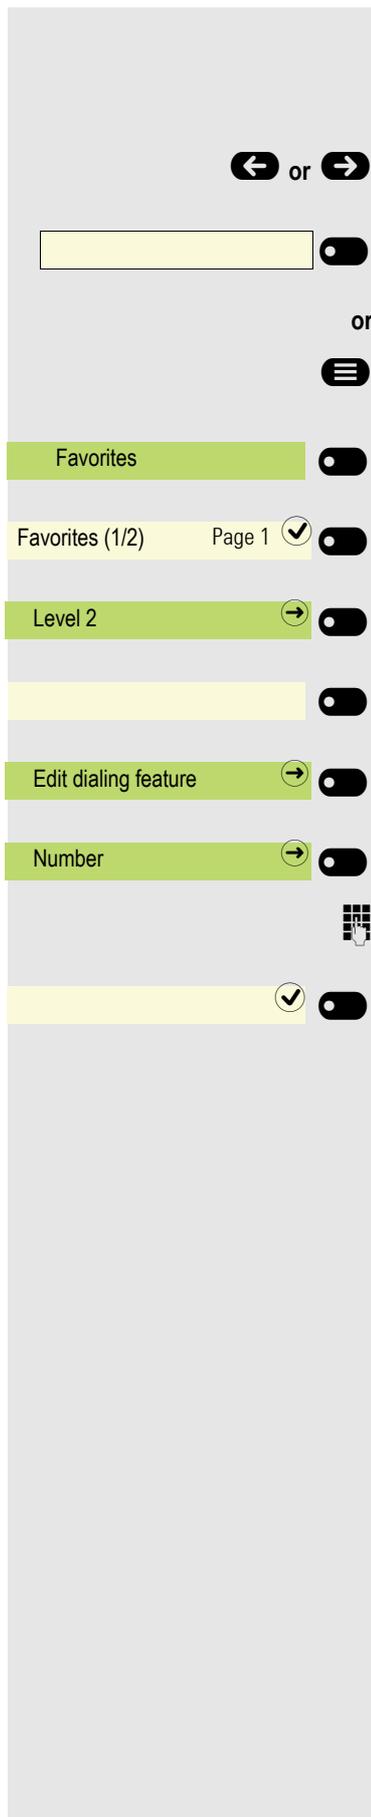

Setting up a selected dialing key

If you want to set up a selected dialing key on the second level of the OpenScape Key Module 600, you can switch to this level beforehand.

Switch to the second level if necessary.

Hold down the Function key on the OpenScape Key Module 600 to which a function is to be assigned until the key programming menu is displayed.

If nec. Press the Main Menu key.

Open using the softkey.

Select desired page (1 to 4).

Switch to the second level if necessary.

 
Press and hold the Function key to be programmed.

Confirm.

Confirm

Enter the phone number and confirm.

Save the setting with the softkey. The key is programmed.



Making calls

 To better understand the steps described here, it is recommended that you read the introductory chapter "Getting to know the OpenScape Desk Phone CP600/CP600E" → page 16 .

Receiving a call

 Any settings you are currently making on the phone will be interrupted by an incoming call.

Answering a call via the handset

The phone rings.



Lift the handset¹

Answering a call via the loudspeaker (speakerphone mode)

The phone rings.



Press key. LED is lit¹.

Answering a call via the headset

Requirement: A headset is connected.

The phone rings. The key *  flashes.



Press the key¹.

1. Set the volume → page 56.

Answering a call with the DSS key

Requirement: You have configured DSS keys on your phone → page 16.

The phone rings.

Press the DSS key.

The LED is lit. You can speak handsfree.

or

Lift the handset¹.

 Note the meaning of the LED displays on the direct call keys → page 40

Accepting calls for a colleague in the team

If a team member does not take a call within 15 seconds (depending on the setup), the other team members will hear an alert tone.

In idle mode

The phone rings. "Call for" is shown in the display.

Lift the handset

and

Press the flashing "Pickup" key (→ page 38). You have picked up the call.

The LED is lit. You can speak handsfree.

or

Lift the handset¹.

During the call

press the flashing „Pickup“ key.

 
The first individual is on hold while you are connected to the second.

To end the second conversation and return to the first


Confirm in order to disconnect



or



or

 

End and go back? ▾

1. Set the volume → page 56.

Selectively picking up a call

You hear another phone ringing, whose number you know, or a colleague invites you to take over a call on a particular phone.

Lift the handset.

Select and confirm.

Enter the telephone number on which you wish to take over the call. You can then accept the call¹.

Display called extension

When the call number is not shown in a call pickup group in which you want to take over a call (display is deactivated by default for pickup group), you can enter the code for “display on request” after picking up the phone. Ask your administrator about this code.

Lift the handset.

Enter the system code for “display on request” (if nec. ask the administrator).

Once you have entered the code, the phone number will be shown.

Addressed via speakerphone (direct speaking)

You are being spoken to directly by a colleague over speakerphone. Handsfree und Open listening are automatically activated.

The speaker key is lit.

Answering in hands-free mode is immediately possible.

or

Lift handset and answer.

 Speak directly to your colleague → page 71.

Switch microphone on/off

To prevent the other party from listening in while you consult with someone in your office, for example, you can temporarily switch off the handset microphone or the handsfree microphone

Ending a call



or



or




or

Disconnect?



Press the key if it is set up.

After the call has ended (either by you or the remote party), end of call notification with duration of the call will be shown on the phone screen:

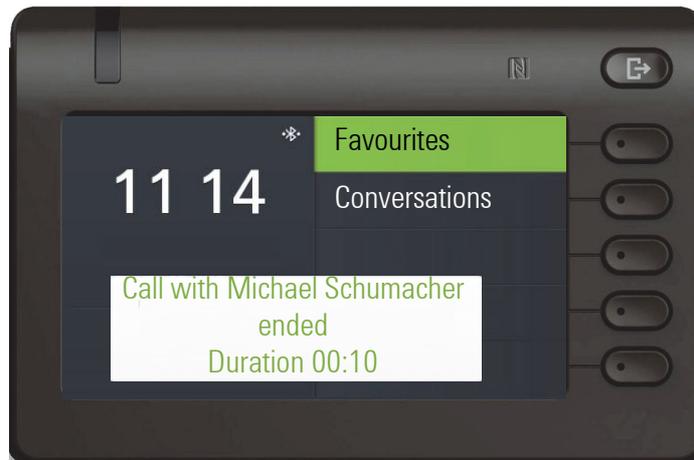

Dialing/Calling

Dialing with handset off



Lift the handset.



Internal: Enter the phone number.

External: Enter external code and phone number.

Dial with the handset on-hook



Internal: Enter the phone number.

External: Enter external code and phone number.

Participant answers over loudspeaker. The speaker key is lit.

Participant answers over loudspeaker:

With handset on hook: Speakerphone mode.

or



Lift the handset.

Participant does not answer or is busy:



Press key. LED goes out.

Dialing with connected headset

Requirement: The headset is connected.




Internal: Enter the phone number.

External: Enter external code and phone number.



The key illuminates.

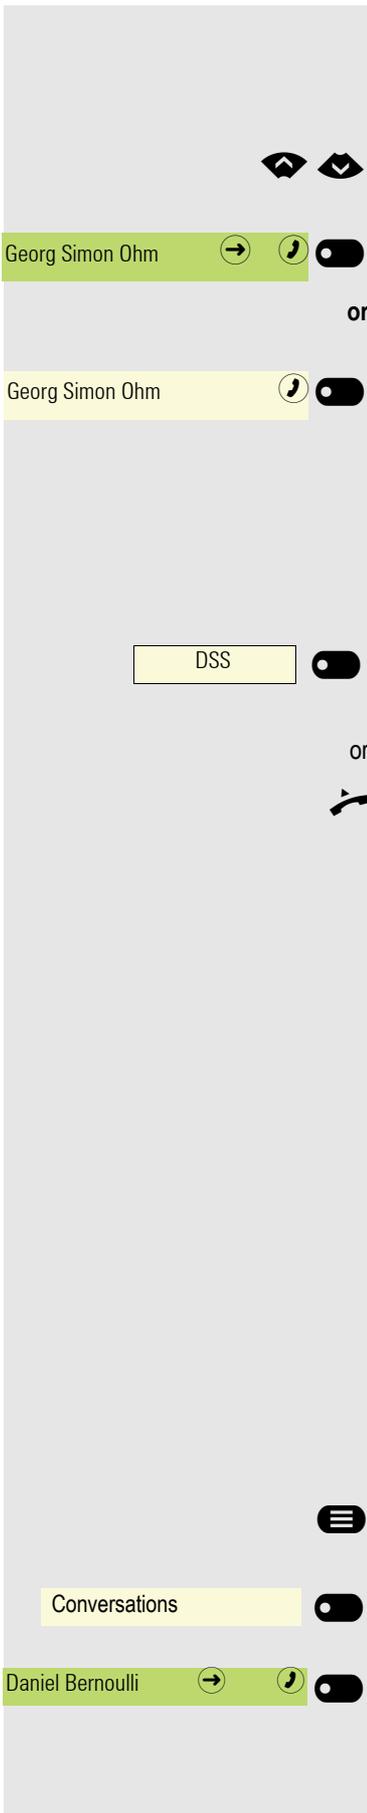

Choose from conversations

The conversations list is displayed on the screen. If the contact you want is not visible, then select with

or search by entering the phone number or name.

Confirm the selected contact with the softkey. The phone number is dialed.

If visible, confirm immediately with the softkey for the contact. The phone number is dialed.

Calling with a direct station select (DSS) key

Requirement: You have configured DSS keys on your phone → page 16.

Press the DSS key.

When the participants answer, enter speakerphone mode.

Lift the handset.

 Note the meaning of the LED displays on the direct call keys → page 40.

Redial

You can use conversation list to call your last connected party. You can do this via the history of a conversation (for more information, see "Display the history of a conversation" → Page 34) or via contact details (for more information, see "Opening details of a conversation or conducting a call" → Page 29).

Returning a missed call

Contacts who have tried to reach you are identified accordingly in the conversations list and appear in the sort order. In addition to the menu name, i.e. Conversations, the number of missed calls is shown against a red background.

The notification LED is red. In addition to the menu name, i.e. "Conversations", the number of missed calls is shown.

If nec. Press the Main Menu key.

Open using the softkey.

A contact is indicated as a "New missed call" with . Select the contact and confirm to call the contact.

Using speed dial

 This function must be set up by your responsible administrator.

Speed dial numbers can also contain command or access code sequences and may be linked with other speed dial numbers → page 61.

Dialing with central speed dial numbers

Requirement: You know the speed dial number → page 61.

Open menu → page 23.

Select and confirm.

Enter speed dial number.

The connection is immediately established.

Dialing with individual speed dial numbers

Requirement: You have set up individual speed dial numbers.

Open menu → page 23.

Select and confirm.

Press the required speed dial key.

The connection is immediately established.



Forwarding calls

You can program several types of call forwarding on your line.

FWD-VAR-ALL-BOTH	ON	All calls are forwarded to the stored phone number, and the call number is deleted when the call is disconnected.
FWD-FIXED	ON	All calls are forwarded, the stored phone number is not deleted when the call is disconnected.
FWD-VAR-ALL-INT	ON	Only internal calls are forwarded.
FWD-VAR-ALL-EXT	ON	Only external calls are forwarded.
FWD-VAR-BUSY-BOTH	ON	If your connection is busy, all calls are forwarded.
FWD-VAR-RNA-BOTH	ON	If you do not pick up a call, all calls will be forwarded after a certain amount of time.
FWD-VAR-BZ/NA-BTH	ON	If your connection is busy, or you do not pick up a call, all calls will be forwarded following a certain period.

Use call forwarding

You can immediately forward internal and/or external calls to your lines to different internal or external telephones (destinations) (external destinations are also possible if the system is configured accordingly).



If call forwarding is activated, a special dial tone sounds when the handset is lifted.

If DTMF dial-in (ask relevant Administrator) is active, you can also divert calls there. Destinations: Fax = 870, Direct inward dialing = 871, Fax-Direct inward dialing = 872.

If you are the end caller of a forwarded call, you can see the call number or the name of the forwarding party in the Notification area of the display (1st. line) and the those of the caller below it.

Setting up call forwarding via the call forwarding menu



Open the Forwarding menu.



In the menu, you immediately have an overview of call forwarding currently set-up. This menu is also available via the user settings.

Variable: All calls  

or

Variable: External calls  

or

Variable: Internal calls  

or

Confirm.

Confirm.

Confirm.

Variable: Busy No destination set Confirm.
or

Variable: No reply No destination set Confirm.
or

Variable: Busy or no reply No destination set Confirm.
or

Fixed: All calls No destination set Confirm.

Destination Use the softkey to open the editor for the destination phone number

123 3335 Enter the destination phone number on the dial pad.
Enter destination phone number. Confirm your input with the softkey.

Activating call forwarding with key

The advantage of a specific key for call forwarding is that you do not have to re-enter a phone number every time. The programmed key already contains a destination. You can therefore set up several keys with different forwarding destinations.

Press the key if it is set up. The LED is illuminated.

Set up call forwarding via the idle menu



If nec. Press the Main Menu key.



Select "Fixed forwarding on."

Fixed forwarding on



Confirm.



Using callback

You can request a callback if the individual called is busy or if nobody answers. This also applies to external calls via switching centers. This will save you from repeatedly attempting to call someone.

You receive a callback

- you receive a callback when the other party's line becomes free,
- as soon as the party who did not reply has held another conversation.



If configured (ask relevant Administrator), all callback requests are automatically deleted overnight.

Saving a callback

Requirement: The line is currently busy or nobody answers.

Confirm.

Accepting a callback

An participant for whom a callback was saved is now no longer busy or has phoned in the meantime. Your phone now rings.

Lift the handset.



or



Press key. LED lights up.

or

Cancel the callback with the softkey.


Callback 



or



or

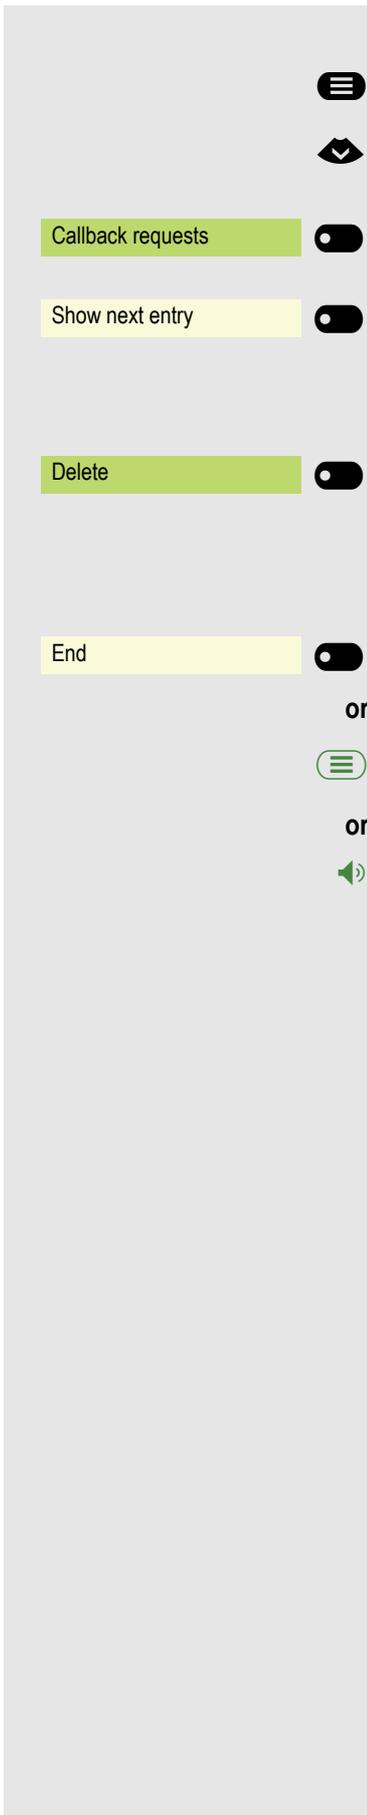

Checking/deleting a saved callback

If nec. Press the Main Menu key.

Select "Callback requests"

Confirm.

Confirm to display additional entries if applicable.

Deleting an entry that is displayed

Confirm.

Ending a query

Confirm,

or

Press key.

or



During the call

Switch to speakerphone

Requirement: You are conducting a call via the handset.

Press and hold the key, hang up the handset, and then release the key and continue the call.



US mode

If the country setting is set to US (ask relevant Administrator), you do not need to press the loudspeaker key when you hang up the phone.



Press key.



Replace the handset. Proceed with your call.

Switching to the handset

Requirement: You are conducting a call in speakerphone mode.

Lift the handset. Proceed with your call. The hands-free microphone is switched off.



Open listening in the room during a call

You can allow other people in the room to listen in on the call. Let the other party know that you have turned on the loudspeaker.

Requirement: You are conducting a call via the handset.

Activating




Press key. LED lights up. The hands-free microphone remains off.

Deactivating



Press key. LED goes out.

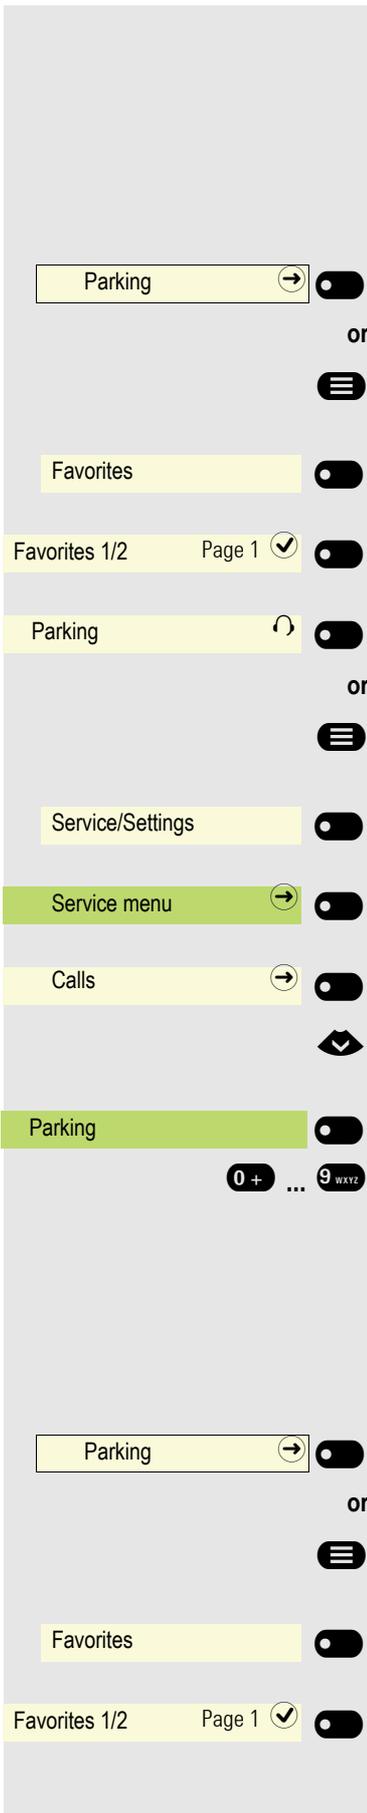

Parking a call

You can park up to 10 internal and/or external calls. You can resume the parked calls on another telephone. This allows you to continue a call on another phone, for example.

Requirement: You are conducting a call.

Press the Function key of the OpenScape Key Module 600, if configured.

If nec. Press the Main Menu key.

Open using softkey.

Select the required page with the softkey.

If visible, press the softkey of the Function key.

If nec. Press the Main Menu key.

Open using the softkey.

Open with the softkey.

Confirm.

Select "Parking."

Confirm.

Enter and note a parking position number between 0 and 9. If the entered parking position number is not accepted, it is already busy; please enter a different number.

Retrieving a parked call

 
 
 
Requirement: One or more calls have been parked. The phone is idle.

Press the Function key of the OpenScape Key Module 600, if configured.


If nec. Press the Main Menu key.

Open using softkey.

Select the required page with the softkey.

	If visible, press the softkey of the Function key.
	or
	If nec. Press the Main Menu key.
	Open using the softkey.
	Open with the softkey.
	Confirm.
	Select "Retrieve parked call."
	Confirm.
	Enter the parking position number you have noted. If the entered park position number is not assigned, you cannot answer the call.

 If a parked conversation is not taken on, the call goes through there again after a certain time, where it is parked (= callback).

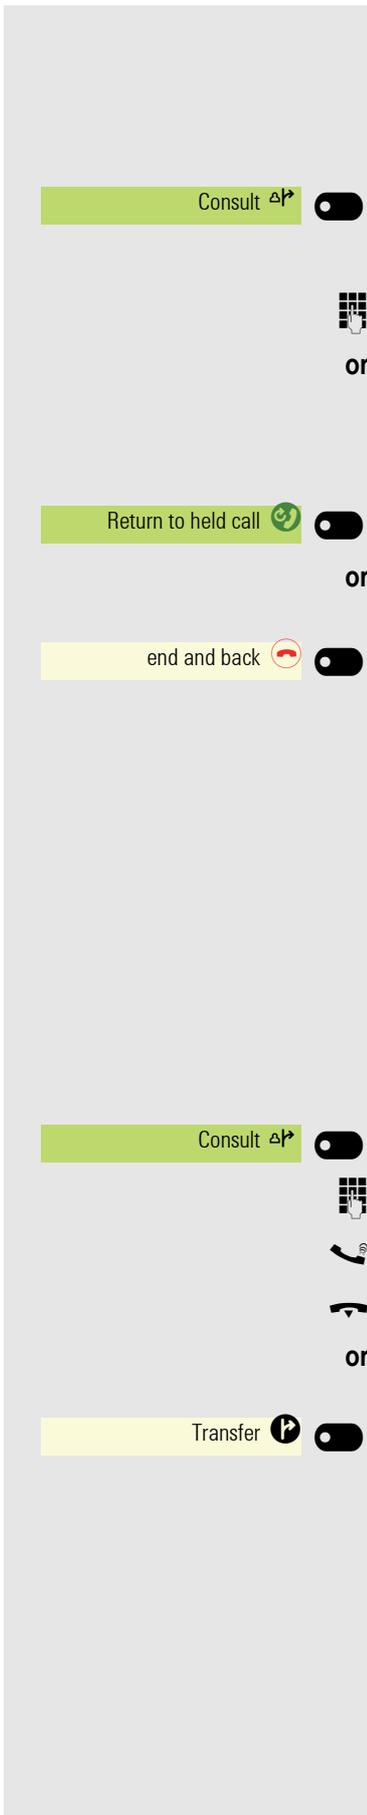

Call second individual (consultation)

You can call a second party while a call is in progress. The first individual is on hold.

Confirm.

Calling a second participant:

Enter the phone number of the desired participants.

Select one from the conversations list.

Back to the first caller, second caller does not answer:

Confirm.

Ending a consultation call:

Confirm

Switching to the held party (toggling)

Select the toggle option with the softkey.

Transferring a call

If the person you are speaking to wishes to be forwarded to one of your colleagues, you can transfer the call.

Confirm.

Enter the phone number of the desired participants.

Potential announce call.

Replace the handset.

Confirm

Accepting a second call (Call waiting)

You are still available to other callers, even though you are on the telephone. A warning tone and the notification "Call: <x>" in the display indicate the waiting call.

You can ignore or accept the second call.

Before you accept the second call, you can end the first call or place it on hold for subsequent retrieval.

You can also block the second call or the signal tone → page 61.

Requirement: You are on the phone and hear a warning tone (approx. every six seconds).

Ending the first call and answering the second call



Replace the handset. Your phone rings.



Accept second call. Lift the handset.

Place first call on hold and answer second call

Accept call waiting 



Confirm. You are connected to the second caller. The first party is placed on hold.

end and back 



Confirm

or



Replace the handset.

or



Lift the handset.

Carry out DMTF-suffix/dial tone

In order to control devices, such as answering machines or automatic information systems, you can send out DTMF signals (**D**ual **T**one **M**ulti-**F**requency).

Please ask your administrator to send the codes for the DTMF tones.



Ending the call also deactivates DTMF suffix dialing.

Your system can also be configured in such a way that you can start the DTMF dial-up immediately after establishing the connection. You can also set-up a key for DTMF dialing.

Rollover

You can set up the volume for all notification, which occur during your call. For more information, see "Volumes" → Page 155

Using Bluetooth

Bluetooth is used for wireless communication, e.g. between PCs or tablets and smartphones or headsets. Bluetooth can be used at a distance of up to 10 meters. To exchange data between Bluetooth-enabled devices, the devices need to undergo a once-off pairing procedure.

▶ Please note that Bluetooth and NFC are not available on CP600E.

Discoverability

When first enabling a connection to a Bluetooth device, this function must be switched on → page 101.

By default, the OpenScape CP600 can be found by other Bluetooth devices once you have opened the pairing menu.

The OpenScape CP600 discoverability feature is disabled on exiting the pairing menu in order to prevent misuse.

▶ A connection is established for devices that are already connected even if the "Discoverable" function is deactivated.

Pairing

Pairing is the process used by two Bluetooth-enabled devices to "see" one another and to "recognize" that they can exchange data. It is therefore used for checking the access authorization of a Bluetooth device in a Bluetooth network. A connection key is generated for later identification.

▶ Pairing is only performed the first time contact is established between a Bluetooth device and your OpenScape CP600. If the Bluetooth device is successfully paired, no further access authorization checks are necessary. Instead, each subsequent check uses the previously created link key.

Pairing NFC-enabled devices

If your Bluetooth device has an NFC reader (**N**ear **F**ield **C**ommunication), it can be paired very easily with your OpenScape CP600 (often smartphones have this, but not headsets).

The NFC transmitter on the OpenScape CP600 is located in the top right area of the display, to the left of the Forwarding key and below the "N" logo.



To pair the Bluetooth device, hover over this logo and follow the instructions (see instructions for Bluetooth device).

Using a Bluetooth headset

You can connect a Bluetooth headset to your OpenScape CP600, which is approved for use with the OpenScape CP600. Ask your administrator about approved headset types.

Connecting the Bluetooth headset

Requirement: The Bluetooth function on your OpenScape CP600 is activated → page 100.

If nec. Press the Main Menu key.

Open using the softkey.

Open using the softkey.

if nec.  Enter and confirm the User password.

Open using the softkey.

Open using the softkey.

Finding and connecting the Bluetooth headset

Now switch your Bluetooth headset to pairing mode (see the user manual supplied with the device).

Paired devices are displayed.

Start the search for new devices with the softkey. If nec. Start or set the paging function on the Bluetooth device if appropriate.

Located devices are displayed. Repeat the search if appropriate with the softkey.

Select the relevant headset and open with the softkey.


Confirm the pairing prompt with the softkey. The Bluetooth device is paired and added to the list.


or

A pairing PIN is requested

Enter the pairing PIN and confirm with the softkey.

The Bluetooth device is paired and added to the list.

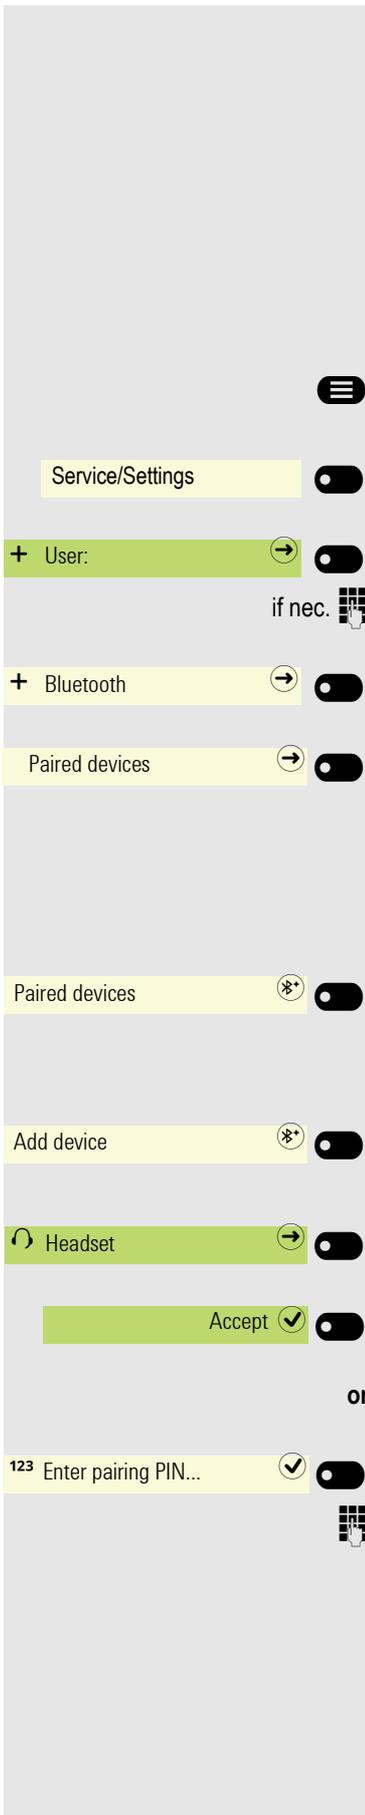

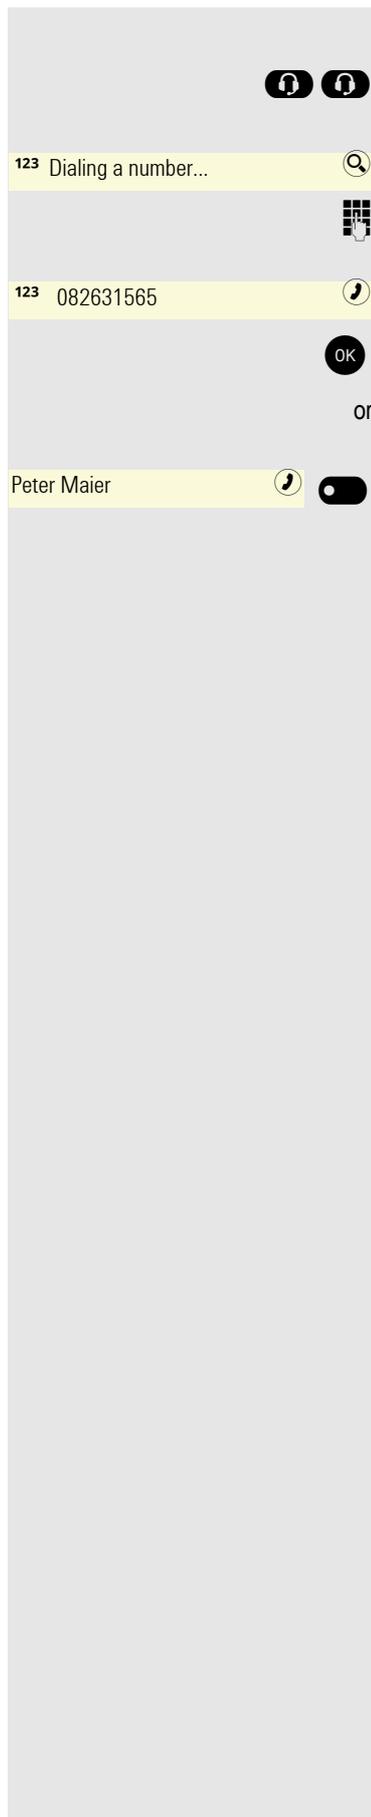

Testing a Bluetooth headset

Press key. You should now hear the on-hook signal in the headset.

The input field is opened.

Enter the phone number.

Confirm when the complete number has been entered.

The required contact is shown in the list. Confirm with the softkey. The connection is set up.

If nec. Set-up call volume on headset.

Transferring contacts

The Bluetooth function on your OpenScope CP600 allows you to transfer contacts in **vCARD format** (file extension: .vcf) from other Bluetooth devices to your OpenScope CP600 and save them in the Conversations list. You can also send entries from the Conversations list as vCards to other Bluetooth-enabled devices.

➡ Due to the diverse range of PCs, smartphones, and PDA devices currently available, we are unable to provide universal instructions on how to transfer vCard files in this manual.

The instructions for data transfer via Bluetooth provided in the relevant manufacturer documentation should be observed.

Receiving a vCARD

Requirement: The Bluetooth function on your OpenScope CP600 is activated → page 100. A vCard file is stored on your Bluetooth-enabled device (PC, tablet, mobile telephone, etc.). Start the data transfer.

If a vCard is transmitted, you will be prompted to accept the data transfer.

Example:



Accept ✓



Press the softkey to allow the data transfer.

Saving contacts

Save ✓



Press the softkey again to save the vCard(s) to the contact list. You will receive confirmation.



Sending a vCard

Sending to a paired device

Requirement: The receiving device is included in the list of paired devices, Bluetooth is activated on the device and can receive vCards.

Select the required contact from the Conversations menu.

The selected contact is highlighted.

Open the contact.

Press the softkey. The menu for paired devices opens. A search is initiated for devices.

Use the softkey to confirm sharing on the relevant paired device. The vCard for the entry is sent. (You will receive confirmation)

Perform the necessary steps on the destination device to save the vCard data.

Sending to an unpaired device

Requirement: Bluetooth is activated on the device and the device can receive vCards.

Select the required contact from the Conversations menu.

The selected contact is highlighted.

Open the contact.

Press the softkey. The menu for paired devices opens. A search is initiated for devices. Wait until the relevant unpaired device appears.

Use the softkey to confirm sharing on the relevant device. The vCard for the entry is sent (you will receive confirmation).

Perform the necessary steps on the destination device to save the vCard data. Detected devices are then deleted from the list.

Using a Bluetooth conference phone

You can connect a Bluetooth conference phone that is approved for use with the OpenScape CP 600 to your OpenScape CP 600. Pairing and connection works in the same way as for a headset. Ask your administrator about approved conference devices.

Please activate pairing mode on your Bluetooth device. Please refer to the alerts in the corresponding operating instructions.

Once the two devices have been successfully paired, the conference unit must be configured with a parameter in the CP600 so that the call can be connected and switched to hands free via the speaker button. Otherwise the conference unit would be operated like a Bluetooth headset via the headset button.

The parameters are found in the user menu under Bluetooth. There you can set up the paired devices and mark the paired conference facility as such.

Calling a participant

Requirement: The conference phone is ready for use but **switched off**. The OpenScape CP600 is in idle mode.



Press key.

or




Enter the phone number. The "conference device" switches on automatically. Once the subscriber answers, you can set up a conference via a consultation or second call.

Using a Bluetooth device

You can control calls on the HFAG (hands-free audio gateway, e.g. mobile device) from your OpenScape CP 600 phone via Bluetooth.


Incoming HFAG call

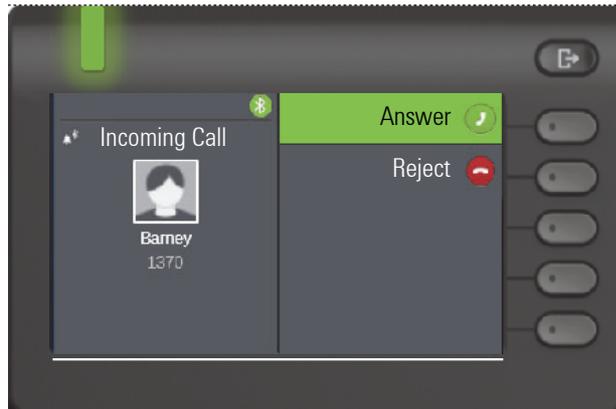


Bluetooth status bar icon indicates an HFAG call.

For more information about how to proceed during incoming call, see "Receiving a call" → Seite 66.

Connected HFAG call

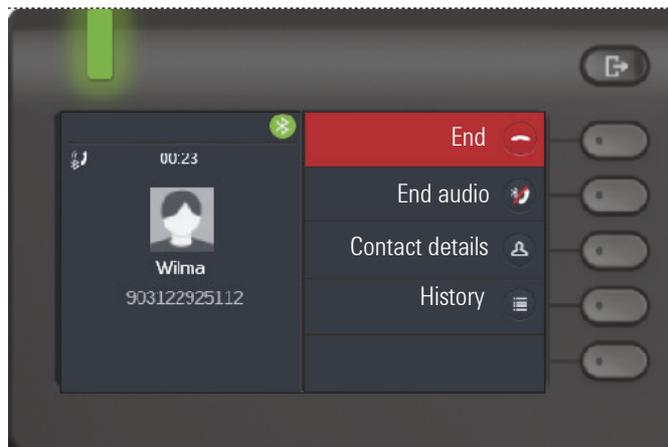

Bluetooth status bar icon indicates an HFAG call. The "End audio" button transfers the HFAG call audio from the OpenScape CP 600 to the HFAG.

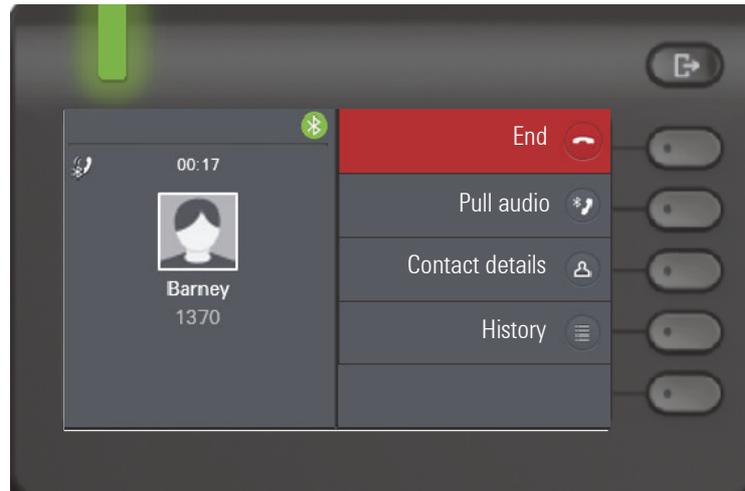


The “Pull audio” button reroutes the audio stream from HFAG back to OpenScape CP 600.

The “Move to mobile” button reroutes the audio stream from OpenScape CP 600 to the HFAG. Call is removed from the CP phone.

For more information about how to proceed during a call, see “During the call” → Seite 78.

Outgoing HFAG call

Outgoing Call Dialling

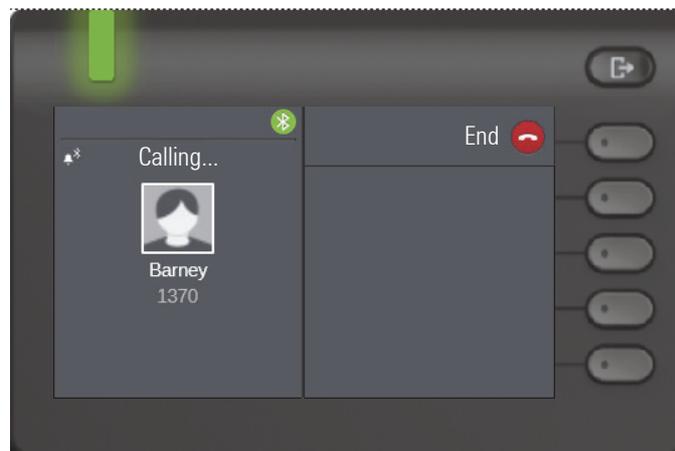

Bluetooth status bar icon indicates an HFAG call.

Failure in dialling the outgoing HFAG call is indicated by the HFAG by one of the unsolicited extended response indication codes:


- NO CARRIER
- BUSY
- NO ANSWER
- DELAYED
- BLACKLISTED

Outgoing Call Ringing




HFAG call states in Main Menu Screen

Incoming HFAG call in the Main menu screen

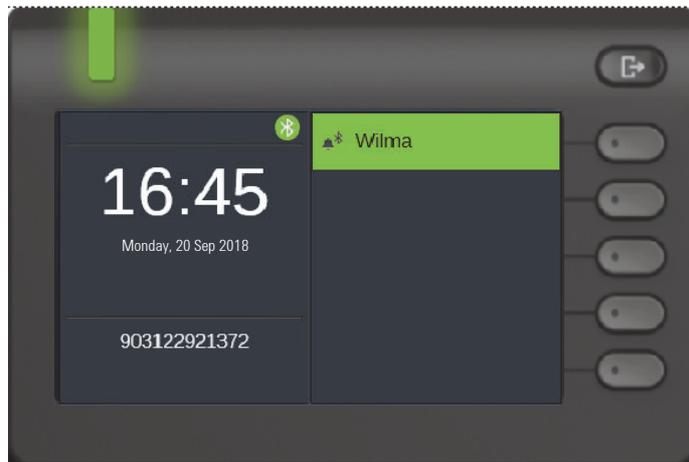


The icon with the Bluetooth rune index indicates incoming HFAG call.

Connected HFAG call in the Main menu screen

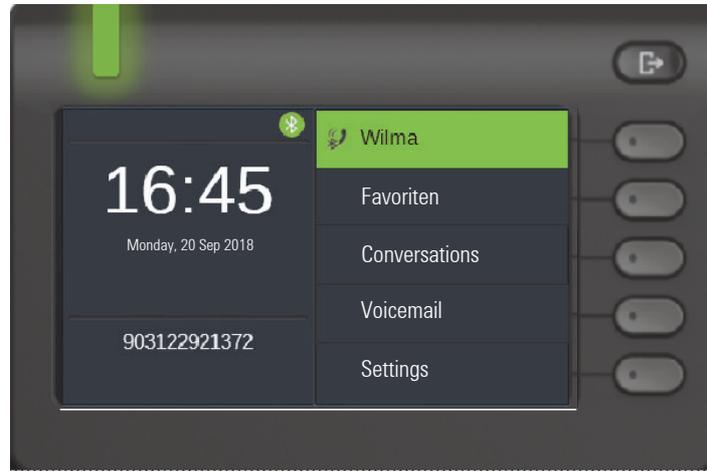

The icon with the Bluetooth rune index indicates connected HFAG call.


HFAG call states in Conversations Screen

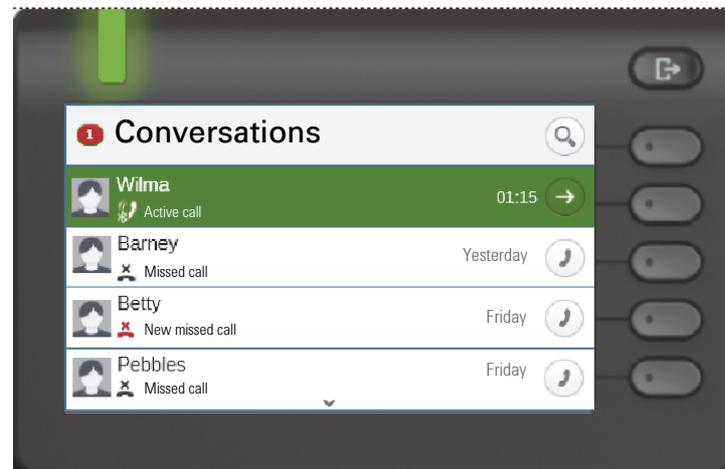

Connected HFAG calls are displayed in the conversation list. The HFAG call is distinguished from native calls by a special call state icon under the user name.

Anonymous mode

As a User, you are able to configure “Hide mobiles data”. In this mode, no caller information will be presented, only presence and state of the call. All Bluetooth calls are logged to Anonymous conversation.

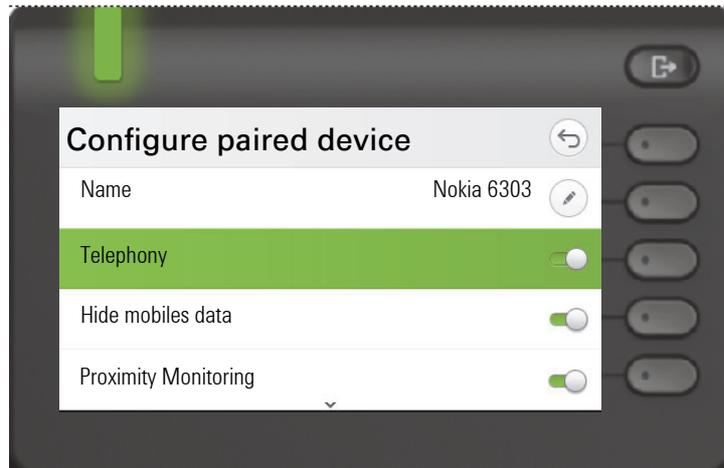


Using Bluetooth keyboard

Bluetooth keyboard can be paired with phone in User section under "Paired devices". After successful pairing keyboard appears in paired devices list.

There can be only one Keyboard device connected at the same time.

Special "keyboard" icon should be shown in status bar when Bluetooth keyboard is connected.

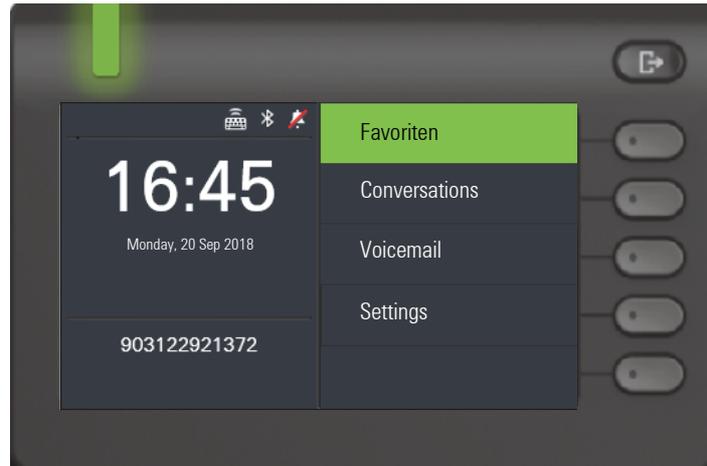

Parallel usage of Bluetooth keyboard and phone keypad is possible. Phone interface differentiates between events from Bluetooth keyboard and phone's keypad and shows speller and its settings only for phone's keypad.

Supported languages

- German, English, French, Italian and Spanish
- For other languages, English layout will be used.

Navigation keys

Navigation keys work as following:

- Direction keys → should work as direction keys on 5-way navigator
- Enter → OK
- Backspace → Back
- Esc → Go to landing screen
- Volume keys → Volume keys
- Mute key → Microphone mute
- Page down key → moves highlight down by the number of screen lines. Since this is only CP600 that is equivalent to 5 down nav. key presses
- Page Up key → equivalent to 5 up navigation key presses
- Home key → equivalent to long press Up navigation key presses
- End key → equivalent to long press Down navigation key presses

When phone is in Idle state, pressing number keys on keyboard initiate dialing in the same way as number keys on keypad do.

When phone is in call, pressing number keys on keyboard sends DTMF tones in the same way as number keys on keypad do.

Keyboard pairing modes

Keyboard initiates pairing and sets the pairing mode. The pairing mode differs depending on the keyboard type and manufacturer.

There are three possible pairing modes supported:


- Simple pairing (passkey entry) - if keyboard initiates "simple pairing", PIN is generated by keyboard and CP600 shows this PIN on display and waits until the number is typed on the keyboard.
- Legacy (numeric comparison) - if keyboard initiates "legacy" pairing, CP600 generates random number, displays it to user and waits until the number is rewritten on the keyboard.

Just works - if keyboard initiates "just works" pairing, CP600 displays Bluetooth keyboard pairing request and waits until it is confirmed.

Using Bluetooth “Remote button”

Bluetooth Remote button can be paired with the phone in User section under "Paired devices". After successful pairing, the Remote button is shown with a keyboard profile in paired devices list.

The Remote button device behaves as Bluetooth keyboard device until the user configures it to be a Remote button. When Remote button is enabled then the device appears, and behaves, as a Bluetooth Remote button device.

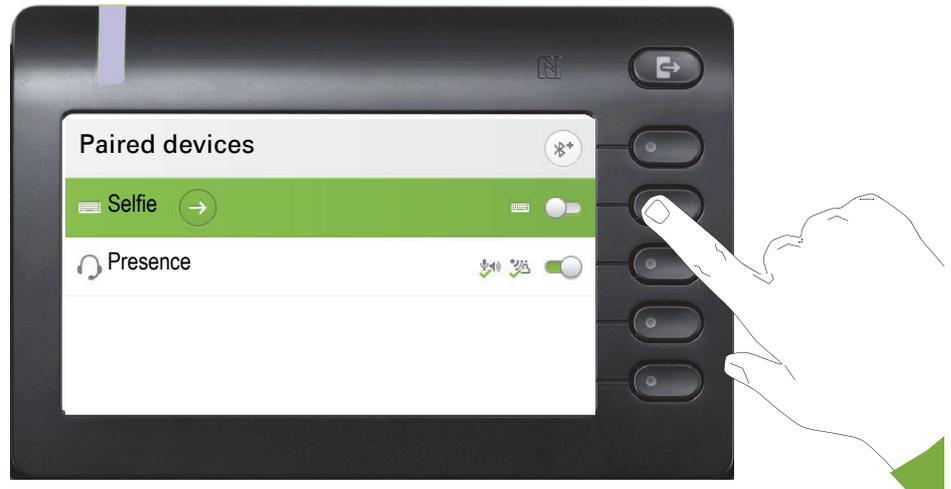

By pressing the Remote button, you can trigger certain action (e.g. under the Function key or on OpenScope Key Module 600) configured by you on your OpenScope CP 600. You can choose from the following keys:


- Function keys.
- Key Module keys

Please note that the shifted level function of an Function key cannot be selected.


Using the Configuration option leads to the Configuration Menu for that device. The device name is "Selfie" in the screens shown.




In this Configuration Menu the device can be identified as a Bluetooth Remote button device via the "Remote button" status. The action of the entry allows the Bluetooth Remote button device to be configured.

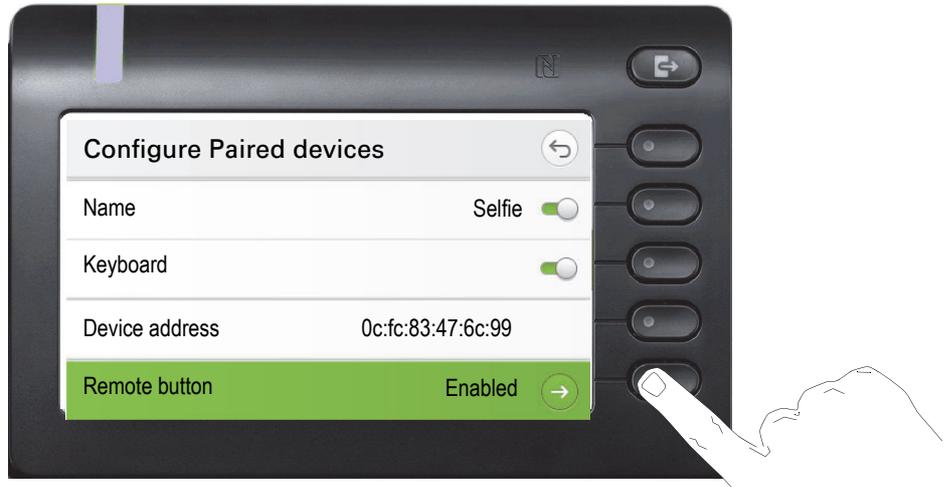

Selecting the "Remote button" menu above leads to the screen that allows this Bluetooth Remote button device (called Selfie) to be configured. The Function keys are identified by their key label in the "Select key" screen.

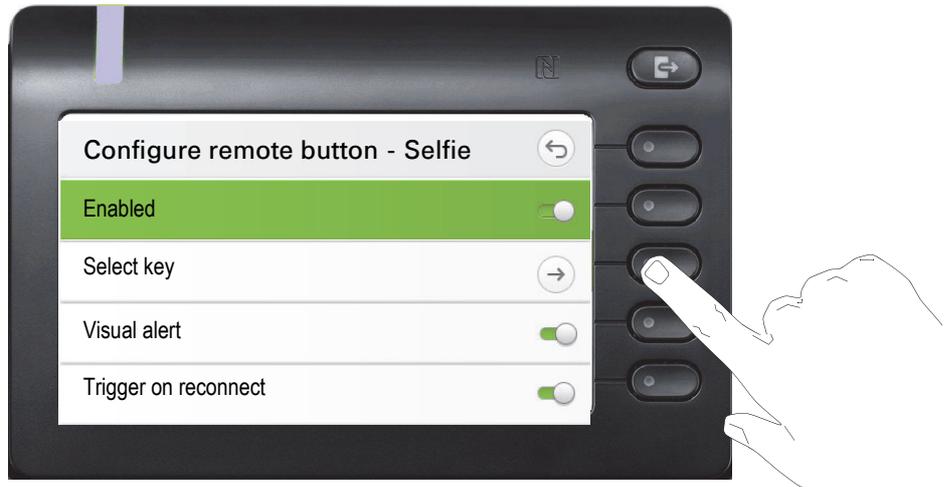

Selecting the "Select key" menu above leads to the screen that allows the Function key for this Bluetooth Remote button device to be configured.

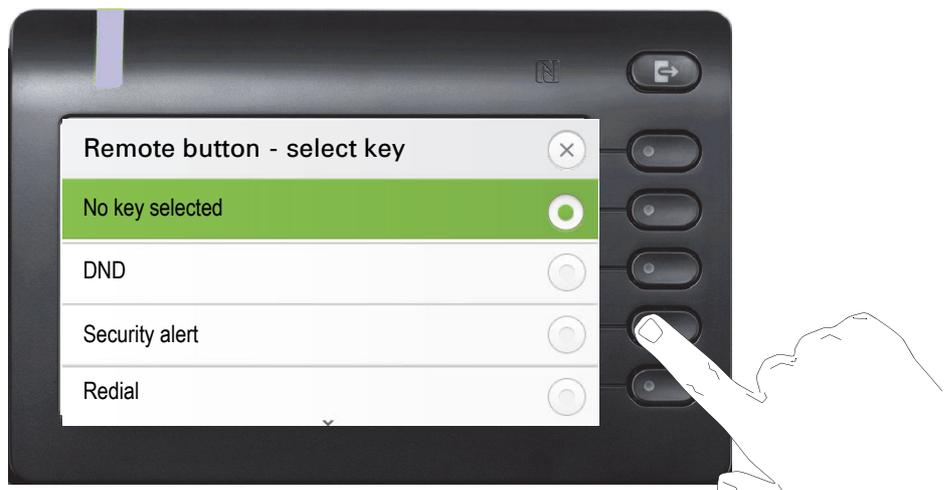

Only a Function key with a function configured can be selected to be triggered by the Bluetooth Remote button click. All unallocated keys are hidden.

Function keys from any attached Key Module are potentially available to be selected. No shifted level keys can be selected.




The “Configure remote button” screen now shows the label for the Function key that has been configured to be triggered by this Bluetooth Remote button device.

Trigger on reconnect

If the Bluetooth Remote button is disconnected (e.g. the device is in energy saving mode) and you want to reconnect it, the following may happen based on the settings of the functionality “Trigger on reconnect”.

- If enabled, the remote button will connect and trigger the configured Function key at the same time. You need to press the Remote button only once.
- If disabled, you need to press the Remote button twice. First time it will reconnect and second it will trigger the configured Function key.



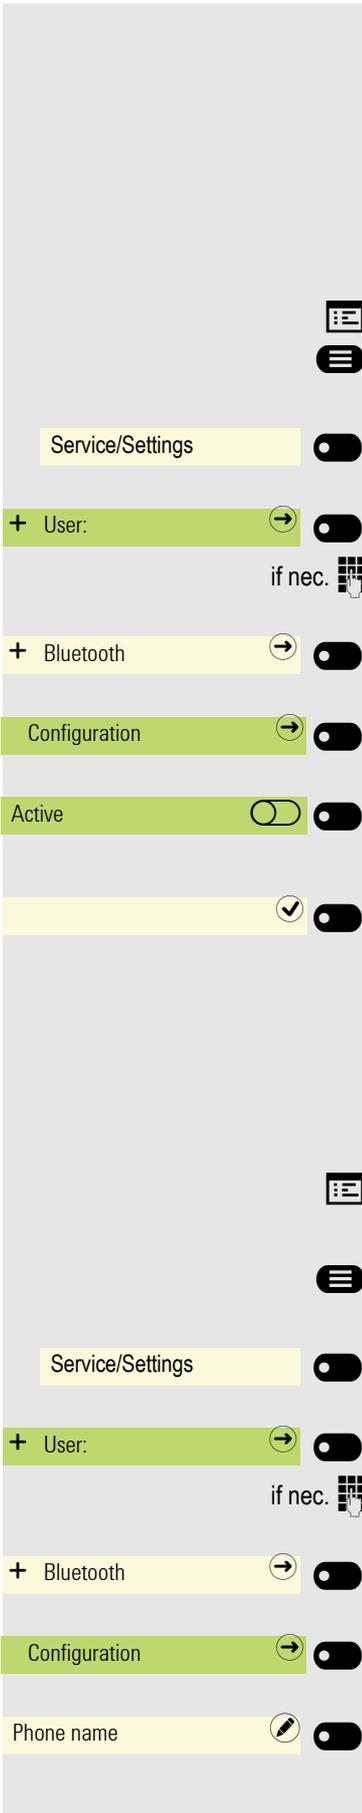

Bluetooth settings

Activating and deactivating Bluetooth



The Bluetooth function was activated for your phone by the administrator.

You can also configure this setting via the Web interface → page 165.

If nec. Press the Main Menu key.

Open using the softkey.

Open using the softkey.

if nec. 

Enter and confirm the User password.

Open using the softkey.

Open using the softkey.

Activate with the softkey. The Bluetooth function is activated and is now available.

Save the setting by selecting the softkey.

Changing the Bluetooth name of your OpenScape CP600

Here you can determine which name your OpenScape CP600 should use to register at other Bluetooth devices.

You can also configure this setting via the Web interface → page 165.

If nec. Press the Main Menu key.

Open using the softkey.

Open using the softkey.


if nec. 

Enter and confirm the User password.

Open using the softkey.

Open using the softkey.

Open using the softkey. The current name is displayed.

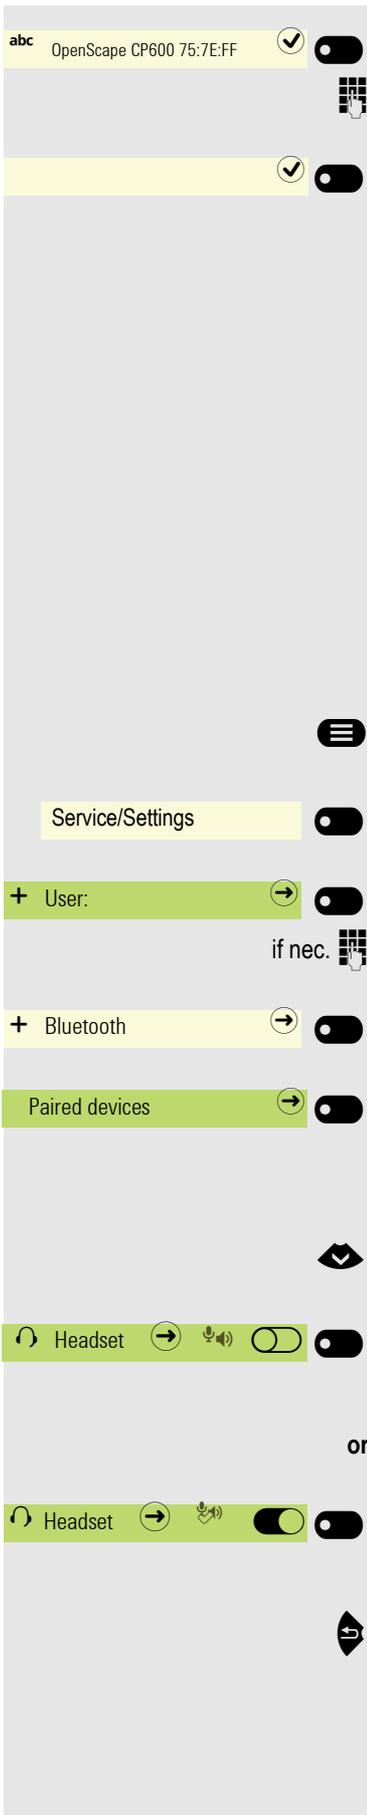

The predefined name is entered.

Change to the desired name and conclude your input with the softkey.

Save the setting by selecting the softkey.

Managing Bluetooth devices

The following functions are available in the Bluetooth pairing manager:

- Add Bluetooth devices
- Connect or disconnect paired Bluetooth devices
- Delete single Bluetooth devices
- Rename Bluetooth devices in the list

 The OpenScape CP 600 is visible to other Bluetooth devices in the vicinity when you are in this menu.

Connecting/disconnecting a Bluetooth device

Requirement: At least one Bluetooth device is listed.

If nec. Press the Main Menu key.

Open using the softkey.

Open using the softkey.

if nec.  Enter and confirm the User password.

Open using the softkey.

Open using the softkey. Paired devices are displayed.

 You receive a message that the OpenScape CP 600 is now visible for other Bluetooth devices while you are in this menu.


Select the relevant Bluetooth device.

Confirm with the softkey to connect. You will receive a corresponding confirmation. It often suffices to switch on the Bluetooth device in order to establish the connection automatically.

or

Confirm with the softkey to disconnect. You will receive a corresponding confirmation. The connection is dropped automatically if you switch off the Bluetooth device.

Exit the menu using the backspace key.

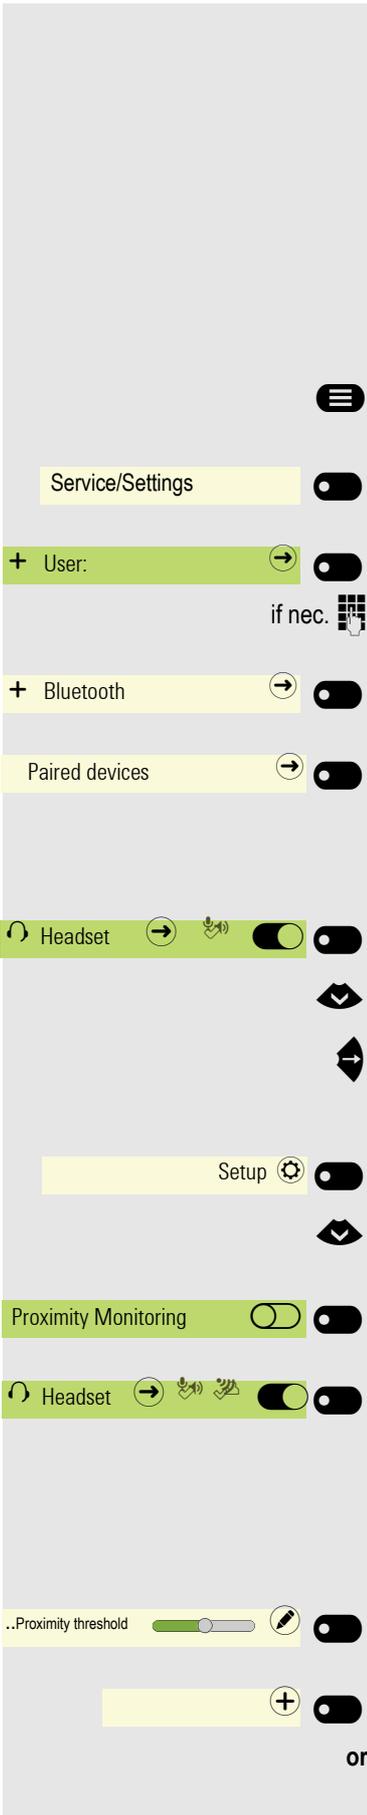

Proximity detection via Bluetooth

You can automatically block a paired Bluetooth device, e.g. use a headset in addition to your OpenScope Desk Phone CP600, if you leave your work place wearing your headset. This will prevent anyone getting access to your personal telephone records during your absence. When you return to your workplace with the headset, the telephone will be automatically unlocked.

The distance at which this block functions can be set in the user menu. You will also find here the option to activate or deactivate this feature.

Of course, it is also possible to block the telephone without the Bluetooth headset locally/manually. See → page 150.

If nec. Press the Main Menu key.

Open using the softkey.

Open using the softkey.

if nec. Enter and confirm the User password.

Open using the softkey.

Open using the softkey.

You receive a message that the OpenScope CP 600 is now visible for other Bluetooth devices while you are in this menu.

Paired devices are displayed.

Select the relevant Bluetooth device.

and open it. The status of the device is displayed and activated, for example, with "(aud)."

Open the Configuration menu with the softkey.

Select the "Proximity Monitoring" function.

Activate with the softkey.

Proximity Monitoring Is activated.


Setting the Proximity threshold

If required, you can set the "Proximity threshold" to suit the required circumstances.

Open the setting for the Proximity threshold by selecting the softkey¹.

Use the softkey to increase the proximity.

1. The display shows the current setting

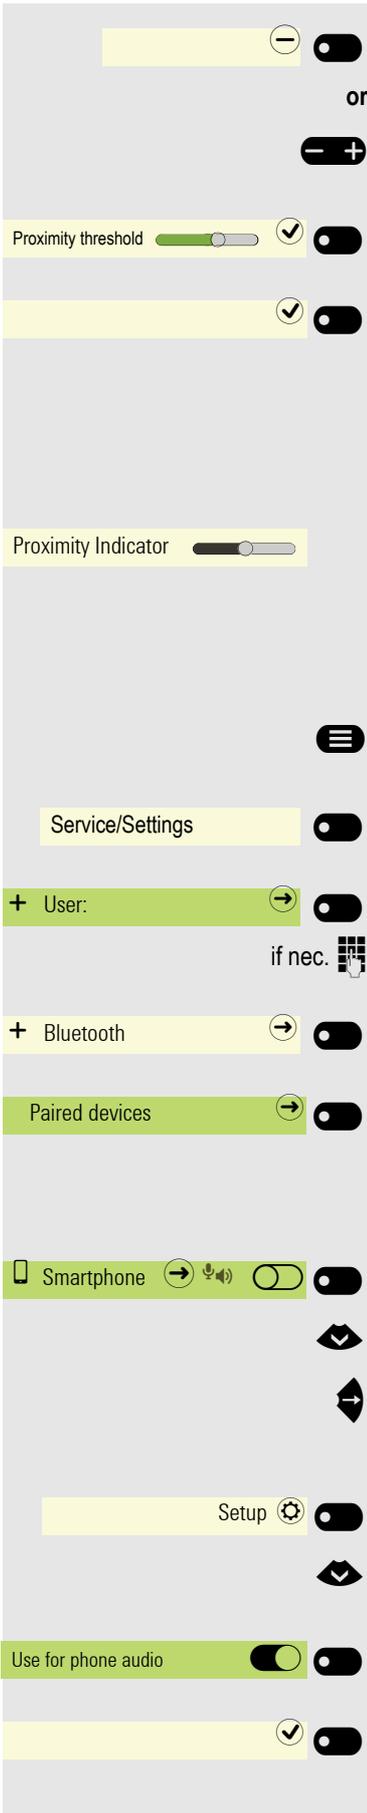

Use the softkey to reduce the proximity

or

Adjust using the toggle key

Confirm the setting with the softkey.

Save the setting with the softkey and exit the menu.

Checking the proximity display

Check different positions of your Bluetooth device at which the connection can still be maintained.

This is a read-only setting.

Activating/deactivating audio

If no audio function is provided for your Bluetooth device, you should disable audio in your device's settings. The function is always activated by default.

If nec. Press the Main Menu key.

Open using the softkey.

Open using the softkey.

if nec.

Enter and confirm the User password.

Open using the softkey.

Open using the softkey.

 You receive a message that the OpenScape CP 600 is now visible to other Bluetooth devices while you are in this menu.

Paired devices are displayed.

Select the relevant Bluetooth device.

and open it. The status of the device is displayed and activated, for example, with "pxp" for "Proximity Monitoring."

Open the Configuration menu with the softkey.

Select the "Audio" function.

Deactivate with the softkey.

Save the setting by selecting the softkey. The icon  for the device name was removed.



Deleting a Bluetooth device from the list

You can delete a single Bluetooth device from the list, for example, if it will no longer be in the vicinity for an indefinite period.

If nec. Press the Main Menu key.

Open using the softkey.

Open using the softkey.

Enter and confirm the User password.

Open using the softkey.

Open using the softkey. You receive a message that the OpenScape CP 600 is now visible for other devices in the vicinity as long as the menu is open.

Paired devices are displayed.

Select the relevant Bluetooth device and open it.

Confirm deletion with the softkey.

Confirm deletion again with the softkey.

Renaming a Bluetooth device in the list

A Bluetooth device is entered in the list with the name set in the device. This is often the device type. You can change this name.

If nec. Press the Main Menu key.

Open using the softkey.

Open using the softkey.

Enter and confirm the User password.


Open using the softkey.

Open using the softkey. You receive a message that the phone is now visible for other devices.

Paired devices are displayed.

Select the relevant Bluetooth device and open it.

Open the Configuration menu with the softkey.

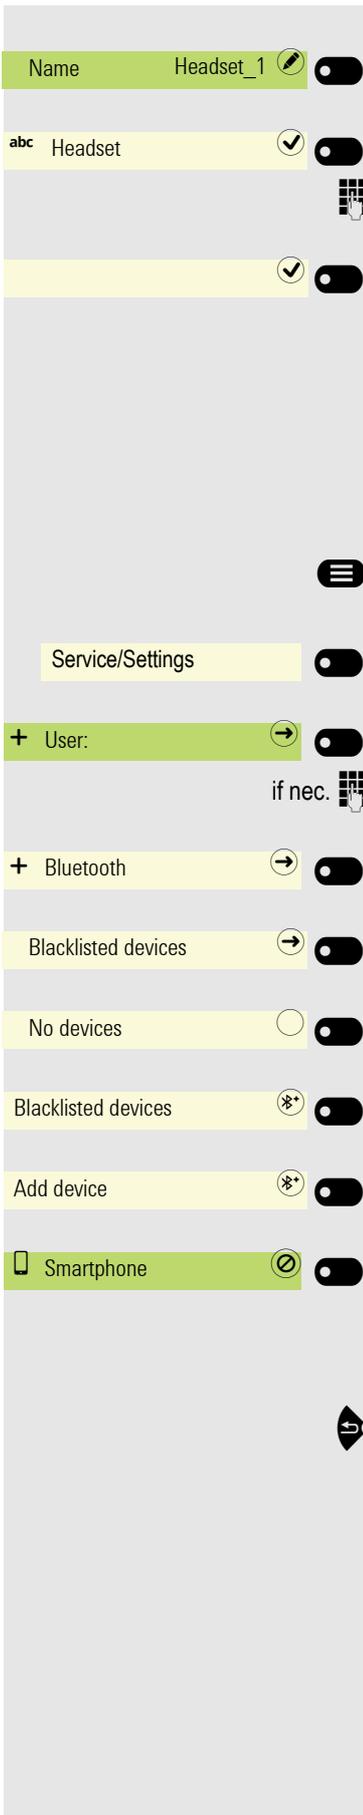

The current name is displayed. Open the field name with the softkey.

The predefined name is entered.

Change to the desired name and conclude your input with the softkey.

Save the setting by selecting the softkey.

Blacklist for Bluetooth devices

The blacklist contains the Bluetooth devices for which a connection setup attempt should be rejected by the OpenScape CP 600. The connection will only be allowed if the setup attempt comes from the OpenScape CP 600.

Add this Bluetooth device to the Blacklist

If nec. Press the Main Menu key.

Open using the softkey.

Open using the softkey.

if nec.  Enter and confirm the User password.

Open using the softkey.

Open using the softkey.

No Bluetooth devices are entered, for example.


Start the search for the devices in the vicinity with the softkey.

Repeat the search if necessary with the softkey.

Open a located device in the search list with the softkey. You will see the following message, for example: "Smartphone was added to Blacklisted devices". The device is deleted from the search list.

Add another device to the Blacklisted devices if appropriate,

or exit the search menu.

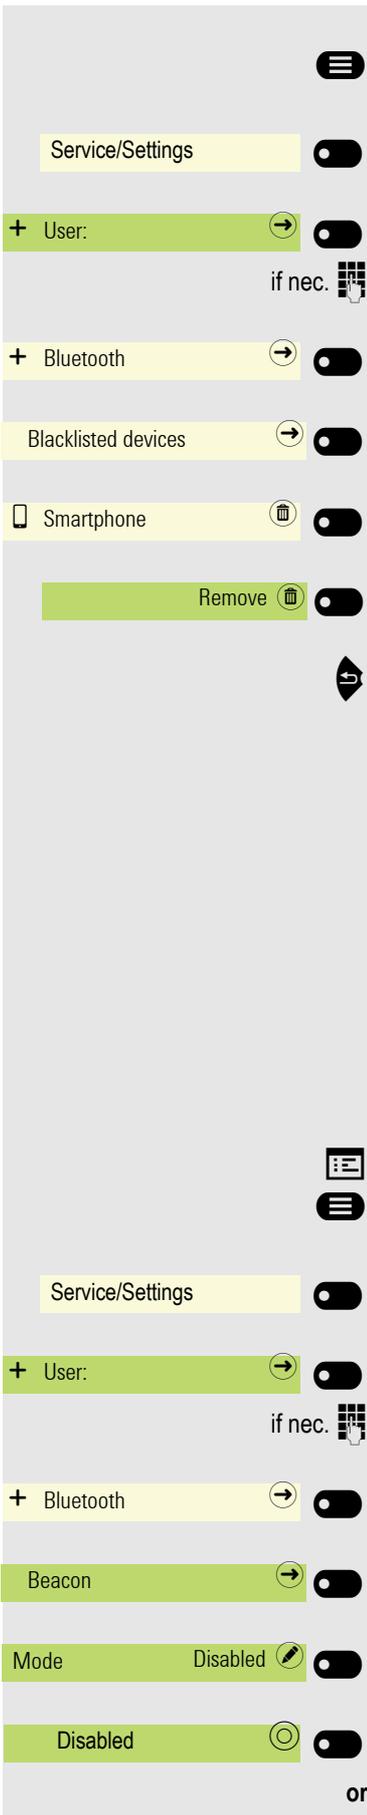

Removing a Bluetooth device from the blacklist

If nec. Press the Main Menu key.

Open using the softkey.

Open using the softkey.

Enter and confirm the User password.

Open using the softkey.

Open using the softkey.

Open the device softkey.

Confirm deletion with the softkey. The entry is deleted.

Exit the menu.

Eddystone Beacon

Beacons are small devices that use Bluetooth to connect to smartphones or tablets in the environment. In the retail sector, for example, they are used to present personalized special offers to customers.

The phone can use Beacons to connect to smartphones or tablets in the area via Bluetooth. You can then, for example, exchange information between the phone and a smartphone. Eddystone is an open source project by Google for Beacon applications.

Set-up/deactivate Eddystone Beacon

You can also configure this setting via the Web interface → page 165.

If nec. Press the Main Menu key.

Open using the softkey.

Open using the softkey.


Enter and confirm the User password.

Open using the softkey.

Open using the softkey.

The current status is displayed. Open the mode with the softkey.

Deactivate with softkey,

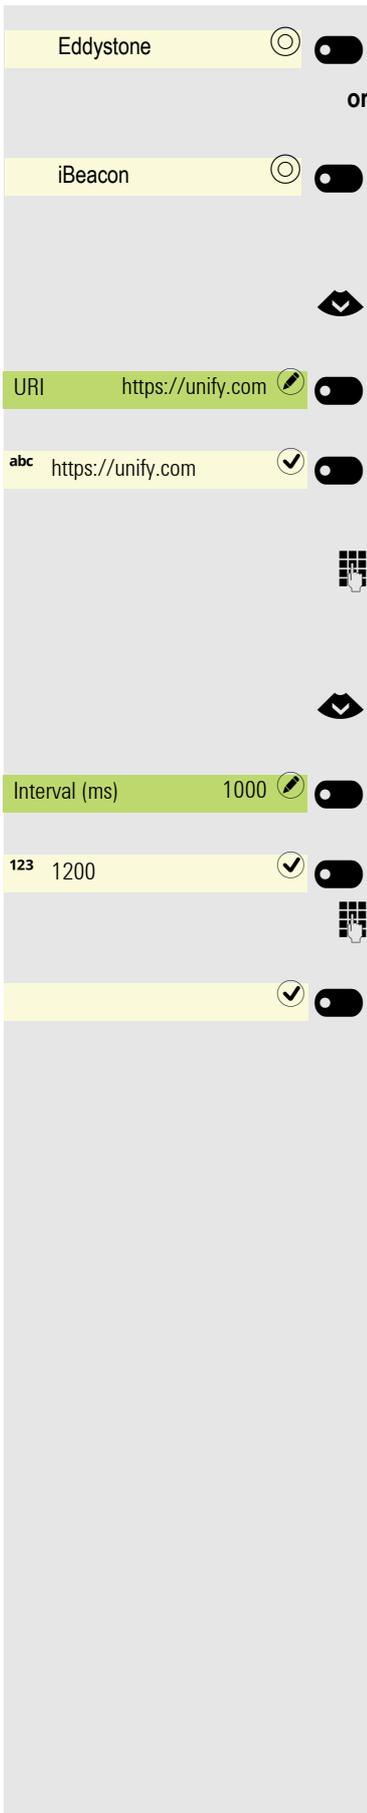

Activate with the softkey,

or

Activate with the softkey.

Beacon configuration

Select entry for URI

Current address is displayed. Open URI field with the softkey.

If necessary, an address is entered. If necessary, an address is entered. This should be an HTTPS address that is as short as possible. For long addresses, use a URL shortener to shorten it. Cannot be changed when setting up iBeacon.

Change to the desired address and press softkey to end the entry.

Set up interval

Select entry for Interval (ms)

Current interval is displayed. Open the Interval (ms) field with the softkey.

Enter new value if necessary.

Change to the desired value and press the softkey to end the entry.

Save changed entries with the softkey.

Phoning on several lines (multi-line)

Line keys


Line keys can be set up on the freely programmable feature keys on a OpenScape Desk Phone CP600/CP600E. Any key assigned the "Line" function corresponds to a line, and so up to 4 lines can be set up.

A distinction is made here between primary and secondary lines. Each of these line types can be used on a private or shared basis → page 109.

Line keys are set up by the administrator responsible.

The following graphical example displays how phones are connected within a team with several line keys.

3234 is the extension number of Mr. Meier, 3235 that of Mr. Müller, and 3236 that of Mr. Schulze. All three lines can be used to phone from all three phones. The line of the phone's own secondary extension number if, however, always the primary line.

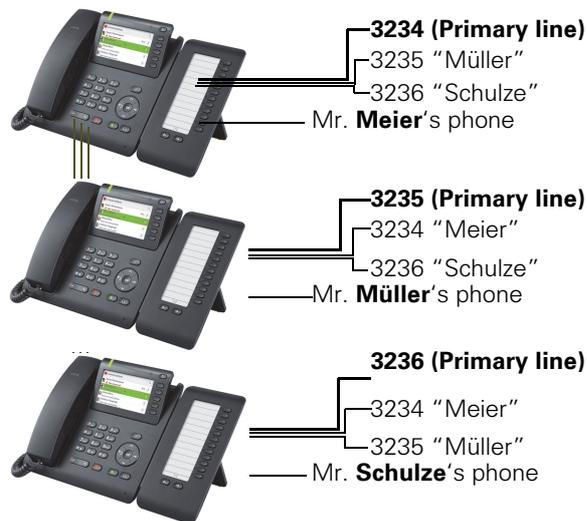

Primary line

All multi-line telephones have a primary line. This line can be reached in the usual manner via your public phone number. Incoming calls to your number are signaled on this line.



To avoid conflict between individual multi-line phones, "Do not disturb" and "Call forwarding" can only be used for the primary line.

Secondary line

A secondary line on your phone is used as a primary line by another participant. At the same time, your primary line can be set up as a secondary line for another phone in the system.

Line usage

Private line

A line that is used by a single telephone. This line cannot be used as a secondary line by another telephone.

Shared line

A line that is configured on multiple phones. The line status is displayed by a LED for all phones that share this line (if configured). If, for example, a shared line is being used by a phone, a status message indicating that this line is busy is displayed on all other telephones sharing the line.

Direct call line

A line with a direct connection to another telephone. You can see the status of the line from the LED.

LED displays for line keys


LED	Meaning
	LED off: the phone is in idle mode.
	Flashes: Incoming call and line on hold.
	LED lights green: the line is busy.

Preview


You are speaking on a line. The LED of another line key flashes. You can determine via the "Line preview" function who is calling on this line. The information is shown to you on the display. You can also determine which caller that you have previously put on "hold" or "exclusive hold" is waiting on a line key. You can also display information about the caller on the active line.

Requirement: You have accepted a call on a line key. The LED of another line key flashes quickly, the "Preview" is set up.

 Activating preview



 
Press the programmed "Preview" function key. LED lights up.



Press the required line key.

The information about the caller and/or waiting or parked participants is displayed.

 Deactivating preview



Press the programmed "Preview" function key. LED goes out.

The menu rows and the call-length display are displayed again.

Accepting calls on the line keys

If several calls are made at the same time, as usual, you can accept calls in the order provided. You can also, however, prioritize the acceptance of other calls.

Requirement: The administrator responsible has determined the order in which incoming calls are directed to line keys.

Accepting calls in the order provided

Your phone rings (call). The caller ID is displayed. The LED of the suggested line key flashes quickly.



or



Lift the handset.

Press the key and use speakerphone mode.

Answering a prioritized call

Your phone rings (call). The caller ID is displayed. The LED of the suggested line key flashes quickly. The LEDs of other line keys are also flashing quickly.

Line 1



Press the prioritized line key. The caller ID is briefly displayed.




or



Lift the handset.

Press the key and use speakerphone mode.

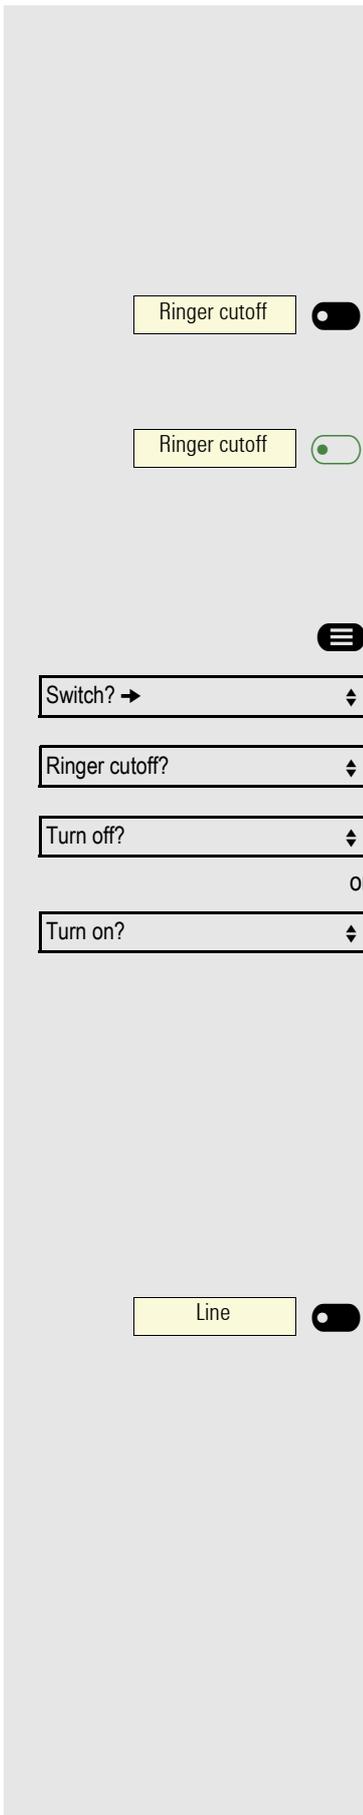

Activating/deactivating ringing mode (call)

If you are making a phone call on one line, ringing for other incoming calls may disrupt your conversation. If the “Ringer cutoff” function is enabled, your phone will no longer ring. Incoming calls are then only displayed via the flashing of the relevant line keys.

With the programmed “Ringer cutoff” function key

Switch off ringing:
press the “Ringer cutoff” function key. The LED lights up.
The phone does not ring upon incoming calls.

Switch on ringing:
press the “Ringer cutoff” function key. The LED goes out.
The phone rings upon incoming calls.

Via service menu

Open the menu → page 23.

Select and confirm.

Select and confirm.

Confirm,

or

confirm.

Forwarding calls for lines

If you activate call forwarding for an entire line in use → page 109, the line will be forwarded in general, on other phones as well.

The configuration of call forwarding for a particular line is identical to the call-forwarding already described. Just make sure that the desired line was previously busy.

Press the line key of the desired line. LED lights up.

For more information, please see → page 73.

Call transfer

If you are temporarily leaving your desk or do not wish to be disturbed, you can activate call transfer for the line to a target phone for incoming calls. A “Call transfer” function key (call transfer/line) can be programmed for every line.

Activation

A rectangular button with a yellow background and a black border, containing the text "Call transfer".

Call transfer



Press the programmed “Call transfer” function key. The LEDs on your phone and on the target phone light up. The line key only flashes if there is a call; it does not ring. The call is signaled on all the other team phones.

Dialing with line keys

The phone can be set up with automatic or selectable line seizure. The administrator responsible determines if a line, and which line, is to be automatically seized if the handset is lifted or speakerphone mode enabled.

 The display screen “Please select a line” prompts the seizure of a line following lifting of the handset or pressing of the loudspeaker key.

Dialing with automatic line seizure

Lift the handset.

Press key.

The display briefly shows the line number and line status and prompts dialing.

Example:

The line 220870 has been automatically selected.

The LED of line 220870 lights up.

Enter the phone number.

Dialing with selectable line seizure

Lift the handset.

Press key.

You are prompted to press a free line key.


Press a free line key. LED lights up.

Example:

The line 220870 has been automatically selected.


The LED of line 220870 lights up.

Enter the phone number.

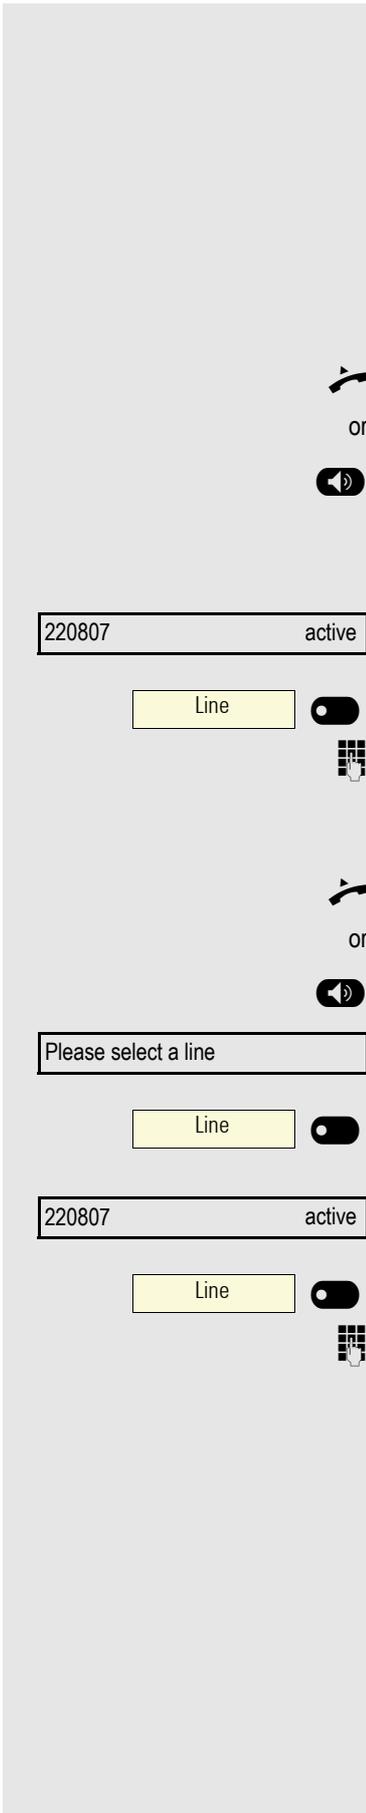

Call waiting with a direct station select (DSS) key

 Requirement: You have set up DSS keys on your phone → page 16. The desired participant's line is busy.



Press the DSS key.

The participant called accepts your call waiting.



Lift the handset.

or



Press the key and use speakerphone mode.



Take note of the meaning of the LED displays on the DSS keys
→ page 16.

During the call

Holding calls on line keys

Press the "hold" key. The LED of the line key flashes slowly.

 Your OpenScape 4000 system can also be configured so that the call is held by pressing the line key. Try it out or ask your relevant administrator.

Holding and then reaccepting a call on a line key

Requirement: You have accepted a call on a line key → page 111 or you are making a consultation call.

Briefly press the current line key,

or



Press key.

The line key on which the call is on hold flashes slowly. The call can be continued on any phone in the team on which the LED of this line key is slowly flashing.

Reaccepting

Press the flashing line key. Proceed with your call.

Exclusively holding and reaccepting a call on a line key

Requirement: You have accepted a call on a line key or you are making a consultation call that only you are able to, intend to, or are permitted to continue.

 
 
 
 
Press the programmed "Exclusive hold" function key.


Select and confirm.

The line key on which the call is on hold flashes slowly. The call can only be continued on your phone and is no longer signaled on any other phones.

Reaccepting

Press the flashing line key. Proceed with your call.



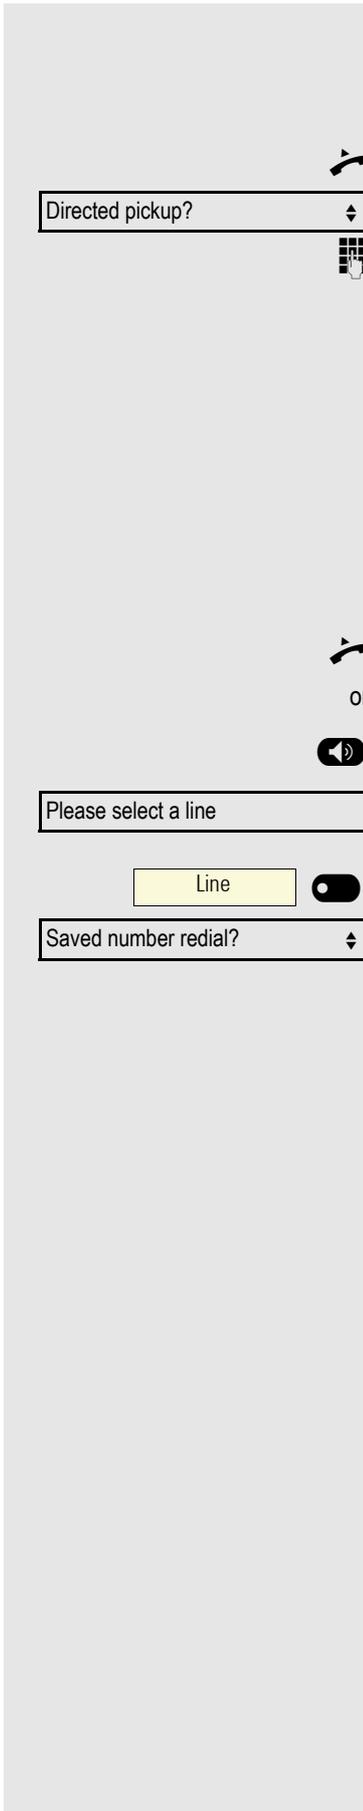

Directed line pickup

A colleague in an open-plan office has parked a call on a line key and calls across the room to ask you to accept the call. You have no access to this line.

Lift the handset.

Select and confirm.

Enter the extension number of the phone on which the call was parked. You can then accept the call.

Saved number redial for a particular line (stored phone number)

If this type of saved number redial is set up on your phone, you can save a phone number for subsequent saved number redialing to a particular line → page 118. You dial the saved extension number with the line and the saved number redial keys.

Lift the handset.

Press key.

Display screen.

Press the relevant line key. LED lights up.

Select and confirm.

The phone number is saved for the current line.



You stored saved number redial on the relevant line can, if necessary, be overwritten by another team colleague.

Most recent extension number dialed for a particular line

The most recent extension number dialed via your main line is saved.

If this type of saved number redial is installed on your phone, each most recently dialed extension number is automatically stored for the current line's saved number redial.



or



Lift the handset.

Press the key and use speakerphone mode.

Line



Press the required line key. LED lights up.

Dial most recent number?

Confirm.



or



Lift the handset.

Press the key and use speakerphone mode.

Saving an extension number for "saved number redial to line"

Requirement: "Saved number redial with stored phone number" has been configured, and not "saved number redial with most recently dialed phone number."

Saving the dialed extension number or extension number of a caller

You have called a participant on a particular line and are still on the phone with him. Or you have been called by another participant, whose phone number was transmitted, and you are still on the phone with him.

Saved number redial



Press key. The phone number is saved for the current line.



Press key. LED goes out.

or



Replace the handset.

Line mailbox

Callers who wish to reach you while you are away can leave a callback request in the mailbox of the relevant line.

In the mailbox you will also find voice or fax messages from the mail server (if configured).

Requirement: A mailbox has been configured for one or more lines.

Please take note that only one user at any one time can work with the same mailbox.

 If your phone belongs to an ONS group (parallel calls → page 144), please note the following special features: signaling in the mailbox (MWI) is available to all phones of an ONS group.

Retrieving messages

If there are new, as yet unqueried entries in the mailbox and a programmable function key has been equipped with the “Mailbox” function, the LED lights up this key.

Also take note of the information on → page 18.

Press the “Mailbox” function key.

Information on the caller is displayed → page 18.

Carrying out a callback request

A callback request is displayed.

Select and confirm. The participant is called on the relevant line.

Next entry

There is more than one entry.

Select and confirm. The following entry is displayed.

Deleting mailbox entries

The relevant entry is displayed.

 
Select and confirm.

Ending mailbox query

Press key.

Select and confirm.

Entries in the mailbox which are not deleted remain saved. If there are as yet unqueried callback requests, the programmed “Mailbox” function key continues to light up.



Start? ▾

Next entry? ▾

Delete? ▾



or

Cancel? ▾



Identifying the line used

If several lines are busy at the same time, you can find out which line you are currently speaking on.

With the programmed function key

Press the programmed “Current line” function key.

Via the menu

Open menu → page 19.

Select and confirm.

Select and confirm.

The line number and line status of the line currently in use are displayed.

Alternately phoning on several lines

Requirement 1: The relevant administrator has determined that the lines are to be held during line transfer and may only be ended by hanging up the handset or with the disconnect key.

Requirement 2: You are connected to different call partners on two or more lines. These could be callers → page 111 or call recipients → page 66.

For example, you are conducting a call on line 1. The line key of the participant on hold flashes slowly.

Press the slowly flashing line key 2. The first call partner is waiting on line 1.


Press the slowly flashing line key 1. The second call partner is waiting on line 2. You can change as often as you like.

Ending connection on a line key

Press key. LED goes out.

or

Replace the handset.

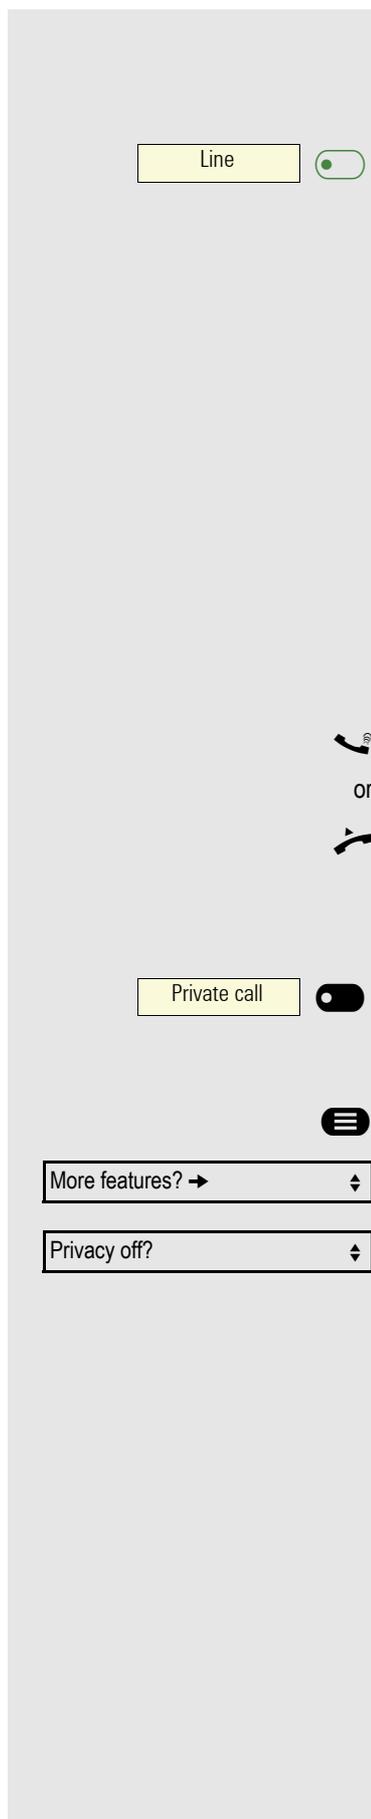

Entering a call on a line (three-way)

Requirement: You are speaking on a line. The LED of the line key lights up.

Press the line key. A conference tone is audible to you and the participants already connected. All three participants can now speak with one another. LED continues to light up.

 Entry is not possible if the “Private call” function is activated for the line. If one of the three participants hangs up, the other two remain connected.

If you as the entering party, and the participant who previously occupied the line, remain on it, no further callback is possible.

Allowing or preventing entry

Allowing entry

It can be preset for your primary line that nobody can enter the line if it is busy. In this case you may allow entry. The authorization applies to the current or following call.

 You are already conducting a call on a line.

or



Lift the handset.

With the programmed function key

Press the programmed “Private call” function key.


Via the menu

Open menu → page 19.

Select and confirm.

Select and confirm.

Entry is now allowed.

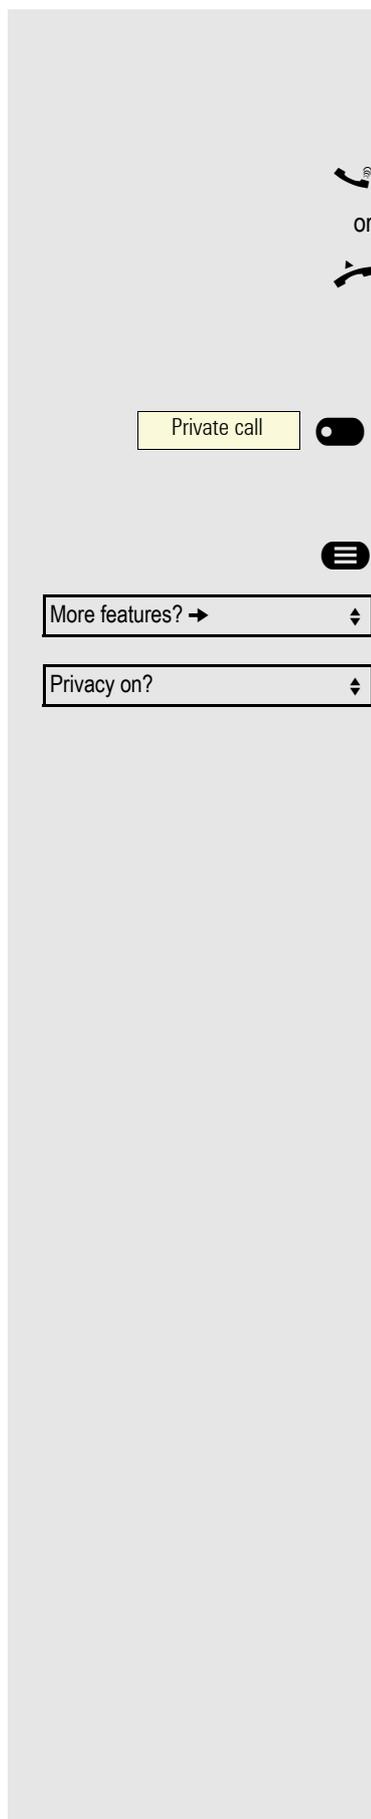

Preventing entry

If no entry protection has been preset, you can prevent the entry. The entry protection applies to the current or following call.

You are already conducting a call on a line.

Lift the handset.

With the programmed function key

Press the programmed “Private call” function key.

Via the menu

Open menu → page 19.

Select and confirm.

Select and confirm. Entry is now prevented.

Witness or tape connection

During a call a previously determined participant can be prompted to enter the call as a “witness” via a programmed “Request silent monitor” function key. The third participant in the call is not informed of the connection of the “witness”. The witness can not participate in the call, only listen in.

 Please take note of the applicable data protection regulations for the configuration and use of witness or tape connection.

Requirement: The witness or tape connection is set up on your system and the programmed “Request silent monitor” function key is set up on your phone. You are conducting a call. “Private call” must be deactivated.

Request silent 

Press the programmed “Request silent monitor” function key briefly twice. A special ringtone sounds on the phone of the “witness” and the message “Witness or tape connection” is shown on your display and that of the “witness”.


or

The “witness” lifts the handset,

Line 1 

presses the line/function key on which the call is being carried out.

The “witness” can now listen in to the call unnoticed.

 Only the “witness” can end the silent monitoring by hanging up or pressing the line key.

Deactivating

Call transfer 

Press the programmed “Call transfer” function key. The LED goes out. A call is again signaled on the phone.

Accepting calls for the manager in the secretarial office

For calls for the manager, the phone rings in the secretarial office.



Lift the handset.

or



Press the key and use speakerphone mode.

Accepting calls for the manager during a call

You are conducting a call.

A call is coming in for the manager.



Ask your call partner to wait.

Pickup



Press the programmed function key "Pickup" (→ page 14).

End and go back?



Ending a call - back to the first call:

Confirm.

Continue the call with the first call partner.

Transferring a call to the manager

Requirement: You have accepted a call for the manager in the secretarial office.

Manager



Press the "Manager" DDS key. You are connected with the manager.

With announcement



Announce call partner.



Replace the handset.

Without announcement



Immediately replace the handset.

Switching calls directly to the manager

If the secretarial office is not occupied, calls for the manager can be immediately switched to the manager. The switch is possible on both the phone in the secretarial office and on the manager's phone.

Activating

Press the programmed function key "Call transfer Manager". LED lights up.

Deactivating

Press the programmed function key "Call transfer Manager". LED goes out.

 Calls for the secretarial office's phone are not switched, only calls for the manager's phone.

Accepting calls on the manager's phone

In the secretarial office a signaled call is not accepted for the manager. After 15 seconds (depending on the system), you will hear an alert tone signal on the manager's phone. The display shows who is calling.

Lift the handset.

Press the programmed function key "Pickup" (→ page 38).

 
Accepting a call for another "Management/Secretarial" team

If several "Management/Secretarial" teams are set up, they can also accept calls for other teams.

Lift the handset.

Press programmed function key, for example, "Manager 3".

 Pickup is also possible during a call. Ask your call partner to briefly wait, before pressing the flashing programmed function key.



Using the second phone for the manager

Requirement: a second phone has been set up for the manager. A programmed “Parking” function key is set up on the manager’s first and second phone.

Parking a call on the first phone

Press the programmed “Parking” function key. LED lights up.

Continuing a call on the second phone

Lift the handset.

Press the programmed “Parking” function key.

Activating/deactivating second call for the manager

As the manager you can determine if calls for you should arrive in the secretarial office while you are on the phone. If you are on the phone and expecting another important call at the same time, it perhaps makes sense to switch on second call.

Open menu → page 19.


Select and confirm.

Confirm.

Confirm

or

confirm.

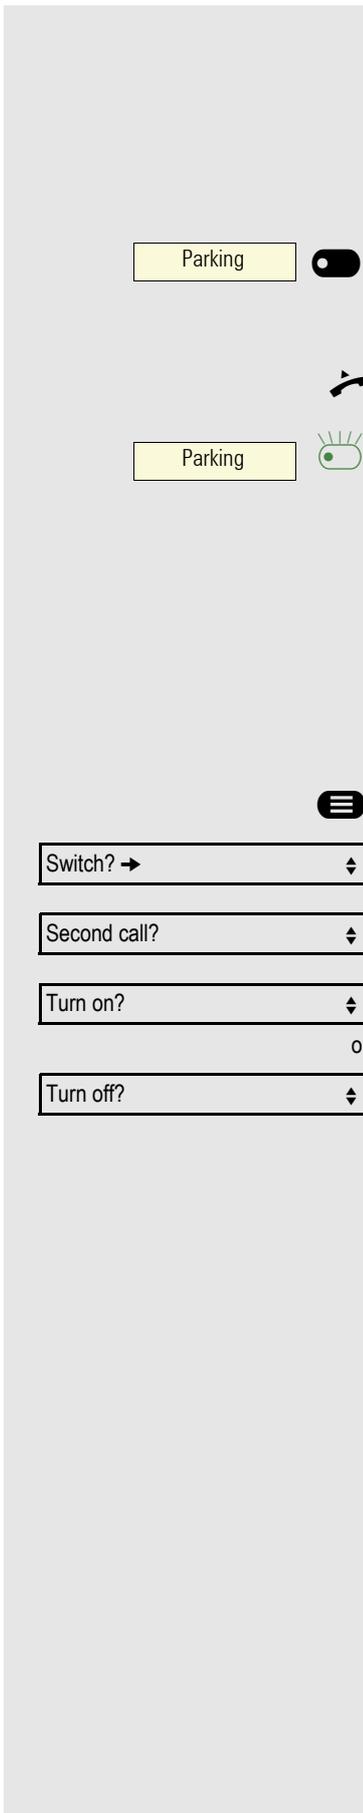

Using buzz function

If, on your manager's phone, a programmed "Buzz" has been set up, you can trigger a buzzing on a particular target phone (e.g. in the secretarial office) via a key press. The extension number of the calling phone is also briefly displayed on the target phone when it buzzes.

The programmed function key can be activated when in idle mode and during the phone call (once or several times).

If no programmed "Buzz" has been set up, you can pick up the handset and enter the "buzz" code to create a buzzing on a target phone.

Messenger calls

You can call up messages with a key press if you configure a relevant key on the manager's phone. Assign function key with function →→ page 14.

Setting a representative for the secretarial office

You can forward calls for the manager that come into the secretarial office to another phone. For this you must set up a programmed "Representative" function key. This works exactly as described in the chapter "Function keys in the menu Favorites" → Page 14 (here Representative).

Activating representative:



Press the programmed "Representative" function key. LED lights up.

Deactivating representative:



Press the programmed "Representative" function key. LED goes out.

Other settings and functions

Save appointments

Appointment function

You can arrange for your phone to call you to remind you of an appointment. For this to happen, you need to save the desired times of the calls. This is possible for the next 24 hours.

Save appointments



Open menu → page 23.

Appointment? ▾

Select and confirm.

It is shown, whether an appointment is saved or not.

New appointment? ▾

First appointment: Confirm.

Other appointment: Select and confirm.



Save? ▾

Enter a 3 or 4-figure time, e.g. 845 for 8:45AM or 1500 for 3:00PM.

Confirm.

Delete saved appointment



Open menu → page 23.

Appointment? ▾

Select and confirm.

A saved appointment is displayed.

Next appointment? ▾

Confirm if you have saved several appointments.

Delete? ▾

Select and confirm.



Press key.

Appointment :



Using timed reminders

Requirement: You have saved an appointment. The saved time arrives.

The phone rings.

Lift the handset. The appointment time is displayed.

Replace the handset.

 Don't pick up the phone, the phone rings several times and "Appointment" is displayed before the appointment is deleted.

Using a different phone for a call in the same way as your own

You can identify yourself with a personal identification number (PIN) on a different phone of the OpenScape 4000-system (also on telephones of interlinked OpenScape 4000-systems, e.g. at other company locations). Then you can use the other phone

- calling with cost allocation,
- dial with project assignment,
- Check your mailbox,
- Use a phone number stored on your phone for redial,
- Enter appointments.

With an internal PIN you can divert your calls to another telephone at your place of residence (call forwarding "redirect")

Identify yourself on another phone

Requirement: You have received a PIN from your responsible administrator. An internal PIN is required for your own OpenScape 4000-system. For other OpenScape 4000-systems in the network, you need a network-wide PIN.

Open menu → page 23.

Select and confirm.

Select and confirm.


If you have several PINs and you want to use another, select another PIN.

Upon the display of "Enter the phone number:" or "Enter ID", you are prompted to enter the PIN.

PIN and license of service? 

PIN 1? 



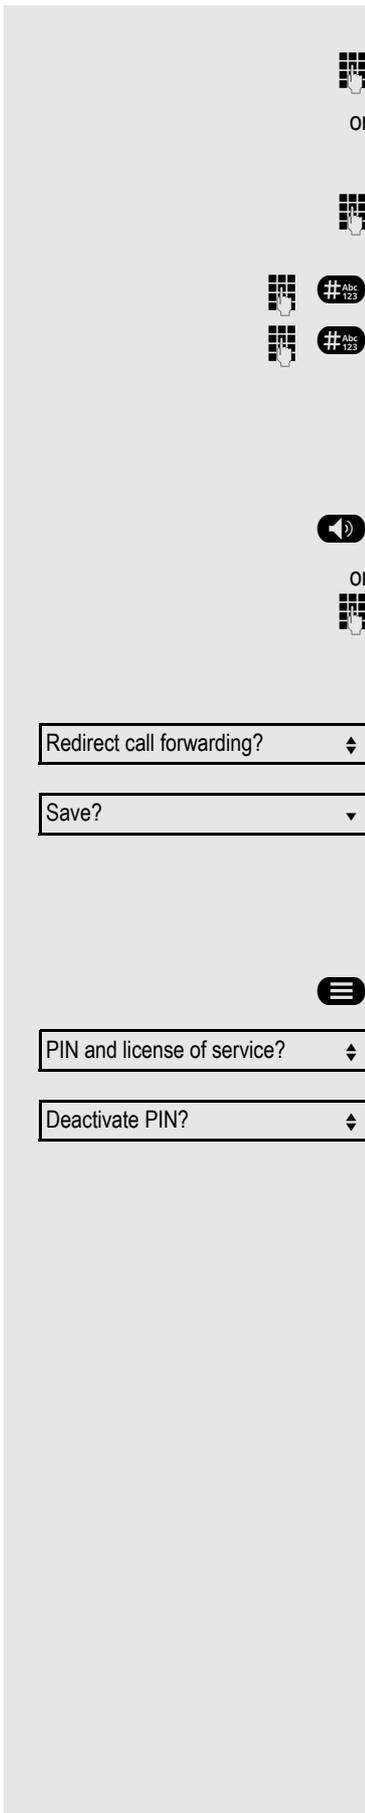

Applies in own OpenScape 4000 area

Enter internal PIN.

The network applies in your own and other OpenScape 4000-systems

Enter the 2-digit node code for your own OpenScape 4000-system (ask responsible administrator).

Enter your own phone number and press the hash key.

Enter network-wide PIN and press hash key.

Dial after successful identification.

You hear the dial tone. "Please dial" Appears in the display.

Press key.

Enter a phone number immediately.

Retry call forwarding after successful identification

Select and confirm.

Select and confirm. Call forwarding is active.

Switch off identification on another device

Open menu → page 23.

Select and confirm.

Select and confirm.



The identification is automatically switched off if the different device is not used for several minutes.

Set your own connection to another phone (Mobility)

You can route the connection of your telephone to a different telephone with most of the functions and features (number, key assignment, authorizations). The "home phone" is disabled and the "guest phone" becomes "your" phone. The original connection of the "guest phone" is also deactivated, therefore a call forwarding key should be set up for its phone number beforehand → page 73. The re-route remains in place until you log out of the "guest telephone" again. The re-route can also be implemented for the entire network.

Mobility variants

There are two variants available for mobility:

- Basic
- Data privacy

Configuration is carried out by the technician.

Basic

When "logging on" to the "guest telephone", the following settings are transmitted from the mobile connection:

- Key assignment
- Authorizations
- Call forwarding

In addition, outstanding messages or texts are signaled.

"Guest phone" conversations are visible and can be used.

The conversations you have had in the meantime are automatically deleted from the phone once you log off.

Data privacy

When "logging on" to the "guest telephone", the following settings are transmitted from the mobile connection:

- Key assignment
- Call forwarding
- Authorizations (apart from user password)

In addition, outstanding messages or texts are signaled. The user password is not transferred, so you have to create a new password on the phone.

An empty conversation list is available to you which will be automatically deleted again after logging off from this phone.

Connect to "guest telephone"


Log on to own connection on the "guest phone".

Open menu → page 23.

Select and confirm.



Mobile HFA Logon? ▾

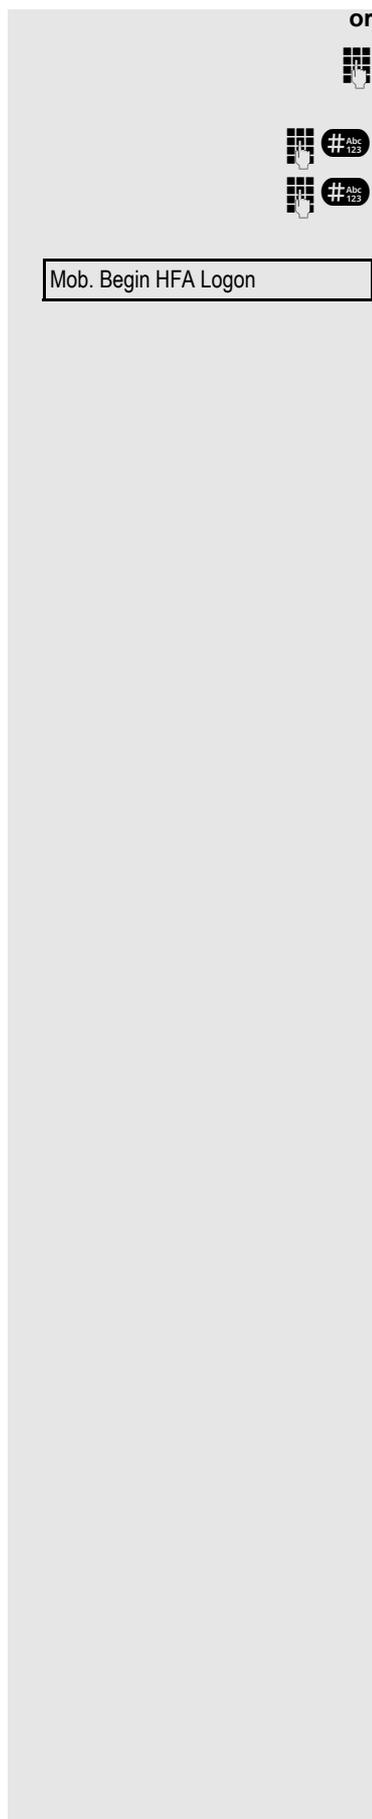

in phone’s idle mode.

Enter the system code for “mobile HFA Logon” (e.g. 125).

Enter “home” phone number and press hash key.

Enter ID and press hash key.

The login procedure starts.

After logging in, you will see your own phone number in the last line.

The original user settings of the “guest phone” are no longer visible, but your connection is available. Your “home phone” can not be used during this time.

Connect to "home phone" again

Log off via the "guest phone"

If you no longer require a connection to the "guest phone", and/or if you want to switch again to your "home phone", log off from the "guest phone".

Open menu → page 23.

Select and confirm.

in phone's idle mode.


Enter system code for "mobile HFA logoff" (e.g. 126).

The logoff procedure starts.

Log off via the "home phone"



If you have forgotten to log off on the "guest phone", you can pick up from the "home telephone".

Display on the "Home phone".

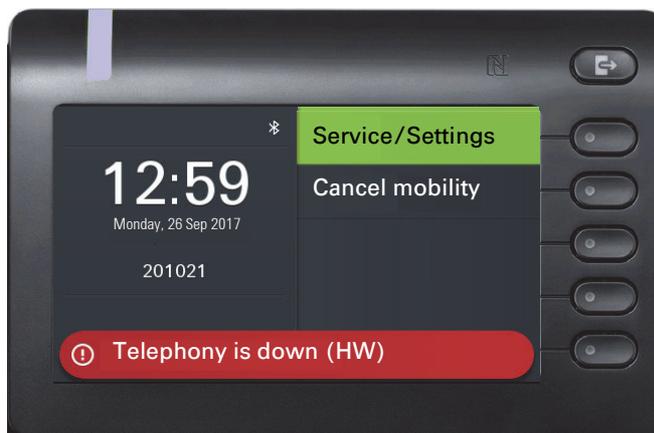

Confirm.

If your responsible administrator has activated the "Mobility password", you are prompted to enter it now.

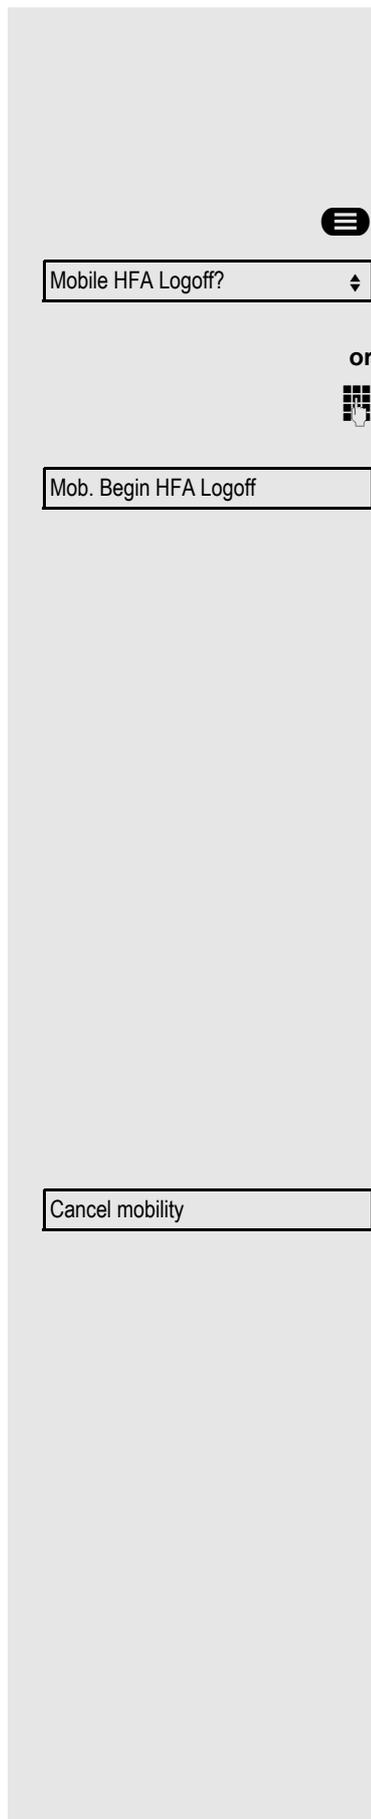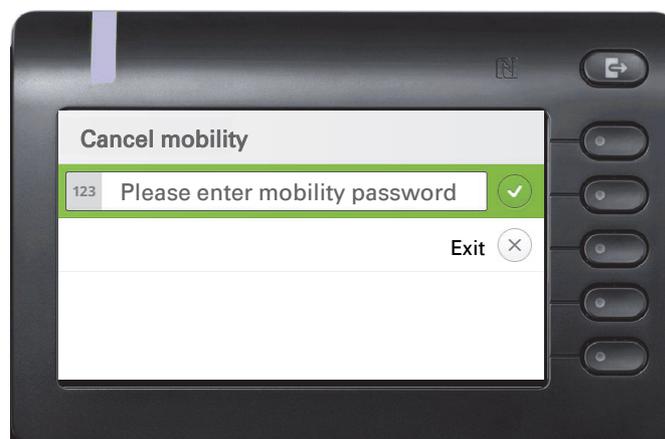



Please enter the “mobility password”.

The "guest phone" is now once more available with its original phone number, features, and functions. Any call forwarding that may have been set up can be cancelled.

The "home phone" is activated again and you can make calls as usual.

Transfer connection to next phone

If you want to transfer your connection from the first "guest phone" to a second "guest phone", log in to the second "guest phone" (see → page 131).

The message "Logout successful" is displayed on the first "guest phone". The “home phone” remains locked. You can now use the second "guest phone" as the first.

OpenScape 4000 as house call system (intercom system)

You can speak to an internal subscriber on the OpenScape 4000 directly using the loudspeaker on their phone to set up a connection. You can also initiate a speaker call from a consultation call. The following functions are possible:

- System-wide voice calling
 - to a variable destination
 - to a fixed destination
- Speaker call in a group
 - to a variable destination
 - to a fixed destination
- Intercom within a group
 - to a variable destination
 - to a fixed destination
- Announcement to all members of a management group

You can cancel the voice calling or the announcement by placing the handset on hold, or resuming the call during a consultation.



For all functions, ensure that the Speaker call protect of the concerned phones is switched off → page 147.

If a subscriber is addressed directly whose speaker call protect is activated, the direct answer is ignored and a normal call is made.

System-wide voice calling

You can initiate a speaker call with any internal participant whose phone has a hands-free function or a loudspeaker.

Speaker call to a variable destination

A target subscriber is contacted via their internal phone number.

Lift the handset.



or



Press the key and use speakerphone mode.



System code for "Speaker call-one-way" (ask relevant administrator if necessary)

or

Speaker call



Press programmed "Speaker call" key.



Enter internal phone number of subscriber.

A connection to the target's loudspeaker is established immediately, if

- not busy,
- the handset isn't lifted,
- and the speaker call protect isn't activated.



The caller receives a confirmation tone when the connection is established and they can talk.



The receiver can establish the connection by picking up the handset.



When the receiver the loudspeaker key

or

Line 1



presses the line key (if set-up), the connection is cancelled.



The amount of possible speaker calls corresponds to the number of possible normal connections.

123456



Speaker call to a target destination

The system code for “Speaker call-one-way“ and the destination phone number are programmed on a destination dial key → page 73.

Press programmed dial key. It will immediately establish a connection with the destination's loudspeaker.

Speaker call in a group

Establishing a normal connection within a group or team (with team call= speed dial number for team members 0-9 or 00-99) can also be done via speaker call. Speaker call call is initiated by a group phone.



The “Voice call group participants“ function is line-independent - anyone can voice call anyone else.

Speaker call to a variable destination



Lift the handset.

or



Press the key and use speakerphone mode.



System code for “Voice call group participants“ (ask relevant administrator if necessary).

or

Call group participants



Press programmed key for “Call group participants“.



Enter the speed dial code for the corresponding group member.

A connection to the target's loudspeaker is established immediately, if

- not busy,
- the handset isn't lifted,
- and do not disturb mode isn't activated.



The recipient answers the speaker call by picking up the handset.




When the receiver the loudspeaker key

or

123456



presses the line key (if set-up), the connection is cancelled.

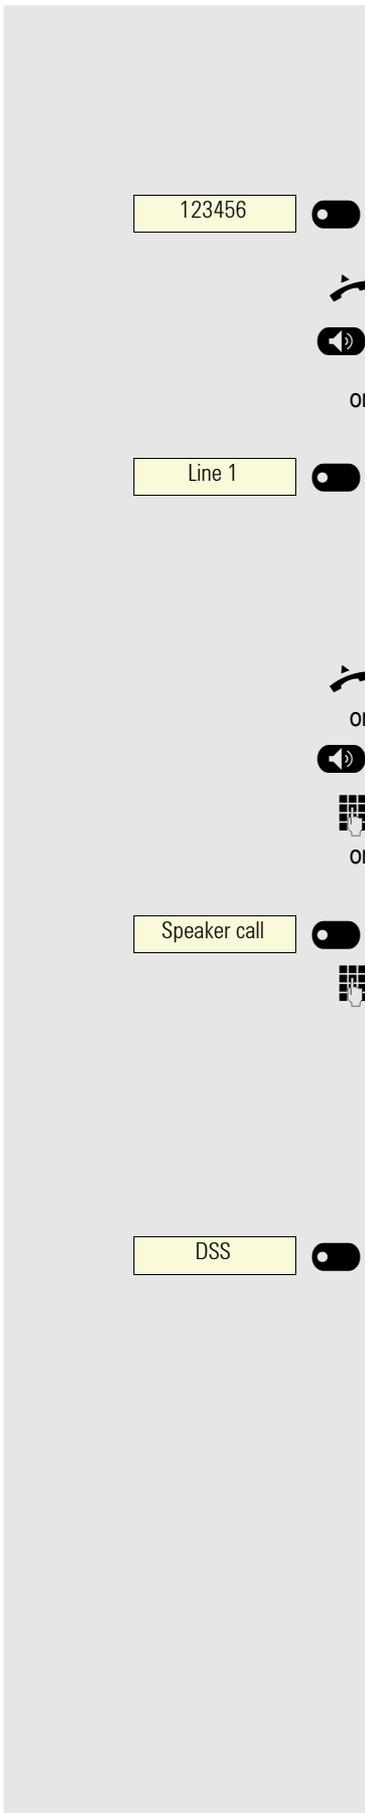

Speaker call to a target destination

The system code for “Voice call group participants” and the speed dial number for the corresponding group member are programmed on a destination dial key → page 73.

Press programmed dial key. It will immediately establish a connection with the destination's loudspeaker.

The receiver can establish the connection by picking up the handset.

When the receiver the loudspeaker key

or

presses the line key (if set-up), the connection is cancelled.

Speaker call to a variable target

When talking in a group, the loudspeaker and microphone on the target phone are automatically turned on.

Lift the handset.

or

Press the key and use speakerphone mode.

System code for “Speaker call” (ask relevant administrator if necessary)

or

Press programmed key for “Speaker call”.

Enter the speed dial code for the corresponding group member.
Loudspeaker and microphone of the target phone are automatically turned on.

Speaker call to a target destination

The system code for “Speaker call” and the speed dial number for the corresponding group member are programmed on a destination dial key → page 73.

Press programmed key.

Loudspeaker and microphone of the target phone are automatically turned on.

Announcement (Broadcast) to all members of a management group

With this function, you can send an announcement to all members (10 to 40) of a management group at the same time.



After you have set the group call, you will receive a confirmation tone when you can start the announcement.



Lift the handset.

or



Press the key and use speakerphone mode.



System code for “Speaker call-1-way bcst” (ask relevant administrator if necessary)

or

Speaker call-1-



Press programmed “Speaker call-1-way bcst” key.



Enter the internal phone number of a group member.



The loudspeakers of all group telephones are automatically switched on and you receive a confirmation tone. You can begin the announcement.



Hang up the handset to end the announcement.



Once a group member lifts the handset, they are then connected to you and the announcement is cancelled.



When a group member presses the loudspeaker key

or

DSS



the concerned line key of the announcement, he will then be separated from the announcement. If the last remaining member of the group presses the loudspeaker or line key, the announcement is ended.

Forward calls for another connection

You can save, turn on, query, and turn off call forwarding for another phone, fax, or PC connection from your own phone. To do so, you must know the PIN of the connection or the authorization "Call forwarding for external connection". In both cases, the responsible administrator of your system will help you.

Save destination for other phone - Activate call forwarding

The screenshot shows a vertical list of settings on a light gray background. At the top right is a hamburger menu icon. Below it are several menu items, each with a dropdown arrow or a numeric keypad icon:

- Destinations? (dropdown arrow)
- Forward phone number.:? (up/down arrow)
- Variable Forwarding? (dropdown arrow)
- [Numeric keypad icon]
- Complete? (dropdown arrow)
- [Numeric keypad icon]
- Complete? (dropdown arrow)
- [Numeric keypad icon]
- Save? (dropdown arrow)

Open menu → page 23.

Confirm.

Select and confirm.

Confirm.

Enter phone number of other phone.

Confirm.

Enter PIN

Confirm.

Enter the destination phone number.

Select and confirm. Call forwarding is active.

Save destination for fax /PC/busy stations- call forwarding activated

Open menu → page 23.

Confirm.

Select and confirm.

Enter the code for the desired call forwarding type. Codes are assigned by the responsible administrator. In the table, you can enter the key figures that are valid for you:

"Forwarding for Fax":
"Forwarding for PC":
"Forwarding for Busy":

Enter phone number of other connection.

Confirm.

Enter PIN

Confirm.

Enter the destination phone number.

Confirm.

Call forwarding is active.

Check/turn off call forwarding for other phone

The screenshot shows a vertical list of settings on a light gray background. At the top right is a hamburger menu icon. Below it are several settings, each with a dropdown arrow or a numeric keypad icon:

- Switch? (dropdown arrow)
- Forward phone number.:? (dropdown arrow)
- Variable Forwarding? (dropdown arrow)
- [Numeric keypad icon]
- Complete? (dropdown arrow)
- [Numeric keypad icon]
- Complete? (dropdown arrow)
- Turn off? (dropdown arrow)
- or
- Query? (dropdown arrow)
- 3428----->8968

Open menu → page 23.

Select and confirm.

Select and confirm.

Confirm.

Enter phone number of other phone.

Confirm.

Enter PIN

Confirm.

Deactivating


Confirm.

Query

Select and confirm.

Example for the display:

Calls to connection 3428 are redirected to connection 8968.

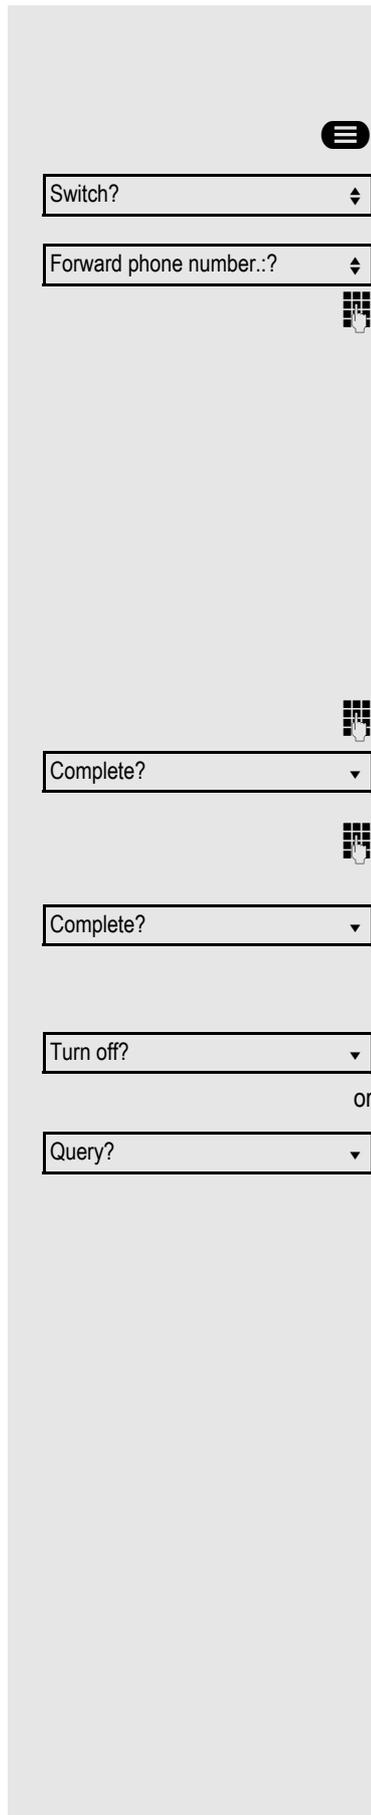

Check/deactivate call forwarding for fax/PC/busy stations

Open menu → page 23.

Select and confirm.

Select and confirm.

Enter the code for the desired call forwarding type. Codes are assigned by the responsible administrator. In the table, you can enter the key figures that are valid for you:

"Query call forwarding for fax":
"Query forwarding for PC":
"Query call forwarding for busy":
"Deactivate call forwarding for fax":
"Deactivate call forwarding for PC":
"Deactivate call forwarding for busy":

Enter phone number of other connection.

Confirm.

Enter PIN

Confirm.

Deactivating

Confirm.

Check

Select and confirm.

Change call forwarding for other connection

To do this, follow the same procedure as for saving / switching on: for a different phone → page 140, for fax, PC, or busy → page 141.

Special functions for parallel call (ONS)

If your telephone is integrated into an ONS group (ONS = "One Number Service"), you can be connected to all other telephones of this group in the same way as on your own telephone. To set up an ONS group, contact your responsible administrator.

One ONS group may consist of max. 3 phones (phone numbers).

ONS Group



A (Master)

B

C

Max. one group member may be an external telephone (e.g. a cell phone). One phone in the group is the "master" (**A**), whose number also given to the other members (**B**, **C**) of the ONS group.

If **A**, **B** or **C** are called then all the phones in the ONS group will ring. If **A**, **B**, or **C** is busy, all phones in the ONS group are busy (busy tone for a caller from outside the ONS group). Within the ONS group, the phones can be reached with their original call numbers.

Further effects on the phones of internal participants of an ONS group are also available with the following features:

- Call waiting → page 82
- Call forwarding → page 73
- Do not disturb → page 146
- Mailbox (MWI) → page 119
- Callback → page 76
- Conversations → page 28



If your ONS group contains a cell phone, make sure that it is always available (switched on). Otherwise it can lead to problems with the call signaling for other ONS group participants due to the premature call acceptance by the mobile mailbox.

Leaving/entering a hunt group

Requirement: A hunt group is set up for the team.

You can take yourself out of the hunt group at any time, e.g. when you leave the workplace. When you are present, you enter the group again.



You also remain contactable when disconnected via your own phone number.



Switch? ▾

Open menu → page 23.

Select and confirm.

Hunt group? ▾

Select and confirm.

Turn off? ▾

Confirm

or

Turn on? ▾

confirm.

Private / Security

Activating/deactivating do not disturb

If you do not wish to take calls, you can activate do not disturb. Internal callers hear the ringing tone and the message "Do not disturb." External callers are forwarded to the operator. The responsible administrator can also set up call forwarding destinations to redirect internal and external calls.

➡ If your phone belongs to an ONS group (parallel calls → page 144), please note the following special features:

The call protection can be switched on/off on each phone of the ONS group and then applies to all phones in the ONS group.

Requirement: The responsible administrator has generally released the do not disturb for all OpenScape 4000 participants in your system.

Open the menu → page 23.

Select and confirm.

Select and confirm. The display shows whether do not disturb is switched on or off.

Confirm.

or

confirm.

➡ A sound reminds you that do not disturb is activated after you lift the handset.

The operator can bypass the call protection and reach you.

If the responsible administrator has generally blocked the do not disturb for the OpenScape 4000, the menu point "Do not disturb?" does not appear in the service menu.



Switch? ▾

Do not disturb? ▾

Turn on? ▾

Turn off? ▾

Speaker call protect on/off

You can prevent yourself from being contacted directly. Any attempt to talk to you directly via the loudspeaker will then result in a normal call.

Open menu → page 23.

Select and confirm.

Select and confirm. The display shows whether the speaker call protect is switched on or off.

Confirm.

confirm.

Caller ID suppression

The display suppression applies only to a subsequent call and is not stored during the redial → page 118 selection.

Open menu → page 23.

Select and confirm.

Confirm. The dial tone is audible.


Enter phone number of subscriber. If the subscriber accepts the call, your number is not displayed.


User password

With your User password you protect your user settings. You can also use the User password to fully lock your phone → page 150.

The administrator may have configured the following settings:

- The password is deactivated: You do not have the option to configure user settings. The message "Password is disabled" is displayed.
- The password is temporarily locked: You do not have the option to configure user settings at this time. The message "Password is suspended" is displayed.
- After initially logging on to a user area, you may have to replace the default password with a new password.
- A password can have a predefined period of validity: You will have to create a new password when the period ends. The message "Change password (x days remaining)" will alert you to this at the appropriate time. The message "Password has expired" appears when the validity period has expired. Confirm "Change password" and change the password as described in this section.
- If you repeatedly enter the wrong password (2 to 5 times), additional attempts are blocked. You can make another attempt after a predefined time.
- It is possible that you will not be able to re-use a previously used password for a period of time, which means you have to create another "new password".
- Your administrator can tell you about the rules for which and how many characters can or must be used in the password.

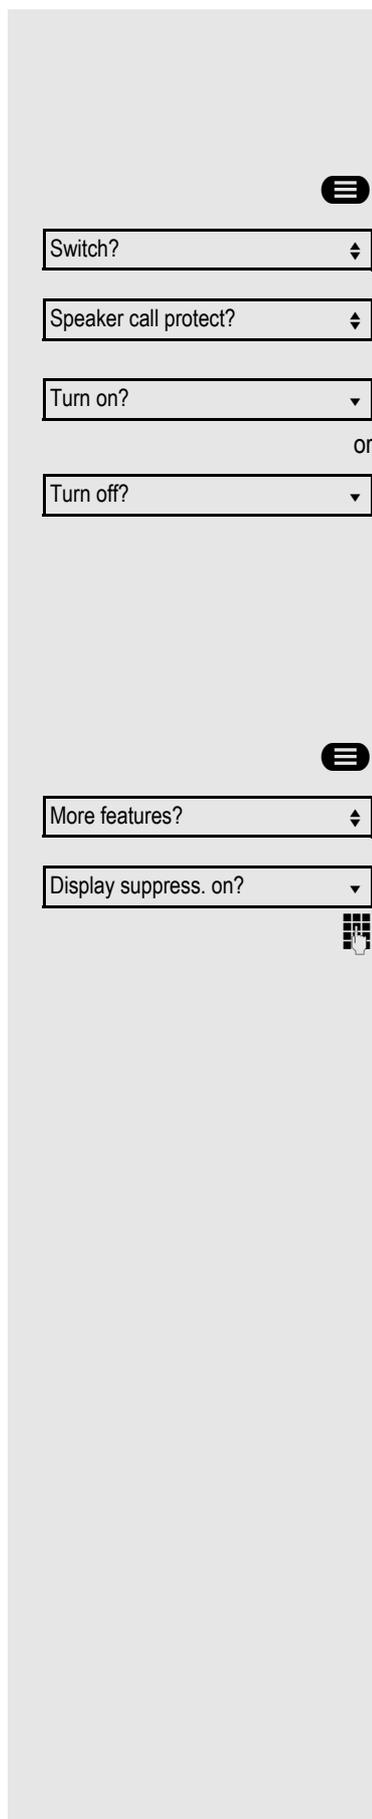

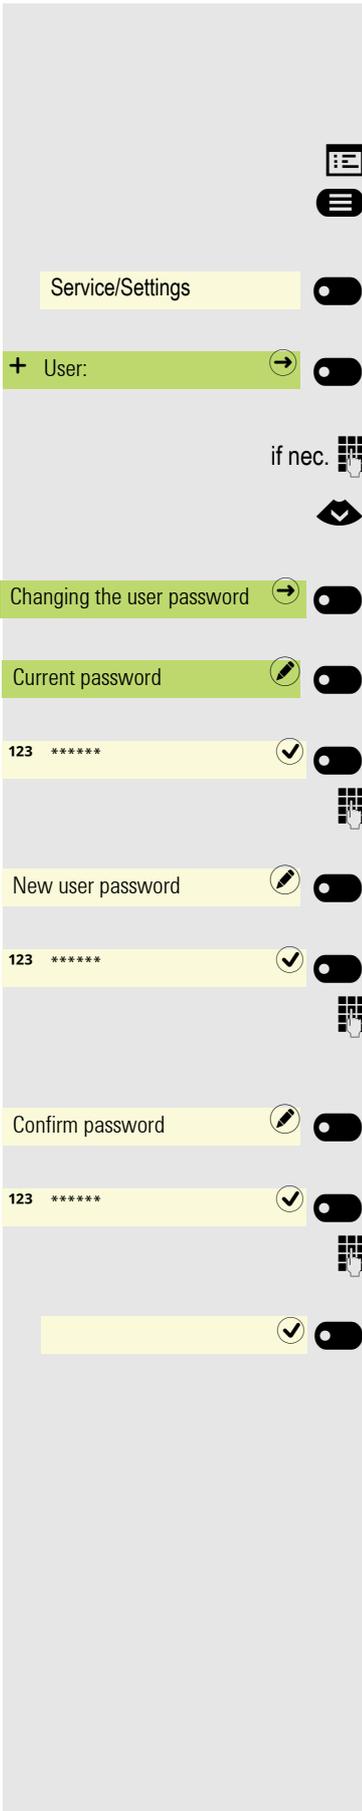

➡ The preset password "000000" corresponds to a blank password. In other words, the phone cannot be locked and the user menu is **not** password protected (see also → page 148).

You can also configure this setting via the Web interface → page 165.

If nec. Press the Main Menu key.

Open using the softkey

Open using the softkey

if nec. Enter and confirm the User password.

Select "Changing the user password."

Open using the softkey

Open using the softkey

The input field is displayed.

Enter the current password and conclude your input with the softkey.

Open using the softkey

The input field is displayed.

Enter the new password (at least 6 characters) and conclude your input with the softkey.

Open using the softkey

The input field is displayed.

Re-enter the new password and conclude your input with the softkey.

Save your input. The new password is now valid.

Deactivating the password prompt

You can deactivate the phone's password prompt if a password has already been configured.

➡ Deactivating the password prompt does not apply to the Web interface → page 165. As long as the password prompt is deactivated, you do not have access to the web interface via the User settings.

If you deactivate the password prompt, you can **no longer** lock the phone → page 150 and the user menu is **not** password protected.

	<p>If nec. Press the Main Menu key.</p>
<p>Service/Settings </p>	<p>Open using the softkey</p>
<p>+ User:  </p>	<p>Open using the softkey</p>
<p>if nec. </p>	<p>Enter and confirm the User password.</p>
<p></p>	<p>Select "Changing the user password."</p>
<p>Changing the user password  </p>	<p>Open using the softkey</p>
<p>Current password  </p>	<p>Open using the softkey</p>
<p>123 *****  </p>	<p>The input field is displayed.</p>
<p></p>	<p>Enter the current password and conclude your input with the softkey.</p>
<p>New user password  </p>	<p>Open using the softkey</p>
<p>123 *****  </p>	<p>The input field is displayed.</p>
<p></p>	<p>Enter 6 zeros ("000000") to deactivate the password request. Confirm your input with the softkey.</p>
<p>Confirm password  </p>	<p>Open using the softkey</p>
<p>123 *****  </p>	<p>The input field is displayed.</p>
<p></p>	<p>Enter 6 zeros ("000000") once again. Confirm your input with the softkey.</p>
<p> </p>	<p>Save your input. The password is now deactivated.</p>

Locking the phone to prevent misuse

You can stop unauthorized parties from using certain functions on your phone while you are away. E.g. the dialing of external phone numbers and access to your mailbox can be prevented. Ask your administrator which features are locked.

Requirement: You have received a corresponding code number from the responsible administrator.

Locking the phone in the system

Locking the phone

Open menu → page 23.

Select and confirm.

Select and confirm.

Enter ID.

“Carried out” is displayed upon successful entry.



When the receiver is disconnected, a special dial tone is heard. OpenScape 4000-internal can be selected as usual.

Unlock the phone again

Open menu → page 23.

Select and confirm.

Select and confirm.

Enter ID.


"Carried out" is displayed upon successful entry.


Lock local phone

Locking the phone

To protect the phone against unauthorized access, you can lock the phone so that nobody can make calls or change settings without knowing the User password.

Predefined numbers from the dial plan can still be dialed when the phone is locked. For more information, contact your administrator.

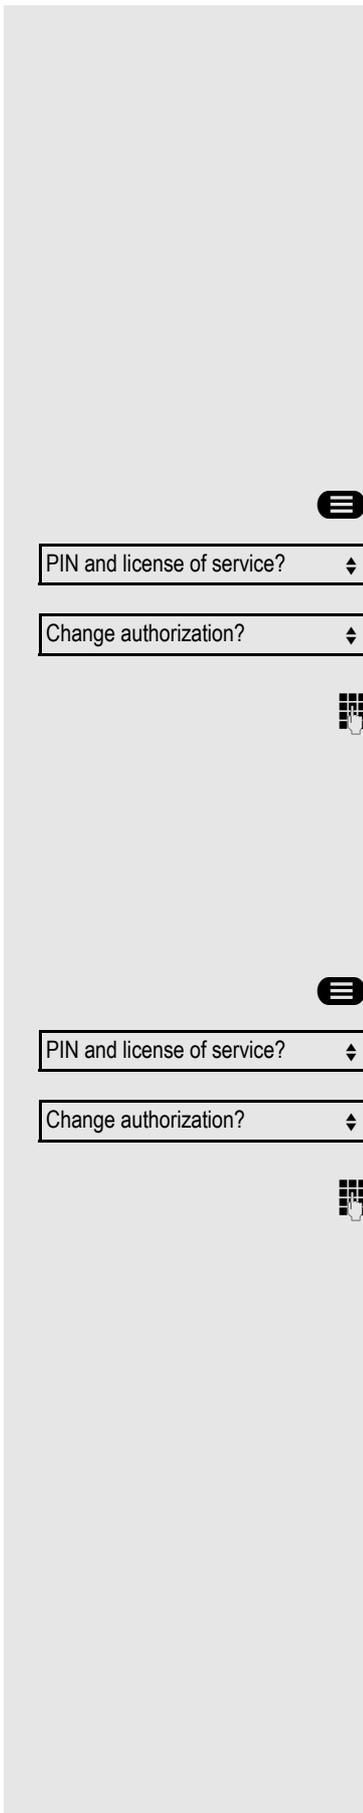

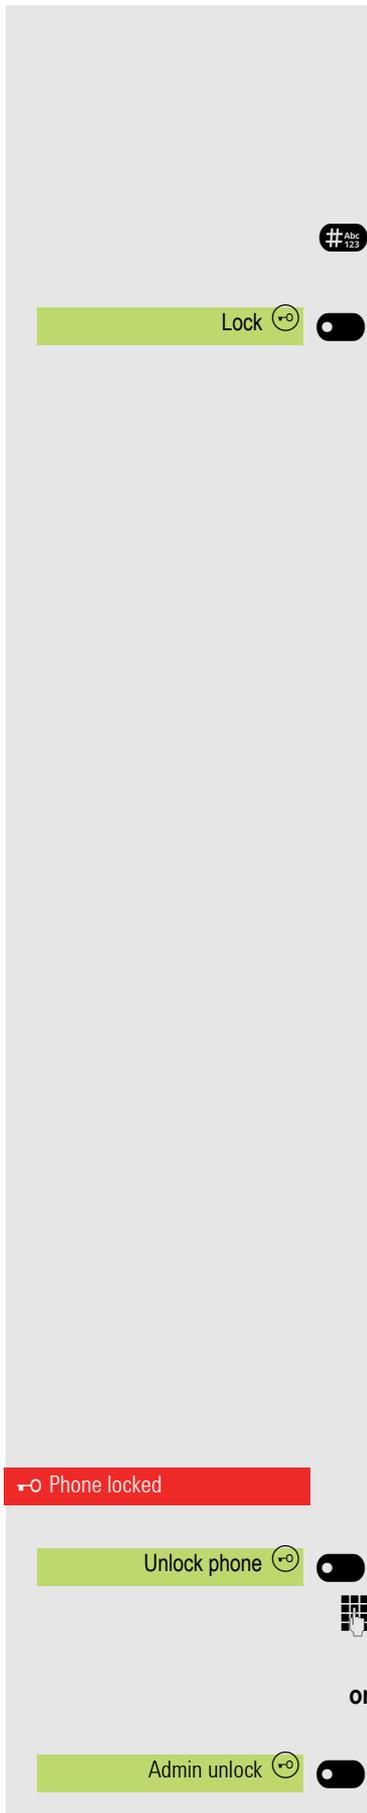

➡ You can only lock the phone if you set a User password → page 147. The password for this must **not** be the default setting "000000." Check, if necessary, whether the phone lock function has been activated for you by the administrator.

Activating the phone lock

Hold down the key until the "Lock phone" message appears.


Press the softkey to activate the lock.

Dialing an emergency number

If an emergency number is entered on the phone by the administrator, Emergency call appears on the display for selection when you have activated the lock. You can also enter the emergency number via the dialpad.

The emergency call numbers pre-configured by the administrator can be called at any time via the dialpad in the locked state.

➡ The number will be dialed automatically without pressing the **OK** button. An empty option on the screen will be shown, therefore if you accidentally press the **OK** button, the call will not be canceled.

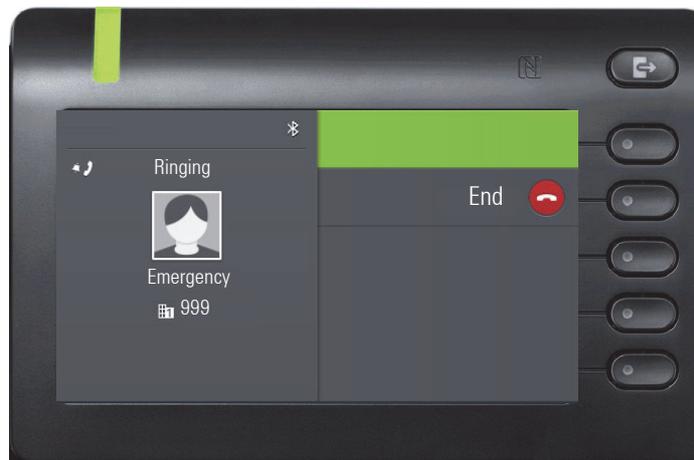

Unlock phone

The display shows: Phone locked.

Press the softkey.

Enter and confirm the User password, the phone is unlocked if the password is correct.

Press the softkey.



Enter the administrator password if you do not know the User password. Confirm with the softkey. The phone is unlocked if the password is correct.



If the telephone is locked, an emergency number entered by the administrator can be input using the dial pad or dialed with the Emergency call option. If the phone is locked, selected dialing keys (see→ page 38) cannot be used. This also applies if the emergency number is saved on this key.

Secure calls

Query status in idle mode

When the phone is idle, you can check whether the secure calling is active on your phone.

Open the idle menu → page 23.

Select and confirm.

The status display corresponding to the set security mode is displayed.

A connection is only encrypted if the other side also supports the encryption.

Connections are always encrypted.

 If the entry "Use secure calls?" appears in the idle menu, the function is not activated.

Querying the status when connected

During the call you can query whether your call is secure.

Select.

The call is secure.


The call is not secure.

Information about secure calls

The responsible administrator can determine whether and how you are notified of unencrypted calls in your communication system.

Warning tone.

Display screen.

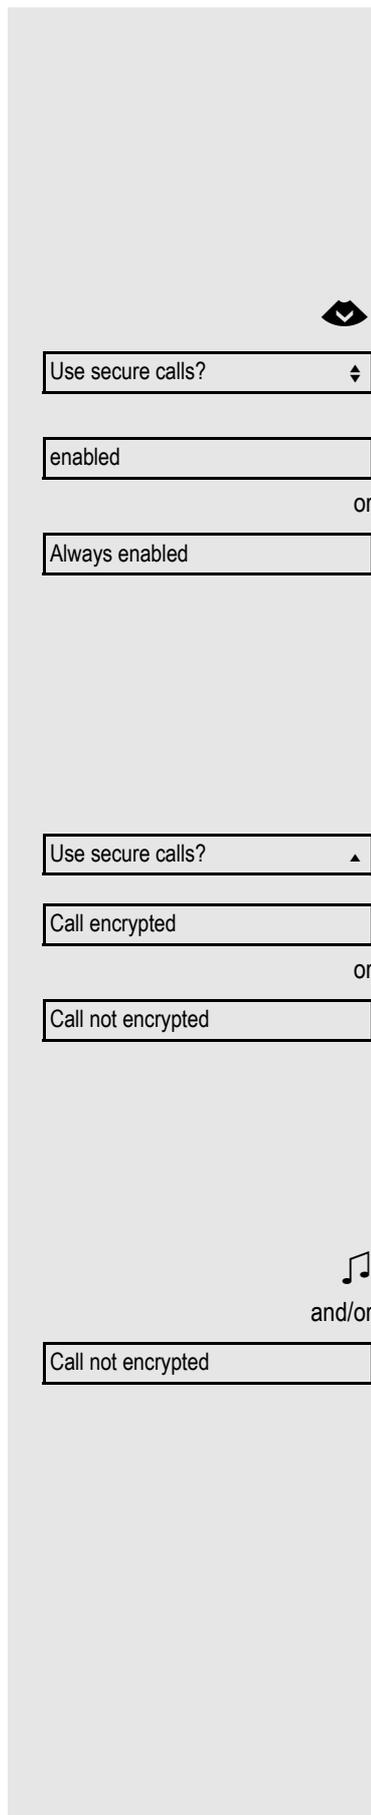

Identifying anonymous callers ("tracing")

 This function must be set up by your responsible administrator.

You can have malicious external callers identified. The caller's phone number can be determined during the call or up to 30 seconds afterwards. You are not allowed to hang up.

Open menu → page 23.

Select and confirm.

Select and confirm.

 If the capture circuit was successful, the data obtained is stored with the network operator. Please contact your responsible administrator.



More features? ▾

Trace? ▾

Local phone settings

Audio settings

Volumes


Set the volume here, for instance, for the loudspeaker, handset, or headset.

You can preset different volumes for the following microphones and signals in ten levels:

- Loudspeaker
- Ringer
- Handset
- Headset
- Handsfree
- Rollover
- Warning tone

You can also configure this setting via the Web interface → page 165.

If nec. Press the Main Menu key.

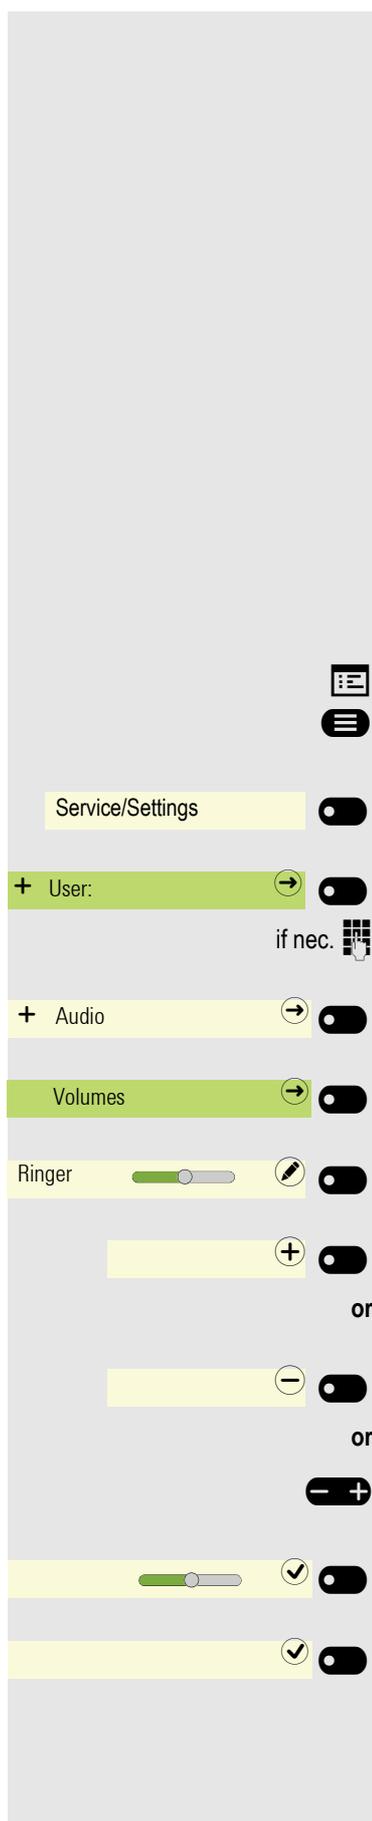

Open using the softkey

Open using the softkey.

if nec. Enter and confirm the User password.

Open using the softkey.

Open using the softkey.

E.g. open the Ringer with the softkey¹.

Use the softkey to increase the volume.

or

Use the softkey to decrease the volume


or

Adjust using the toggle key

Confirm the setting with the softkey.

Save setting.

1. The display shows the current setting

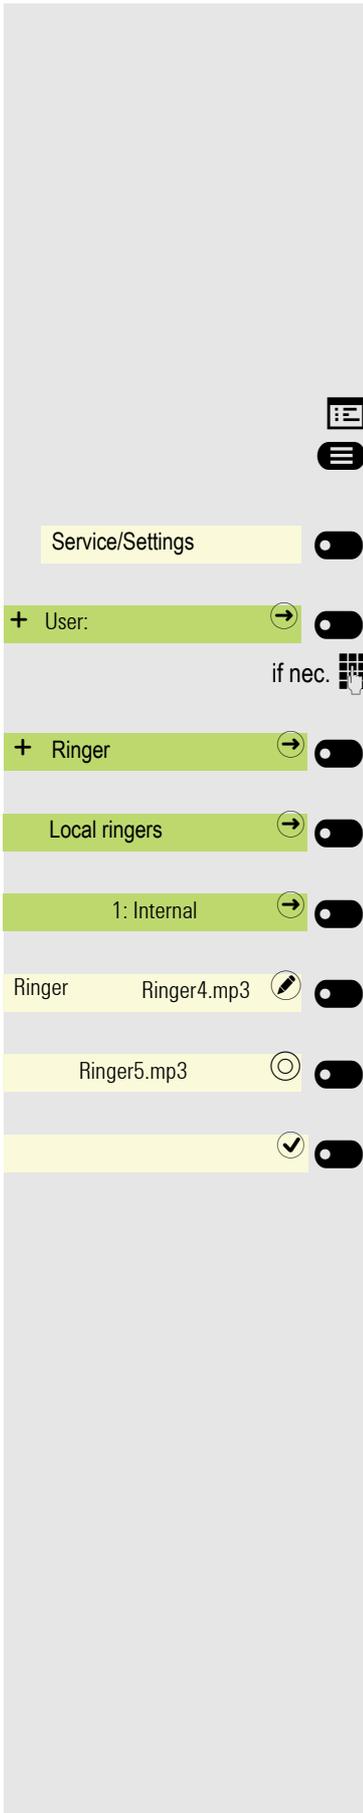

Set local ringtones

Select and configure call type

The ringer mode "local ringtone" is set. Not all of the following types have to be used:

- 1: Internal
- 2: External
- 3: Notification call 2

Select the desired call type and configure it according to your requirements.

You can also configure this setting via the Web interface → page 165.

If nec. Press the Main Menu key.

Open using the softkey

Open using the softkey.

if nec. Enter and confirm the User password.

Open using the softkey.

Open using the softkey.

Open with the softkey, e.g. to make settings for the internal ringer.

Open using the softkey.

Confirm with the softkey to e.g. select this tone file.

Save setting.

If you have selected the "Pattern" instead of a ringer file, you can still set the values for "Pattern melody" and "Sample sequence".

Ringer mode

With both Ringer mode options


- HiPath
- Local ringer

determine who generates the ringtone on the phone. With the "HiPath" setting the system emits the ringer type and the related ringer, which you can adjust later → page 155.

If "local ringer" is selected, the phone sends the ringtone type and then you determine which ringtone should ring for the respective ringtone type in the "local ringtone" menu yourself → page 156.

You can also configure this setting via the Web interface → page 165.

If nec. Press the Main Menu key.

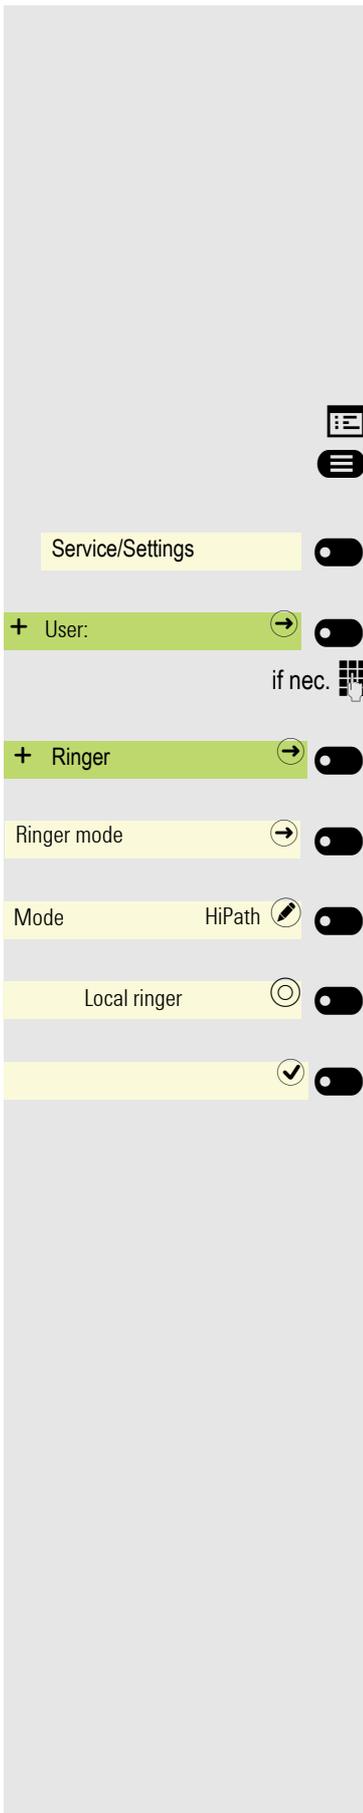

Open using the softkey

Open using the softkey.

Enter and confirm the User password.

Open using the softkey.

Open using the softkey.

Open using the softkey.

Confirm with the softkey to set "Local ringer".

Save setting.



Insecure call alert

You can also configure this setting via the Web interface → page 165 .

If nec. Press the Main Menu key.

Open using the softkey

Open using the softkey.

Enter and confirm the User password.

Open using the softkey.

Open using the softkey.

Activate with the softkey Insecure call alert.

or

Deactivate with the softkey Insecure call alert.

Save setting.

Block dialing for outgoing calls

If block dialing is displayed, when deleting a phone number, for example, all of the characters available in the field are deleted at once. If block dialing is switched on, you can delete individual characters.

You can also configure this setting via the Web interface → page 165.

If nec. Press the Main Menu key.

Open using the softkey

Open using the softkey.

Enter and confirm the User password.

Open using the softkey.


Open using the softkey.

Activate with the softkey Block dialing.

or

Deactivate with the softkey Block dialing.

Save setting.

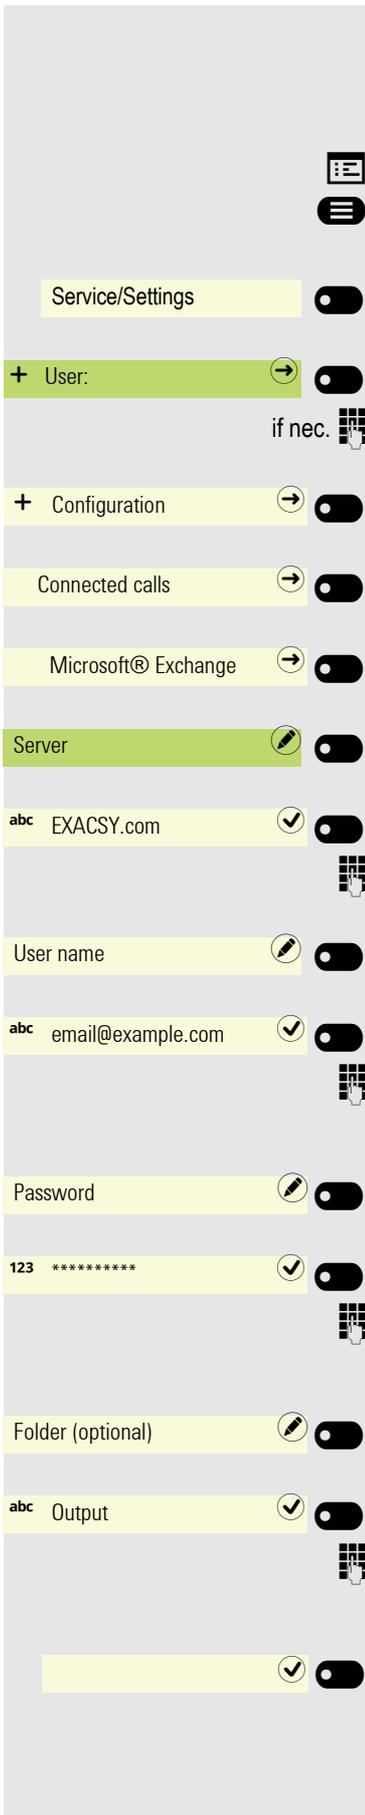

Setting up Exchange access

To use your Exchange account in conversations you must enter the server address and your access details.

You can also configure this setting via the Web interface → page 165.

If nec. Press the Main Menu key.

Open using the softkey

Open using the softkey.

if nec. Enter and confirm the User password.

Open using the softkey.

Open using the softkey.

Open using the softkey.

Open using the softkey.

The input field is displayed.

Enter the URL for the Exchange server and conclude your input with the softkey.

Open using the softkey.

The input field is displayed.

Enter your e-mail address used for Exchange and conclude your input with the softkey.

Open using the softkey.

The input field is displayed.


Enter your password used for Exchange and conclude your input with the softkey.

Open using the softkey.

The input field is displayed.

Enter the folder with the destination data and conclude your input with the softkey.

Save the configuration.

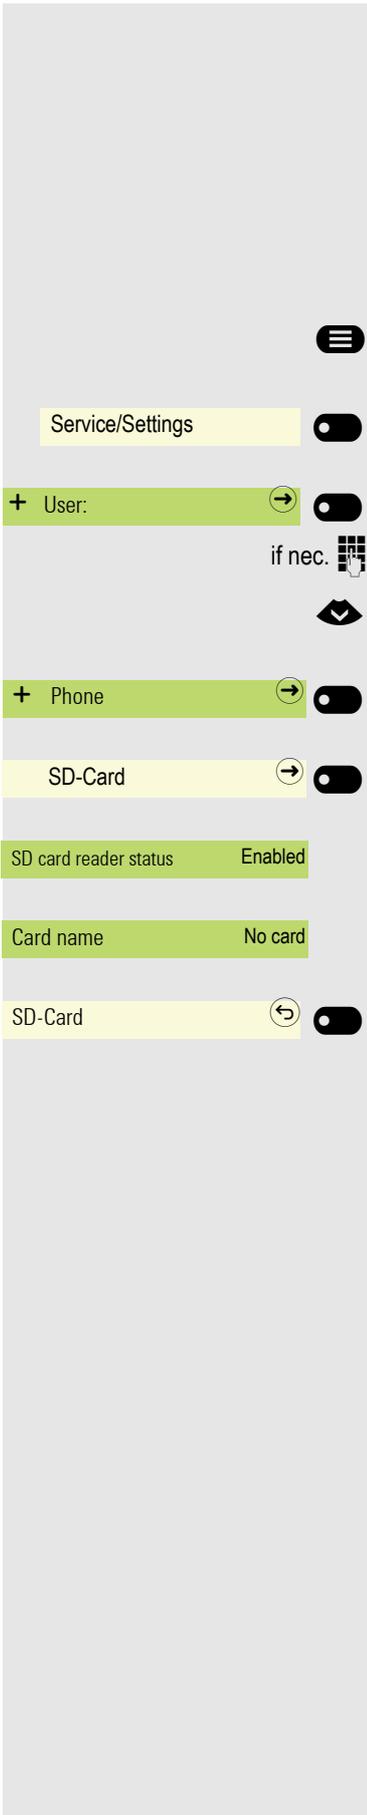

SD-Card

You only see status information at present for a possible SD card. Usage is not yet possible.

 Please note that SD slot is available only on CP600.

If nec. Press the Main Menu key.

Open using the softkey

Open using the softkey.

Enter and confirm the User password.

Select "Phone".

Open using the softkey.

Open using the softkey

The current status is displayed.

The current status is displayed.

Exit the menu.

Displaying network information

This information overview in the user area of the service menu provides you with information about the IP address or name of the phone and the HTML address of the web interface. It also provides real-time data about the network activity of the phone.

If nec. Press the Main Menu key.

Open using the softkey


Open using the softkey.

Enter and confirm the User password.


Select the "Network information" menu.

Open using the softkey.


You can browse the following overview:

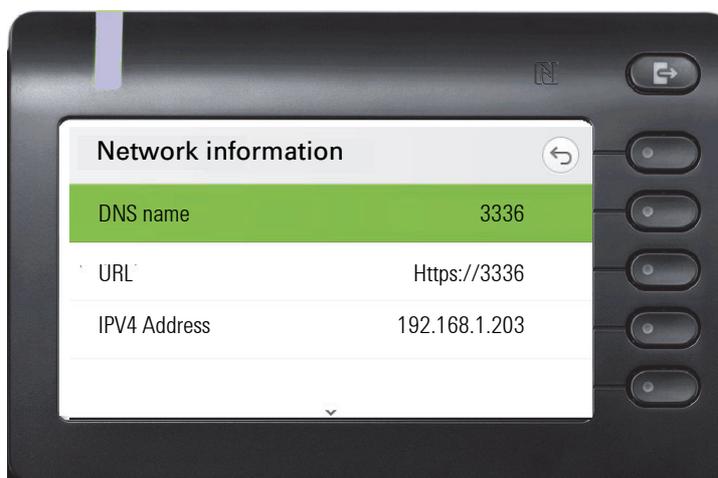


Scroll

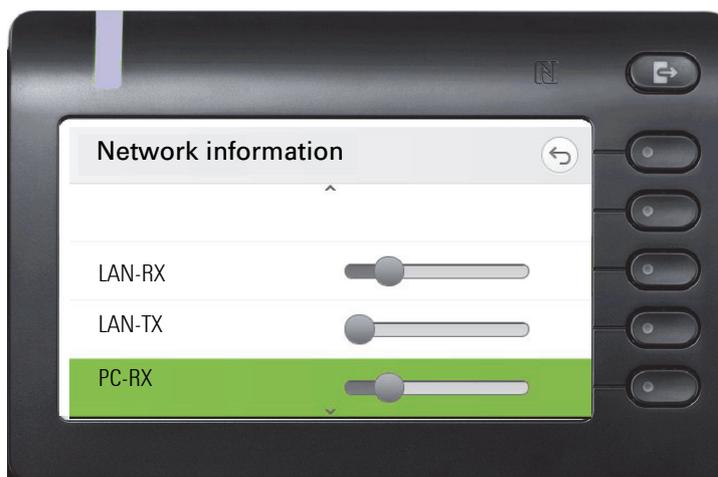


Scroll

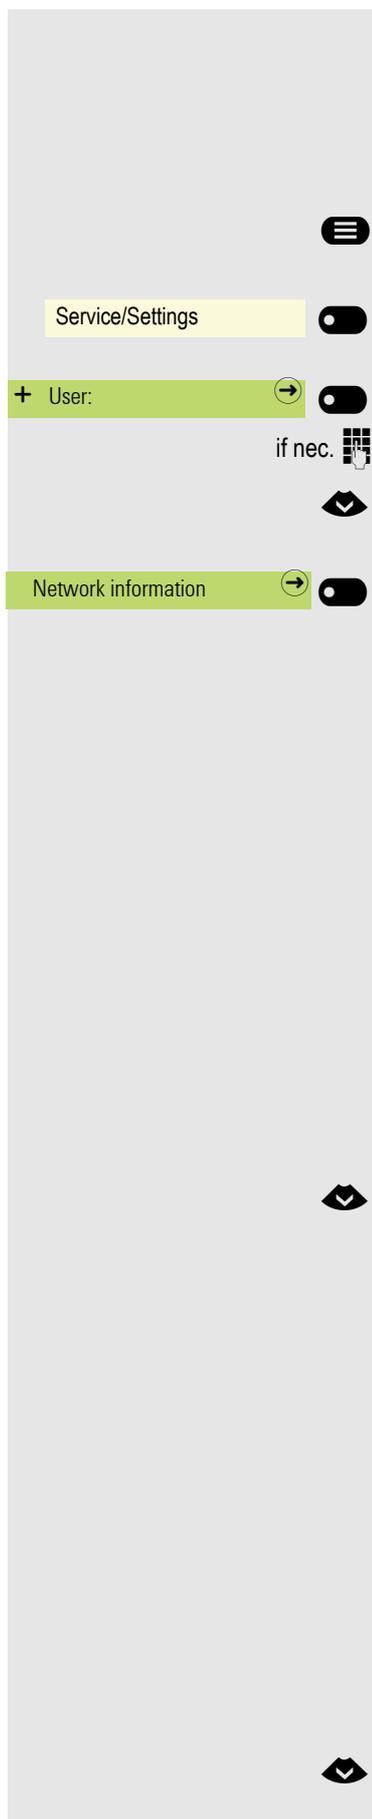

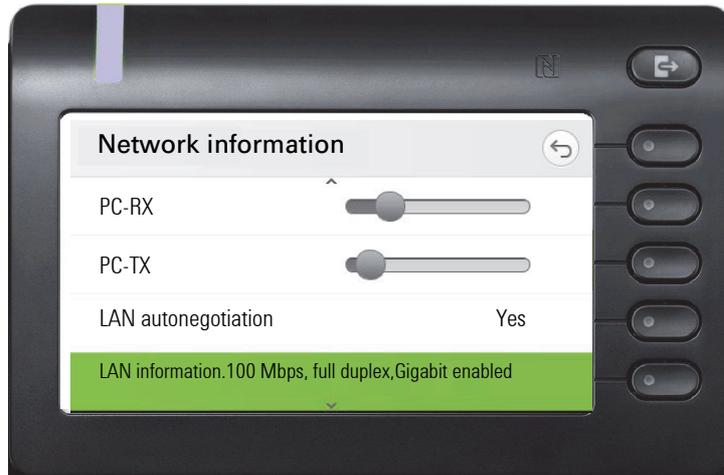

Scroll

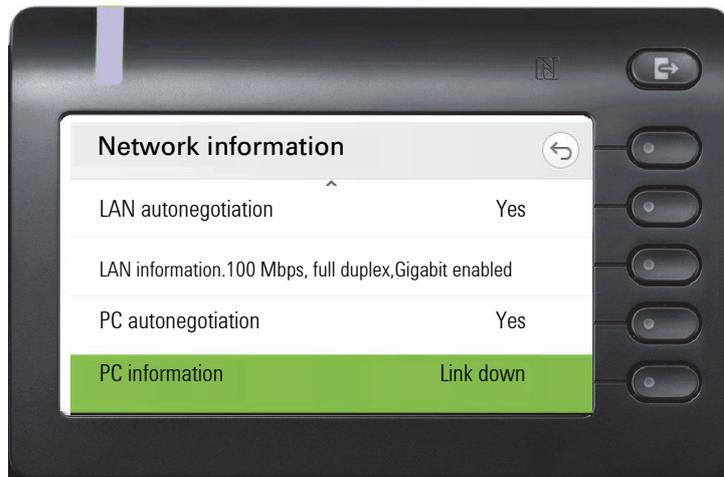

DNS name: Name or number of telephone.

URL: HTTP address of the web interface. This address is specified in the address line of the Internet browser and is used to call up the web interface of the phone in the browser.

IPv4 Address: Display of the IP address or name that was assigned to the phone in the network.

LAN-RX/PC-RX: The network or PC interface data packets received are illustrated dynamically in graphical form.

LAN-TX/PC-TX: The network or PC interface data packets sent are illustrated dynamically in graphical form.

LAN autonegotiation/PC autonegotiation [Yes]|No]: Displays whether the data transfer rate network or PC interface is set to automatic (**Yes**) or manual (**No**).

LAN information/PC information: [10|100|1000] Mbit/s: Data transfer rate of the network or PC interface. If an interface is not in use, **Link down** is displayed.

Resetting user data

All personal settings changed via the telephone menu or the web interface can be reset to factory settings.

➡ Some images for the screensaver will be deleted or deleted default images will be restored.

➡ Some ringer files will be deleted or deleted default ringer files will be restored.

➡ Similarly, all of your personal information, and most importantly your conversation list with contacts, will also be deleted.

Important: All listed data is reset **without** a warning tone.

Initiating the reset

If nec. Press the Main Menu key.

Open using the softkey

Open using the softkey.


if nec.  Enter and confirm the User password.

 
Select the "Reset" menu.

Open using the softkey.

Open using the softkey.

Perform the reset **immediately** with the softkey. The user data is reset to factory settings.

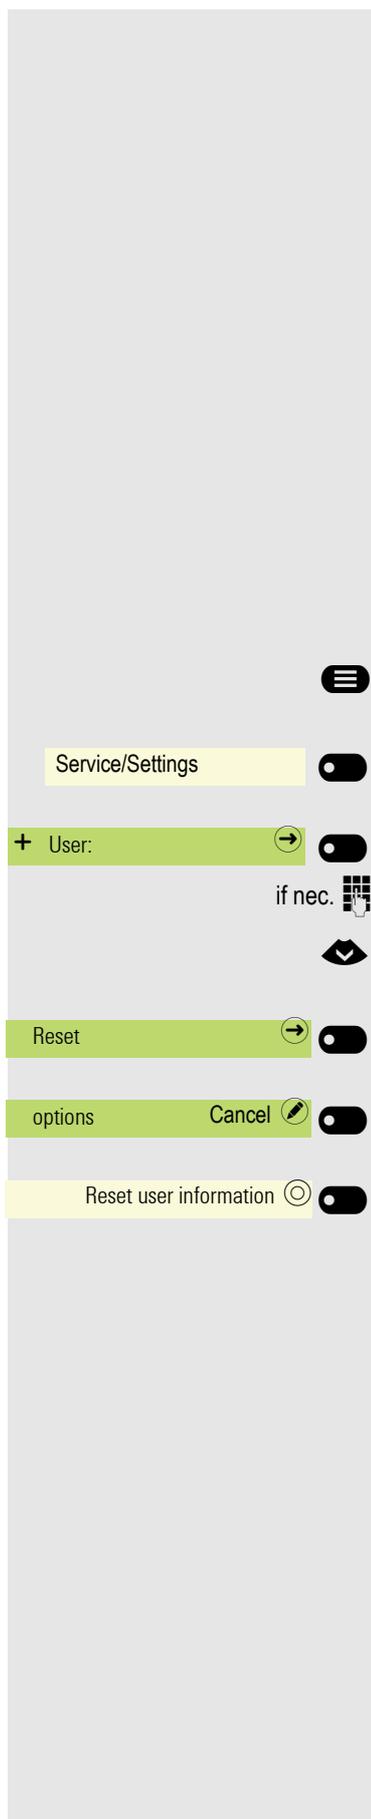



Web interface

General

You can configure a number of settings for your phone via the web interface. Communication occurs via a secure HTTPS connection. Access to the web interface must be activated by your administrator.

Launching the web interface

 For more information on the IP address, the web interface address, and how to connect the phone to the network, refer to the section entitled "Network information."

To launch the interface, open a Web browser and enter the following:

https://[IP address of the phone]

[IP address of the phone] is the IP address of your phone.

or

https://[Name of the phone]

[Name of the phone] that was assigned by the administrator.

 You might receive a certificate notification from the browser. Follow the instructions to download the certificate.

You will be prompted to configure a user password the first time you call up the web interface → page 147. You must log in with this password every time you want to open the User pages in the future.

Licenses

This area provides you with the information about EULA (End User License Agreement) and OpenSource licenses. For further information, consult your administrator or refer to the administration manual.

Administrator pages

This area lets you configure settings for administering your phone and the network environment. Access to the Administrator pages is protected by the admin password. For further information, consult your administrator or refer to the administration manual.

User pages

All entries under the user menu on the Web interface can also be found under the user menu on the phone → page 42.

 You will be prompted to configure a user password the first time you call up the web interface → page 147. You must log in with this password every time you want to open the User pages in the future.

- Click a menu heading to display the individual menu entries. Click the menu heading again to close the menu.
- Click a menu entry to open the corresponding website.
- Make the desired changes.
- Click the corresponding button to save or discard your changes.

Button functions

- "Login": Log in to the phone after you have entered the user password
- "Save": Applying changes
- "Reset": Reset original values
- "Update": Update the values
- "Log out": Log out from the phone

User menu

User login

Password  → page 147

- Old password
- User password
- Confirm password

Ringer

- Local ringers
 - Call type  → page 56
 - Internal call
 - Ringer
 - Pattern melody
 - Pattern sequence
 - External
 - Ringer
 - Pattern melody
 - Pattern sequence
 - Buzz
 - Ringer
 - Sample tone
 - Pattern sequence
 - Alert tone 1
 - Ringer
 - Sample tone
 - Pattern sequence
 - Single alert
 - Ringer
 - Sample tone
 - Pattern sequence
 - Multiple alert
 - Ringer

- Sample tone
- Pattern sequence
- Special 1
 - Ringer
 - Sample tone
 - Pattern sequence
- Special 2
 - Ringer
 - Sample tone
 - Pattern sequence
- Special 3
 - Ringer
 - Sample tone
 - Pattern sequence
- Alert tone 2
 - Ringer
 - Pattern melody
 - Pattern sequence
- Unspecified
 - Ringer
 - Sample tone
 - Pattern sequence
- US DSN-Precedence
 - Ringer
 - Sample tone
 - Pattern sequence
- US DSN-Routine
 - Ringer
 - Sample tone
 - Pattern sequence
- Emergency call
 - Ringer
 - Sample tone
 - Pattern sequence
- Ringer mode ( → page 56)
 - HiPath
 - Local ringer

Audio

- Settings
 - Ringer  → page 59
 - Room acoustic  → page 58
 - Headset socket → page 60

Configuration

- Outgoing calls
 - Block dialing  → page 70
- Forwarding  → page 73
 - Forwarding favorites
 - Display all
 - Favorites / recently used
- Busy
 - Direct destination
 - No reply
 - Favorites / recently used
 - Direct destination
- Fixed forwarding allowed

- Favorites / recently used
- Direct destination
- Internal call forwarding allowed
 - Favorites / recently used
 - Direct destination
- External call forwarding allowed
 - Favorites / recently used
 - Direct destination
- Forward busy/no answer calls allowed
 - Favorites / recently used
 - Direct destination
- Connected calls
- Insecure call alert
- Bluetooth
 - Configuration  → page 100
 - Active
 - Bluetooth address
 - Phone name
 - Beacon
 - Mode
 - URI
 - UUID
 - Major
 - Minor
 - Interval (ms)
- UC login information
 - UC username
 - UC password
- Microsoft® Exchange
 - Server
 - User name
 - Password
 - Folder to sync (optional)

Phone

- Display  → page 48
 - Brightness
 - Key module contrast
 - Key module brightness
- Idle screen  → page 52
 - Enabled
 - Monitor type
 - Wait time (minutes)
 - Transition delay (secs)
- Energy saving mode  → page 49
 - Activate after:
 - Lighting reduced
 - Backlight off

File transfer  → page 53

Slideshow Figures

Select the image file you wish to use as slideshow images

Closing or navigating away from this page will cancel the file transfer

Delete all user slideshow images

Default slideshow images will be restored

<input type="button" value="Delete"/>	Users image no 01
<input type="button" value="Delete"/>	Users image no 02
<input type="button" value="Delete"/>	Users image no 03
<input type="button" value="Delete"/>	Users image no 04
<input type="button" value="Delete"/>	Users image no 05
<input type="button" value="Delete"/>	Users image no. 06
<input type="button" value="Delete"/>	Users image no. 07
<input type="button" value="Delete"/>	Users image no. 08
<input type="button" value="Delete"/>	Users image no. 09
<input type="button" value="Delete"/>	Users image no. 10
<input type="button" value="Delete"/>	Users image no. 11
<input type="button" value="Delete"/>	Users image no. 12
<input type="button" value="Delete"/>	Users image no. 13
<input type="button" value="Delete"/>	Users image no. 14
<input type="button" value="Delete"/>	Users image no. 15
<input type="button" value="Delete"/>	Users image no. 16
<input type="button" value="Delete"/>	Users image no. 17

You can delete your installed images in full or individually.

Diagnostic information

Fixing problems

Responding to error messages on the display

Incorrect input

Possible causes:

Number is not correct.

Possible response:

Enter correct number.

No authorization

Possible cause:

Locked function attempted.

Possible response:

Apply for authorization to execute function from manager.

Currently not possible

Possible cause:

Dialing a non-existent number. Phone you are trying to reach is not in use.

Possible response:

Enter correct number. Call again later.

Phone number invalid

Possible cause:

Own number entered.

Possible response:

Enter correct number.

Key memory is full

Possible cause:

External phone number memory space in system currently full.

Possible response:

Try again later.

Conflict on another level

Possible 1st cause:

If "delete other level" shows in menu:

You have tried to save a function or internal phone number with LED-display using a key on an already occupied level (e.g. an external phone number).

Possible response:

Confirm "delete other level" to save the phone number/function.

Possible 2nd cause:

If "clear LED support" shows in menu:

You have tried to save a number without LED-display or an external number using a key that already has an internal number with LED-display.

Possible response:

Confirm "clear LED support" to save the call number. The existing internal number remains on the other level without LED-display.

Pressed key does not respond:


Check if the key is stuck.

Phone doesn't ring when called:

Check if your phone is on silent (silent icon appears on status screen → page 22). If so, turn off silent mode.

To correct any other problems:

Contact your administrator if a fault persists for more than 5 minutes, for example. Pass on the message displayed in the red field, if appropriate, as shown in the next example. Problems that cannot be corrected should be referred to Customer Service.

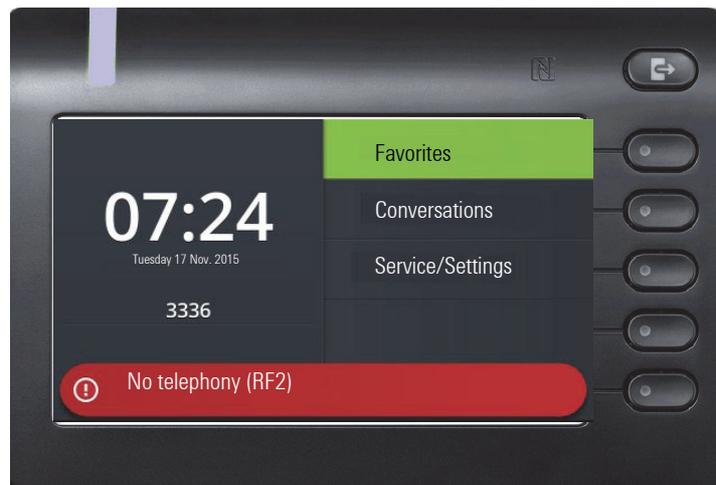

Contact partner in case of problems

Contact your administrator if a fault persists for more than 5 minutes, for example.

Key terms

A

Accepting a call	
with line keys	111
Administration	47
Announcement	48
Applications	
Opening the context menu	27
Selecting an entry	27
Applications menu	42
Assign free keys	63
Assigning function keys	
Function	63
Audio	
Room acoustic	58
Audio controls	19

B

Background lighting	49
Beacon	106
Bluetooth	84
NFC	84

C

Call	
Forwarding	73
Incoming	66
Call encrypted	153
Call forwarding	73
Call not encrypted	153
Call transfer to the manager	125
Call waiting	
accept	82
Callback	76
CE marking	3
Central speed dial numbers	61
Change password	147
Changing the user password	147
Connection options	17
Consult	81
Contact, deleting	35
Context-dependent displays	25

Conversation	
Accept	66
Ending	69
Parking a call	79
Retrieving a parked call	79
transfer	81
Conversations	28
search,	33

D

Data privacy	131
Deactivating the password	148
Deactivating the user password	148
Deleting a contact	35
Dial plan	151
Dialing	
with line keys	114
with redialing	71
Dialpad	21
Direct station selection (DSS) keys	
Answering a call	67
Call waiting	115
Display icons	
Connection status	37
Do not disturb	146
DTMF dial tone (Tone dialing)	83

E

Eddystone Beacon	106
Emergency call	151
Emergency number	151
Entry protection	121
Exchange	159
Exclusive parking	116

F

Fax messages	119
Forwarding	73
For another connection	140
For Fax or PC	141
Forwarding calls	
for lines	112
Function keys	
Display function	41

G

General information	11
Graphic display	23
Icons for connection status	37

H

Holding	116
House call system	135

I

Icons	
Connection status	37
ID entered for other phone	129
Identifying the line	120
Insecure call alert	158
Intercom system	135

K

Key modules	18
Keys	
assign	63
program	63

L

LED displays	40
Line keys	109
Level	45
Line key	41
Line keys	108
Accepting a call	111
Allowing/blocking entry	121
dialing with	114
Phoning with more than one	
participant	120
Three-party conference	121
Line usage	109

M

Making calls	70
Menu "Users"	166
Messenger call	127
Microphone	69
Missed calls	71
Mobility	131
Mobility variants	131
Mode keys	19

N

NFC	84
-----------	----

O

One Number Service	
Mailbox (MWI)	119
Open listening	78
OpenScape Desk Phone CP600	
Provides hands-free listening	78
OpenScape Key Module 600	18
Operating steps	
programming a key	64
Operation notes	3

P

Parameters	44
Park (call)	79
Parking	116
Phone	
Set-up	48
Phone programming	48
Phone Settings	48
Picking up a call	
(Team)	67
post-dialing	
Tone dialing DTMF	83
Presence	24
Primary line	108
Private	146
Private line	109
Procedure	
programming a key	64
Program free keys	63
Programmable keys	38, 40
Programming free keys	63
Provides hands-free listening	66

R

Redial	71
Representative (secretarial office)	127
Ringer off	57

S

Safety notes	3
Save appointments	128
Second call (manager)	126
Second phone (manager)	126
Secondary line	108, 161
Secure Call	153
Call encrypted	153
Call not encrypted	153
Connection status	153
Status query	153
Tips	153
Secure connection	153
Security	146
Service menu	42
Setting headset port	60
Shared line	109
softkey	25
Softkeys	19
Speaker call	48, 136
Speakerphone mode	
Function	66, 78
Tips	66
Speed dial	
Central	61
Switches	43
System-wide voice calling	136

T

Telephony interface	
SingleLine	36
Three-party conference	121
Toggleing	81
Tone dialing	83
Transfer (call)	81

U

Unsecure connection	153
User interface	16
User menu	166
User support	15
Using a mini switch	18
Using network ports more efficiently	18
Using secure calls	153
Call encrypted	153
Call not encrypted	153
Connection status	153
Status query	153
Tips	153

V

Variable call forwarding	73
Voicemail	119

W

Web interface	165
---------------------	-----