



OpenStage 40 T OpenStage Key Module 40 OpenScape 4000/HiPath 4000

User Guide

A31003-S2000-U100-12-7619

Our Quality and Environmental Management Systems are implemented according to the requirements of the ISO9001 and ISO14001 standards and are certified by an external certification company.

Copyright © Unify Software and Solutions GmbH & Co. KG 03/2016
Munich/Germany

All rights reserved.

Reference No.: A31003-S2000-U100-12-7619

The information provided in this document contains merely general descriptions or characteristics of performance which in case of actual use do not always apply as described or which may change as a result of further development of the products. An obligation to provide the respective characteristics shall only exist if expressly agreed in the terms of contract.

Availability and technical specifications are subject to change without notice.

Unify, OpenScape, OpenStage and HiPath are registered trademarks of Unify Software and Solutions GmbH & Co. KG. All other company, brand, product and service names are trademarks or registered trademarks of their respective holders.

Important Information

	<p>For safety reasons, the telephone should only be supplied with power (required in connection with an OpenStage Key Module 40 with display or OpenStage Busy Lamp Field 40):</p> <ul style="list-style-type: none"> • using the original power supply unit. Part number: L30250-F600-C14x (x: 1=EU, 2=US, 3=UK)
	<p>Never open the telephone or a key module. Should you encounter any problems, contact the responsible administrator.</p>
	<p>Use only original accessories! The use of other accessories may be hazardous and will render the warranty, extended manufacturer's liability and the CE marking invalid.</p>

Trademarks

	<p>The compliance of the equipment according to EU directives is confirmed by the CE mark. This Declaration of Conformity and, where applicable, other existing declarations of conformity as well as further information on regulations that restrict the usage of substances or affect the declaration of substances used in products can be found in the Unify Expert WIKI at http://wiki.unify.com under the section "Declarations of Conformity".</p>
	<p>All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.</p> <p>Proper disposal and separate collection of your old appliance will help prevent potential damage to the environment and human health. It is a prerequisite for reuse and recycling of used electrical and electronic equipment.</p> <p>For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service, the shop where you purchased the product or your sales representative.</p> <p>The statements quoted above are only fully valid for equipment which is installed and sold in the countries of the European Union and is covered by the European Directive 2002/96/EC. Countries outside the European Union may impose other regulations regarding the disposal of electrical and electronic equipment.</p>

Location of the telephone

- The telephone should be operated in a controlled environment with an ambient temperature between 5°C and 40°C.
- To ensure good speakerphone quality, the area in front of the microphone (front right) should be kept clear. The optimum speakerphone distance is 50 cm.
- Do not install the telephone in a room where large quantities of dust accumulate; this can considerably reduce the service life of the telephone.
- Do not expose the telephone to direct sunlight or any other source of heat, as this is liable to damage the electronic components and the plastic casing.
- Do not operate the telephone in damp environments, such as bathrooms.

Software update



During a software update, the phone must not be disconnected from the power supply unit or the phone line.

An update action is indicated by messages on the display and/or by flashing LEDs.

Product support on the internet

Information and support for our products can be found on the Internet at:

<http://www.unify.com>.

Technical notes, current information about firmware updates, frequently asked questions and lots more can be found on the Internet at:

<http://wiki.unify.com/>.

Contents

Important Information 3

Trademarks 3

Location of the telephone	4
Software update	4
Product support on the internet	4

General information 10

About this manual	10
Service	10
Intended use	10
Telephone type	11
Speakerphone quality and display legibility	11
Single-line telephone/multi-line telephone	11
Executive-secretary functions	11

Getting to know your OpenStage phone 12

OpenStage 40 T user interface	12
Ports on the underside of the phone	13
OpenStage Key Module 40	14
Keys	15
Function keys	15
Audio keys	15
5-way navigator	16
Programmable sensor keys	17
Keypad	18
Display	20
Idle mode	20
Telephony dialogs	22
Mailbox	24
Messages (callback requests)	24
Voicemail	24
Call log	25
Menu	26
Program/Service menu	26
Call preparation	27
Call pop-up	28

Basic functions 29

Answering a call	29
Answering a call via the handset	29
Answering a call via the loudspeaker (speakerphone mode)	29
Switching to speakerphone mode	30
Switching to the handset	30
Open listening	30
Turning the microphone on and off	31
Ending a call	31
Making calls	31
Off-hook dialing	31

Dialing in speakerphone mode	31
Dialing with a headset connected	32
Dialing using En-bloc dialing	32
Dialing with DDS keys	32
Redialing a number (last dialed number)	33
Redial key	33
Redialing from the menu	33
Redialing a number (saved number)	33
Calling a second party (consultation)	33
Switching to the held party (alternating)	34
Transferring a call	34
Call forwarding	35
Overview of forwarding types	35
Fixed call forwarding (all calls)	36
Variable call forwarding (all calls)	37
Additional forwarding types	38
Displays	38
Using callback	39
Storing a callback	39
Accepting a callback	39
Responding to a callback request	40
Checking/deleting a saved callback	40
Saving phone numbers for redial	41
Saving the current phone number	41
Saving any phone number	41
Enhanced phone functions	42
Answering calls	42
Answering a call with a headset	42
Answering a call via a DSS key	42
Accepting a call for another member of your team	43
Accepting a specific call	43
Picking up a call in a hunt group	43
Using the speakerphone	44
Making calls	44
Making calls with a direct station selection key	44
Dialing a phone number from a list	44
Using speed dialing	45
Talking to your colleague with a speaker call	46
During a call	47
Call waiting with a direct station selection key	47
Using the second call feature	47
Activating/deactivating second call	47
Accepting a second call with a sensor key	48
Accepting a second call via the menu	48
Using the shift key	49
System-supported conference	50
Establishing a conference	51
Adding a party	52
Transferring a conference	53
Disconnecting a specific participant from the conference	54
Putting the conference on hold	54
Entering commands using tone dialing (DTMF suffix dialing)	54
System-wide parking	55
Automatically parking a call	55
Manually parking a call	56

If you cannot reach a destination ...	56
Call waiting (camp-on)	56
Busy override – joining a call in progress	57
HiPath 4000 as an entrance telephone system (two-way intercom)	57
System-wide speaker call	58
Speaker call in a group	59
Announcement (broadcast) to all members of a line trunk group	61
Using call forwarding	61
Automatically forwarding calls	61
Delayed call forwarding	62
Forwarding calls for other stations	62
Saving a call forwarding destination for another phone and activating call forwarding	62
Saving a call forwarding destination for fax/PC/busy station and activating call forwarding	63
Displaying/deactivating call forwarding for another phone	64
Displaying/deactivating call forwarding for fax/PC/busy stations	65
Changing call forwarding for another station	65
Leaving/rejoining a hunt group	66

Programming sensor keys 67

Configuring function keys	67
Configuring redial/direct station selection keys	68
Additional redial key functions	69
Changing the label	70
Deleting sensor key programming	71

Saving speed dial numbers and appointments 72

Central speed dial numbers	72
Speed dialing with extensions	72
Individual speed dial numbers	73
Appointments function	73
Saving appointments	73
Using timed reminders	74

Dialing with call charge assignment 75

Dialing with project assignment	75
Call duration display	75

Privacy/security 76

Locking the telephone to prevent unauthorized use	76
Activating/deactivating "Do not disturb"	77
Activating/deactivating "Speaker call protect"	77
Caller ID suppression	78
Identifying anonymous callers (trace call)	78

More functions/services 79

Using another telephone in the same way as your own	79
Logging on to another phone	79
Logging off from another phone	80

Moving with the Phone 81

Logging the phone off from the current port	81
Log the phone on at the new location	81

Making calls via multiple lines	82
Line keys	82
Line utilization	83
Preview	83
Answering calls with the line keys	84
Answering calls in the sequence in which they are offered	84
Answering calls preferentially	84
Deactivating/activating ringing (call)	85
Dialing with line keys	86
Holding a call on the trunk key	87
Saved number redial for a specific line	87
Last number dialed for a specific line	87
Saving phone numbers for "Redial on a line"	88
Line mailbox	88
Retrieving messages	89
Identifying the line used	90
Making calls on multiple lines alternately	90
Ending the connection on a line key	91
Entering a call on a line (three-party conference)	91
Allowing or blocking a party from joining a call	91
Allowing a party to join a call	91
Blocking other parties from joining a call	92
Ending the connection on a line key	92
Third-party monitoring	93
Holding and re-accepting a call on a line key	94
Exclusively holding and re-accepting a call on a line key	94
Accepting a specific held line	94
Forwarding calls on lines	95
Ring transfer	95
 Making calls in an executive-secretary team	 96
Calling an executive or secretary phone	96
Calling an executive/secretary phone	96
Accepting calls for the executive phone at the secretary phone	97
Accepting calls for the executive phone when already on a call	97
Transferring calls directly to the executive phone	98
Accepting calls on the executive phone	98
Accepting a call for another executive-secretary team	98
Using a second (executive) telephone	99
Activating/deactivating a second executive call	99
Using signal call	100
Placing a messenger call	100
Defining a representative for the secretary	100
 Individual phone configuration	 101
Adjusting display settings	101
Adjusting the display to a comfortable reading angle	101
Illuminated display	101
Setting contrast	101
Adjusting displays on the OpenStage key module	101
Adjusting audio settings	102
Adjusting the ring volume	102
Adjusting the ring tone	102
Room character for speakerphone mode	102

Setting the volume of the alert tone	102
Activating/deactivating the ringer	102
Testing the phone	103
Testing functionality	103
Special parallel call (ONS) functions	104
Fixing problems	105
Responding to error messages on the screen	105
Contact partner in the case of problems	106
Troubleshooting	106
Caring for your telephone	107
Index	108
Display icons	110

General information

About this manual


This document contains general descriptions of the technical options, which may not always be available in individual cases. The respective features must therefore be individually defined in the terms of the contract.

If a particular function on your phone is not available to you, this may be due to one of the following reasons:

- The function is not configured for you or your telephone. Please contact your system support representative.
- Your communications platform does not feature this function. Please contact your Unify sales partner for information on how to upgrade.

This user guide is intended to help you familiarize yourself with OpenStage and all of its functions. It contains important information on the safe and proper operation of your OpenStage phone. These instructions should be strictly complied with to avoid operating errors and ensure optimum use of your multifunctional telephone in the network.


These instructions should be read and followed by every person installing, operating or programming an OpenStage phone.

 For your own protection, please read the section dealing with safety in detail. Follow the safety instructions carefully in order to avoid endangering yourself or other persons and to prevent damage to the unit.

This user guide is structured in a user-friendly manner. This means you are guided step-by-step through the operation of the OpenStage.

Administrative tasks are dealt with in a separate manual. The Quick Reference Guide contains quick and reliable explanations of frequently used functions.

Service

 The Unify service department can only help you if you experience problems or defects with the phone.

Should you have any questions regarding operation, your specialist retailer or network administrator will gladly help you.

For queries regarding connection of the telephone, please contact your network provider.

If you experience problems or defects with the phone, please dial the service number for your country.

Intended use

The OpenStage phone was developed as a device for speech transmission and should be placed on the desk. Any other use is regarded as unauthorized.

Telephone type

The identification details (exact product designation and serial number) of your telephone can be found on the nameplate on the underside of the base unit. Specific details concerning your communications platform can be obtained from your service technician.

Please have this information ready when you contact our service department regarding faults or problems with the product.

Speakerphone quality and display legibility

- To ensure good speakerphone quality, the area in front of the telephone (front right) should be kept clear.
The optimum handsfree distance is 20 in. (50 cm).
- Proceed as follows to optimize display legibility:
 - Turn the phone to tilt the display. This ensures you have a frontal view of the display while eliminating light reflexes.

Single-line telephone/multi-line telephone

Your OpenStage 60/80 T phone is "multiline-enabled". This means that your administrator can configure multiple lines on your phone, which is not the case with single-line phones. Each line is assigned an individual phone number which you can use to make and receive calls.

The programmable sensor keys function as line keys on multi-line phones → page 82.

When using a multi-line phone to make and receive calls, certain particulars must be taken into account → page 84 ff.

Executive-secretary functions

The executive-secretary configuration is a special case. This is a multi-line telephone with special features (e.g. "Call transfer to exec", "Pickup", and "Alt. Answer"), configured especially for executive-secretary use → page 96 ff.

Getting to know your OpenStage phone


The following sections describe the most frequently used operating elements and the displays on your OpenStage phone.

OpenStage 40 T user interface



1	You can make and receive calls as normal using the handset .
2	The display permits intuitive operation of the phone → page 20.
3	You can customize your telephone by assigning phone numbers and functions to the programmable sensor keys → page 17.
4	You can use function keys when conducting a call to access frequently used functions (such as, Disconnect) or to open the Program/Service menu and mailbox → page 15.
5	Audio keys are also available, allowing you to optimally configure the audio features on your telephone → page 15.
6	The 5-way navigator is a convenient navigation tool → page 16.
7	The keypad can be used to enter phone numbers and text → page 18.
8	Incoming calls are visually signaled via the call display .

Ports on the underside of the phone

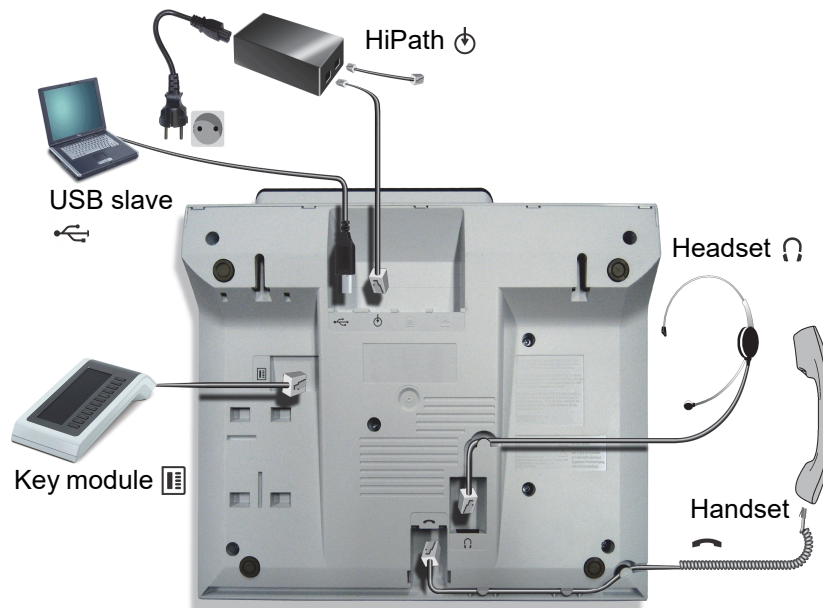

OpenStage 40 T properties

Display type	LCD, 40 x 6 characters
Illuminated display	✓
Programmable sensor keys	6
Full-duplex speakerphone function	✓
Headset	✓
USB slave	✓
Phone/analog adapter	✓
Interface for key modules	✓
Wall mounting	✓

OpenStage Key Module 40

The OpenStage Key Module 40 is a key module for mounting on the side of your telephone. It offers an additional twelve illuminated, programmable keys.

You can assign and use these keys according to your needs, in the same way as the keys on the telephone → page 17.



You can attach up to two OpenStage Key Module 40 to your OpenStage 40 T.



To operate one or more OpenStage Key Module 40, you always need a power supply unit → page 3.

 
 
 

 
Other technical explanations, safety notices, and installation instructions can be found in the relevant documentation.

You can find these on the Internet at <http://www.unify.com>

Keys




Function keys




Key	Function when key is pressed
	End (disconnect) call → page 31.
	Redialing → page 33.
	Button for fixed call forwarding (with red LED key) → page 35.
	Open mailbox (with red LED key) → page 24.
	Open telephone menu (with red LED key) → page 26.

   Audio keys










 


Key	Function when key is pressed
	Activate/deactivate headset → page 42.
	Activate/deactivate microphone (also for speakerphone mode) → page 31.
-	Set volume lower and contrast brighter → page 102.
	Turn loudspeaker on/off (with red LED key) → page 30.
+	Set volume louder and contrast darker → page 102.

5-way navigator

 Remove the protective film from the ring around the 5-way navigator before using the phone.


With this control, you can manage most of your phone’s functions, as well as its displays.

Operation	Functions when key is pressed
 Press 	<p>In idle mode:</p> <ul style="list-style-type: none">• Open the idle menu → page 21 <p>In lists and menus:</p> <ul style="list-style-type: none">• Go to next level <p>You can now access a context menu:</p> <ul style="list-style-type: none">• Open the context menu
 Press 	<p>In idle mode:</p> <ul style="list-style-type: none">• Open the idle menu → page 21 <p>In lists and menus:</p> <ul style="list-style-type: none">• One level back <p>During en-bloc dialing:</p> <ul style="list-style-type: none">• Delete character to the left of the cursor
 Press 	<p>In idle mode:</p> <ul style="list-style-type: none">• Open the idle menu → page 21 <p>In lists and menus:</p> <ul style="list-style-type: none">• Scroll down
 Press 	<p>In idle mode:</p> <ul style="list-style-type: none">• Open the idle menu → page 21 <p>In lists and menus:</p> <ul style="list-style-type: none">• Scroll up
 Press the  key.	<p>Entry selected:</p> <ul style="list-style-type: none">• Perform action

Programmable sensor keys

Your OpenStage 40 T has six illuminated sensor keys to which you can assign functions or numbers.

 ➡ Increase the number of programmable sensor keys by connecting a key module → page 14.



Depending on how they are programmed, you can use the sensor keys as:

- Function keys → page 67
- Redial/Direct station selection key → page 68

➡ Only for redial keys can you also program the second level for direct destination selection.

➡ The configuration of direct station selection keys must be activated by your administrator.

Direct station selection keys can be assigned an internal number from the HiPath 4000 network.

A typical application of direct station selection keys is the executive-secretary configuration → page 96.



 
Touch the key to activate the programmed function or dial the stored number.

Press the key to open a menu for programming it → page 67.

A label for the function is displayed to the left of the key; it cannot be changed. You can define the labeling for redial or DSS keys according to your requirements → page 70.

The status of a function is shown by the LED on the corresponding sensor key.

Meaning of LED displays on function keys


LED		Meaning of function key
	Off	The function is deactivated.
	Flashing ¹	The function is in use.
	On	The function is activated.

¹ In this manual, flashing sensor keys are identified by this icon, regardless of the flashing interval. The flashing interval represents different statuses, which are described in detail in the corresponding sections of the manual.

➡ The programmable sensor keys on multi-line phones function as line keys → page 82.



Keypad

   In cases where text input is possible, you can use the keypad to input text, punctuation and special characters in addition to the digits 0 to 9 and the hash and asterisk symbols. To do this, press the numerical keys repeatedly.




 

 
 

 
 
 
 
Example: To enter the letter "h", press the number  key on the keypad twice.

Alphabetic labeling of dial keys is also useful when entering vanity numbers (letters associated with the phone number's digits as indicated on the telephone spell a name, e.g. 0700 - PATTERN = 0700 - 7288376).

Multi-function keys

Function		
Long press (key held down)	Turn ringtone on/off → page 102.	Turn phone lock on/off → page 76.
Text input → page 19	Next letter in upper case.	No function.


Character overview (depends on the current language setting)


Key	1x	2x	3x	4x	5x
	¹	1			
	a	b	c	2	ä
	d	e	f	3	
	g	h	i	4	
	j	k	l	5	
	m	n	o	6	ö
	p	q	r	s	7
	t	u	v	8	ü
	w	x	y	z	9
	+	.	0	-	
 ²					
 ³					


- 1 Space
- 2 Switch between upper and lower-case text
- 3 No function during text input

Text input

Enter the required characters via the keypad.

Select the functions using the keys  and .

Confirm your entry with .

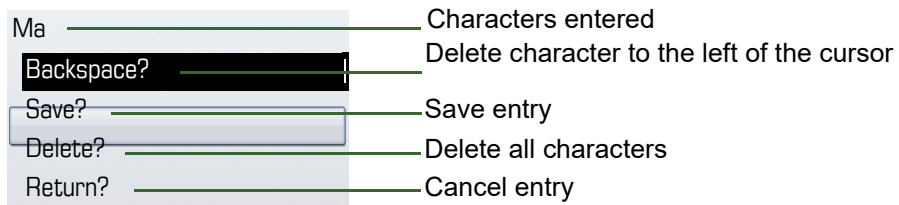


Display

Your OpenStage 40 T comes with a tilt-and-swivel black-and-white LCD display. Adjust the tilt and contrast to suit your needs → page 101.

Idle mode

If there are no calls taking place or settings being made, your OpenStage 40 T is in idle mode.

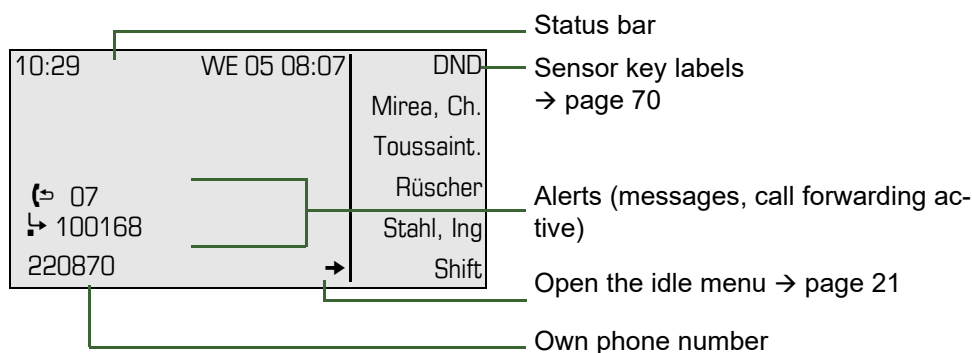

The left area contains the status bar on the first line, followed by a five-line field for additional displays.

A logo is displayed in the middle; it can be set up by your administrator.

Symbols can appear under the logo to inform you about callback requests, voice messages and activated call forwarding.

The right area shows the labels of programmable sensor keys.

Explanation of the icons

Icon	Explanation
	The ring tone is deactivated → page 102
	The "Do not disturb" function is activated → page 77
	The phone lock is activated → page 76
	You have received new callback requests → page 24
	You received new voice messages → page 24
	Call forwarding is active → page 35

Idle menu

When in idle mode, press a key on the 5-way navigator → page 16 to display the idle menu. You can call up various functions here. Entries may vary.

The idle menu may contain the following entries:

- Unanswered calls?¹
- Incoming calls?¹
- Outgoing calls?¹
- Deact call forwarding?²
- Act. FWD-FIXED?³
- Act. FWD-VAR-ALL-BOTH?
- Direct call pickup?
- Display callbacks?⁴
- Program/Service?

1. This appears as an option if entries are available.

2. This appears as an option if fixed or variable call forwarding is activated.

3. This appears as an option if a phone number is saved for fixed call forwarding.

4. This appears as an option if a callback is saved.

Telephony dialogs

Connection-dependent conditions and situations, e.g. when your telephone rings, when dialing a number, or during a call, are depicted graphically on the display.


Situation-dependent functions that automatically appear on the display can be selected and activated with the 5-way navigator → page 16.

➡ The scope and type of functions that may be offered automatically varies. As a result, the entry "Unanswered calls" only appears if entries are actually available.

When an arrow appears to the right of a selected entry, then another menu level is available, which you can select with the ⌂ or ⌂ keys → page 16.

Appearance during dialing


Example: The function "Call preparation" is deactivated → page 27, you have lifted the handset or pressed the loudspeaker key and dial a number.

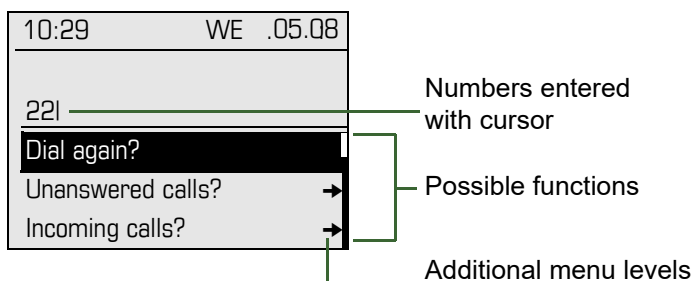

Once you have entered the first digit, functions are automatically available for correction, together with entries saved in the call log.


Appearance during en-bloc dialing

Example: You have deactivated "Call preparation" → page 27 and are entering a number.

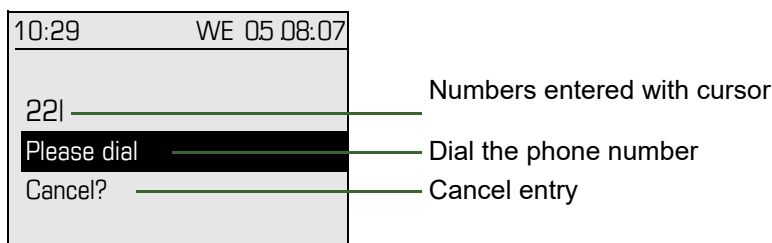


Appearance during an ongoing call

Example: You are connected with a caller.

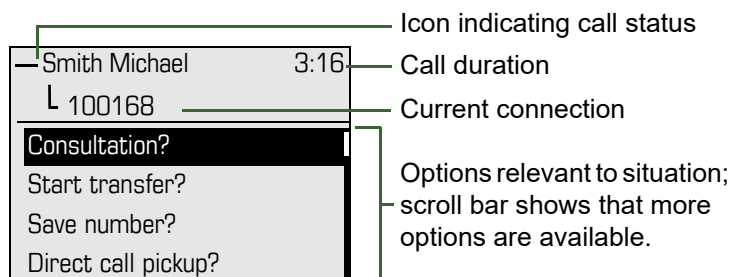

Appearance during multi-line operation

Example: You have pressed a line key.

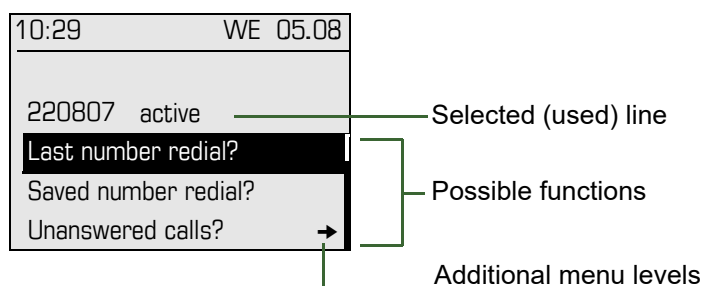

Once you have pressed a line key, saved number redial functions are automatically available.

Icons for frequent call states

Icon	Explanation
—	The call is active
⚡	The call has been disconnected
⏸	You have placed the call on hold (e.g. consultation hold).
⏸	Your call partner has placed the call on hold



Detailed descriptions of the various functions can be found in the sections "Making calls – basic functions" → page 29 and "Making calls – enhanced phone functions" → page 42.

Mailbox



Depending on your communication platform and its configuration (contact your administrator), you can use the mailbox key to access received callback requests and messages from services such as HiPath Xpressions.


The following messages are saved:


- Callback requests
- Voicemail

Messages (callback requests)


New messages, or messages that have not yet been processed are signaled as follows:


-  The key LED lights up.
- In idle mode, the display shows the symbol  and the number of new messages.
- When the handset is lifted and the speaker key pressed, you hear an acoustic announcement (announcement text).

 These announcements remain active until all messages have been viewed or deleted.

Accessing the menu: Press the mailbox key . The newest entry is displayed.

Example:

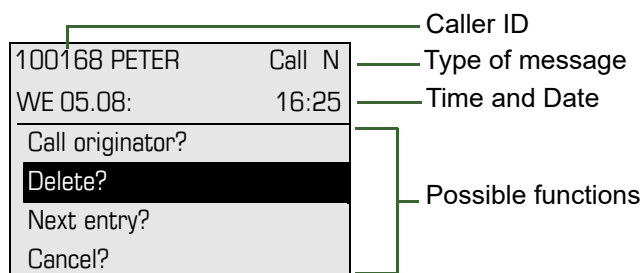




 For a description of how to edit the entries → page 40.

Voicemail

Press the mailbox key .

If your system is appropriately configured, you can call the voice mailbox directly and immediately play back the stored messages.

 New voicemails that have not been played back fully cannot be deleted. To mark a message as "played back", jump with   to the end of the message.


Call log

Calls to your phone and numbers dialed from your phone are recorded chronologically in the call log, sorted, and divided into the following lists:

- Unanswered calls
- Incoming calls
- Outgoing calls

Your phone saves the last 10 unanswered calls, the last 6 outgoing calls, and the last 12 incoming calls in chronological order. Each call is assigned a time stamp. The most recent entry in the list that has not yet been retrieved is displayed first. In the case of calls from the same caller, only the time stamp is updated.


Every list that contains at least one entry is automatically offered → page 21 in the idle menu → page 44.

 Callers with suppressed numbers cannot be saved in the call log.

Information is displayed regarding the caller and the time at which the call was placed.


Example:

10168 PETER	—	Caller ID
Busy 21.02. 16:25	—	Telephone status, date,
Output?	—	Call the displayed party
Next call?	—	Show the next entry
Delete?	—	Delete the entry
Return?	—	Back to the list overview


 For a description of how to edit the call logs → page 44.

 On a multi-line telephone, the call log is only saved for the primary line.

 Menu

With the menu key , you can access your communications system's service menu or make telephony-related settings.



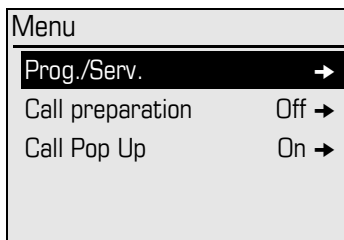



The menu key LED remains red as long as you are in this menu.




Program/Service menu

Accessing the menu

There are two ways to open the Program/Service menu on your communication system:

1. Press the menu key  and confirm the selected entry "Prog./Serv." with the key .
2. In idle mode, press , ,  or  and select a menu option from the idle menu → page 21.

Example:

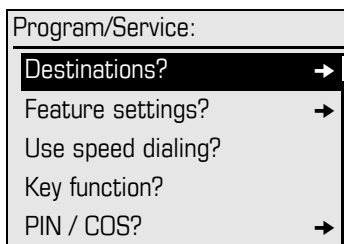



The menu structure comprises several levels. Within this structure the first line shows the menu currently selected and the other lines the options of the menu. An arrow next to an entry indicates additional options for this entry.

Call preparation

Activate the function "Call preparation" to use en-bloc dialing on your OpenStage 40 T.


This means you engage the line only after you have fully entered the number and confirmed.

 Activate/deactivating en-bloc dialing

Press the  menu key, select "Block Dialing On" or "Block Dialing Off" using the 5-way navigation key and confirm with .

Example: "Call preparation" menu view.

Call preparation	On
Dialing preparation	On
Call preparation	Not lit

 

 An example of the display during en-bloc dialing is on → page 22.
For a description of en-bloc dialing, see → page 32.

Call pop-up

Activate the function "Call pop up" so that if you are on a call you are notified on the display by a popup about a second incoming call.


Activating/deactivating call pop up


Prerequisite: "Camp-on?" must be activated → page 47.

Press the  menu key, select "Call Pop Up On" or "Call Pop Up Off" using the 5-way navigation key and confirm with .


Showing and processing a second call

Example: second call when call pop-up is on

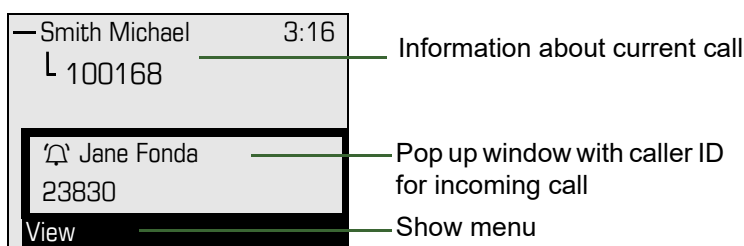


1. While talking to the first party confirm the entry "Display" using the  key.
2. From the menu that appears, select an action for dealing with the second party:
 - Answer camp-on? → page 48
 - Consultation? → page 33
 - Start transfer? → page 34
 - Start conference? → page 51
 - Save number? → page 41
 - Release and return?
 - Park to station? → page 56

Basic functions

 Please read the introductory chapter "Getting to know your OpenStage phone" → page 12 carefully before performing any of the steps described here on your phone.

Answering a call

 
 
 An incoming call will cancel any ongoing telephone setting operations. The phone automatically returns to the point in the menu structure where you were interrupted as soon as the call ends.

Answering a call via the handset

The phone is ringing. The caller is displayed.

Lift the handset.

Set the call volume.

if nec.  or 

 
 
Answering a call via the loudspeaker (speakerphone mode)

The phone is ringing. The caller is displayed.

Press the key shown. The key LED lights up.

The speakerphone function is activated.

Set the call volume.

if nec.  or 

Suggestions for using speakerphone mode:

- Tell the other party that speakerphone mode is active.
- Adjust the call volume while speakerphone mode is active.
- The ideal distance between the user and the phone in speakerphone mode is 50 cm.

Switching to speakerphone mode

People present in the room can participate in your call.

Prerequisite: You are conducting a call via the handset.

Hold down the key and replace the handset. Then release the key and proceed with your call.

Set the call volume.

U.S. mode

If your communication system is set to U.S. mode (contact your administrator), you do not have to hold down the speaker key when replacing the handset when switching to speakerphone mode.

Press the key shown.

Replace the handset. Proceed with your call.

Set the call volume.

Switching to the handset

Prerequisite: You are conducting a call in speakerphone mode.

Lift the handset.

The key shown goes out.

Open listening

People present in the room can silently monitor your call.

 
Prerequisite: You are conducting a call via the handset.

Activating

Press the key shown.

Deactivating

Press the lit key.



if nec. or



if nec. or



Turning the microphone on and off

To prevent the other party from listening in while you consult with someone in your office, you can temporarily switch off the handset microphone or the hands-free microphone.

Prerequisite: You are conducting a call.

Deactivating the microphone



Press the key shown.

Activating the microphone



Press the lit key.

Ending a call



Press the key shown.

or



Press the lit key.

or



Replace the handset.

Making calls

Off-hook dialing



Lift the handset.



Internal calls: Enter the station number.

External calls: Enter the external code and the station number.

The connection is set up as soon as your input is complete.

Dialing in speakerphone mode



Internal calls: Enter the station number.

External calls: Enter the external code and the station number.



The speaker key lights up.

The party you are calling answers via loudspeaker.

You can also use speakerphone mode.

Dialing with a headset connected

Prerequisite: The headset is connected.

Internal calls: Enter the station number.

External calls: Enter the external code and the station number.

The headset key lights up.

The connection is set up as soon as your input is complete.

Dialing using En-bloc dialing

Prerequisite: You have activated "Call preparation" → page 27.

Internal calls: Enter the station number.

External calls: Enter the external code and the station number.

Correct input.

Confirm the option shown.

The party you are calling answers via loudspeaker.

Lift the handset.

On-hook dialing: Speakerphone mode.

Dialing with DDS keys

Prerequisite: You have configured a sensor key as a redial key → page 68.

Press the programmed redial key.

If the number you wish to dial is saved on the second level, press the programmed "Shift" sensor key first.

Lift the handset.

Press the key shown.



if nec. 

Please dial:



or



or



Redialing a number (last dialed number)

The last phone number dialed on your telephone is dialed.

Redial key



Press the key shown.



The key lights up. Speakerphone mode.

or



Lift the handset.

Redialing from the menu



Lift the handset.

or



Press the key shown.

Last number redial?

Confirm the option shown.



On a multi-line phone, the last number dialed on the primary line is always saved.

Redialing a number (saved number)

Prerequisite: You have saved a phone number → page 41.



Lift the handset.

or



Press the key shown.

Saved number redial?

Select and confirm the option shown.

The saved phone number is dialed.

Calling a second party (consultation)

You can call a second party while a call is in progress. The connection to the first party is placed on hold.

Prerequisite: You are conducting a call.

Confirm the option shown.

Enter and confirm the second party's phone number.

Consultation?



Release and return?

Confirm the option shown.

The consultation call is disconnected. The call with the first party is resumed.

Toggle?

Release and return?

Conference?



Consultation?



Start transfer?



Switching to the held party (alternating)

Prerequisite: You are conducting a consultation call.

Select and confirm the option shown.
You are switched to the party on hold.

Ending an alternate operation

Select and confirm the option shown.
The active call is disconnected and the held call is restored.

Combine the calling parties into a three-party conference

Select and confirm the option shown.

An alert tone signals that a conference call has been established between all three parties.

Transferring a call

If your call partner wishes to speak to one of your colleagues, you can transfer the call.

Transferring with announcement

Select and confirm the option shown.

Enter and confirm the required party's phone number. Announce the call partner.

Replace the handset.

Your call partner is now connected to the party to whom they wish to speak.

Transferring without announcement

Select and confirm the option shown.

Enter and confirm the required party's phone number.

Replace the handset.



If no call is set up between the other two parties within 40 seconds, you are called again. You are reconnected with the first party.

Call forwarding



If your phone belongs to an ONS group (parallel call → page 104), please note the following:

Call forwarding can be configured on any phone in the ONS group and will then apply to all phones in that ONS group.

Call forwarding between two phones in an ONS group is not possible.

Overview of forwarding types


You can configure different call forwarding settings for your station.

FWD-VAR-ALL-BOTH on	All calls are forwarded to the saved phone number, the phone number is deleted after deactivation.
FWD-FIXED on	All calls are forwarded, the saved phone number is not deleted after deactivation.
FWD-VAR-ALL-INT on	Only internal calls are forwarded.
FWD-VAR-ALL-EXT on	Only external calls are forwarded.
FWD-VAR-BUSY-BOTH on	If your station is busy, all calls are forwarded.
FWD-VAR-RNA-BOTH on	If you do not answer a call, all calls are forwarded ¹ after a certain length of time.
FWD-VAR-RNA-BOTH on	If your station is busy or you do not answer a call, all calls are forwarded after a certain length of time ¹ .

¹ This duration is defined by your administrator.

Apart from "Forwarding for intnl" and "Forwarding for extnl", the forwarding types are mutually exclusive. You can set and activate one forwarding destination for each of the two exceptions.

 Fixed call forwarding (all calls)

If you have programmed a destination for fixed call forwarding, forwarding can always be activated and deactivated using the key . The programmed forwarding destination remains unchanged until you reprogram or delete it.

Configuring/modifying a fixed forwarding destination

Open the Program/Service menu → page 26.

Confirm the option shown.

Confirm the option shown. "Variable call forw." is displayed.

Confirm the option shown. "Fixed call forw." is displayed.

If you have already programmed call forwarding, the call forwarding destination is displayed.

Select and confirm the option shown.

Enter the phone number of the call forwarding destination. If you have already saved a destination, it is deleted.

Confirm, when the phone number is complete.

Fixed call forwarding is saved and activated.

Activating fixed call forwarding

Prerequisite: A fixed call forwarding destination is saved → page 36.

Press the key shown. The key LED lights up.

Open the idle menu → page 21.

Select and confirm the option shown.

Deactivating fixed call forwarding

Press the lit key. The LED goes out.

Open the idle menu → page 21.

Select and confirm the option shown.

Fixed call forwarding is deactivated. The destination number is retained.

Deleting a fixed call forwarding destination

You can delete the destination for fixed call forwarding.

 
Open the Program/Service menu → page 26.


Confirm the option shown.

Confirm the option shown.

Confirm the option shown. "Fixed call forwarding" and the forwarding destination are displayed.

Select and confirm the option shown.

The forwarding destination is deleted. If fixed call forwarding was activated, it is now deactivated. The  key is deactivated.

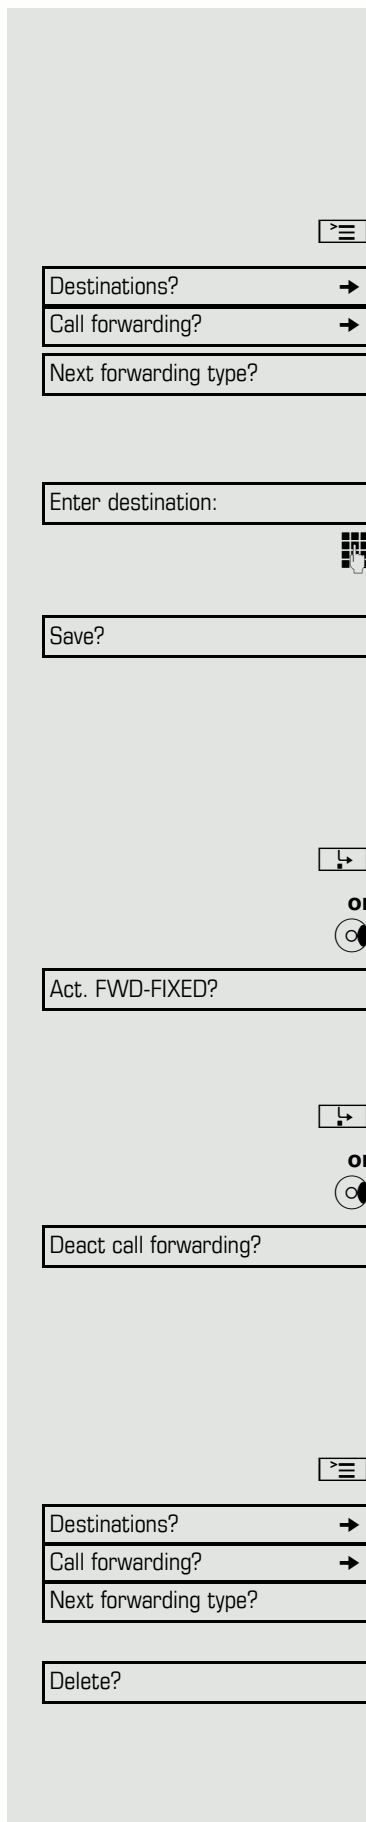

Variable call forwarding (all calls)

In the case of variable call forwarding, programming a forwarding destination activates call forwarding for all calls. If call forwarding is deactivated, the forwarding destination is deleted at the same time.

Configuring and activating variable call forwarding

Open the idle menu → page 21.

Select and confirm the option shown.

Open the Program/Service menu → page 26.

Confirm the option shown.

Confirm the option shown.


"Variable call forw." is displayed.

Select and confirm the option shown.

Enter the phone number of the call forwarding destination.

Confirm, when the phone number is complete.

Call forwarding is saved and activated.

 If you enter a cross-system number, you must complete your entry by pressing **#**.


Deactivating variable call forwarding

Press the lit key. The LED goes out.

Open the idle menu → page 21.

Select and confirm the option shown.

Call forwarding is deactivated. The destination number is deleted.

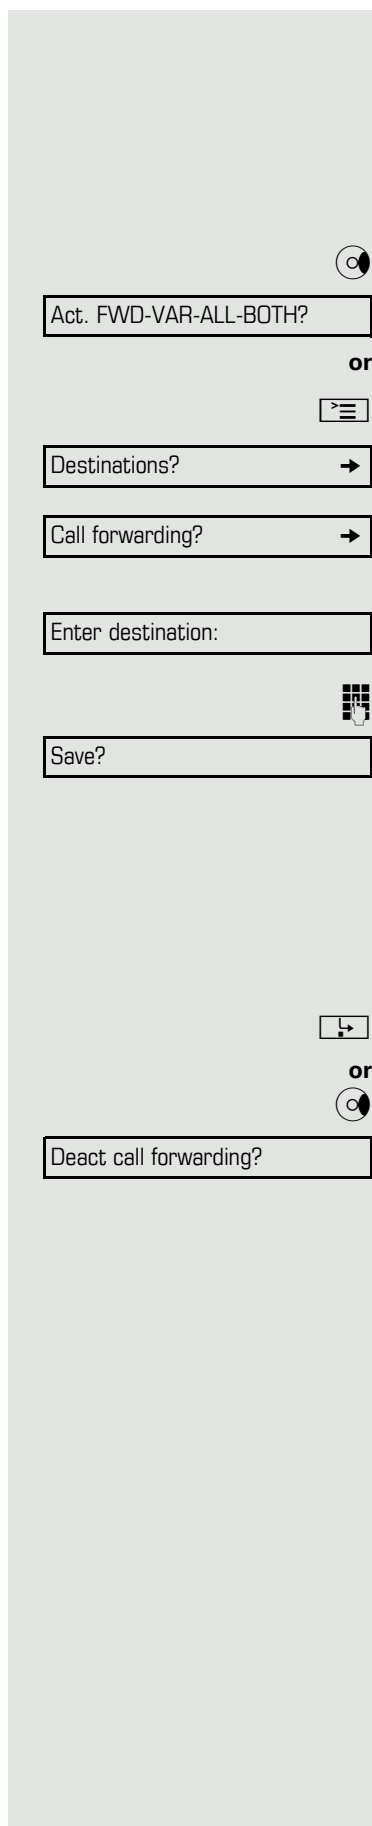

Additional forwarding types

This description applies for the following forwarding types:

- Forwarding for intl
- Forwarding for extnl
- Forwarding on busy
- Call forward. no reply
- Forwarding on busy/after timeout

Programming a forwarding destination activates call forwarding. If call forwarding is deactivated, the forwarding destination is deleted at the same time.

Configuring and activating call forwarding

Open the Program/Service menu → page 26.

Confirm the option shown.

Confirm the option shown.

Variable call forwarding is offered first.

Confirm until the required forwarding type → page 35 is shown in the first line.

Example:

Forwarding type with status.

Select and confirm the option shown.

Enter the call forwarding destination number.

Confirm, when the phone number is complete.

Deactivating variable call forwarding

For "Call forwarding for internal" and "Call forwarding for external":

Press the lit key. The LED goes out.

For all other forwarding types:

Open the idle menu → page 21.

Select and confirm the option shown.

Call forwarding is deactivated and the destination number is deleted.

 Call forwarding can also be preconfigured in the system → page 61.


Displays

In idle mode (→ page 20), the following signals remind you that call forwarding is activated:

Fixed/variable call forwarding

The key LED lights up.

The call forwarding icon and the phone number or, if necessary, the name of the forwarding destination are shown.

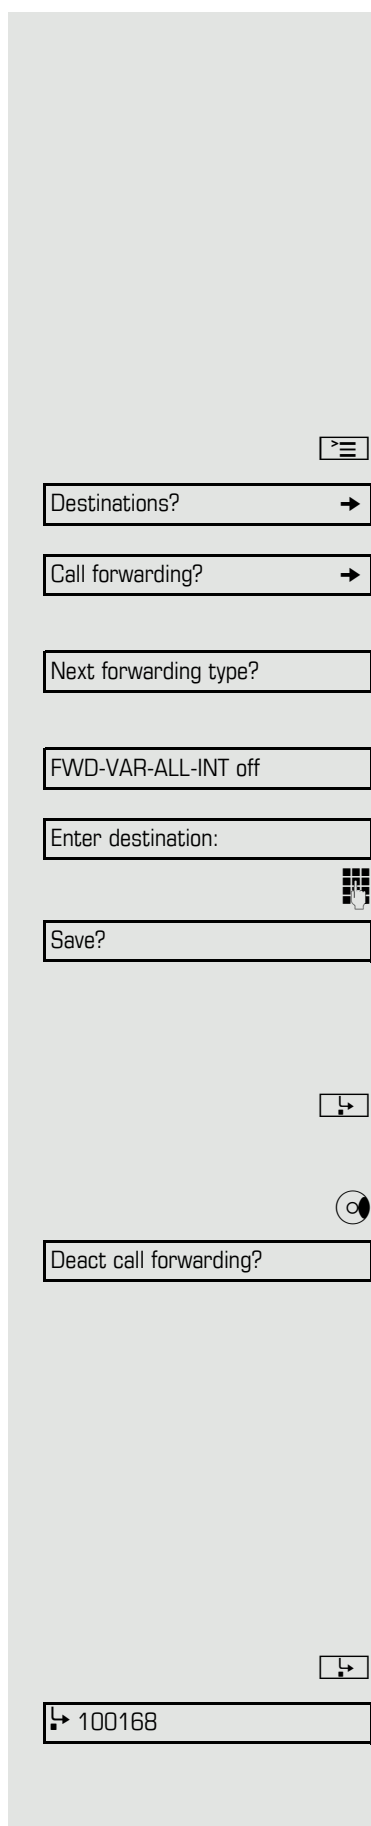

Call forwarding for internal/external

The key LED lights up.

Only the call forwarding icon is displayed.

There is no display message for the call forwarding types "Busy", "No answer" and "Busy/no answer". The LED key does not light up.

Using callback

If your phone belongs to an ONS group (parallel call → page 104), please note the following:

Callback on busy is only signaled on the busy phone, not in the whole ONS group.

Callback on no reply is entered in the mailbox (→ page 24) on all internal system phones in an ONS group.

Storing a callback

Prerequisite: The internal station called is busy or nobody answers. Confirm the option shown.

If the called party was busy, the callback is automatic.

If the called party did not answer, a message is left in the called party's mailbox.

Accepting a callback

Prerequisite: The internal station called was busy. You have saved a callback.

Your telephone rings.

Lift the handset. You hear a ring tone.


Press the key shown. You hear a ring tone.

If the party has activated call forwarding (→ page 35), you will receive the callback from the call forwarding destination.

Cancel call backs

Confirm the option shown.

Do not answer the call. After ringing four times, the callback is canceled.

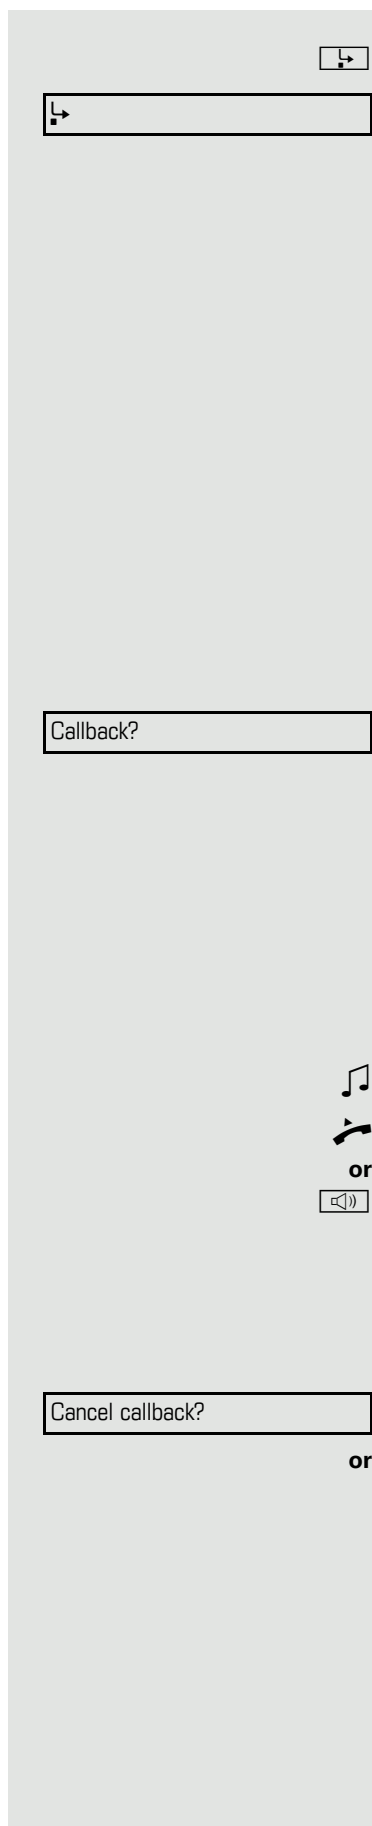

Responding to a callback request

Prerequisite: You have received at least one callback request → page 24.

Press the key shown.

Information regarding the caller is displayed → page 24.

Select and confirm until the required entry is displayed.

Select and confirm the option shown.

The party is called and the entry deleted from the list.

Checking/deleting a saved callback

Prerequisite: You have saved a callback → page 39.

Press the "Callback" programmed sensor key.

Open the idle menu → page 21.

Select and confirm the option shown.
The newest entry is displayed first.

Select and confirm to display additional entries.


Deleting a displayed entry

Select and confirm the option shown.

Ending retrieval

Press the key shown.

Select and confirm the option shown.

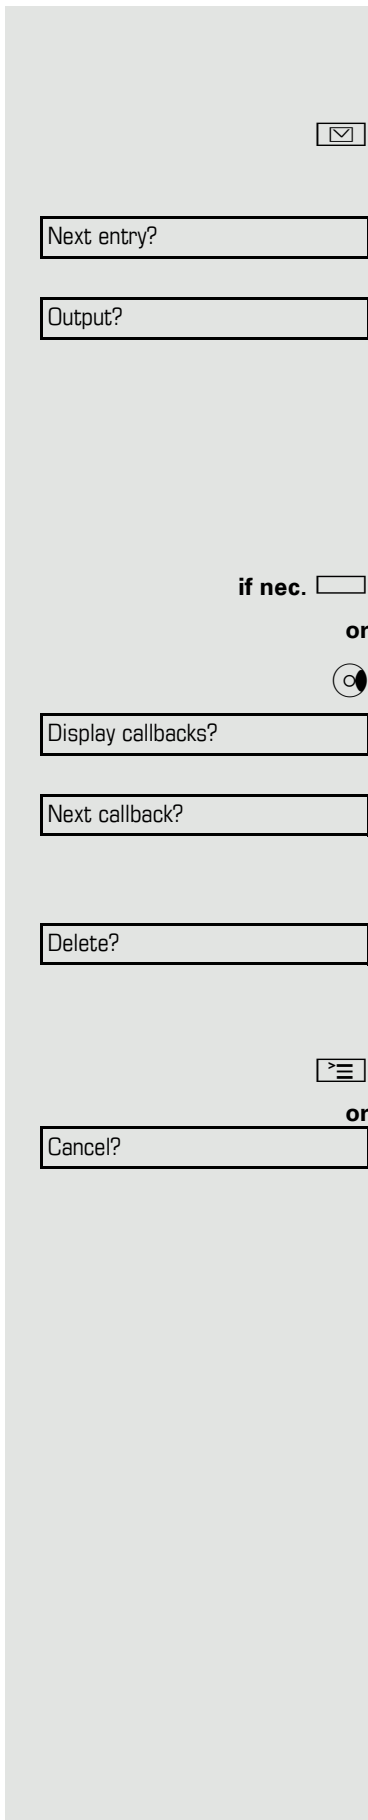

Saving phone numbers for redial



This phone number is saved under the idle menu entry "Saved number redial?", and overwrites previously saved phone numbers. Dial the saved phone number from the idle menu → page 33.

Saving the current phone number

Prerequisite: You are conducting a call. The other party's phone number is displayed.

Select and confirm the option shown.

Saving any phone number

Prerequisite: Your phone is in idle mode → page 20.

Open the Program/Service menu → page 26.

Confirm the option shown.

Select and confirm the option shown.

Confirm the option shown.

Enter the station number.

Confirm the option shown.

Save number?



Destinations?



Saved number redial?



New entry?



Save?

Enhanced phone functions

Answering calls

Answering a call with a headset

Prerequisite: The headset is connected.



The LED flashes when a call is received.
Press the key shown. Conduct call.

Ending the call:



Press the key shown. The LED goes out.

Answering a call via a DSS key

Prerequisite: You have configured direct station selection keys on your telephone → page 17 and → page 68.



Press the DSS key.



The key LED lights up. You can use speakerphone mode.

or



Lift the handset.



For information on the meanings of the LED displays of the DSS keys, see → page 17.

Accepting a call for another member of your team

If a team member does not answer a call within 15 seconds (system-dependent), the remaining team members hear an alert tone.

In idle mode

The phone is ringing. "Call for" is displayed on the phone.



Lift the handset and press the flashing "Pickup" key. You have now picked up the call.



Press the flashing "Pickup" key.
Speakerphone mode.

During calls



Press the flashing "Pickup" key.
The first party is placed on hold while you are connected to the second party.



Ending the second call and returning to the first one

Press the key shown.

Accepting a specific call

You hear another telephone ring and recognize the number, or a colleague requests that you pick up calls for a specific phone.



Lift the handset.

Direct call pickup?



Select and confirm the option shown.

Enter the phone number of the phone from which you wish to pick up calls. In this way you can accept the call.

Display called extension

If the number of the phone in a call pickup group, for which you wish to pick up a call, is not displayed (the default display for call pickup groups is deactivated), you can lift the handset and enter the code for "Display on request". Contact your administrator for this code.



Lift the handset.



Enter the system code for "Display on request" (contact the administrator if necessary).

The phone number is displayed once you have entered the code.

Picking up a call in a hunt group

If configured, you can also be reached using a hunt group phone number.



Your telephone rings.




Lift the handset.

Using the speakerphone

A colleague addresses you directly over the loudspeaker with a speaker call. Speakerphone mode and open listening are automatically activated.

Answering via speakerphone mode is immediately possible.

Lift the handset and answer the call.

 Placing a speaker call to a colleague → page 58.

Making calls


Making calls with a direct station selection key

Prerequisite: You have configured direct station selection keys on your telephone → page 17 and → page 68.

Press the DSS key.


Lift the handset.

Press the key and enter speakerphone mode.

 For information on the meanings of the LED displays of the DSS keys, see → page 17.

Dialing a phone number from a list

Information on the features of the call log as well as a display example for an entry is provided on → page 25.

 If your phone belongs to an ONS group (parallel call → page 104), please note the following:

A call log is maintained for all phones in an ONS group. The call log can be viewed by any internal member of the ONS group with a system telephone.

Open the idle menu → page 21.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

The latest entry in the relevant list is shown, see the example on → page 25.



or



Unanswered calls? →

or

Incoming calls? →

or

Outgoing calls? →

Output?

Dialing a phone number from a list

Select and confirm the option shown.

The relevant party is called.

Next call?

Displaying additional calls in a list

Select and confirm the option shown.

Delete?

Removing an entry from a list

Select and confirm the option shown.

Return?

Ending retrieval

Select and confirm the option shown.

or



Press the key shown.

Using speed dialing



This function must be configured by your administrator.

Speed dial numbers may contain command or access code sequences and may be linked to other speed dial numbers → page 72.

Making calls using central speed dial numbers

Prerequisite: You know the central speed dial numbers → page 72.



Press the key shown.



Enter the system code for "Speed Dial" (contact the administrator if necessary).



Enter the speed dial number.

The connection is immediately established.

Dialing using individual speed dial numbers

Prerequisite: You have configured individual speed dial numbers → page 73.



Open the Program/Service menu → page 26.

Use speed dialing?

Select and confirm the option shown.



...



Press the configured speed dial key.

The connection is immediately established.

Talking to your colleague with a speaker call

You can place a speaker call to an internal party using the loudspeaker on their telephone. You can also use the functions under "HiPath 4000 as a entrance telephone system" → page 57.

Prerequisite: A programmed "Speaker call-two-way" sensor key is configured on your phone.

Press the "COM Spk 2way" programmed sensor key.

Enter the station number.

 
Wait for the tone.

Lift the handset and speak to the party who answers.

Press the key and enter speakerphone mode.



If the party to whom you are speaking has activated "Speaker call protect" on their phone → page 77, your speaker call will be received as a normal call.



During a call

Call waiting with a direct station selection key

Prerequisite: You have configured direct station selection keys on your telephone → page 17 and → page 68. The line of the party you wish to call is busy.



Press the DSS key.

The called party accepts your waiting call.



Lift the handset.

or



Press the key and enter speakerphone mode.



For information on the meanings of the LED displays of the DSS keys, see → page 17.

Using the second call feature

You can specify whether you wish to accept a second call (call waiting) during a call.



The screen display depends on the settings in the function "Call pop-up" → page 28.



If your phone belongs to an ONS group (parallel call → page 104), please note the following:

In addition to an alert tone on the busy phone, the second call is signaled with a ring tone on the other phones in the ONS group.



Feature settings? →

Camp-on?

Activate?

or

Deactivate?

Open the Program/Service menu → page 26.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Activating/deactivating second call

Accepting a second call with a sensor key

Prerequisite: "Second call" is activated. The "Pickup" sensor key is programmed.

You are conducting a call.

An alert tone is audible.

Press the "Pickup" sensor key.

You are immediately connected to the second caller. The first party is placed on hold.

Ending the second call and resuming the first one:

Press the key shown.

Replace the handset and lift it once more.

Accepting a second call via the menu

Prerequisite: You are conducting a call and the "Camp/Override" function is activated.

If "Call pop-up" → page 28 is activated a second call is displayed with name/number and signaled with a call waiting tone. The caller hears the ring tone as if you were free.

Select and confirm the option shown.

You can talk to the second party.
The connection to the first party is on hold.

Ending the second call and resuming the first one

Press the key shown.

Replace the handset and lift it once more.



or



Answer camp-on?



or



Using the shift key

The sensor key "Split" → page 17 (must be configured by the administrator) can be used for the following functions:

- Consultation (return to waiting call or waiting conference)
- Toggle/Connect
- Acceptance of a second call
- Acceptance of a group call

Second call



You hear a call waiting tone. Information for the call is displayed.

Press the flashing sensor key "Split". You pick up the waiting call. The LED lights up.

Toggle/Connect



You are connected with two parties. One party is on hold. The sensor key "Split" lights up.



Press the sensor key "Split" to switch to the other party. The first party is placed on hold.

Consultation



You call the second party. The second party does not answer.



Press the sensor key "Split" to return to the waiting party or conference.

Group call



You are connected with a party. A group call is waiting. Information for the group call is displayed.



Press the flashing sensor key "Split". You pick up the group call, the first party is placed on hold. The LED lights up.

System-supported conference

You can include up to eight internal and external parties in a system-supported conference. Parties with system phones can perform/use all of the functions listed below at the same time. ISDN phones and external parties are passive participants – they can only be included in the current conference.

You can include parties and conferences from a remote system in your conference. The remote parties can establish and extend their own conference. Parties in this conference are included in your current conference. However, they cannot perform/use the functions listed below.

The following functions are supported for all conference participants with system phones:

- Establishing a conference by calling a party, receiving a call, conducting a consultation call or receiving a second call
- Accepting a second call and including the caller in the conference.
- Toggling between the conference and a consultation call or second call
- Conducting a consultation call during a conference and connecting it to the conference
- Connecting conference participants from two independent conferences via a remote network
- Putting the conference on hold, if line keys are configured.
- Obtaining an overview of all conference participants
- Transferring a conference to a new party

The functions listed can be performed by all conference participants simultaneously.

Establishing a conference

Initiating a conference from a single call

You are conducting a call.

Select and confirm the option shown.

Call the second party.

Inform this party that you are initiating a conference.

Confirm the option shown.

The following message is displayed: "1 is your position"

Establishing a conference from a consultation call

You are connected to a party and call a second party.

Select and confirm the option shown.

Call the second party.

Inform this party that you are initiating a conference.

Select and confirm the option shown.

The following message is displayed: "1 is your position".

Establishing a conference from a second call

Prerequisite: You are conducting a call and receive a second call, → page 48.

An alert tone is audible.

Press the "Pickup" sensor key.

Only if a "Pickup" sensor key is not configured:


Confirm the option shown.

You are immediately connected to the second caller. The other party is placed on hold.

Select and confirm the option shown.

The following message is displayed: "1 is your position".

All parties are connected to a single conference.

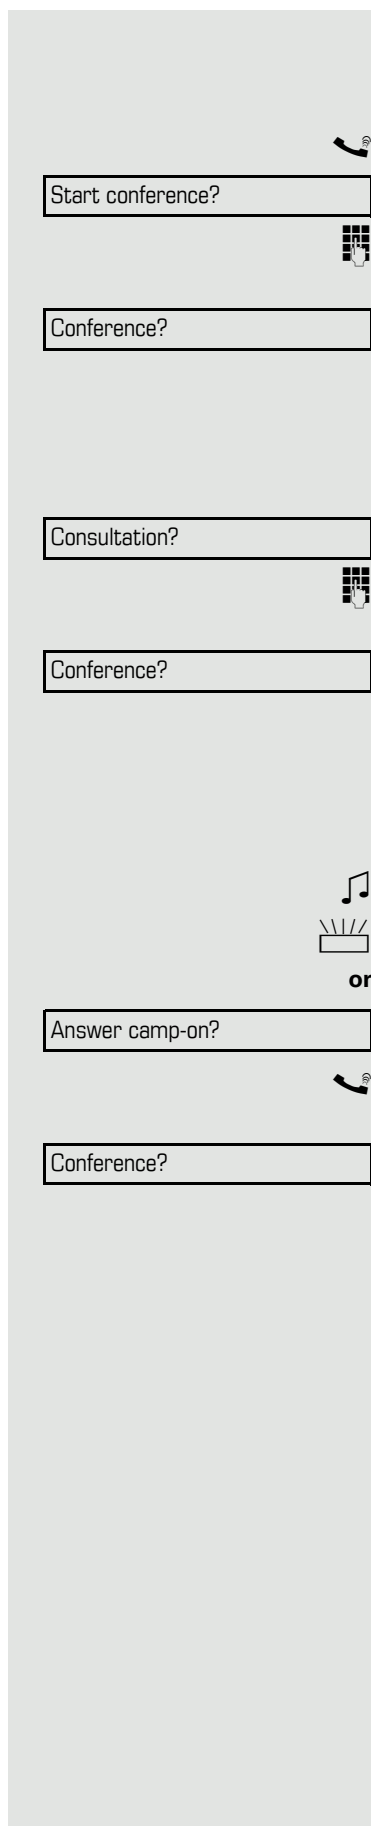

Adding a party

Any party in a system conference can extend the conference by

- calling a specific party and connecting them,
- connecting a party from a consultation call to the conference, or
- accepting a second call and connecting the caller to the conference.

Calling a specific party and connecting them

You intend calling another party and connecting them to the conference.

Confirm the option shown.

Confirm the option shown.

Call the new party.

Inform this party that you are initiating a conference.

Confirm the option shown.

The party is connected to the conference.

If the new party does not answer

Select and confirm the option shown.

Extending a conference by adding a consultation call

During the conference, you wish to hold a consultation call.

Confirm the option shown.

Select and confirm the option shown.

Call a party. Hold the consultation call.

Select and confirm to connect the party from the consultation call to the conference.

Toggle between the conference and the consultation call.

Select and confirm to end the consultation call and return to the conference.

— Conference →

Add to conference?



Conference?

Return to conference?

— Conference →

Consultation?



Conference?

or

Toggle?

or

Release and return?

Accepting a second call and connecting it to the conference

If you receive a second call during the conference → page 47, you can connect this party to the conference.

Prerequisite: You are conducting a call in a conference and receive a second call.

An alert tone is audible.

Press the "Pickup" sensor key.

Only if a "Pickup" sensor key is not configured:

Confirm the option shown.

You are immediately connected to the second caller. The conference participants are placed on hold.

Select and confirm to connect the second call to the conference.

Transferring a conference

Each party can transfer the conference to a third party whom they have called via a consultation call or via the "Add to conference?" function. This party is not a participant in the conference at this point. The conference cannot be transferred to a second call.

Prerequisite: You are in a conference.

Confirm the option shown.

Select and confirm the option shown. The conference participants are placed on hold.

Call a party.

Confirm the option shown.


Confirm the option shown.

Call a party and announce the transfer.

Select and confirm the option shown.

You have left the conference.

Replace the handset.

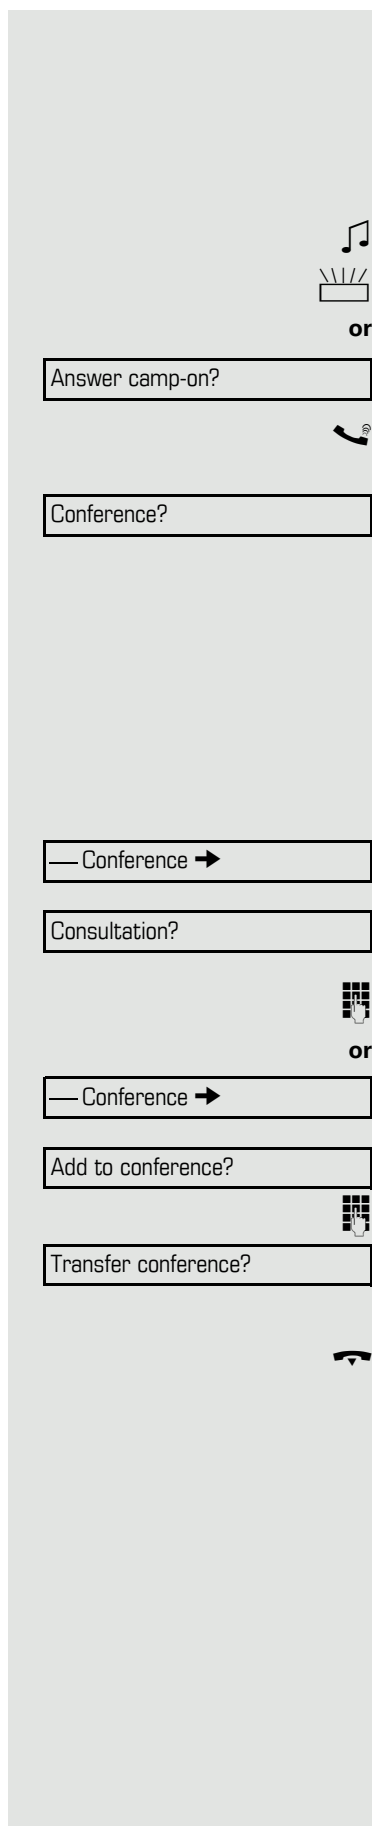

Disconnecting a specific participant from the conference

You are connected to a conference and wish to disconnect one of the participants.

Select and confirm the party you want.

Confirm the option shown.

Putting the conference on hold

On multi-line telephones, you can place the conference on hold and conduct another call on a different line, for example.

Press the line key.

Select and confirm the option shown.

The conference is placed on hold.

Press the line key for the conference that is on hold – you are then reconnected to the conference.

Entering commands using tone dialing (DTMF suffix dialing)

After dialing a phone number you can set tone dialing. This allows you to use command entries to control Dualtone Multi-Frequency (DTMF) devices, such as answering machines or attendant systems.

Open the Program/Service menu → page 26.

Select and confirm the option shown.

Select and confirm the option shown.

You can now enter commands using the keys 0 - 9, the asterisk key, and the pound key.



Ending the call also deactivates DTMF suffix dialing.

Depending on your system configuration, "DTMF suffix dialing?" may appear in the display once you have finished entering the number. You can then enter commands immediately after dialing the phone number.



System-wide parking

On HiPath 4000 systems, you can park up to ten internal and/or external calls and retrieve them on another phone.

There are two options for parking a call:

- Automatic park
- Manual park

You cannot park calls if:

- All park positions are busy
- The park position you wish to use is busy
- The station is an attendant console
- The call is a consultation call
- The call is in a conference

Automatically parking a call

You can automatically park a call in a free park position from your phone, and retrieve it on your phone or another phone.

Call park

Press the "System Park" programmed sensor key. The first free park slot is used and indicated on the display. The call is now parked.



You can also put the call on hold first by confirming "Consultation?" and then parking the call.



Replace the handset.

Retrieving a parked call

Press the "System Park" programmed sensor key.

Enter the park slot number of the parked call and proceed with the call.



Manually parking a call

You can manually park a call in a free park position from your phone, and retrieve it on your phone or another phone.

Call park

Select and confirm the option shown.

Enter the destination number.

The call is now parked.

Replace the handset.

If "Park" is not available, you will receive acoustic and also visual notification.

Confirm and continue the call.

Replace the handset.

You will receive a recall for the call on hold.

Retrieving a parked call

Lift the handset.

Press the key and enter speakerphone mode.

If you cannot reach a destination ...

Call waiting (camp-on)

Prerequisite: An internal station is busy. You would still like to reach your colleague.

Select, confirm and briefly wait.

Your colleague hears a warning tone during the call. The programmed sensor key "Pickup" flashes on the phone. If their phone has a display, your name and phone number is displayed.



To camp on, you must have received the correct authorization.

Camp on is not possible if the called party has do-not-disturb activated.

Park to station?



Return to held call?

or



or



Camp-on?





Override?



Busy override – joining a call in progress

Prerequisite: An internal station is busy. It is important that you reach this colleague.

Select, confirm and briefly wait.

Your colleague and their call partner hear a warning tone.

You can now start talking.



To override a call, you must have received the correct authorization.

Call override is not possible if the called party has station override security activated.

HiPath 4000 as an entrance telephone system (two-way intercom)

You can place a speaker call to an internal party on HiPath 4000 using the loud-speaker on their telephone to establish a connection. You can initiate a speaker call from a consultation call. The following functions are available:

- System-wide speaker call
 - to a variable destination
 - to a fixed destination
- Speaker call in a group
 - to a variable destination
 - to a fixed destination
- Two-way intercom in a group
 - to a variable destination
 - to a fixed destination
- Announcement to all members of a line trunk group

You can cancel the speaker call or the announcement by replacing the handset or, during a consultation call, by retrieving the call on hold.



Please ensure for all functions that "Speaker call protect" is deactivated on the relevant phones → page 77.

If a speaker call is placed to a party and "Speaker call protect" is activated on their phone, the speaker call is ignored and a normal call is established.

System-wide speaker call

You can place a speaker call from your phone to any internal party with a telephone equipped with speakerphone mode or a loudspeaker.

Speaker call to a variable destination

Prerequisite: You have programmed the function "Speaker call-one-way" on a key → page 67.

Lift the handset.

Press the key and enter speakerphone mode.

Enter the system code for "Speaker call-one-way" (contact the administrator if necessary).

Press the "Spkr. 1-way" programmed sensor key.

Enter the internal number of the party.

A connection is immediately established to this destination station's loudspeaker if

- the station is not busy
- the handset has not been lifted
- "Speaker call protect" is not activated

The caller hears a confirmation tone when the connection is established and they are free to start speaking.

The called party can accept the connection by lifting the handset.

If the called party presses the speaker key or the line key (if configured), the connection is lost.

➡ The same number of speaker calls and normal connections is possible.

Speaker call to a fixed destination

The system code for "Speaker call-one-way" and the destination number are programmed on a redial key → page 69.

Press the programmed redial key. A connection to the destination loudspeaker is immediately established.

Speaker call in a group

You can also establish a normal connection within a group or team (with team call = speed dial numbers 0-9 or 00-99 for team members) via a speaker call. The speaker call is then initiated by a group telephone.



The "COM group speaker call" function is line-independent - all phones can call each other via a speaker call.

Speaker call to a variable destination

Lift the handset.

Press the key and enter speakerphone mode.

Enter the system code for "COM group speaker call" (contact the administrator if necessary).

Press the "COM Group" programmed sensor key.

Enter the speed dial number for the corresponding group member.

A connection is immediately established to this destination station's loudspeaker if

- the station is not busy
- the handset has not been lifted
- "Do not disturb" is not activated

The called party accepts the DSS call by lifting the handset.

If the called party presses the speaker key or the line key (if configured), the connection is lost.

Speaker call to a fixed destination

The system code for "COM group speaker call" and the speed dial number for the corresponding group member are programmed on a repdial key → page 69.

Press the programmed repdial key. A connection to the destination loudspeaker is immediately established.

The called party can accept the connection by lifting the handset.

If the called party presses the speaker key or the line key (if configured), the connection is lost.



Two-way intercom to a variable destination

When using the two-way intercom in a group, the loudspeaker and the microphone of the destination phone are automatically switched on.

Lift the handset.



or



Press the key and enter speakerphone mode.



Enter the system code for "Speaker call-two-way" (contact the administrator if necessary).

or



Press the "COM Spk 2way" programmed sensor key.



Enter the speed dial number for the corresponding group member.

The loudspeaker and microphone of the destination phone are automatically switched on.

Two-way intercom to a fixed destination

The system code for "Speaker call-two-way" and the speed dial number for the corresponding group member are programmed on the redial key → page 69.



Press the programmed sensor key.

The loudspeaker and microphone of the destination phone are automatically switched on.

Announcement (broadcast) to all members of a line trunk group

You can use this function to send an announcement to all members (10 - 40) of a line trunk group.

Once you have activated the group call, you will hear a confirmation tone. You can then begin the announcement.

Lift the handset.

Press the key and enter speakerphone mode.

Enter the system code for "Speaker call-1-way bcst" (contact the administrator if necessary).

Press the "Broadcast Spk" programmed sensor key.

Enter the internal phone number of a group member.

The loudspeakers on all group phones are automatically switched on and you will hear a confirmation tone. You can begin the announcement.

You end the announcement by replacing the handset.

If a group member lifts their handset, they are connected to you and the announcement is ended.

If a group member presses the speaker key or the relevant line key for the announcement, they are disconnected from the announcement. If the last remaining member of the group presses the speaker key or line key, the announcement ends.



Using call forwarding



Please note the description for programming call forwarding → page 35.

Automatically forwarding calls

The administrator can configure different call forwarding settings in the system for internal and external calls and activate these settings for your station. The following calls may be forwarded

- All calls without restriction
- Calls on busy
- Calls on no reply

Forwarding for all calls without restriction should only be configured if the station is only used for outgoing calls (e.g. in an elevator).

If you have configured fixed or variable forwarding and the manual forwarding destinations are not reachable (e.g. busy), calls are automatically forwarded to system forwarding destinations.

Delayed call forwarding

This function is configured by the administrator for the system.

Prerequisite: The second call feature must be activated → page 47.

If you have activated "Call forwarding busy/no reply" or "Call forwarding no reply" (→ page 35), you will hear a call waiting tone when a second call is received and the caller information will appear in your display. You then have the option of accepting this call before call forwarding is activated (e.g. if you are waiting for an urgent call).

The caller hears the ring tone and is only forwarded to another station once a set time has elapsed.

Forwarding calls for other stations

You can save, activate, display and deactivate call forwarding for another phone, fax or PC station from your own phone. You must have the PIN of the other station or have "Call forwarding for other stations" access rights. In both cases, the administrator for your system will provide assistance.

Saving a call forwarding destination for another phone and activating call forwarding

Open the Program/Service menu → page 26.

Confirm the option shown.

Select and confirm the option shown.

Confirm the option shown.

Enter the number of the other telephone.

Confirm the option shown.

Enter the PIN
(only applicable if your station does not have "Call forwarding for other stations" access rights).

Confirm the option shown.

Enter the destination number.

Select and confirm the option shown.
Call forwarding is now active.

The screenshot shows a vertical sequence of screens from a mobile phone's menu system. At the top, there is a small icon of a hand holding a phone. Below it, the screens are labeled as follows: 'Destinations?' with a right arrow icon; 'Forwarding station No.?' with a right arrow icon; 'Variable call forw.?' with a right arrow icon; 'Completed?' with a right arrow icon; 'Completed?' with a right arrow icon; 'Completed?' with a right arrow icon; and 'Save?' with a right arrow icon. Each screen has a small icon of a hand holding a phone at the bottom right corner.

Saving a call forwarding destination for fax/PC/busy station and activating call forwarding

Open the Program/Service menu → page 26.

Confirm the option shown.

Select and confirm the option shown.

Enter the code for the call forwarding type you wish to set. Codes are assigned by the administrator. You can enter the codes applicable to you in the table below:

Call forwarding for fax	
Call forwarding for PC	
Call forwarding on busy	

Enter the number of the other station.

Confirm the option shown.

Enter the PIN
(only applicable if your station does not have "Call forwarding for other stations" access rights).

Confirm the option shown.

Enter the destination number.

Confirm the option shown.
Call forwarding is now active.

The screenshot shows a vertical sequence of menu screens on a phone's display. At the top, there is a small icon of a handset with a checkmark. Below it, the screen displays 'Destinations?' with a right-pointing arrow. The next screen shows 'Forwarding station No.?' with a small keypad icon below it. This is followed by a screen with a keypad icon. Then, the screen displays 'Completed?' with a keypad icon below it. This pattern repeats: another 'Completed?' screen with a keypad icon, followed by a final 'Save?' screen. The background of the phone's interface is a light gray.

Displaying/deactivating call forwarding for another phone

Open the Program/Service menu → page 26.

Select and confirm the option shown.

Select and confirm the option shown.

Confirm the option shown.

Enter the number of the other telephone.

Confirm the option shown.

Enter the PIN
(only applicable if your station does not have "Call forwarding for other stations" access rights).

Confirm the option shown.

Deactivating

Confirm the option shown.

Display

Select and confirm the option shown.

Sample display:

Calls for station 3428 are forwarded to station 8968.

The screenshot shows a vertical menu on a light gray background. At the top right is a small icon of a hand holding a pen. Below it are several rectangular buttons with text and arrows. The buttons are: 'Feature settings?' with a right arrow, 'Forwarding station No.?' with a right arrow, 'Variable call forw.?' with a right arrow, 'Completed?' with a right arrow, 'Completed?' with a right arrow, 'Deactivate?' with a right arrow, and 'Display?' with a right arrow. Below the 'Deactivate?' button is the word 'or'. Below the 'Display?' button is a sample display: '3428----->8968'.

Displaying/deactivating call forwarding for fax/PC/busy stations

Open the Program/Service menu → page 26.

Select and confirm the option shown.

Select and confirm the option shown.

Enter the code for the call forwarding type you wish to set. Codes are assigned by the administrator. You can enter the codes applicable to you in the table below:

Displaying call forwarding for fax	
Displaying call forwarding for PC	
Displaying call forwarding when busy	
Deactivating call forwarding for fax	
Deactivating call forwarding for PC	
Deactivating call forwarding when busy	

Enter the number of the other station.

Confirm the option shown.

Enter the PIN (only applicable if your station does not have "Call forwarding for other stations" access rights).

Confirm the option shown.

Deactivating


Confirm the option shown.

Checking

Select and confirm the option shown.

Changing call forwarding for another station

Proceed as for saving/activating call forwarding:
for another phone → page 62,
for fax, PC or busy station → page 63.

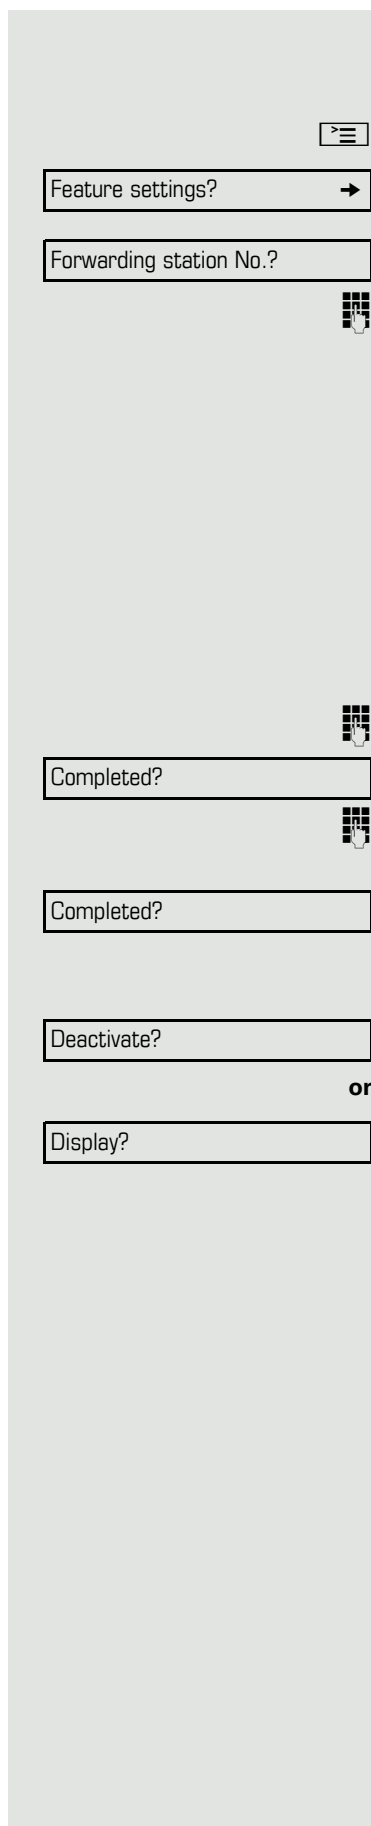

Leaving/rejoining a hunt group

Prerequisite: A hunt group is configured for the team.

You can leave the hunt group at any time, for example, when you leave your workstation. When you are present, you can join it again.



You can still be reached via your own phone number even when you are not in the hunt group.



Feature settings? →

Join hunt group?

Deactivate?

or

Activate?

Open the Program/Service menu → page 26.

Select and confirm the option shown.

Select and confirm the option shown.

Confirm the option shown

confirm.

Programming sensor keys

You can program frequently used functions or phone numbers onto the sensor keys on your OpenStage 40 T → page 17.

Configuring function keys

 
See also → page 17.



The available functions depend on your configuration. If a function is missing, contact your administrator.

Example: Configuring a "Shift key"

Press and hold the required sensor key.



Open the Program/Service menu → page 26.

Key function?

Select and confirm the option shown.

Change?

Press the programmable sensor key.

Confirm the option shown.

More features? →

Select and confirm the option shown.

Shift-Function?

Confirm the option shown.

Save?

Confirm the option shown.



A short touch triggers the programmed function. Procedures with activatable/deactivatable functions, e. g. second call, are activated with one press of the button and deactivated with the next. If activated, the LED lights up.

The label appears automatically and cannot be altered.

The LED display shows the status of the function → page 17.

Configuring repdial/direct station selection keys



Your telephone can be configured so that direct station selection keys cannot be set up, thus facilitating data and personal security. Contact your administrator should you have questions.

Direct station selection keys can be assigned an internal number from the HiPath 4000 network.

A typical application of direct station selection keys is the executive-secretary configuration → page 96.

You can program repdial keys with external phone numbers on two levels. To program the second level, you must configure a "Shift" key → page 67.

See also → page 17.

Prerequisite: You have programmed a sensor key with the function "Repdial" or "Direct station select" → page 67.

Open the Program/Service menu → page 26.

Confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Press the configured repdial key,

Press the configured direct station select key.

Defining the phone number

Enter the number

Confirm the option shown.

Confirm the option shown. Your entry is saved.



Destinations? →

Repdial?

or

Direct Station Select?

R

or

DSS



Enter new number?

Completed?

Use Destination Number?

R 220870

or

Use Destination Name?

R Matthews

or

Create Personal Label?

Gerard Matthew

Save?

Enter Consult?



Enter Pause?



Defining a label

Confirm the option shown.

The phone number entered is displayed as the key label.

Select and confirm the option shown.

If the number entered is assigned a name in HiPath 4000, you can display this as a key label.

Select and confirm the option shown.

You can enter any name. For more information, see → page 70.

Select and confirm the option shown. Your entry is saved.

Additional repdial key functions

Prerequisite: You have defined a phone number for a repdial key and are still in the menu → page 68.

Entering an automatic consultation call

Select and confirm the option shown. "RF" appears in the display.

Add the destination number.



If you press this key during a call, a consultation call is immediately set up. The first party is placed on hold, the number of the saved destination is dialed.

Entering a number with a pause (example)

Select and confirm the option shown. The display shows: "P".

Enter additional numbers.




A pause is three characters long.

Redial keys with enhanced functions

Some functions are not available via the menu - you must enter codes to access them. These codes are configured in the HiPath 4000 system. You can obtain these codes from your administrator.


Example: Locking the phone with simultaneous call forwarding

 The codes used here are examples and may differ from the settings in your system.

Enter the phone locking code.


Activate the code for call forwarding.

Enter the destination phone number.

 In networked systems, the sequence must end with **#**.

Changing the label

You can also subsequently change the label specified when programming a rep-dial/DSS key.

 You cannot change the labels on function keys.

Changing the label

Open the Program/Service menu → page 26.

Confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Press the required repdial/DSS key.

Select and confirm the option shown.


Select and confirm the option shown.


Enter text via the keypad → page 18.

Confirm the option shown. Deletes characters to the left.

Select and confirm the option shown. Your entry is saved.

Select and confirm the option shown. Deletes the label.

 Adapt the contrast of the key label to your surroundings → page 101.

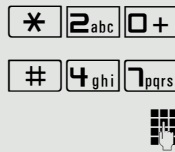

Destinations? →

Repdial?

or

Direct Station Select?



Edit Label?

Create Personal Label?



Backspace?

Save?

Delete?

Deleting sensor key programming

Deleting a function/phone number/label

Press and hold the required sensor key.

Select and confirm the option shown.

Deleting phone number/label

Open the Program/Service menu → page 26.

Confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Press the required repdial/DSS key.

Select and confirm the option shown.

Delete?

Destinations?


Repdial?

Direct Station Select?

Delete?

Saving speed dial numbers and appointments

Central speed dial numbers

 Speed dial numbers are configured by your administrator.

Speed dial numbers are saved in the system.

Your administrator will provide you with the central speed dial directory, for example, in print form.

Making calls using speed dial numbers → page 45.

Speed dialing with extensions

 Speed dial numbers with sequences are configured by your administrator.

Functions and phone numbers, as well as additional access codes, can be saved on a speed dial number.

As the number of characters for a speed dial entry is limited, you can link up to ten speed dial numbers for longer sequences.


Example:

You want to lock your phone and simultaneously activate call forwarding when you leave your office. These two actions can be saved as a sequence on a speed dial number.

Another speed dial number can be saved to release the phone lock and deactivate call forwarding.

Making calls using speed dial numbers → page 45.

Individual speed dial numbers

 This function must be configured by your administrator.

You can program the keys  to  with ten frequently used phone numbers.

Open the Program/Service menu → page 26.

Confirm the option shown.

Select and confirm the option shown.

Press the required speed-dial key. If the key is already in use, the programmed phone number appears on the screen.

Confirm the option shown.

Enter the station number.

Confirm the option shown.
Your entry is saved.

Making calls using speed dial numbers → page 45.

Appointments function

You can configure your phone to call you to remind you about appointments. You must save the required call times. You can do this for the next 24 hours.

Saving appointments

Open the Program/Service menu → page 26.

Select and confirm the option shown.
The display indicates whether a reminder has already been saved.

For the first appointment: Confirm the option shown.
For additional appointments: Select and confirm the option shown.

Enter a 3-digit or 4-digit time, such as 845 (= 8.45 a.m.) or 1500 (= 3.00 p.m.).
Confirm the option shown.

Deleting saved reminders

Open the Program/Service menu → page 26.

Select and confirm the option shown.
A saved reminder is displayed.

Confirm, if you have multiple reminders saved.

Select and confirm the option shown.

Press the key shown.



Using timed reminders

Prerequisite: You have saved a reminder. The saved time arrives.
The phone is ringing.

Lift the handset. The appointment time is displayed.

Replace the handset.



If you do not lift the handset, the phone rings several more times and "Reminder" is displayed before the reminder is deleted.

Dialing with call charge assignment

You can assign external calls to certain projects.

Prerequisite: Project numbers (1 - 5) are configured for certain projects and you have an account code (project code) for the project.

Dialing with project assignment

Open the Program/Service menu → page 26.

Enter a service code between 61 (for project number 1) and 65 (for project number 5).

Enter the PIN.

Open the Program/Service menu → page 26.

Select and confirm the option shown.

Confirm the option shown.

Select and confirm PIN 2 to PIN 5.

Enter the external phone number.

Then make a call as usual → page 29.




Project assignment is temporary. It is automatically switched off if you have not used your phone, for example, for five minutes.

Call duration display

Call duration display is configured by the administrator. The display can show either call duration or call charges. It can also be switched off.

The call duration appears in the first line of the display on the right as HH:MM:SS and in 24-hour format. It is shown 10 seconds after the call starts.

The call charge display feature must be requested from the network operator and configured by the administrator.

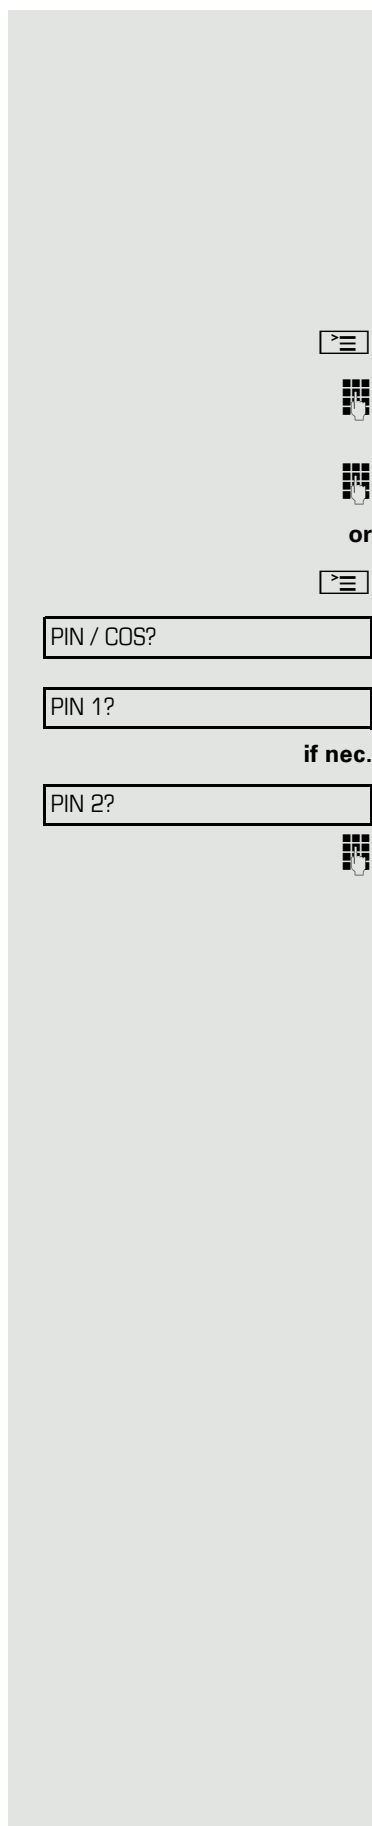

Privacy/security

Locking the telephone to prevent unauthorized use

You can prevent unauthorized parties from using your phone during your absence.

You can see whether the function is activated or deactivated from the corresponding icon in the status bar on the display → page 20.

Prerequisite: You have received a personal identification number (PIN) from the administrator.

Locking the telephone to prevent unauthorized use

Open the Program/Service menu → page 26.

Select and confirm the option shown.

Select and confirm the option shown.

Hold down the key shown.

Enter the PIN (code no.).



When the phone is locked, a special dial tone sounds when the handset is lifted. Within the HiPath 4000 system, users can make calls as normal.

Unlocking the phone

Hold down the key shown.

Enter the PIN (code no.).

Confirm.

If your entry is correct, "Carried out" is displayed.



PIN / COS?



Change COS?

or



or



Activating/deactivating "Do not disturb"

If you do not wish to take calls, you can activate do not disturb. Internal callers hear the ring tone and receive the message "Do not disturb".

External callers are redirected to the attendant console. The administrator can set forwarding destinations for do not disturb so that internal and external calls can be forwarded.

➡ If your phone belongs to an ONS group (parallel call → page 104), please note the following:
Do not disturb can be activated/deactivated on any phone in the ONS group - it then applies to all phones in that group.

Prerequisite: The administrator have activated do not disturb for all HiPath 4000 stations in your system.

Open the Program/Service menu → page 26.

Select and confirm the option shown.

Select and confirm the option shown. The display shows whether do not disturb is activated or deactivated → page 20.

Confirm the option shown.

confirm.

➡ An icon in the status bar → page 20 reminds you that "Do not disturb" is activated.

The attendant can bypass "Do not disturb" and reach you.

If the administrator have blocked "Do not disturb" generally for HiPath 4000, the menu option "Do not disturb?" does not appear in the Program/Service menu.

Activating/deactivating "Speaker call protect"

You can block speaker calls to your phone. If a caller attempts to contact you via a speaker call, the connection is established as a normal call.

Open the Program/Service menu → page 26.


Select and confirm the option shown.

Select and confirm the option shown.

The display shows whether "Speaker call protect" is activated or deactivated.

Confirm the option shown.

confirm.

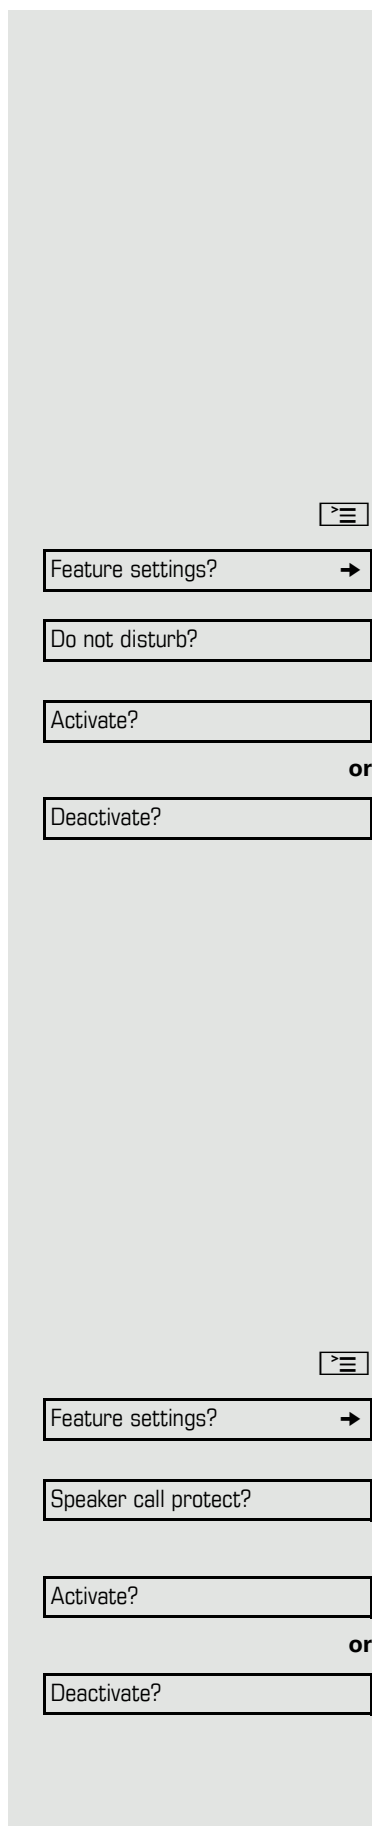

Caller ID suppression

Display suppression only applies to a subsequent call and is not saved in the case of saved number redial → page 33.

Open the Program/Service menu → page 26.

Select and confirm the option shown.

Confirm the option shown. You will hear the dial tone.

Enter the number of the party you wish to call. If the called party accepts the call, your number is not displayed.

Identifying anonymous callers (trace call)


 This function must be configured by your administrator.


You can identify malicious external callers. You can record the caller's phone number during a call or up to 30 seconds after a call. In this case, you should not hang up.

Open the Program/Service menu → page 26.

Select and confirm the option shown.

Select and confirm the option shown.

 If the trace is successful, the transmitted data is stored by your network operator. Contact your administrator.

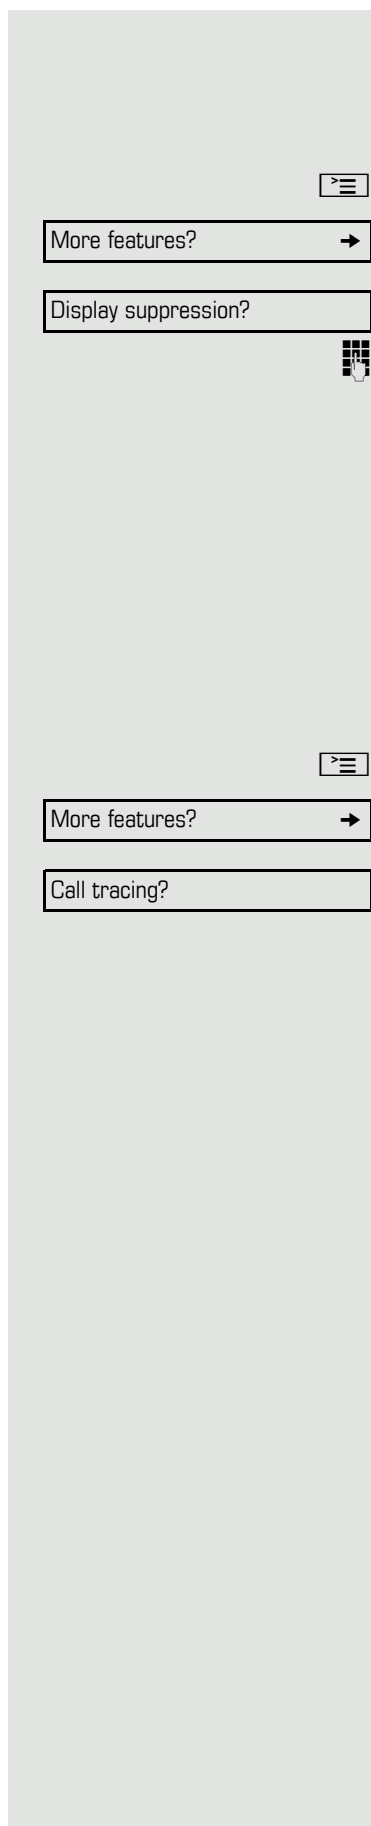

More functions/services

Using another telephone in the same way as your own

You can log on to another phone in the HiPath 4000 system using your personal identification number (PIN). This also applies to telephones in networked HiPath 4000 systems, for example, at other company sites). On another phone, you can

- make calls using cost center assignment,
- make calls using project assignment,
- query your mailbox,
- use your individual speed dial numbers and a number saved on your phone for redial
- enter appointments

With an internal PIN you can forward calls for you to other phones at your location ("follow me" call forwarding).

Logging on to another phone

Prerequisite: You have received a PIN from your administrator. Within your own HiPath 4000 system, you will need an internal PIN. For other HiPath 4000 systems in the network, you will need a network-wide PIN.

Open the Program/Service menu → page 26.

Select and confirm the option shown.

Select and confirm the option shown.

If you have several PINs and wish to use a different one, select the other PIN.

At the display "Enter station no:" or "Enter ID", you are prompted to enter your PIN.




PIN / COS?



PIN 1?



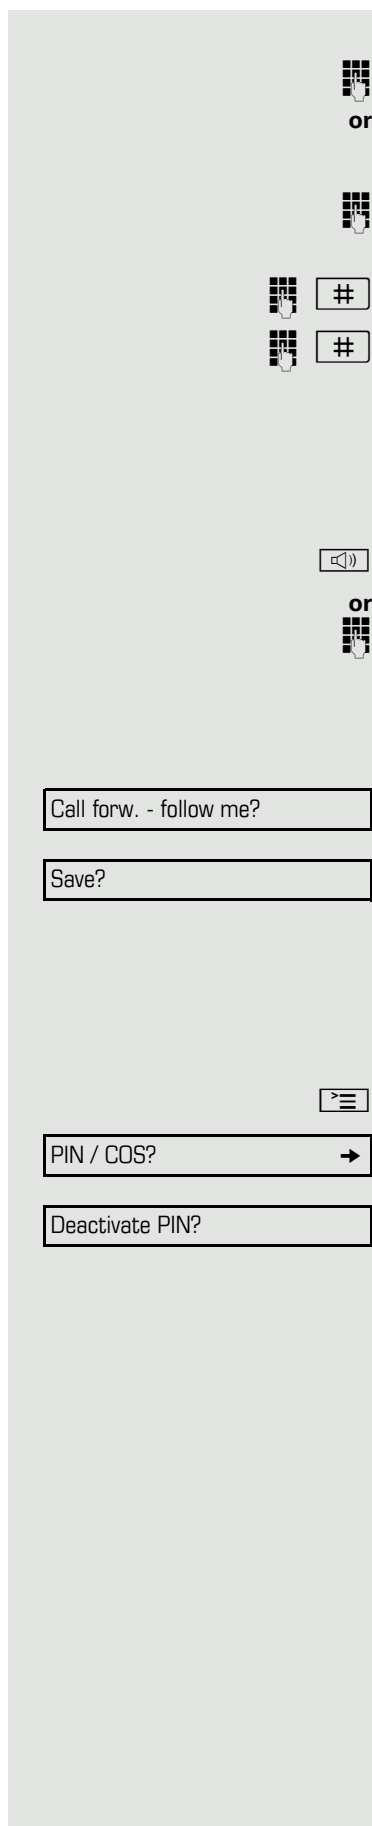

In your local HiPath 4000 system:

Enter your internal PIN.

In your local system and other HiPath 4000 systems in the network:

Enter the two-digit node ID of your local HiPath 4000 system (ask the administrator).

Enter your own phone number and press the pound key.

Enter the network-wide PIN and press the pound key.

Making a call after successful logon

You will hear the dial tone.

"Please dial" appears in the display.

Press the key shown.

Enter a phone number immediately.

Setting up "follow me" call forwarding following successful identification

Select and confirm the option shown.

Select and confirm the option shown.

Call forwarding is now active.

Logging off from another phone

Open the Program/Service menu → page 26.

Select and confirm the option shown.

Select and confirm the option shown.



You are automatically logged off if the other phone remains unused for several minutes.

Moving with the Phone

Check with your administrator whether this is possible in your system!

After talking to your administrator, you can log your telephone off from the current port and log on again at the new port. Phone settings are then unchanged.

Logging the phone off from the current port

Enter the logoff code. If necessary ask your administrator for this code.

Enter the PIN.

Unplug the phone plug from the port socket.

Log the phone on at the new location

Put the phone plus in the port socket.

Enter the logon code. If necessary ask your administrator for this code.

Enter the PIN.



If you move with a first and second phone, e.g. in an executive-secretary configuration), the second phone must be logged off first and then the first phone. At the new port the first phone must be logged on first and then the second phone.

Making calls via multiple lines

Line keys


The programmable sensor keys on multi-line phones function as line keys. Each key that is assigned the function "line" is handled as a line. This means up to six lines can be configured.

A distinction is made between primary and secondary lines. Each of these line types can be used on a private or shared basis → page 83.

Line keys are configured by the administrator.

The following diagram shows how telephones with multiple line keys are connected in a team.

3234 Mr. Matthews' phone number, 3235 is Mr. Miller's phone number and 3236 is Mr. Sadler's phone number. On all three phones, calls can be made via all three lines. However, the line of your own extension number is always the primary line.

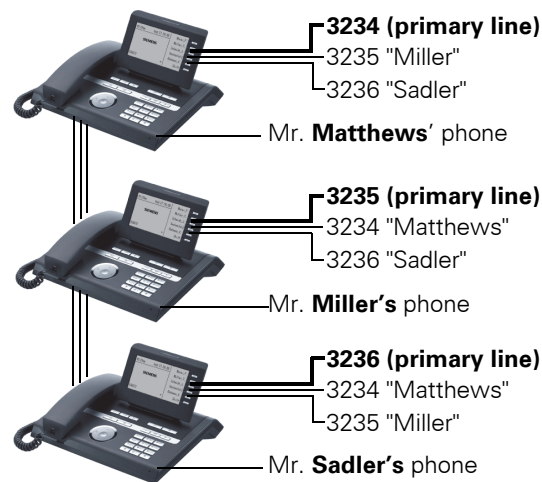

Primary line

All multi-line telephones have a primary line. This line can be reached in the usual manner via your public phone number. Incoming calls are signaled on this line.



To avoid conflict between the individual multi-line phones, you can configure the functions "Do not disturb" and "Call forwarding" exclusively for the primary line.

Secondary line

The secondary line on your phone is used as a primary line by another subscriber in the system. Your primary line, which is configured on another telephone in the system, simultaneously functions as the secondary line on that telephone.

Line utilization

Private line

A line that is used by a single telephone. This line cannot be used as a secondary line by another telephone.


 

Shared line

A line that is configured on multiple telephones. The line status (if configured) is displayed for all telephones that share this line. If, for example, a shared line is being used by a telephone, a status message indicating that this line is busy is displayed on all other telephones.

Direct call line

A line with a direct connection to another telephone.
You can see the status of the line from the LED.

LED displays on line keys

LED		Explanation
	Off	– The line is in idle mode.
	Flashing ¹	– Incoming call on the line – Hold reminder is activated – The line is on "Hold".
	On	– The line is busy.

¹ In this manual, flashing sensor keys are identified by this icon, regardless of the flashing interval. The flashing interval represents different statuses, which are described in detail in the corresponding sections of the manual.

Preview

You are making a call on a single line. The LED on another line key flashes quickly. The "Preview of Line" function shows you who is calling on this line. This information appears in your display. You can also determine which caller is waiting on a line key, if you have placed them on "hold" or "exclusive hold". You can also display information about the caller on the active line.

Prerequisite: You have accepted a call on a line key. The line key LED flashes quickly and the "Preview" is configured.

Activating preliminary display



Press the "Preview" programmed sensor key. The LED lights up.
Press the required line key.
Information about the caller or the party on hold or parked is displayed.

Deactivating preliminary display



Press the "Preview" programmed sensor key. The LED goes out.
The menu line and call duration are displayed again.

Answering calls with the line keys

If several calls arrive at the same time, you can answer calls as normal in the sequence in which they are offered. However, you can also answer calls preferentially.

Prerequisite: The administrator have defined the sequence in which incoming calls should be routed to line keys.

Answering calls in the sequence in which they are offered

Your telephone rings (call). The caller ID is displayed. The LED of the line key offered flashes quickly.



or



Lift the handset.

Press the key and enter speakerphone mode.

Answering calls preferentially

Your telephone rings (call). The caller ID is displayed. The LED of the line key offered flashes quickly. The LEDs of the other line keys also flash quickly.



Press the preferred line key. The caller ID is briefly displayed.



or



Lift the handset.

Press the key and enter speakerphone mode.

Deactivating/activating ringing (call)

If you are making a call on one line, ringing for other incoming calls can disturb your current call. If the "Ringer cutoff?" function is activated, your telephone no longer rings. Incoming calls are then only signaled when the corresponding line key flashes.

"Ringer Off" with programmed sensor key

To deactivate ringing:
Press the "Ringer Off" sensor key. The LED lights up.
The phone does not ring for incoming calls.

To activate ringing:
Press the "Ringer Off" sensor key. The LED goes out.
The phone rings for incoming calls.

Via the Program/Service menu

Open the Program/Service menu → page 26.

Select and confirm the option shown.

Select and confirm the option shown.

Confirm the option shown,

confirm.



Feature settings? →

Ringer cutoff?

Deactivate?

or

Activate?

Dialing with line keys

Your phone can be configured with automatic or selectable line seizure. The administrator defines whether a line should be automatically seized when the handset is lifted or speakerphone mode is activated, and which line this should be.



The display "Please select a line" prompts you to seize a line when you lift the handset or press the speaker key.

Dialing with automatic line seizure

Lift the handset.

Press the key shown.

The display briefly shows the line number and status and then prompts you to dial.

Example:

The line 220870 is selected automatically.

The line key LED for 220870 lights up.

Enter the station number.

Dialing with selectable line seizure

Lift the handset.

Press the key shown.

You are prompted to press a free line key.


Press a free line key. The LED lights up.

Example:

The line 220870 is selected automatically.

The line key LED for 220870 lights up.

Enter the station number.

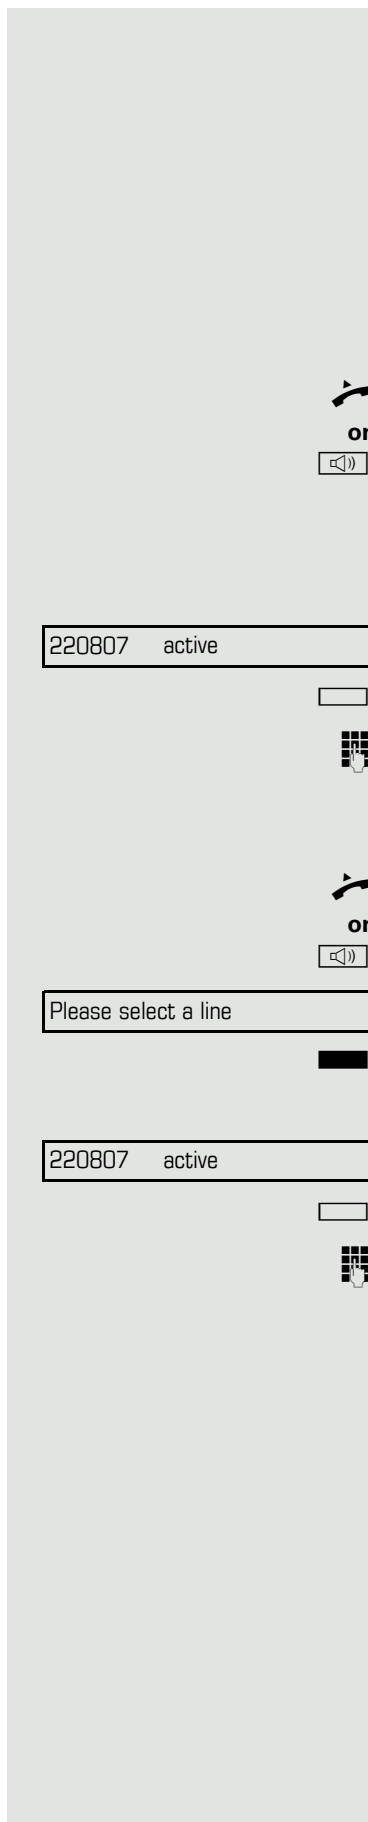

Holding a call on the trunk key

Prerequisite: The "Hold" key is programmed on your telephone.

Press the "Hold" key.

The trunk key LED is flashing slowly.



Your HiPath 4000 system can also be configured, so the call is held by pressing the trunk key. Please test this or, if necessary, ask your administrator.

Saved number redial for a specific line

If this type of saved number redial is configured on your system, you can save a phone number for subsequent redial on a particular line → page 88. The saved phone number is dialed using the line key and the saved number redial key.

Lift the handset.

Press the key shown.

Display.

Press the applicable line key. The LED lights up.

Press the key shown.



If you save a redial on a specific line, this can be overwritten by another team member.

Last number dialed for a specific line

The last phone number dialed via your primary line is saved.

If this type of saved number redial is configured on your system, every last number dialed for the current line is automatically saved for redial.

Lift the handset.

Press the key and enter speakerphone mode.

Press the required line key. The LED lights up.

Confirm the option shown.

Lift the handset.

Press the key and enter speakerphone mode.



or



Please select a line



or



Last number redial?



or



Saving phone numbers for "Redial on a line"

Prerequisite: "Saved number redial for a specific line" is configured and not "Saved number redial (last number dialed)".

Saving the dialed phone number or a caller's phone number

You have called a party on a particular line and this call is still in progress. Or, you were called by another party whose phone number is displayed, and this call is still in progress.



Press the key shown. The phone number is saved for the current line.



Press the key shown. The LED goes out.

or



Replace the handset.

Line mailbox

Callers who wish to reach you when you are absent can leave a message on the mailbox for the relevant line.

Both voice and fax messages can be stored in the mailbox (if so configured).

Prerequisite: A mailbox is configured for one or more lines.

Please note that only one user can edit one mailbox at any time.



If your phone belongs to an ONS group (parallel call → page 104), please note the following:

Signaling is available for the mailbox (MWI) on all phones in an ONS group.

Retrieving messages

If new messages that have not yet been retrieved are in the mailbox and a programmable sensor key has been assigned the function "Mailbox", the LED of this key lights up.

Please refer to the information on → page 24.

Press the "MBLN" sensor key.

Information regarding the caller is displayed → page 24.

Responding to a callback request

A callback request is displayed.

Select and confirm the option shown. The party is called on the relevant line.

Next entry

More than one entry is available.

Select and confirm the option shown. The next entry is displayed.

Deleting mailbox entries

The relevant entry is displayed.

Select and confirm the option shown.

Ending message retrieval

Press the key shown.

Select and confirm the option shown.

Undeleted entries in the mailbox remain saved. If unanswered callback requests are present, the programmed "MBLN" key remains lit.



Output?

Next entry?

Delete?



or

Cancel?

Identifying the line used

If several lines are occupied at the same time, you can determine which one you are currently using for a call.

With a programmed sensor key

Press the "Line in Use" programmed sensor key.

Via the menu

Open the Program/Service menu → page 26.

Select and confirm the option shown.

Select and confirm the option shown.

The line number and status of the line currently in use are displayed → page 23.

Making calls on multiple lines alternately

Prerequisite 1: The administrator has specified that when you change lines, the lines are hold and can only be disconnected by replacing the handset or pressing the release key.

Prerequisite 2: You are connected to multiple parties via two or more lines. These may be callers (→ page 84) or called parties (→ page 86).

You are on a call e. g. on line 1. The trunk key of the party on hold blinks slowly.

Press the flashing line key 2. The first call party is on hold on line 1.

Press the flashing line key 1. The second call party is on hold on line 2.

You can switch between lines as often as you wish.



More features? →

Show used line?

Ending the connection on a line key



or



Press the key shown. The LED goes out.

Replace the handset.

Entering a call on a line (three-party conference)

Prerequisite: A call is in progress on one of the lines. The line key LED lights up.



Press the line key. You and the parties already connected can hear the conference. All three parties can speak with one another. The LED remains lit.



You cannot enter a conference, if the function "Privacy" is deactivated on your line.

If one of the three parties hangs up, the other two remain connected.

If a connection remains between you, as the entering party, and one of the other parties who previously occupied the line, consultation is no longer possible.

Allowing or blocking a party from joining a call

Allowing a party to join a call

Your primary line may be configured so that other parties may not join calls on that line when it is busy. In this case, you can allow other parties to join a call. This authorization applies to the current or the next call.



or



You are already conducting a call on one line.

Lift the handset.

With a programmed sensor key



Press the "Privacy" programmed sensor key.

Via the menu



Open the Program/Service menu → page 26.

More features? →

Select and confirm the option shown.

Privacy off?

Select and confirm the option shown.

Other parties can now join the call.

Blocking other parties from joining a call

If your phone is not already set to block other parties from joining, you can make this setting manually. This block applies to the current or the next call.

You are already conducting a call on one line.

Lift the handset.

With a programmed sensor key

Press the "Privacy" programmed sensor key.

Via the menu

Open the Program/Service menu → page 26.

Select and confirm the option shown.

Select and confirm the option shown.

Other parties are now blocked from joining the call.

Ending the connection on a line key

Press the key shown. The LED goes out.

Replace the handset.



or



More features?



Privacy on?



or



Third-party monitoring

During a call, a predefined party can be prompted to join the call as a "witness" using the "SInt Mon Req" programmed sensor key. Your call partner is not informed that a "witness" is joining the call. The "witness" cannot participate in the call; they can only hear what is being said.



When configuring and using third-party monitoring, please note the applicable data protection regulations.

Prerequisite: Third-party monitoring is configured in your system and the programmed sensor key "SInt Mon Req" is configured on your phone. You are conducting a call. "Privacy" must be deactivated.

Briefly press the "SInt Mon Req" programmed sensor key twice. The "witness" hears a special tone on their phone and the message "Connect witness or tape" appears on their display.

The "witness" lifts the handset.

The "witness" presses the line key for the line on which the call is being conducted.

The "witness" can now listen to the call without being noticed.



Only the "witness" may end silent monitoring, by hanging up or pressing the line key.

Holding and re-accepting a call on a line key

Prerequisite: You have accepted a call on a line key (→ page 84) or you are conducting a consultation call.

Briefly press the line key you are currently using,

or

Hold?

Select and confirm the option shown.

The line key where the call is on hold flashes slowly. The call can be continued on any phone in the team where the LED for this line key is flashing.

Retrieving the call

Press the flashing line key. Proceed with your call.

Exclusively holding and re-accepting a call on a line key

Prerequisite: You have accepted a call on a line key or you are conducting a consultation call that only you can or wish to continue.

Press the "Excl. Hold" programmed sensor key.

or

Private hold?

Select and confirm the option shown.

The line key where the call is parked, flashes slowly. The call can be continued on your phone only and is not signaled on any other phone.

Retrieving the call

Press the flashing line key. Proceed with your call.

Accepting a specific held line

A colleague in an open-plan office has parked a call on a line key and requests that you accept the call. You do not have access to this line.

Lift the handset.

Select and confirm the option shown.

Direct call pickup?

Enter the phone number of the phone where the call is parked. In this way you can accept the call.

Forwarding calls on lines

When you activate call forwarding for a shared line (→ page 83), the line is generally also forwarded to other phones.

The process for configuring call forwarding for a specific line is identical to the call forwarding process already described. You must simply ensure that the required line is already seized.

Press the line key for the required line. The LED lights up.

Please read the additional notes on → page 35.

Ring transfer

If you temporarily leave your workstation or do not wish to be disturbed, you can transfer incoming calls to your line to another destination. A "RTRLN" (ring transfer/line) sensor key can be programmed for each line.

Activating

Press the "RTRLN" programmed sensor key. The LEDs on your phone and on the destination phone light up. When you receive a call, the line key flashes but the phone does not ring. The call is signaled on all other team phones.

Deactivating

Press the "RTRLN" programmed sensor key. The LED goes out. Calls are signaled on the phone once more.

Making calls in an executive-secretary team

An executive-secretary team is configured by the administrator and may include up to four executive and up to two secretary telephones.



For information on the meanings of the LED displays of the DSS keys, see → page 17.

Calling an executive or secretary phone

Calling an executive/secretary phone

On the secretary phone, a DSS key is configured as "executive" and on the executive phone, a DSS key is configured as "secretary".

Example: calling the secretary from the executive phone

The LED is not lit – the secretary is not on a call



Press the "secretary" DSS key.



Lift the handset.

or



Press the key and enter speakerphone mode.

The LED is lit – the secretary is on a call



Press the "secretary" DSS key.

Camp-on to the secretary phone. The called party hears a tone and the "Pickup" programmed sensor key flashes.



Lift the handset.

or



Press the key and enter speakerphone mode.



DSS from the secretary to the executive functions in the same way, using the "executive" DSS key.

Accepting calls for the executive phone at the secretary phone

When a call is received for the executive phone, the secretary phone rings.

Lift the handset.

Press the key and enter speakerphone mode.

Accepting calls for the executive phone when already on a call

You are conducting a call.

The executive phone receives a call.

Ask your call partner to wait.

Press the "Pickup" programmed sensor key.

Ending the call and returning to the first call:

Press the key shown.

Continue the call with your initial call partner.

Transferring a call to the executive phone

Prerequisite: You have accepted a call for the executive phone on the secretary phone.

Press the "executive" DSS key. You are connected to the executive phone.

With announcement

Announce the call partner.

Replace the handset.

Without announcement

Replace the handset immediately.

Transferring calls directly to the executive phone

When the secretary is out of the office, calls for the executive can be transferred directly to the executive phone. This transfer can be made on the secretary phone or on the executive phone.

Activating



Press the "RT Executive" programmed sensor key. The LED lights up.

Deactivating



Press the "RT Executive" programmed sensor key. The LED goes out.



Calls for the secretary phone are not transferred, only calls for the executive phone.

Accepting calls on the executive phone

The secretary phone does not answer a call for the executive. After 15 seconds (depending on the system) you hear an alert tone on the executive phone. The display shows who is calling.



Lift the handset.



Press the "Pickup" programmed sensor key.

Accepting a call for another executive-secretary team

If multiple executive-secretary teams are configured, you can also accept calls for other teams.



Lift the handset.



Press the programmed sensor key, for example, "Exec 3".



Call pickup is also possible during a call. Ask your call partner to wait briefly and then press the flashing programmed sensor key.

Using a second (executive) telephone

Prerequisite: A second phone is configured for the executive. A "Group Park" sensor key is programmed on the first and second executive phones.

Parking a call on the first phone:

Press the "Group Park" programmed sensor key. The LED lights up.

Continuing a call on the second phone:

Lift the handset.

Press the "Group Park" programmed sensor key.

Activating/deactivating a second executive call

On the executive phone, you can configure calls to go to the secretary phone when you are on a call. If you are on a call and are expecting another important call, it may be useful to activate the second call feature.

Open the Program/Service menu → page 26.

Select and confirm the option shown.

Confirm the option shown.

Confirm the option shown

confirm.



Feature settings? →

Camp-on?

Activate?

or

Deactivate?

Using signal call

If a "Buzz" programmed sensor key is configured on your executive phone, you can press a key to send a signal call to a specific destination phone (e.g. to a secretary phone). On the destination phone, the phone number of the transmitting phone is also briefly displayed for the signal call.

You can press the programmed sensor key in idle mode and while on a call (once or several times).

If a "Buzz" programmed sensor key is not configured, you can lift the handset and enter the "Signal call" code to send a signal call to the destination phone.

Placing a messenger call

You can place a messenger call by pressing a key, if this key is configured on the executive phone. Programming a sensor key with a function → page 67.

Defining a representative for the secretary

Calls for the executive that arrive at the secretary phone can be forwarded to another phone. To do this, you must configure a "Alt. Answer" programmed sensor key. The procedure for doing this is identical to the procedure described in chapter "Configuring function keys" (in this case: Representative).

Activating the representative:



Press the "Alt. Answer" programmed sensor key. The LED lights up.

Deactivating the representative:



Press the "Alt. Answer" programmed sensor key. The LED goes out.

Individual phone configuration

Adjusting display settings

Adjusting the display to a comfortable reading angle

You can swivel the display unit. Adjust the display unit so that you can clearly read the screen.

Illuminated display

During operation and when entering a number, the display automatically lights up. The display lighting switches off automatically a few seconds after finishing the last action.

Setting contrast

The display has eight contrast levels that you can set according to your light conditions.

Press one of the keys shown in idle mode → page 21.

Select and confirm the option shown.

Change the display contrast. Keep pressing the key until the desired contrast is set.

Save.

Adjusting displays on the OpenStage key module

You can adapt the contrast for a connected OpenStage key module to the lighting conditions in eight levels.

Press one of the keys shown in idle mode → page 20.

Select and confirm the option shown.

Keep pressing the key until the desired contrast is set.

Save.

+ or -

Display contrast?

+ or -

OK

+ or -

Label contrast?

+ or -

OK

Adjusting audio settings

Optimize the audio settings on your OpenStage for your environment and according to your personal requirements.

Adjusting the ring volume

Press one of the keys in idle mode → page 20 or while a call is in progress.

Confirm the option shown.

Raise or lower the volume. Keep pressing the key until the desired volume is set.

Save.

Adjusting the ring tone

Press one of the keys shown in idle mode → page 20.

Select and confirm the option shown.

To adjust the ring tone: Keep pressing the keys until the desired tone is set.

Save.

Room character for speakerphone mode

To help the other party understand you clearly while you are talking into the microphone, you can adjust the telephone to the acoustics in your environment using "Normal room", "Room with echo" or "Quiet room".

Press one of the keys shown in idle mode → page 20.

Select and confirm the option shown.

Modify the room type. Keep pressing the key until the desired room type is set.

Save.

Setting the volume of the alert tone

The alert tone is output, for example when you receive a second call while a call is in progress.

Press one of the keys shown in idle mode → page 20.

Select and confirm the option shown.


Modify the volume. Keep pressing the key until the desired volume is set.

Save.

Activating/deactivating the ringer

You can see whether the function is activated or deactivated from the corresponding icon in the status bar on the display → page 20.

Hold down the key shown.

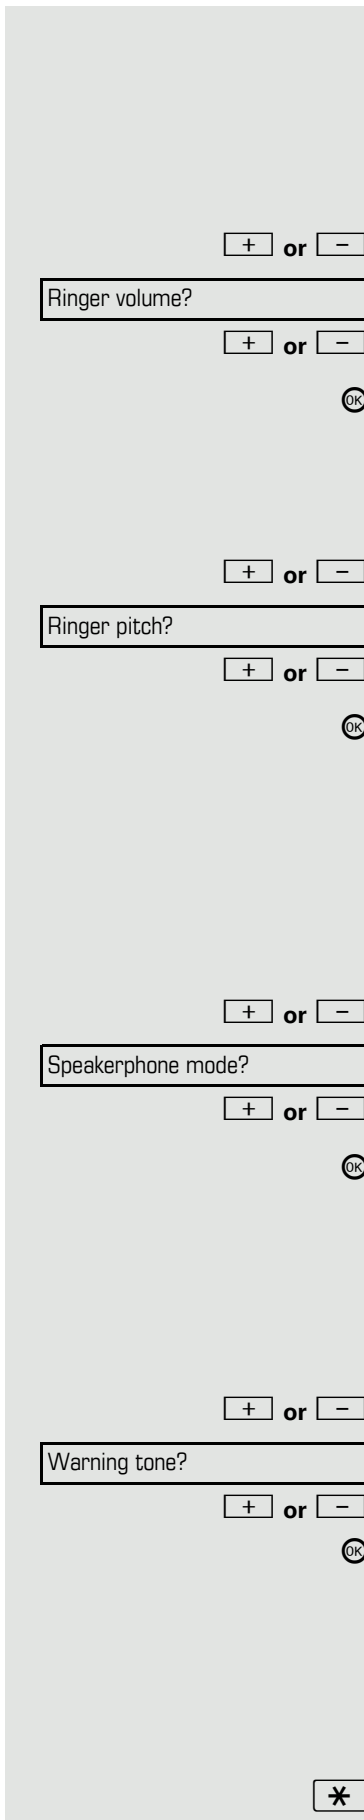

Testing the phone

Testing functionality

You can test and determine your phone's functionality:

- Are all key LEDs working?
- Is the display working?
- Do all keys work?

The following may be checked by administrator:

- Device ID for the phone
- OpenStage software version
- Line power level

Prerequisite: The phone is in idle mode → page 20.

Open the Program/Service menu → page 26.

Select and confirm the option shown.

Select and confirm the required test functions. Follow the additional user prompts on the display.

Press the key shown. The LED goes out. The test is complete.




Phone test?



Special parallel call (ONS) functions

If your phone is part of an ONS group (ONS = "One Number Service"), you can be reached on all other phones in this group as well as on your own phone. To set up an ONS group, contact your administrator.

An ONS group may consist of up to three phones (phone numbers).

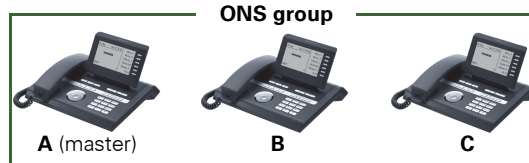

Up to one group member can be an external phone (such as a mobile phone). One phone in the group is the "master" (**A**) - the other ONS group members (**B**, **C**) receive A's number.

If **A**, **B** or **C** receive a call, all phones in the ONS group ring. If **A**, **B** or **C** is busy, all phones in the ONS group are busy (callers outside the ONS group receive a busy signal). Within the ONS group, phones can be reached on their original phone numbers.

The following functions also have an additional impact on internal member phones in an ONS group:

- Call waiting → page 47
- Call forwarding → page 35
- Do not disturb → page 77
- Mailbox (MWI) → page 24
- Callback → page 39
- Call log → page 44



If your ONS group contains a mobile phone, you must ensure that it is always available (switched on). Otherwise the mobile mailbox may pick up a call too early, leading to call signaling problems on the other ONS group member phones.

Fixing problems

Responding to error messages on the screen

Time exceeded

Possible cause:

Maximum input time exceeded.
Handset not replaced.

Possible response:

Make entries more quickly, avoid long pauses between key presses.

Please try later

Possible cause:

System is overloaded, no line free, queue full.

Possible response:

Wait and try again later.

Currently not accessible

Possible cause:

- a) Function is currently not available.
- b) The phone number dialed is not in service.

Possible response:

- a) Wait and try again later.
- b) Enter the number correctly or call the exchange.

Not possible

or Incorrect input

or Nothing stored

Possible cause:

Speed dial number not available, reminder entered incorrectly, blocked or invalid entry, prerequisite not met (e.g. second call not waiting in the case of alternating), incomplete number dialed.

Possible response:

Correct entry, select permitted option, and enter phone number in full.

Not authorized

or Not allowed

Possible cause:

- a) Disabled function selected.
- b) Incorrect PIN entered.

Possible response:

- a) Apply for authorization for disabled function from administrator.
- b) Enter correct PIN.

Not available

Possible cause:

Incomplete phone number entered, star or hash key not pressed.

Possible response

Enter phone number or code correctly or as instructed.

protected

Possible cause:

Data transfer in process.

Possible response:

Wait and try again later.

Contact partner in the case of problems

In the case of faults that continue for more than 5 minutes, for example, contact your administrator.

Troubleshooting

Pressed key does not respond:

Check if the key is stuck.

Telephone does not ring:

Check whether the "Do not disturb" function is activated on your telephone (→ page 77). If so, deactivate it.

You cannot dial an external number:

Check whether your telephone is locked.
If the phone is locked, unlock it → page 76.

The displayed time is incorrect:

The time is corrected automatically over night after 24 hours at the latest.

To correct any other problems:

First contact the administrator. If the administrator is unable to correct the problem, they must contact Customer Service.

Caring for your telephone

- Never allow the telephone to come into contact with coloring, oily or aggressive agents.
- Always use a damp or antistatic cloth to clean the telephone. Never use a dry cloth.
- If the telephone is very dirty, clean it with a diluted neutral cleaner containing surfactants, such as a dish detergent. Afterwards remove all traces of the cleaner with a damp cloth (using water only).
- Never use aggressive or alcohol-based cleansers on plastic parts. The use of scouring agents is also forbidden.

Index

Numerics

5-way navigator 16

A

Accept call
 (executive-secretary) 97
Answering calls
 with line keys 84
Audio controls 15
Audio keys 15
Automatic call forwarding 61
Automatic consultation 69

B

Blocking a party from joining a call 91
Busy override 57

C

Call
 accepting 29
 call forwarding 35
 ending 31
 incoming 29
 parking 56
Call forwarding
 fax or PC 63
 on lines 95
Call forwarding types 35
Call log 25
Call park 55, 56, 94
Call pop-up 28
Call transfer to the executive phone 98
Call waiting 56
Callback 39
Calling a second party 33
Central speed dial numbers 72
Conference 50
Connection options 13
Consultation 33
Consultation hold 33
Consultation on a key 69
Contact partner 106

D

Delayed call forwarding 62

Dialing
 with line keys 86
Display angle 101
Display icons 110
 connection status 23
 messages 20
 status bar 20
Do not disturb 77
DSS key
 answering calls 42
 call waiting 47
 dialing 44
DTMF suffix dialing 54

E

Entrance telephone 57
Error messages 105
Exclusive park 94
Executive-secretary functions 96

F

Fax messages 88
Fixed call forwarding 36
Forwarding
 for other stations 62
Forwarding types 38
Function keys 15

G

General information 10
Graphic display 20

H

Headset 42
Hold 87

I

Icons 110
 connection status 23
 messages 20
 status bar 20
Identification on another phone 79
Important information 4
Incoming calls 25
Intercom system 57

K

Key modules	14
Keypad	18

L

LED	
line keys	83
LED display	
direct station selection keys	17
function keys	17
Line identification	90
Line keys	82
allow/block party from joining call	91
answering calls	84
dialing	86
making calls to multiple parties	90
three-party conference	91
Line utilization	83
Location of the telephone	4

M

Making calls	31
Messenger call	100
Microphone	31
Multi-line telephone	11

O

One Number Service	
mailbox (MWI)	88
second call (call waiting)	48
Open listening	30
OpenStage Key Module 40	14
Outgoing calls	25

P

Parking a call	55
Phone settings	101
Pickup call	
(team)	43
Primary line	82
Privacy	76
Private line	83
Program/Service menu	26
Programmable sensor keys	17

R

Redialing a number	
last dialed number	33
saved number	33
Redial keys	32
Representative (secretary)	100

S

Saving appointments	72, 73
Second (executive) telephone	99
Second call	47
Second call (executive)	99
Secondary line	82
Security	76
Sensor key	
programming	67
Settings	101
Shared line	83
Shift key	49
Signal call	100
Single-line telephone	11
Speaker call	58
Speakerphone distance	4
Speakerphone mode	29, 30
Speed dialing	
central	72
dialing	45
saving	72
System-wide speaker call	58

T

Telephone maintenance	107
Three-party conference	91
Toggle/Connect	34
Tone dialing	54
Troubleshooting	106
Two-way intercom system	57










 
U

Unanswered calls	25
User interface	12
User support	10

V

Variable call forwarding (all calls)	37
Voicemail	88
Volume	
set	32

Display icons

Status bar	
	The ring tone is deactivated → page 102
	The "Do not disturb" function is activated → page 77
	The phone lock is activated → page 76
Messages	
	You received new voice messages → page 24
	You have received new callback requests → page 24
	Call forwarding is active → page 35
Connection status	
	The call is active
	The call has been disconnected
	You have placed the call on hold (e.g. consultation hold)
	Your call partner has placed the call on hold