

OpenStage SL4 professional HiPath Cordless IP

User Guide

A31003-S2000-U162-4-7619

Our Quality and Environmental Management Systems are implemented according to the requirements of the ISO9001 and ISO14001 standards and are certified by an external certification company.

Safety notes

Handset

Danger:

- Do not use the handset in potentially explosive atmospheres.
 - To avoid mutual interference, do not operate the handset in the vicinity of electronic equipment.
 - Do not use the handset in wet rooms! Devices are not splash-proof.
 - A transmitter signal is emitted by your handset. Please observe safety procedures for your area.
-

Caution:

The ringing tone, signal tones and handsfree talking (speakerphone mode) are played over the loudspeaker. Do not hold the telephone to your ear when it is ringing or if speakerphone mode is switched on. Otherwise you risk serious and permanent damage to your hearing.

Caution:

- Information for hearing aid users: Radio signals may interfere with hearing aids.
 - If you give your handset to someone else, please include the operating instructions with it.
-

Batteries

Danger:

- Only use the approved battery.
 - Avoid contact with fire and water.
 - Only use the approved power supply unit to operate the charging shell.
-

WEEE mark

Caution:

- All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
 - Proper disposal and separate collection of your old appliance will help prevent potential damage to the environment and human health. It is a prerequisite for reuse and recycling of used electrical and electronic equipment.
 - For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service, the shop where you purchased the product or your sales representative.
 - The statements quoted above are only fully valid for equipment which is installed and sold in the countries of the European Union and is covered by the European Directive 2002/96/EC. Countries outside the European Union may impose other regulations regarding the disposal of electrical and electronic equipment.
-




Operating instructions

These operating instructions describe your handset and its functions on your communications system.

All functions that can be performed via your handset are described here. If some of the required functions are not available on your handset, it may be due to one of the following:

- The function is not configured for you or your handset - please contact your system administrator.
- Your communications platform does not feature this function.

Overview of handset

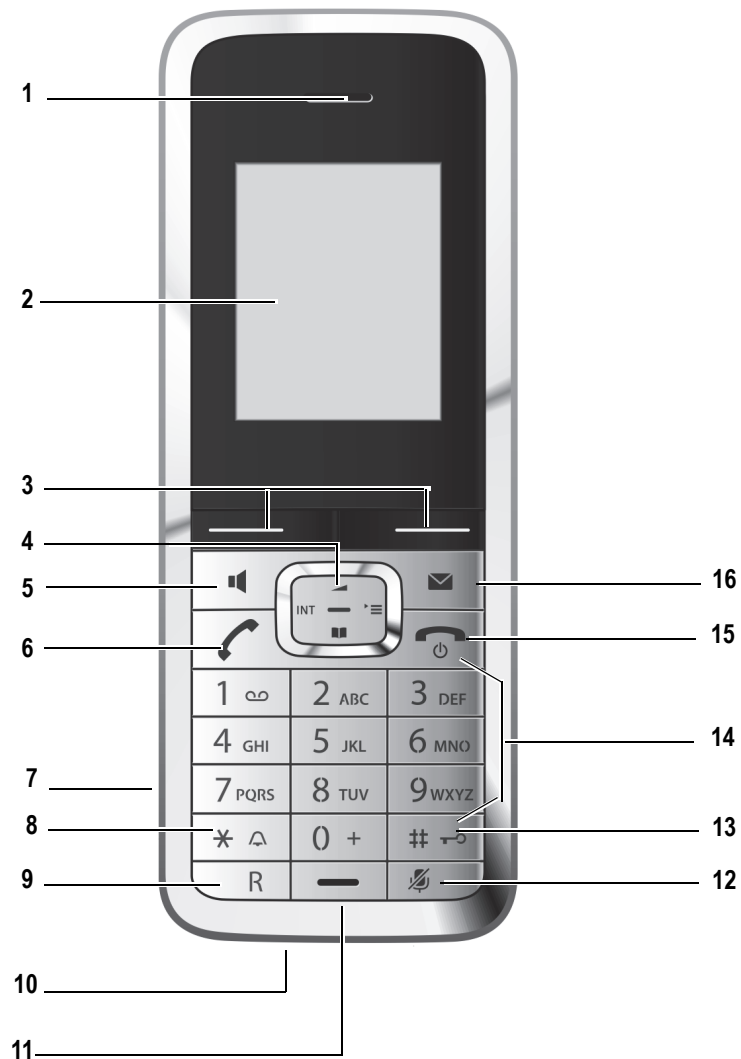

- | | |
|----------------------|---------------------------|
| 1 Earpiece | 10 Mini USB connection |
| 2 Display | 11 Microphone |
| 3 Display keys | 12 Mute key |
| 4 Control key | 13 Hash key |
| 5 Speakerphone key | 14 Number keys |
| 6 Talk key | 15 On-hook and on/off key |
| 7 Headset connection | 16 Message key |
| 8 Star key | |
| 9 R key | |

How to use the keys: → Page 9

Contents

Safety notes	3
Handset	3
Batteries	3
WEEE mark	3
Operating instructions	4
Overview of handset	5
Description of controls	9
Function keys	9
Message key	9
R key	9
Control key	10
Display keys	10
Menu icons in the main menu	11
Putting the handset into service	13
Removing the protective cover	13
Installing the charger	13
Inserting/changing the battery	13
Charging and using the battery	15
Fitting the attachment clip	16
Connecting the USB data cable	16
Connecting the headset	16
Setting the handset display language	17
Setting the handset	18
Setting the speaker volume	18
During a call	18
In idle status	19
Setting a handsfree profile	19
Setting advisory tones	20
Activating/deactivating the vibration alert	20
Setting the ringer	21
Setting ringing tones and pictures with resource directory	22
Viewing screensavers and caller pictures / Playing sounds	22
Renaming and deleting screensavers/caller pictures/sounds	23
Checking the available memory	23
Activating or deactivating the ringer	24
Activating or deactivating the alerting tone	24
Activating/deactivating automatic call answering	24
Setting the date and time	25
Setting the display	26
Setting the conversion list for vCard transfer	28
Setting the menu view	28
Resetting the defaults	29

Conducting calls – the basic functions 31

Activating/deactivating the handset	31
Dialling	32
Manual redial	33
Consultation	33
Answering or rejecting a call	34
Accepting a call	34
Rejecting a call	35
Ending a call	35
Activating or deactivating the keypad lock	35
After leaving the radio network	35

Conducting calls – enhanced functions 36

Speakerphone mode	36
Conducting calls with the headset	37
Corded headset	37
Cordless headset	37
Switching to mute	39
Number redial	39
Automatic redial	40
Deleting a redial entry or list	40
Adding a telephone number to the handset's local phonebook	41
Call pickup	41
Picking up calls	41
Callback	42
Activating callback	42
Accepting a callback	42
Deleting callbacks	42
Call forward	43
Setting up call forwarding	44
Deactivating an individual call forward	44
Deactivating all call forwards	45
The handset's local phonebook	45
Saving an entry	46
Finding and dialling an entry	47
Dialling an entry with the speed dialling digit	47
Viewing an entry	47
Changing an entry	47
Deleting an entry or phonebook	48
Displaying available memory	48
Phonebook of communications platform	49
Finding and dialling an entry	49
LDAP phonebook	50
Finding and dialling an entry	50
VoiceMail	51
Using dual-tone multifrequency signalling	52

Conducting calls – with multiple users 53





 
 

 
Transferring a call	53
Placing a call on hold	53
Toggling (switching between calls)	54
Conducting a conference	54
Second call (call waiting)	55

Caller lists	57
Working with list entries	57
Deleting all lists	58
 Additional functions	 59
Handset alarm clock function	59
Handset appointment reminder function	60
Selecting a base	62
Setting the base	63
Speed dialling	64
Speed access to functions	65
Call control from the PC	65
Initiating calls from the PC	65
Data communication with the PC	66
Bluetooth interface	67
Activating/deactivating Bluetooth mode	67
Registering Bluetooth devices	67
Editing the list of known (trusted) devices	68
Phonebook transfer	69
 Telephone blocking	 71
Handset telephone lock	71
 Appendix	 72
Troubleshooting	72
Cleaning the handset	73
Documentation	74
General specifications	74
Handset	74
DECT	74
Bluetooth	74
Battery	75
Handset operating times/charging times	75
Charging shells	75
Accessories	75
EU guidelines	75
Writing and editing text	76
Setting upper/lower case or digits	76
Writing names	76
Accessing additional functions via the PC interface	77
Declaration of conformity	77
 Index	 78

Description of controls

Function keys

The following function keys are available:

Key	Name	Usage
	On-hook and on/off key	<ul style="list-style-type: none"> • End a call • Cancel functions • Go back to the next menu level up • Activate or deactivate the handset
	Talk key	<ul style="list-style-type: none"> • Answer a call • Dial a phone number • Open the redial list • Access telephone system functions
	Speakerphonekey	<ul style="list-style-type: none"> • Answer a call • Dial a phone number • Toggle between handset and speakerphone mode • Access telephone system functions
	Message list	Display call lists / voicemail
	Star key	Activate/deactivate the ringer
	Hash key	Activate/deactivate keypad lock
	Mute key	Mute the microphone
	R key	R key function → Page 9

Message key

The message key signals unread entries in the caller lists for voicemails (if set up) and missed calls. If there is even one unread entry in at least one of these lists, the message key LED will flash.

The overview of caller lists → Page 57 is displayed by pressing the message key.





R key

Pressing the R key briefly allows different functions to be performed depending on the current operating mode, for example:

- When dialling: insert a pause (for example, between the prefix and the phone number, or when checking a mailbox)
- When conducting a call: initiate a consultation
- When conducting a consultation call: alternate between two callers


Control key

The control key is assigned different functions depending on the operating situation:






 
Situation	 Press top of key	 Press bottom of key	 Press left side of key	 Press right side of key
In idle status	Call volume	Open the handset's local phonebook	Communication system menu	Open the handset's main menu
During a call	Call volume	Open the handset's local phonebook	-	Select "Loudspeaker Vol", "GAP DTMF", "Base Settings"
In the main menu	Select a menu icon	Select a menu icon	Select a menu icon	Select a menu icon
In lists and menus	Next-higher item in the list	Next-lower item in the list	Next menu level up, cancel	Select an entry (OK)
In the input field	Move the cursor up one line	Move the cursor down one line	Move the cursor to the left	Move the cursor to the right
Change values	-	-	Reduce value	Increase value

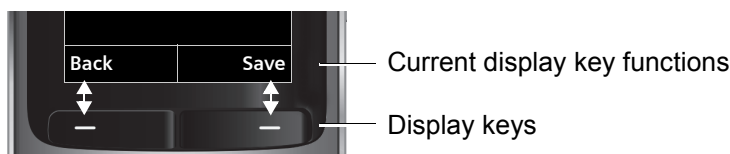Display keys

The handset has two display keys, each with one or two functions. When the key is allocated two functions, press the right or left side of the key to select the corresponding function. The display key assignment depends on the operating status.



Some important display keys include:

Icon	Usage
	Open a context-specific menu
	Confirm your selection
	Delete character by character/word by word from right to left
	Go back one menu level/cancel operation
	Save input
	Open redial list


Menu icons in the main menu
















The handset's main menu can be opened by right-clicking the control key.

The menu icons are selected by pressing the left/right and top/bottom of the control key.

Alternatively, you can also press one of the numerical keys, e. g. **4_{GHI}** for "Alarm Clock" or **9_{WXYZ}** for "Settings".


Menu options that are only available in expert mode are marked with the  icon. Expert mode can be set by switching the menu view from simplified to complete. To set, see → Page 28.

Icon	Name	Usage
	Resource Directory	Manage images and tones: <ul style="list-style-type: none"> • Screensavers • Caller Pictures • Sounds • Capacity
	Bluetooth	Configure Bluetooth interface: <ul style="list-style-type: none"> • Activation • Search for Headset • Search Data Device • Known Devices • Own Device
	Additional Features	see Resource Directory
	Alarm Clock	Configure alarm call function.
	Call Lists	Open call list if calls are available.
	Voice Mail	Call mailbox if voicemail calls are available on the network answering machine.
	Organizer	Manage appointments: <ul style="list-style-type: none"> • Calendar • Missed Alarms
	Directory	Manage the handset's local phonebook

Icon	Name	Usage
	Settings	<p>Configure handset:</p> <ul style="list-style-type: none"> • Date/Time • Audio Settings <ul style="list-style-type: none"> – Handset Volume – Handsfree Profiles –  Advisory Tones – Silent Alert – Ringtones(Handset) • Display + Keypad <ul style="list-style-type: none"> – Screensaver – Large Font – Colour Schemes –  Display Backlight – Keypad Illumination • Language • Registration <ul style="list-style-type: none"> – Register Handset – De-reg. Handset – Select Base •  Telephony <ul style="list-style-type: none"> – Auto Answer – Area Codes •  System <ul style="list-style-type: none"> – Handset PIN – Handset Reset – Base Reset • Menu View <ul style="list-style-type: none"> – Simplified – Complete

Putting the handset into service

 Removing the protective cover



Remove the protective cover from the display before putting the handset into service.

Installing the charger


The charger is designed for operation in closed, dry rooms within a temperature range of +5 °C to +45 °C.

Install the charger on a level, non-slip surface.

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out.


Please note:

- Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices.
- Protect your OpenStage SL4 professional from moisture, dust, corrosive liquids and fumes.

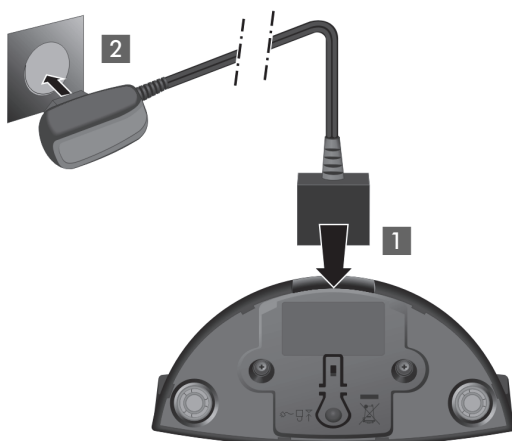

- Connect the flat plug from the power adapter **1**.
- Plug the power adapter into the plug socket **2**.

To disconnect the plug from the charger, press the release button **3** and disconnect the plug **4**.

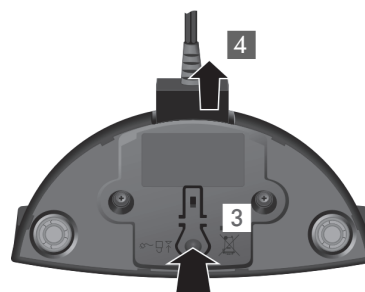

Inserting/changing the battery


The handset is supplied with an approved battery. The battery is not charged when supplied. It is first charged in the handset.

**Caution:**

- Please observe the safety notes → on the back cover.
- Only use approved batteries → Page 75!
- Open the battery compartment in a dust-free environment only.
- Your phonebook entries and all settings remain stored even if you remove the battery. The date and time settings will be reset.
- Only remove the battery if it is defective. The battery's life diminishes each time it is removed.

1. If installed: Remove the attachment clip


Insert a screwdriver between the attachment clip and the battery cover (1) and force the attachment clip outward (2) until it dislodges.

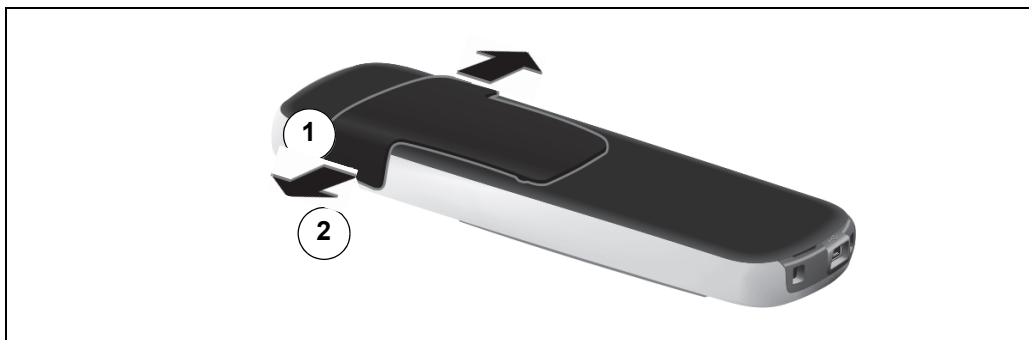


Likewise dislodge the clip on the opposite side and then remove it.

2. Open the battery compartment

Reach into the cavity on the housing and lift up the battery cover.

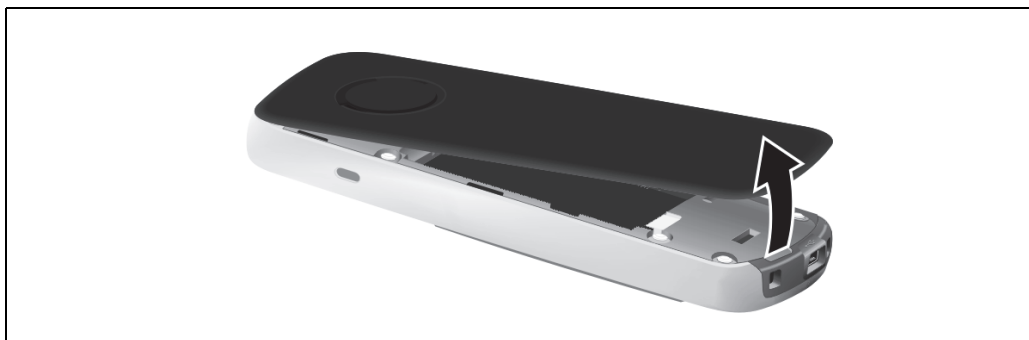
**3. Insert/change the battery**

Insert the battery ensuring that the contacts meet.

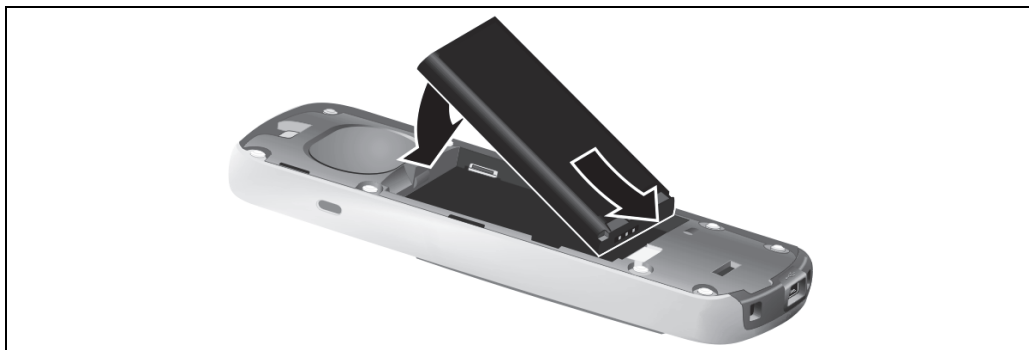

4. Close the battery compartment

First, align the protrusions on the side of the battery cover with the notches on the inside of the casing. Then press the cover until it clicks into place.

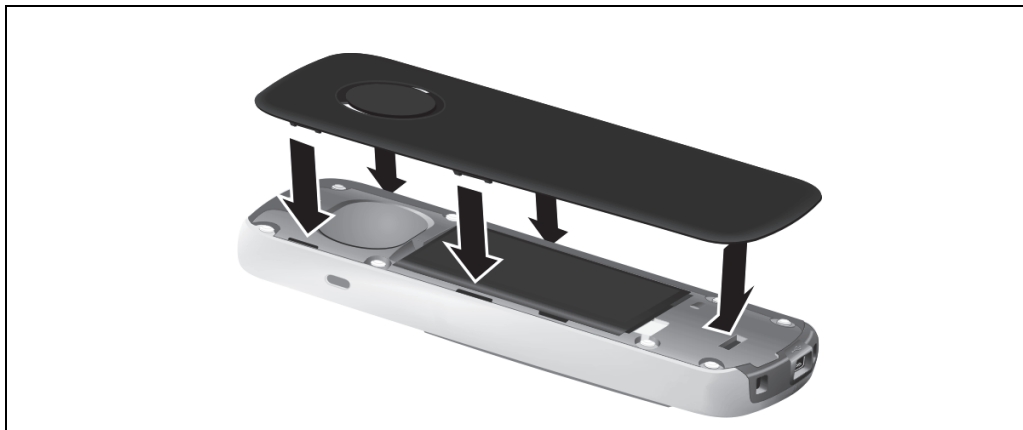

Charging and using the battery

To charge the battery, insert the handset into the charging shell with the keypad facing forwards.



Important:

Only place the handset in the designated charger. (for order numbers see → Page 75).

The charging status is indicated by the charge status display:

	lighting white: charged over 66%
	lighting white: charged between 34 % and 66 %
	lighting white: charged between 11% and 33%
	lighting red: charged below 11%
	flashing red: battery almost empty (less than 10 minutes talktime)
	lighting white: battery being charged




Note:

- Initial charging: Charge the battery for at least 3 hours without a break, regardless of the charging status icon. Without replacing it in the charging shell, use the handset until the "battery low" beep is heard. This action aligns the charge status display with the operating times of the battery.
- To attain full operating and charging times: After charging, remove the handset from the charger and only replace it when the battery is fully discharged.
- For future charging: you can replace your handset in the charging shell each time it has been used. Charging is electronically controlled which ensures that the battery is charged optimally.

Fitting the attachment clip

Press the attachment clip onto the back of the handset until the tabs on the sides engage in the recesses on the phone.

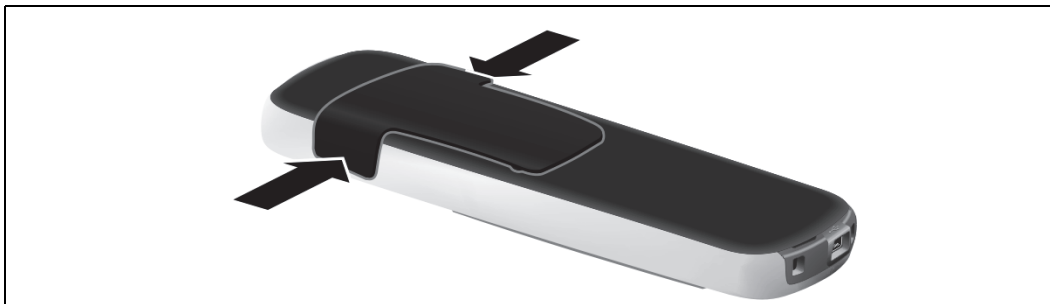


Connecting the USB data cable

You can connect a standard USB data cable with a mini-B connector to the underside of your handset in order to synchronise your handset with a PC → Page 66.

Connect the USB data cable to the USB jack (1).



Connecting the headset

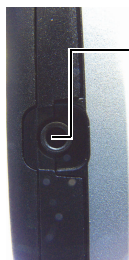

N You can connect a headset with a 2.5 mm jack plug to the left side of your handset.

The headset volume corresponds to the setting for the earpiece volume → Page 18.

Setting the handset display language

If your preferred language for handset display texts is not set as the default, you can set this yourself. The language of communication system display texts can only be set by the administrator.

Opening the main menu

Open the handset's main menu.

Opening the first submenu

Select the menu icon and confirm.

Opening the second submenu

Select the menu item and confirm.


 
 
Selecting a language


Select and confirm the language you require.

Press the On-hook key to end the operation.



Caution:

- If you inadvertently set a display language that you do not understand, press "  
" and then select the correct language.
- If you want to reset the default display language: → Page 29.

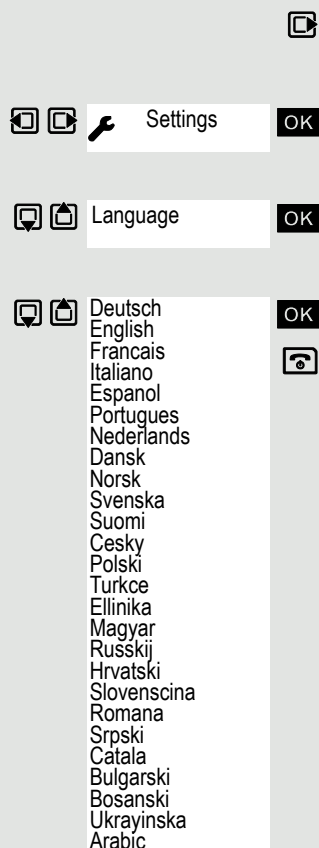

Setting the handset

You can change the standard settings of the handset if you are not happy with them.

Setting the speaker volume

During a call

You can adjust the speaker volume during a call via the earpiece or speakerphone using a menu function. The relevant volumes are adjustable depending on whether you are conducting the call via the earpiece or speakerphone.



You are conducting a call.



Press the control key to open the **Handset Volume** menu.



Adjust the earpiece or speakerphone volume.

Save

Save the settings.

or

The setting will be saved automatically after approx. 3 seconds.

In idle status

You can change the speaker volume via the menu in idle mode.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item and confirm.



Select the required menu item.

Define the setting.

Press the display key.

Setting a handsfree profile

- Profile 1
The optimum setting for most connections and therefore set by default.
- Profile 2
Optimum volume in handsfree mode. However, this means that the participants cannot speak at the same time as the person speaking is given preferential transmission (making two-way conversations difficult).
- Profile 3
Optimises two-way conversations, both callers can hear each other, even if they talk at the same time.
- Profile 4
Optimised for special connections. If the default setting (profile 1) does not provide optimum sound, please give this a try.

In idle status

Open the handset's main menu.


Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Select handsfree profile (1 to 4).

Press the display key to save the setting.

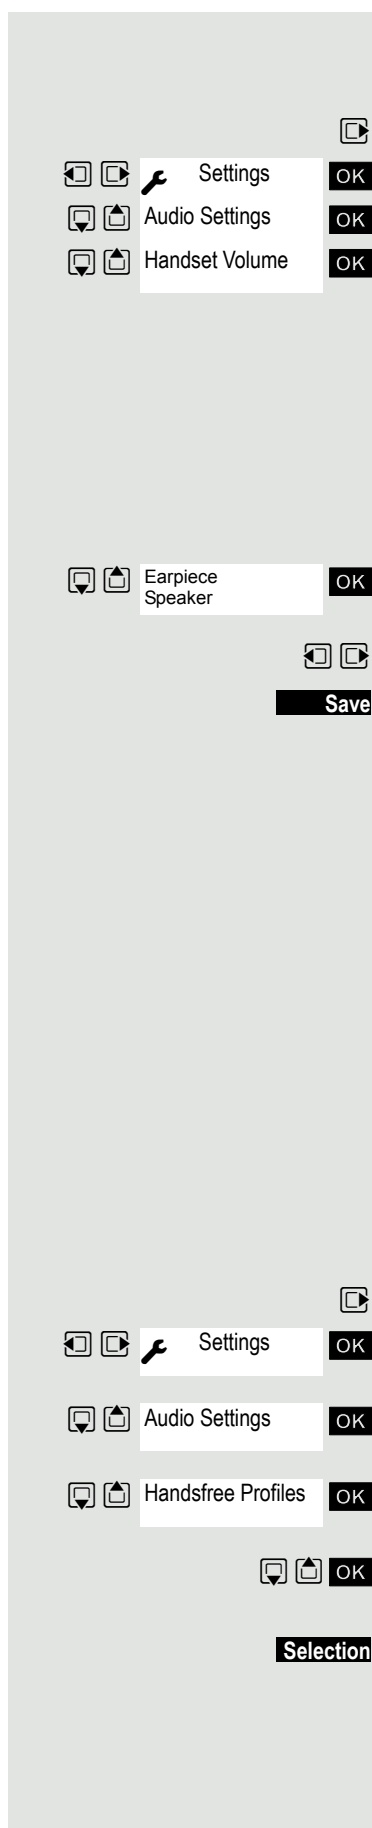

Setting advisory tones




Caution:

Can only be set if this menu item is visible. To set, see → Page 28.

The advisory tones have the following meaning:

Advisory	Explanation
Key Tones	Every key press is confirmed.
Confirmation	<ul style="list-style-type: none"> Confirmation tone when saving inputs/settings and when placing the handset in the charging shell Error beep (decreasing tone sequence) to signal incorrect inputs End-of-menu beep at the menu end
Battery	The batteries must be charged.

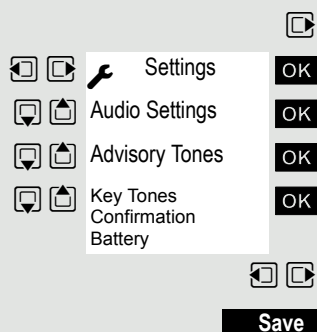

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item and confirm.


Select the required menu item.

Activate or deactivate.

Save the settings.

Activating/deactivating the vibration alert

Incoming calls and other messages are indicated by a silent alert.

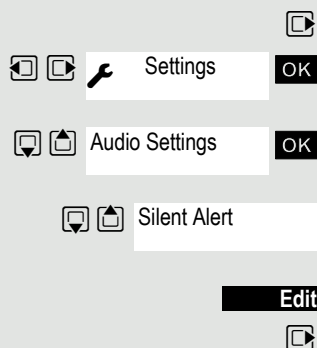

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Press the display key.

Activate or deactivate.

Setting the ringer

Tones and melodies are saved on your handset. If you select the menu items **Volume** and **Melodies**, the ringtone sounds at the current setting.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Select the required menu item and confirm.




Caution:

The "Anon. Calls Silent" function is not available on your communication system.

Setting the volume

Select the menu item and confirm.

You can choose between three ringer volumes, as well as a crescendo ring (volume increases gradually).

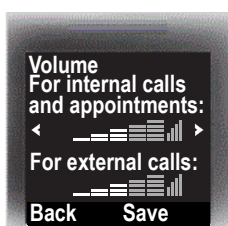

Select the required menu item.

Define the setting.

Press the display key.

Setting melodies


You can set ringing tones differently on your handset for different calls to help you differentiate between calls and appointments:

Select the menu item and confirm.



Select the required menu item.

Define the setting.

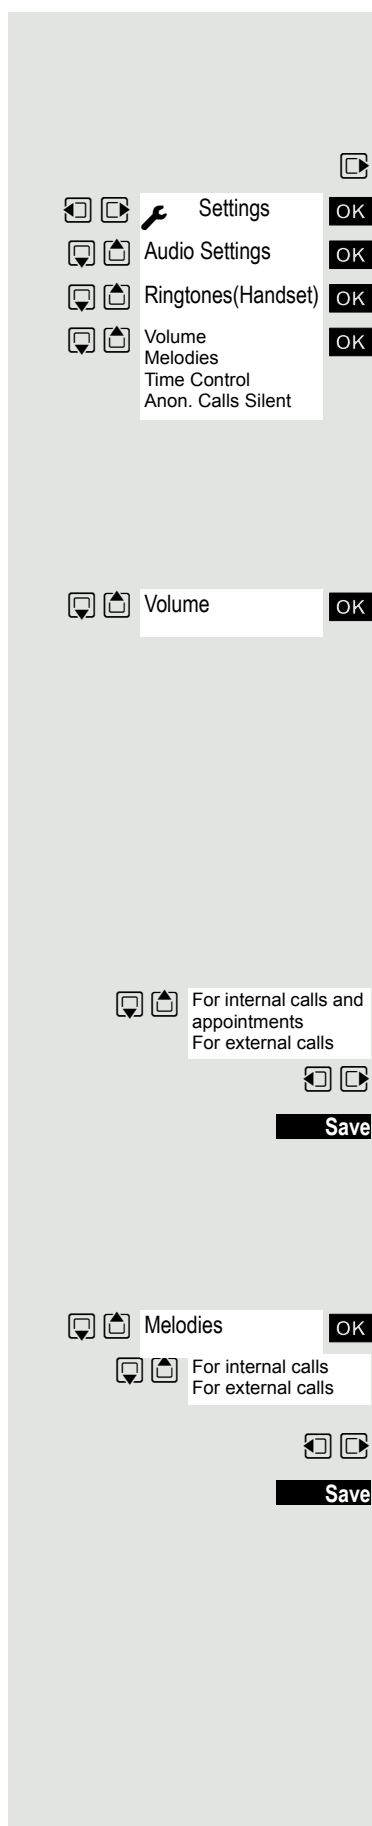Press the display key.



  Time Control 

  Suspend ring. from
Suspend ring. until


Setting time control for external calls

Specify a time period when you do not want the telephone to ring, for example during the night.

Select the menu item and confirm.

Specify **On** or **Off**.

If active:

Select the required menu item.

Enter the time.

Save the settings.

Setting ringing tones and pictures with resource directory

The resource directory on the handset manages sounds that you can use as ringing tones and pictures that you can use as caller pictures or screensavers. Calling Line Identification Presentation (CLIP). The resource directory can manage the following media types:

Type	Format
Sounds: Ringtones Monophonic Polyphonic Imported sounds	Internal Internal Internal WMA, MP3, WAV
Pictures: Caller picture Screensaver	BMP, JPG, GIF 128 x 86 pixels 128 x 160 pixels

Your handset comes with a number of mono- and polyphonic sounds and pictures pre-installed. You can listen to the available sounds and display the pictures.

You can download pictures and sounds from a PC → Page 66. If there is not enough memory available, you must first delete one or more pictures or sounds.



 





Viewing screensavers and caller pictures / Playing sounds


Open the handset's main menu.

Select the menu icon and confirm.

Select the required menu item and confirm.

Select the entry.

     Resource
Directory 
  Screensavers 
  Caller Pictures
 Sounds
 Memory

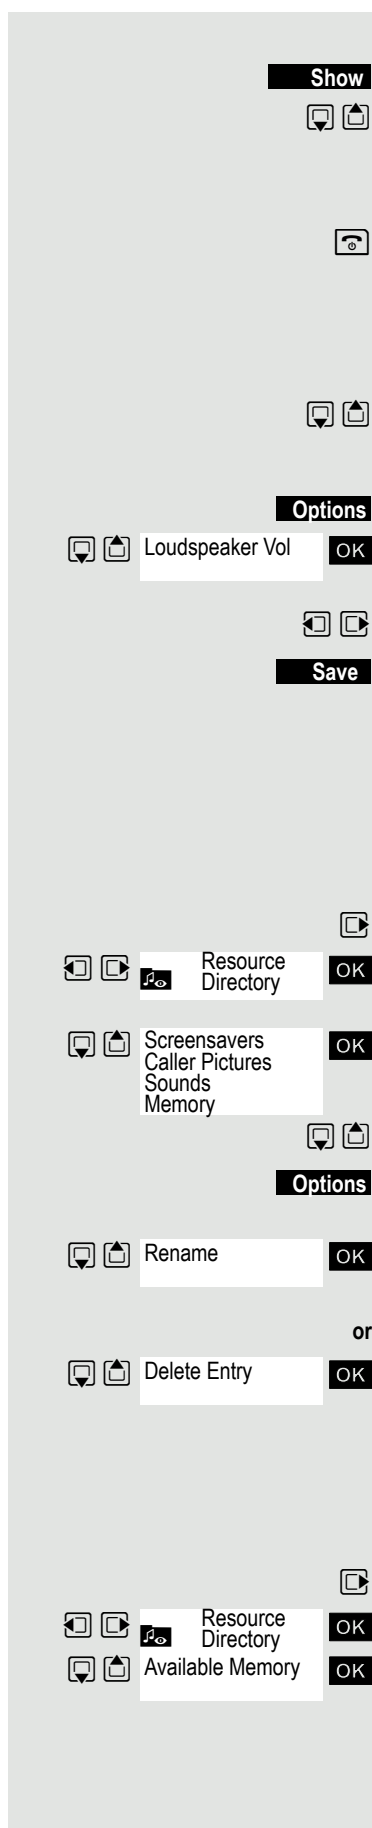Screensavers/caller pictures

Press the display key.

Toggle between the pictures.

If you have saved a picture in an invalid file format, you will see an error message after selecting the entry.

Press to exit the menu level.

Sounds

The selected sound is played immediately.

Toggle between the sounds.

You can set the volume during playback.

Press the display key.

Select the menu item and confirm.

Adjust the volume.

Save setting.

Renaming and deleting screensavers/caller pictures/sounds

You selected an entry.

Open the handset's main menu.

Select the menu icon and confirm.

Select the required menu item and confirm.

Select the entry.

Press the display key. If a picture/sound is blocked (🔒), the options are not available.

Select the menu item and confirm. The name of the entry can be modified. Length: up to 15 characters. Then confirm your entry.

Select the menu item and confirm. The entry is deleted.

Checking the available memory

You can show how much memory is left.


Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Activating or deactivating the ringer

Deactivating the ringer

Hold down the key until a confirmation tone is emitted. The  icon appears on the display.

Activating the ringer

Hold down the key until a confirmation tone is emitted.

Deactivating the ringer for the current call

Press the display key.

Activating or deactivating the alerting tone

You can activate an alerting tone instead of the ringing tone. A short beep sounds for a call instead of the ringing tone.

If the handset is in a call pickup group → Page 41, a pickup call is also signalled by the warning tone.

Activating the alerting tone

Hold down the key until a confirmation tone is emitted.

Press the display key within three seconds.

The alerting tone is activated. The volume of the alerting tone is coupled with the volume of the external ringer.

Deactivating the alerting tone

Hold down the key until a confirmation tone is emitted.

Activating/deactivating automatic call answering



Caution:

Can only be set if this menu item is visible. To set, see → Page 28.

This function allows you to accept calls by removing the handset from the charging shell.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item.


Press the display key. The activated function is ticked (☑) and can be deactivated by selecting it once more.



Setting the date and time

The date and time setting can be used to ensure that the date and time are assigned correctly to incoming calls and in order to use the alarm.

The handset date and time are automatically set when you set up a call to another station. If your communication system does not support this function, you can set the date and time manually.

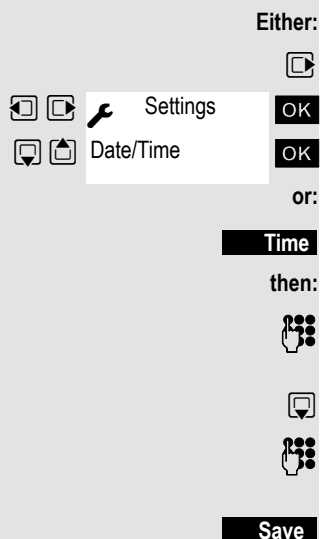

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

If the date and time have not yet been set:

Press the display key.

Enter the date, for example 22.09.2007 = 22092007.

Move the cursor down one line.

Enter the time, for example 19:05 = 1905.

Save the settings.



Caution:

If your communication system does not automatically set the date and time, you must check the setting from time to time and if necessary, correct it.

Setting the display

A number of options are available for setting the display. You can set the screen-saver (screen picture), the colour scheme, the font size and the display lighting.

Screensaver

A picture from the resource directory → Page 22 or the time can be displayed as a screensaver when the handset is idle. This will replace the idle status display. The calendar, date, time and name are covered as a result.

The screensaver is not displayed in certain situations, for example during a call or if the handset is signed off.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item.

Press the display key.

Activation:

Activate or deactivate.

Selection:

Move the cursor down one line.

Select the required entry. **Digital Clock** and **Analog Clock** show the current time as a screensaver in large digits on the display.

The selected screensaver is displayed.

Save the settings.

Setting large font

You can increase the font size of print and symbols in call lists and the directory to improve readability.

Open the handset's main menu.


Select the menu icon and confirm.


Select the menu item and confirm.

Select the menu item.

Press the display key.

(☑ = on).

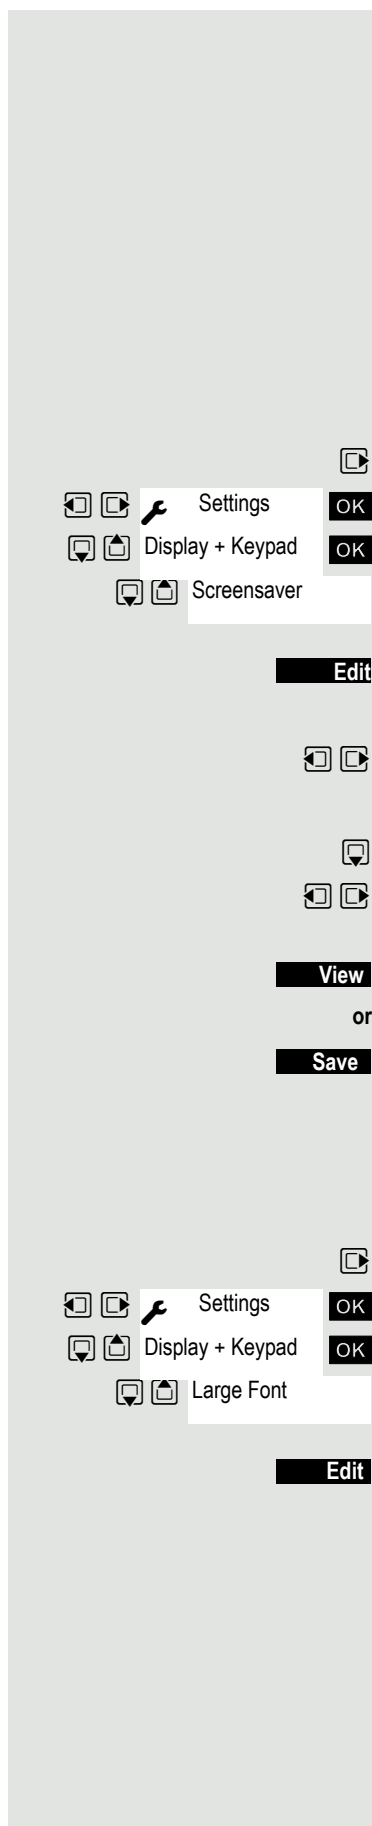

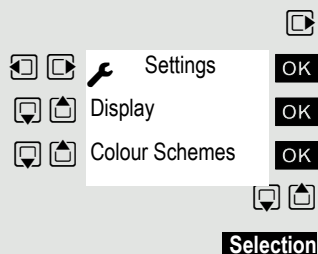

Colour scheme

Five colour schemes are saved on your handset. By selecting a colour scheme you define the colours to be used for the font, menu items and background.

If you change to a different colour scheme during a setting, it is immediately pre-viewed to show how it will appear later for all menus.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Select the entry.

Press the display key.

Lighting



Caution:

Can only be set if this menu item is visible. To set, see → Page 28.

You can set whether the display should light up when the handset is in or out of the base/charging shell. If it is activated, the display stays dimmed. When the display backlight is disabled, the display lights up again the next time any key is pressed. The key has no other function in this case.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

In Charger:


Activate or deactivate.

Out of Charger:

Move the cursor down one line.

Activate or deactivate.

Save setting.

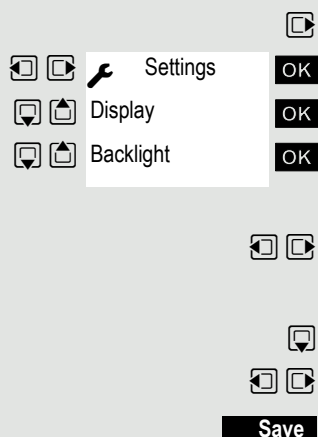

Setting keypad illumination

The brightness of the keypad illumination can be set to one of five levels.

Open the handset's main menu.


Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Select 1 (darkest) to 5 (brightest).

Save setting.

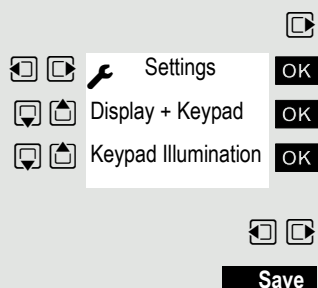

Setting the conversion list for vCard transfer



Caution:

Can only be set if this menu item is visible. To set, see → Page 28.

See also **Gigaset QuickSync** → Page 66.

Phone numbers are usually specified as follows in e-mail programs, such as Microsoft Outlook for example: +49 (05251) 820776. The handset is unable to use this format, however, to dial the phone number. If the phone number above is a local fixed network number, it is converted to 0820776, for instance, when dialled. The conversion pairs are defined in the conversion table and can be modified if they deviate from the default values.

Consult your system administrator about the conversion rules that apply to your handset.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.


Select the menu item and confirm. The conversion table is displayed.

Change entry

Press the up/down control key to navigate to another input field; Press the left/right control key to move the cursor within an input field.

Save setting.

Press the On-hook key to end the operation.

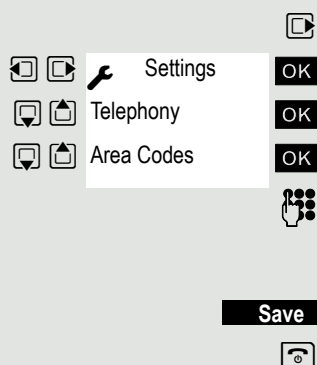

Setting the menu view

You can decide whether only a selection of the most important menu items or all menu items are to be shown in the menus.


Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select and set **Simplified** or **Complete**.

Press the On-hook key to end the operation.

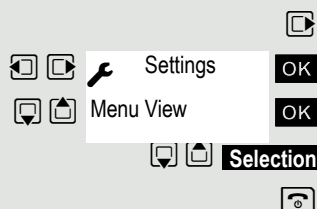

Resetting the defaults



Caution:

Can only be set if this menu item is visible. To set, see → Page 28.

This function allows you to reset your mobile phone to the defaults, for example, if you want to pass it on to someone else or reset it.

The handset features are handled as follows:

Feature	Action
Sound settings	are reset
Select and confirm the language	set to English
System registration	is retained
Phonebook	is retained
Redial list	is retained
Date and time	is retained
Entries in the calendar	are retained
Content of resource directory	is retained

Resetting

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.


Select the menu item and confirm. A security check question appears.

Confirm the security check question. The handset is returned to the default.



Caution:

For information about also deleting the handset's local phonebook see: → Page 48.

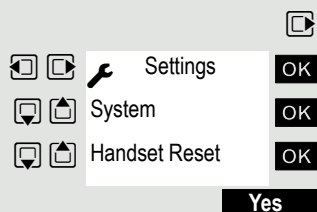

Default settings

Setting	Explanation/notes	Levels	Default state
Tones and signals	Ringer volume	5	5
	Ringer melody, external	22	01
	Ringer melody, internal	22	03
	Alerting tone	-	off
	Earpiece volume	5	3
	Volume in speakerphone mode	5	3
	Timed reminder		
	Melody	22	1
	Volume	5	Crescendo
	Key tones, audible each time a key is pressed	-	on
	Warning tone, audible approximately five minutes before the battery expires	-	on
	Confirmation tone, indicates whether actions were successful or unsuccessful	-	on
Auto. answer	Call is automatically accepted by removing the handset from the charging shell	-	on
Select base	Select the base	4	retained
Lighting	Display lighting	-	in charging shell: on/out of charging shell: off
Screen picture	Display in idle status	-	on, analogue clock
Character set	Available character set	-	Standard
Select and confirm the language	Select different languages	26	English
Bluetooth	Bluetooth activation	-	off

Conducting calls – the basic functions

You can use your handset to make both internal and external calls.

Internal calls are calls that

- you make within the range of a communication system, for example, within your company,
- you make between networked communication systems, for example, to different company locations.

External calls are calls that you conduct with users of the public telephone network.

Activating/deactivating the handset



Press the On-hook key until the activation or deactivation is confirmed by a signal.

PIN

If the default PIN has not been changed (0000), the handset is ready for operation as soon as it is switched on. If a PIN was set, it must be entered before the handset can be operated.

Enter the PIN.

Confirm your entry. The handset is ready to use.

Please enter
PIN:



OK

Displaying the connection quality

The strength of the incoming signal is displayed by the "receive field strength" icon in idle status:

	Flashing, no reception
	Low receive field strength
	50% receive field strength
	75% receive field strength
	100% receive field strength

The radio range is different indoors and outdoors → Page 74. Please consult your system administrator in the event of range problems.

Charging the battery

You may only use the charging shell provided for the handset.

The handset charges when sitting in the charging shell, even when deactivated. If the handset is active, the charging status display flashes on the display.

If the handset deactivates because the battery is flat, it automatically reactivates and is ready for operation as soon as you place it in the charging shell. The charging operation starts. If a PIN was set, it must be entered first to allow charging to start.

Select and confirm the language

If your preferred language for the display texts is not set, you can set this yourself → Page 17.

Dialling

Dialling preparation

Enter the required phone number and correct individual characters as necessary using the "Delete" Display key.

Insert a dial pause. A "P" appears between the digits entered. You may have to insert a pause, for example, between the prefix and the phone number or when checking a mailbox.



Caution:

The dialling preparation function is also available with number redial and when dialling from a phonebook.

Dialling


Press and hold the Talk or Speakerphone key. The user will be called.



The station answers. You are conducting the call.

The user is busy. You are routed to the other party's mailbox (if configured).

Press the On-hook key to end the operation.

 and possibly 

 Press for 2 seconds

 or 

Either:



or:

Call rejected



Manual redial

The last 20 phone numbers dialled are saved in the redial list. A phone number that was dialled several times is only saved once.

When the handset is in idle status: Press the Talk or Speakerphone key briefly. The redial list is displayed.

Select the required telephone number.

If you want to see details of the selected phone number: Press the display key.

Press the Talk or Speakerphone key briefly. The connection is set up.

Open the redial menu. The menu contains the following functions → Page 39:

- Copy to Directory
- Automatic Redial
- Display Number
- Delete Entry
- Delete all

Select the menu item and confirm.

Change or complete the phone number, for example, with DDIA.

Press the Talk or Speakerphone key briefly. The connection is set up.

Consultation

You interrupt your call to consult with a user (including external users) and then resume the original call.

You are conducting a call.

Activating and conducting an enquiry/consultation call

Activate enquiry. The current call is placed "on hold", so that the first user waits.

Enter the phone number for the consultation call.


The number is dialled. The station answers. The consultation starts.

The second user is busy or does not answer

Cancel the enquiry. You are reconnected with the first party.

Call another user

You are reconnected with the first party.

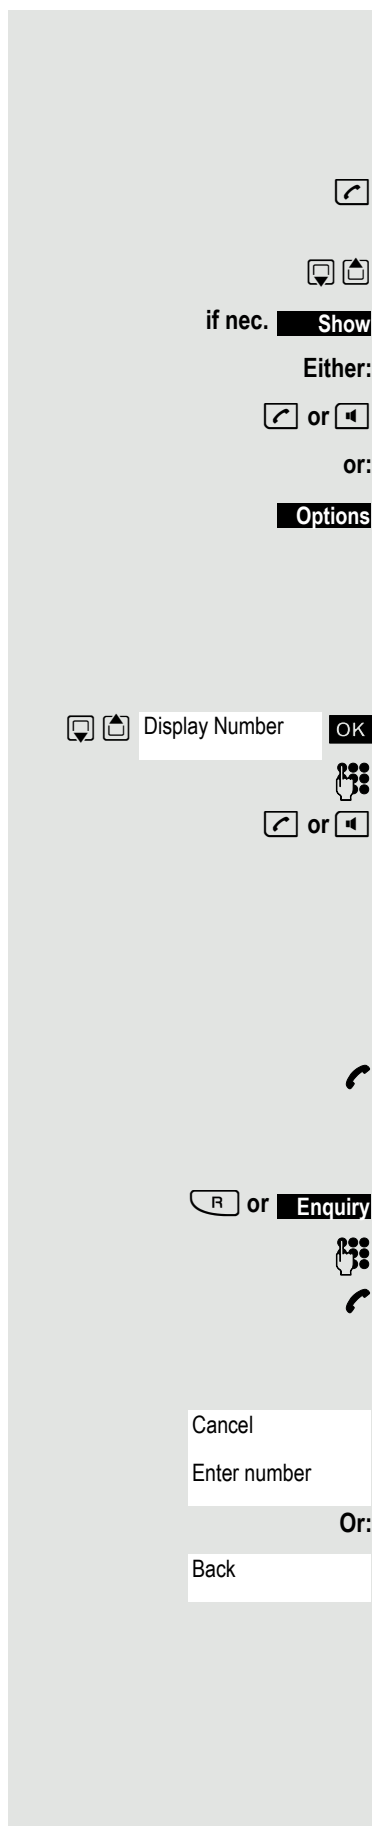

Either:

Back

Enter number

Or:

Back

The consultation is ended and you return to the waiting call

The second user hangs up.

Call another user

You are reconnected with the first party.

You will be connected to the first party again. The second partner hears the busy tone and hangs up; an OpenStage handset hangs up automatically.

However, you can also

- toggle between the partners → Page 54,
- set up a conference → Page 54 or
- transfer the waiting partner to the second partner → Page 53.

Answering or rejecting a call

Accepting a call

 

Your handset rings → Page 24. The caller information appears on the display. The phone number of the caller and possibly also the name can be displayed.

If available, either the entry in the handset's local phonebook → Page 45, the entry in the system phonebook → Page 49 or the name supplied will be shown as the name.

You have the following options for answering a call:

either



Silence

 or 

or



or

 or 

Press the display key. Your phone no longer rings. The caller still hears the on-hook signal.

Press the Talk key or Speakerphone key.

The handset is in the charging shell:

Remove the handset from the charging shell (only works if "Auto Answer" is active, → Page 24).

The handset is not in the charging shell.

Press the Talk key or Speakerphone key.

When you have accepted the call you can:

- Transfer the call (initiate callback function) → Page 53,
- Switch off the microphone to consult with someone else in the room → Page 39,
- Place the call on hold (callback function) and call a second partner → Page 33 in order to forward → Page 53 or toggle the call → Page 54 or to set up a conference → Page 54.

 or 

Rejecting a call

If you do not wish to be disturbed, you can reject the call.

Confirm the message displayed with one of the two display keys. The call is rejected and the caller hears the busy tone. The caller is then connected to the mailbox (if configured).

Rejected calls are logged in the missed calls caller list → Page 57.

Ending a call

Press the On-hook key or place the handset in the charging shell.

The call charges are displayed, depending on the communication system.

Activating or deactivating the keypad lock

This feature protects against accidentally pressing buttons when the handset is in a pocket, for example. The keypad lock turns off automatically when a call comes in and turns back on when the call has ended.

Press the hash key until the activation or deactivation is confirmed by a signal.

A key icon on the display indicates that the keypad lock is active.

After leaving the radio network

The message "No base" flashes on the display. The handset repeatedly attempts to synchronise with a base. The intervals between synchronisation attempts increase on account of the integrated power saving function.

To remain accessible if you find yourself outside the radio network you can set up an appropriate call forward in advance. Calls are then forwarded to another phone number if you cannot be reached → Page 43.

You can switch off your handset to save the battery.

Conducting calls – enhanced functions

Speakerphone mode

Features

Speakerphone mode offers you the following advantages:

- Other persons can listen to and participate in the call.
- Your hands are free.
- When dialling, you can hear the ring tone, for example, without having to lift the handset to your ear.

Speakerphone mode can be used effectively up to a background noise level of 50 dB (A).

Activating speakerphone mode

Speakerphone mode can be activated during a call, when dialling or when answering a call:



Press the speakerphone key. Inform the other party when you want to activate the speakerphone to let others listen in.



Caution:

Make sure you switch back to handset mode before you return the telephone directly to your ear. In this way you can avoid causing damage to your hearing.

Switching between speakerphone and handset mode



Press the speakerphone key. The handset switches from speakerphone to handset mode or vice versa.



Caution:

If you wish to replace the handset in the charging shell during a call, for example, because the battery is flat, hold down the Speakerphone key to prevent the call from being cleared down.

Setting the speakerphone volume

The volume can be set during a call → Page 18.

Conducting calls with the headset

The handset can be used with a corded and cordless headset.

Corded headset

You can connect a corded headset via the jack on the side of the handset. The headset must have a (2.5 mm) jack plug.

The earpiece and microphone functions are activated on the headset once it is connected.

Cordless headset

You can use a cordless Bluetooth headset with your handset. This means your hands are free while making calls and there are no annoying cables, for example, when you are working at your computer or when you are on the road.

Your Bluetooth headset must be registered on your handset before you can use it for the first time. After this, you can continue to use your Bluetooth headset until you decide to deregister it.



Caution:

- If you register a headset, any headset that is already registered will be overwritten.
- If you would like to use a headset with your handset that is already registered to another device (e.g. to a mobile phone), please deactivate this connection before you start the registration process.
- Theoretically, third parties can tap Bluetooth connections.
- To improve protection against unauthorised tapping, deregister any Bluetooth devices you no longer require.

During a call, a second caller is not signalled at the Bluetooth headset.

Registering a Bluetooth headset at the handset

Set the headset to login mode (see the user manual supplied with your headset).

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm. The handset searches for a Bluetooth headset and sets up a wireless connection. The names of the devices found are displayed.

Select the required headset.

Press the display key.

Select the menu item and confirm.

If necessary, enter and confirm the Bluetooth PIN for your headset (see the user manual supplied with your headset). The device is saved in the list of known devices.

The Bluetooth interface is automatically activated on your handset. The active Bluetooth function is ticked.

Conducting calls via the Bluetooth headset

Activating the Bluetooth headset during a call

If a Bluetooth headset is registered at the handset, the Bluetooth headset is activated immediately upon dialling.


Accepting a call on the Bluetooth headset

The headset uses a call tone to signal an incoming call. Press the Talk key on the Bluetooth headset (see the user manual supplied with your headset).

Switching from the Bluetooth headset to the earpiece or speakerphone during a call

You are conducting a call via the Bluetooth headset.

Press the Talk key or Speakerphone key on the handset. The Bluetooth headset is disconnected. You can continue the call directly on the handset.

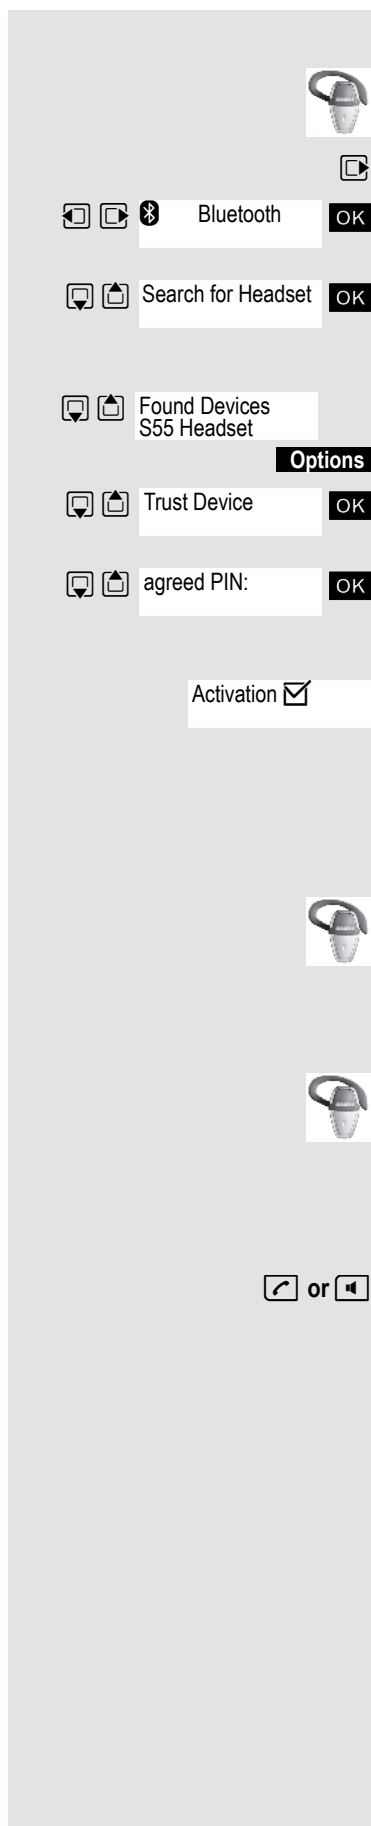

Deregistering the Bluetooth headset at the handset

To improve protection against unauthorised tapping, deregister the Bluetooth headset at the handset if you no longer wish to use it.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm. The name of the registered or detected Bluetooth headset is displayed.

Press the display key.

Select the menu item and confirm. The Bluetooth headset is deregistered and can no longer be detected by the handset.

Switching to mute

You can switch off your handset's microphone during a call if, for example, you want to talk to someone else in the room.

You are conducting a call.

Either:



Press key to mute the handset. The display shows **Microphone is off**. Press the key again to reactivate the microphone.

or:

Menu

Press the display key.


Select the menu item and confirm. The microphone is switched off.

Select the menu item and confirm. The microphone is switched on.

Number redial

The last 20 phone numbers dialled are saved in the redial list. A phone number that was dialled several times is only saved once.

If you tried to call a party from the handset's local phonebook, the name of the party is displayed with a number redial. For information on manual number redial, see → Page 33.

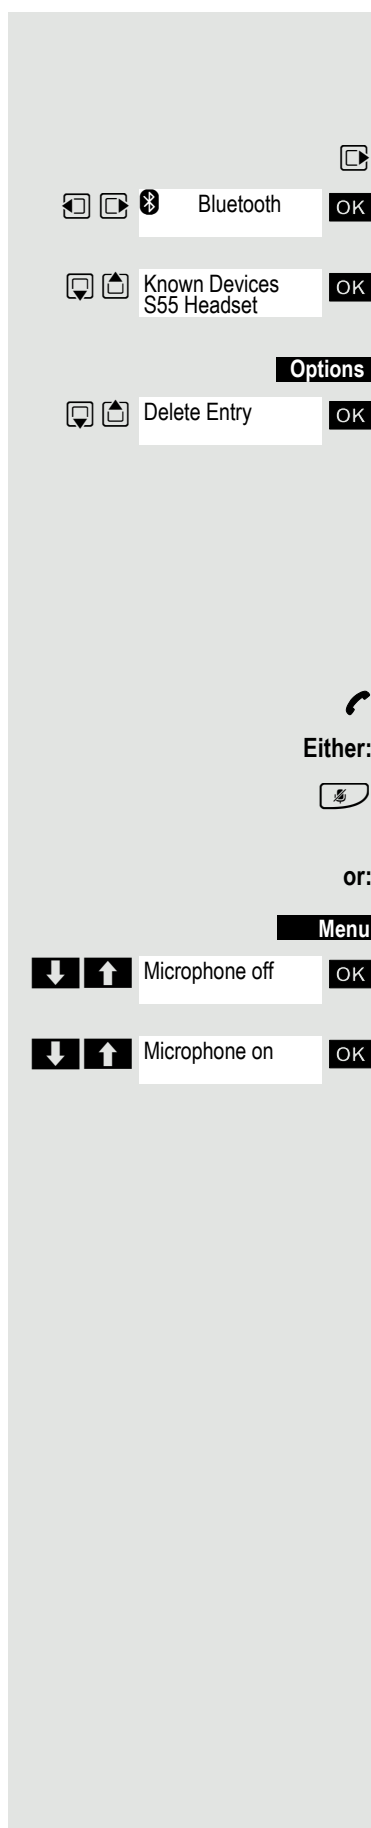

Automatic redial

The phone number is automatically redialled ten times at 20-second intervals. Speakerphone mode is automatically activated, the Speakerphone key flashes. The function is deactivated after ten unsuccessful attempts and when a call is made in the interim.

Press the Talk key briefly. The redial list is displayed.

Select the required telephone number.

Press the display key.

Select the menu item and confirm. Automatic redial is activated.

Either:



The user answers and you conduct the call.

or:

OFF

If you wish to cancel the function: press the Display key or any key.

Deleting a redial entry or list

Press the Talk key briefly. The redial list is displayed.

Select the required telephone number.

Press the display key.

Options

Either:



Delete Entry

OK

Select the menu item and confirm. The telephone number is deleted.

or:



Delete All

OK

Select the menu item and confirm. The redial list is deleted.



Press the On-hook key to end the operation.

Adding a telephone number to the handset's local phonebook

During dial preparation, you can add a number from your handset's redial list to your phonebook.


Press the Talk key briefly. The redial list is displayed.

Select the required telephone number.

Press the display key.

Select the menu item and confirm. The phonebook is displayed.

Select the menu item and confirm. The following selection mask appears:

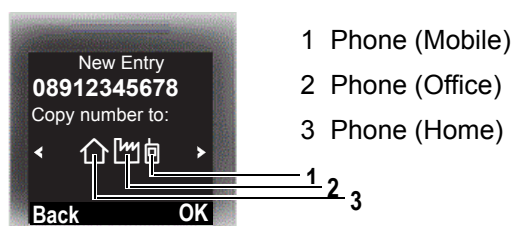

Select the icon for the required phone number type under which the phone number is to be added.

Confirm your entry.

Enter the remaining contact information, such as the first name and surname. For further information, see → Page 45 and → Page 46.

Call pickup

If you are in a call pickup group (ask your service technician), you can accept calls on your handset for other members of your group.


Picking up calls

Your handset is in stand-by status. Another member of your call pickup group is called.

You hear an alerting tone → Page 24, "Pickupcall" is displayed.

Confirm the message shown or press the Talk key.

You are conducting the call.

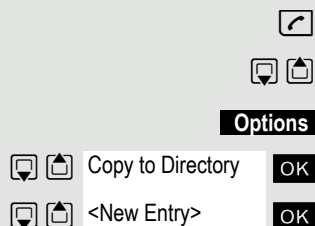

OK



Pickupcall

OK or



Callback

If you cannot reach a subscriber, either because there is no response or the line is busy, you can activate a callback.

If the subscriber has hung up or (if there is no answer) any other activity has been detected on the subscriber's phone, you will receive a callback advisory call. If you accept this call, an attempt will be made to reach the party again.

You can enable callbacks for multiple phone numbers at the same time and can delete all active callbacks. Displaying and deleting individual callbacks is not possible.

Activating callback

You are trying to reach a subscriber. The line is busy or the subscriber does not answer.

Press the display key.

Select the menu item and confirm. You will receive a confirmation announcement to activate the callback.

Accepting a callback

You have activated a callback and the subscriber can now be reached.

Your handset rings and the message "Call Completion" and the phone number/ name of the subscriber is displayed.

Accept the call. As soon as you lift the handset, the subscriber is called.

Deleting callbacks


You have activated one or more callbacks.

Press the INT key.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm. The callbacks are deleted.

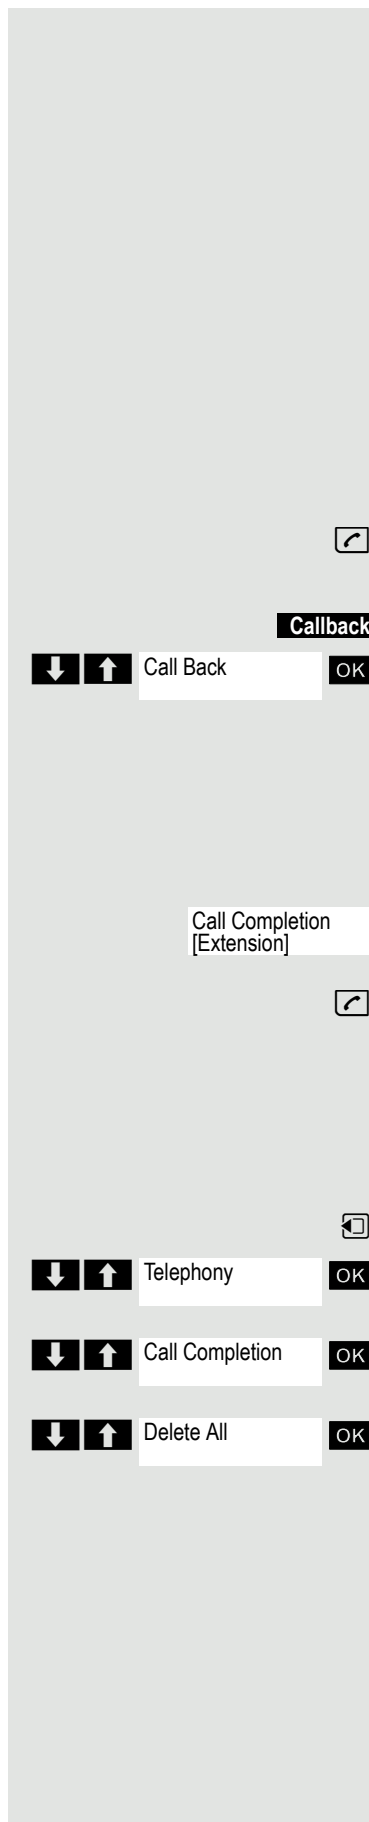

Call forward

You can configure call forwards for your handset. Incoming calls are forwarded to a different number.

The forwarding destination can be any internal or external phone number. The phone number of the voicemail (if set up) is entered as the default forwarding destination → Page 51.

Each call forward is logged in the caller list of forwarded calls → Page 57.

You can set up four different call forwards, each with different forwarding destinations.

- Immediate call forwarding
- Forward on busy
- Forward on no reply
- Forward on not reachable

You can additionally set up forwarding destinations depending on whether the call relates to an internal or an external caller.

You can activate a number of call forwards at the same time. If the immediate forward is active together with other call forwards, the immediate call forward has priority.

Immediate call forwarding

The call is forwarded immediately without your handset ringing.

Forward on busy

The call is forwarded if you are on a call. If the second call (call waiting) function is active → Page 55, there is no busy instance, you hear the calling waiting tone and the caller hears the ringing tone.

If you reject a call → Page 35 or a second call (call waiting) → Page 56, the caller is likewise forwarded to this destination.

Forward on no reply

The call is forwarded if you do not accept the call. You can configure the length of time the handset will ring until the forward is activated.

This also applies for a second call → Page 55 if you are on a call.

Forward on not reachable

This forward is activated if the handset cannot be reached for at least 12 seconds after the call.

The call is forwarded if the handset is outside the radio range, switched off or is not operational because the battery is not charged.

Setting up call forwarding

Press the INT key.

Select the menu item and confirm.

„Select "Internal" for internal calls or "External" for external calls and confirm.

„Select "Uncondition.CFU", "Busy CFB", "No Reply CFNRy" or "NotReach.CFNRC" and confirm.

Select the menu item and confirm. The display shows "activated".

Only if forwarding type is "No Reply CFNRy":

Select the specified time and confirm.

Enter the time in seconds before the call should be forwarded and confirm. A value between 5 and 30 seconds is permitted. Default value: 25 seconds.

Select the next line, enter the destination phone number for this forward and confirm.

Press the On-hook key to end the operation.

Deactivating an individual call forward

Press the INT key.

Select the menu item and confirm.


„Select "Internal" for internal calls or "External" for external calls and confirm.

„Select "Uncondition.CFU", "Busy CFB", "No Reply CFNRy" or "NotReach.CFNRC" and confirm.

Select the menu item and confirm. The display shows "deactivated".

Press the On-hook key to end the operation.

To reactivate, repeat the procedure.

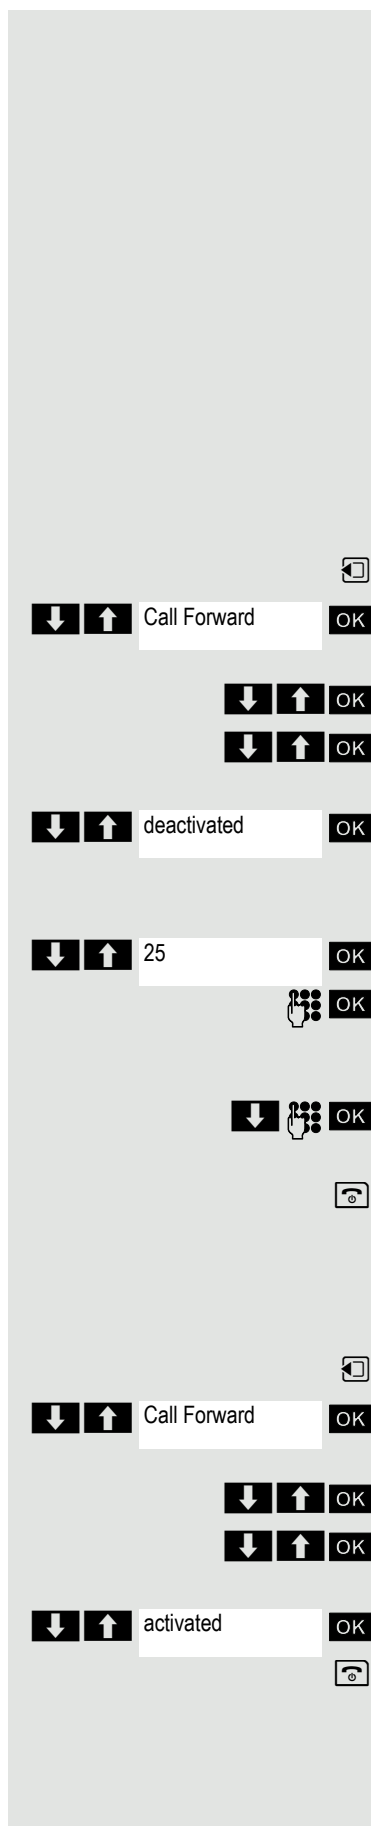

Deactivating all call forwards



Note:

All call forwards are deactivated and call waiting (second call) → Page 55 is disabled if default settings are used.

The destination phone numbers are retained.

Press the INT key.

Select the menu item and confirm.

Select the menu item and confirm. All call forwards are deactivated.

Press the On-hook key to end the operation.

The handset's local phonebook

You can save contact information for frequent call partners in the local phonebook. Once a phone number has been saved in this way you no longer have to enter it in full when you want to call someone. All you have to do is select the required phonebook entry.


You can save a total of 500 entries at most in the phonebook.

Gigaset QuickSync → Page 66 is a software application for transferring data between your cordless OpenStage phone and your PC. You can use it at your phone to load data from your PC to your OpenStage over a data cable or Bluetooth and synchronise contacts with Microsoft Outlook, Microsoft Outlook Express and contacts in Microsoft Windows .

You can save the following contact information for every entry in the phonebook:

Information	Explanation
First Name*, Surname	A name must be entered in at least one of the fields. Each name can contain up to 16 characters.
Phone (Home), Phone (Mobile)*, Phone (Office)*	A number must be entered in at least one of the fields. Each number can contain up to 32 digits.
E-mail*	E-mail address with up to 60 characters. The special character "@" can be inserted after pressing the asterisk key.
Anniversary	You can select either "On" or "Off". If "On" is selected: <ul style="list-style-type: none"> • Anniversary (Date): Day/month/year, 8 digits* • Anniversary (Time): Hour/minute, 4 digits, for reminder call • Anniversary (Signal): Type of signalling, acoustic or visual (time specification not necessary)
Caller Melody (VIP)	Mark a directory entry as a VIP (Very Important Person) by assigning a specific ringtone to it.
Caller Picture*	Display a picture for an incoming call when CLIP is active. Caution: This function is not supported by the system and should therefore not be used.

* = new for vCard format

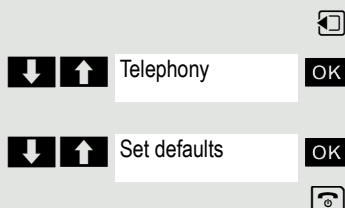

Additional phonebooks: System phonebook → Page 49 and LDAP phonebook → Page 50.

Saving an entry



Open the phonebook.

Select the menu item and confirm. The input mask is displayed.

Enter the relevant information, see above.

Jump to the next line.

etc.

Functions for text input:

	Switches mode from abc to Abc, from Abc to 123 and from 123 to abc If predictive text is off: press the key briefly. If predictive text is on: press and hold down the key.
	Deletes the letter to the left of the cursor.
	Opens the table of special characters.

Save

Save the settings.

Press the On-hook key to end the operation.

Changing the sequence of entries:

The phonebook entries are generally sorted in alphabetical order by surname. Spaces and digits have first priority here. If the phonebook only contains a subscriber's first name, this is listed instead of the surname in the sequence.

The sort sequence is as follows:

1. Space
2. Digits (0 - 9)
3. Letters (alphabetical)
4. Other characters

If you want to change the sequence of entries in the alphabetical list, you could insert a space or a digit before the first letter of the surname. These entries then move to the top of the phonebook. Names preceded by an asterisk are listed at the end of the phonebook.

Finding and dialling an entry

Open the phonebook.

You can scroll to the required entry or enter the first letter of the relevant entry. If necessary, press a key several times in succession to enter the required letter.

Either:



Press the Talk key. The assigned phone number is dialled.

or:

Options

Open the menu.



Display Number

OK

Select the menu item and confirm. The number is displayed.



Change or complete the phone number, for example, with DDIA.



Press and hold down the Talk key.

Dialling an entry with the speed dialling digit

You can call up and dial the phone number associated with an entry to which you assigned a speed dialling digit by simply pressing this speed dialling digit
→ Page 64.



Press and hold down the required speed dialling digit. The assigned phone number is dialled.

Viewing an entry

Open the phonebook.

You can scroll to the required entry or enter the first letter of the relevant entry. If necessary, press a key several times in succession to enter the required letter.

Show

Press the display key. The entry's data is displayed.

Changing to the list

Select

Edit or

Options

or



Press the On-hook key to return to the list.

Changing an entry

Open the phonebook.

You can scroll to the required entry or enter the first letter of the relevant entry. If necessary, press a key several times in succession to enter the required letter.

Either:

Show


Edit

Press the display keys one after the other. The entry's data is displayed.

or:

Options

Press the display key.

  Edit Entry 

then:



Enter changes.

Save

Press the display key.



Press the On-hook key to return to the list.

Deleting an entry or phonebook



Open the phonebook.



Select the entry you want.

Options

Press the display key.

Either:

  Delete Entry 

Select the menu item and confirm. The telephone number is deleted.

or:

  Delete List 

Select the menu item and confirm. A security check question appears.

Yes

Confirm the security check question. The phonebook is deleted.



Press the On-hook key to end the operation.

Displaying available memory





 
Open the phonebook.



Select any entry.

Options

Press the display key.

  Available Memory 

Select the menu item and confirm. The amount of memory used and available is displayed.



Press the On-hook key to end the operation.

Phonebook of communications platform

If configured, phone numbers can be searched for and dialled based on the names in the system phonebook.

If the caller's phone number is saved in the system phonebook for an incoming call, the associated name is shown on the display while the handset is ringing.

Additional phonebooks: Handset's local phonebook → Page 45 and LDAP phonebook → Page 50.

Finding and dialling an entry

Press the INT key.

Select the menu item and confirm.

If an LDAP phonebook is available: Select the menu item and confirm. The first three entries are displayed.

Scroll to the required entry or enter the first letter of the relevant entry.

If necessary, press a key several times in succession to enter the required letter.

Either:



Press the Talk key. The assigned phone number is dialled.

or:




Confirm your selection.

[Name]
[Extension]



Confirm the option shown. The phone number shown is dialled.

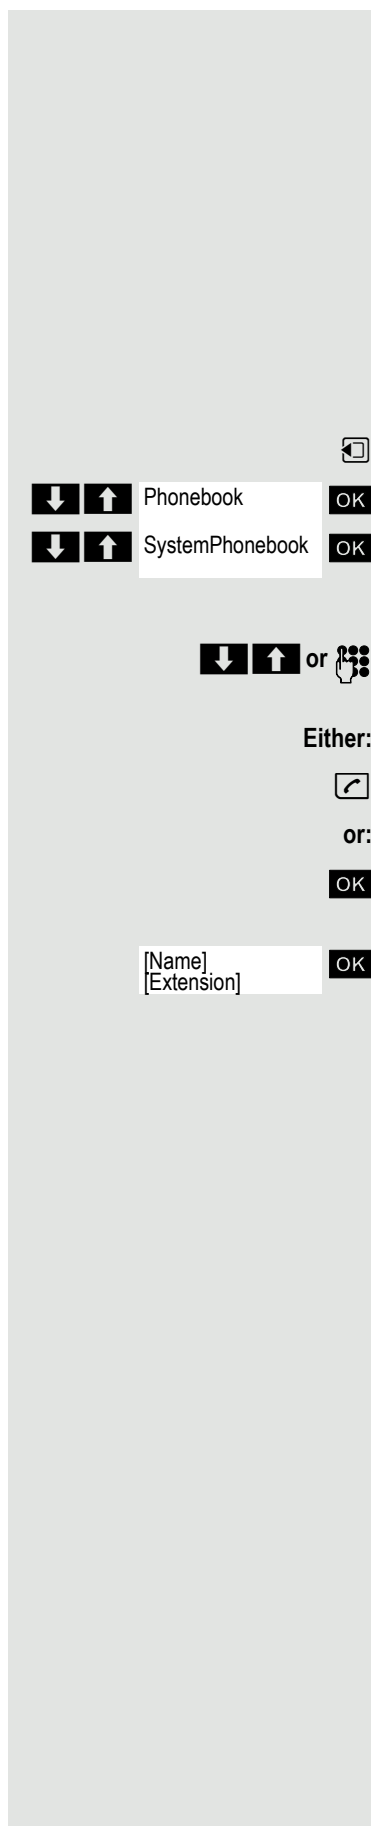

LDAP phonebook

If an LDAP directory service is available to you, phone numbers can be searched for and dialled based on the names in this phonebook.

Additional phonebooks: Handset's local phonebook → Page 45 and system phonebook → Page 49.

Finding and dialling an entry

Press the INT key.

Select the menu item and confirm.

If a system phonebook is available: Select the menu item and confirm.

Enter the first letter of the entry in the search dialogue and confirm.

If necessary, press a key several times in succession to enter the required letter.

No entry is found.

If no entry corresponds to the search pattern, "No entry" is output.

Delete individual letters or change the input and confirm again.


One or more entries are found.

Select the name and confirm.

Press the Talk key. The assigned phone number is dialled.

Confirm your selection.

Confirm the option shown. The phone number shown is dialled.

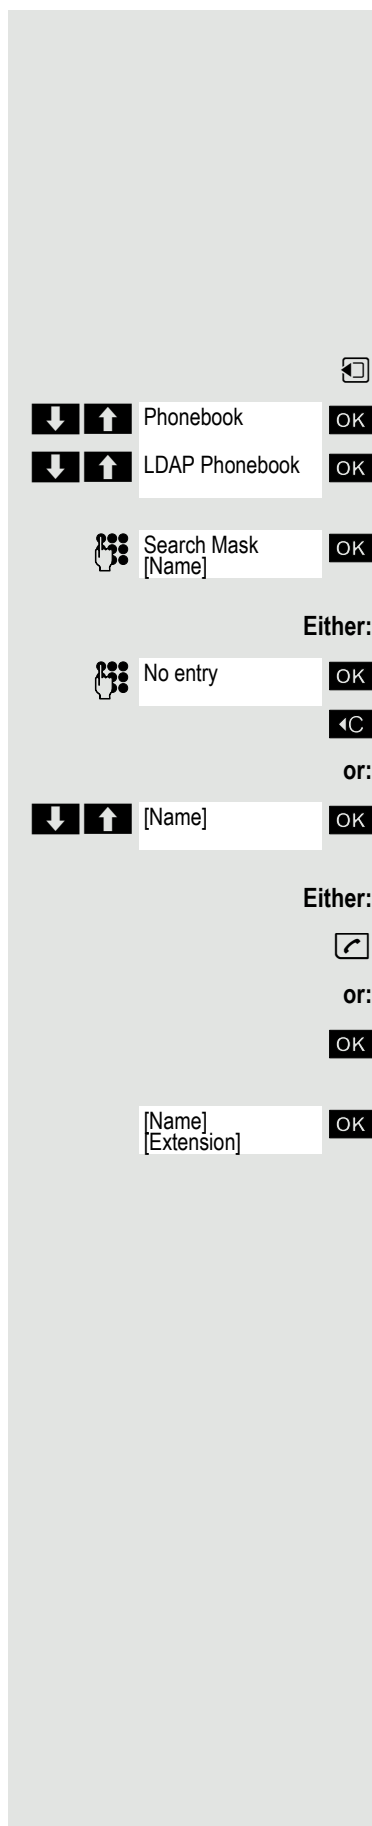

VoiceMail

Depending on the communications platform, a voicemail function (answering machine) may be available to you (if set up, please consult your service technician).

VoiceMail is the default destination for call forwarding → Page 43.

Checking VoiceMail

Dial the VoiceMail number and press the Talk key. VoiceMail is called.



or:



Press the INT key.



Call lists

OK

Select the menu item and confirm.



VoiceMail

OK

Select the menu item and confirm.



Press the Talk key. VoiceMail is called.

or:

If new VoiceMail messages are available (message key → Page 9 flashes).



Press the flashing message key.



VoiceMail

OK

Select the menu item and confirm.



Press the Talk key. VoiceMail is called.

Using dual-tone multifrequency signalling

Your handset operates on the basis of digital information transmission. However, certain applications, for example answering machines, can only be operated using analogue technology. For this you have to send signals using the dual-tone multifrequency signalling (DTMF) process.

You will find further details in the operating instructions for the relevant applications.

DTMF dialling is always activated during the call state.

Conducting calls – with multiple users

Transferring a call

Transferring a call means that you wish to hand over a call you are conducting on your handset to another user.

Transfer (without announcing the transfer)

You can use this function to forward a call which you answered to another user.

Press the R key or Display key.

Enter the phone number of the user to whom the call is to be transferred. The current call is placed "on hold", so that the first user waits.

The number is dialled.

Press the On-hook key. The target user's phone rings. He picks up the call by lifting the handset.

You receive a recall:

- If the required user does not answer for some time after the transfer.

Transfer (announcing the transfer)

You can use this function to forward a call which you answered to another user.

Press the R key or Display key. The current call is placed "on hold", so that the first user waits.

Enter the phone number of the user to whom the call is to be transferred.

The number is dialled. The station answers. You announce the call presently on hold.

Press the On-hook key. The user answers the call.

Placing a call on hold

You can interrupt a call temporarily if, for example, you want to talk to someone else in the room. The line is placed "on hold".

 
You are conducting a call.

Press the R key or Display key. The current call is placed "on hold", the user waits.

Resuming the call with the waiting user

Press the R key or Display key.

You are reconnected to the partner.



Toggling (switching between calls)

The Toggle function allows you to switch between two users without allowing them to speak to each other directly. The two users can be either external or internal users. You can also withdraw from the calls and connect the two users with each other. You can also start a conference.

You are conducting a call.

Press the display key. The current call is placed "on hold", the user waits.

Enter the phone number of the second user.

The second user answers.

Press the Display key to switch between the two calls.

When you terminate the call, both parties are connected to one another.

Conducting a conference

You can connect up to 3 internal or external partners with each other in a telephone conference.

Setting up a conference

You decide to set up a conference while talking to a user.

You are on a call and wish to start a conference.

Press the display key. The caller is placed on hold.

Enter the phone number of the new user.

The user is free and answers the phone. You announce the conference.

Open the system menu.

Select the menu item and confirm.

You and your two partners are connected in a conference call.

Ending a conference

You are connected with two partners in a conference call.

Open the system menu.


Select the menu item and confirm. Station 1 (last party called) is removed from the conference.

Select the menu item and confirm. Station 2 (first party called) is removed from the conference.

Press the On-hook key. The conference is ended.

Leaving a conference

If one of the two users leaves the conference, you remain connected to the other two users.

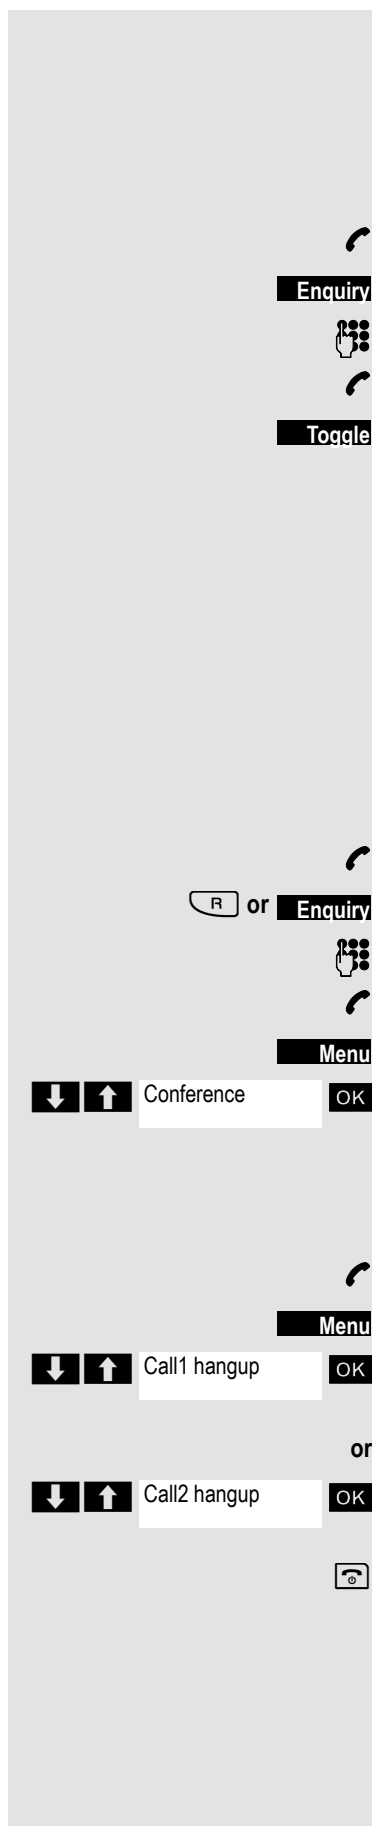

Second call (call waiting)

If the call waiting function is set up, you can accept second calls on your hand-set.

When a second call is incoming (call waiting), you will be informed of the second call during a call by a call waiting tone and a message on the display. The caller hears a ring tone. You can decide whether to accept or reject the second call.

You can activate and deactivate second calls. If the function is deactivated, the second caller hears a busy tone or is forwarded to another number → Page 43.

Activating call waiting

Press the INT key.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm. The display shows "activated".

Press the On-hook key to end the operation.

To deactivate, repeat the procedure.

Placing the call on hold, accepting the second call


You are on a call and hear the call waiting tone.

Open the system menu.

Select the menu item and confirm. You are connected to the second caller. The first call is now on hold.

You can now:

- Transfer the call → Page 53
- Toggle between calls → Page 54
- Initiate a conference → Page 54

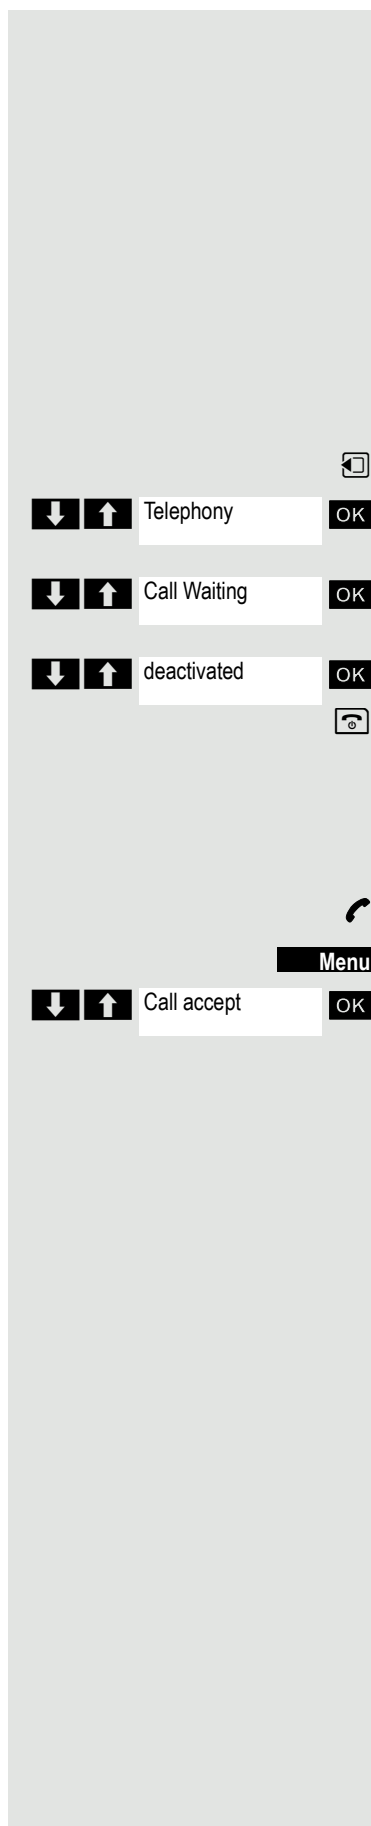

Ending the call, accepting the second call

You are on a call and hear the call waiting tone.

Either:



Press the On-hook key. Your handset rings.



Press the Talk key. You are connected to the second caller.

or:

Menu

Open the system menu.



Call hangup

OK

Select the menu item and confirm. You are connected to the second caller.

Rejecting a second call

You are on a call and hear the call waiting tone.

Reject

Press the display key. The caller hears the busy tone or is forwarded → Page 43.

Caller lists

All calls are logged in caller lists. There is a separate list for the following call types:

- Calls for VoiceMail → Page 51 (if set up).
- Missed calls.
- Forwarded calls.
- Answered calls.

Up to ten calls per list are stored in chronological order. Each call is assigned a time stamp. The display starts with the latest call request still not called. When several calls are received from one caller, the number of calls is shown.

Entries in the caller lists can be transferred to the redial list.

Working with list entries

Selecting an entry

Either:



Press the message key.

or:



Press the INT key.



Select the menu item and confirm.



Select "VoiceMail", "missed", "forwarded" or "received" and confirm.



Select the call and confirm.

Calling back a caller

Select an entry (see above).



 
Select the call party and press the Talk key. The connection is set up.

Copying an entry to the redial buffer

Select an entry (see above).



Select the call party and confirm.




Select the menu item and confirm. The entry is saved in the redial list → Page 39.

Removing an entry from the caller list

Select an entry (see above).



 Select the call party and confirm.



Select the menu item and confirm. The entry is deleted.



Press the On-hook key to end the operation.

Deleting all lists

Either:



Press the message key.

or:



Press the INT key.



Call lists



Select the menu item and confirm.



Delete lists



Select the menu item and confirm. The lists are deleted.



Press the On-hook key to end the operation.

Additional functions

Handset alarm clock function

When the alarm clock is activated, it rings every day or every day from Monday to Friday at the set time. The alarm clock is deactivated during automatic number redial.



Caution:

The alarm will only sound with the set melody if the handset is in idle status. During a call, the alarm is only signalled by a short tone.


Prerequisite: The date and time must be set.

Setting the alarm clock

The handset is in idle status.

Open the handset's main menu.

Select the menu icon and confirm. The input mask for setting the alarm is displayed.

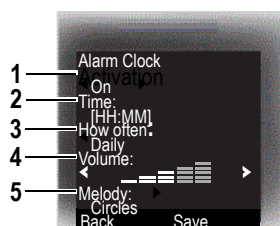

1 Alarm activation: On/off

2 Time in the format [HH:MM], for example 19:05 = 1905

3 Alarm rings every day or only Monday - Friday

4 Volume can be set to five different levels + crescendo ring

5 Adjustable melodies

Define the setting.

Move the cursor down one line.

Enter the time.

 
Move the cursor down one line.

etc.


Save the settings.

The alarm clock is activated.

Press the On-hook key to end the operation.



Deactivating an alarm/repeating after a pause

The alarm rings for 60 seconds. The  symbol appears on the display. If you do not press anything, the alarm repeats after five minutes and then deactivates.

During the alarm:

Either:

Off

Press the display key. The wake-up call is deactivated.

or:

Snooze

Press the display key or any key. The alarm deactivates and is repeated after five minutes. The alarm is repeated twice and then permanently deactivated.

Handset appointment reminder function

You can use your handset to remind yourself of up to 30 appointments. The handset must be in idle status at the time of the appointment reminder. The appointment reminder function is deactivated during automatic number redial. The ringer melody and volume are set under Audio Settings-> Ringer Settings -> Appointments. The date and time must be set.

Saving an appointment

The handset is in idle status.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm. The current month's calendar is displayed with the current day marked.

Select and confirm the required day for the new appointment reminder. The input mask for entering a new appointment reminder appears.

Select and confirm the menu item or select an existing appointment entry. The "New Entry" option only appears if an appointment entry already exists.

Define the setting.

Move the cursor down one line.

Enter the date, for example 11 November = 1111.

Move the cursor down one line.

Enter the time, for example 19:05 = 1905.

Move the cursor down one line.

Enter the name for the appointment reminder.


If applicable, delete the old text.


Move the cursor down one line.

Define a melody to signal appointments.

Save the settings.

The appointment reminder function is activated. The check mark after the appointment indicates that the appointment is active.

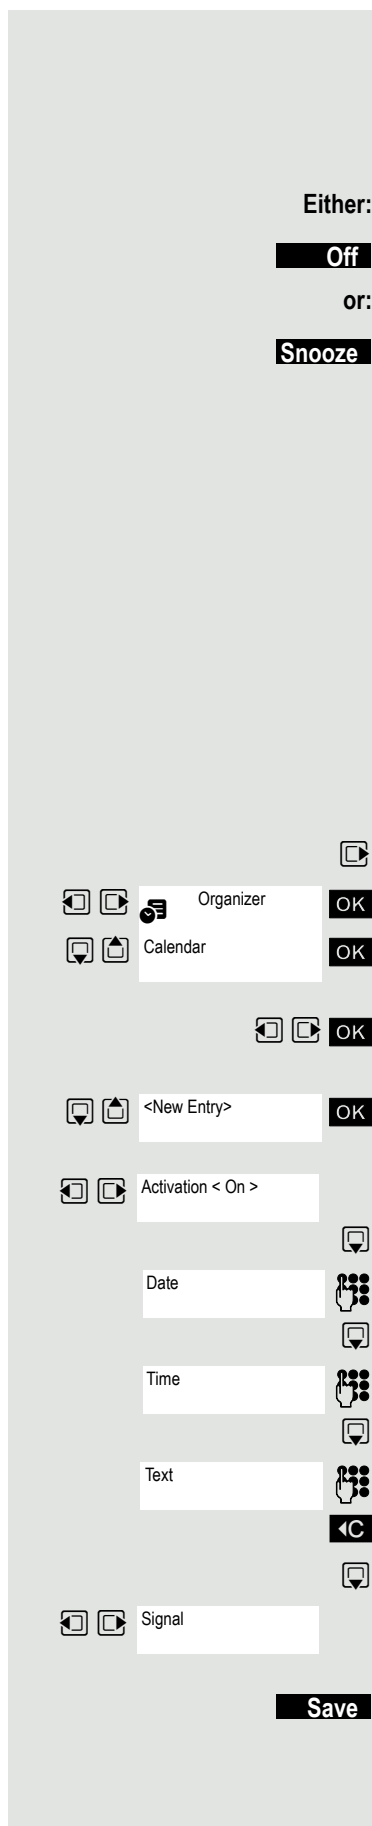

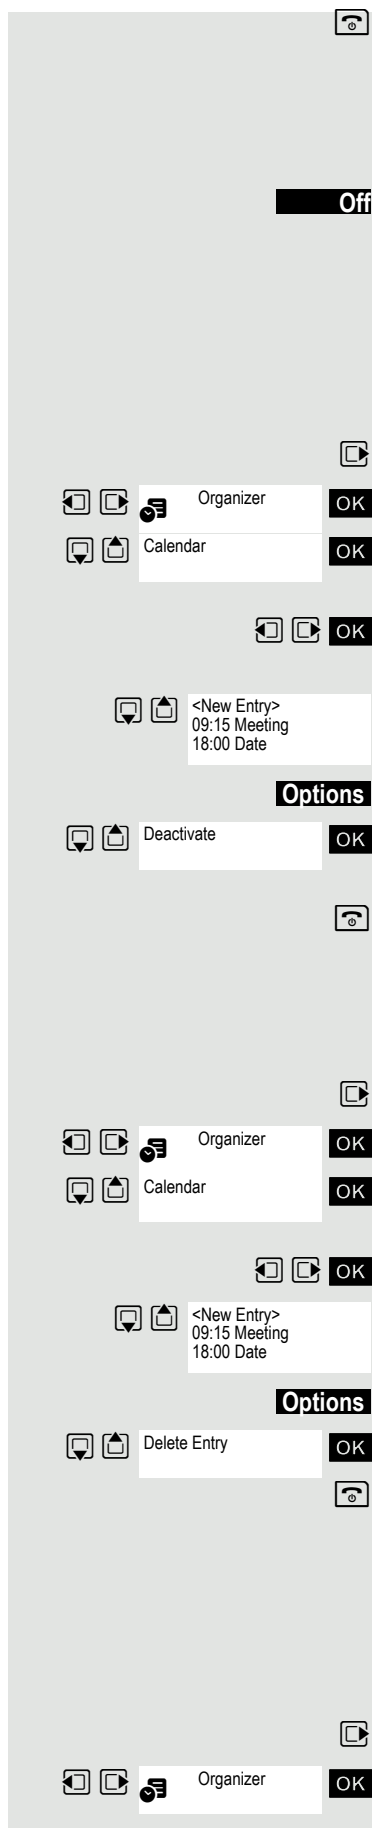

Press the On-hook key to end the operation.

Confirming an appointment reminder call

An appointment reminder call is signalled in the same way as an incoming call.

Press the display key during the appointment reminder call.

If you do not confirm the appointment reminder call, it will be stored in a missed dates list.

Deactivating an appointment reminder

The handset is in idle status.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm. The calendar for the current month is displayed.

Select and confirm the required day with at least one available appointment. The list of appointments is displayed.

Select the appointment reminder that you want to deactivate.

Open the additional menu.

Select the menu item and confirm. The selected appointment reminder is deactivated (check mark removed).

Press the On-hook key to end the operation.

Deleting an appointment

The handset is in idle status.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm. The calendar for the current month is displayed.

Select and confirm the date you want. The list of appointments is displayed.

 
Select the appointment reminder that you want to delete.

Open the additional menu.

Select the menu item and confirm. The appointment is deleted.

Press the On-hook key to end the operation.

Displaying an unconfirmed appointment

If you have not confirmed an appointment reminder call, the  icon and the number of **new** entries are shown on the display. This unconfirmed appointment must also be saved in a missed dates list.

Open the handset's main menu.

Select the menu icon and confirm.



Select the menu item and confirm. The date and time of the unconfirmed appointment are displayed. If 10 entries are already stored in the list, the next appointment reminder will delete the oldest entry.

Delete entry manually from the list.

Selecting a base

If your handset is registered at multiple bases, then you can set a specific base or the base with the best reception as the base to be used. The handset then switches automatically to this base.

You can change the base name that is displayed on the handset at any time.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Select the required base.

Select base. The selected base is ticked:

- Base 1 - 4: Selecting base n defines one specific HiPath cordless system where the handset is registered.
- Best Base: If the handset is registered at multiple cordless systems, it automatically switches to one of these systems when it enters the relevant range. Example: The handset is registered at the Gigaset home base as well as at the cordless system in the company.

Changing the base station name

You can change the base station name that is displayed in idle status.

Press the display key.

Delete text.

Enter the required text and correct individual characters as necessary using the "Delete" Display key.

Save the settings.

Press the On-hook key to end the operation.

The new base station name is now displayed in idle status.

The Cordless system overwrites the display information "Name base station" with the own phone number as soon as an incoming or outgoing call is initiated. In this case, the name of the base station only reappears after the handset has been switched off and back on again.

Setting the base



Caution:

Cannot be adjusted on Cordless IP.

You can configure individual settings on your system with your handset depending on how your system is configured.


Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Select the required menu item and confirm.

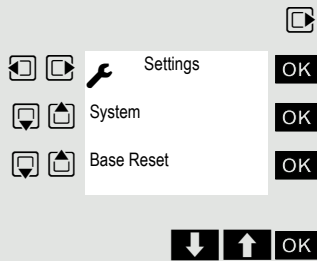

Speed dialling

You can program the number keys **0 +** and **2 ABC** to **9 WXYZ** with a phone number. You then dial the number by pressing the key.

Configuring speed dialling

Press the required number key **briefly**.

If this key is not already programmed with a function, the number key can be assigned a new phone number.

Press the display key.

If the key is already programmed with a function, it appears on the left display key.

Press the display key.

Select the required phone number and confirm.

Press the display key to delete the assignment.

Dial a phone number

Press and **hold** the number key programmed with the required phone number. The phone number is dialled.

If the number key has not been assigned a phone number, the list appears for you to select a phone number.

0 +, **2 ABC** to **9 WXYZ**

QuickDial

or

Edit

  **OK**

or

Clear

0 +, **2 ABC** to **9 WXYZ**

Speed access to functions

The display keys can be programmed with functions. The function is then started by pressing the key.

Configuring speed access

Press and **hold** the required display key.

A list of the functions that can be programmed on the key is displayed. The following functions are available for selection:

- INT
- Alarm Clock
- Calendar
- Bluetooth
- Redial

Calling the function

Press the required display key **briefly**.

The function is selected.

Call control from the PC

You can initiate calls using a CTI program (CTI = Computer Telephony Integration). The call is conducted as usual on your handset.

The CTI program depends on your communications platform:

- OpenScape Office LX/MX: myPortal
- OpenScape Voice: WebClient

Initiating calls from the PC

Call a subscriber using a CTI program (see operating instructions for software).

Your handset rings and the message "CTI Call In" and the phone number/name of the subscriber is displayed.

Accept the call. As soon as you lift the handset, the subscriber is called.

CTI Call In
[Extension]



CTI Call Out
[Extension]

Data communication with the PC

To enable your handset to communicate with the PC, the **Gigaset QuickSync** program must be installed on your PC (free to download at http://wiki.unify.com/wiki/Gigaset_professional_accessory).

After installing "Gigaset QuickSync", connect the handset to your computer using Bluetooth → Page 67 or via a USB data cable → Page 16.

Transferring data

Start the "Gigaset QuickSync" program. You can now:

- Synchronise your handset's address book with Outlook
- Download caller pictures (.bmp) from the computer to the handset
- Download pictures (.bmp) as screensavers from the PC to the handset
- Download sounds (ringer melodies) from the PC to the handset

"Data Transfer" is shown on the display during data transfer between the handset and PC. During this time, the keypad is disabled and incoming calls are ignored.



Caution:

- If the USB data cable is plugged in, a Bluetooth connection cannot be established.
 - If a USB data cable is plugged in during an existing Bluetooth connection, the Bluetooth connection is cancelled.
-

Bluetooth interface

Before you can use your Bluetooth device, activate Bluetooth, ensure the devices are visible and then register the handset.

You can register one Bluetooth headset to the handset. You can also register up to five data devices (PCs, PDAs and mobile phones) to send and receive address book entries as vCards or exchange data with the computer (→ Page 69).

To use the phone numbers, dialling codes (country and area code) must be stored in the directory (→ Page 28).

You will find a description of how to operate your Bluetooth devices in the user guides for these devices.



Note:

Third parties can tap Bluetooth connections.

Activating/deactivating Bluetooth mode

You can deactivate the Bluetooth interface if you do not need it for extended periods of time. This increases your handset's standby time.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

The active Bluetooth function is ticked.

Confirm again to activate.

Registering Bluetooth devices

The distance between the handset in Bluetooth mode and the activated Bluetooth device (headset or data device) should be no more than 10 m.

To connect a Bluetooth headset, see → Page 37.

If the Bluetooth connection is not yet established between the handsets, perform the following steps:

Searching on your handset

Open the handset's main menu.

Select the menu icon and confirm.


Select the menu item and confirm. The handset searches for Bluetooth-enabled devices. This may take a few minutes. If devices are found, these will be shown in a list.


Select the required device, for example, the other handset.

Trusting the device

Press the display key.

Select the menu item and confirm.

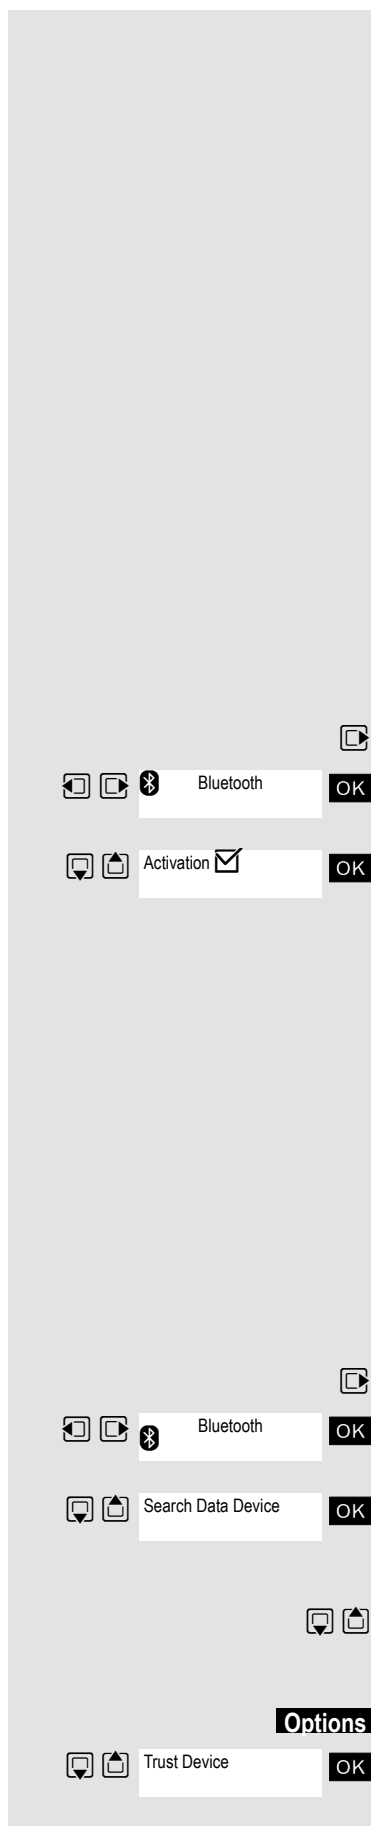

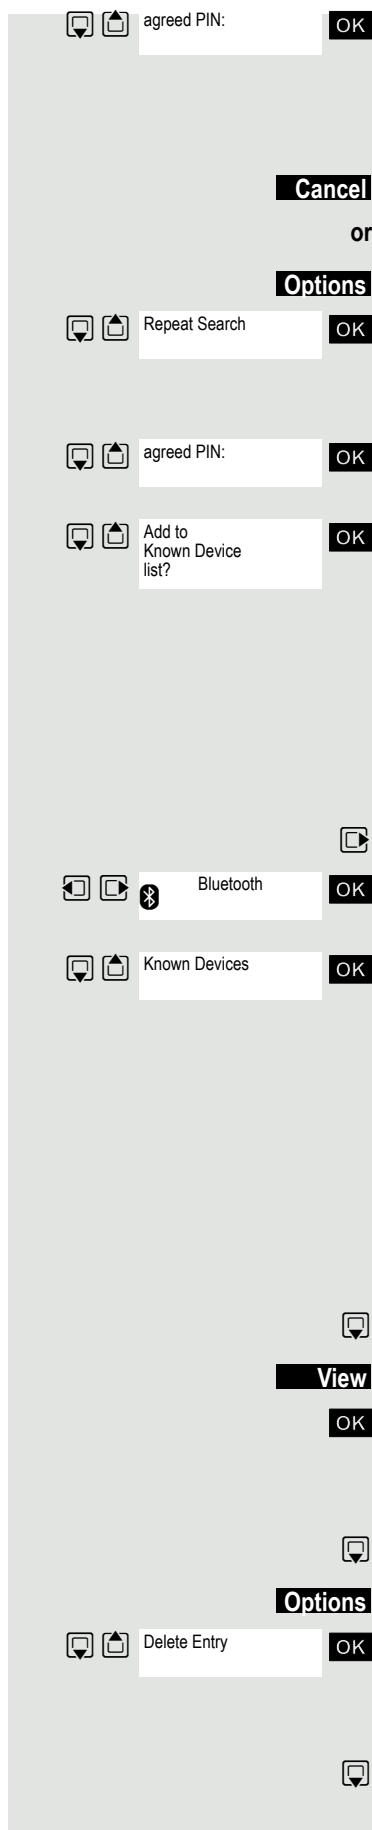

Enter the Bluetooth PIN and confirm (default: 0000). The device is saved in the list of known devices.

Cancelling/repeating current search

Press the display key to cancel the search.

Press the display key.

Select and confirm the menu item in order to repeat the search.

Confirming the connection on the other device

Enter and confirm identical Bluetooth PINs within a few seconds (default: 0000). If you were not fast enough, repeat the previous steps.

Confirm the prompt.

The Bluetooth connection is established. The two devices can now exchange data in vCard format.

Editing the list of known (trusted) devices

Opening the list

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

A corresponding icon appears next to each device name in the list displayed:

Icon	Explanation
	Bluetooth headset
	Bluetooth data device

Viewing entries

Select the entry.

Press the display key. Device name and address are displayed.

Press to switch back to the overview.

Deregistering Bluetooth devices


Select the entry.

Press the display key.

Select the menu item and confirm.

Changing the name of a Bluetooth device

Select the entry.

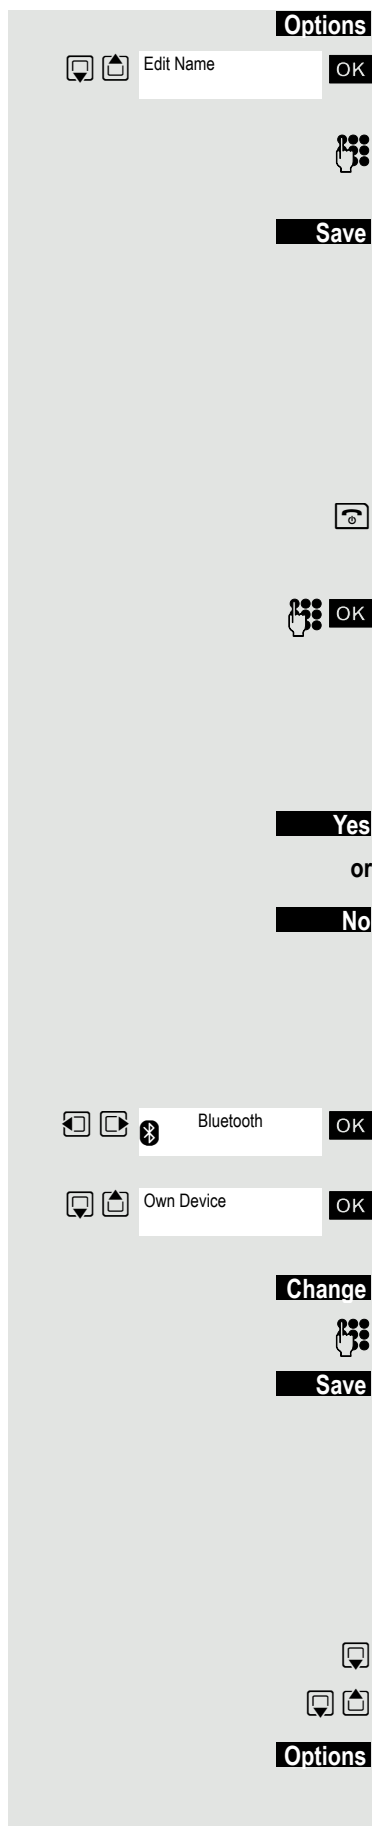

Press the display key.

Select the menu item and confirm.

Rename.

Press the display key.

Rejecting/accepting an unregistered Bluetooth device

If a Bluetooth device that is not registered in the list of known devices tries to connect with the handset, you will be prompted on the display to enter the PIN for the Bluetooth device (bonding).

Rejecting

Press the On-hook key **briefly**.

Accepting

Enter the PIN for the Bluetooth device **you want to accept** and confirm.

If you have accepted the device, you can use it temporarily (i.e. as long as it is within receiving range or until you deactivate the handset) or save it to the list of known devices.

Following PIN confirmation

Press the display key to add the device to the list of known devices.

Press the display key to use the device temporarily.

Changing the Bluetooth name of own handset

You can change the handset name used to identify it on the display of another Bluetooth device.

Select the menu icon and confirm.

Select the menu item and confirm.

Press the display key.

Rename.

Press the display key.

 
Phonebook transfer

Prerequisite: The Bluetooth connection between the devices is established
→ Page 67.

Open the phonebook.

Select the entry.

Press the display key.



Select the menu item and confirm.



Select the menu item and confirm.



Select the menu item and confirm.



Select and confirm the target device or the other handset. The vCard data is sent to the target device.

Now follow the instructions on your handset display.

Telephone blocking

Handset telephone lock



Caution:

Can only be set if this menu item is visible. To set, see → Page 28.

You can protect your handset against theft by entering a 4-digit numerical code to lock it.

The PIN is preset to "0000" (default). The handset does not prompt for a PIN in this setting. As soon as you have changed the PIN you will need to enter it when you turn on the handset.

Enter the value "0000" again to deactivate the PIN.



Important:

If you have forgotten your PIN, please contact Unify Service. It will be re-set at your own expense. The handset is returned to the default state (see → Page 29).

Entering a new PIN

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item and confirm.


Enter and confirm the old PIN. If a PIN has not yet been set, then enter "0000".

Enter and confirm the new PIN.

Press the On-hook key to end the operation.

Battery charging when PIN lock active

If the handset deactivates because the battery is flat, it automatically reactivates as soon as you place it in the charging shell. The charging operation starts. If you have already set a PIN, you must enter it so that the handset can receive calls.

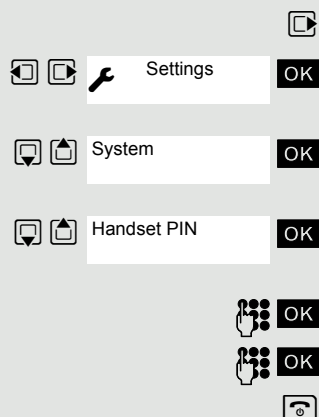

Appendix

Troubleshooting

Some malfunctions can be resolved without outside intervention. The following table provides a list of such malfunctions. All other malfunctions should be reported to the relevant service personnel.

Error	Possible cause	Remedy
No display.	The handset is not switched on. Batteries are empty.	Press the On-hook key until confirmation is received. Charge or replace the batteries.
You cannot dial an external number.	The handset is locked.	Unlock the handset.
No reaction to keystroke.	Keypad lock activated. The key is stuck.	Press the hash key until confirmation is received. Release the key.
De-crescendo tone sequence during input.	An incorrect entry was made.	Repeat key sequence while watching the display; where applicable, consult the operating instructions.
The line "Base n" flashes (n= 1 - 4).	The handset is outside the base radio range; radio signals too weak. Handset not registered. Intervals between synchronisation attempts are too long.	Come closer to the base radio range, change your position. Register the handset. Switch off the handset and switch it back on again.
No ringer on the handset.	The ringtone is deactivated. "Do Not Disturb" is activated.	Activate ringer. Deactivate "Do Not Disturb".
The following, for example, appears: Base 1 Outgoing and incoming calls and activation/deactivation are not possible.	Handset is blocked.	Remove the batteries from the handset and then re-insert them. Proceed as when loading batteries for first time → Page 15.
The following appears: incomplete!	Maximum input time was exceeded. The On-hook key was not pressed.	Avoid long pauses between keystrokes. Press the On-hook key.
The following appears: incomplete!	The communication system is overloaded.	Wait and try again later.
The following appears: Currently not accessible	Function is currently not available. No connection under the phone number dialled available.	Wait and try again later. Enter the phone number correctly or call the attendant console.

Error	Possible cause	Remedy
The following appears: Not possible Or: Incorrect input Or: Nothing stored	Speed-dial number not available, appointment entered incorrectly, entry blocked or not allowed, prerequisite not fulfilled (for example if there is no second partner for toggling), number dialled was incomplete.	Correct your input, select a permitted option, enter the phone number in full.
The following appears: Not authorized	Blocked function was called.	Apply to the relevant service personnel for the COS for the blocked function.
The following appears: PIN Incorrect	Incorrect PIN was entered.	Enter the correct PIN.
The following appears: Not available	Phone number was not fully entered, the star or hash key was not pressed.	Enter the phone number correctly or as prescribed.
The following appears: Do not disturb	Data transfer is active.	Wait and try again later.

Cleaning the handset

Removing everyday dirt

To clean the handset and the charging shell, simply wipe them with a damp or anti-static cloth. Never use a dry cloth.
Do not use abrasive cleaning agents.

After contact with liquids

1. Deactivate the handset immediately. Do NOT activate it!
2. Remove the batteries immediately. Leave the battery compartment open.
3. Allow the liquid to drain off:
 - Hold the handset in a horizontal position with the open battery compartment facing down.
 - Hold the handset in a vertical position with the open battery compartment facing down. Shake the handset gently, slightly tilting it back and forth.
 - Dab all components dry and then leave the handset in a warm spot (other than a microwave, oven, etc...) for at least 72 hours with open battery compartment and keypad facing down.

When it has fully dried out, you will usually be able to use it again.

Storage

To avoid damage, the handset should not be stored with sharp objects, such as knives or tools, etc. We recommend using a protective pouch → Page 75.

Documentation

These operating instructions can be found in PDF format at the following URL:

<http://www.unify.com/us/support/manuals.aspx>

To view or print the operating instructions in PDF format, you need a computer on which the free Adobe Acrobat Reader program is installed.

To view the operating instructions in HTML format, you need a computer with a Web browser, for example Microsoft Internet Explorer.

General specifications

Handset

Maximum sound pressure level according to TBR10, Annex D	less than 118 dB (A)
Weight incl. battery	approx. 100 g
Dimensions (W x H x D)	approx. 48 x 127 x 19 mm

DECT

DECT standard	Supported
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1880-1,900 MHz
Duplex method	Time multiplex, 10 ms frame length
Pulse repetition rate	100 Hz
Pulse transmission length	370 µs
Channel grid	1,728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW, average power per channel 250 mW pulse power
Range	Up to 300 m outdoors, up to 50 m indoors
Environmental conditions in operation	+5 °C to +45 °C, 20 % to 75 % relative humidity

Bluetooth

Radio frequency range	2402-2,480 MHz
Transmission power	4 mW pulse power

Battery

Technology	Lithium ion (Li-Ion)
Voltage	3.7 V
Capacity	750 mAh
Type	V30145-K1310-X445

The handset is supplied with the recommended battery. Only an original battery may be used.

The device is supplied with the recommended battery. Replacement batteries can be ordered if necessary from Unify Service.

Handset operating times/charging times

The operating time of your handset depends on the capacity and age of the battery and the way it is used. (All times are maximum possible times).

Stand-by mode (hours) ^a	190/85
Talktime (hours)	14
Operating time for 1.5 hrs of calls per day (hours) ^b	100
Charging time in charger (hours)	3

a without/with display backlight

b without display backlight
(Set the display backlight → Page 27)

Charging shells

European Union	S30852-H2352-R141
United Kingdom	S30852-H2352-L141
US (110V)	S30852-H2382-U241
Brazil	S30852-H2382-U341
Australia	S30852-H2382-C441

Accessories

Use only original accessories. This will avoid possible health risks and personal injury and also ensure that all the relevant regulations are complied with.

Source

 
 






 

 
 

For information on accessories (such as headsets, protective pouches), contact Unify at the following address:

http://wiki.unify.com/wiki/Gigaset_professional_accessory

 
EU guidelines

The handset and accessories listed conform to the following EU guideline:
99/05/EC "Radio and Telecommunication Terminal Equipment"

Writing and editing text

- Each key between  and  is assigned several letters and characters.
- Control the cursor with , , , . Press and **hold**  or  to move the cursor **word by word**.
- Characters are inserted at the cursor position.
- Press the star key  to display the table of special characters. Select the required character and press the display key  to insert the character at the cursor position.
- Press and **hold**  to  to enter digits.
- Press display key  to delete the **character** to the left of the cursor. Press and **hold** to delete the **word** to the left of the cursor.
- The first letter of the name of address book entries is automatically capitalised, followed by lower case letters.

Setting upper/lower case or digits

Repeatedly press the hash key  to change the text input mode.

123	Writing digits
Abc	Upper case ^a
abc	Lower case

 
 

 
 
 
 
 
 
 
 
 
a First letter in capitals, all others in lower case

The active mode is indicated at the bottom right of the screen.

Writing names

- Enter the individual letters/characters by pressing the corresponding key.
The characters assigned to the key are shown in a selection line at the bottom left of the screen.
The selected character is highlighted.
- **Briefly** press the key several times in succession to select the required letter/character.

Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
	1									
	a	b	c	2	ä	á	à	â	ã	ç
	d	e	f	3	ë	é	è	ê		
	g	h	i	4	ï	í	ì	î		
	j	k	l	5						
	m	n	o	6	ö	ñ	ó	ò	ô	õ
	p	q	r	s	7	ß				
	t	u	v	8	ü	ú	ù	û		
	w	x	y	z	9	ÿ	ý	æ	ø	å
	 ^a	.	,	?	!	 ^b	0			

a Space

b Line feed

Accessing additional functions via the PC interface

To enable your handset to communicate with the PC, the **Gigaset QuickSync** program must be installed on your PC (free to download at http://wiki.unify.com/wiki/Gigaset_professional_accessory).

Transferring data

After installing **Gigaset QuickSync**, connect the handset to your computer using Bluetooth → Page 67 or a USB data cable → Page 16.

**Caution:**

- If the USB data cable is plugged in, a Bluetooth connection cannot be established.
- If a USB data cable is plugged in during an existing Bluetooth connection, the Bluetooth connection is cancelled.

Start the **Gigaset QuickSync** program. You can now synchronise your handset directory with Outlook; download caller pictures (.bmp) and images (.bmp) as a screensaver and sounds (ringtones) from the computer to the handset (and vice versa) (see also → Page 66).

Declaration of conformity

Your handset is supplied for use within a specific country, which is displayed on the underside of the device. Country-specific requirements have been taken into consideration.

The device complies with the basic requirements of the R&TTE Directive and therefore displays the CE symbol.

Extract from original declaration

"We declare that the product OpenStage SL4 professional S30852-H2352-R*-* to which this declaration relates, conforms to the following European Directives and European standards: Directive 99/5/EEC: Radio and Telecommunication Terminal Equipment."

The Declaration of Conformity (DoC) has been signed. In case of need, a copy of the original DoC can be made available via the company hotline.



Index

A

Accessories	75
Activating	31
Advisory tones	20
Alarm clock	59
Alerting tone	24
Allocating	53
Answering machine	51
Appointments	
~ on handset	60
activating	60
confirming	61
deactivating	61
Attachment clip	
fitting	16
Audio functions	18
Auto. answer	24
Auto. redial	40
Available memory	48

B

Base	
changing the name displayed	62
selecting	62
setting	63
Batteries	
inserting	13
warning tone	30
Battery tone	
function	30
setting	20
Bluetooth	37
registering devices	67
Bluetooth interface	67

C

Call forward	43
Call forwarding	43
Call pickup	41
Callback	42
Caller list	57
Calls	
accepting	34
forwarding	43
making	32
picking up	41
rejecting	35
Changing a phone number	47

Charging status	15
Cleaning	73
Clip	
fitting	16
Colour scheme, setting	27
Conducting calls with the headset	37
Conference phone	
ending	54
leaving	54
setting up	54
Confirmation tone	
function	30
setting	20
Connecting the headset	16
Connection quality	31
Consultation (second connection)	33
Control key	5, 10
Converting prefixes	28
Corporate phonebook	49

D

Deactivating	31
Declaration of conformity	77
Default state	29
Deleting	
entry	40, 48
phonebook	48
redial list	40
Dialling	
a phonebook entry	47
before line seizure	32
Dialling a number	47
Dialling preparation	32
Dimensions	74
Directive	75
Display	5
colour scheme	27
lighting	27
screensaver (screen picture)	26
setting	26
Display keys	5, 10
Display lighting	27
DTMF dialling	52

E

Earpiece	5
EMC	3
Entry	
changing the	47
deleting	40, 48
dialling	33, 40, 47
dialling from the system phonebook	49, 50
saving	46
searching for	47
viewing	47
EU directive	75
Everyday dirt	73

F

Function keys	9
---------------------	---

H

Hash key	5, 9
Headset	37
Headset connection	5
Headset port	16
Hold	53

I

Interface	67
Interference with electronic equipment	3

K

Key click	
function	30
setting	20
Keypad lock	35
Keys	
control key	10
display keys	10
function keys	9

L

LDAP phonebook	50
Leaving the radio network/ re-registering	35
Line seizure	32
Liquids	73

M

Making calls	32
Manual redial	33
Memory	48
Message key	5, 9
Message list	9
Microphone	5, 39
Mini USB connection	5
Mute	39
Mute key	5
Mute on	39

N

Number	
changing the	47
dialling from the phonebook	47
dialling from the system phonebook	49, 50
saving	46
Number keys	5
Number, applying	47

O

On/off key	5, 9
On-hook key	5, 9
Opening/closing battery compartment	14

P

Parts of the device	5
Phonebook	
~ on handset	45
company-wide	49
LDAP	50
Phonebook entries, sorting	46
PIN	31, 71
Placing a call on hold	53
Programming keys	
speed access to functions	65
speed dialling	64
Protective cover	13
Protective pouch	73

R

R key	5, 9
Radio range	31
Range problems	31
Recall	53

Redial	
automatic	40
deleting an entry/list	40
list	33, 39
manual	33
redial	
adding a phone number	41
Registering devices (Bluetooth)	67
Rejecting a call	35
Resetting	29
Resource directory	22
Ringling	21

S

Saving a phone number	46
Second call	
accepting	55, 56
Second connection (enquiry)	33
Setting the date	25
Setting the language	
handset	17
Setting the menu view	28
Setting the ringer	21
Setting the screen picture	26
Setting the screensaver	26
Setting the time	25
Sorting phonebook entries	46
Sound pressure level, maximum	74
Speaker volume	18
Speakerphone key	5, 9
Speakerphone mode	36
Speed access to functions	65
Speed dialling	64
dialling	47
hash key	5
Star key	5, 9
Storage	73
Switching between calling partners	54
Switching to mute	39
System phonebook	49

T

Talk key	5, 9
Technical data	74
Telephone volume	18
Toggling	54
Tones	20, 21
Transfer	53
Transferring	53
Transferring a call	53
Troubleshooting	72

U

USB connection	16
----------------------	----

V

vCard	45
converting prefixes	28
VoiceMail	51
Volume	18