



A MITEL  
PRODUCT  
GUIDE

# Unify OpenScape Desk Phone CP600/CP600E

OpenScape 4000

User Guide HFA

09/2024

## Notices

The information contained in this document is believed to be accurate in all respects but is not warranted by Mitel Europe Limited. The information is subject to change without notice and should not be construed in any way as a commitment by Mitel or any of its affiliates or subsidiaries. Mitel and its affiliates and subsidiaries assume no responsibility for any errors or omissions in this document. Revisions of this document or new editions of it may be issued to incorporate such changes. No part of this document can be reproduced or transmitted in any form or by any means - electronic or mechanical - for any purpose without written permission from Mitel Networks Corporation.




## Trademarks

The trademarks, service marks, logos, and graphics (collectively “Trademarks”) appearing on Mitel’s Internet sites or in its publications are registered and unregistered trademarks of Mitel Networks Corporation (MNC) or its subsidiaries (collectively “Mitel”), Unify Software and Solutions GmbH & Co. KG or its affiliates (collectively “Unify”) or others. Use of the Trademarks is prohibited without the express consent from Mitel and/or Unify. Please contact our legal department at [iplegal@mitel.com](mailto:iplegal@mitel.com) for additional information. For a list of the worldwide Mitel and Unify registered trademarks, please refer to the website: <http://www.mitel.com/trademarks>.

© Copyright 2024, Mitel Networks Corporation

All rights reserved

## Important Notes

	For safety reasons, the phone should only be supplied with power as follows: <ul style="list-style-type: none"> <li>• using the appropriate original power supply unit,</li> <li>• over a LAN with PoE (Power over Ethernet), which complies with the IEEE 802.3af standard.</li> </ul>
	Never open the telephone! Should you encounter any problems, consult system support.
	Use only original accessories! The use of other accessories is hazardous and will render the warranty, extended manufacturer's liability, and the CE and other markings invalid.

## Symbol



The device conforms to the EU Directive as attested by the CE marking. The CE Declaration of Conformity and, where applicable, other existing declarations of conformity as well as further information on regulations that restrict the usage of substances in products or affect the declaration of substances used in products can be found in the Unify Expert WIKI at <http://wiki.unify.com/> under the "Declarations of Conformity" section.



The adjacent symbol indicates that any electrical and electronic products installed and sold in countries of the European Union to which the WEEE2 Directive 2012/19/EU applies should be disposed of separately from the municipal waste stream in appropriate collection systems.

Information concerning the proper disposal of your Unify product in the business-to-business market segment is available from your local sales representative in Unify or partner sales.

## Software update

During a software update, the phone must not be disconnected from the power supply unit and/or the LAN. An update action is indicated by messages on the display and/or by flashing LEDs.

## Care and cleaning instructions

- Never spray the phone with liquids as the penetrating fluids can lead to malfunctions or may damage the device.
- Do not use substances such as alcohol, chemicals, solvents or scouring agents, as these substances can lead to surface damage.
- Clean the phone with a soft and slightly damp cloth.

## Online resources

This document along with additional information is available online at: <http://www.unify.com/> → Support.

Technical notes, current information about firmware updates, frequently asked questions, and lots more can be found on the Internet at: <http://wiki.unify.com/>.

## License information

- More information about the EULA and Open Source licenses you can find on the Web interface, section "Licenses" → page 200.

## Installation location information

- The telephone may only be operated using the LAN cabling internally in the building. The device should be connected to the IP infrastructure using a shielded LAN cable: Cat-5 for 100 Mb/s or Cat-6 for 1000 Mb/s. Make sure in the building installation that this cable shielding is earthed.
- The telephone is designed for operation in a sheltered environment within a temperature range of 5 °C to 40 °C.
- Putting the telephone in a room with higher levels of dust can result in a reduced service life of the device.
- Do not place the device in direct sunlight or other sources of direct heat. This is liable to damage the electronic components and the casing.
- Do not install the phone in bath or shower rooms.

## Important Notes . . . . . 3

Symbol . . . . .	3
Software update . . . . .	3
Care and cleaning instructions . . . . .	3
Online resources . . . . .	3
License information . . . . .	4
Installation location information . . . . .	4

## General information . . . . . 11

About this manual . . . . .	11
Icons used in the manual . . . . .	12
Displays for describing operation . . . . .	12
Selected action . . . . .	12
Action not selected . . . . .	13
Conversation display . . . . .	13
Service . . . . .	15
Intended use . . . . .	15
Telephone type information . . . . .	15
Speakerphone quality and display legibility . . . . .	15
Multi-line phone . . . . .	15

## Getting to know the OpenScape Desk Phone CP600/CP600E 16

The User Interface of Your Telephone . . . . .	16
Ports on the underside of the phone . . . . .	17
Using network ports more efficiently . . . . .	18
OpenScape Key Module 600 . . . . .	18
Keys . . . . .	19
Softkeys . . . . .	19
Audio controls . . . . .	19
Mode keys . . . . .	19
Navigator . . . . .	20
Dialpad . . . . .	21
Different display interfaces . . . . .	23
Conversations . . . . .	23
Main menu . . . . .	23
Free Programmable Keys screen . . . . .	25
Context-dependent displays . . . . .	26
Action with Softkey . . . . .	26
Action via dialpad . . . . .	27
Action with navigation key . . . . .	28

## Operating your OpenScape Desk Phone CP600/CP600E . . . 29

Navigating in menus . . . . .	29
Conversations . . . . .	30
Opening details of a conversation or conducting a call . . . . .	31
Editing conversations . . . . .	32
Create a new contact/conversation from scratch . . . . .	35
Searching for conversations or contacts . . . . .	37
Filtering conversations . . . . .	40
Display the history of a conversation . . . . .	42
Deleting conversations . . . . .	44

Telephony interface . . . . .	45
Telephony view . . . . .	45
Presence . . . . .	49
Programmable keys . . . . .	51
Programmable keys in the Favourites menu . . . . .	51
Programmable keys on the OpenScape Key Module 600 . . . . .	53
Meaning of LED displays on Feature keys . . . . .	53
Display function of the function keys . . . . .	54
User settings . . . . .	55
User settings . . . . .	56
Enabling FPK screen . . . . .	60
Administration . . . . .	63

## Setting up the phone . . . . . 66

Display . . . . .	66
Display adjustment . . . . .	66
Display brightness . . . . .	66
Energy saving mode . . . . .	67
Contrast for the OpenScape Key Module 600E . . . . .	68
Brightness for the OpenScape Key Module 600E . . . . .	69
Inactivity . . . . .	70
Upload your images for Inactivity . . . . .	70
Screen type set-up for the Inactivity . . . . .	70
Automatic start of the Inactivity . . . . .	71
Set up display time for Inactivity . . . . .	72
Customizing inactive screensaver display . . . . .	73
Audio . . . . .	74
Change connection volumes . . . . .	74
Adjust ringer volume in call or while idle . . . . .	74
Deactivate the ringer . . . . .	75
Activate alert tone . . . . .	75
Room acoustic . . . . .	76
Ringer . . . . .	77
Setting headset port use . . . . .	78
Call settings . . . . .	79
Activate/deactivate second call . . . . .	79
Central speed dial numbers . . . . .	79
Speed dial with extension . . . . .	80
Individual speed dial numbers . . . . .	80
OpenScape UC . . . . .	81

## Programming function keys . . . . . 82

Function keys setup . . . . .	82
Setting up a selected dialing key . . . . .	83
Setting up dialing keys with contact data from an existing local conversation . . . . .	84
How to program a local feature . . . . .	87
How to delete a local feature . . . . .	87
How to program a function key with Send URL functionality . . . . .	88

## Making calls ..... 89

Receiving a call .....	89
Answering a call via the handset .....	89
Answering a call via the loudspeaker (speakerphone mode) .....	89
Answering a call via the headset .....	89
Answering a call with the DSS key .....	90
Accepting calls for a colleague in the team .....	90
Selectively picking up a call .....	91
Addressed via speakerphone (direct speaking) .....	91
Switch microphone on/off .....	92
Ending a call .....	92
Dialing/Calling .....	93
Dialing with handset off .....	93
Dial with the handset on-hook .....	93
Dialing with connected headset .....	93
Choose from conversations .....	94
Calling with a direct station select (DSS) key .....	94
Redial .....	94
Returning a missed call .....	94
Using speed dial .....	95
Forwarding calls .....	96
Use call forwarding .....	96
Using callback .....	99
Saving a callback .....	99
Accepting a callback .....	99
Checking/deleting a saved callback .....	100
During the call .....	101
Switch to speakerphone .....	101
Switching to the handset .....	101
Open listening in the room during a call .....	101
Parking a call .....	102
Call second individual (consultation) .....	104
Transferring a call .....	104
Accepting a second call (Call waiting) .....	105
Carry out DMTF-suffix/dial tone .....	106
Rollover .....	106
Importing contacts via WBM .....	107

## Using Bluetooth ..... 109

Discoverability .....	109
Pairing .....	109
Pairing NFC-enabled devices .....	109
Using a Bluetooth headset .....	110
Connecting the Bluetooth headset .....	110
Testing a Bluetooth headset .....	111
Transferring contacts .....	112
Receiving a vCARD .....	112
Sending a vCard .....	113
Using a Bluetooth conference phone .....	114
Using a Bluetooth device .....	115
Incoming HFAG call .....	115
Connected HFAG call .....	115
Outgoing HFAG call .....	116
HFAG call states in Main Menu Screen .....	117
HFAG call states in Conversations Screen .....	118

Anonymous mode . . . . .	119
Using Bluetooth keyboard . . . . .	120
Keyboard pairing modes . . . . .	121
Using Bluetooth "Remote button" . . . . .	122
Trigger on reconnect . . . . .	124
Bluetooth settings . . . . .	125
Activating and deactivating Bluetooth . . . . .	125
Changing the Bluetooth name of your OpenScape CP600/600E . . . . .	125
Managing Bluetooth devices . . . . .	126
Blacklist for Bluetooth devices . . . . .	130
Removing a Bluetooth device from the blacklist . . . . .	131
Eddystone Beacon . . . . .	131

## Phoning on several lines (multi-line) . . . . . 133

Line keys . . . . .	133
Line usage . . . . .	134
Preview . . . . .	135
Accepting calls on the line keys . . . . .	136
Accepting calls in the order provided . . . . .	136
Answering a prioritized call . . . . .	136
Activating/deactivating ringing mode (call) . . . . .	137
Forwarding calls for lines . . . . .	137
Call transfer . . . . .	138
Dialing with line keys . . . . .	139
Call waiting with a direct station select (DSS) key . . . . .	140
During the call . . . . .	141
Holding calls on line keys . . . . .	141
Holding and then reaccepting a call on a line key . . . . .	141
Exclusively holding and reaccepting a call on a line key . . . . .	141
Directed line pickup . . . . .	142
Saved number redial for a particular line (stored phone number) . . . . .	142
Most recent extension number dialed for a particular line . . . . .	143
Saving an extension number for "saved number redial to line" . . . . .	143
Line mailbox . . . . .	144
Retrieving messages . . . . .	144
Identifying the line used . . . . .	145
Alternately phoning on several lines . . . . .	145
Ending connection on a line key . . . . .	145
Entering a call on a line (three-way) . . . . .	146
Allowing or preventing entry . . . . .	146
Preventing entry . . . . .	147
Witness or tape connection . . . . .	148
Accepting calls for the manager in the secretarial office . . . . .	149
Accepting calls for the manager during a call . . . . .	149
Switching calls directly to the manager . . . . .	150
Accepting calls on the manager's phone . . . . .	150
Accepting a call for another "Management/Secretarial" team . . . . .	150
Using the second phone for the manager . . . . .	151
Activating/deactivating second call for the manager . . . . .	151
Using buzz function . . . . .	152
Messenger calls . . . . .	152
Setting a representative for the secretarial office . . . . .	152



## Other settings and functions ..... 153

Save appointments .....	153
Appointment function .....	153
Save appointments .....	153
Using timed reminders .....	154
Using a different phone for a call in the same way as your own .....	154
Identify yourself on another phone .....	154
Switch off identification on another device .....	155
Set your own connection to another phone (Mobility) .....	156
Mobility variants .....	156
Connect to "guest telephone" .....	156
Connect to "home phone" again .....	158
Transfer connection to next phone .....	159
OpenScope 4000 as house call system (intercom system) .....	160
System-wide voice calling .....	161
Speaker call in a group .....	162
Announcement (Broadcast) to all members of a management group .....	164
Forward calls for another connection .....	165
Save destination for other phone - Activate call forwarding .....	165
Save destination for fax /PC/busy stations- call forwarding activated .....	166
Check/turn off call forwarding for other phone .....	167
Check/deactivate call forwarding for fax/PC/busy stations .....	168
Change call forwarding for other connection .....	168
Control OpenScope UC preferred device settings from phone .....	169
Watching a video stream through a camera .....	170
How to program a camera .....	170
Managing avatar images .....	172
Downloading an avatar image .....	172
Changing a contact avatar .....	172
Door opener .....	174
Receiving a call from the door phone .....	175

## Special functions for parallel call (ONS) ..... 179

Leaving/entering a hunt group .....	180
-------------------------------------	-----

## Private / Security ..... 181

Activating/deactivating do not disturb .....	181
Speaker call protect on/off .....	182
Caller ID suppression .....	182
User password .....	182
Locking the phone to prevent misuse .....	185
Locking the phone in the system .....	185
Lock local phone .....	185
Secure calls .....	188
Query status in idle mode .....	188
Querying the status when connected .....	188
Information about secure calls .....	188
Identifying anonymous callers ("tracing") .....	189

## Local phone settings ..... 190

Audio settings .....	190
Volumes .....	190
Set local ringtones .....	191
Select and configure call type .....	191

Ringer mode . . . . .	192
Insecure call alert . . . . .	193
Block dialing for outgoing calls . . . . .	193
Setting up Exchange access . . . . .	194
SD-Card . . . . .	195
Displaying network information . . . . .	196
Resetting user data . . . . .	198
Initiating the reset . . . . .	198
Resetting selected user data . . . . .	198
Resetting all user data . . . . .	199

**Web interface . . . . . 200**

General . . . . .	200
Launching the web interface . . . . .	200
. . . . .	200
Licenses . . . . .	200
Administrator pages . . . . .	200
User pages . . . . .	201
User menu . . . . .	201

**Fixing problems . . . . . 205**

Responding to error messages on the display . . . . .	205
Contact partner in case of problems . . . . .	206

**Key terms . . . . . 207**

# General information

## About this manual

This document contains general descriptions of the technical options, which may not always be available in individual cases. The required features must therefore be individually defined in the terms of the contract.

If a particular function on your phone is not available to you as described, this may be due to one of the following reasons:

- The function is not configured for you and your telephone. Please contact your system administrator.
- Your communication platform does not feature this function. Please contact your sales partner for information on how to upgrade.

This User Guide is intended to help you familiarize yourself with the OpenScape Desk Phone CP600/CP600E and all of its functions. It contains important information on the safe and proper operation of the OpenScape Desk Phone CP600/CP600E. These instructions should be strictly complied with to avoid operating errors and ensure optimum use of your multifunctional telephone in the network.

This User Guide should be read and followed by every person installing, operating or programming the OpenScape Desk Phone CP600/CP600E.



For your own protection, please read in detail the section dealing with safety. Follow the safety instructions carefully in order to avoid endangering yourself or other persons and to prevent damage to the unit.

These operating instructions are designed to be simple and easy to understand. Providing clear step-by-step instructions for operating the OpenScape Desk Phone CP600/CP600E.

Administrative tasks are dealt with in a separate manual. The Quick Reference Guide contains quick and reliable explanations of frequently used functions.

## Icons used in the manual

### Tips



Refers to a setting established via the web-interface.



Indicates additional important information in relation to handling.



Indicates required intervention by the administrator.

## Displays for describing operation

### Selected action

#### Original illustration on display



#### Step-by-step illustration in the User Guide

A dark background is not used in the step-by-step illustration in order to ensure legibility in the User Guide.

The information area on the left is shown in a left-aligned field.

When an action is selected, it will be shown right-aligned in blue. The action is executed by selecting the Softkey.

The selected function can alternatively be confirmed using the **OK** key on the navigator (→ page 20).

Andre-Marie Ampere  
3336

Consult

**OK**

## Action not selected

### Illustration on display



### Step-by-step illustration in the User Guide


Start transfer



If an action is not selected, it is shown right-aligned in a light color. The associated Softkey is also shown. The action can be executed by pressing the softkey without the action being selected.

## Conversation display


When the phone is idle, the first entry in the conversation list is selected.

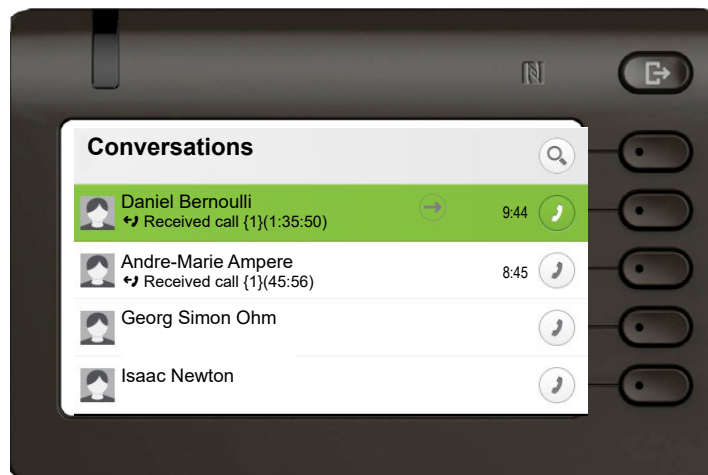


### Information displayed for a selected conversation

Daniel Bernoulli 11:22  
 Received call {1} (1:35:50)

If a conversation (contact and history at the same time) is selected in the list, it is highlighted in green. This description is only used if it aids understanding. This is the usually what is displayed:

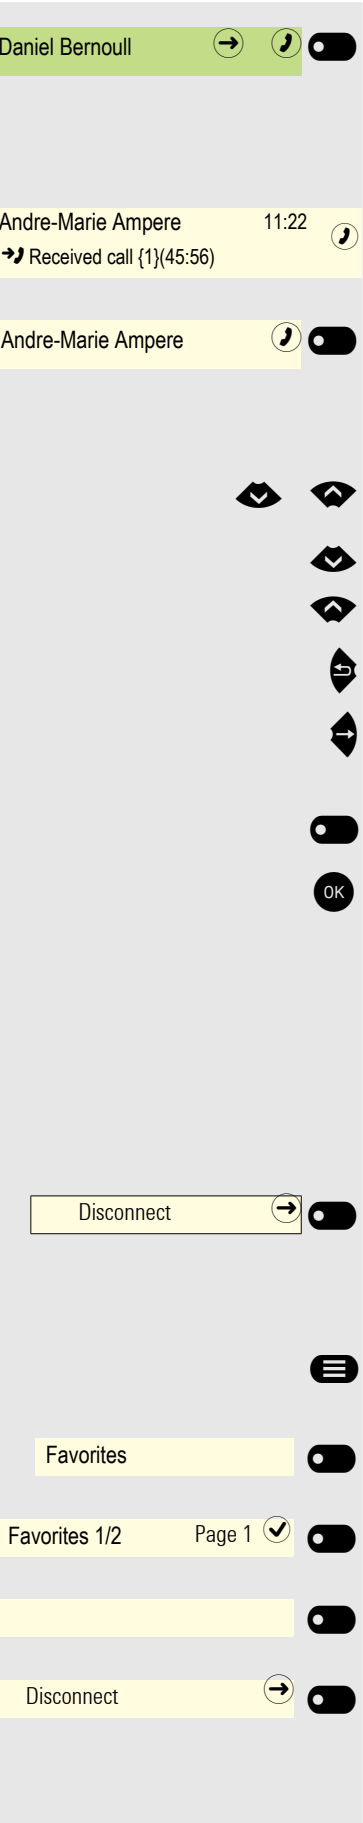

Confirm the selected conversation with the Softkey to establish the connection or with the  key to open the context menu.

Information displayed for a non-selected conversation

Conversations are displayed in a light color if they are not selected. This description is only used if it aids understanding. This is the usually what is displayed:

Call directly with the Softkey to establish the connection.

Navigation and action in lists

Make selection from the list and move entries in the list using the navigator keys.

Press and hold to skip to the end of the list.

Press and hold to skip to the start of the list.

Go back.

Open contacts and details. Switch to next lower level.

Execute the Softkey action in the list element.

Has the same function as the Softkey but works only on a selected element.

OpenScape Key Module 600

If an OpenScape Key Module 600 is connected, functions and phone numbers can be programmed on the keys.

The programmed function and selected-dialing keys are illustrated as follows in the User Guide:

The OpenScape Key Module 600 key shown here is referred to as a Function key in the User Guide.

Function keys in the menu Favorites

If nec. Press the Main Menu key.

Open using the Softkey.

Select the required page with the Softkey.

An unused function key in the Favorites menu.

An example being with the Function key assigned to the disconnect function,

## Service



The service department can help you only if you experience problems or defects with the phone itself.

Should you have any questions regarding operation, your specialist retailer or network administrator will be glad to assist you. For queries regarding connection of the telephone, please contact your network provider.

If you experience problems or defects with the phone, please dial the service number for your country.

## Intended use

The OpenScape Desk Phone has been developed as a device for voice transmission and connection via a LAN, and should be placed on a desk or mounted on a wall. Any other use is regarded as unintended.

## Telephone type information

The identification details (exact product designation and serial number) of your telephone can be found on the underside of the base unit. Specific details concerning your communication platform can be obtained from your administrator. Please have this information ready when you contact the service department regarding faults or problems with the product.

## Speakerphone quality and display legibility

- To ensure good speakerphone quality, the area in front of the telephone (front right) should be kept clear.  
The optimum handsfree distance is approx. 50 cm.
- Proceed as follows to optimize display legibility:
  - Turn the phone and tilt the display so that you can view the display head-on and thus eliminate reflections.

## Multi-line phone


Your OpenScape Desk Phone CP600/CP600E is a "multi-line telephone." This means that multiple lines can be configured, which is not the case with single-line phones. Each line is assigned an individual phone number that you can use to make and receive calls.

## Getting to know the OpenScape Desk Phone CP600/CP600E

The following sections describe the most frequently used controls and displays.


### The User Interface of Your Telephone



1	You can make and receive calls as normal using the <b>handset</b> .
2	The <b>graphic display</b> permits intuitive operation of the phone → page 23. Please note that the screen is greyscale on CP600E.
3	Use the <b>Menu</b> key to open the main menu.
4	Use the <b>Navigator</b> to navigate through the applications on your telephone → page 20.
5	You can use the Softkeys to activate a function or open a menu → page 19.
6	The <b>audio keys</b> are provided to allow you to optimally configure the audio features on your telephone → page 19.
7	Incoming calls, new voice messages, and missed calls are visually signaled via the notification LED → page 53.
8	The <b>dialpad</b> can be used to enter phone numbers and write text → page 21.
9	Use the <b>call forwarding</b> key to open a menu where you can set up variable call forwarding, for example, if UC is not used → page 24.
10	NFC transmitter (logo:  ) for simple Bluetooth pairing → page 109. Please note that Bluetooth and NFC are available only on CP600.



## Ports on the underside of the phone

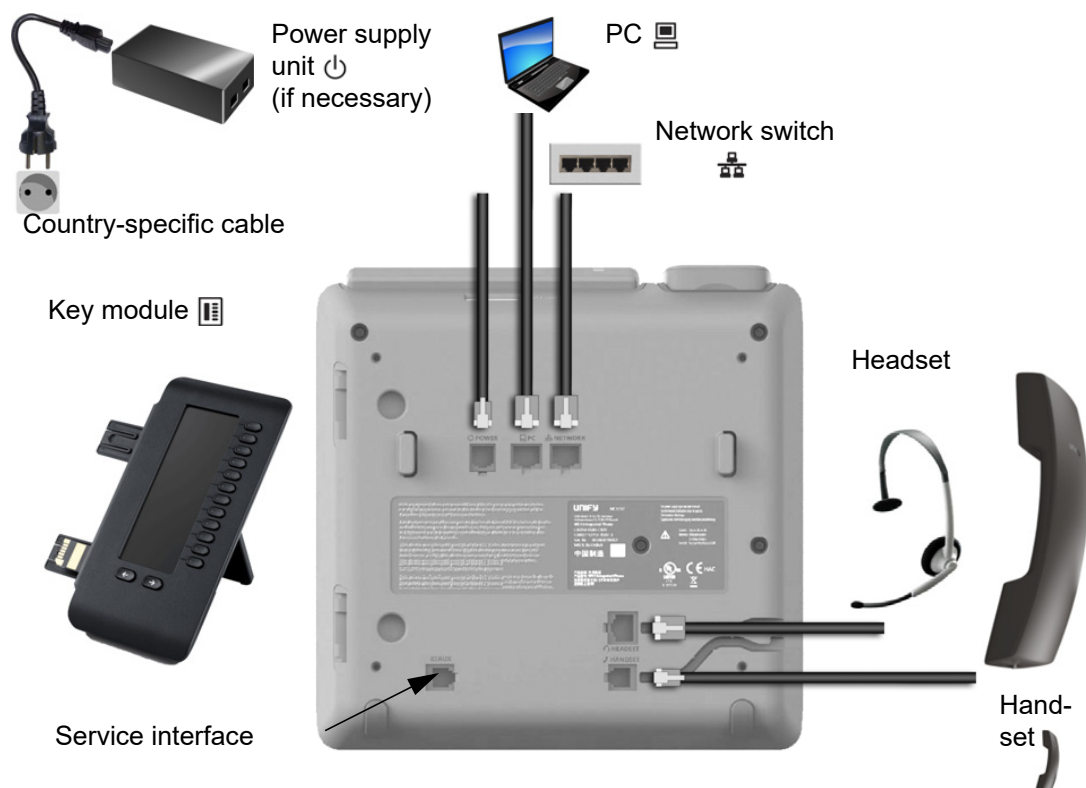

## Properties of your OpenScape Desk Phone CP600/CP600E

Display type	4.3" color graphic display, 480 x 272 pixels. Please note that the screen is greyscale on CP600E.
Illuminated display	✓
Full-duplex hands-free listening	✓
Headset	✓
Bluetooth 2.1 BR/EDR and Bluetooth 4.1 LE → page 125.	✓ Please note that Bluetooth is not available on CP600E.
10/100/1000 Mbps Switch → page 18	✓
Web-Based Management (WBM) → page 200	✓
notification LED (red/green/orange)	✓
OpenScape Key Module 600 optional	✓

## Using network ports more efficiently

The OpenScape Desk Phone CP600/CP600E has a Gigabit Ethernet switch. This means that you can also connect a PC with a Gigabit LAN port to the LAN directly via the phone. The option for connecting the telephone and PC must first be activated on the telephone by your administrator.



Using this connection option saves one network port for each switch used and requires shorter network cables.

## OpenScape Key Module 600

The OpenScape Key Module 600 is a key module attached to the side of the phone that provides an additional 12 illuminated, programmable Function keys at two levels. These keys can be populated and used according to your needs → page 51.



The diagram shows the OpenScape Key Module 600. You can attach up to four OpenScape Key Module 600s to OpenScape Desk Phone CP600 and up to two OpenScape Key Module 600s to OpenScape Desk Phone CP600E.

## Keys

### Softkeys









Key	Function when key is pressed
	Activates the function of the left display option or opens another menu. Used in the Favourites menu as a Function key → page 51.

## Audio controls

### Audio keys



Key	Function when key is pressed
 / 	Activate/deactivate the loudspeaker → page 89.
 / 	Use headset → page 89.
 / 	Activate/deactivate microphone (also for speakerphone mode) → page 92.

### Volume

Use the controls to adjust the properties of your phone, for example the volume.



### Mode keys











You can switch to the relevant application using these keys.



Key	Function when key is pressed
	Switch to the main menu → page 23.
	Configure call forwarding → page 24.

## Navigator


This control allows you to navigate in lists and perform actions in the selected area.

Operation	Functions when key is pressed
 Press the  key.	In conversation mode: <ul style="list-style-type: none"> <li>• Open subscriber information</li> </ul> In settings: <ul style="list-style-type: none"> <li>• Go down one level</li> </ul>
 Press the  key.	In lists and menus: <ul style="list-style-type: none"> <li>• One level back</li> </ul> In input fields: <ul style="list-style-type: none"> <li>• Delete character to the left of the cursor</li> </ul>
 Press the  key.	In lists and menus: <ul style="list-style-type: none"> <li>• Scroll down</li> <li>• Press and hold: Skip to the end of the list/menu</li> </ul>
 Press the  key.	In lists and menus: <ul style="list-style-type: none"> <li>• Scroll up</li> <li>• Press and hold: Skip to the start of the list/menu</li> </ul>
 Press the  key.	Execute an action for the selected entry.

## Dialpad

### Numeric input

If you enter a number when the telephone is in idle mode, for example, an input field opens automatically for numeric input. Only the digits 0 to 9 as well as the \* and # characters can be entered via the keypad in "123 mode" (indicated at the left margin of the input field).

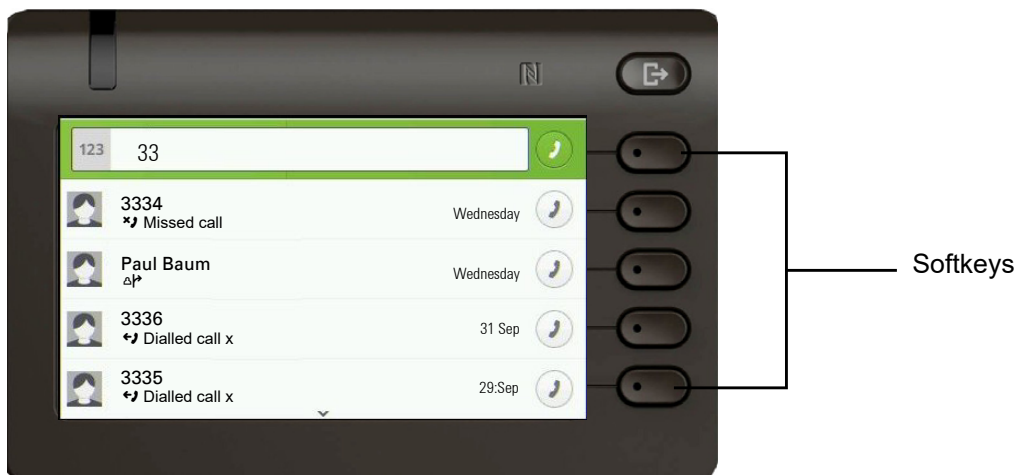


➡ Alphabetic labeling of dial keys is also useful when entering vanity numbers (letters associated with the phone number's digits as indicated on the telephone spell a name, e.g. 0700 - PATTERN = 0700 - 687837).

### Text input

In cases where text input is possible, you can use the dialpad to input text, punctuation, and special characters in addition to the digits 0 to 9 and the hash and asterisk symbols. To do this, press the numerical keys repeatedly.

Example: To enter the letter "U" in the "Company" field, press the number **8 TUV** key on the dialpad twice. All available characters for this key are displayed during input. After a short while, the character in focus is displayed in the input field.

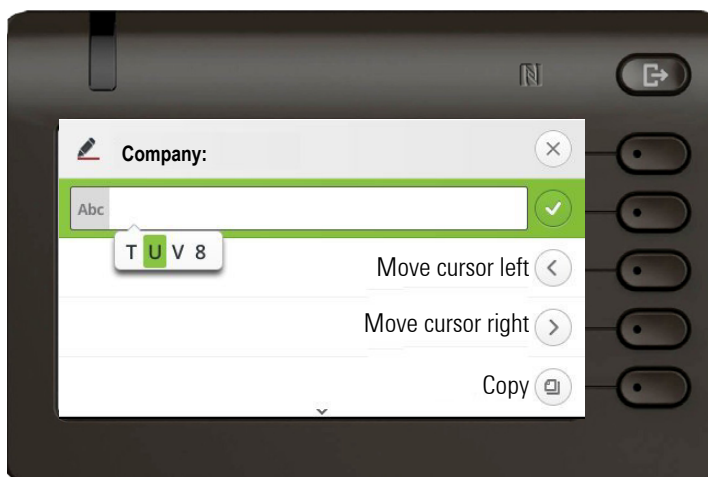













➡ If you want to enter a number in an alphanumeric input field, hold down the corresponding key to bypass the character selection.

Complete your input:






Press the Softkey for  to complete your input.

Character overview (depends on the current language setting)

Key	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x	14x	15x	16x	17x
	1	2	3	4	5	6	7	8	9	{	}	%					
	a	b	c	2	ä												
	d	e	f	3													
	g	h	i	4													
	j	k	l	5													
	m	n	o	6	ö												
	p	q	r	7	ß												
	t	u	v	8	ü												
	w	x	y	9													
	0	+															
	..	*	1	#	,	?	!	,	"	+	-	(	)	@	/	:	-
																	

Multi-function keys

Key	Function during text input	Function when held down
	Type special characters.	<ul style="list-style-type: none"><li>• 2 seconds: Ringer off</li><li>• 3 seconds: Beep sound instead of ringer</li></ul>
	Switch between uppercase and lowercase text and number entry. <ul style="list-style-type: none"><li>• Abc mode</li><li>• ABC mode</li><li>• 123 mode</li></ul>	Activate the phone lock → page 185.
	Type special characters (not in 123 mode)	


## Different display interfaces

Your Open Scape Desk Phone CP600 is fitted with a color graphic display → page 17, in which different contents are displayed depending on the particular situation.


Your Open Scape Desk Phone CP600E is fitted with a greyscale graphic display → page 17, in which different contents are displayed depending on the particular situation.

## Conversations

The conversations list is called in the main menu with the Conversations option and is a collection of contact data and data from the call log. See → page 30 for detailed information.

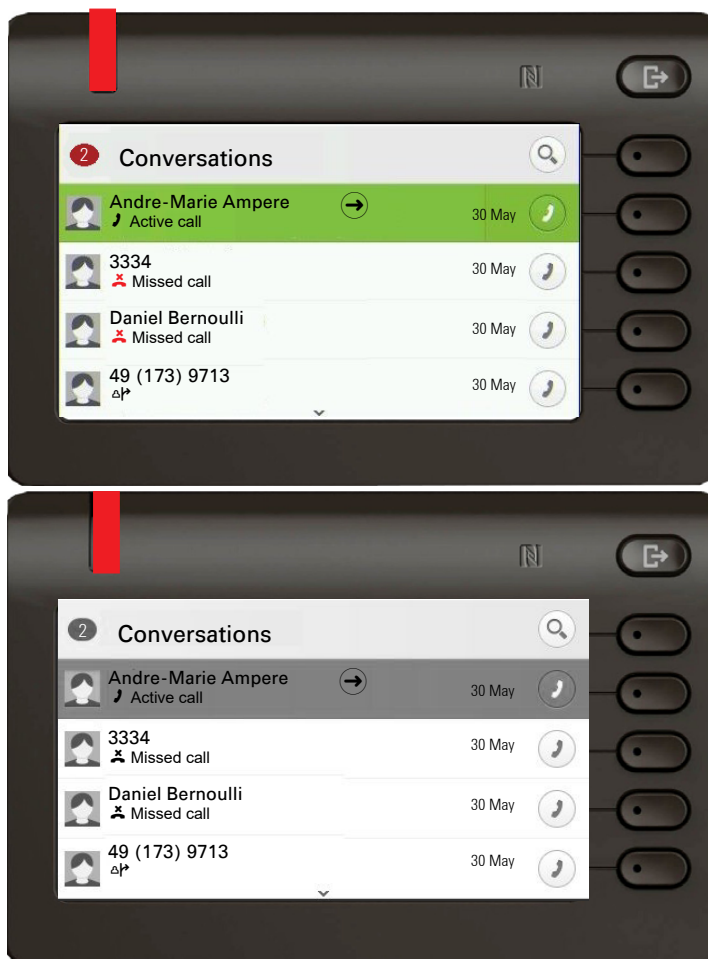

## Main menu

Use the  key to access the main menu in any situation. The time, day of the week, and date, as well as the subscriber's own phone number, are displayed in the Notification area. The main menu can do much more, as can be seen from the screenshot. As the name suggests, it is the starting point for the entire menu tree. However, as telephony features take priority on a telephone, it is the conversation list that is used as the start display.



☰ Main menu

Favorites

Conversations

Service/Settings

Fixed call forwarding on

Variable forwarding on

Service menu

User settings

Administrator - settings

Moreover, different icons represent different situations and options:


Icon	Meaning
	The ringer is deactivated → page 75
	The ringer is set to a beep → page 75
	The "Do not disturb" function is activated → page 181
	The phone lock is activated → page 185
	The Bluetooth function is activated → page 109



## Free Programmable Keys screen


A Free Programmable Key (FPK) is a feature of your phone that allows you to assign a certain function or macro to one of your device's programmable keys. For more information regarding programming keys please refer to → page 82.

The Free Programmable Keys screen (FPK screen) feature is a menu that can help you to access quickly your favorite functions. If you want to find more information about enabling the FPK screen, please refer to → page 60.

Once this option is activated, use the  Menu key to switch your screen between the original Idle screen and the FPKs screen. The FPK screen displays the first 5 FPKs (if configured). The FPKs are shown on the right side of your phone's screen as in the example below.



---


 Shifted keys will be visible, if programmed, when layer 2 is active.

---


## Context-dependent displays

Depending on the situation, the graphic display on your OpenScape Desk Phone CP600/CP600E shows different content, to which you can respond intuitively.

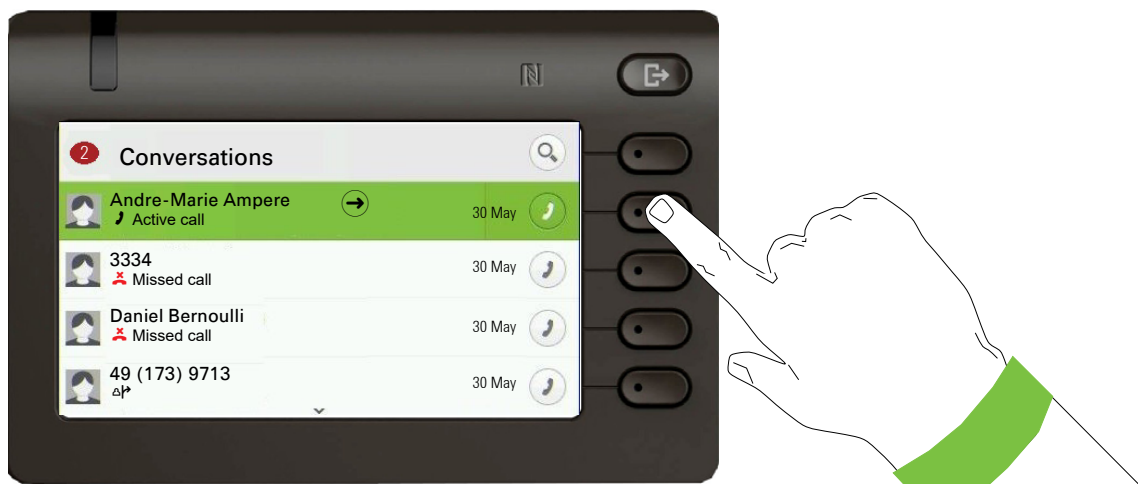


### Action with Softkey

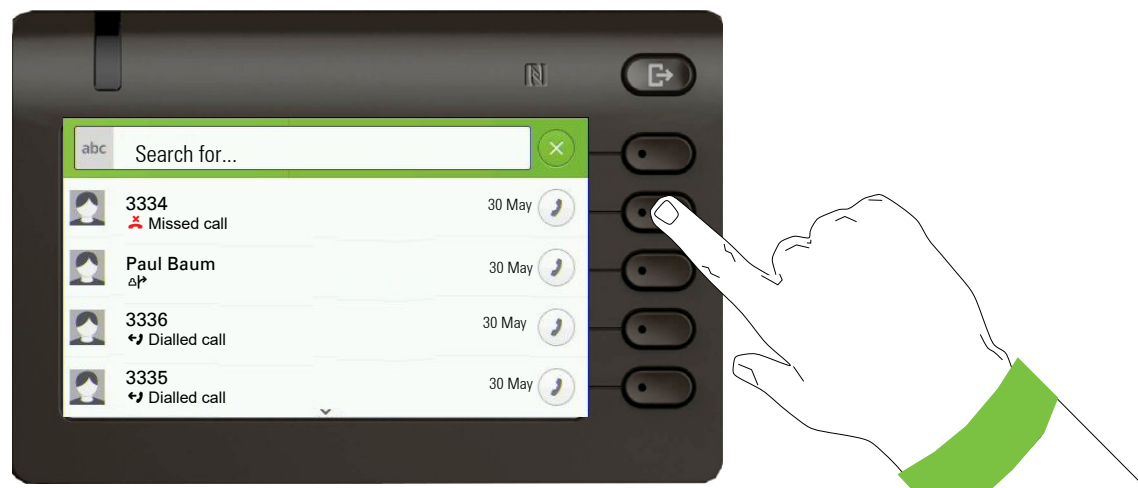

Press the top softkey to start an alphanumeric search → page 37.




Use the Softkey to dial the respective subscriber.

You can select a conversation beforehand using the navigator keys  and  and open the details of the conversation with the  key → page 31.

## Action via dialpad

Press any key on the dialpad to start dialing a phone number with automatic phone number search.

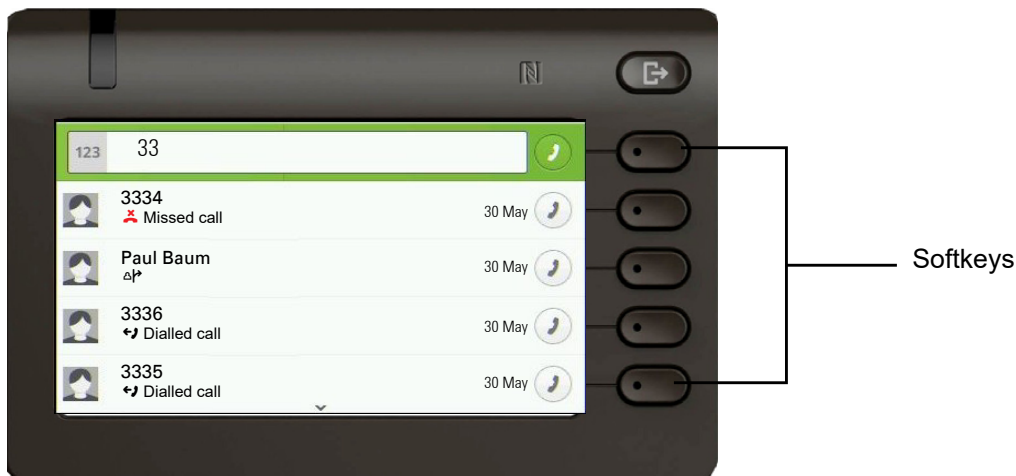

As soon as you enter the first digits, an input field opens for selecting the phone number and you will be shown conversations that match the input to date in the corresponding positions.

Deleting number with back key will have same effect as pressing new keys - list is updated according to remaining previous key input. You are still able to enter classic search screen by pressing SRK.

From existing conversations, any matching substring or entered numbers is shown. Also all possible string combination from available letters are filtered out from conversation names (only names which begins with any possible combination. If the conversation is already shown in the list before your input is complete, you can dial the number immediately using the associated Softkeys → page 31 or start a call with a new number.

### Example:

Key press 2 (a b c) 7 (p q r s) 8 (t u v) will filter out following names:

**A**rthur Rimbaud

Peter **C**ruise

Mary **A**pttle


but not: **M**artin Luther


### Sorting

Matching results are sorted and shown in following order:

- Number matches (local conversations) - last used first
- Name matches (local conversations) - last used first

## Action with navigation key

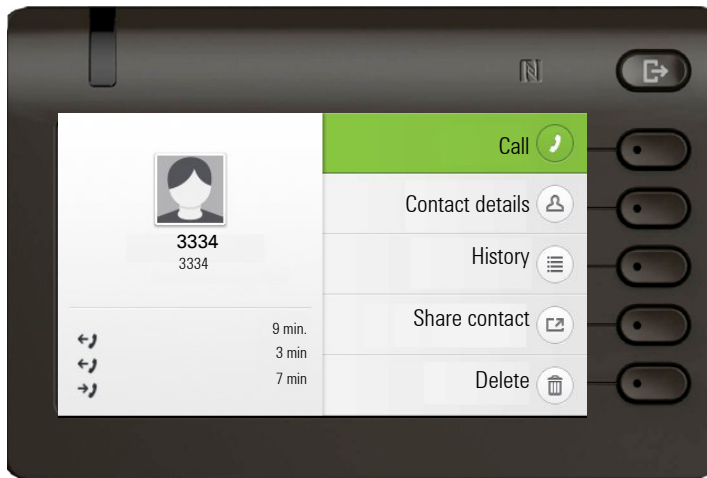

You can open a selected conversation using the navigator's  key in order to see the associated details → page 26.

# Operating your OpenScape Desk Phone CP600/CP600E

The following descriptions provide an overview of how to operate your phone.




Before looking at the functions and settings, you should set up the User password to protect your phone against unauthorized use → page 182.

## Navigating in menus

### Browsing lists

You can use the navigator keys to scroll through entries and confirm the functions you want → page 20.

### Opening context menus

If the arrow  appears beside a selected entry, a context menu is available for this entry → page 26.


## Conversations

A conversation is a contact with a call history. New conversations are created or updated for

- a previously answered call
- an outgoing call
- a missed call
- an Exchange entry following automatic synchronization
- receipt of a vCard via Bluetooth

A telephone number is automatically supplemented with a name if this information is available from the communication system or the telephone number is found in a company directory (LDAP).



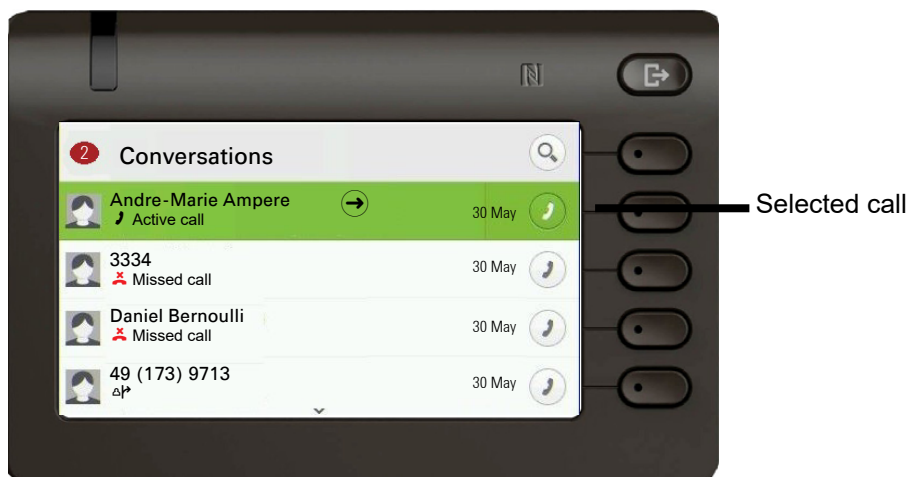

The list is ordered chronologically based on the last interaction. The latest interaction appears at the top of the list. Active calls are displayed before the conversations.





The status of a conversation is displayed with icon and text.

Icon	Text
	Active call
	Missed call (current)
	Missed call (old)
	Dialed call
	Received call
	Voicemail
	Old voicemail
	Incoming call forwarded towards you by a third party.
	You forwarded the call
	Your call was forwarded

## Opening details of a conversation or conducting a call


You can open a selected conversation using the navigation key  or start a call using the softkey  or the navigation key . If a conversation is not selected, you can start a call using the softkey .

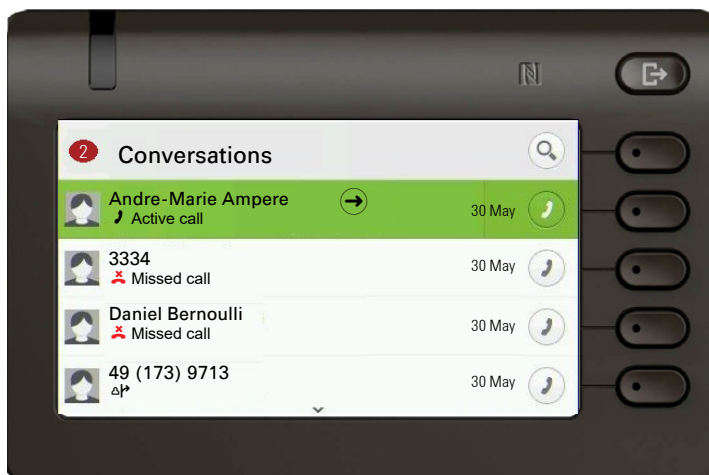


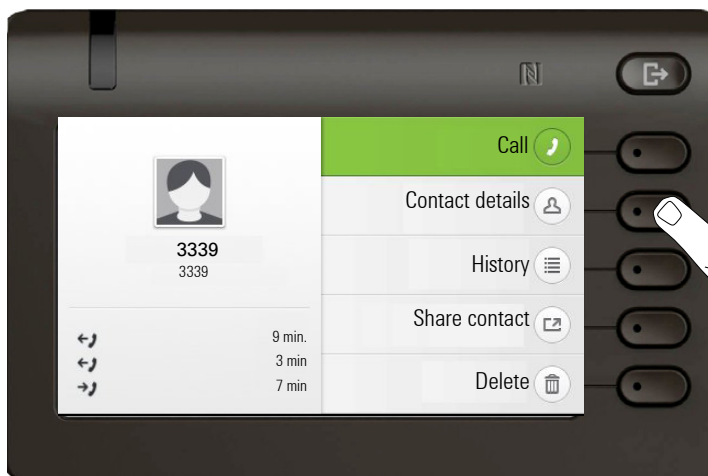
If you open the details of the conversation using the  key, you will be shown the following for example:




## Editing conversations

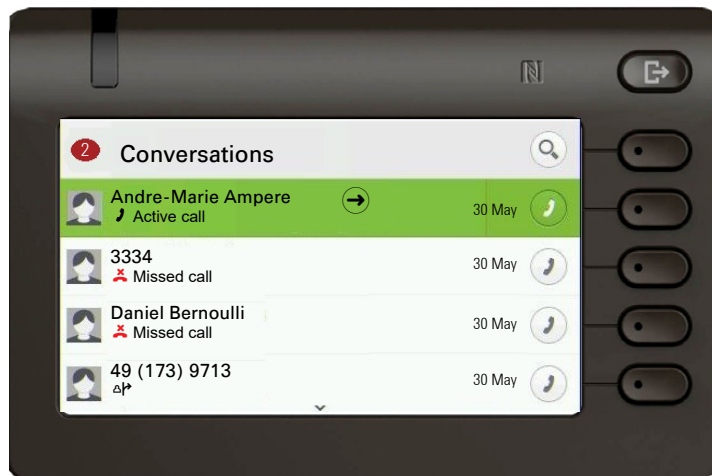


Open the details of the conversation using the  key.




Use the Softkey to open the "Contact details" menu.

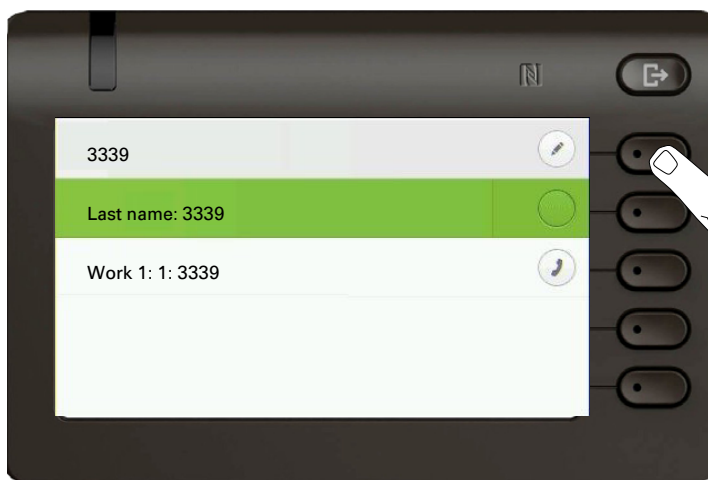





Press the Softkey for  to access edit mode. You can complete the following fields for a contact:


- Last name:
- First name:
- Work 1:
- Work 2:
- Mobile:
- Home:
- Company:
- Address 1:
- Address 2:
- Role:
- Email:
- Avatar:

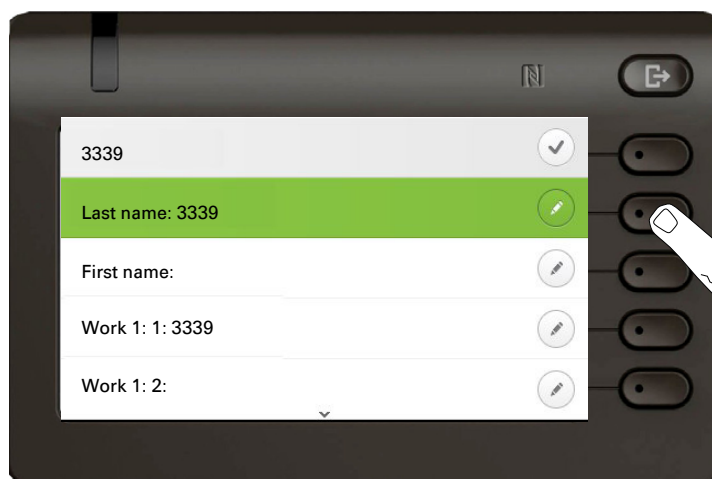

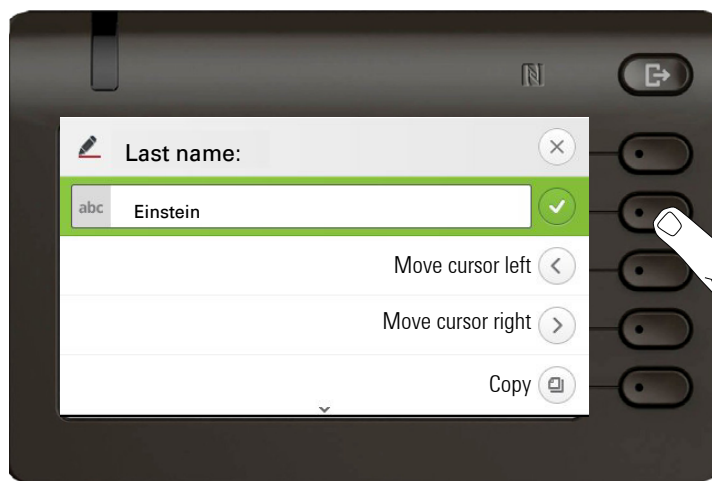


Press the Softkey for  to enter the last name.

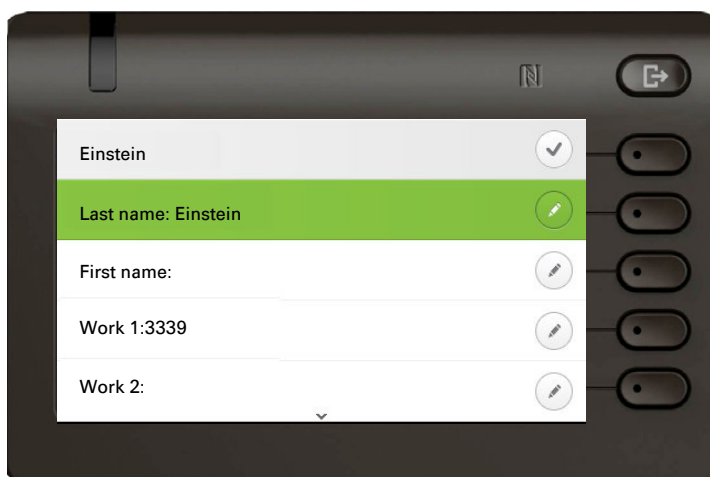


Delete the digits using the  key and enter the last name. Press the Softkey in the input field to complete the input for this field.



Use the  or  key to switch, for example, to "First name" and enter the first name here if appropriate.

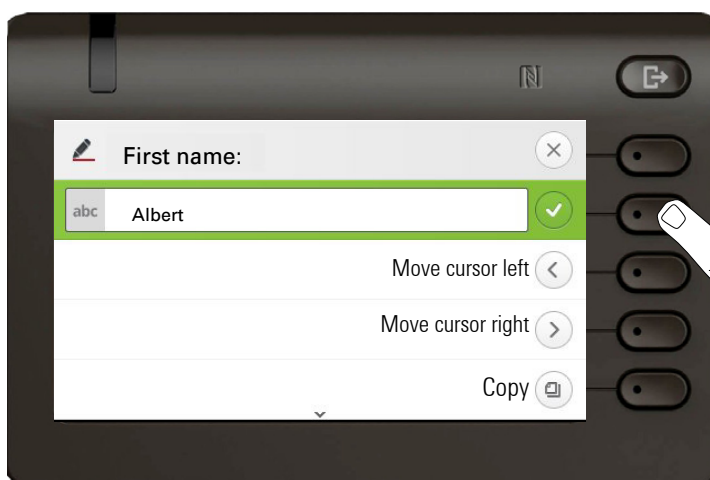

Enter the first name and complete the input for this field with the Softkey.

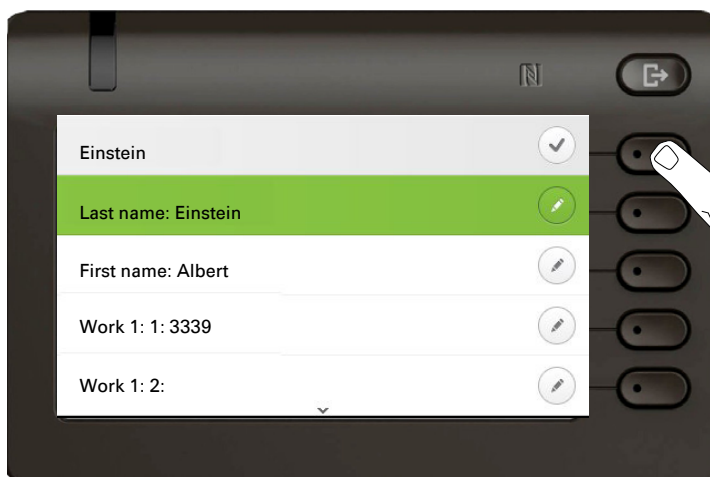




Save the contact data. You can add missing entries subsequently.


These inputs or changes to existing information are stored locally in the phone.

## Create a new contact/conversation from scratch

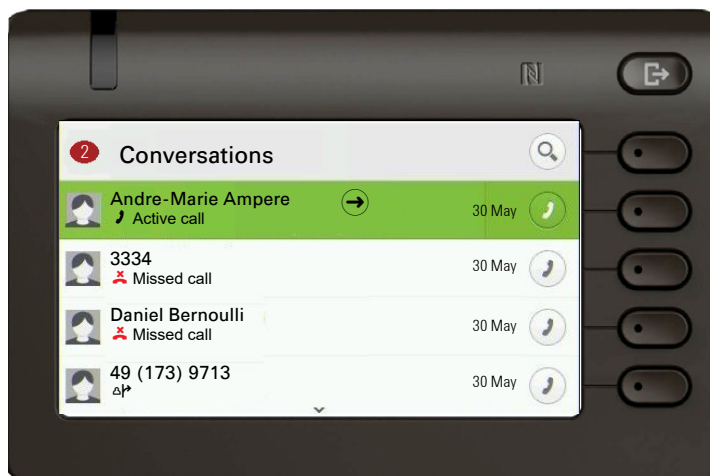
You can create a new contact from the conversation list with no previous history. Navigate to the Conversations screen which can be found at the idle screen.



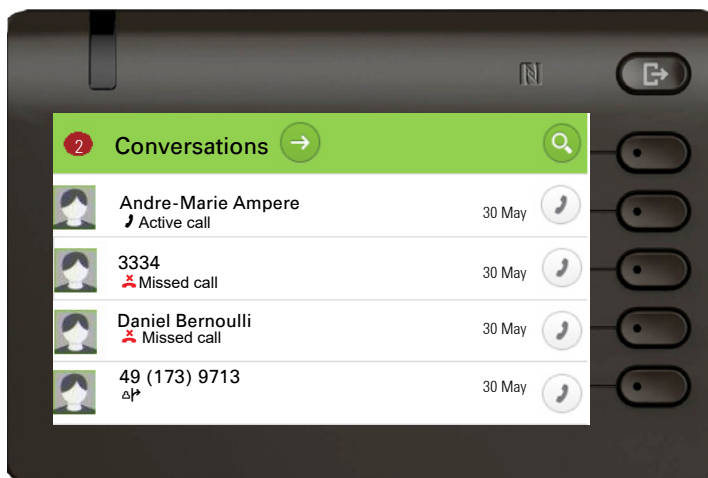


Select the header row of the Conversation list by using the  key and then the Navigator key  can be used to access the Conversation List options.

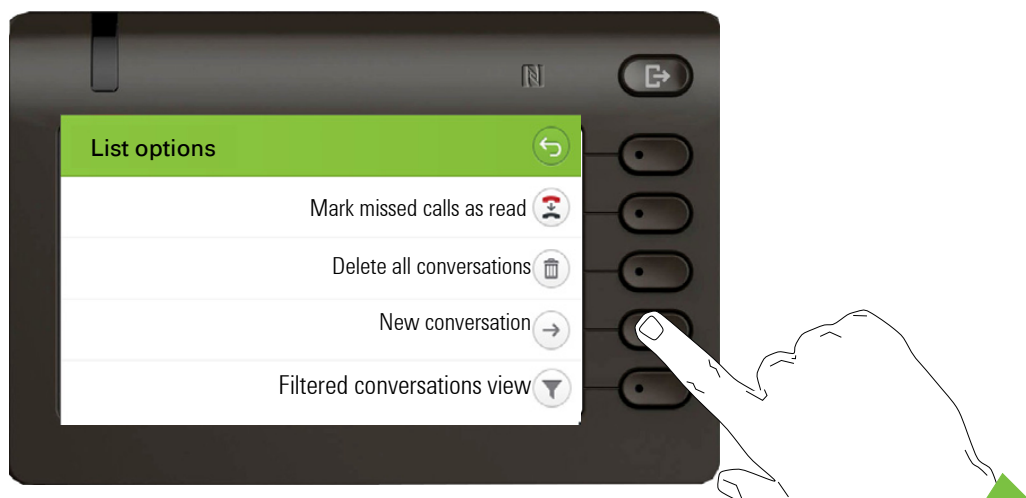

In the List options menu choose the option New conversation.



New contact form can be now updated. Use the  or  key to switch, for example, to "First name" and enter the first name here if appropriate. Save the contact data after entering the contact information.

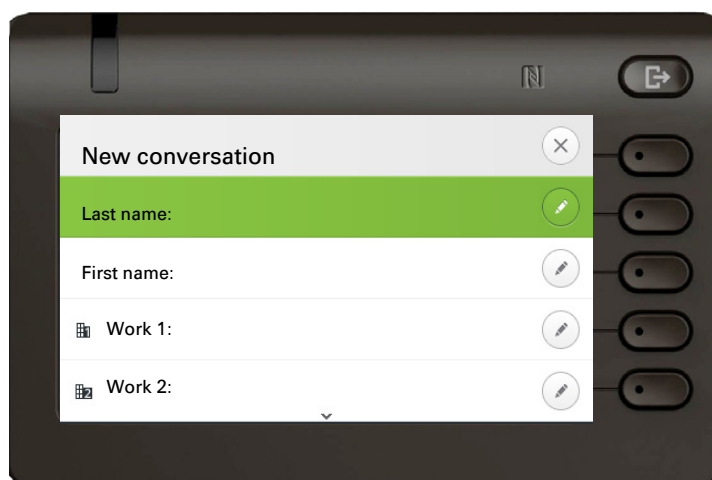

## Searching for conversations or contacts


There are several ways to search for conversations or contacts. If you know the telephone number, you can,


lift the handset or

press the speaker key or


press the headset key



and begin entering the digits.

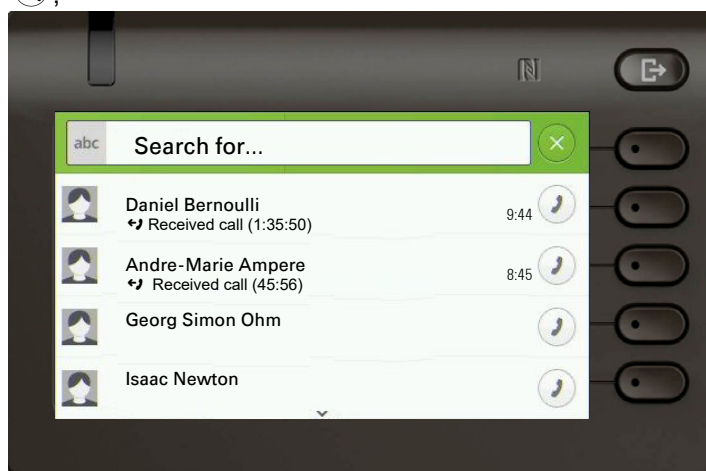To search in your conversations list, open an alphanumeric input field by pressing the Softkey for ,

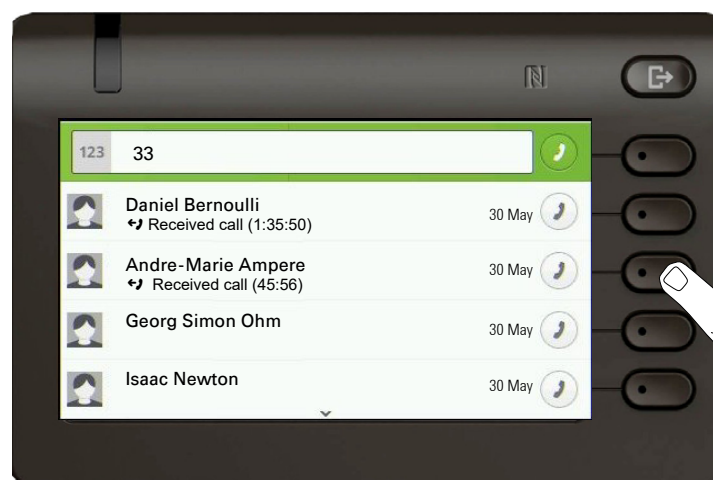

or choose a purely numeric input field for the search by entering a digit.




Use the  key to switch from numeric to alphanumeric input when you have opened the search field with the Softkey . You can immediately dial a located subscriber whose phone number contains the number 33 in this case, for example, by pressing the Softkey.

### Search for names (alphanumeric search string)

- **LDAP was not configured by your administrator:**

The phone now searches in the local conversation list for 'Am' and thus finds all the conversations that contain the name 'am', for example 'Ampere' or even 'Samara'.


The hits are listed chronologically.

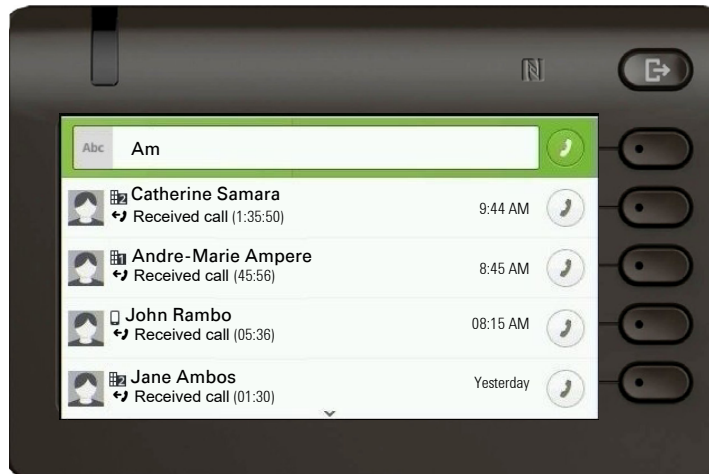

- **LDAP was configured by your administrator:**

If LDAP is additionally configured, in the standard case the search is for 'Am' in the last name in the LDAP. Here the phone finds all entries with 'Am' on the front, e.g. 'Ampere', 'Ambos', not 'Samara'.

The results from LDAP are shown after the local conversation matches and are sorted by first name in the local conversations list.

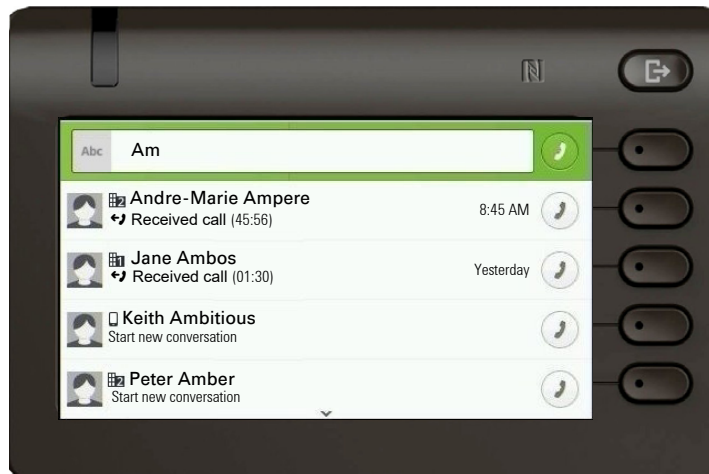

## Using special characters to control the search

Additionally, you can use comma (,) and a hash (#) to control the search.

A single comma (,) is used to separate the last name from the first name. A hash (#) is used to indicate that we are looking for an exact match.

When you want to use a comma (,) or a hash (#) as part of the search input text, you have to use a double comma (,,) or a double hash (##).

### Examples:

Search input	Functionality
AMBER	Matches any entries where the last name starts with "amber"
AMBER,	Matches any entries where the last name is exactly "amber"
AMBER,,	Matches any entries where the last name starts with "amber,"
AMBER, P	Matches any entries where the last name is exactly "amber" and the first name starts with "p".
AMBER,, PETER	Matches any entries where the last name starts with "amber, peter". The double comma is used to indicate that the comma character is part of the search input text.
AMBER, P,	Matches any entries where the last name is exactly "amber" and the first name starts with "p," (i.e. the 2nd comma is part of the search).
AMBER, PETER#	Matches only entries where the last name is exactly "amber" and the first name is exactly "peter".
AMBER P	Matches any entries where the last name starts with "amber p".
AMBER P#	Matches any entries where the last name is exactly "amber p".
AMBER P#A	Matches any entries where the last name is exactly "amber p". The "a" following the hash is ignored.
AMBER, PETER##2	Matches only entries where the last name is exactly "amber" and the first name starts with "peter#2". The double hash is used to indicate that the hash character is part of the search input text.

## Order of conversations

On entry into search mode, the local conversations are ordered by their time stamp, i.e. most recent ones are displayed first.

Upon entering a search criteria, the local conversations are listed first and ordered by their time stamp, the most recent ones are displayed first.

The LDAP results are listed after local conversations and are ordered alphabetically A to Z according to their Conversation name.

"Alphabetical order" means A-Z order based on the first character in the name/names/topic of the conversation/contact. In the case of people's names, the order is based on the first character of the first name and/or last name as displayed in the conversation list.

## Filtering conversations


When you want to filter conversations, it is possible to do so from the List options screen. Initially, the filter is non-applied, which means it is set to "Show all calls (All)" and will display all conversation list entries of any call type.

Use the "Filter" action on top shortcut key. This key is used to switch between conversation types.

Pressing the top key will display a filtering tooltip box that shows possible call records and types:

- All - all conversation list entries of any call type
- Missed - list of all missed calls
- Received - list of all received and forwarded calls
- Dialed - list of all dialed calls
- Contacts - contacts with no associated call records
- Other calls - active call, voice mails and ignored pickup

After selecting filter, header should be changed according to selecting.

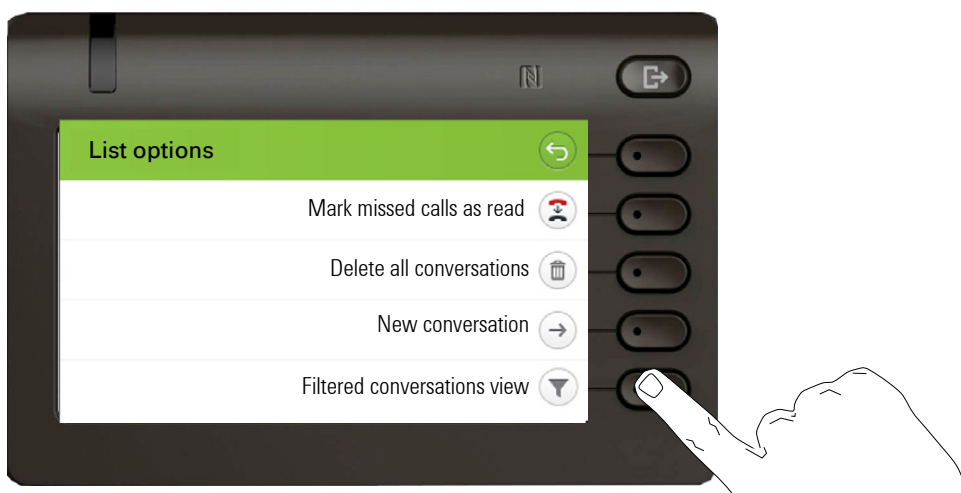







## Display the history of a conversation

The current history of a conversation is shown directly in the conversation list. The histories of other calls can be viewed under Details or also directly with the History option during a call.

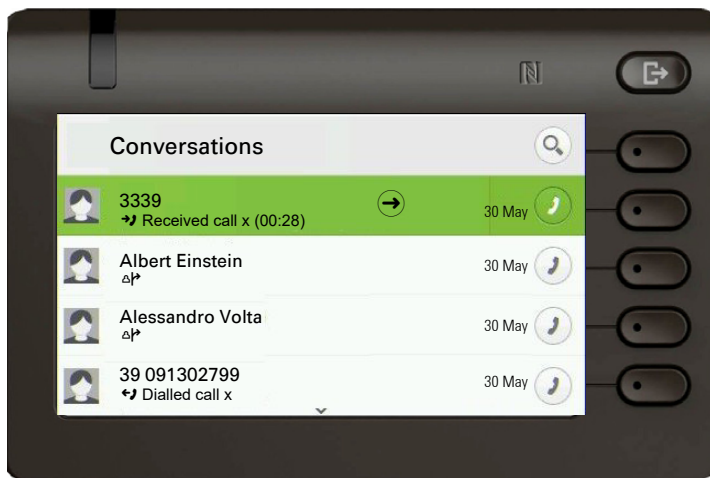



Select a conversation and open the details of this conversation using the key.

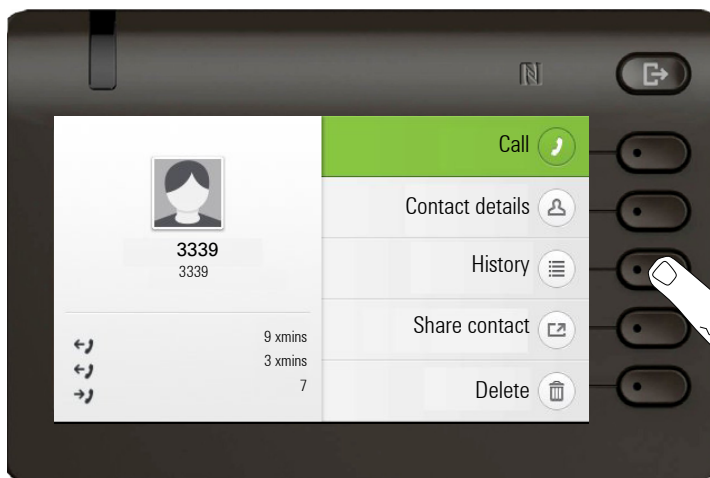


The latest three histories are shown in the information field on the left below the name/number of the subscriber. Press the Softkey for to view a list of the last 10 possible histories. Then scroll if necessary using the or key.

The toggle icon at the end of the main line indicates that there is an extra line to display. To access the extra line, highlight the main line and press the Softkey next to it.

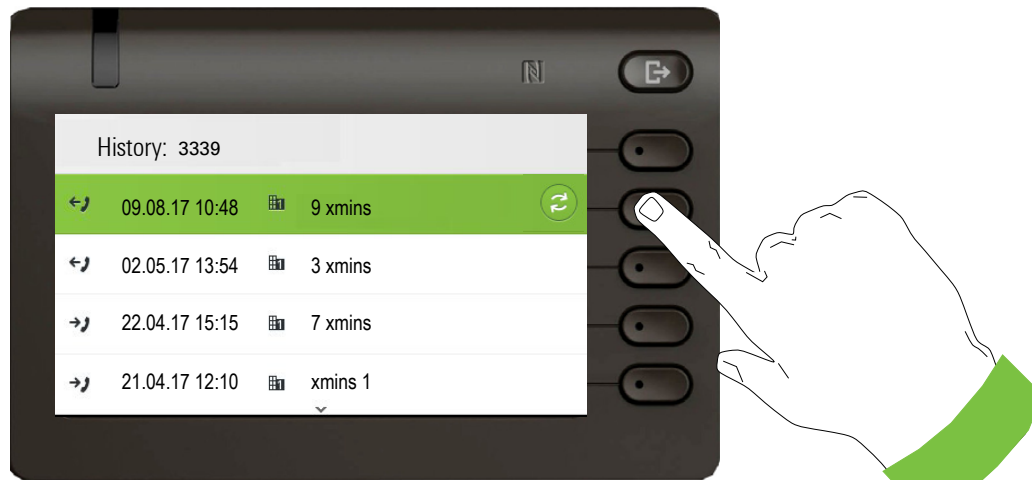



The extra line is highlighted and shows the Forwarding party number in the configured format next to the  icon.

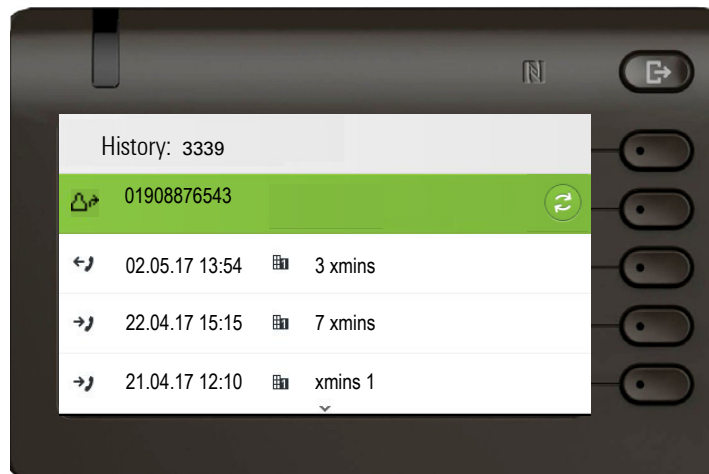



## Deleting conversations

If you have for example selected a subscriber mistakenly and you do not wish to call them and must hang up, this call will appear in your call history. You can delete this entry again immediately. Entries for incoming calls that you no longer need or entries from V-Cards can also be removed from the list.

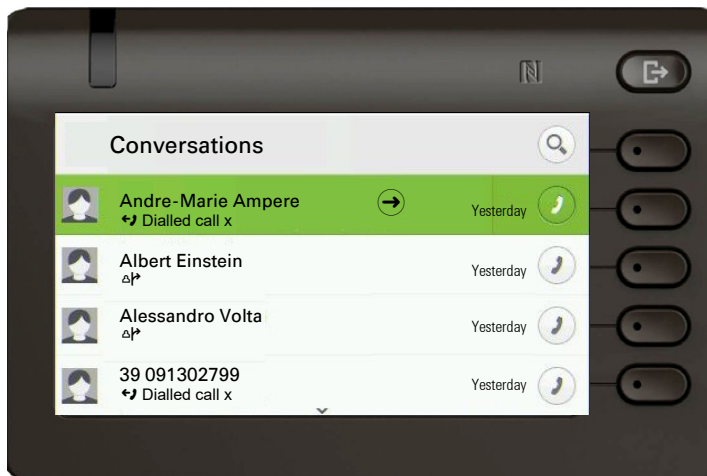

Open the relevant entry using the Navigator key .

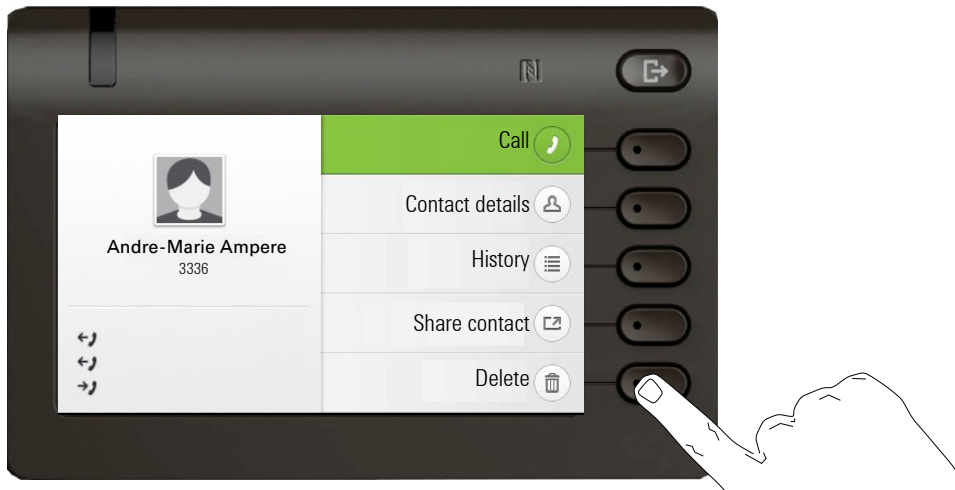

Press the Softkey for  to delete the entry. There is no confirmation prompt.

## Telephony interface

### Telephony view

#### Incoming call


Your phone rings and the notification LED flashes. In addition to the "classic" telephone features, additional information and functions are offered on the display:




#### Incoming call in multicall scenarios

It is possible to have many incoming calls at the same time. The notification LED flashes and an Alerting screen will be shown for each call, based on their signalled priority. The Alerting screen is self-dismissed within 15 seconds unless another call appears; in this case the current Alerting screen is dismissed and replaced by the Alerting screen of the new call.

➡ The Alerting screen is never shown twice for the same call or while you are in the Conversations screen.

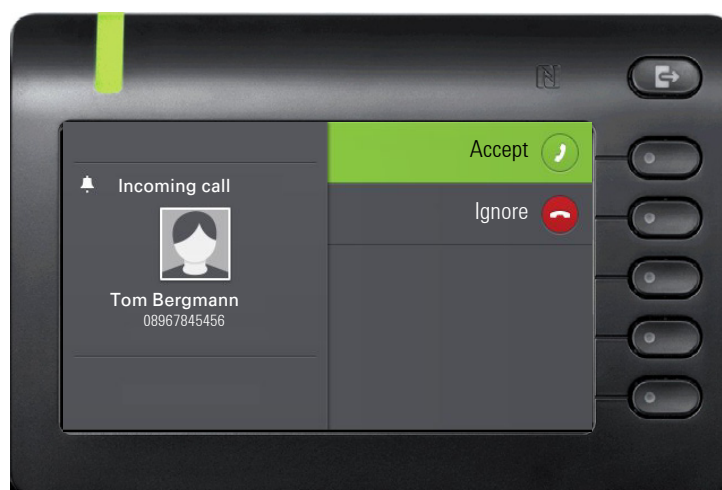


If accepted, the call is shown on Connected call screen.

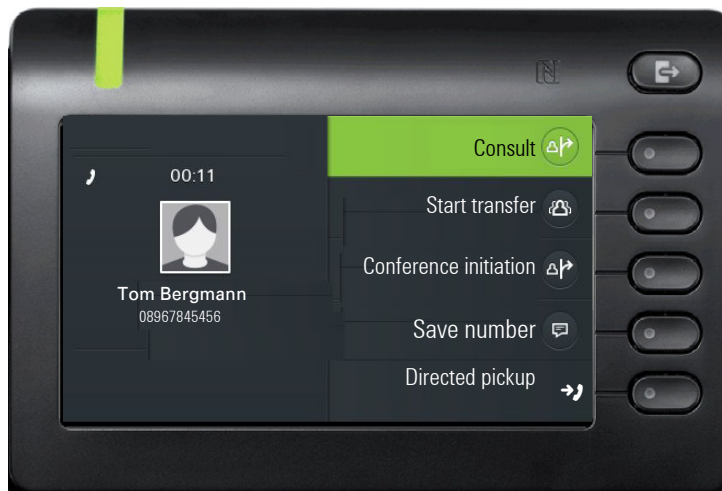

All other incoming calls including the one presented on Incoming call screen are available only in Conversations.

If the Alerting screen is ignored, phone returns to the currently active call or shows another incoming call screen. You can still answer an ignored call waiting call either when the ongoing call ends or by selecting the ignored call waiting from the list.

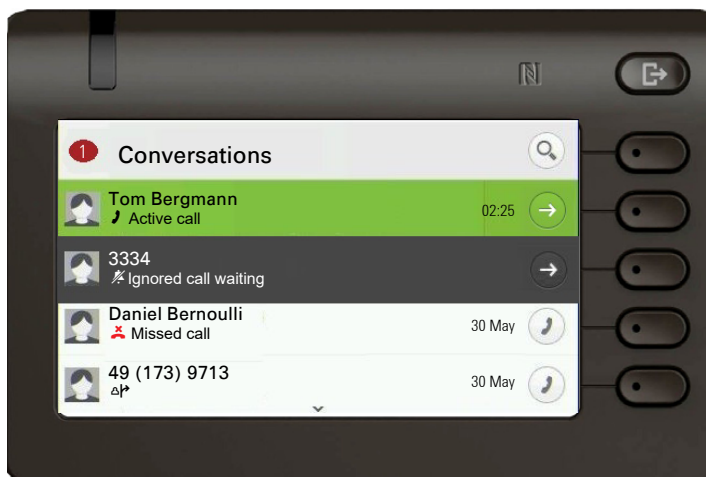


Call handling is very limited in case phone is locked. The Conversation screen is not accessible and there is no Alerting screen. Only incoming call with high priority is shown on Incoming call screen. When another call is signalled, and priority indicator changes, incoming call screen switches to the actual high priority call.

When conducting a call:



### Switching to a different menu during a call







Use the  to open the main menu and from there, for example, change the Brightness of the display in the Settings.



Selecting the first softkey will take you back to the previous display.

### Icons in call state





Icon	Meaning
	The phone rings
	After dialing, the other subscriber's phone rings
	The call is active.
	Your call partner has placed the call on hold.
	The voice connection is secure.
	The voice connection is not secure.



## Presence

If the access is configured as UC user on your phone (ask administrator) and you are logged on to this server, you will see for example in the top left in the Notification area Presence your status symbol.

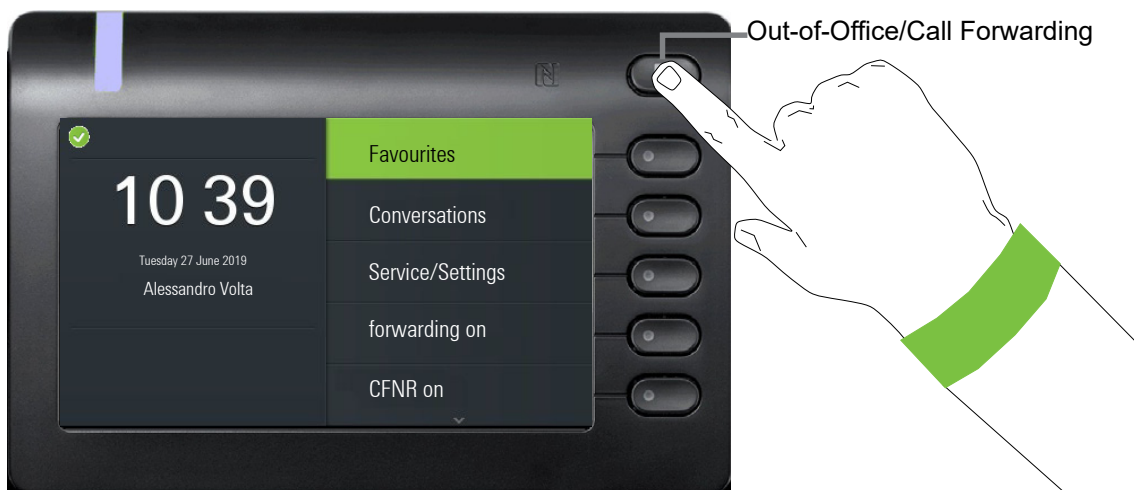









To access the "Presence" menu, press the Out-of-Office/Call Forwarding  key via the Soft-keys. then you will see the following menu:



The OpenScape UC Presence state can be changed from the OpenScape UC web client. Various state can be selected from a drop down menu.

The available OpenScape UC Presence state will be shown as following:

-  Available
-  Unavailable
-  Busy
-  Do not disturb
-  Be right back
-  In Meeting
-  Offline
-  Away

If UC is not set up, you get a menu for variable call forwarding with the options:

Variable: All calls

Variable: External calls

Variable: Internal calls.



## Programmable keys

Programmable keys are available to you in the Favourites menu or on an optionally connected OpenScape Key Module 600 → page 53.


### Programmable keys in the Favourites menu

Through the Favourites menu you have 16 programmable keys (four pages each with four keys), to which you can save functions and phone numbers. You can program preferred functions that are not offered in menus. It makes sense to assign a key to "Speaker call". To program this key, follow these steps:



Open the following menu using the Softkey for Favourites:



Press the Softkey for  to set up the first page with four possibilities.




Press the second Softkey to populate the first of four function keys on page 1.



Press the second Softkey to switch to the list of functions.



Select "Change" and confirm with the Softkey.

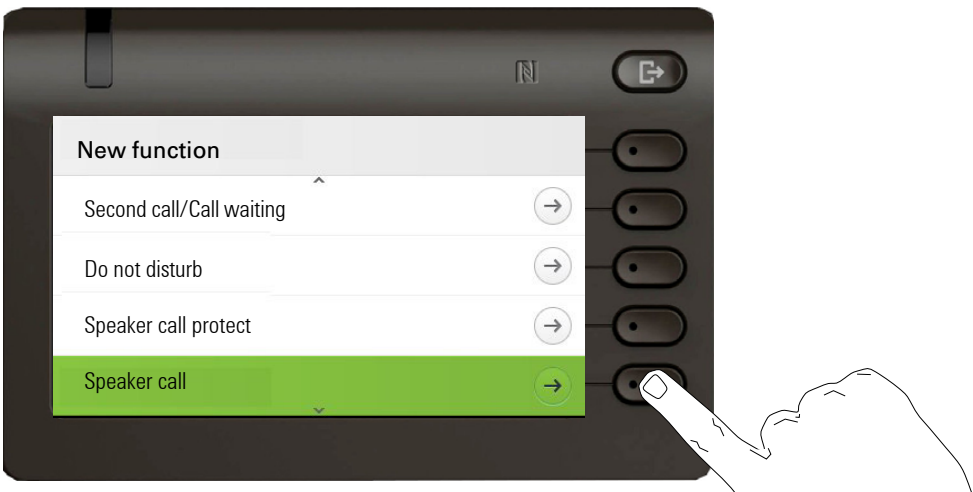

Select the desired function via the softkey and confirm.

### Programmable keys on the OpenScape Key Module 600

The OpenScape Key Module 600 has 12 keys to which you can assign functions or numbers at two levels. Use the and keys to switch to the required level when using a function or selected dialing key.

Increase the number of programmable function or selected dialing keys by connecting an additional key module → page 18.

The OpenScape Key Module 600 has display lines, each of which is assigned to a key. The name of the function or a destination, an action icon, and a status icon are displayed.

The status of a function is shown by the LED display for the corresponding key.


Line and direct station selection (DSS) keys can only be programmed by the administrator via the Service menu → page 63.

### Meaning of LED displays on Feature keys


Status LED		Meaning of Function key
	Off	The function is deactivated.
	LED is flashing <sup>1</sup>	Indicates the status of the function (e.g. green or red).

<sup>1</sup> In this manual, flashing key LEDs are identified by this icon, regardless of the flashing interval. The flashing interval represents different statuses, which are described in detail in the corresponding sections of the manual.

## Display function of the function keys

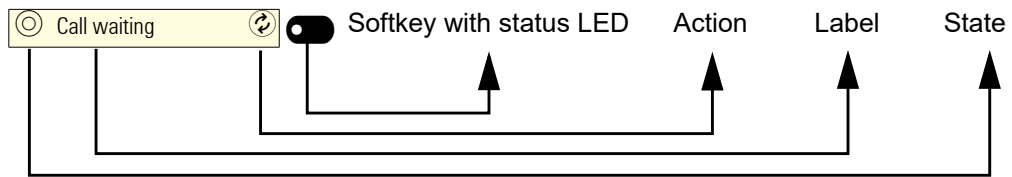

## User settings

Use the  key to open the main menu and then switch to the settings.



The menu consists of a configuration area both for users and for administrators.




If you have already assigned a user password, you must enter it here. You can find out how to set up the password at → page 182.

## User settings

### Menu

You can adjust local settings for your OpenScape Desk Phone CP600/CP600E using the "User settings" menu.

The menu structure consists of several levels.

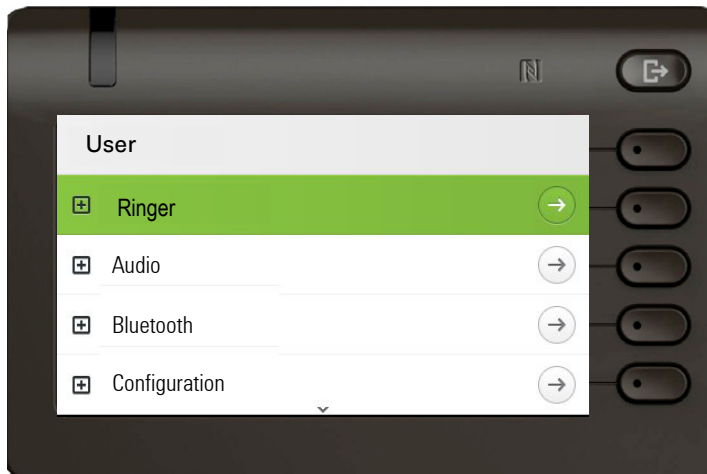

➡ You can also configure all settings via the **Web interface** of your OpenScape Desk Phone CP600/CP600E → page 200.

### Switches

The menus contain switches for activating and deactivating functions. Example:



Press the Softkey on "Insecure call alert" to enable the function. The switch is moved to the right. Alternatively you can use **OK** to operate the switches.





Press the Softkey for ✓ to save your new setting.

### Parameters

You can set values in some submenus.



Press the Softkey for 🖋 to open the setting.



Press the Softkey for example on Echoing. The setting is changed and you return to the previous menu.




Exit the menu.

### Levels

You can use menus with levels to adjust the volume or brightness, for example. An example of display brightness is given here. Switch to the telephone settings menu




and open the display menu with the Softkey.

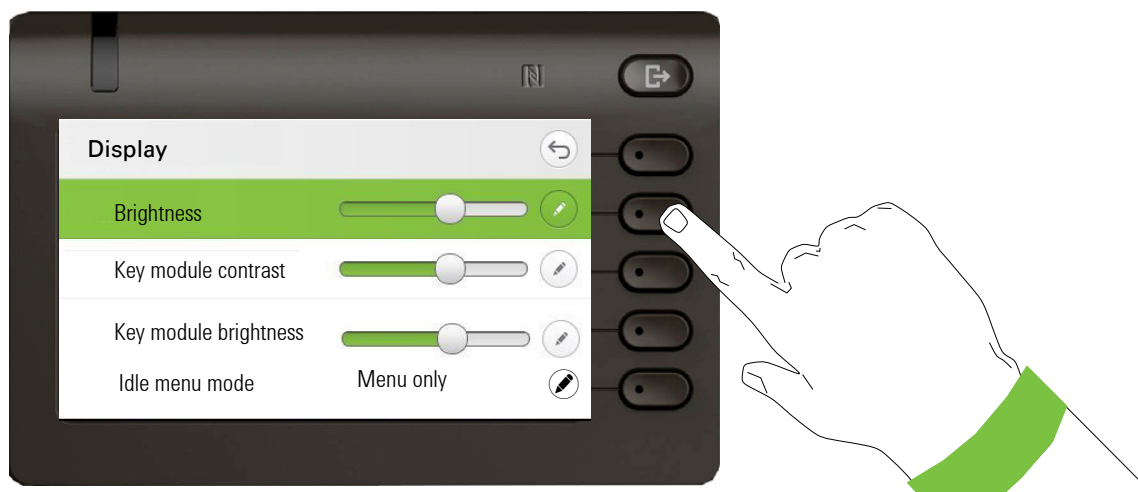

 
Open the menu for the brightness setting



Adjust the brightness to the desired level. Use the  key to do this. The display is adjusted immediately.




Complete the setting by pressing the Softkey for .

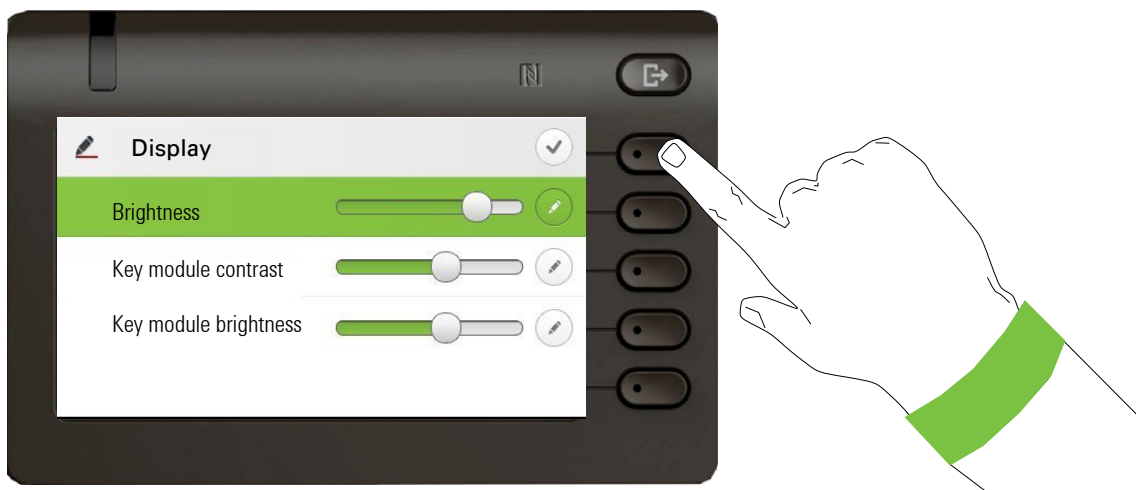

Save your new settings.

## Enabling FPK screen

In order to access the FPK screen/menu you need to enable it via the **Settings** section.

Use the  key to open the main menu and then switch to the settings.



Select **Users** and then select **Phone**







and open the display menu with the Softkey.



Open the menu for the Idle mode settings.

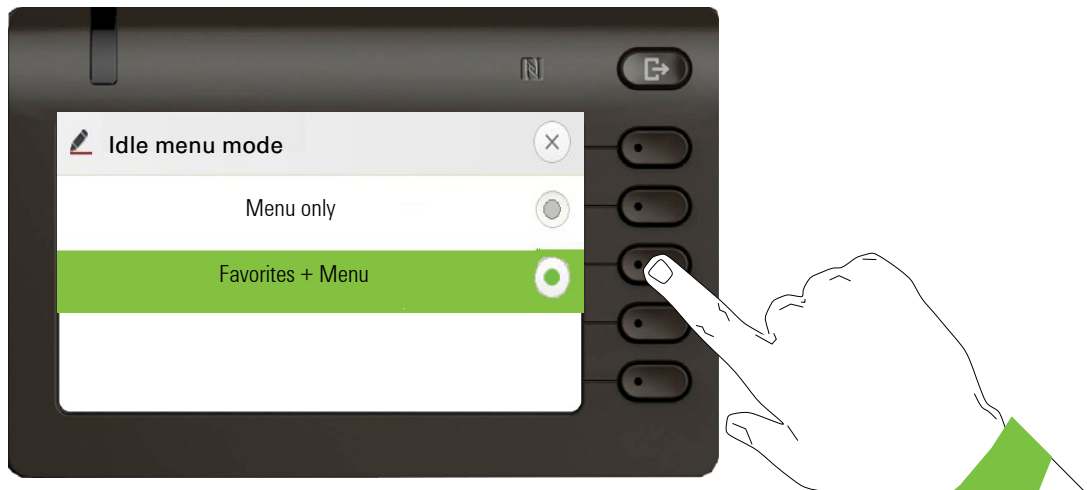

Select the **Favorites + Menu** option using the Softkey, to switch your Idle screen to FPK screen and then use the Softkey again to press **Save**.

Once you have enabled the FPK screen/menu, you can switch between the original Idle menu and the FPK menu, using the  key. You can always change the Idle menu settings by following the steps above.

## Administration

You can access the administration area via the "Admin" function and by entering the administration password.

Refer to the administration manual for your phone for more detailed information on this topic.




During a software update, the phone must not be disconnected from the power supply unit, the LAN line or the phone line.

An update action is indicated by messages on the display and/or by flashing LEDs.

## DLS Security Pin

Since your administrator has configured a DLS secure pin, the following pop up screen appears on your device. Enter the pin that the administrator has given to you.

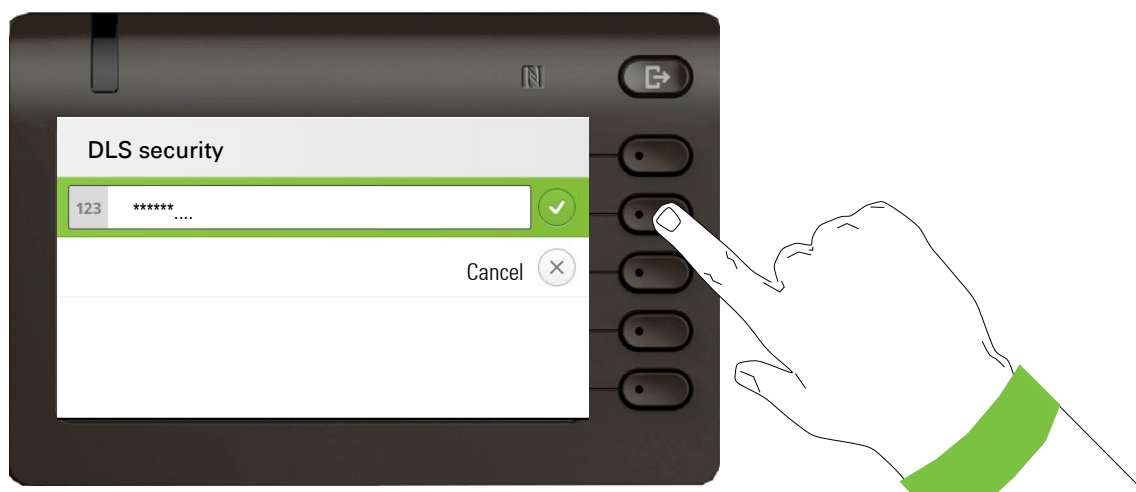

# Setting up the phone

## Display

### Display adjustment

You can tilt the display unit. Adjust the display unit so that you can clearly read the screen.

### Display brightness

You can customize the display brightness according to your current lighting conditions.

You can also configure this setting via the Web interface → page 200.

If nec. Press the Main Menu key.

Open using the Softkey

Select "Users."

Open using the Softkey

if nec.  Enter and confirm the User password.

Select "Phone."

Open using the Softkey.

Open using the Softkey.

Open using the Softkey.<sup>1</sup>

Use the Softkey to brighten the display.

or

Use the Softkey to dim the display


or

Adjust using the toggle key

Confirm the setting with the Softkey.

Save the settings.

1. The display shows the current setting

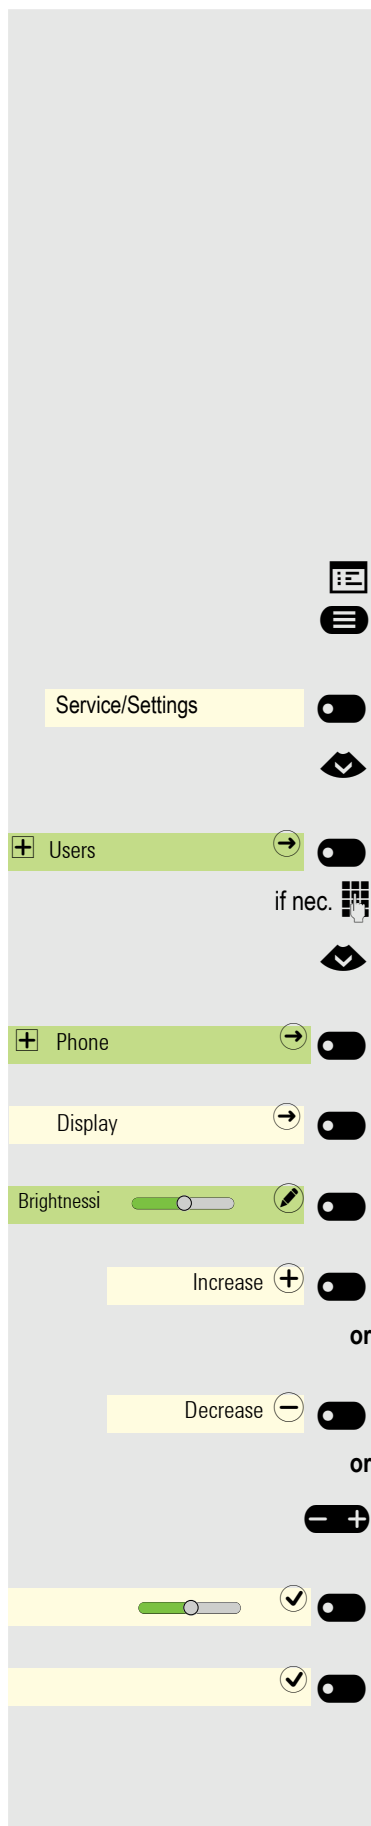



## Energy saving mode

Select the inactivity time after which the OpenScape CP 600/600E should automatically dim or turn off the backlight.

You can select the following time combinations for backlight dim / switch off:

- 1 minute/5 minutes
- 5 minutes/20 minutes
- 30 minutes/2 hours
- 45 minutes/4 hours
- 60 minutes/8 hours

You can also configure this setting via the Web interface → page 200.

If nec. Press the Main Menu key.

Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Select "Phone".

Open using the Softkey.

Open using the Softkey.

Open using the Softkey.<sup>1</sup>

Select the new time in the list

Using the Softkey, confirm the new background lighting settings.

Save the setting with the Softkey.

1. The display shows the current setting

## Contrast for the OpenScape Key Module 600E

If you have connected an OpenScape Key Module 600E, you can adjust the key label contrast to suit your ambient lighting.

You can also configure this setting via the Web interface → page 200.

If nec. Press the Main Menu key.

Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Select "Phone".

Open using the Softkey.

Open using the Softkey.

Open using the Softkey.<sup>1</sup>

Use the Softkey to increase the contrast.

or

Use the Softkey to reduce the contrast.

or

Adjust using the toggle key

Confirm the setting with the Softkey.

Save the settings.

1. The display shows the current setting

## Brightness for the OpenScape Key Module 600E

When you have connected a OpenScape Key Module 600E, you can adjust the key label brightness to suit your ambient lighting.

You can also configure this setting via the Web interface → page 200

If nec. Press the Main Menu key.

Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Select "Phone".

Open using the Softkey.

Open using the Softkey.

Open using the Softkey.<sup>1</sup>

Use the Softkey to brighten the display.

or

Use the Softkey to dim the display.


or

Adjust using the toggle key

Confirm the setting with the Softkey.

Save the settings.

1. The display shows the current setting

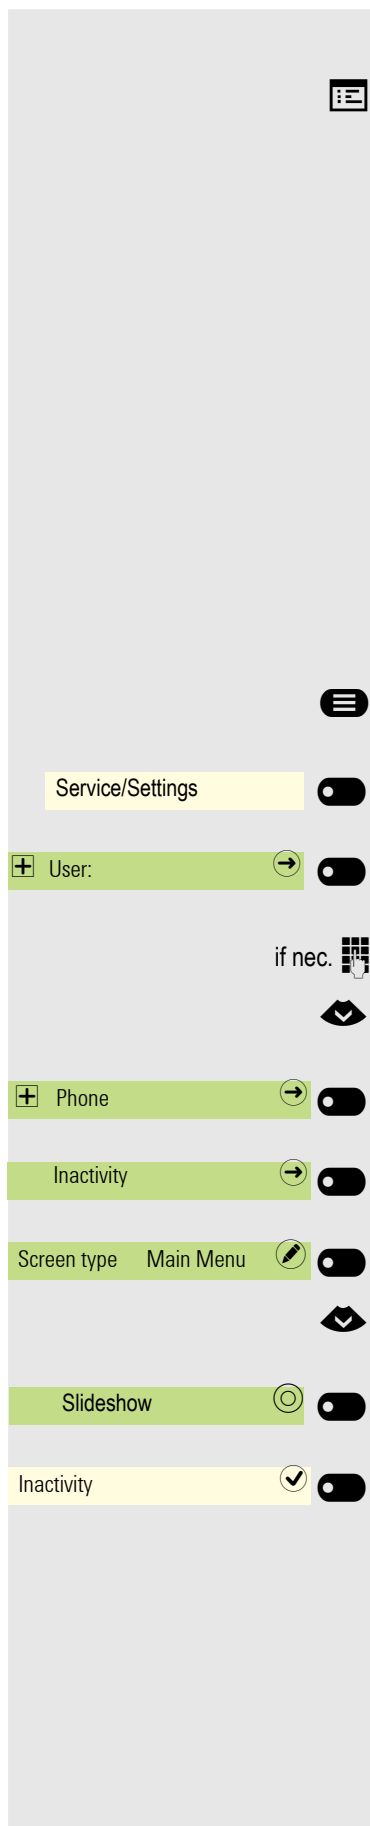

## Inactivity

You can also configure the screensaver settings via the Web interface. → page 200

## Upload your images for Inactivity

To install your own images for Inactivity, transfer the images using the Web interface → page 200.

Once you have opened the web interface click "File transfer" and "Slideshow images," then click "Choose the image file you wish."

Search for suitable images on your computer or in the network and save your search results. You can upload several images in succession.

Your new images will be used next time you start the Inactivity.

## Screen type set-up for the Inactivity

If nec. Press the Main Menu key.

Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Select "Phone".

Open using the Softkey.

Open using the Softkey.

Open using the Softkey.<sup>1</sup>

Select other option

Confirm using the Softkey to set up a slide show, for example.

Save the setting by selecting the Softkey.


1. The display shows the current setting

## Automatic start of the Inactivity

Select how long OpenScape CP 600/600E should be idle before the Inactivity screensaver automatically activates.

You can choose from the following settings:

- 0 minutes (deactivated)
- 5 minutes
- 10 minutes
- 20 minutes
- 30 minutes
- 60 minutes
- 120 minutes

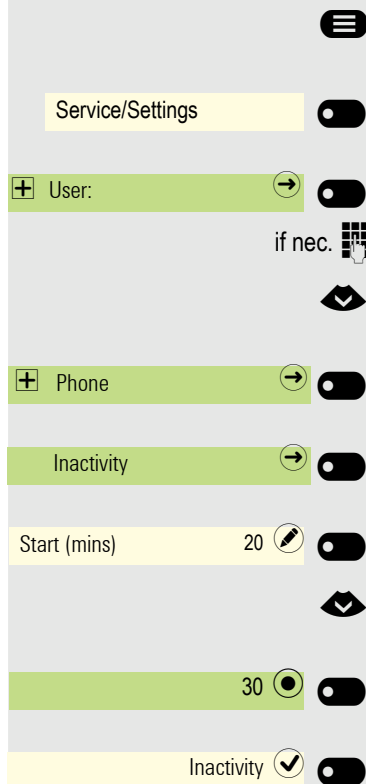

If nec. Press the Main Menu key.

Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Select "Phone".

Open using the Softkey.

Open using the Softkey.

Open using the Softkey.<sup>1</sup>

Select the new time in the list

Confirm with the Softkey to set the new time.


Save the setting with the Softkey.

1. The display shows the current setting

## Set up display time for Inactivity

Set the intervals at which the Inactivity images change here.  
The following fade times are possible:

- 5 seconds
- 10 seconds
- 20 seconds
- 30 seconds
- 60 seconds

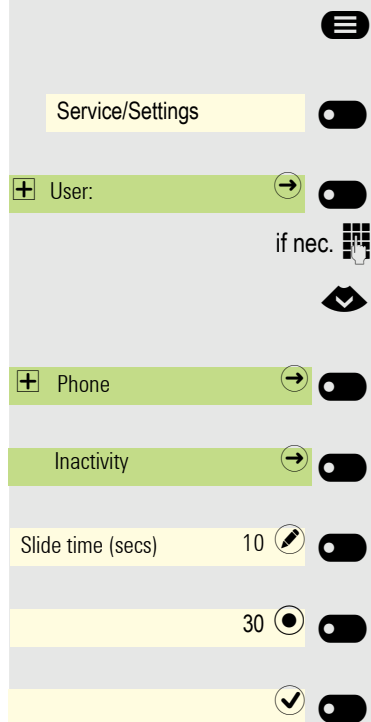

If nec. Press the Main Menu key.

Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Select "Phone".

Open using the Softkey.

Open using the Softkey.

Open using the Softkey.<sup>1</sup>

Confirm with the Softkey to set the new time.

Save the setting with the Softkey.


1. The display shows the current setting

## Customizing inactive screensaver display

You can customize the aspect ratio of the screensaver slideshow images to display them according to your preferences.

### Prerequisites:

- Your administrator has uploaded images to the OpenScape CP 600/600E or you have uploaded your own images.
- Screen type "Slideshow" is selected. If not selected, the "Slideshow format" drop down menu is disabled.

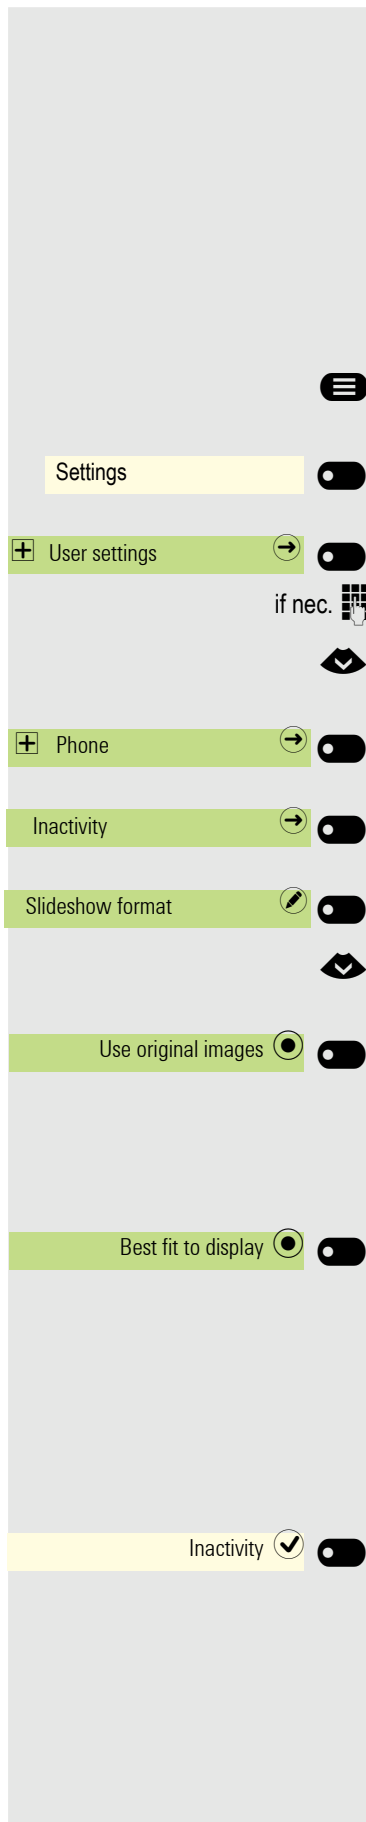

Press the key for the Main menu if appropriate.

Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Select "Phone".

Open using the Softkey.

Open using the Softkey.

Open using the Softkey.

Select the preferred option:

Confirm with the Softkey to display the image in its full size.

The slideshow image is centered on the available screen resolution, and any empty spaces are filled with black.

or

Confirm with the Softkey to resize the uploaded images to fill all available screen area when displayed.

- If the original image aspect ratio is smaller than the phone aspect ratio, the image will be resized to fit its width into phone's available area width, using the center part. Any excessive parts at the top and bottom will not be used.
- If the original image aspect ratio is larger than the phone aspect ratio, the image will be resized to fit its height into phone's available area height, using the center part. Excessive parts at the left and right will not be used.

Save the setting with the Softkey.


## Audio
 
### Change connection volumes

Change the following settings:

- Handset volume
- Speaker volume
- Headset volume
- Call loudspeaker volume


You can also adjust volume settings from the user menu → page 56.



Set volume louder or quieter. Press the key until you reach the desired volume.

### Adjust ringer volume in call or while idle

 You can also adjust volume settings from the user menu → page 56.



Press the key until you reach the desired volume.



## Deactivate the ringer

If you do not want to be disturbed by the phone ringing for an incoming call, you can switch the ringer off.

### Deactivating



 
Hold down the key until the "ringer off" icon appears.



### Activating



Hold down the key until the "ringer off" icon goes out.



### Mute active ringer



You can mute the active ringer for an incoming call and only for that call. Long press the key while the phone is ringing and only the active ringer is muted. Ringer mode is not changed.

 
If you want to change the ringer mode, see the section "Deactivating" → page 75 and "Activating" → page 75.

## Activate alert tone

You can turn the ringer off and select a short alert tone instead.



Hold down the key until the notification and icon for "Activate alert tone" appears on the display.



## Room acoustic

To ensure that the other party can hear you properly in speakerphone mode, you can adjust the phone to the room acoustics by choosing one of the following room character conditions:

- Normal
- Echoing
- Muffled

You can also configure this setting via the Web interface → page 200.

If nec. Press the Main Menu key.

Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.


Open using the Softkey.

Open using the Softkey.


Open using the Softkey.<sup>1</sup>

Use the Softkey to set to Muffled, for example.

Save the setting by selecting the Softkey.

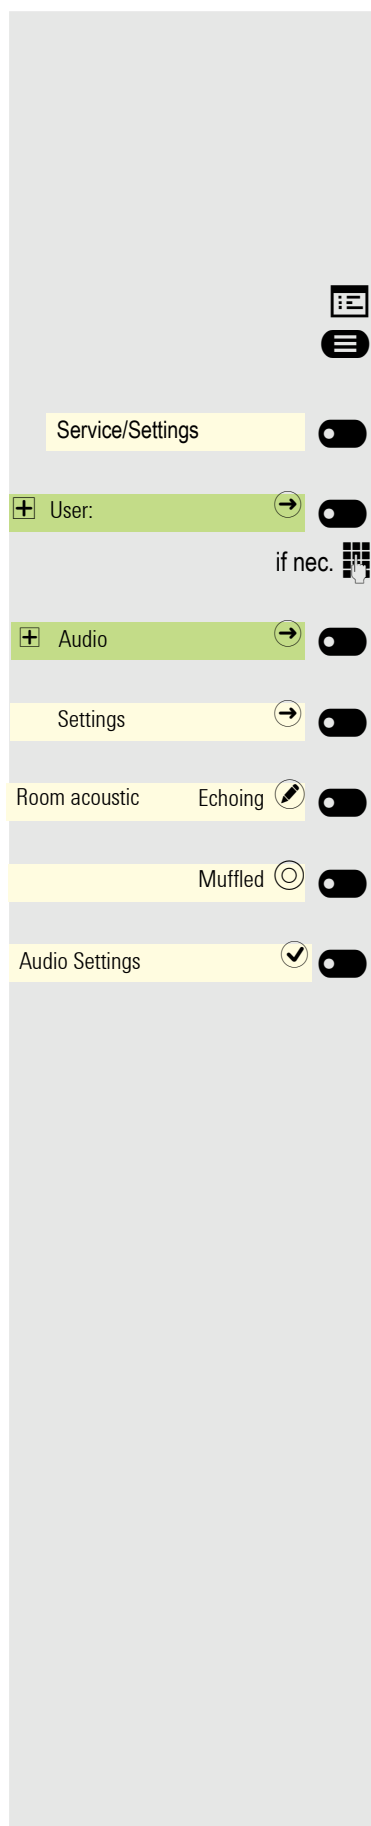

1. The display shows the current setting

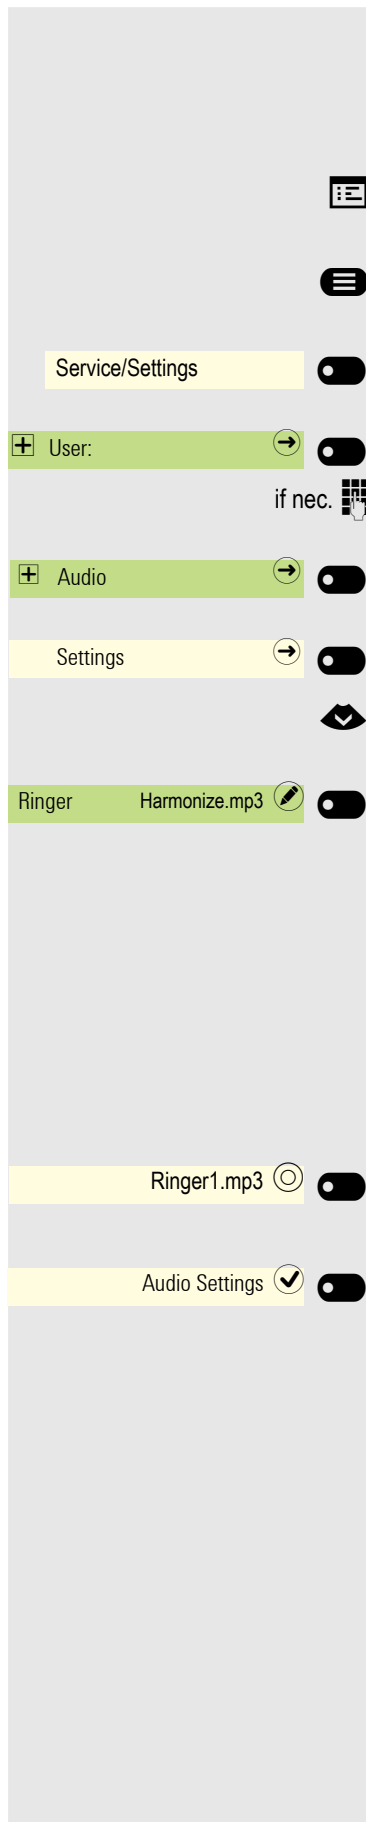

## Ringer

Select your preferred ring tone from the available audio files. If no individual audio files are available, the "Pattern" ring tone is preset. To upload your own files in ".mp3" or ".wav" format, please consult your administrator.

You can also configure this setting via the Web interface → page 200.

If nec. Press the Main Menu key.

Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Open using the Softkey.

Open using the Softkey.

Switch to Ringtone.

Open using the Softkey.<sup>1</sup>

You will be offered the following default options:

- Pattern
- Harmonize.mp3
- Ringer1.mp3
- Ringer2.mp3
- Ringer3.mp3
- Ringer4.mp3
- Ringer5.mp3
- Ringer6.mp3

Confirm with the Softkey to switch. You will immediately hear the associated ring melody.

Save the setting with the Softkey.

1. The display shows the current setting

## Setting headset port use

You can also configure this setting via the Web interface → page 200.

If nec. Press the Main Menu key.

Open using the Softkey.

Open using the Softkey

Enter and confirm the User password.

Open using the Softkey.

Open using the Softkey.

Select the headset port.


Open using the Softkey.<sup>1</sup>

You will be offered the following options:

- Wired headset
- Cordless headset
- Conference device

Confirm with the Softkey to switch.

Save the setting with the Softkey.

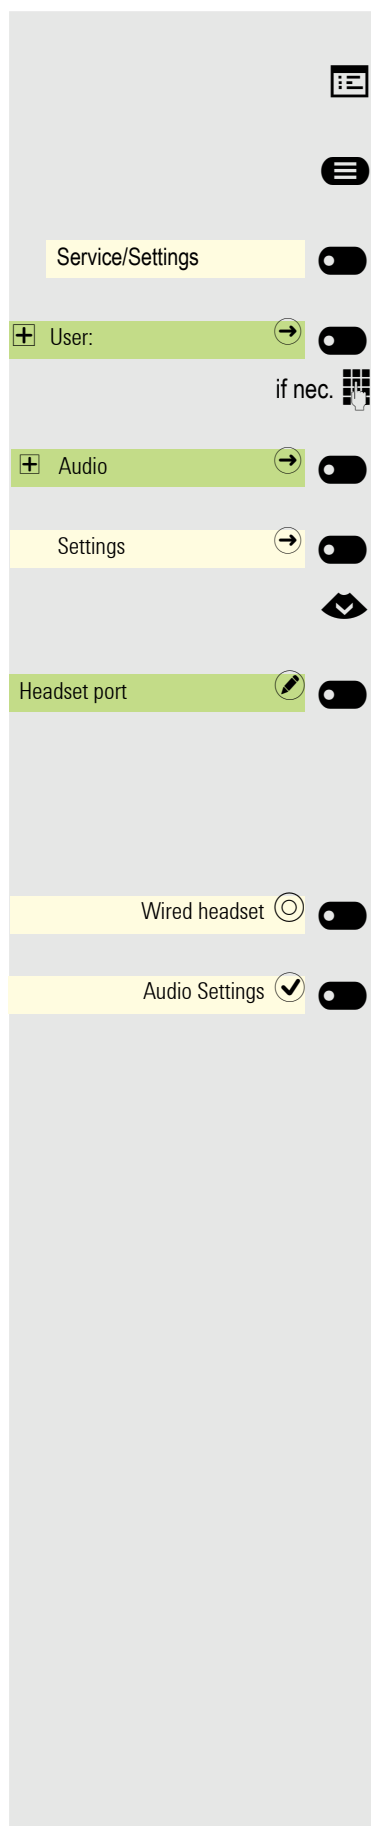

1. The display shows the current setting

## Call settings

### Activate/deactivate second call

You can determine whether or not you would like to accept second calls (call waiting) during a conversation.



If your telephone belongs to an ONS group (parallel calls → page 179), please note the following special features:

In addition to triggering an alert tone on the engaged telephone, the second call will also be signaled with a ring tone on the other telephones in the ONS group.



Switch?



Second call?



Turn on?



or

Turn off?



Open menu → page 19.

Select and confirm.

Select and confirm.

Select and confirm.

Select and confirm.

### Central speed dial numbers



Speed dial numbers are set up by your responsible administrator.

Speed dial numbers are stored in the system.

The central speed dial directory can be obtained, e.g. in printed format, from your responsible administrator.

## Speed dial with extension



Speed dial numbers with sequences are set up by your responsible administrator.

Functions including the dialing number and further access codes can be saved to a speed dial number.

Since the number of characters for a speed dial entry is limited, speed dial numbers (up to 10) can also be linked together in order to handle longer sequences.

Example:

When you leave the office, you want to block your telephone and simultaneously activate call forwarding. Both of these actions can be stored as a sequence using a speed dial number.

Likewise, in order to unlock the phone and cancel the call forwarding, a speed dial number can be stored.

## Individual speed dial numbers



This function must be set up by your responsible administrator.

The keys **0 +** to **9 wxyz** can be assigned to 10 frequently used phone numbers.

Open menu → page 19.

Confirm.

Select and confirm.

Press the required line key. When the relevant key is selected, the call number is displayed.

Confirm.

Enter the phone number.

Confirm.

Your entry is saved.

Use speed dial → page 95.



Destinations? ▼

Speed dial? ▲▼



New entry? ▼




Save? ▼

## OpenScape UC

The OpenScape UC can be configured in the Configuration menu. Open the OpenScape UC Settings and insert the required login information.

➡ The OpenScape UC can be also configured in WBM → page 200.

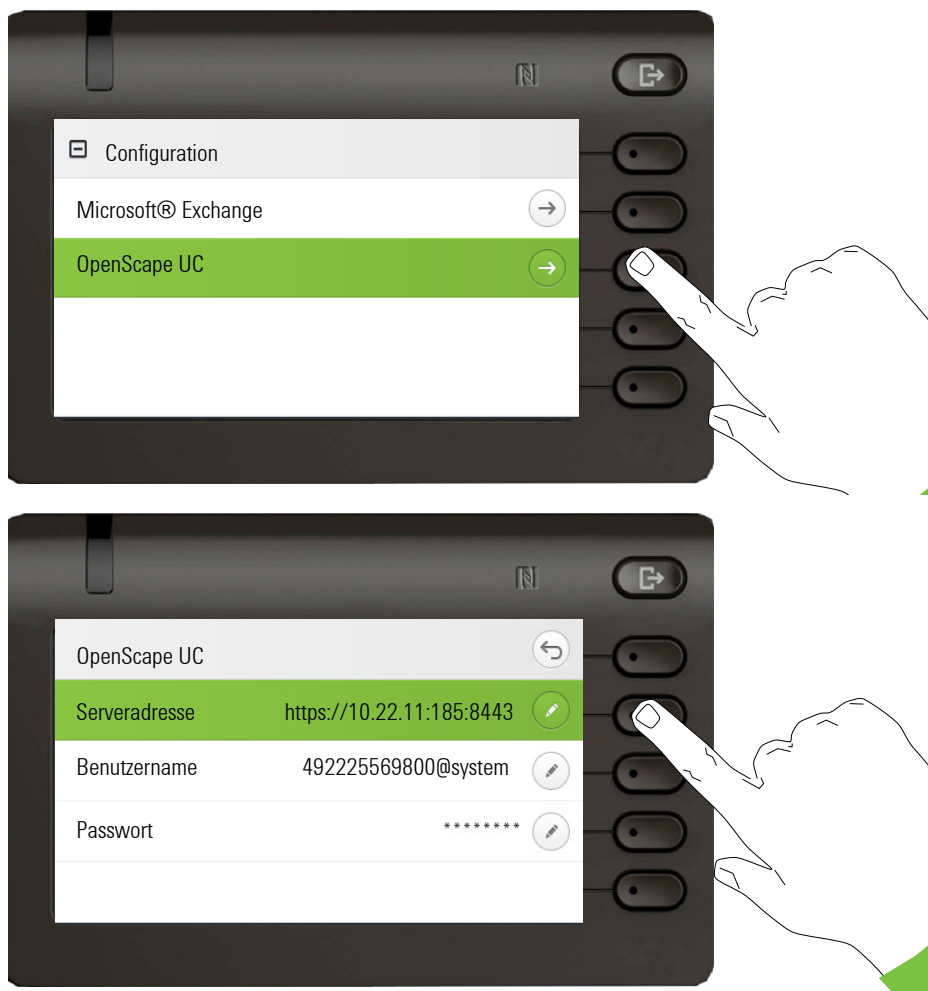

The OpenScape CP600/CP600E will login using the given user credentials. If the data is incomplete (missing server address, username or password) the phone will not try to login at all.




If you experience any difficulties with the OpenScape UC Configuration, please contact your administrator.

## Programming function keys

Through the Favorites menu, you have 16 programmable keys (four pages each with four keys), to which you can save functions and phone numbers. You can program preferred functions that are not offered in menus. It makes sense to first assign a key as a "Shift key" to reach the second level.

This functions in the same way as for the Key Module KM600.

## Function keys setup

 The selection of available functions depends on the configuration. Please ask your administrator if you are missing a function.

### Example: Configure a second call

Hold down the Function key on the OpenScape Key Module 600 to which a function is to be assigned until the programming prompt is displayed.

If nec. Press the Main Menu key.

Open using the Softkey.

Select desired page (1 to 4).

Press and hold the Function key to be programmed.

Select "Assign telephone function"

Confirm.


Confirm.

Select "Second call/Call waiting"

Confirm.

Confirm.

SaveThe key is programmed.

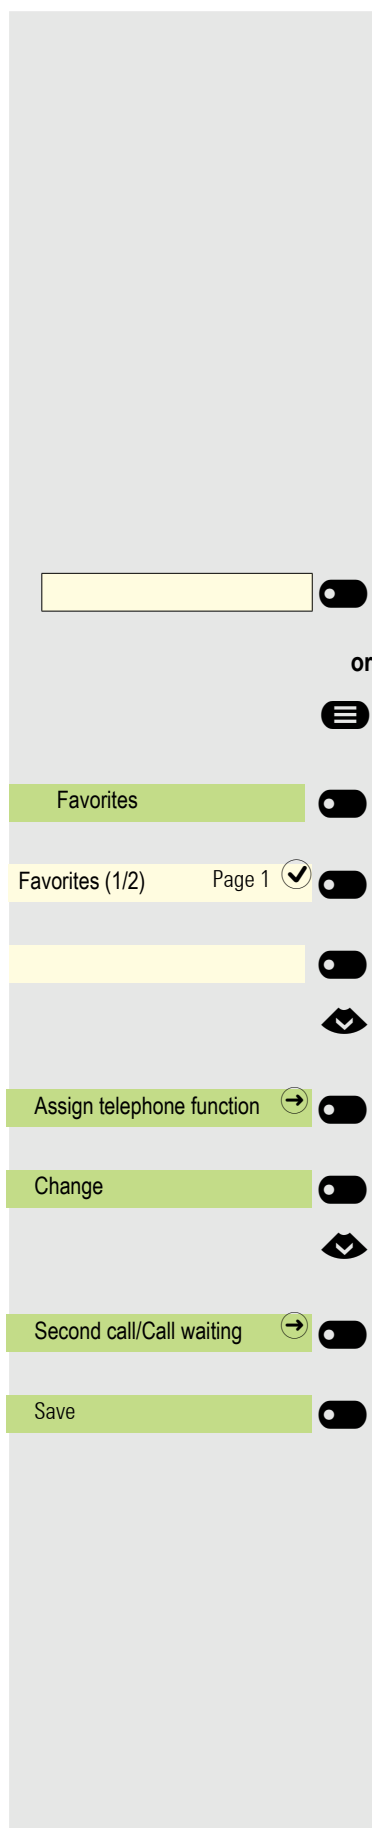



## Setting up a selected dialing key

If you want to set up a selected dialing key on the second level of the OpenScape Key Module 600, you can switch to this level beforehand.

Switch to the second level if necessary.

Hold down the Function key on the OpenScape Key Module 600 to which a function is to be assigned until the key programming menu is displayed.

If nec. Press the Main Menu key.

Open using the Softkey.

Select desired page (1 to 4).

Switch to the second level if necessary.


Press and hold the Function key to be programmed.

Confirm.

Confirm

Enter the phone number and confirm.


Save the setting with the Softkey. The key is programmed.

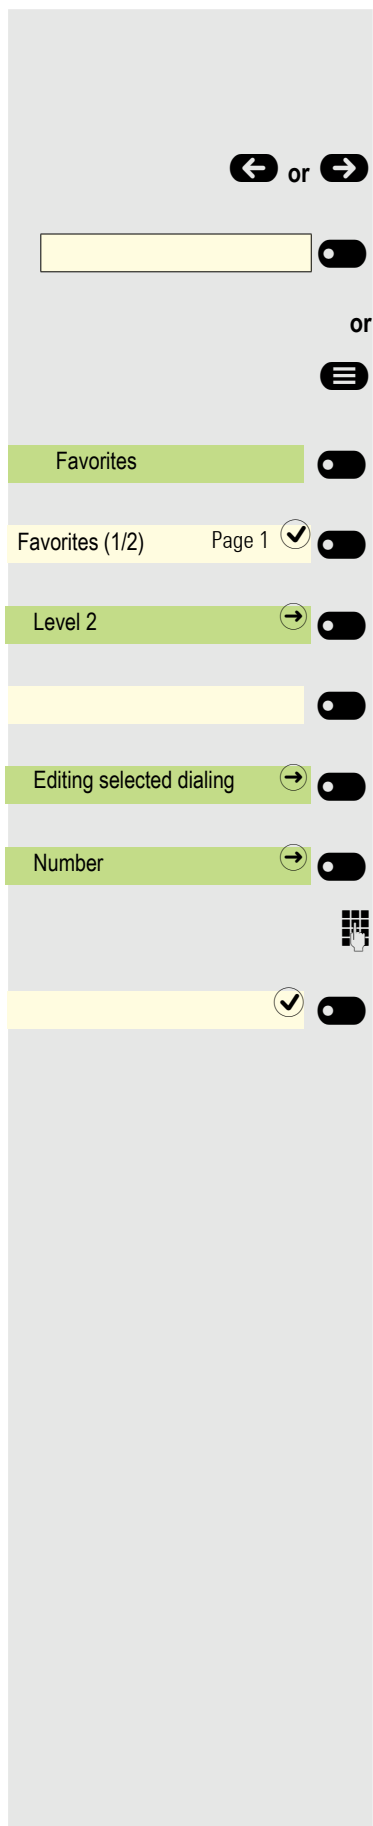


## Setting up dialing keys with contact data from an existing local conversation

You can assign phone numbers to selected dialing keys, forwarding keys and deflect keys using the contact data from an existing conversation. It is also possible to copy the contact name and use it as a key label, but only with selected dialing keys.

In the Favorites menu, hold down the Function key to which a function is to be assigned until the key programming menu is displayed. Then select **Edit selected dialing**.

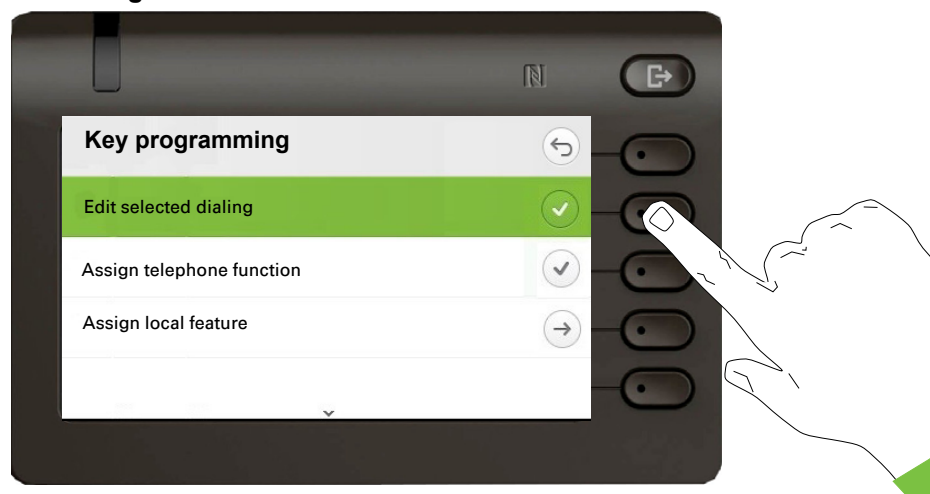

From the Edit selected dialing screen highlight the **Select conversation** option and press the Softkey next to it.

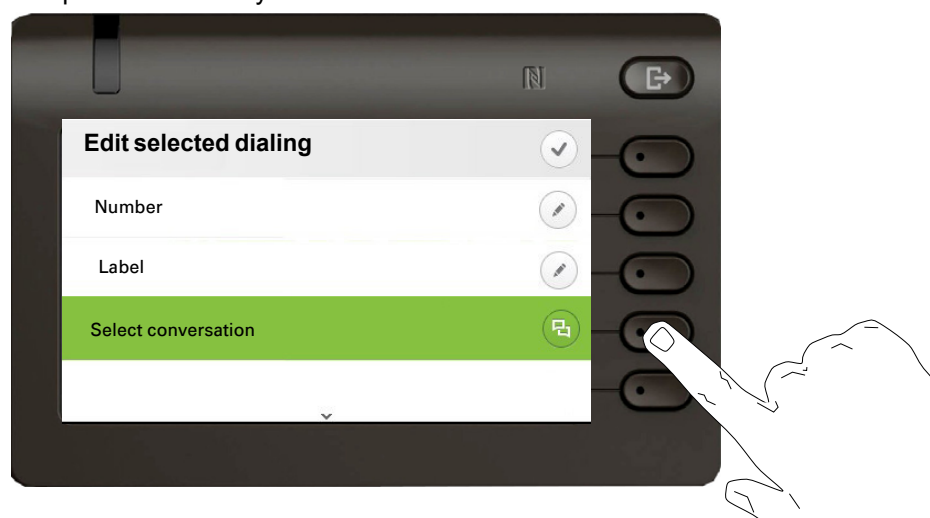


The Conversation selector screen will be shown. You can either select a conversation from the list, or use the "Search for.." box to search for a particular conversation.

To select the default phone number of a contact use the Softkey next to it.



A conversation may have more than one phone numbers for its contact. To be able to select a phone number other than the default, highlight the conversation and press the -button.

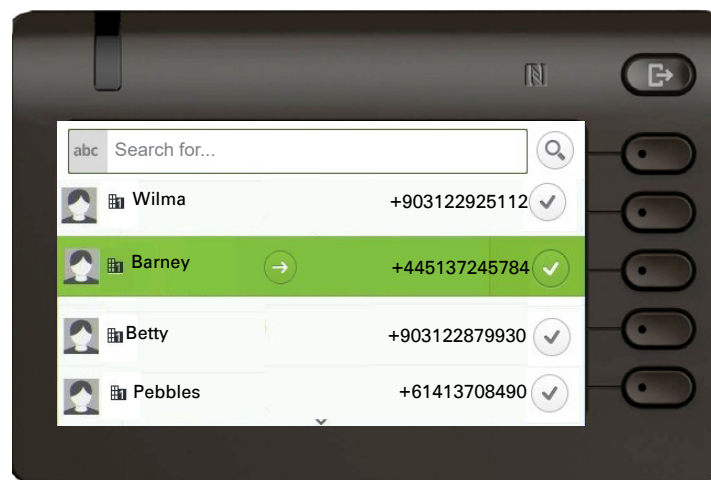


From the screen with the available phone numbers, choose a phone number by pressing the Softkey next to it.



You will be redirected back to the Edit selected dialing screen where the Number now shows the default number or the chosen number of the contact and the Label shows the contact's name.

To edit these fields, highlight either Number or Label and press the Softkey next to them.

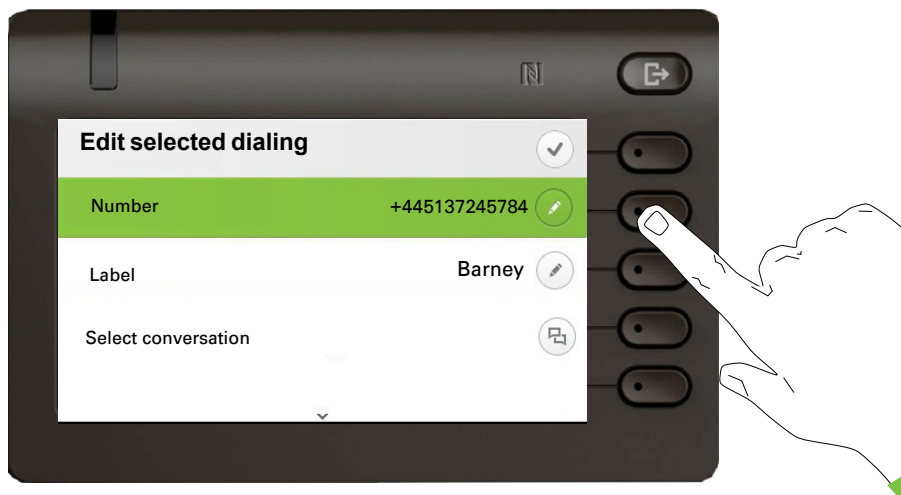

## How to program a local feature

### Example: "Door opener" set up

Hold down the Function key on the OpenScape Key Module 600 to which a function is to be assigned until the programming prompt is displayed.

If nec. Press Main Menu key.

Open using the Softkey.

Select desired page (1 to 4).

Press and hold the Function key to be programmed.

Select "Assign local feature"

Confirm.

Confirm.

Confirm. The key is programmed.

## How to delete a local feature

### Example: "Door opener" delete

Hold down the Function key on the OpenScape Key Module 600 to be deleted until the key programming menu is displayed.

If nec. Press Main Menu key.


Open using the Softkey.

Select desired page (1 to 4).

Hold down the Function key that has been programmed for the Door opener in order to delete it.

Select "Delete local feature"

Confirm. The key indicating the local feature is deleted.

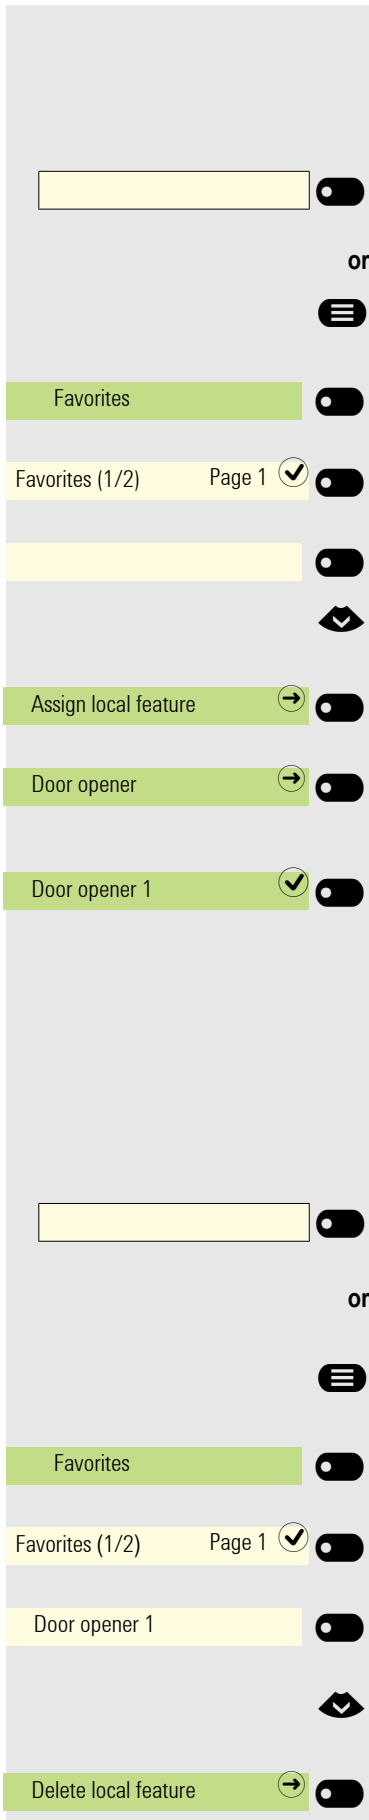

## How to program a function key with Send URL functionality

### Configuration

Hold down the Function key of the phone or of the OpenScape Key Module 600, which is to have a function assigned to it, until the programming prompt is displayed.

or

If nec. Press Main Menu key.

Open using the Softkey.

Select desired page (1 to 4).

Press and hold the Function key to be programmed.

Select "Assign local feature"

Confirm.

Confirm.

Confirm. The key is programmed.

### Activation

After the key is programmed, the LED lights amber to indicate that the key is busy, so another key press in that state will have no action.

After successful HTTP response from the web server, the LED lights green for 3 seconds and a success notification appears. You can now control remote server actions from your CP phone.

After unsuccessful HTTP response from the web server, the LED lights red for 3 seconds and a failure notification appears.

## Making calls



To better understand the steps described here, it is recommended that you read the introductory chapter "Getting to know the OpenScape Desk Phone CP200" → page 16 .

## Receiving a call



Any settings you are currently making on the phone will be interrupted by an incoming call.

### Answering a call via the handset

The phone rings.



Lift the handset<sup>1</sup>

### Answering a call via the loudspeaker (speakerphone mode)


The phone rings.



Press key. LED is lit<sup>1</sup>.

### Answering a call via the headset

**Requirement:** A headset is connected.

The phone rings. The key \*  flashes.



Press the key<sup>1</sup>.

1. Set the volume → page 74.

## Answering a call with the DSS key

**Requirement:** You have configured DSS keys on your phone → page 16.

The phone rings.

Press the DSS key.

The LED is lit. You can speak handsfree.

or

Lift the handset<sup>1</sup>.

 Note the meaning of the LED displays on the direct call keys → page 53

## Accepting calls for a colleague in the team

If a team member does not take a call within 15 seconds (depending on the setup), the other team members will hear an alert tone.

### In idle mode

The phone rings. "Call for" is shown in the display.

Lift the handset

  
and

Press the flashing "Pickup" key (→ page 51). You have picked up the call.

The LED is lit. You can speak handsfree.

or

Lift the handset<sup>1</sup>.

### During the call

press the flashing „Pickup“ key.

The first individual is on hold while you are connected to the second.

### To end the second conversation and return to the first

Confirm in order to disconnect

End and go back? ▼

1. Set the volume → page 74.



## Selectively picking up a call

You hear another phone ringing, whose number you know, or a colleague invites you to take over a call on a particular phone.

Lift the handset.

Select and confirm.

Enter the telephone number on which you wish to take over the call. You can then accept the call<sup>1</sup>.

## Display called extension

When the call number is not shown in a call pickup group in which you want to take over a call (display is deactivated by default for pickup group), you can enter the code for “display on request” after picking up the phone. Ask your administrator about this code.

Lift the handset.

Enter the system code for “display on request” (if nec. ask the administrator).

Once you have entered the code, the phone number will be shown.

## Addressed via speakerphone (direct speaking)


You are being spoken to directly by a colleague over speakerphone. Handsfree und Open listening are automatically activated.

The speaker key is lit.

Answering in hands-free mode is immediately possible.

or

Lift handset and answer.

 Speak directly to your colleague → page 94.

## Switch microphone on/off

To prevent the other party from listening in while you consult with someone in your office, for example, you can temporarily switch off the handset microphone or the handsfree microphone

## Ending a call


Press the illuminated key. The key is no longer lit.

Press the illuminated key. The key is no longer lit.

Replace the handset.

Press the key if it is set up.

After the call has ended (either by you or the remote party), end of call notification with duration of the call will be shown on the phone screen:

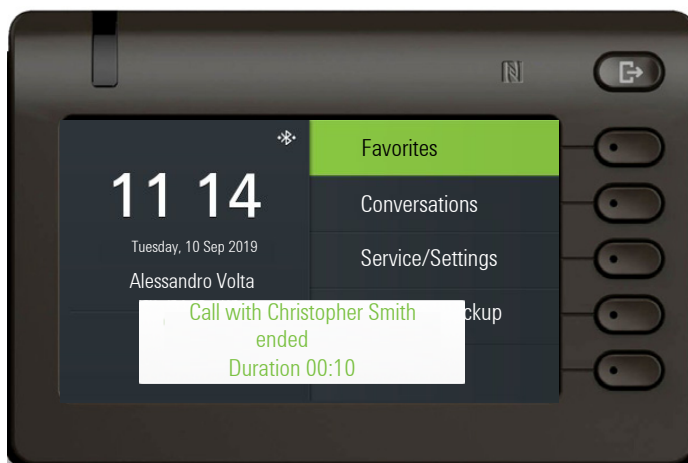

## Dialing/Calling

### Dialing with handset off



Lift the handset.

Internal: Enter the phone number.

External: Enter external code and phone number.

### Dial with the handset on-hook



Internal: Enter the phone number.

External: Enter external code and phone number.

Participant answers over loudspeaker. The speaker key is lit.

### Participant answers over loudspeaker:

With handset on hook: Speakerphone mode.

or



Lift the handset.

### Participant does not answer or is busy:



Press key. LED goes out.

### Dialing with connected headset




**Requirement:** The headset is connected.

Internal: Enter the phone number.

External: Enter external code and phone number.



The key illuminates.

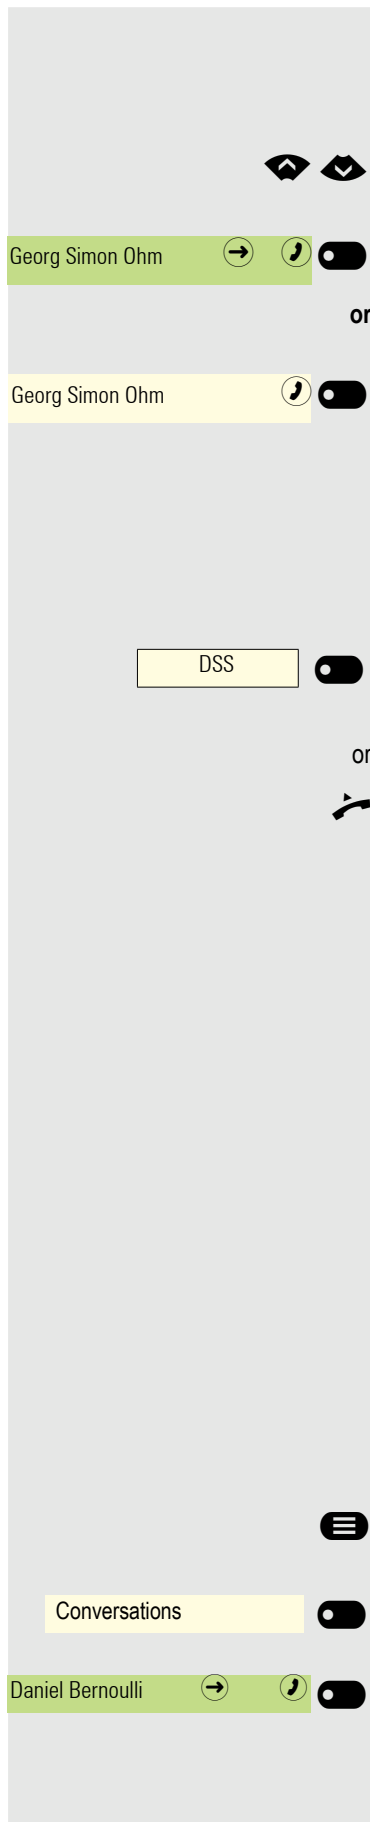

## Choose from conversations

The conversations list is displayed on the screen. If the contact you want is not visible, then select with

or search by entering the phone number or name.

Confirm the selected contact with the Softkey. The phone number is dialed.

If visible, confirm immediately with the Softkey for the contact. The phone number is dialed.

## Calling with a direct station select (DSS) key

**Requirement:** You have configured DSS keys on your phone → page 16.

Press the DSS key.

When the participants answer, enter speakerphone mode.

Lift the handset.

---

 Note the meaning of the LED displays on the direct call keys → page 53.

---

## Redial

You can use conversation list to call your last connected party. You can do this via the history of a conversation (for more information, see "Display the history of a conversation" → Page 42) or via contact details (for more information, see "Opening details of a conversation or conducting a call" → Page 31).


## Returning a missed call

Contacts who have tried to reach you are identified accordingly in the conversations list and appear in the sort order. In addition to the menu name, i.e. Conversations, the number of missed calls is shown against a red background.


The notification LED is red. In addition to the menu name, i.e. "Conversations", the number of missed calls is shown.

If nec. Press the Main Menu key.

Open using the Softkey.

A contact is indicated as a "New missed call" with . Select the contact and confirm to call the contact.

## Using speed dial

 This function must be set up by your responsible administrator.

Speed dial numbers can also contain command or access code sequences and may be linked with other speed dial numbers → page 79.

### Dialing with central speed dial numbers

**Requirement:** You know the speed dial number → page 79.

Open menu → page 23.

Select and confirm.

Enter speed dial number.

The connection is immediately established.

### Dialing with individual speed dial numbers


**Requirement:** You have set up individual speed dial numbers.

Open menu → page 23.

Select and confirm.

Press the required speed dial key.

The connection is immediately established.

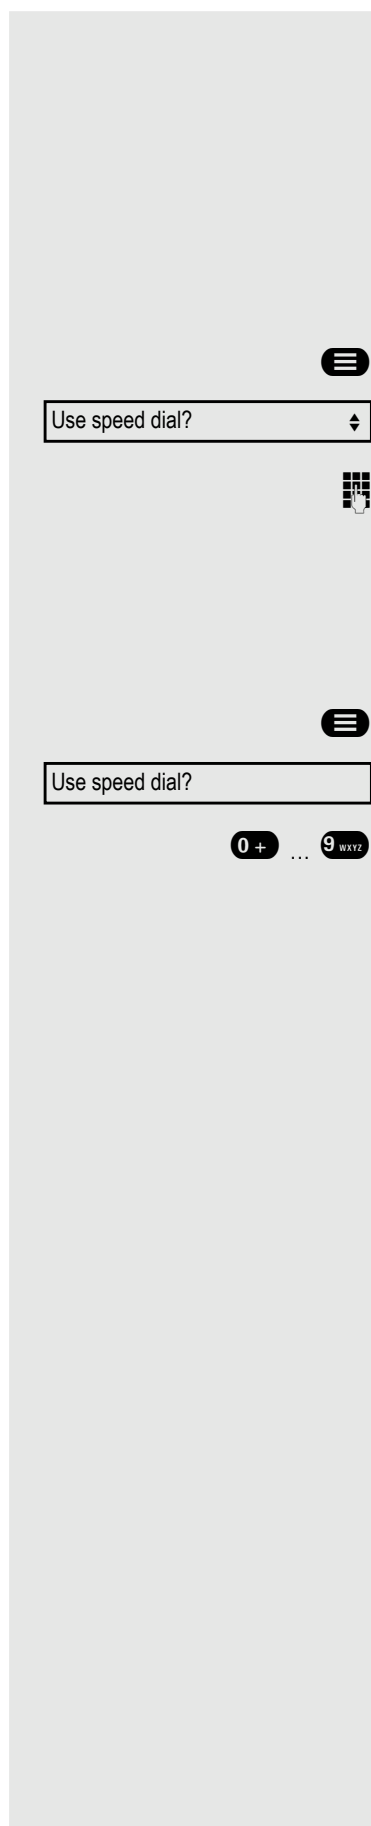

## Forwarding calls

You can program several types of call forwarding on your line.

FWD-VAR-ALL-BOTH	ON	All calls are forwarded to the stored phone number, and the call number is deleted when the call is disconnected.
FWD-FIXED	ON	All calls are forwarded, the stored phone number is not deleted when the call is disconnected.
FWD-VAR-ALL-INT	ON	Only internal calls are forwarded.
FWD-VAR-ALL-EXT	ON	Only external calls are forwarded.
FWD-VAR-BUSY-BOTH	ON	If your connection is busy, all calls are forwarded.
FWD-VAR-RNA-BOTH	ON	If you do not pick up a call, all calls will be forwarded after a certain amount of time.
FWD-VAR-BZ/NA-BTH	ON	If your connection is busy, or you do not pick up a call, all calls will be forwarded following a certain period.

## Use call forwarding

You can immediately forward internal and/or external calls to your lines to different internal or external telephones (destinations) (external destinations are also possible if the system is configured accordingly).



If call forwarding is activated, a special dial tone sounds when the handset is lifted.

If DTMF dial-in (ask relevant Administrator) is active, you can also divert calls there. Destinations: Fax = 870, Direct inward dialing = 871, Fax-Direct inward dialing = 872.

If you are the end caller of a forwarded call, you can see the call number or the name of the forwarding party in the Notification area of the display (1st. line) and the those of the caller below it.

## Setting up call forwarding via the call forwarding menu



Open the Forwarding menu.



In the menu, you immediately have an overview of call forwarding currently set-up. This menu is also available via the user settings.

Confirm.

Confirm.

Confirm.

Variable: All calls

No destination set

☐

☒

or

Variable: External calls

No destination set

☐

☒

or







Variable: Internal calls

No destination set

☐

☒

or

Variable: Busy	No destination set			Confirm.
or				
Variable: No reply	No destination set			Confirm.
or				
Variable: Busy or no reply	No destination set			Confirm.
or				
Fixed: All calls	No destination set			Confirm.
Destination			Use the Softkey to open the editor for the destination phone number	
123 3335			Enter the destination phone number on the dial pad.	
				Enter destination phone number. Confirm your input with the Softkey.

### Activating call forwarding with key

The advantage of a specific key for call forwarding is that you do not have to re-enter a phone number every time. The programmed key already contains a destination. You can therefore set up several keys with different forwarding destinations.

Press the key if it is set up. The LED is illuminated.

### Set up call forwarding via the idle menu

If nec. Press the Main Menu key.

Select "Fixed Forwarding on."

Confirm.



### Call Forwarding information display on Idle Screen

You can see the following call forwarding information displayed on Idle screen:

- The call forwarding icon on the status bar: ➔
- The call forwarding destination information at the bottom information area, displaying the call forwarding icon followed by the work or phone icon and the destination name or number. Only one call forwarding entry can be displayed each time on the information area.

In case of a long contact name, the name text is elided from the right end and does not appear as a whole.

In case of a long contact number, the number is elided from the center, keeping at least 5 digits at the right end and three dots "..." at the center. The left part of the number appears as it fits into the remaining box area, e.g. +4912345...78920.



Call forwarding destination is displayed only on the Main/Idle screen and not in active call screen.



## Using callback

You can request a callback if the individual called is busy or if nobody answers. This also applies to external calls via switching centers. This will save you from repeatedly attempting to call someone.

You receive a callback

- you receive a callback when the other party's line becomes free,
- as soon as the party who did not reply has held another conversation.



If configured (ask relevant Administrator), all callback requests are automatically deleted overnight.

## Saving a callback

**Requirement:** The line is currently busy or nobody answers.

Confirm.

## Accepting a callback

An participant for whom a callback was saved is now no longer busy or has phoned in the meantime. Your phone now rings.

Lift the handset.



or



Press key. LED lights up.

or

Cancel the callback with the softkey.

Callback



## Checking/deleting a saved callback



If nec. Press the Main Menu key.



Select "Callback requests"

Callback requests



Confirm.

Show next entry



Confirm to display additional entries if applicable.

deleting



Confirm.

## Ending a query

finishing



Confirm,

or



Press key.

or



## During the call

### Switch to speakerphone

**Requirement:** You are conducting a call via the handset.

Press and hold the key, hang up the handset, and then release the key and continue the call.

#### US mode

If the country setting is set to US (ask relevant Administrator), you do not need to press the loudspeaker key when you hang up the phone.

Press key.

Replace the handset. Proceed with your call.

### Switching to the handset

**Requirement:** You are conducting a call in speakerphone mode.

Lift the handset. Proceed with your call. The hands-free microphone is switched off.

### Open listening in the room during a call

You can allow other people in the room to listen in on the call. Let the other party know that you have turned on the loudspeaker.


**Requirement:** You are conducting a call via the handset.

#### Activating

Press key. LED lights up. The hands-free microphone remains off.

#### Deactivating

Press key. LED goes out.

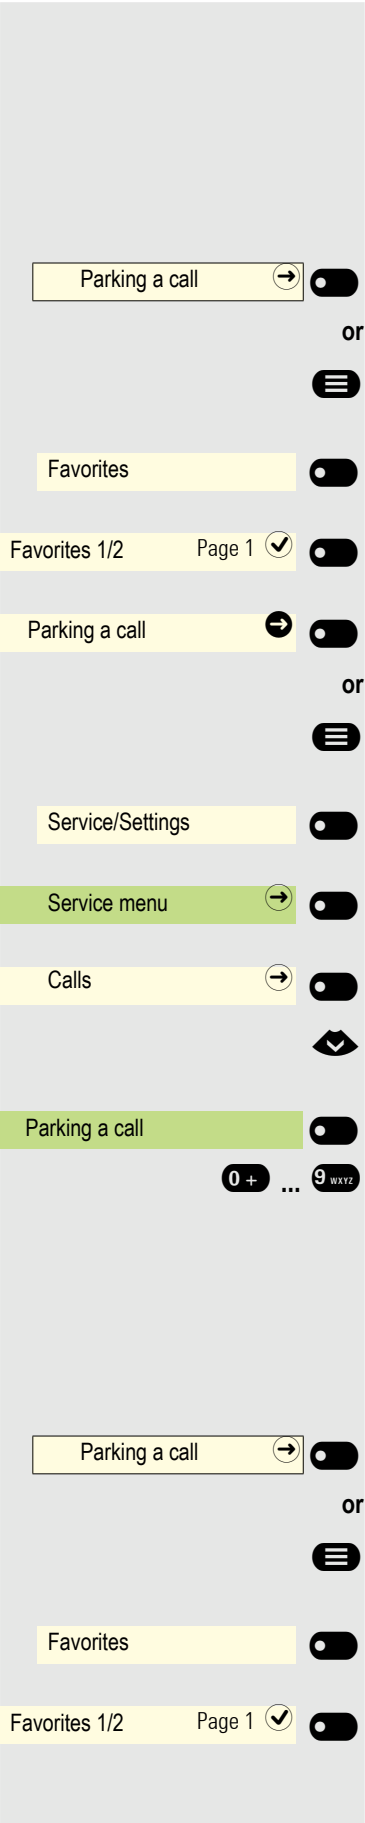

Parking a call

You can park up to 10 internal and/or external calls. You can resume the parked calls on another telephone. This allows you to continue a call on another phone, for example.

**Requirement:** You are conducting a call.

Press the Function keys of the OpenScape Key Module 600E, if configured.

If nec. Press the Main Menu key.

Open using Softkey.

Select the required page with the Softkey.

If visible, press the Softkey of the Function keys .

If nec. Press the Main Menu key.

Open using the Softkey.

Open with the softkey.

Confirm.

Select "Parking a call."

Confirm.

Enter and note a parking position number between 0 and 9. If the entered parking position number is not accepted, it is already busy; please enter a different number.

Retrieving a parked call


**Requirement:** One or more calls have been parked. The phone is idle.

Press the Function keys of the OpenScape Key Module 600E, if configured.

If nec. Press the Main Menu key.

Open using Softkey.

Select the required page with the Softkey.

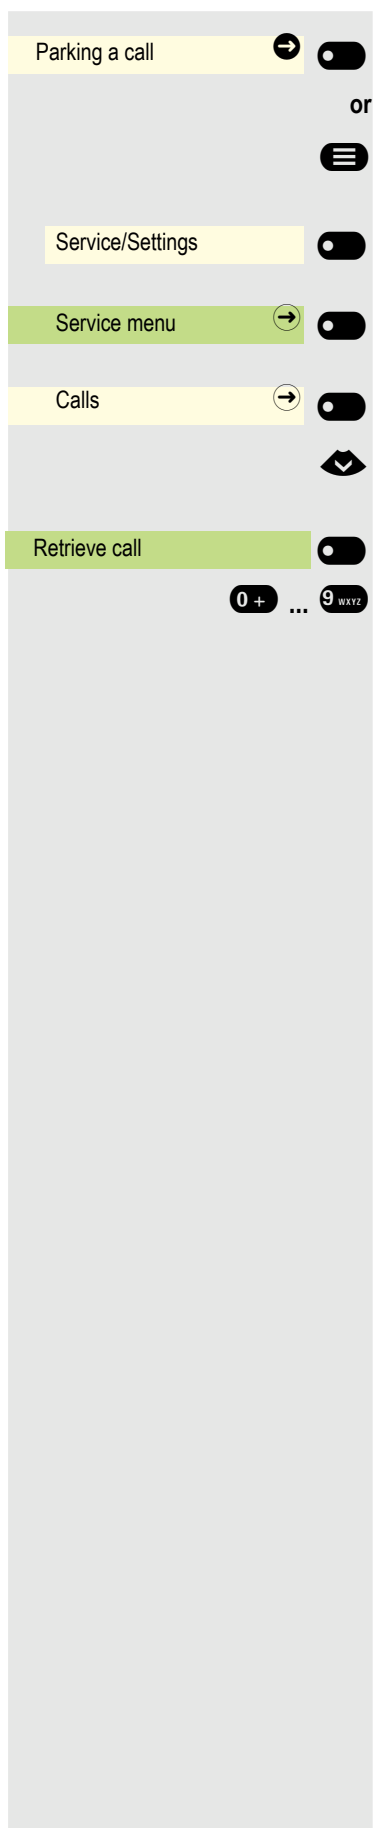

If visible, press the Softkey of the Function keys .

or

If nec. Press the Main Menu key.

Open using the Softkey.

Open with the softkey.

Confirm.

Select "Retrieve call."

Confirm.

Enter the parking position number you have noted.  
If the entered park position number is not assigned, you cannot answer the call.



If a parked conversation is not taken on, the call goes through there again after a certain time, where it is parked (= callback).

## Call second individual (consultation)

You can call a second party while a call is in progress. The first individual is on hold.

Confirm.

Calling a second participant:

Enter the phone number of the desired participants.

Select one from the conversations list.

Back to the first caller, second caller does not answer:

Confirm.

Ending a consultation call:

Confirm

Switching to the held party (toggling)

Select the toggle option with the softkey.

## Transferring a call

If the person you are speaking to wishes to be forwarded to one of your colleagues, you can transfer the call.


Confirm.

Enter the phone number of the desired participants.

Potential announce call.

Replace the handset.

Confirm

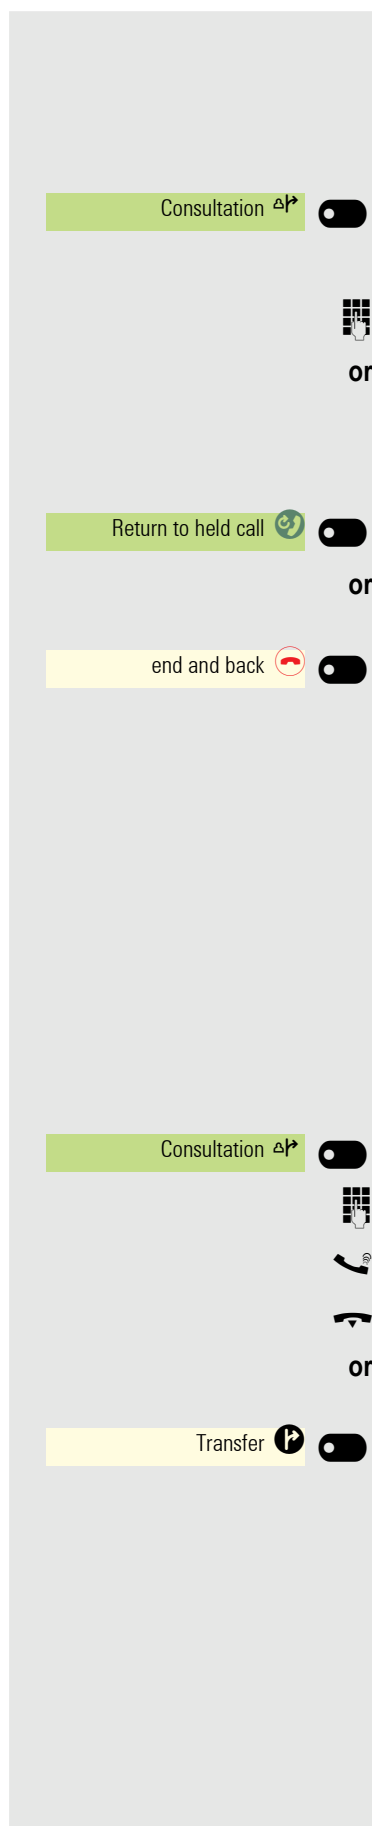

## Accepting a second call (Call waiting)

You are still available to other callers, even though you are on the telephone. A warning tone and the notification "Call: <x>" in the display indicate the waiting call.

You can ignore or accept the second call.

Before you accept the second call, you can end the first call or place it on hold for subsequent retrieval.

You can also block the second call or the signal tone → page 79.

**Requirement:** You are on the phone and hear a warning tone (approx. every six seconds).

### Ending the first call and answering the second call




Replace the handset. Your phone rings.




Accept second call. Lift the handset.

### Place first call on hold and answer second call

Accept call waiting 



Confirm. You are connected to the second caller. The first party is placed on hold.

end and back 



Confirm

or



Replace the handset.

or



**Lift the handset.**

## Carry out DTMF-suffix/dial tone

In order to control devices, such as answering machines or automatic information systems, you can send out DTMF signals (**D**ual **T**one **M**ulti-**F**requency).

Please ask your administrator to send the codes for the DTMF tones.



---

Ending the call also deactivates DTMF suffix dialing.

Your system can also be configured in such a way that you can start the DTMF dial-up immediately after establishing the connection. You can also set-up a key for DTMF dialing.

---

## Rollover

You can set up the volume for all notification, which occurs during your call. For more information, see "Volumes" → Page 190



## Importing contacts via WBM

You can import your contacts into your phone through WBM interface (for more information, see "Web interface" → Page 200). The contact file can be exported from Outlook or OSM.

➡ See the products documentation for instructions on how to export contacts from an Outlook client or OSM.

➡ Files previously exported by this or another phone may also be imported.

➡ Log on to the User Pages on WBM using your password (for more information, see User Pages → page 200.)

The screenshot shows the WBM web interface. On the left, a sidebar under 'User settings' lists various options, with 'Contacts transfer' highlighted in green. The main content area has three tabs: 'User settings', 'Administrator settings', and 'Licences'. The 'User settings' tab is selected, and within it, the 'Contacts transfer' section is active. This section contains two main areas: 'Import contact data' and 'Export contact data'. The 'Import contact data' area prompts the user to 'Choose the Comma Separated file you wish to import' and includes a 'Choose File' button, a 'No file chosen' status, and 'Import' and 'Cancel' buttons. Below these is a 'Press to see import results' button. The 'Export contact data' area includes a 'Generate contacts file' link and a 'Download contacts file' link. At the bottom of the panel, a warning message states: 'Closing or navigating away from this page will cancel the Import or Export'.

A contact list can be downloaded on your phone via your browser:

1. Click on the "Choose file" button and a window will open onto your PC's file system to allow you to navigate to a local or remote folder and select a file to be imported
  - The default format is ".csv"
  - You can use comma or a semi-colon as a value separator for the imported CSV file
  - When exporting from Outlook, do not change the mapped header field names
2. Select destination and confirm.
  - The path to the file will be displayed on the page next to the button "Choose file" when you select the destination and close the window
3. Press "Import"
  - Whilst the import is in progress you may notice some deterioration in the phones performance.
4. The progress and outcome of the import will be indicated to you
  - A completion message is displayed when the "Press to see import results" button is pressed
  - A successful import will be indicated by a "Import completed" text message below the panel on the page

- A message "Import contacts completed" will also be displayed on the phone's screen when the import is completed
- Failures will be indicated by a suitable text message below the panel on the page

User settings	Administrator settings	Licences
User login Password <b>Ringer</b> <b>Audio</b> <b>Configuration</b> <b>Phone</b> <b>File transfer</b> Slideshow images Ringtones <b>Contacts transfer</b> Diagnostic information	<div><b>Contacts transfer</b></div> <div><b>Import contact data</b></div> <p>Choose the Comma Separated file you wish to import</p> <div><input type="button" value="Choose File"/> No file chosen</div> <div><input type="button" value="Import"/> <input type="button" value="Cancel"/></div> <div><input type="button" value="Press to see import results"/></div> <div><b>Export contact data</b></div> <div><a href="#">Generate contacts file</a></div> <div><a href="#">Download contacts file</a></div> <div>Closing or navigating away from this page will cancel the Import or Export</div>	

## Using Bluetooth

Bluetooth is used for wireless communication, e.g. between PCs or tablets and smartphones or headsets. Bluetooth can be used at a distance of up to 10 meters. To exchange data between Bluetooth-enabled devices, the devices need to undergo a once-off pairing procedure.

---

➡ Please note that Bluetooth and NFC are not available on CP600E.

---

## Discoverability

When first enabling a connection to a Bluetooth device, this function must be switched on → page 126.

By default, the OpenScape CP600/600E can be found by other Bluetooth devices once you have opened the pairing menu.

The OpenScape CP600/600E discoverability feature is disabled on exiting the pairing menu in order to prevent misuse.

---

➡ A connection is established for devices that are already connected even if the "Discoverable" function is deactivated.

---

## Pairing

Pairing is the process used by two Bluetooth-enabled devices to "see" one another and to "recognize" that they can exchange data. It is therefore used for checking the access authorization of a Bluetooth device in a Bluetooth network. A connection key is generated for later identification.

---

➡ Pairing is only performed the first time contact is established between a Bluetooth device and your OpenScape CP600/600E. If the Bluetooth device is successfully paired, no further access authorization checks are necessary. Instead, each subsequent check uses the previously created link key.

---

## Pairing NFC-enabled devices

If your Bluetooth device has an NFC reader (**N**ear **F**ield **C**ommunication), it can be paired very easily with your OpenScape CP600/600E (often smartphones have this, but not headsets).

The NFC transmitter on the OpenScape CP600/600E is located in the top right area of the display, to the left of the Forwarding key and below the "N" logo.



To pair the Bluetooth device, hover over this logo and follow the instructions (see instructions for Bluetooth device).

## Using a Bluetooth headset

You can connect a Bluetooth headset to your OpenScape CP600/600E, which is approved for use with the OpenScape CP600/600E. Ask your administrator about approved headset types.

### Connecting the Bluetooth headset

**Requirement:** The Bluetooth function on your OpenScape CP600/600E is activated → page 125.

If nec. Press the Main Menu key.

Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Open using the Softkey.

Open using the Softkey.

### Finding and connecting the Bluetooth headset

Now switch your Bluetooth headset to pairing mode (see the user manual supplied with the device).

Paired devices are displayed.

Start the search for new devices with the Softkey. Start or set the paging function on the Bluetooth device if appropriate.


Located devices are displayed. Repeat the search if appropriate with the Softkey.

Select the relevant headset and open with the Softkey.

Confirm the pairing prompt with the Softkey. The Bluetooth device is paired and added to the list.

A pairing PIN is requested.

Enter the pairing PIN and confirm with the Softkey. The Bluetooth device is paired and added to the list.

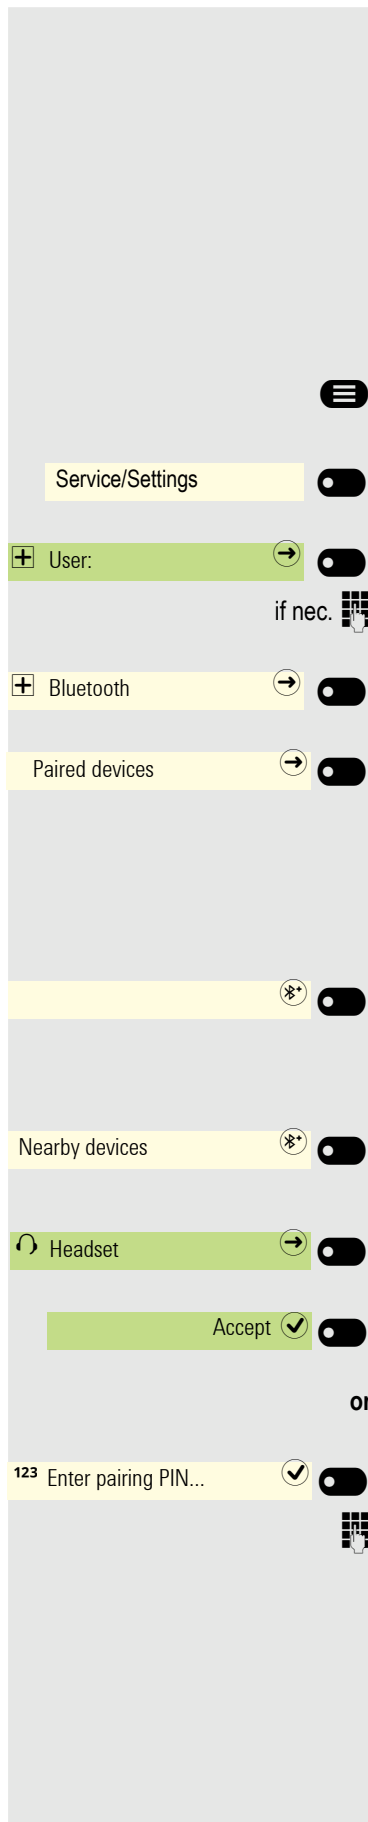


## Connecting a Bluetooth headset to OpenScape CP600

The Bluetooth headset must now be connected to the OpenScape CP600.

Select the Bluetooth headset in the list.

Confirm with the Softkey to connect. You will receive a corresponding confirmation. The connection is immediately established and the headset is ready for operation.

Once your Bluetooth headset is connected to the telephone device, you can see the headset's battery level on the top of the CP600 main menu screen.

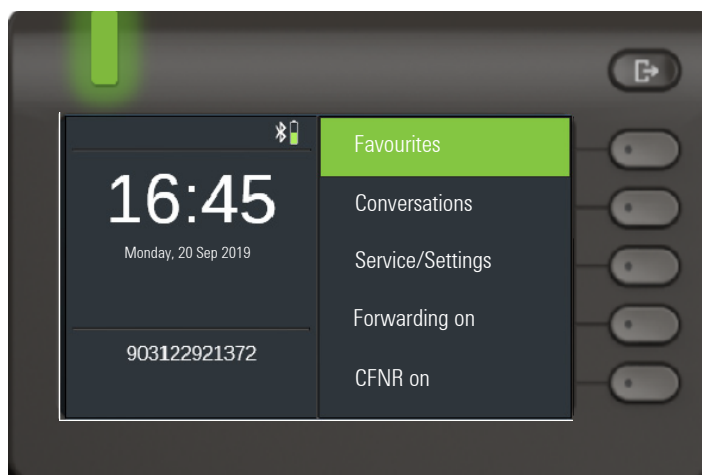

## Testing a Bluetooth headset

Press key. You should now hear the on-hook signal in the headset.

The input field is opened.

Enter the phone number.

Confirm when the complete number has been entered.

The required contact is shown in the list. Confirm with the Softkey. The connection is set up.

If nec. Set-up call volume on headset.



## Transferring contacts

The Bluetooth function on your OpenScape CP600/600E allows you to transfer contacts in **vCARD format** (file extension: .vcf) from other Bluetooth devices to your OpenScape CP600/600E and save them in the Conversations list. You can also send entries from the Conversations list as vCards to other Bluetooth-enabled devices.



Due to the diverse range of PCs, smartphones, and PDA devices currently available, we are unable to provide universal instructions on how to transfer vCard files in this manual.


The instructions for data transfer via Bluetooth provided in the relevant manufacturer documentation should be observed.

## Receiving a vCARD

**Requirement:** The Bluetooth function on your OpenScape CP600/600E is activated → page 125. A vCard file is stored on your Bluetooth-enabled device (PC, tablet, mobile telephone, etc.). Start the data transfer.

If a vCard is transmitted, you will be prompted to accept the data transfer.

Example:

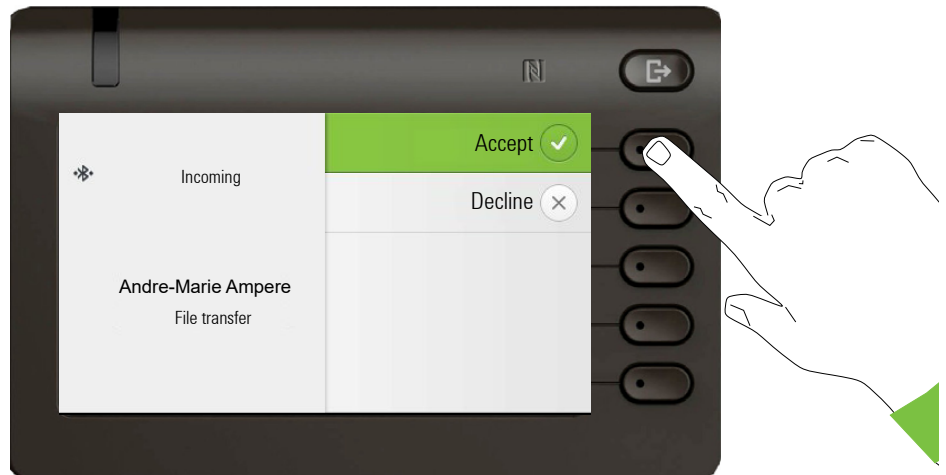

Accept ✓



Press the Softkey to allow the data transfer.

## Saving contacts

Press the Softkey again to save the vCard(s) to the contact list. You will receive confirmation.

Save ✓



## Sending a vCard

### Sending to a paired device

**Requirement:** The receiving device is included in the list of paired devices, Bluetooth is activated on the device and can receive vCards.

Select the required contact from the Conversations menu.

The selected contact is highlighted.

Open the contact.

Press the Softkey. The menu for paired devices opens. A search is initiated for devices.

Use the Softkey to confirm sharing on the relevant paired device. The vCard for the entry is sent. (You will receive confirmation)

Perform the necessary steps on the destination device to save the vCard data.

### Sending to an unpaired device

**Requirement:** Bluetooth is activated on the device and the device can receive vCards.

Select the required contact from the Conversations menu.

The selected contact is highlighted.

Open the contact.

Press the Softkey. The menu for paired devices opens. A search is initiated for devices. Wait until the relevant unpaired device appears.

Use the Softkey to confirm sharing on the relevant device. The vCard for the entry is sent (you will receive confirmation).

Perform the necessary steps on the destination device to save the vCard data. Detected devices are then deleted from the list.



## Using a Bluetooth conference phone

You can connect a Bluetooth conference phone that is approved for use with the OpenScape CP600/600E to your OpenScape CP600/600E. Pairing and connection works in the same way as for a headset. Ask your administrator about approved conference devices.

Please activate pairing mode on your Bluetooth device. Please refer to the alerts in the corresponding operating instructions.

Once the two devices have been successfully paired, the conference unit must be configured with a parameter in the CP600 so that the call can be connected and switched to hands free via the speaker button. Otherwise the conference unit would be operated like a Bluetooth headset via the headset button.

The parameters are found in the user menu under Bluetooth. There you can set up the paired devices and mark the paired conference facility as such.

### Calling a participant

**Requirement:** The conference phone is ready for use but **switched off**. The OpenScape CP600/600E is in idle mode.



Press key.

or



Enter the phone number. The "conference device" switches on automatically. Once the subscriber answers, you can set up a conference via a consultation or second call.




## Using a Bluetooth device

You can control calls on the HFAG (hands-free audio gateway, e.g. mobile device) from your OpenScape CP600 phone via Bluetooth.

Once your mobile device is connected to CP600 through the Bluetooth, you can see the mobile's battery level on the top of your CP600 main menu screen.


## Incoming HFAG call

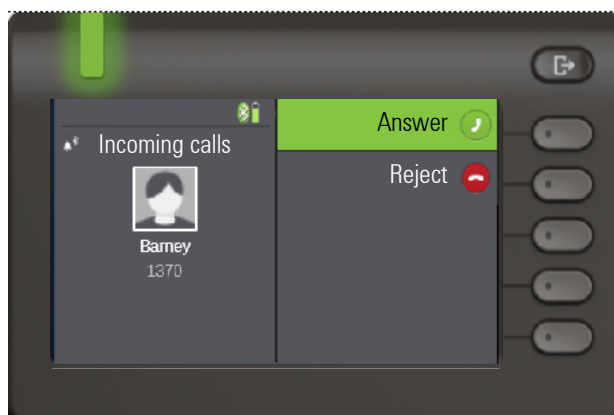


Bluetooth status bar icon indicates an HFAG call.

For more information about how to proceed during incoming call, see "Receiving a call" → Seite 89.

## Connected HFAG call

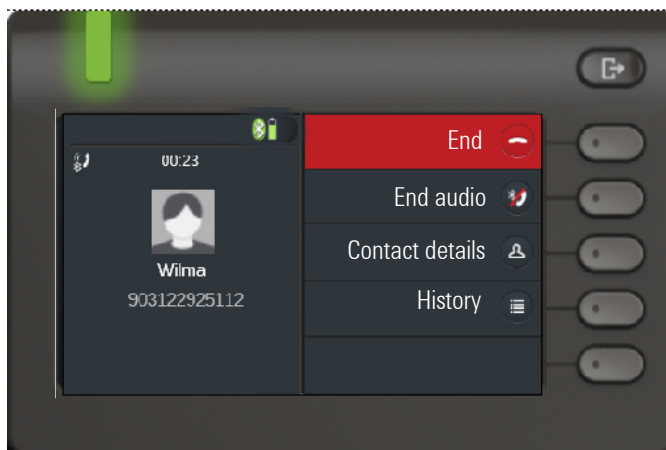

Bluetooth status bar icon indicates an HFAG call. The "End audio" button transfers the HFAG call audio from the OpenScape CP600 to the HFAG.

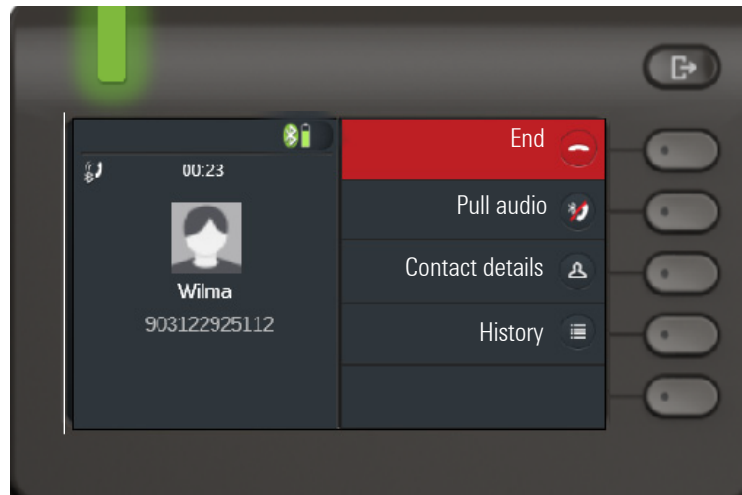


The “Pull audio” button reroutes the audio stream from HFAG back to OpenScape CP600/600E.

The “Move to mobile” button reroutes the audio stream from OpenScape CP600 to the HFAG. Call is removed from the CP phone.

For more information about how to proceed during a call, see “During the call” → Seite 101.

## Outgoing HFAG call

### Outgoing Call Dialing

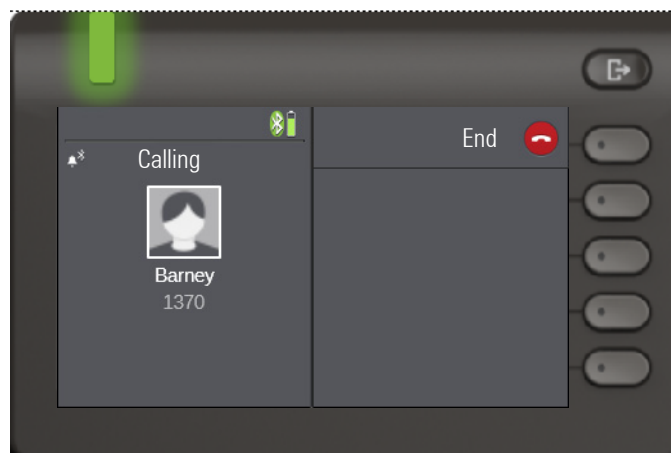


Bluetooth status bar icon indicates an HFAG call.

Failure in dialling the outgoing HFAG call is indicated by the HFAG by one of the unsolicited extended response indication codes:


- NO CARRIER
- BUSY
- NO ANSWER
- DELAYED
- BLACKLISTED

### Outgoing Call Ringing

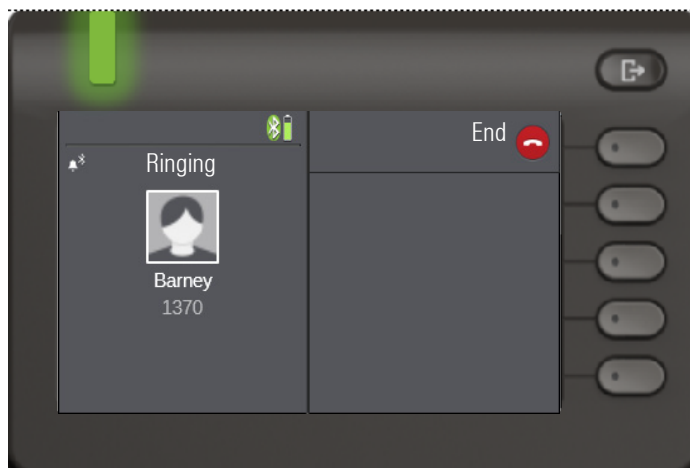


### HFAG call states in Main Menu Screen

#### Incoming HFAG call in the Main menu screen

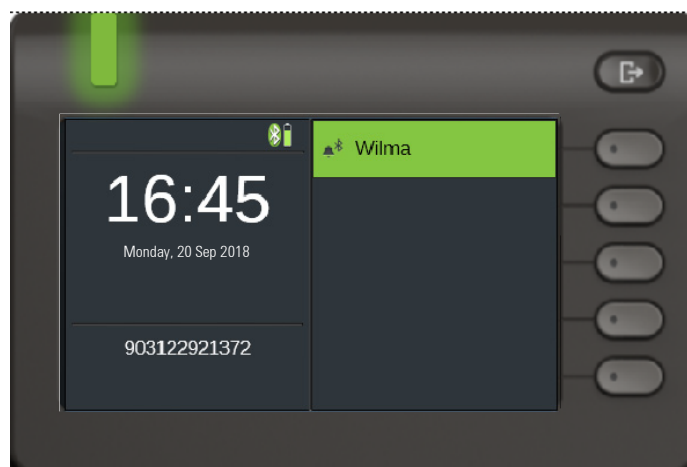


The icon with the Bluetooth rune index indicates incoming HFAG call.

### Connected HFAG call in the Main menu screen

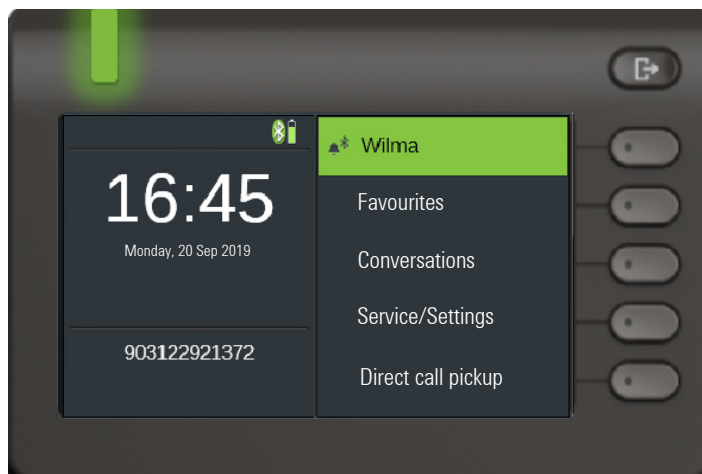

The icon with the Bluetooth rune index indicates connected HFAG call.


### HFAG call states in Conversations Screen

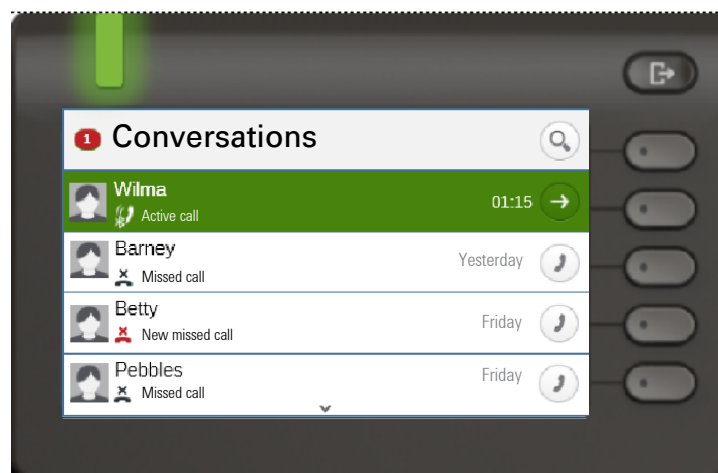

Connected HFAG calls are displayed in the conversation list. The HFAG call is distinguished from native calls by a special call state icon under the user name.

## Anonymous mode

As a User, you are able to configure “Hide mobiles data”. In this mode, no caller information will be presented, only presence and state of the call. All Bluetooth calls are logged to Anonymous conversation.

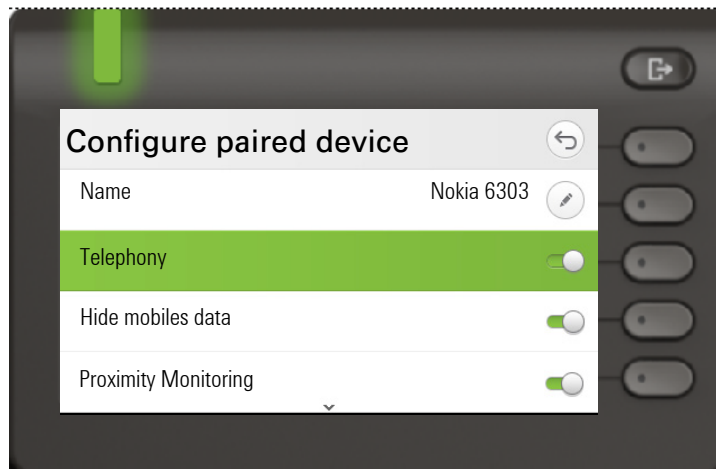


## Using Bluetooth keyboard

Bluetooth keyboard can be paired with phone in User section under "Paired devices". After successful pairing keyboard appears in paired devices list.

There can be only one Keyboard device connected at the same time.

Special "keyboard" icon should be shown in status bar when Bluetooth keyboard is connected.

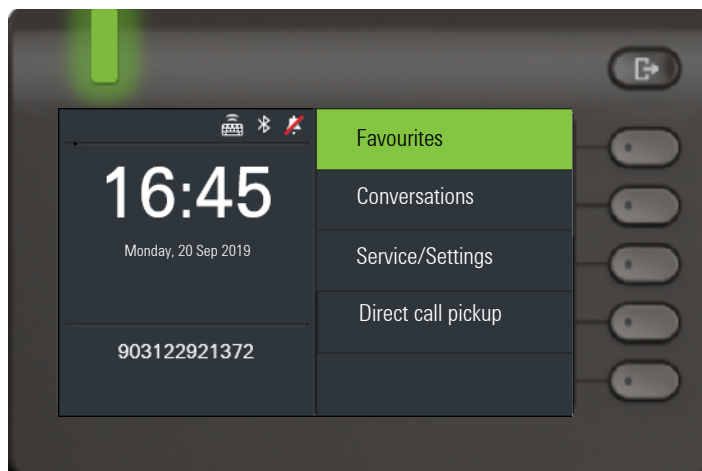

Parallel usage of Bluetooth keyboard and phone keypad is possible. Phone interface differentiates between events from Bluetooth keyboard and phone's keypad and shows speller and its settings only for phone's keypad.

### Supported languages

- German, English, French, Italian and Spanish
- For other languages, English layout will be used.

### Navigation keys

Navigation keys work as following:

- Direction keys → should work as direction keys on 5-way navigator
- Enter → OK
- Backspace → Back
- Esc → Go to landing screen
- Volume keys → Volume keys
- Mute key → Microphone mute
- Page down key → moves highlight down by the number of screen lines. Since this is only CP600 that is equivalent to 5 down nav. key presses
- Page Up key → equivalent to 5 up navigation key presses
- Home key → equivalent to long press Up navigation key presses
- End key → equivalent to long press Down navigation key presses

When phone is in Idle state, pressing number keys on keyboard initiate dialing in the same way as number keys on keypad do.

When phone is in call, pressing number keys on keyboard sends DTMF tones in the same way as number keys on keypad do.

## Keyboard pairing modes

Keyboard initiates pairing and sets the pairing mode. The pairing mode differs depending on the keyboard type and manufacturer.

There are three possible pairing modes supported:

- Simple pairing (passkey entry) - if keyboard initiates "simple pairing", PIN is generated by keyboard and CP600 shows this PIN on display and waits until the number is typed on the keyboard.
- Legacy (numeric comparison) - if keyboard initiates "legacy" pairing, CP600 generates random number, displays it to user and waits until the number is rewritten on the keyboard.

Just works - if keyboard initiates "just works" pairing, CP600 displays Bluetooth keyboard pairing request and waits until it is confirmed.

## Using Bluetooth “Remote button”

Bluetooth Remote button can be paired with the phone in User section under "Paired devices". After successful pairing, the Remote button is shown with a keyboard profile in paired devices list.

The Remote button device behaves as Bluetooth keyboard device until the user configures it to be a Remote button. When Remote button is enabled then the device appears, and behaves, as a Bluetooth Remote button device.




By pressing the Remote button, you can trigger certain action (e.g. under the Function key or on OpenScope Key Module 600) configured by you on your OpenScope CP600. You can choose from the following keys:

- Function keys.
- Key Module keys


Please note that the shifted level function of an Function key cannot be selected.

Using the Configuration option leads to the Configuration Menu for that device. The device name is "Selfie" in the screens shown.

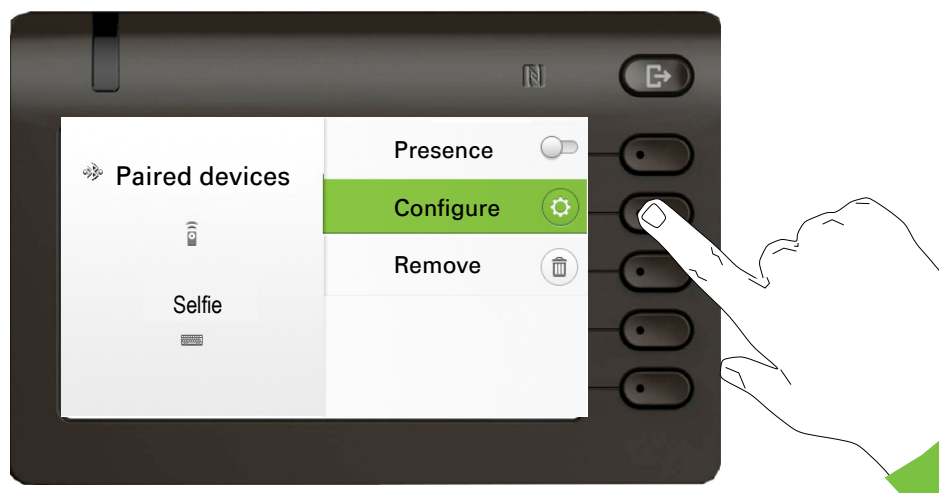


In this Configuration Menu the device can be identified as a Bluetooth Remote button device via the "Remote button" status. The action of the entry allows the Bluetooth Remote button device to be configured.




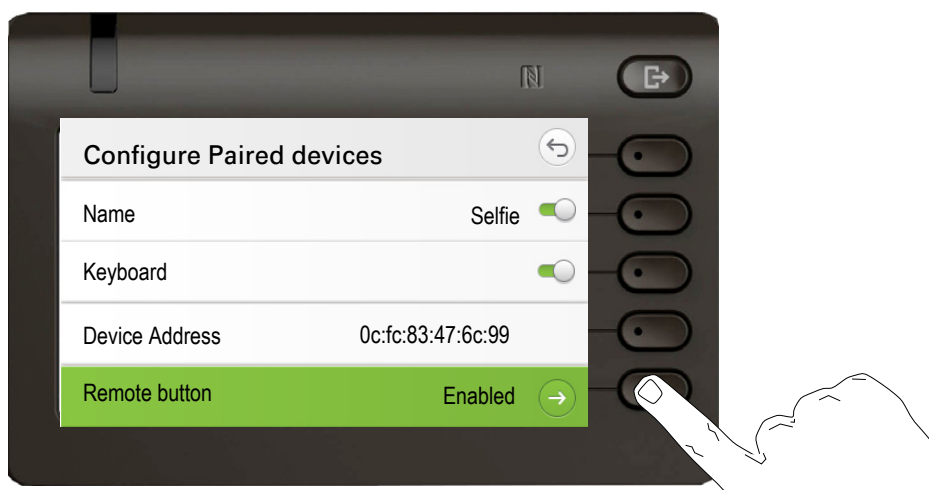

Selecting the "Remote button" menu above leads to the screen that allows this Bluetooth Remote button device (called Selfie) to be configured. The Function keys are identified by their key label in the "Select key" screen.

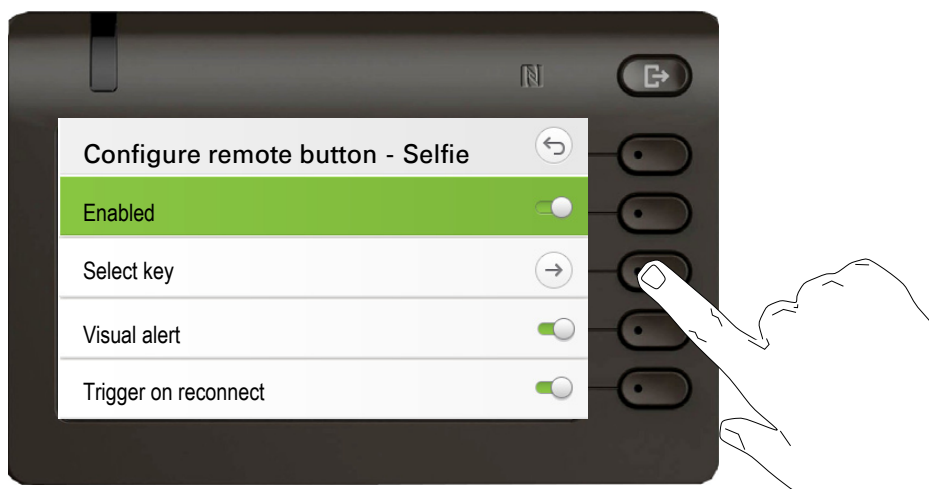


Selecting the "Select key" menu above leads to the screen that allows the Function key for this Bluetooth Remote button device to be configured.

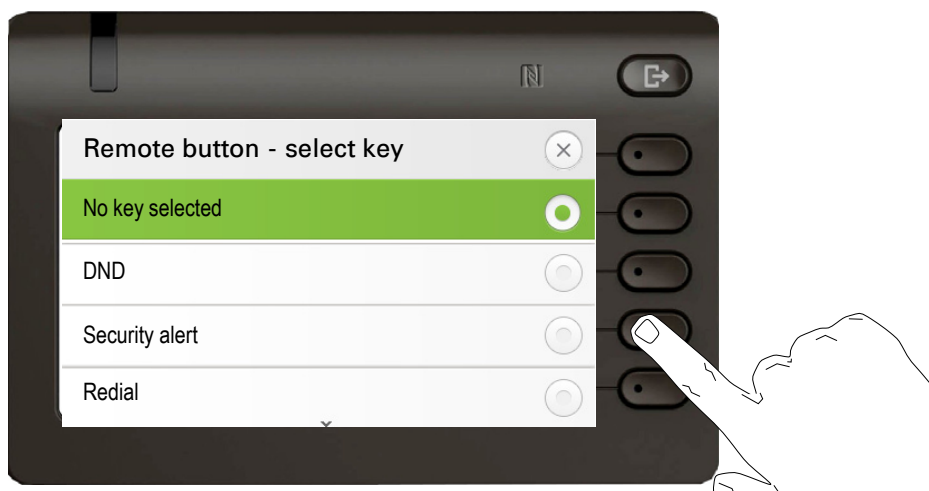

Only a Function key with a function configured can be selected to be triggered by the Bluetooth Remote button click. All unallocated keys are hidden.

Function keys from any attached Key Module are potentially available to be selected. No shifted level keys can be selected.

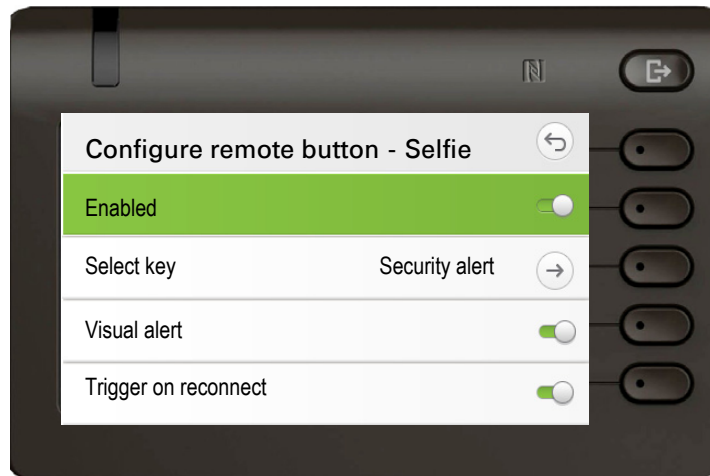


The “Configure remote button” screen now shows the label for the Function key that has been configured to be triggered by this Bluetooth Remote button device.

## Trigger on reconnect

If the Bluetooth Remote button is disconnected (e.g. the device is in energy saving mode) and you want to reconnect it, the following may happen based on the settings of the functionality “Trigger on reconnect”.

- If enabled, the remote button will connect and trigger the configured Function key at the same time. You need to press the Remote button only once.
- If disabled, you need to press the Remote button twice. First time it will reconnect and second it will trigger the configured Function key.

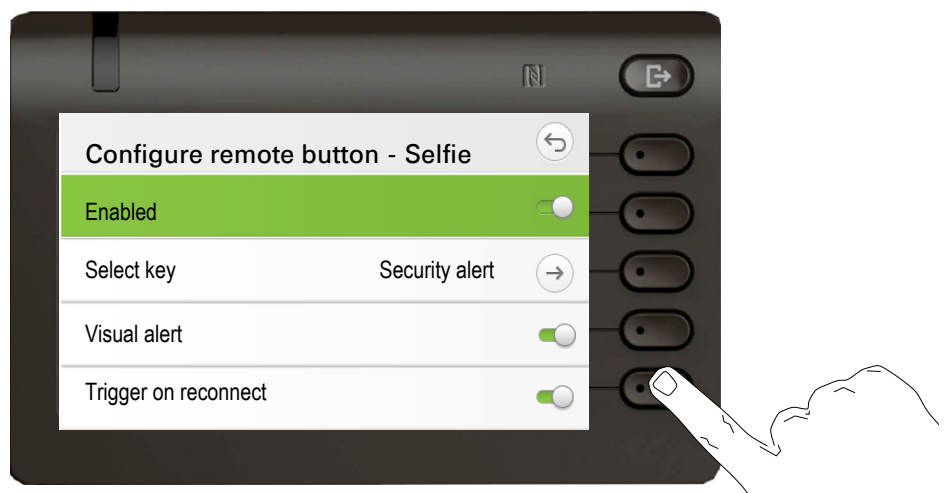

## Bluetooth settings

### Activating and deactivating Bluetooth



The Bluetooth function was activated for your phone by the administrator.

You can also configure this setting via the Web interface → page 200.

If nec. Press the Main Menu key.

Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Open using the Softkey.

Open using the Softkey.

Activate with the Softkey. The Bluetooth function is activated and is now available.

Save the setting by selecting the Softkey.

### Changing the Bluetooth name of your OpenScape CP600/600E

Here you can determine which name your OpenScape CP600/600E should use to register at other Bluetooth devices.

You can also configure this setting via the Web interface → page 200.

If nec. Press the Main Menu key.

Open using the Softkey.


Open using the Softkey.


Enter and confirm the User password.

Open using the Softkey.

Open using the Softkey.

Open using the Softkey. The current name is displayed.

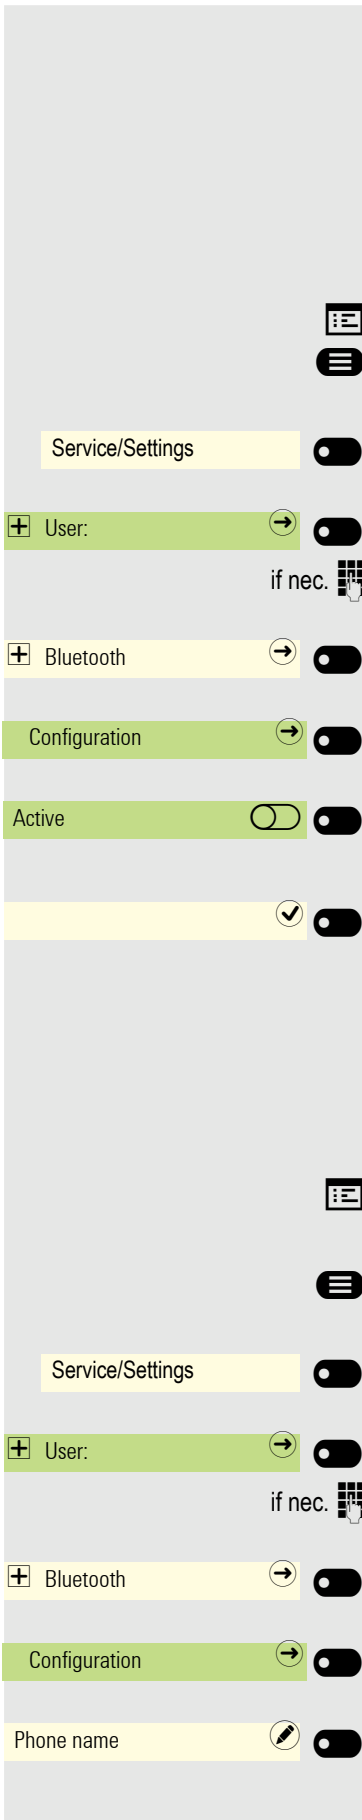

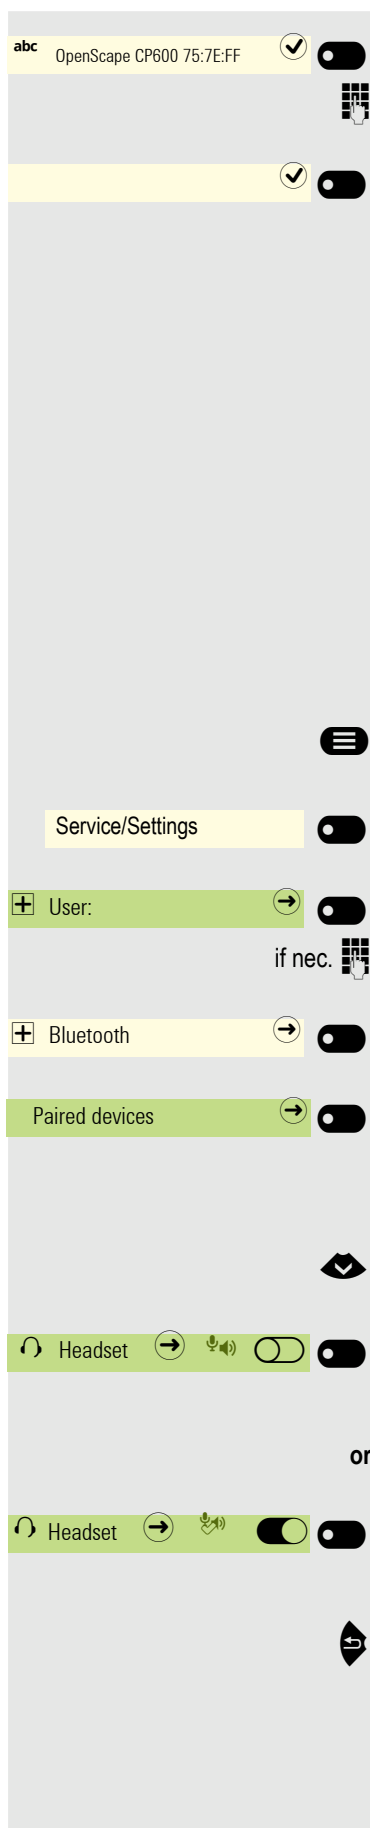

The predefined name is entered.

Change to the desired name and conclude your input with the Softkey.

Save the setting by selecting the Softkey.

## Managing Bluetooth devices

The following functions are available in the Bluetooth pairing manager:

- Add Bluetooth devices
- Connect or disconnect paired Bluetooth devices
- Delete single Bluetooth devices
- Rename Bluetooth devices in the list



The OpenScape CP600/600E is visible to other Bluetooth devices in the vicinity when you are in this menu.

## Connecting/disconnecting a Bluetooth device

**Requirement:** At least one Bluetooth device is listed.

If nec. Press the Main Menu key.

Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Open using the Softkey.

Open using the Softkey. Paired devices are displayed.



You receive a message that the OpenScape CP600/600E is now visible for other Bluetooth devices while you are in this menu.


Select the relevant Bluetooth device.

Confirm with the Softkey to connect. You will receive a corresponding confirmation. It often suffices to switch on the Bluetooth device in order to establish the connection automatically.

or

Confirm with the Softkey to disconnect. You will receive a corresponding confirmation. The connection is dropped automatically if you switch off the Bluetooth device.

Exit the menu using the backspace key.

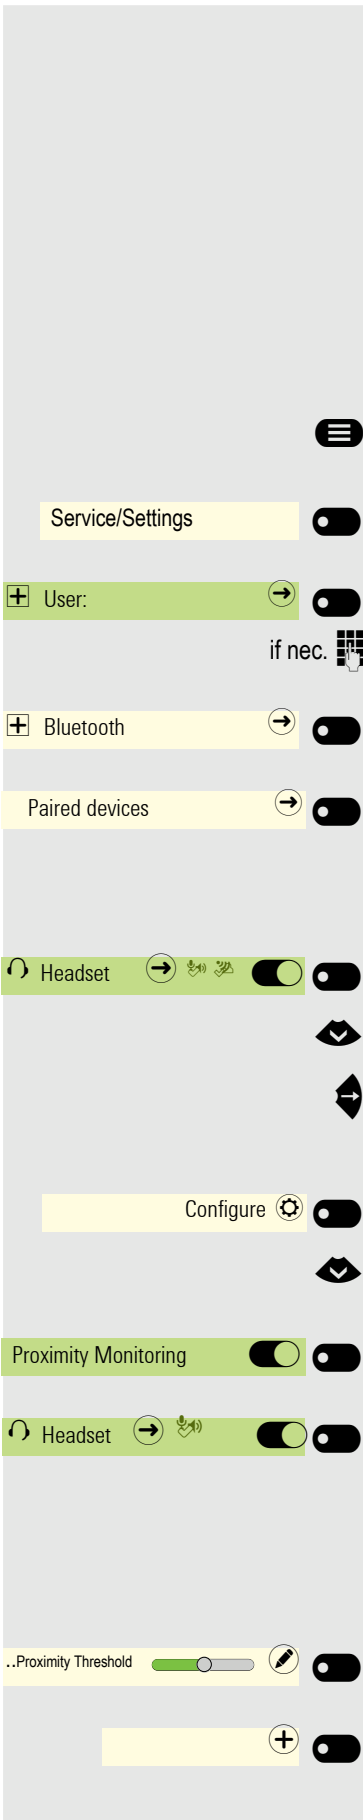

## Proximity detection via Bluetooth

You can automatically block a paired Bluetooth device, e.g. use a headset in addition to your OpenScape Desk Phone CP600, if you leave your work place wearing your headset. This will prevent anyone getting access to your personal telephone records during your absence. When you return to your workplace with the headset, the telephone will be automatically unlocked.

The distance at which this block functions can be set in the user menu. You will also find here the option to activate or deactivate this feature. The default setting is for Proximity Monitoring to be enabled but you can disable it at any time.

Of course, it is also possible to block the telephone without the Bluetooth headset locally/manually. See → page 185.

If nec. Press the Main Menu key.


Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Open using the Softkey.

Open using the Softkey.

 You receive a message that the OpenScape CP600/600E is now visible for other Bluetooth devices while you are in this menu.

Paired devices are displayed.

Select the relevant Bluetooth device.

and open it. The status of the device is displayed and activated, for example, with "(aud)."

Open the Configuration menu with the Softkey.

Select the "Proximity Monitoring" function.

Deactivate with the Softkey.

Proximity Monitoring is deactivated.


## Setting the Proximity Threshold

If required, you can set the "Proximity Threshold" to suit the required circumstances.

Open the setting for the Proximity Threshold by selecting the Softkey<sup>1</sup>.

Use the Softkey to increase the proximity.

1. The display shows the current setting

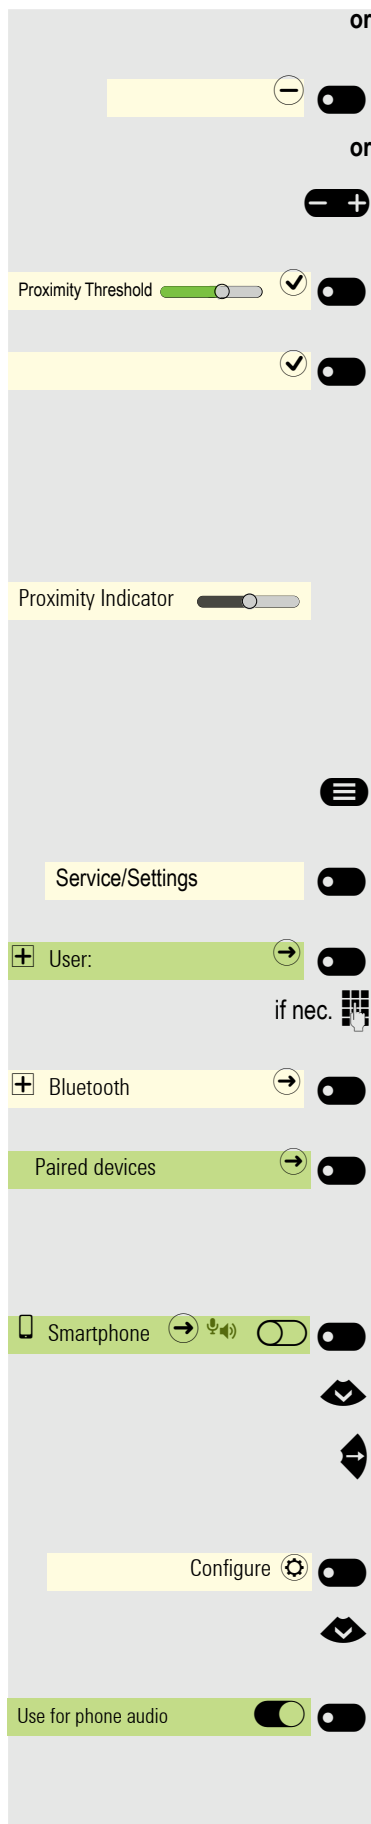

Use the Softkey to reduce the proximity

Adjust using the toggle key

Confirm the setting with the Softkey.

Save the setting with the Softkey and exit the menu.

### Checking the proximity display

Check different positions of your Bluetooth device at which the connection can still be maintained.

This is a read-only setting.

### Activating/deactivating audio

If no audio function is provided for your Bluetooth device, you should disable audio in your device's settings. The function is always activated by default.

If nec. Press the Main Menu key.


Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Open using the Softkey.

Open using the Softkey.

 You receive a message that the OpenScape CP600/600E is now visible to other Bluetooth devices while you are in this menu.

Paired devices are displayed.


Select the relevant Bluetooth device.


and open it. The status of the device is displayed and activated, for example, with "pxp" for "Proximity Monitoring."

Open the Configuration menu with the Softkey.

Select the "Audio" function.

Deactivate with the Softkey.

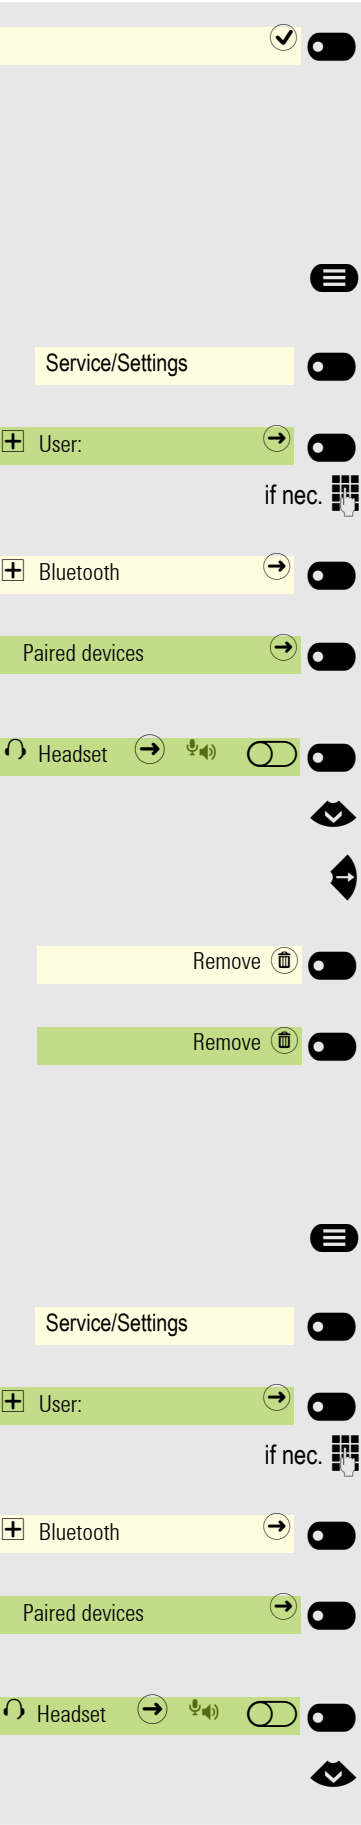

Save the setting by selecting the Softkey. The icon  for the device name was removed.

Deleting a Bluetooth device from the list

You can delete a single Bluetooth device from the list, for example, if it will no longer be in the vicinity for an indefinite period.

If nec. Press the Main Menu key.

Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Open using the Softkey.

Open using the Softkey. You receive a message that the OpenScope CP600/ 600E is now visible for other devices in the vicinity as long as the menu is open.

Paired devices are displayed.

Select the relevant Bluetooth device  
and open it.

Confirm deletion with the Softkey.

Confirm deletion again with the Softkey.

Renaming a Bluetooth device in the list

A Bluetooth device is entered in the list with the name set in the device. This is often the device type. You can change this name.

If nec. Press the Main Menu key.

Open using the Softkey.

Open using the Softkey.


Enter and confirm the User password.

Open using the Softkey.

Open using the Softkey. You receive a message that the phone is now visible for other devices.

Paired devices are displayed.

Select the relevant Bluetooth device

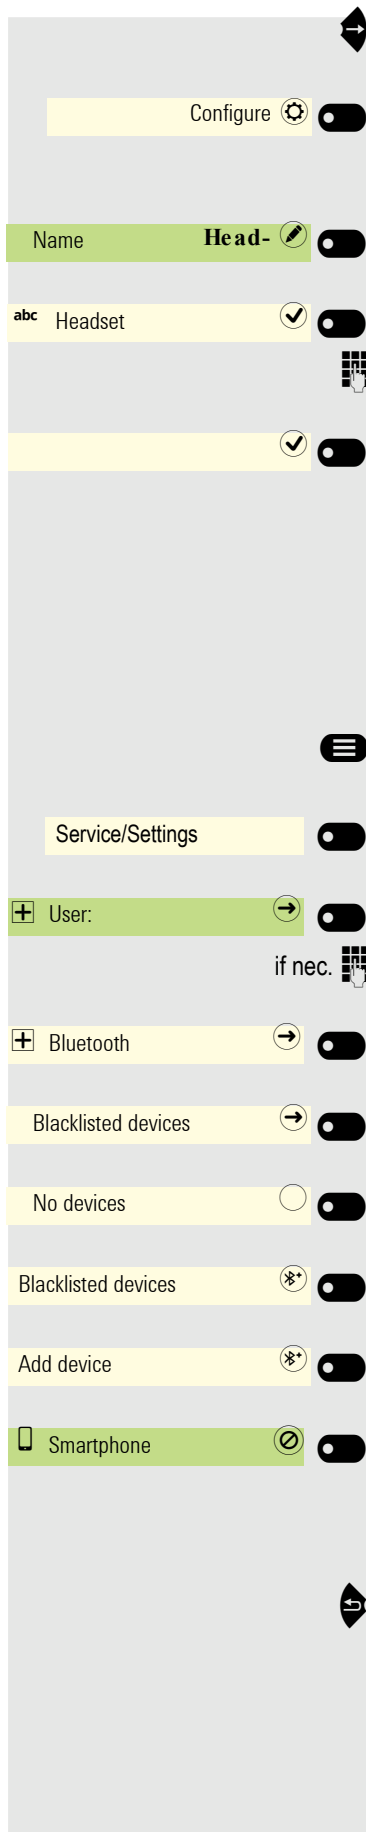

and open it.

Open the Configuration menu with the Softkey.

The current name is displayed. Open the field name with the Softkey.

The predefined name is entered.

Change to the desired name and conclude your input with the Softkey.

Save the setting by selecting the Softkey.

## Blacklist for Bluetooth devices

The blacklist contains the Bluetooth devices for which a connection setup attempt should be rejected by the OpenScape CP600/600E. The connection will only be allowed if the setup attempt comes from the OpenScape CP600/600E.

### Add this Bluetooth device to the Blacklist

If nec. Press the Main Menu key.

Open using the Softkey.

Open using the Softkey.

if nec.

Open using the Softkey.

Open using the Softkey.

No Bluetooth devices are entered, for example.

Start the search for the devices in the vicinity with the Softkey.


Repeat the search if necessary with the Softkey.

Open a located device in the search list with the Softkey. You will see the following message, for example: "Smartphone was added to Blacklisted devices". The device is deleted from the search list.

Add another device to the Blacklisted devices if appropriate,

or exit the search menu.



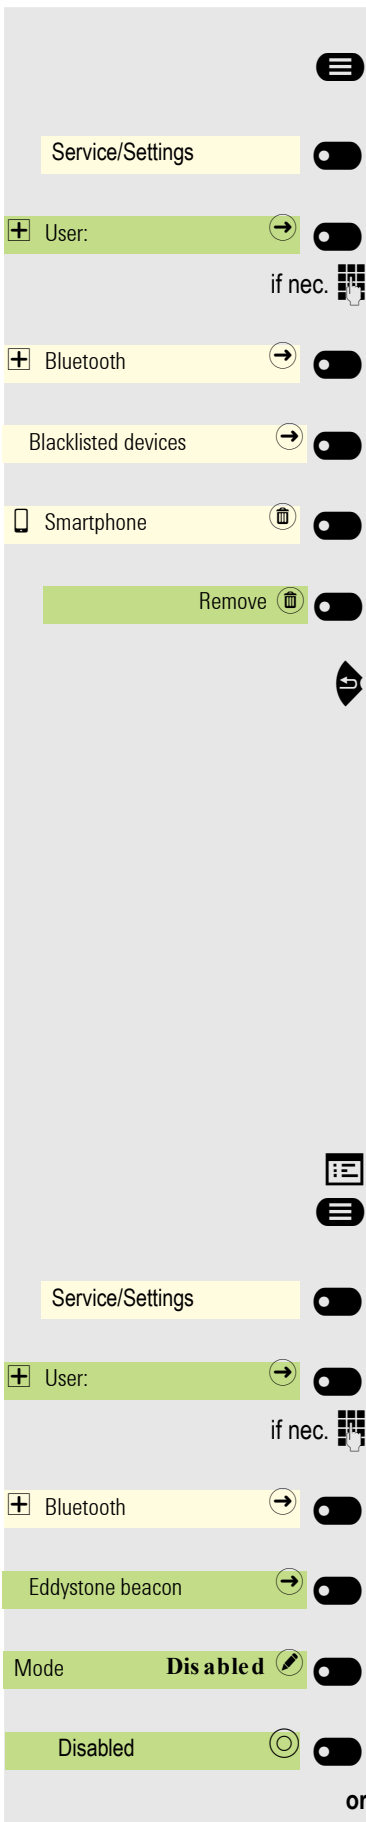

## Removing a Bluetooth device from the blacklist

If nec. Press the Main Menu key.

Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Open using the Softkey.

Open using the Softkey.

Open the device Softkey.

Confirm deletion with the Softkey. The entry is deleted.

Exit the menu.

## Eddystone Beacon

Beacons are small devices that use Bluetooth to connect to smartphones or tablets in the environment. In the retail sector, for example, they are used to present personalized special offers to customers.

The phone can use Beacons to connect to smartphones or tablets in the area via Bluetooth. You can then, for example, exchange information between the phone and a smartphone. Eddystone is an open source project by Google for Beacon applications.

## Set-up/deactivate Eddystone Beacon

You can also configure this setting via the Web interface → page 200.

If nec. Press the Main Menu key.

Open using the Softkey.

Open using the Softkey.


Enter and confirm the User password.

Open using the Softkey.


Open using the Softkey.



The current status is displayed. Open the mode with the Softkey.



Deactivate with Softkey,



Eddystone beacon 



or



iBeacon 

URI **https://unify.com**  

abc https://unify.com  

Interval (ms) **1000**  

123 1200  

Activate with the Softkey,

Activate with the Softkey.

### Beacon configuration

Select entry for URI

Current address is displayed. Open URI field with the Softkey.

If necessary, an address is entered. If necessary, an address is entered. This should be an HTTPS address that is as short as possible. For long addresses, use a URL shortener to shorten it. Cannot be changed when setting up iBeacon.

Change to the desired address and press Softkey to end the entry.

### Set up interval

Select entry for Interval (ms)

Current interval is displayed. Open the Interval (ms) field with the Softkey.

Enter new value if necessary.

Change to the desired value and press the Softkey to end the entry.

Save changed entries with the Softkey.

## Phoning on several lines (multi-line)

### Line keys


Line keys can be set up on the freely programmable feature keys on a OpenScape Desk Phone CP600/CP600E. Any key assigned the "Line" function corresponds to a line, and so up to 4 lines can be set up.

A distinction is made here between primary and secondary lines. Each of these line types can be used on a private or shared basis → page 134.

Line keys are set up by the administrator responsible.

The following graphical example displays how phones are connected within a team with several line keys.

3234 is the extension number of Mr. Meier, 3235 that of Mr. Müller, and 3236 that of Mr. Schulze. All three lines can be used to phone from all three phones. The line of the phone's own secondary extension number if, however, always the primary line.

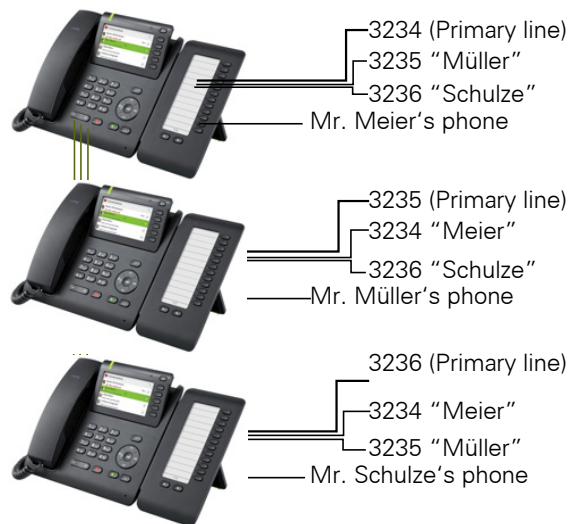

### Primary line

All multi-line telephones have a primary line. This line can be reached in the usual manner via your public phone number. Incoming calls to your number are signaled on this line.



To avoid conflict between individual multi-line phones, "Do not disturb" and "Call forwarding" can only be used for the primary line.

### Secondary line

A secondary line on your phone is used as a primary line by another participant. At the same time, your primary line can be set up as a secondary line for another phone in the system.

## Line usage

### Private line

A line that is used by a single telephone. This line cannot be used as a secondary line by another telephone.




### Shared line

A line that is configured on multiple phones. The line status is displayed by a LED for all phones that share this line (if configured). If, for example, a shared line is being used by a phone, a status message indicating that this line is busy is displayed on all other telephones sharing the line.

### Direct call line

A line with a direct connection to another telephone. You can see the status of the line from the LED.

### LED displays for line keys

 
LED	Meaning
	<b>LED off:</b> the phone is in idle mode.
	<b>Flashes:</b> Incoming call and line on hold.
	<b>LED lights green:</b> the line is busy.

## Preview


You are speaking on a line. The LED of another line key flashes. You can determine via the "Line preview" function who is calling on this line. The information is shown to you on the display. You can also determine which caller that you have previously put on "hold" or "exclusive hold" is waiting on a line key. You can also display information about the caller on the active line.

**Requirement:** You have accepted a call on a line key. The LED of another line key flashes quickly, the "Preview" is set up.

## Activating preview



 
Press the programmed "Preview" function key. LED lights up.



Press the required line key.

The information about the caller and/or waiting or parked participants is displayed.

## Deactivating preview

 

Press the programmed "Preview" function key. LED goes out.

The menu rows and the call-length display are displayed again.

## Accepting calls on the line keys

If several calls are made at the same time, as usual, you can accept calls in the order provided. You can also, however, prioritize the acceptance of other calls.

**Requirement:** The administrator responsible has determined the order in which incoming calls are directed to line keys.

## Accepting calls in the order provided

Your phone rings (call). The caller ID is displayed. The LED of the suggested line key flashes quickly.



or



Lift the handset.

Press the key and use speakerphone mode.

## Answering a prioritized call

Your phone rings (call). The caller ID is displayed. The LED of the suggested line key flashes quickly. The LEDs of other line keys are also flashing quickly.

Line 1



or



Press the prioritized line key. The caller ID is briefly displayed.

 
Lift the handset.

Press the key and use speakerphone mode.


## Activating/deactivating ringing mode (call)

If you are making a phone call on one line, ringing for other incoming calls may disrupt your conversation. If the “Ringer cutoff” function is enabled, your phone will no longer ring. Incoming calls are then only displayed via the flashing of the relevant line keys.

### With the programmed “Ringer cutoff” function key



 Switch off ringing:  
press the “Ringer cutoff” function key. The LED lights up.  
The phone does not ring upon incoming calls.



Switch on ringing:  
press the “Ringer cutoff” function key. The LED goes out.  
The phone rings upon incoming calls.

### Via service menu



Open the menu → page 23.



Select and confirm.

 


Select and confirm.



Confirm,

or




confirm.

## Forwarding calls for lines

 If you activate call forwarding for an entire line in use → page 134, the line will be forwarded in general, on other phones as well.

The configuration of call forwarding for a particular line is identical to the call-forwarding already described. Just make sure that the desired line was previously busy.



Press the line key of the desired line. LED lights up.

For more information, please see → page 96.

## Call transfer

If you are temporarily leaving your desk or do not wish to be disturbed, you can activate call transfer for the line to a target phone for incoming calls. A “Call transfer” function key (call transfer/line) can be programmed for every line.

### Activation

Call transfer




Press the programmed “Call transfer” function key. The LEDs on your phone and on the target phone light up. The line key only flashes if there is a call; it does not ring. The call is signaled on all the other team phones.



## Dialing with line keys

The phone can be set up with automatic or selectable line seizure. The administrator responsible determines if a line, and which line, is to be automatically seized if the handset is lifted or speakerphone mode enabled.

 The display screen “Please select a line” prompts the seizure of a line following lifting of the handset or pressing of the loudspeaker key.

### Dialing with automatic line seizure

Lift the handset.

Press key.

The display briefly shows the line number and line status and prompts dialing.

Example:

The line 220870 has been automatically selected.

The LED of line 220870 lights up.

Enter the phone number.

### Dialing with selectable line seizure

Lift the handset.

Press key.

You are prompted to press a free line key.


Press a free line key. LED lights up.

Example:

The line 220870 has been automatically selected.


The LED of line 220870 lights up.

Enter the phone number.

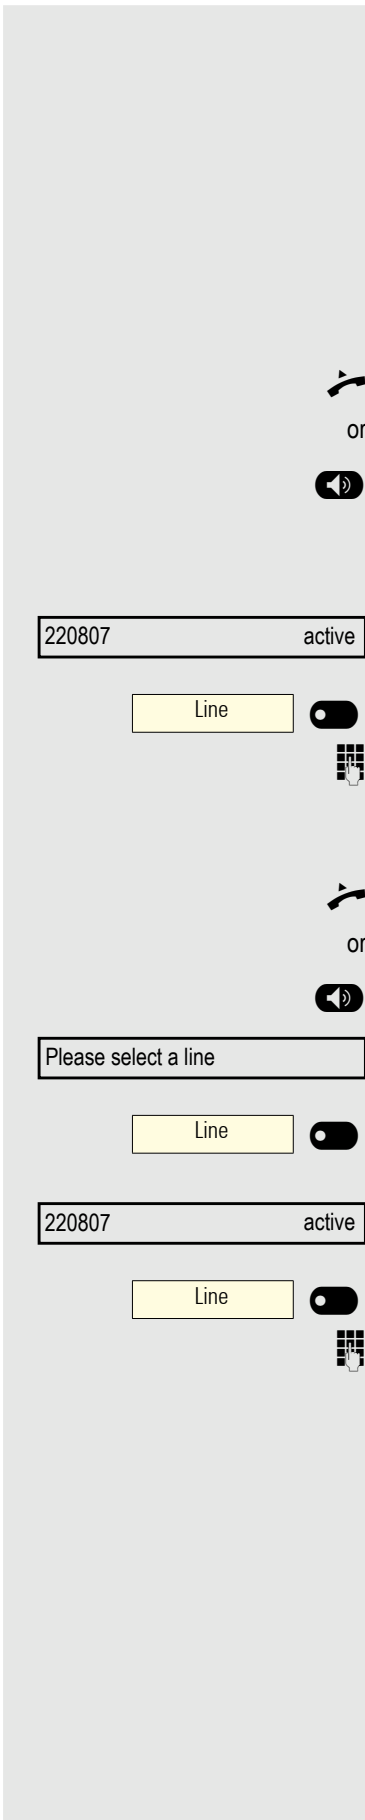

## Call waiting with a direct station select (DSS) key

 **Requirement:** You have set up DSS keys on your phone → page 16. The desired participant's line is busy.



Press the DSS key.

The participant called accepts your call waiting.



Lift the handset.

or



Press the key and use speakerphone mode.



Take note of the meaning of the LED displays on the DSS keys  
→ page 16.

## During the call

### Holding calls on line keys

Press the "hold" key. The LED of the line key flashes slowly.



Your OpenScape 4000 system can also be configured so that the call is held by pressing the line key. Try it out or ask your relevant administrator.

### Holding and then reaccepting a call on a line key

**Requirement:** You have accepted a call on a line key → page 136 or you are making a consultation call.

Briefly press the current line key,

or



Press key.

The line key on which the call is on hold flashes slowly. The call can be continued on any phone in the team on which the LED of this line key is slowly flashing.

#### Reaccepting

Press the flashing line key. Proceed with your call.

### Exclusively holding and reaccepting a call on a line key

**Requirement:** You have accepted a call on a line key or you are making a consultation call that only you are able to, intend to, or are permitted to continue.

 
Press the programmed "Exclusive hold" function key.

Select and confirm.



The line key on which the call is on hold flashes slowly. The call can only be continued on your phone and is no longer signaled on any other phones.

#### Reaccepting



Press the flashing line key. Proceed with your call.



or

  

or

  

## Directed line pickup

A colleague in an open-plan office has parked a call on a line key and calls across the room to ask you to accept the call. You have no access to this line.

Lift the handset.

Select and confirm.

Enter the extension number of the phone on which the call was parked. You can then accept the call.

## Saved number redial for a particular line (stored phone number)

If this type of saved number redial is set up on your phone, you can save a phone number for subsequent saved number redialing to a particular line → page 143. You dial the saved extension number with the line and the saved number redial keys.

Lift the handset.

or

Press key.

Display screen.


Press the relevant line key. LED lights up.

Select and confirm.

The phone number is saved for the current line.



You stored saved number redial on the relevant line can, if necessary, be overwritten by another team colleague.

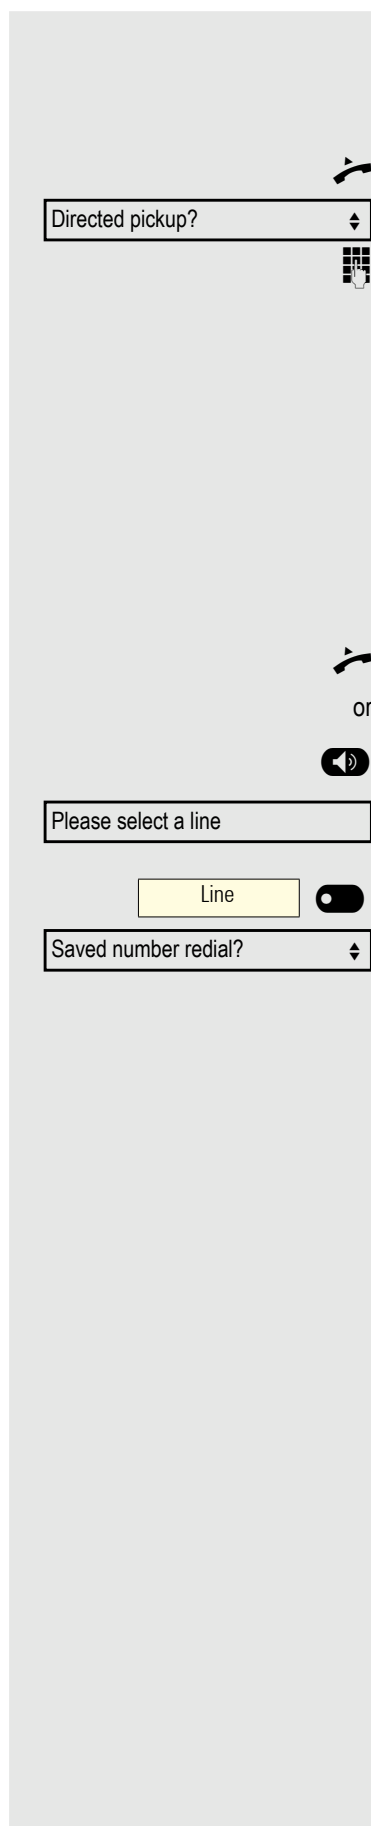

## Most recent extension number dialed for a particular line

The most recent extension number dialed via your main line is saved.

If this type of saved number redial is installed on your phone, each most recently dialed extension number is automatically stored for the current line's saved number redial.



or



Lift the handset.

Press the key and use speakerphone mode.

Line



Press the required line key. LED lights up.

Dial most recent number?

Confirm.



or



Lift the handset.

Press the key and use speakerphone mode.

## Saving an extension number for "saved number redial to line"

**Requirement:** "Saved number redial with stored phone number" has been configured, and not "saved number redial with most recently dialed phone number."

## Saving the dialed extension number or extension number of a caller

You have called a participant on a particular line and are still on the phone with him. Or you have been called by another participant, whose phone number was transmitted, and you are still on the phone with him.

Saved number redial



Press key. The phone number is saved for the current line.



Press key. LED goes out.

or



Replace the handset.

## Line mailbox

Callers who wish to reach you while you are away can leave a callback request in the mailbox of the relevant line.

In the mailbox you will also find voice or fax messages from the mail server (if configured).

**Requirement:** A mailbox has been configured for one or more lines.

Please take note that only one user at any one time can work with the same mailbox.



If your phone belongs to an ONS group (parallel calls → page 179), please note the following special features: signaling in the mailbox (MWI) is available to all phones of an ONS group.

## Retrieving messages

If there are new, as yet unqueried entries in the mailbox and a programmable function key has been equipped with the “Mailbox” function, the LED lights up this key.

Also take note of the information on → page 18.

Press the “Mailbox” function key.

Information on the caller is displayed → page 18.

## Carrying out a callback request

A callback request is displayed.

Select and confirm. The participant is called on the relevant line.

## Next entry

There is more than one entry.

Select and confirm. The following entry is displayed.

## Deleting mailbox entries

The relevant entry is displayed.

 
Select and confirm.

## Ending mailbox query

Press key.

Select and confirm.

Entries in the mailbox which are not deleted remain saved. If there are as yet unqueried callback requests, the programmed “Mailbox” function key continues to light up.



Start? ▾

Next entry? ▾

Delete? ▾



or

Cancel? ▾

### Identifying the line used

If several lines are busy at the same time, you can find out which line you are currently speaking on.

#### With the programmed function key

Press the programmed “Current line” function key.

#### Via the menu

Open menu → page 19.

Select and confirm.

Select and confirm.

The line number and line status of the line currently in use are displayed.

### Alternately phoning on several lines

**Requirement 1:** The relevant administrator has determines that the lines are to be held during line transfer and may only be ended by hanging up the handset or with the disconnect key.

**Requirement 2:** You are connected to different call partners on two or more lines. These could be callers → page 136 or call recipients → page 89.

For example, you are conducting a call on line 1. The line key of the participant on hold flashes slowly.

Press the slowly flashing line key 2. The first call partner is waiting on line 1.

Press the slowly flashing line key 1. The second call partner is waiting on line 2. You can change as often as you like.

### Ending connection on a line key

Press key. LED goes out.

or

Replace the handset.



## Entering a call on a line (three-way)

**Requirement:** You are speaking on a line. The LED of the line key lights up.

Press the line key. A conference tone is audible to you and the participants already connected. All three participants can now speak with one another. LED continues to light up.



Entry is not possible if the “Private call” function is activated for the line. If one of the three participants hangs up, the other two remain connected.

If you as the entering party, and the participant who previously occupied the line, remain on it, no further callback is possible.

## Allowing or preventing entry

### Allowing entry

It can be preset for your primary line that nobody can enter the line if it is busy. In this case you may allow entry. The authorization applies to the current or following call.



or



You are already conducting a call on a line.

Lift the handset.

### With the programmed function key

Press the programmed “Private call” function key.

 
### Via the menu

Open menu → page 19.




Select and confirm.

Select and confirm.

Entry is now allowed.



or

   



## Preventing entry

If no entry protection has been preset, you can prevent the entry. The entry protection applies to the current or following call.



or



You are already conducting a call on a line.

Lift the handset.

## With the programmed function key

Private call



Press the programmed “Private call” function key.

## Via the menu



Open menu → page 19.

More features? →



Select and confirm.

Privacy on?



Select and confirm. Entry is now prevented.

## Witness or tape connection

During a call a previously determined participant can be prompted to enter the call as a “witness” via a programmed “Request silent monitor” function key. The third participant in the call is not informed of the connection of the “witness”. The witness can not participate in the call, only listen in.



Please take note of the applicable data protection regulations for the configuration and use of witness or tape connection.

**Requirement:** The witness or tape connection is set up on your system and the programmed “Request silent monitor” function key is set up on your phone. You are conducting a call. “Private call” must be deactivated.

Request silent



or

Line 1



Press the programmed “Request silent monitor” function key briefly twice. A special ringtone sounds on the phone of the “witness” and the message “Witness or tape connection” is shown on your display and that of the “witness”.

The “witness” lifts the handset,

presses the line/function key on which the call is being carried out.

The “witness” can now listen in to the call unnoticed.



Only the “witness” can end the silent monitoring by hanging up or pressing the line key.

## Deactivating

Call transfer



Press the programmed “Call transfer” function key. The LED goes out. A call is again signaled on the phone.

## Accepting calls for the manager in the secretarial office

For calls for the manager, the phone rings in the secretarial office.

Lift the handset.



or



Press the key and use speakerphone mode.

## Accepting calls for the manager during a call

You are conducting a call.

A call is coming in for the manager.



Ask your call partner to wait.

Pickup



Press the programmed function key "Pickup" (→ page 14).

End and go back?



## Ending a call - back to the first call:

Confirm.

Continue the call with the first call partner.

## Transferring a call to the manager

**Requirement:** You have accepted a call for the manager in the secretarial office.

Manager



Press the "Manager" DDS key. You are connected with the manager.

### With announcement

Announce call partner.



Replace the handset.



### Without announcement

Immediately replace the handset.



## Switching calls directly to the manager

If the secretarial office is not occupied, calls for the manager can be immediately switched to the manager. The switch is possible on both the phone in the secretarial office and on the manager's phone.

### Activating

Press the programmed function key "Call transfer Manager". LED lights up.

### Deactivating

Press the programmed function key "Call transfer Manager". LED goes out.



Calls for the secretarial office's phone are not switched, only calls for the manager's phone.

## Accepting calls on the manager's phone

In the secretarial office a signaled call is not accepted for the manager. After 15 seconds (depending on the system), you will hear an alert tone signal on the manager's phone. The display shows who is calling.

Lift the handset.

Press the programmed function key "Pickup" (→ page 51).

## Accepting a call for another "Management/Secretarial" team

 
 
 
 
If several "Management/Secretarial" teams are set up, they can also accept calls for other teams.

Lift the handset.

Press programmed function key, for example, "Manager 3".



Pickup is also possible during a call. Ask your call partner to briefly wait, before pressing the flashing programmed function key.



## Using the second phone for the manager

**Requirement:** a second phone has been set up for the manager. A programmed “Parking” function key is set up on the manager’s first and second phone.

### Parking a call on the first phone

Press the programmed “Parking” function key. LED lights up.

### Continuing a call on the second phone

Lift the handset.

Press the programmed “Parking” function key.

## Activating/deactivating second call for the manager

As the manager you can determine if calls for you should arrive in the secretarial office while you are on the phone. If you are on the phone and expecting another important call at the same time, it perhaps makes sense to switch on second call.


Open menu → page 19.

Select and confirm.

Confirm.

Confirm

confirm.

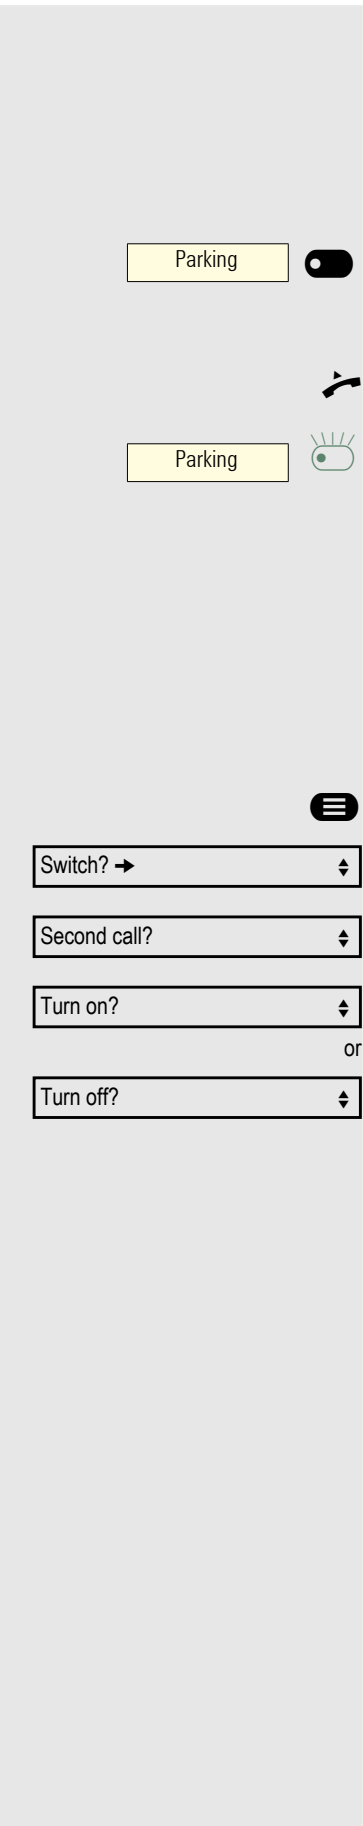

## Using buzz function

If, on your manager's phone, a programmed "Buzz" has been set up, you can trigger a buzzing on a particular target phone (e.g. in the secretarial office) via a key press. The extension number of the calling phone is also briefly displayed on the target phone when it buzzes.

The programmed function key can be activated when in idle mode and during the phone call (once or several times).

If no programmed "Buzz" has been set up, you can pick up the handset and enter the "buzz" code to create a buzzing on a target phone.

 
## Messenger calls

You can call up messages with a key press if you configure a relevant key on the manager's phone. Assign function key with function →→ page 14.

## Setting a representative for the secretarial office


You can forward calls for the manager that come into the secretarial office to another phone. For this you must set up a programmed "Representative" function key. This works exactly as described in the chapter "Function keys in the menu Favorites" → Page 14 (here Representative).

### Activating representative:



Press the programmed "Representative" function key. LED lights up.

### Deactivating representative:

 

Press the programmed "Representative" function key. LED goes out.

# Other settings and functions

## Save appointments

### Appointment function

You can arrange for your phone to call you to remind you of an appointment. For this to happen, you need to save the desired times of the calls. This is possible for the next 24 hours.

### Save appointments

Open menu → page 23.

Select and confirm.  
It is shown, whether an appointment is saved or not.

First appointment: Confirm.  
Other appointment: Select and confirm.

Enter a 3 or 4-figure time, e.g. 845 for 8:45AM or 1500 for 3:00PM.

Confirm.

### Delete saved appointment

Open menu → page 23.

Select and confirm.  
A saved appointment is displayed.

Confirm if you have saved several appointments.

Select and confirm.

Press key.



Appointment :



## Using timed reminders

**Requirement:** You have saved an appointment. The saved time arrives.

The phone rings.

Lift the handset. The appointment time is displayed.

Replace the handset.



Don't pick up the phone, the phone rings several times and "Appointment" is displayed before the appointment is deleted.

## Using a different phone for a call in the same way as your own

You can identify yourself with a personal identification number (PIN) on a different phone of the OpenScape 4000-system (also on telephones of interlinked OpenScape 4000-systems, e.g. at other company locations). Then you can use the other phone

- calling with cost allocation,
- dial with project assignment,
- Check your mailbox,
- Use a phone number stored on your phone for redial,
- Enter appointments.

With an internal PIN you can divert your calls to another telephone at your place of residence (call forwarding "redirect")

## Identify yourself on another phone

**Requirement:** You have received a PIN from your responsible administrator. An internal PIN is required for your own OpenScape 4000-system. For other OpenScape 4000-systems in the network, you need a network-wide PIN.

Open menu → page 23.

Select and confirm.

Select and confirm.

If you have several PINs and you want to use another, select another PIN.

Upon the display of "Enter the phone number:" or "Enter ID", you are prompted to enter the PIN.




PIN and license of service?



PIN 1?





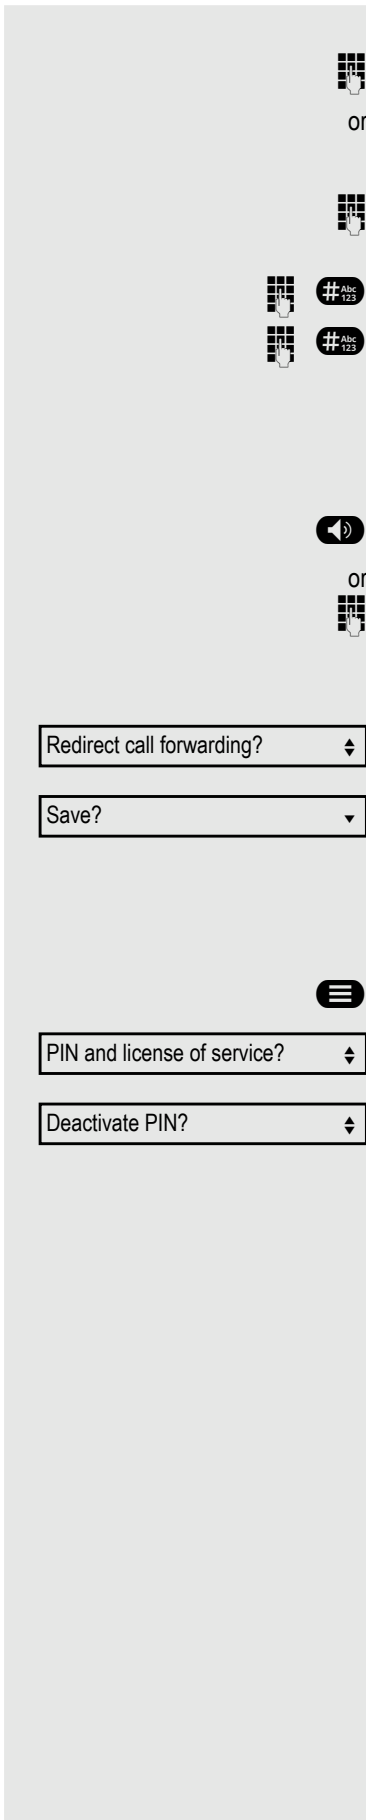

### Applies in own OpenScape 4000 area

Enter internal PIN.

### The network applies in your own and other OpenScape 4000-systems

Enter the 2-digit node code for your own OpenScape 4000-system (ask responsible administrator).

Enter your own phone number and press the hash key.

Enter network-wide PIN and press hash key.

### Dial after successful identification.

You hear the dial tone. "Please dial" Appears in the display.

Press key.

Enter a phone number immediately.

### Retry call forwarding after successful identification

Select and confirm.

Select and confirm. Call forwarding is active.

### Switch off identification on another device

Open menu → page 23.

Select and confirm.

Select and confirm.



The identification is automatically switched off if the different device is not used for several minutes.

## Set your own connection to another phone (Mobility)

You can route the connection of your telephone to a different telephone with most of the functions and features (number, key assignment, authorizations). The "home phone" is disabled and the "guest phone" becomes "your" phone. The original connection of the "guest phone" is also deactivated, therefore a call forwarding key should be set up for its phone number beforehand → page 96. The re-route remains in place until you log out of the "guest telephone" again. The re-route can also be implemented for the entire network.

### Mobility variants

There are two variants available for mobility:

- Basic
- Data privacy

Configuration is carried out by the technician.

#### Basic

When "logging on" to the "guest telephone", the following settings are transmitted from the mobile connection:

- Key assignment
- Authorizations
- Call forwarding

In addition, outstanding messages or texts are signaled.

"Guest phone" conversations are visible and can be used.

The conversations you have had in the meantime are automatically deleted from the phone once you log off.

#### Data privacy

When "logging on" to the "guest telephone", the following settings are transmitted from the mobile connection:

- Key assignment
- Call forwarding
- Authorizations (apart from user password)

In addition, outstanding messages or texts are signaled. The user password is not transferred, so you have to create a new password on the phone.

An empty conversation list is available to you which will be automatically deleted again after logging off from this phone.

### Connect to "guest telephone"

Log on to own connection on the "guest phone".


Open menu → page 23.

Select and confirm.



Mobile HFA Logon?



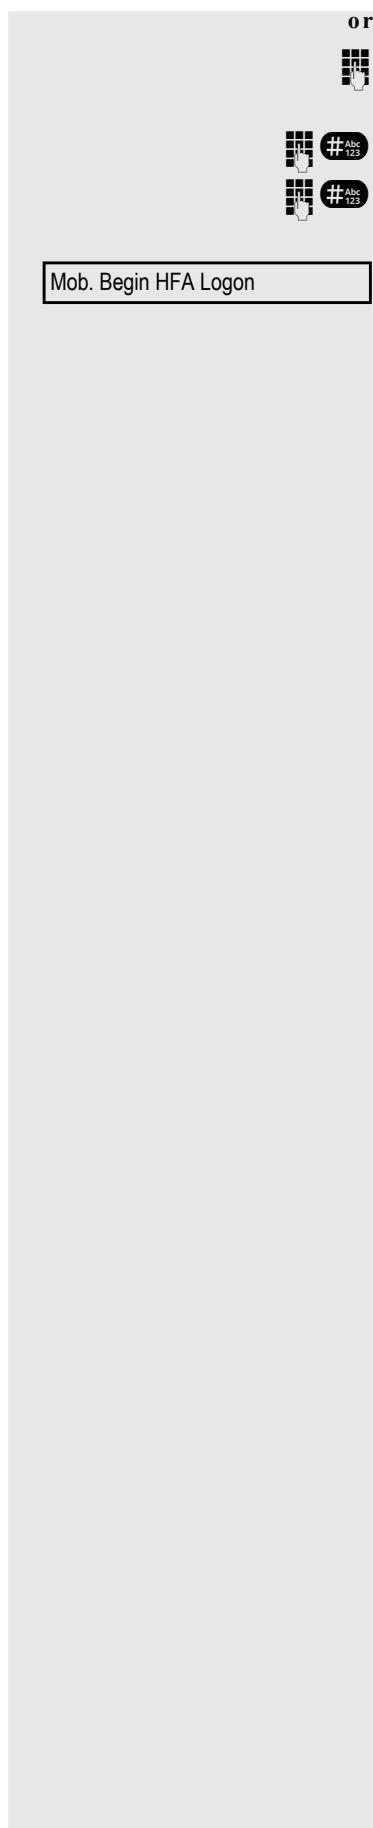

in phone's idle mode.

Enter the system code for "mobile HFA Logon" (e.g. 125).

Enter "home" phone number and press hash key.

Enter ID and press hash key.

The login procedure starts.

After logging in, you will see your own phone number in the last line.

The original user settings of the "guest phone" are no longer visible, but your connection is available. Your "home phone" can not be used during this time.

## Connect to “home phone” again

### Log off via the “guest phone”

If you no longer require a connection to the “guest phone”, and/or if you want to switch again to your “home phone”, log off from the “guest phone”.

Open menu → page 23.

Select and confirm.

in phone’s idle mode.


Enter system code for “mobile HFA logoff” (e.g. 126).

The logoff procedure starts.

### Log off via the “home phone”


If you have forgotten to log off on the “guest phone”, you can pick up from the “home telephone”.

Display on the “Home phone”.

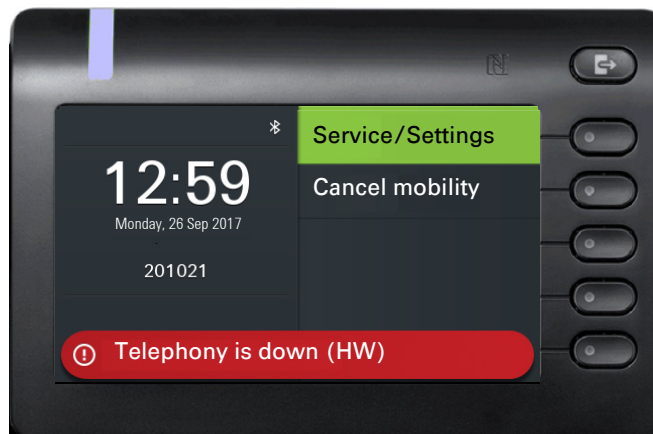

Confirm.

If your responsible administrator has activated the “Mobility password”, you are prompted to enter it now.

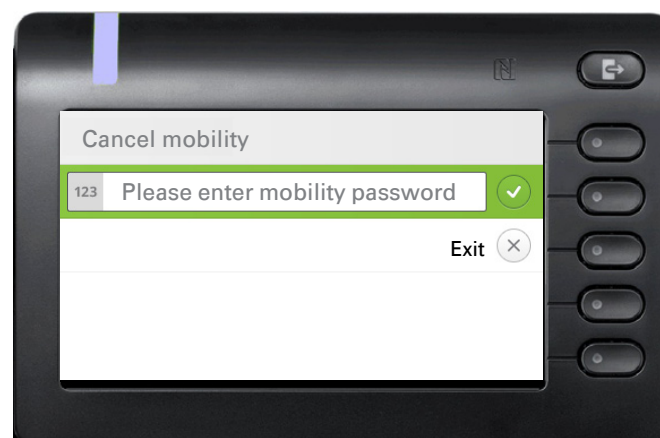

Mobile HFA Logoff?

or



Mob. Begin HFA Logoff

Cancel mobility



Please enter the “mobility password”.

The "guest phone" is now once more available with its original phone number, features, and functions. Any call forwarding that may have been set up can be cancelled.

The "home phone" is activated again and you can make calls as usual.

## Transfer connection to next phone

If you want to transfer your connection from the first "guest phone" to a second "guest phone", log in to the second "guest phone" (see → page 156).

The message "Logout successful" is displayed on the first "guest phone". The “home phone” remains locked. You can now use the second "guest phone" as the first.

## OpenScape 4000 as house call system (intercom system)

You can speak to an internal subscriber on the OpenScape 4000 directly using the loudspeaker on their phone to set up a connection. You can also initiate a speaker call from a consultation call. The following functions are possible:

- System-wide voice calling
  - to a variable destination
  - to a fixed destination
- Speaker call in a group
  - to a variable destination
  - to a fixed destination
- Intercom within a group
  - to a variable destination
  - to a fixed destination
- Announcement to all members of a management group

You can cancel the voice calling or the announcement by placing the handset on hold, or resuming the call during a consultation.



For all functions, ensure that the Speaker call protect of the concerned phones is switched off → page 182.

If a subscriber is addressed directly whose speaker call protect is activated, the direct answer is ignored and a normal call is made.

### System-wide voice calling

You can initiate a speaker call with any internal participant whose phone has a hands-free function or a loudspeaker.

#### Speaker call to a variable destination

A target subscriber is contacted via their internal phone number.

Lift the handset.

Press the key and use speakerphone mode.

System code for “Speaker call-one-way” (ask relevant administrator if necessary)

Press programmed “Speaker call” key.

Enter internal phone number of subscriber.

A connection to the target’s loudspeaker is established immediately, if


- not busy,
- the handset isn’t lifted,
- and the speaker call protect isn’t activated.

The caller receives a confirmation tone when the connection is established and they can talk.

The receiver can establish the connection by picking up the handset.

When the receiver the loudspeaker key

presses the line key (if set-up), the connection is cancelled.

 The amount of possible speaker calls corresponds to the number of possible normal connections.



123456



### Speaker call to a target destination

The system code for “Speaker call-one-way” and the destination phone number are programmed on a destination dial key → page 96.

Press programmed dial key. It will immediately establish a connection with the destination's loudspeaker.

### Speaker call in a group

Establishing a normal connection within a group or team (with team call= speed dial number for team members 0-9 or 00-99) can also be done via speaker call. Speaker call is initiated by a group phone.



The “Voice call group participants” function is line-independent - anyone can voice call anyone else.

### Speaker call to a variable destination



Lift the handset.

or



Press the key and use speakerphone mode.



System code for “Voice call group participants” (ask relevant administrator if necessary).

or

Call group participants



Press programmed key for “Call group participants”.



Enter the speed dial code for the corresponding group member.

A connection to the target's loudspeaker is established immediately, if

- not busy,
- the handset isn't lifted,
- and do not disturb mode isn't activated.



The recipient answers the speaker call by picking up the handset.



When the receiver the loudspeaker key


or

123456



presses the line key (if set-up), the connection is cancelled.



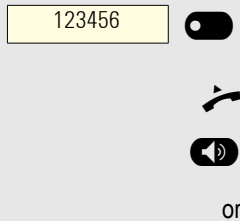

### Speaker call to a target destination

The system code for "Voice call group participants" and the speed dial number for the corresponding group member are programmed on a destination dial key → page 96.

 
Press programmed dial key. It will immediately establish a connection with the destination's loudspeaker.

The receiver can establish the connection by picking up the handset.



When the receiver the loudspeaker key

or



presses the line key (if set-up), the connection is cancelled.

### Speaker call to a variable target

When talking in a group, the loudspeaker and microphone on the target phone are automatically turned on.



Lift the handset.

or

 


Press the key and use speakerphone mode.



System code for "Speaker call" (ask relevant administrator if necessary)

or




Press programmed key for "Speaker call".

Enter the speed dial code for the corresponding group member.  
Loudspeaker and microphone of the target phone are automatically turned on.

### Speaker call to a target destination

 The system code for "Speaker call" and the speed dial number for the corresponding group member are programmed on a destination dial key → page 96.



Press programmed key.

Loudspeaker and microphone of the target phone are automatically turned on.

## Announcement (Broadcast) to all members of a management group

With this function, you can send an announcement to all members (10 to 40) of a management group at the same time.



After you have set the group call, you will receive a confirmation tone when you can start the announcement.



Lift the handset.

or



Press the key and use speakerphone mode.



System code for “Speaker call-1-way bcst” (ask relevant administrator if necessary)

or

Speaker call-1-



Press programmed “Speaker call-1-way bcst” key.



Enter the internal phone number of a group member.



The loudspeakers of all group telephones are automatically switched on and you receive a confirmation tone. You can begin the announcement.



Hang up the handset to end the announcement.



Once a group member lifts the handset, they are then connected to you and the announcement is cancelled.



When a group member presses the loudspeaker key

or

DSS




the concerned line key of the announcement, he will then be separated from the announcement. If the last remaining member of the group presses the loudspeaker or line key, the announcement is ended.

## Forward calls for another connection

You can save, turn on, query, and turn off call forwarding for another phone, fax, or PC connection from your own phone. To do so, you must know the PIN of the connection or the authorization "Call forwarding for external connection". In both cases, the responsible administrator of your system will help you.

### Save destination for other phone - Activate call forwarding



Destinations?


▼

Forward phone number.:?

⬆


Variable Forwarding?

▼




Complete?

▼



Complete?

▼



Save?

▼

- Open menu → page 23.
- Confirm.
- Select and confirm.
- Confirm.
- Enter phone number of other phone.
- Confirm.
- Enter PIN
- Confirm.
- Enter the destination phone number.
- Select and confirm. Call forwarding is active.

## Save destination for fax /PC/busy stations- call forwarding activated

Open menu → page 23.

Confirm.

Select and confirm.

Enter the code for the desired call forwarding type. Codes are assigned by the responsible administrator. In the table, you can enter the key figures that are valid for you:

"Forwarding for Fax":
"Forwarding for PC":
"Forwarding for Busy":

Enter phone number of other connection.

Confirm.

Enter PIN


Confirm.

Enter the destination phone number.

Confirm.

Call forwarding is active.


Check/turn off call forwarding for other phone




Switch? ▾

Forward phone number.:? ▾

Variable Forwarding? ▾



Complete? ▾



Complete? ▾


Turn off? ▾

or

Query? ▾

3428----->8968

- Open menu → page 23.
- Select and confirm.
- Select and confirm.
- Confirm.
- Enter phone number of other phone.
- Confirm.
- Enter PIN
- Confirm.
- Deactivating
- Confirm.
- Query
- Select and confirm.
- Example for the display:
- Calls to connection 3428 are redirected to connection 8968.

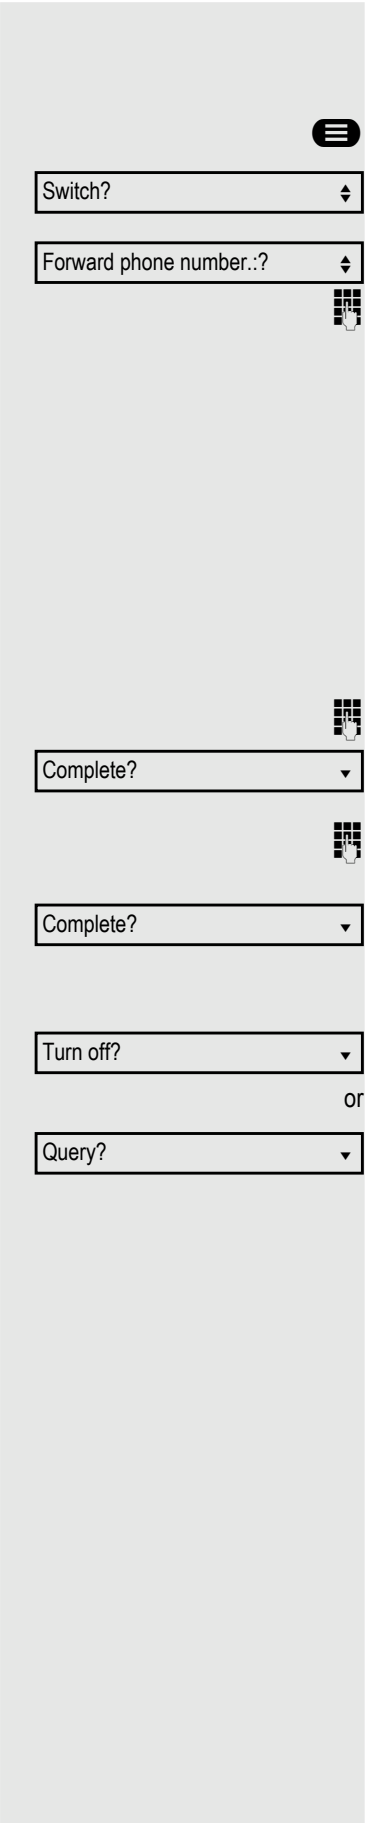

### Check/deactivate call forwarding for fax/PC/busy stations

Open menu → page 23.

Select and confirm.

Select and confirm.

Enter the code for the desired call forwarding type. Codes are assigned by the responsible administrator. In the table, you can enter the key figures that are valid for you:

"Query call forwarding for fax":
"Query forwarding for PC":
"Query call forwarding for busy":
"Deactivate call forwarding for fax":
"Deactivate call forwarding for PC":
"Deactivate call forwarding for busy":

Enter phone number of other connection.

Confirm.

Enter PIN

Confirm.

### Deactivating

Confirm.

### Check

Select and confirm.

### Change call forwarding for other connection

To do this, follow the same procedure as for saving / switching on:  
for a different phone → page 165, for fax, PC, or busy → page 166.

## Control OpenScope UC preferred device settings from phone

You can easily control and modify your UC preferred device from your CP phone. Press the Presence Softkey to open the Presence menu. Your selected preferred device is shown next to the UC preferred device option.

To choose another device, highlight **UC preferred device** and press the Softkey next to it.



The UC preferred device screen shows a list with the names of all the devices you have configured through the UC web client.

To select a new device, highlight it and press the Softkey next to it.



➡ The UC preferred device for incoming and outgoing calls will always be the same when configured via the CP phone.

The LED state will change to amber color if the UC preferred device is not the ONS (One Number Service) device, otherwise it will stay off.

➡ If the UC server is unavailable or the user has not provided correct credentials, "no preferred device state" will be displayed in presence screen menu.

## Watching a video stream through a camera

You can open a video stream by using a camera e.g. from the door phone and watch a real-time video on your CP600/CP600E telephone device, when the administrator has configured your device. This enables you to monitor your place.

The telephone can control up to four different cameras, but only one of them can be used at a time. Multiple telephone users can watch the video simultaneously.

## How to program a camera

### Example: Programming your door phone's camera

**Prerequisite:** Direct video has been enabled by your administrator.

At first you have to set up a programmable key for the activation/ deactivation of the camera.

Hold down the Function key on the OpenScape Key Module 600E to which you want to assign the camera until the programming prompt is displayed.

or If you want to use a Function key next of your screen



If nec. Press Main Menu key.

Favorites



Open using the softkey.

Favorites (1/2)

Page 1



Select desired page (1 to 4).



Press and hold the Function key to which you want to assign the camera.



Select "Assign local feature"

Assign local feature



Confirm.

Direct video



Confirm.

Camera 1



Confirm. The key is programmed.

See also at → page 87 that explains how to set up a local feature

### How to activate/ deactivate the camera

**Prerequisite:** The Direct video has been enabled by your administrator.


When you have configured a programmable key on the key module for the camera, you can press the relevant softkey to turn the camera on.

or If you have used a Function key next of your screen



If nec. press Main Menu key.



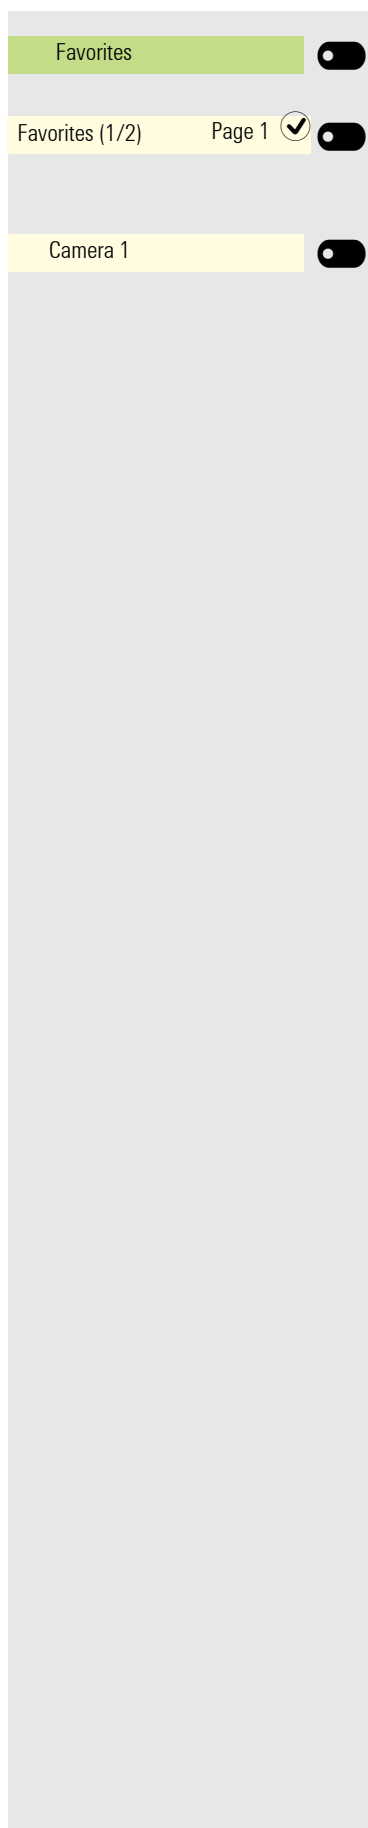


Open using the softkey.


Select desired page (1 to 4).

Press the softkey that corresponds to the camera you want to activate.

The video turns on and you can see the following screen:

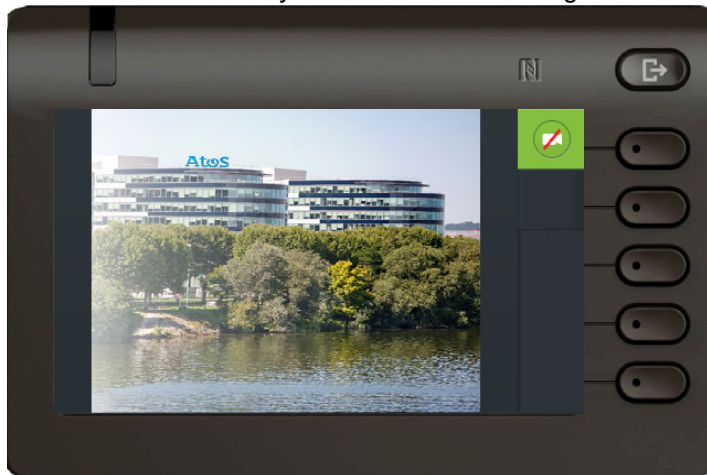

To deactivate the video, click the softkey next to the camera icon. You will return back to the idle screen of your telephone device.

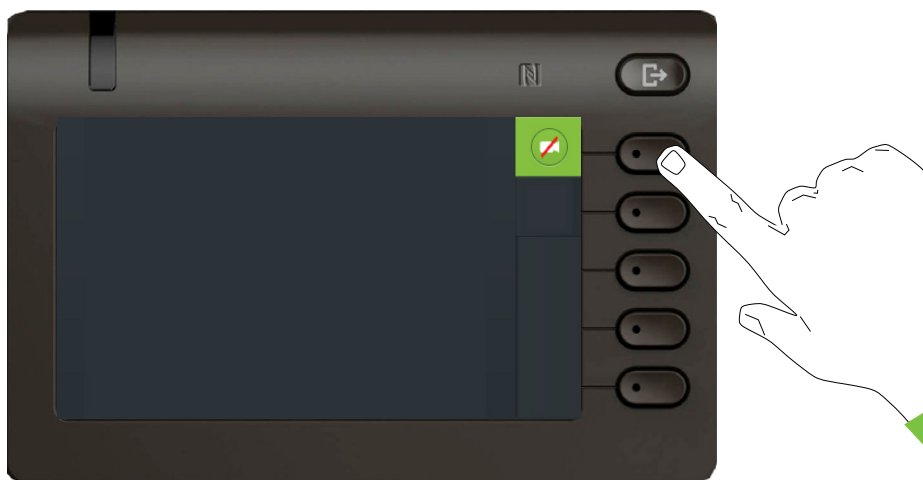

## Managing avatar images

You can download new avatar images to the phone and use them to change the picture of a contact.

### Downloading an avatar image

Press the key for the Main menu if appropriate.

Open using the softkey.

Open using the softkey.

Enter and confirm the User password.

Open using the softkey.

Open using the softkey.

Browse and select the avatar picture you want to upload.

Avatar picture's file extension can be PNG, BMP or JPEG.

In case you download a file with an extension which is not supported, a message "Only JPG, BMP or PNG files are allowed as picture clips/avatars" is displayed to indicate invalid file type.

In case you download a file of invalid size, a message "Avatar files limited to 100 KB Kbytes" is displayed.

Click to start downloading.

Note: There can be multiple files for the same file name if each file uses a different extension.

Click to delete all user avatar images and restore the default ones.


### Changing a contact avatar

When picture transfer process is successfully, avatar picture is available to be selected on the phone and can be changed from contact details for each contact.

Open using the softkey and select a contact.

Open using the softkey.

Select to edit the avatar.

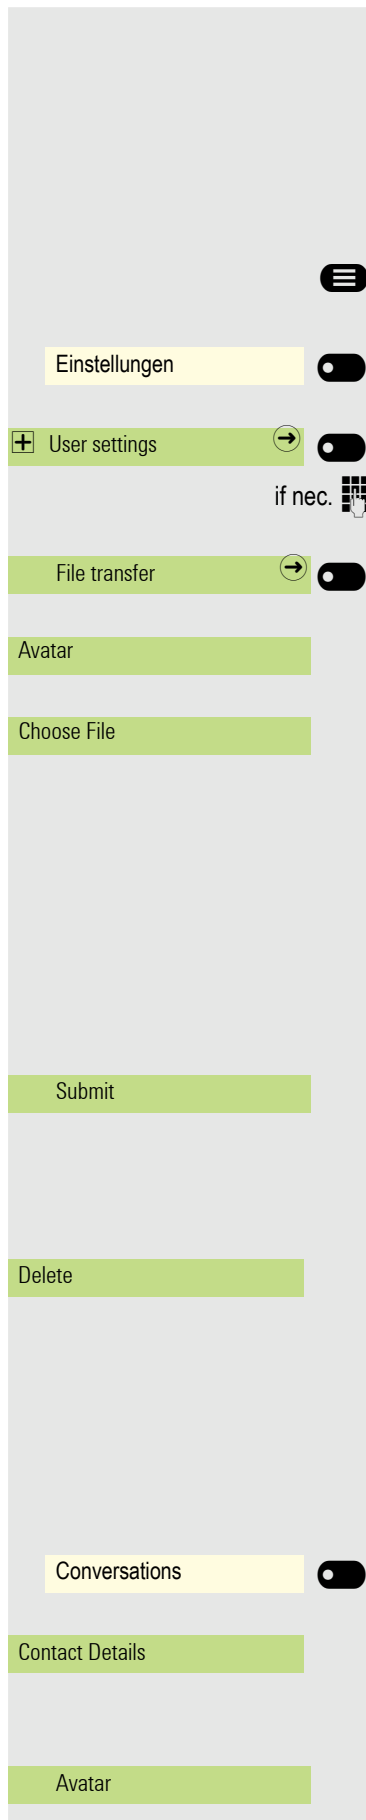

You can select an avatar image from the list of available images or remove existing picture from the phone.

You can allow to link or unlink an avatar image to a non-Circuit contact.

Avatar picture is shown left-justified on the list and the picture name is displayed next to it. Pictures are ordered alphabetically based on file name.

In case you don't want to use an avatar picture, you can use the default grey avatar.

After the original avatar picture has been successfully uploaded, it will be down-scaled to 64x64 and saved in that resolution. The image with the original resolution is deleted and the original avatar image is uploaded to "/data/images" on the phone.

The suitable picture is displayed as the avatar for the contact entry in the conversation list or a call screen.

If case the picture size is not suitable, the file is rejected and a message "File transfer failed" is displayed.

## Door opener

### Activating the Door opener

**Prerequisite:** Door opener has been enabled by your administrator.

At first you have to set up a programmable key to open a door.

See also at → page 87 that explains how to set up a local feature.

Hold down the Function key on the OpenScape Key Module 600E to which you want to assign the door until the programming prompt is displayed.

If nec. Press Main Menu key.

Open using the softkey.

Select desired page (1 to 4).

Press and hold the Function key to which you want to assign the door.

Select "Assign local feature"

Confirm.

Confirm.

Confirm. The key is programmed.

### Opening the door without receiving a call

**Prerequisite:** The functionality has to be enabled by your administrator.

When you have configured a programmable key to open the door, you can press the relevant Softkey to open the door for your visitor without receiving a call from the door phone.


Press the Function key on the OpenScape Key Module 600E to which the door has been assigned.

If nec. press Main Menu key.

Open using the softkey.

Select desired page (1 to 4).

Press the Function key to which the door has been assigned. The door opens. In case there is a problem with the communication with the door, you will see a pop-up message on your device screen.

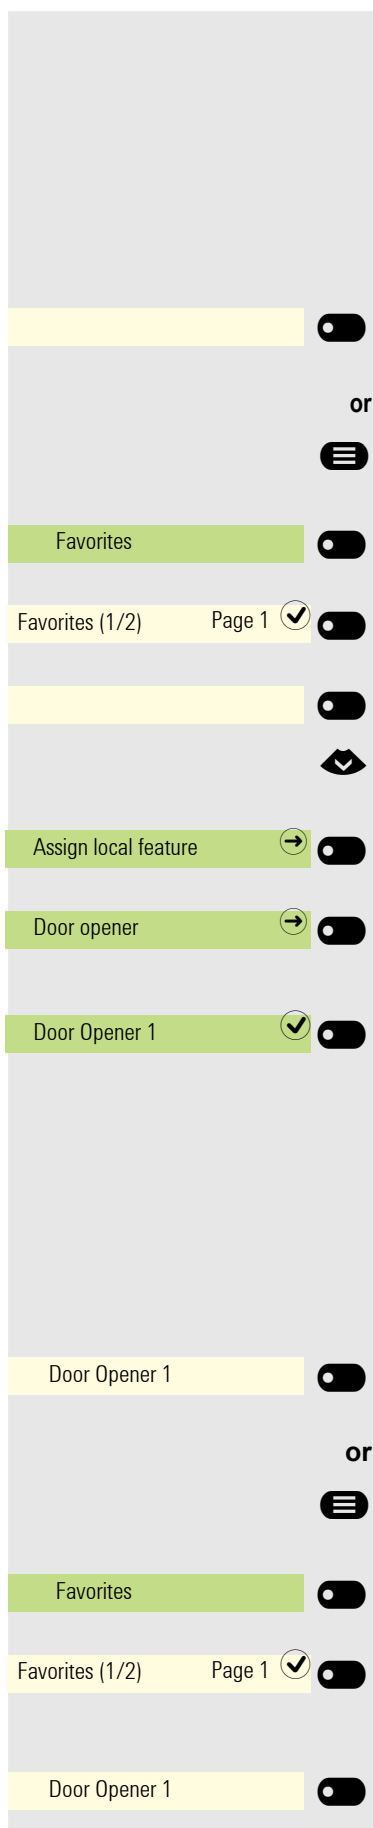


### Receiving a call from the door phone


**Prerequisite:** Door opener has been configured by your administrator. Since you have a door phone with an embedded camera, direct video has to be enabled by the administrator too.

If the service engineer has set up a door phone and your administrator has configured it, you can speak to the visitors and activate the door opener from your CP600 phone.

When someone rings the door bell, you will receive an incoming call from the door.

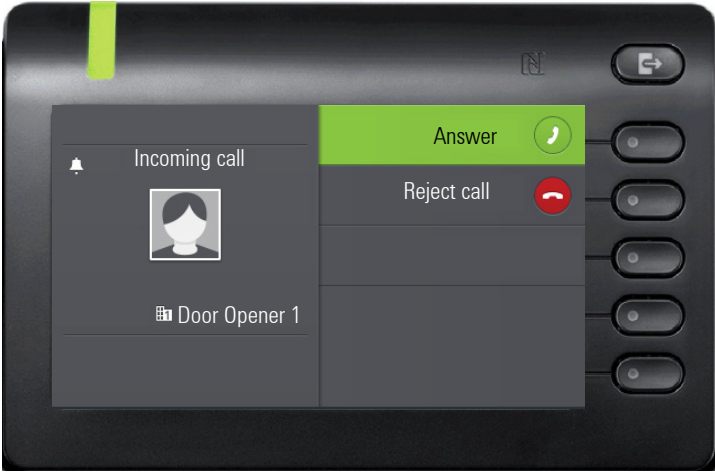

If your door phone has an embedded camera and your administrator has configured it you will see the following screen:

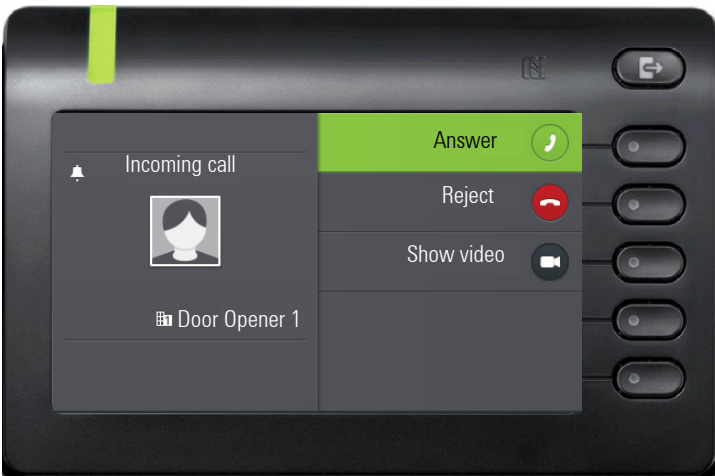



### Speak with a visitor over the door terminal

**Prerequisite:** Phone is called from the door phone.

Lift the handset. You are connected to the entrance telephone immediately

 Press key



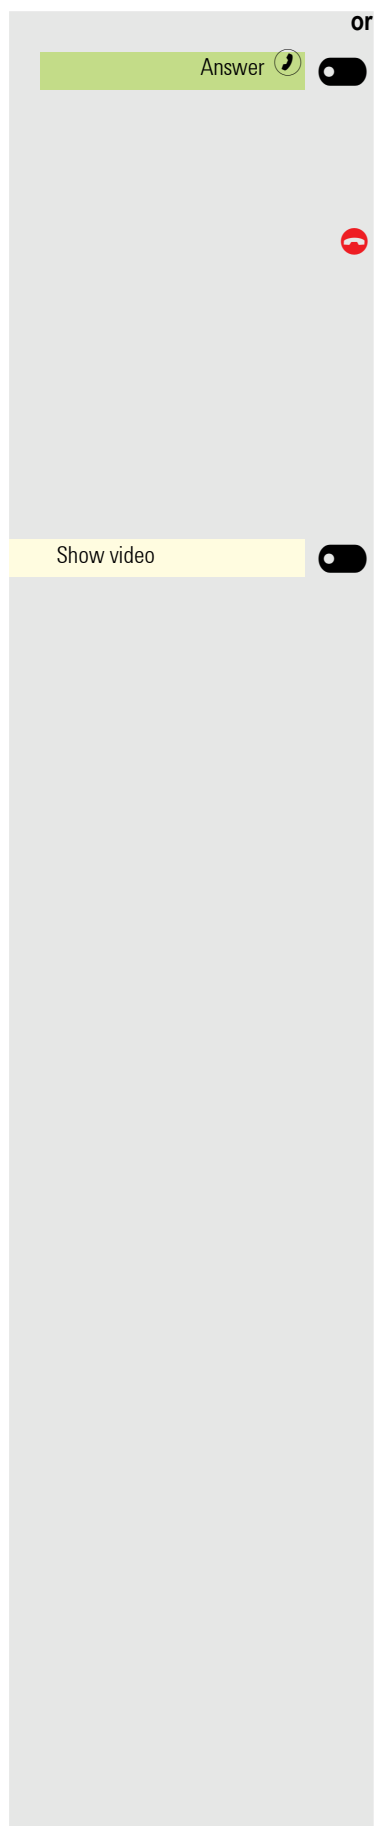

Confirm with the softkey to answer the call.

You can now talk with your visitors.

### Rejecting a call from the door phone

Confirm with the softkey. The call is rejected.


### Open a video stream before answering a door phone call

**Prerequisite:** Telephone is called from the door phone. The door opener and the direct video has been configured by the administrator.

You can watch the video stream of your entrance before opening the door.


Confirm with the softkey.

You can see the following screen on your device.

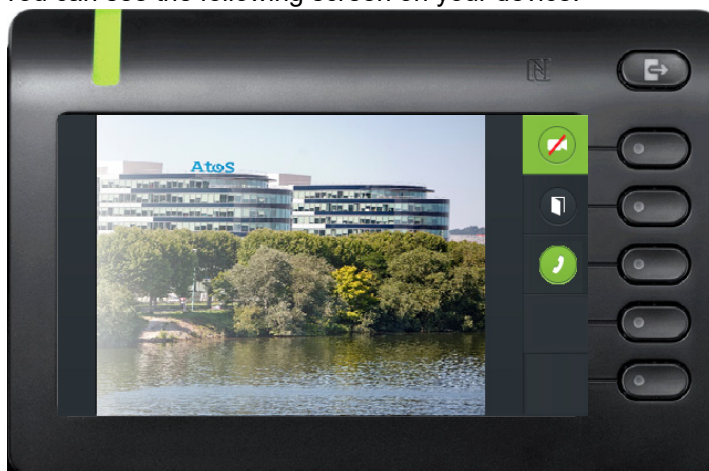

When you have configured more than one camera you will see the following screen. Press the softkey next to the arrow to see the video screen of another camera.



The telephone continues ringing. Press the softkey next to  to answer the call.

Since you answer the call your CP600 screen will change as follows:




Press the softkey next to the video icon to turn the video off. Alternatively press the Function key you have configured for the camera. See also at → page 170. The video turns off. You can turn it on again.


Press the softkey next to the door icon to open the door.

### Open a video stream after answering a door phone call

**Prerequisite:** Door opener and Direct video have been configured by your administrator. A call from the door phone has been answered.

When you answer the call from the door phone, you see the following screen on your CP600 screen. You can talk to your visitor.

Navigate using the down arrow  at your next screen until you find the option to Show video.

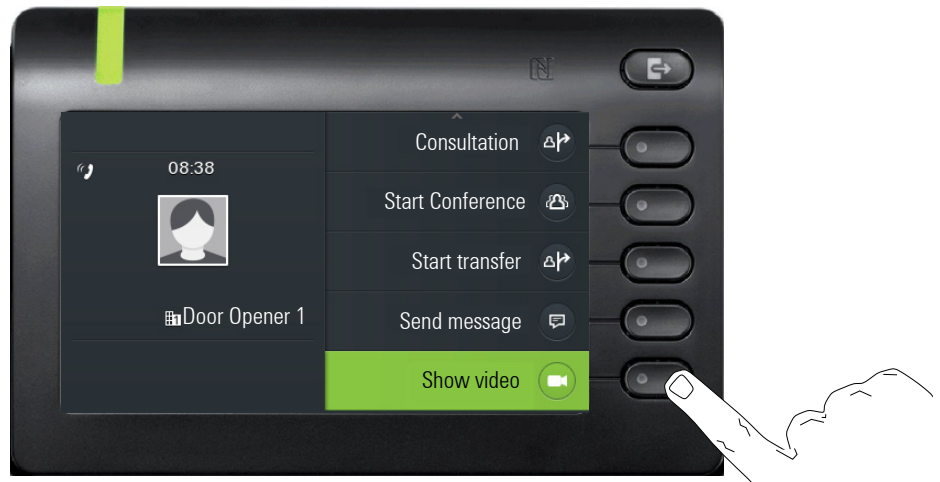


Press with the softkey to activate the video. You will be navigated to the following screen:





Press the softkey next to the video icon to turn the video off. Alternatively press the Function key you have configured for the camera. See also at → page 170. Your video turns off. You can turn the video on again.

Press the softkey next to  to end the call.

### Opening the door

 
While you have received a call from the door phone, press the Softkey next to



the door to open it.

### Ending a call from the door phone

Replace the handset.



Press the key



## Special functions for parallel call (ONS)

If your telephone is integrated into an ONS group (ONS = "One Number Service"), you can be connected to all other telephones of this group in the same way as on your own telephone. To set up an ONS group, contact your responsible administrator.

One ONS group may consist of max. 3 phones (phone numbers).

ONS Group



**A** (Master)

**B**

**C**

Max. one group member may be an external telephone (e.g. a cell phone). One phone in the group is the "master" (**A**), whose number also given to the other members (**B**, **C**) of the ONS group.

If **A**, **B** or **C** are called then all the phones in the ONS group will ring. If **A**, **B**, or **C** is busy, all phones in the ONS group are busy (busy tone for a caller from outside the ONS group). Within the ONS group, the phones can be reached with their original call numbers.

Further effects on the phones of internal participants of an ONS group are also available with the following features:

- Call waiting → page 105
- Call forwarding → page 96
- Do not disturb → page 181
- Mailbox (MWI) → page 144
- Callback → page 99
- Conversations → page 30



If your ONS group contains a cell phone, make sure that it is always available (switched on). Otherwise it can lead to problems with the call signaling for other ONS group participants due to the premature call acceptance by the mobile mailbox.

## Leaving/entering a hunt group

**Requirement:** A hunt group is set up for the team.

You can take yourself out of the hunt group at any time, e.g. when you leave the workplace. When you are present, you enter the group again.



You also remain contactable when disconnected via your own phone number.



Switch?



Hunt group?



Turn off?



or

Turn on?



Open menu → page 23.

Select and confirm.

Select and confirm.

Confirm

confirm.

## Private / Security

### Activating/deactivating do not disturb

If you do not wish to take calls, you can activate do not disturb. Internal callers hear the ringing tone and the message "Do not disturb." External callers are forwarded to the operator. The responsible administrator can also set up call forwarding destinations to redirect internal and external calls.



If your phone belongs to an ONS group (parallel calls → page 179), please note the following special features:

The call protection can be switched on/off on each phone of the ONS group and then applies to all phones in the ONS group.

**Requirement:** The responsible administrator has generally released the do not disturb for all OpenScape 4000 participants in your system.



Switch?



Do not disturb?



Turn on?



or

Turn off?



Open the menu → page 23.

Select and confirm.

Select and confirm. The display shows whether do not disturb is switched on or off.

Confirm.

confirm.



A sound reminds you that do not disturb is activated after you lift the handset.

The operator can bypass the call protection and reach you.

If the responsible administrator has generally blocked the do not disturb for the OpenScape 4000, the menu point "Do not disturb?" does not appear in the service menu.

## Speaker call protect on/off

You can prevent yourself from being contacted directly. Any attempt to talk to you directly via the loudspeaker will then result in a normal call.

Open menu → page 23.

Select and confirm.

Select and confirm. The display shows whether the speaker call protect is switched on or off.

Confirm.

confirm.

## Caller ID suppression

The display suppression applies only to a subsequent call and is not stored during the redial → page 143 selection.

Open menu → page 23.

Select and confirm.

Confirm. The dial tone is audible.


Enter phone number of subscriber. If the subscriber accepts the call, your number is not displayed.


## User password

With your User password you protect your user settings. You can also use the User password to fully lock your phone → page 185.

### The administrator may have configured the following settings:

- The password is deactivated: You do not have the option to configure user settings. The message "Password is disabled" is displayed.
- The password is temporarily locked: You do not have the option to configure user settings at this time. The message "Password is suspended" is displayed.
- After initially logging on to a user area, you may have to replace the default password with a new password.
- A password can have a predefined period of validity: You will have to create a new password when the period ends. The message "Change password (x days remaining)" will alert you to this at the appropriate time. The message "Password has expired" appears when the validity period has expired. Confirm "Change password" and change the password as described in this section.
- If you repeatedly enter the wrong password (2 to 5 times), additional attempts are blocked. You can make another attempt after a predefined time.
- It is possible that you will not be able to re-use a previously used password for a period of time, which means you have to create another "new password".
- Your administrator can tell you about the rules for which and how many characters can or must be used in the password.

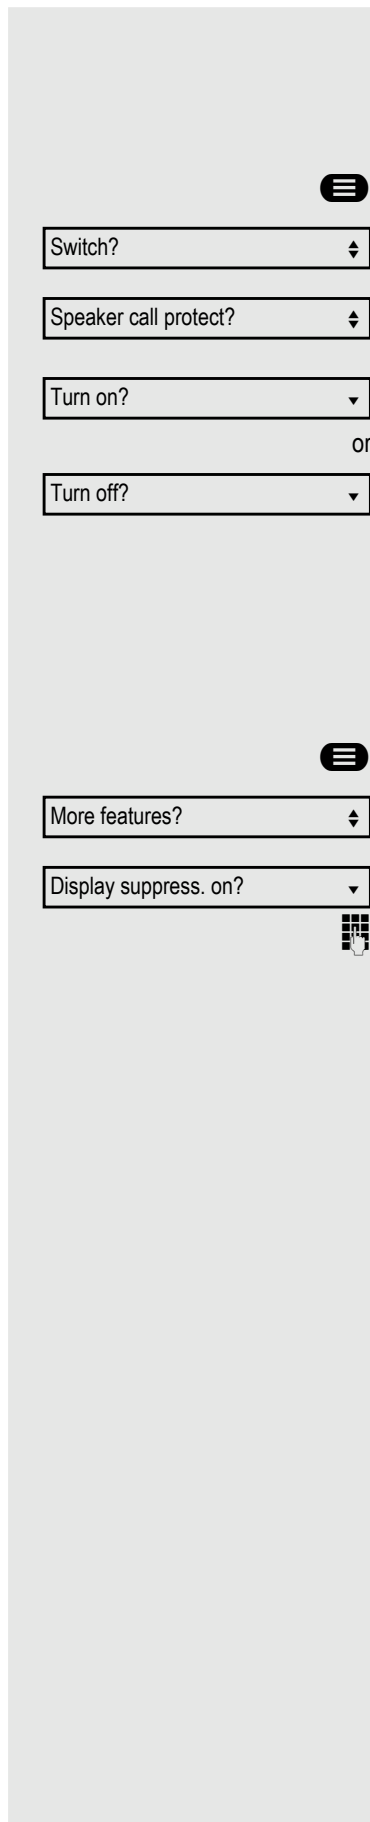

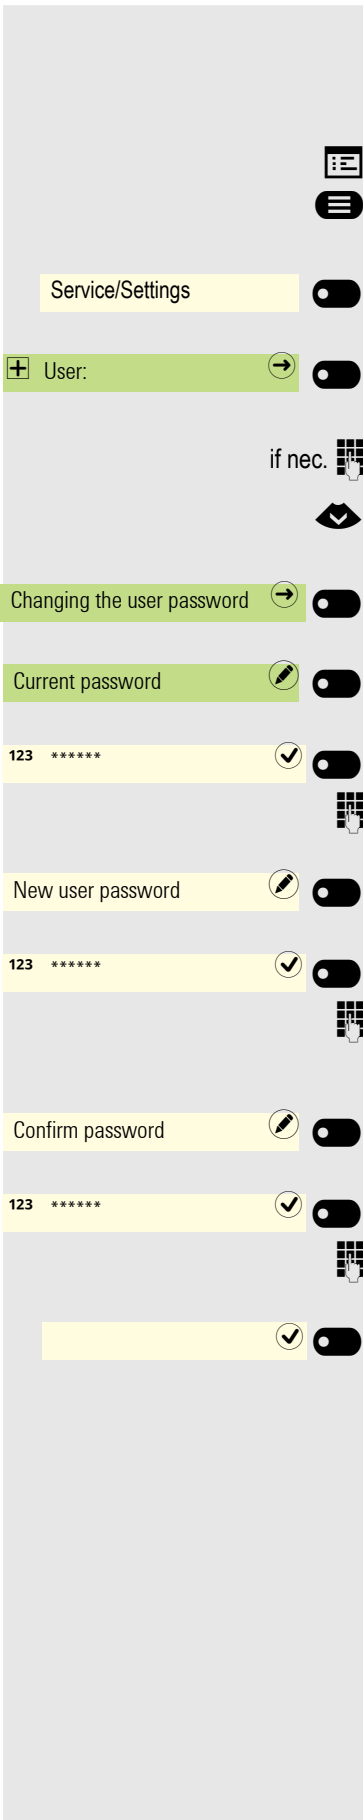

➡ The preset password "000000" corresponds to a blank password. In other words, the phone cannot be locked and the user menu is **not** password protected (see also → page 183).

You can also configure this setting via the Web interface → page 200.

If nec. Press the Main Menu key.

Open using the softkey

Open using the softkey

Enter and confirm the User password.

Select "Changing the user password."

Open using the softkey

Open using the softkey

The input field is displayed.

Enter the current password and conclude your input with the softkey.

Open using the softkey

The input field is displayed.

Enter the new password (at least 6 characters) and conclude your input with the softkey.

Open using the softkey

The input field is displayed.

Re-enter the new password and conclude your input with the softkey.














 


Save your input. The new password is now valid.

### Deactivating the password prompt

You can deactivate the phone's password prompt if a password has already been configured.

➡ Deactivating the password prompt does not apply to the Web interface → page 200. As long as the password prompt is deactivated, you do not have access to the web interface via the User settings.

If you deactivate the password prompt, you can **no longer** lock the phone → page 185 and the user menu is **not** password protected.

	If nec. Press the Main Menu key.
Service/Settings 	Open using the softkey
+ User: 	Open using the softkey
if nec. 	Enter and confirm the User password.
	Select "Changing the user password."
Changing the user password 	Open using the softkey
Current password 	Open using the softkey
123 ***** 	The input field is displayed.
	Enter the current password and conclude your input with the softkey.
New user password 	Open using the softkey
123 ***** 	The input field is displayed.
	Enter 6 zeros ("000000") to deactivate the password request. Confirm your input with the softkey.
Confirm password 	Open using the softkey
123 ***** 	The input field is displayed.
	Enter 6 zeros ("000000") once again. Confirm your input with the softkey.
	Save your input. The password is now deactivated.

## Locking the phone to prevent misuse

You can stop unauthorized parties from using certain functions on your phone while you are away. E.g. the dialing of external phone numbers and access to your mailbox can be prevented. Ask your administrator which features are locked.

**Requirement:** You have received a corresponding code number from the responsible administrator.

## Locking the phone in the system

### Locking the phone

Open menu → page 23.

Select and confirm.

Select and confirm.

Enter ID.

"Carried out" is displayed upon successful entry.



When the receiver is disconnected, a special dial tone is heard. OpenScape 4000-internal can be selected as usual.

### Unlock the phone again

Open menu → page 23.

Select and confirm.

Select and confirm.

Enter ID.

"Carried out" is displayed upon successful entry.

## Lock local phone

### Locking the phone

To protect the phone against unauthorized access, you can lock the phone so that nobody can make calls or change settings without knowing the User password.

Predefined numbers from the dial plan can still be dialed when the phone is locked. For more information, contact your administrator.



PIN and license of service? ▾

Change authorization? ▾



PIN and license of service? ▾

Change authorization? ▾



➡ You can only lock the phone if you set a User password → page 182. The password for this must **not** be the default setting "000000." Check, if necessary, whether the phone lock function has been activated for you by the administrator.

### Activating the phone lock

Hold down the key until the "Lock phone" message appears.


Press the softkey to activate the lock.

### Dialing an emergency number

If an emergency number is entered on the phone by the administrator, Emergency call appears on the display for selection when you have activated the lock. You can also enter the emergency number via the dialpad.

The emergency call numbers pre-configured by the administrator can be called at any time via the dialpad in the locked state.

➡ The number will be dialed automatically without pressing the **OK** button. An empty option on the screen will be shown, therefore if you accidentally press the **OK** button, the call will not be canceled.

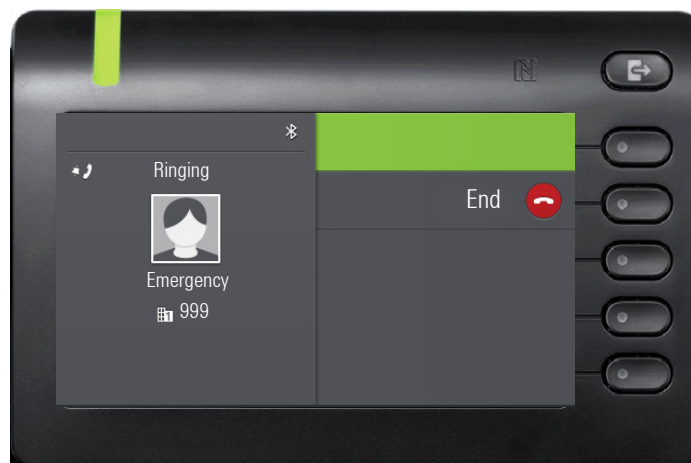


### Unlock phone

The display shows: Phone locked.

Press the softkey.

Enter and confirm the User password, the phone is unlocked if the password is correct.

Press the softkey.

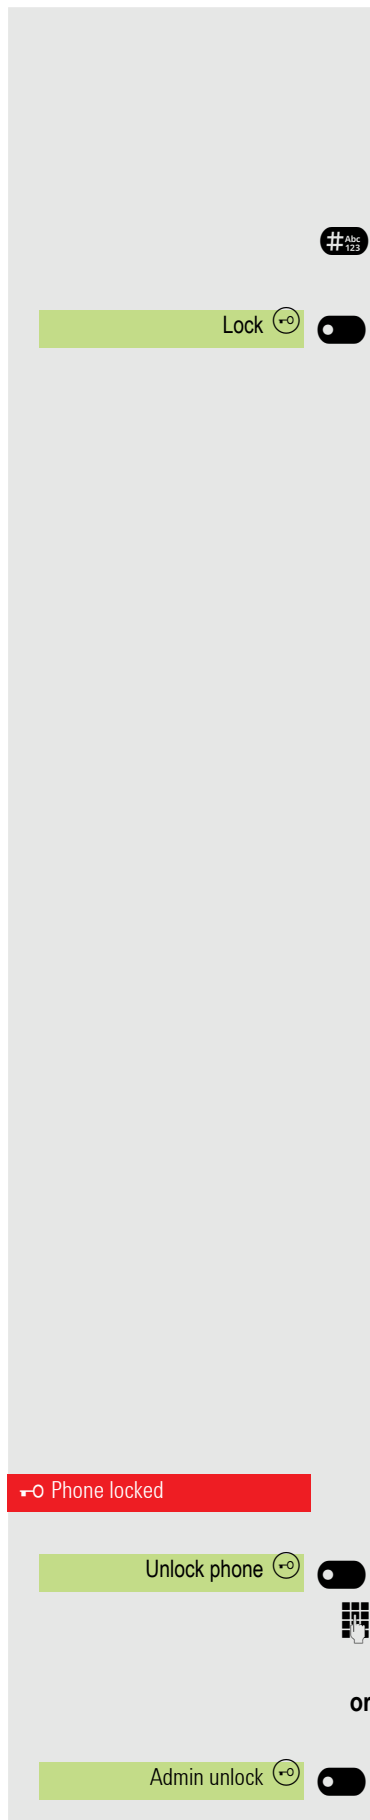





Enter the administrator password if you do not know the User password. Confirm with the softkey. The phone is unlocked if the password is correct.



If the telephone is locked, an emergency number entered by the administrator can be input using the dial pad or dialed with the Emergency call option. If the phone is locked, selected dialing keys (see→ page 51) cannot be used. This also applies if the emergency number is saved on this key.

## Secure calls

### Query status in idle mode

When the phone is idle, you can check whether the secure calling is active on your phone.

Open the idle menu → page 23.

Select and confirm.

The status display corresponding to the set security mode is displayed.

A connection is only encrypted if the other side also supports the encryption.

Connections are always encrypted.



If the entry "Use secure calls?" appears in the idle menu, the function is not activated.

### Querying the status when connected

During the call you can query whether your call is secure.

Select.

The call is secure.

The call is not secure.

### Information about secure calls

The responsible administrator can determine whether and how you are notified of unencrypted calls in your communication system.

Warning tone.

Display screen.



Use secure calls?



enabled

or

Always enabled

Use secure calls?



Call encrypted

or


Call not encrypted



and/or

Call not encrypted

## Identifying anonymous callers ("tracing")


 This function must be set up by your responsible administrator.

You can have malicious external callers identified. The caller's phone number can be determined during the call or up to 30 seconds afterwards. You are not allowed to hang up.

Open menu → page 23.

Select and confirm.

Select and confirm.

 If the capture circuit was successful, the data obtained is stored with the network operator. Please contact your responsible administrator.



More features?



Trace?



# Local phone settings

## Audio settings

### Volumes

Set the volume here, for instance, for the loudspeaker, handset, or headset.

You can preset different volumes for the following microphones and signals in ten levels:

- Loudspeaker
- Ringer
- Handset
- Headset
- Handsfree
- Rollover
- Warning tone

You can also configure this setting via the Web interface → page 200.

If nec. Press the Main Menu key.

Open using the softkey

Open using the softkey.

Enter and confirm the User password.

Open using the softkey.

Open using the softkey.

E.g. open the Ringer with the softkey<sup>1</sup>.

Use the softkey to increase the volume.

or

Use the softkey to decrease the volume


or

Adjust using the toggle key

Confirm the setting with the softkey.

Save setting.

1. The display shows the current setting

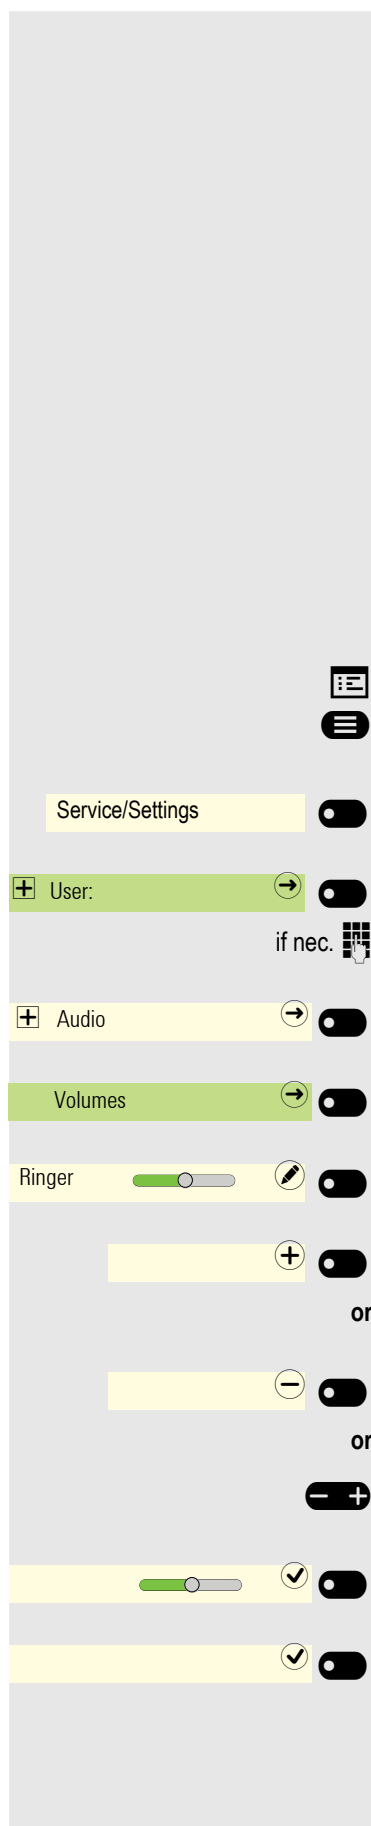

## Set local ringtones

### Select and configure call type


The ringer mode "local ringtone" is set. Not all of the following types have to be used:

- 1: Internal
- 2: External
- 3: Notification call 2

Select the desired call type and configure it according to your requirements.

You can also configure this setting via the Web interface → page 200.

If nec. Press the Main Menu key.

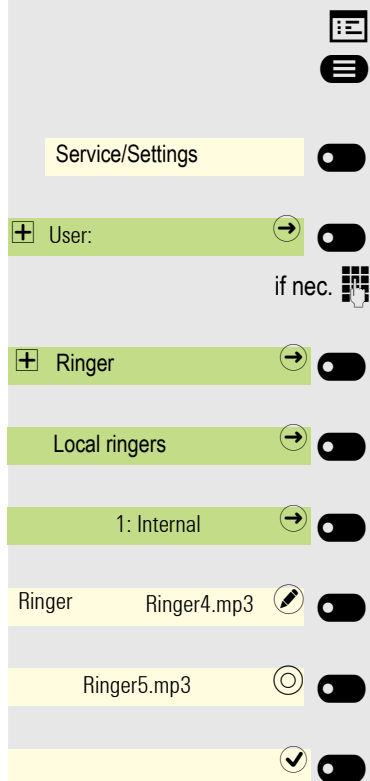

Open using the softkey

Open using the softkey.

Enter and confirm the User password.

Open using the softkey.

Open using the softkey.

Open with the softkey, e.g. to make settings for the internal ringer.

Open using the softkey.

Confirm with the softkey to e.g. select this tone file.

Save setting.

If you have selected the "Pattern" instead of a ringer file, you can still set the values for "Pattern melody" and "Sample sequence".

## Ringer mode

With both Ringer mode options


- HiPath
- Local ringer

determine who generates the ringtone on the phone. With the "HiPath" setting the system emits the ringer type and the related ringer, which you can adjust later → page 190.

If "local ringer" is selected, the phone sends the ringtone type and then you determine which ringtone should ring for the respective ringtone type in the "local ringtone" menu yourself → page 191.

You can also configure this setting via the Web interface → page 200.

If nec. Press the Main Menu key.

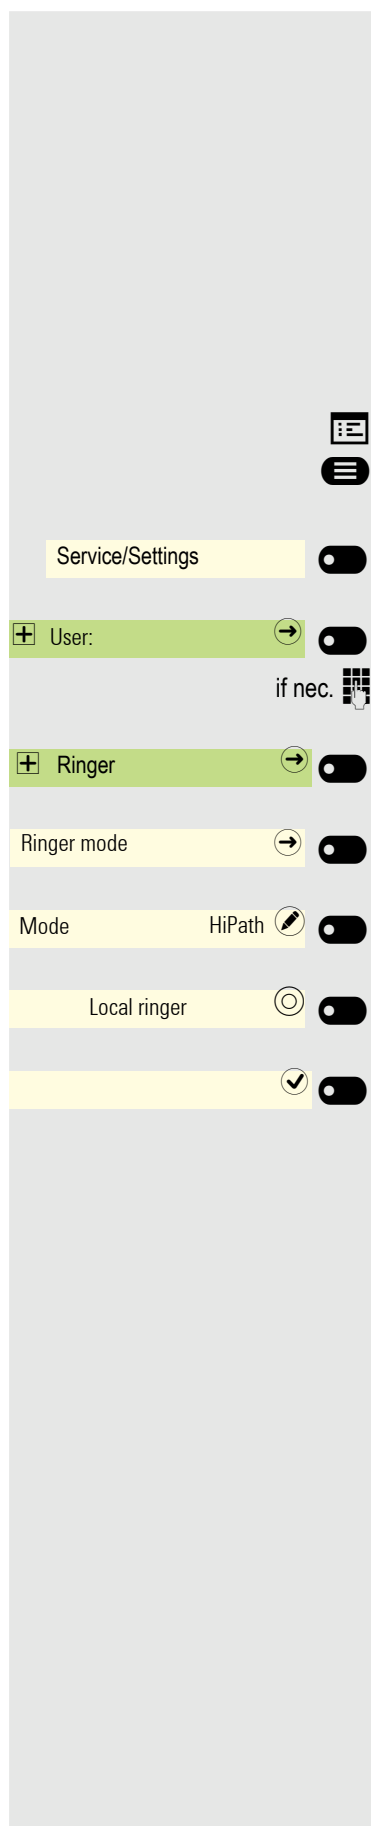

Open using the softkey

Open using the softkey.

Enter and confirm the User password.


Open using the softkey.

Open using the softkey.

Open using the softkey.

Confirm with the softkey to set "Local ringer".

Save setting.

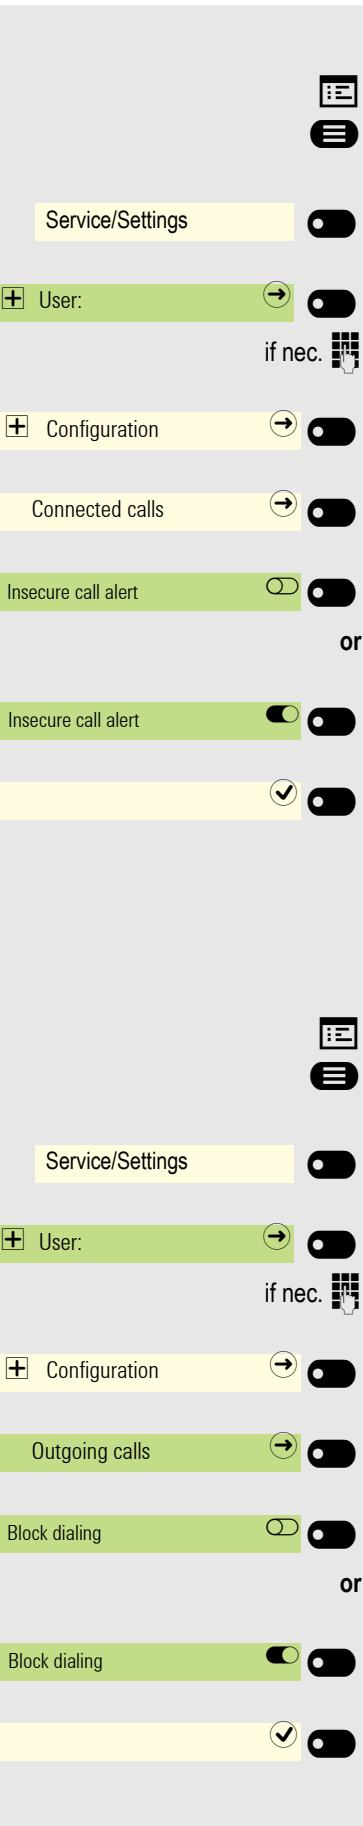

## Insecure call alert

You can also configure this setting via the Web interface → page 200 .  
If nec. Press the Main Menu key.

- Open using the softkey
- Open using the softkey.
- Enter and confirm the User password.
- Open using the softkey.
- Open using the softkey.
- Activate with the softkey Insecure call alert.
- or
- Deactivate with the softkey Insecure call alert.
- Save setting.

## Block dialing for outgoing calls

If block dialing is displayed, when deleting a phone number, for example, all of the characters available in the field are deleted at once. If block dialing is switched on, you can delete individual characters.

You can also configure this setting via the Web interface → page 200.

If nec. Press the Main Menu key.

- Open using the softkey
- Open using the softkey.
- Enter and confirm the User password.
- Open using the softkey.
- Open using the softkey.
- Activate with the softkey Block dialing.
- or
- Deactivate with the softkey Block dialing.
- Save setting.

The screenshot shows a vertical menu titled 'Service/Settings' with a list of configuration options. Each option has a label, an icon (arrow, pencil, or checkmark), and a toggle switch. The options are: 'User:' (with a plus icon and a right arrow), 'Configuration' (with a plus icon and a right arrow), 'Connected calls' (with a right arrow), 'Microsoft® Exchange' (with a right arrow), 'Server' (with a pencil icon), 'EXACSY.com' (with a checkmark icon), 'User name' (with a pencil icon), 'email@example.com' (with a checkmark icon), 'Password' (with a pencil icon), '\*\*\*\*\*' (with a checkmark icon), 'Folder (optional)' (with a pencil icon), 'Output' (with a checkmark icon), and an unlabeled option at the bottom (with a checkmark icon). A 'Main Menu' icon is visible at the top right of the menu.

## Setting up Exchange access

To use your Exchange account in conversations you must enter the server address and your access details.

You can also configure this setting via the Web interface → page 200.

If nec. Press the Main Menu key.

Open using the softkey

Open using the softkey.

Enter and confirm the User password.

Open using the softkey.

Open using the softkey.

Open using the softkey.

Open using the softkey.

The input field is displayed.

Enter the URL for the Exchange server and conclude your input with the softkey.

Open using the softkey.

The input field is displayed.

Enter your e-mail address used for Exchange and conclude your input with the softkey.

Open using the softkey.

The input field is displayed.

Enter your password used for Exchange and conclude your input with the softkey.


Open using the softkey.

The input field is displayed.

Enter the folder with the destination data and conclude your input with the softkey.

Save the configuration.



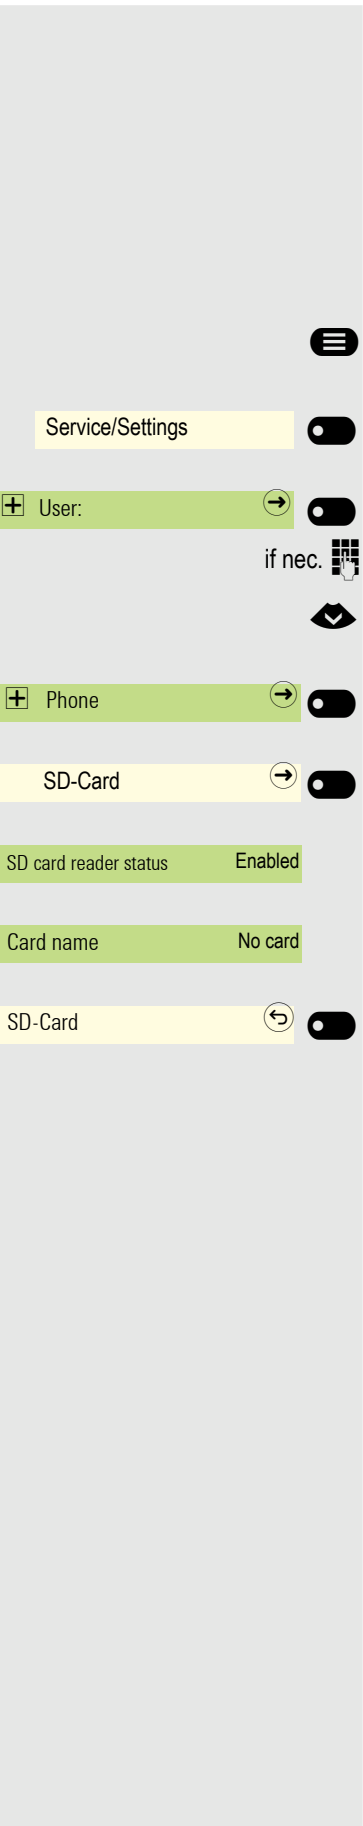

# SD-Card

You only see status information at present for a possible SD card. Usage is not yet possible.

 Please note that SD slot is available only on CP600.

- If nec. Press the Main Menu key.
- Open using the softkey
- Open using the softkey.
- Enter and confirm the User password.
- Select "Phone".
- Open using the softkey.
- Open using the softkey
- The current status is displayed.
- The current status is displayed.
- Exit the menu.

## Displaying network information

This information overview in the user area of the service menu provides you with information about the IP address or name of the phone and the HTML address of the web interface. It also provides real-time data about the network activity of the phone.

If nec. Press the Main Menu key.

Open using the softkey


Open using the softkey.

Enter and confirm the User password.


Select the "Network information" menu.

Open using the softkey.


You can browse the following overview:

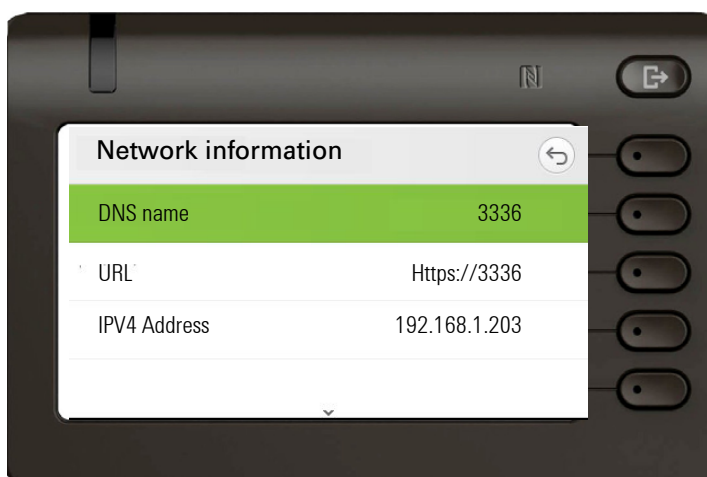


Scroll

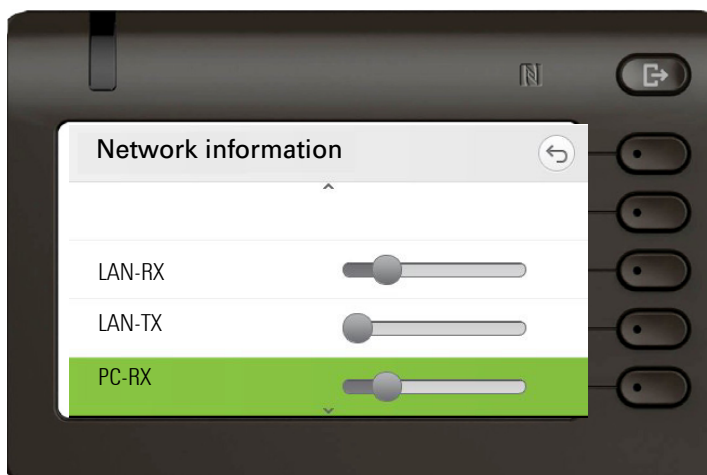


Scroll

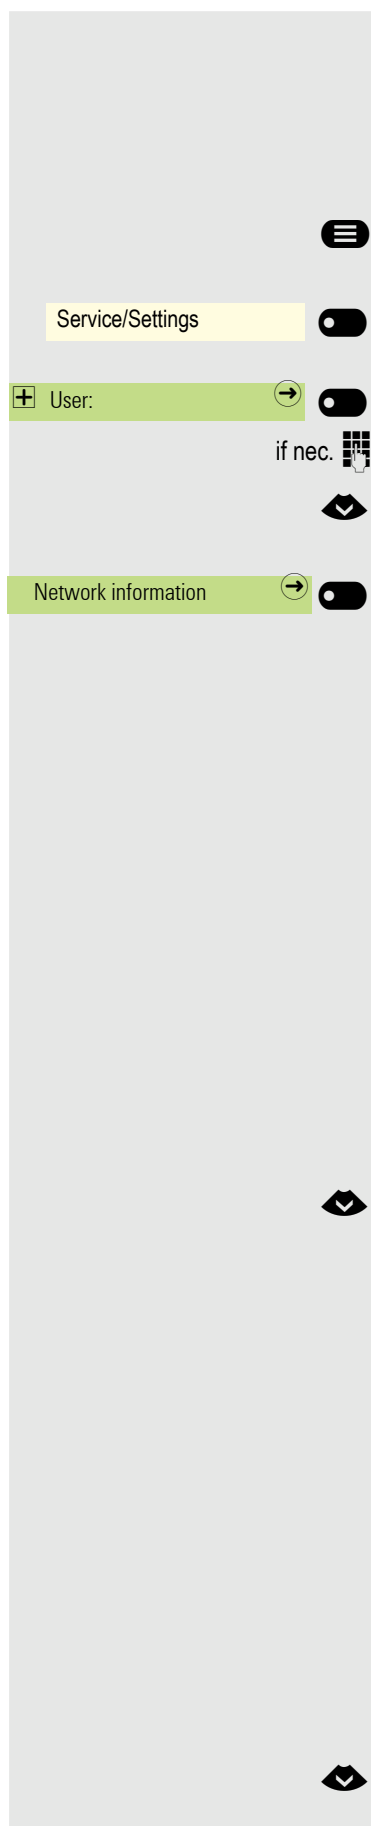

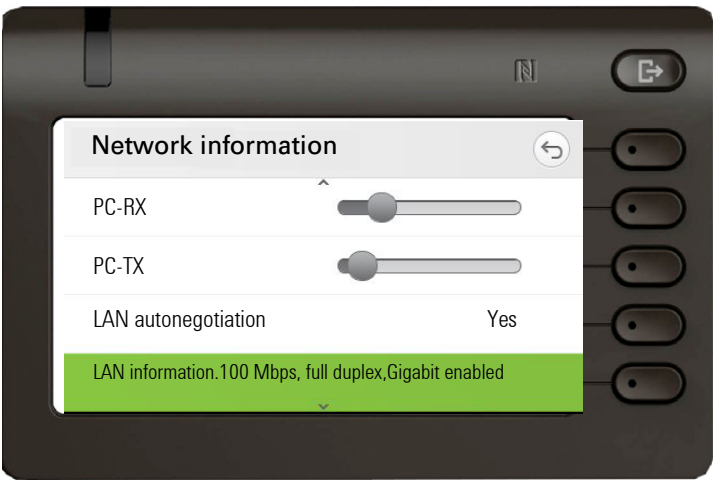

Scroll

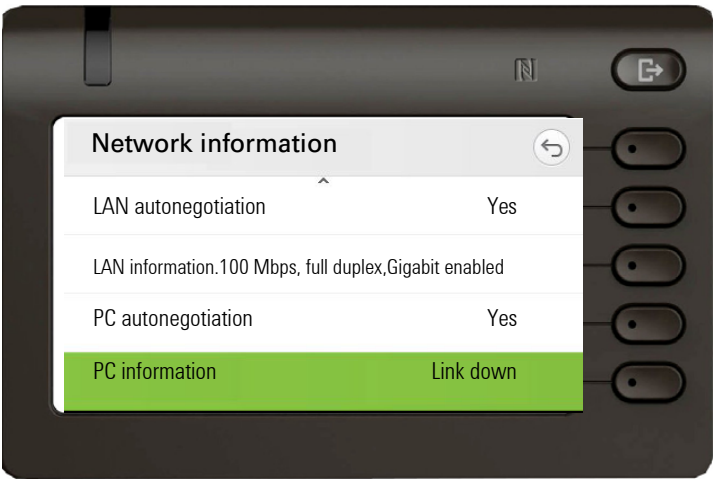

- DNS name: Name or number of telephone.
- URL:** HTTP address of the web interface. This address is specified in the address line of the Internet browser and is used to call up the web interface of the phone in the browser.
- IPv4 Address:** Display of the IP address or name that was assigned to the phone in the network.
- LAN-RX/PC-RX:** The network or PC interface data packets received are illustrated dynamically in graphical form.
- LAN-TX/PC-TX:** The network or PC interface data packets sent are illustrated dynamically in graphical form.
- LAN autonegotiation/PC autonegotiation [Yes]|No]:** Displays whether the data transfer rate network or PC interface is set to automatic (**Yes**) or manual (**No**).
- LAN information/PC information: [10|100|1000] Mbit/s:** Data transfer rate of the network or PC interface. If an interface is not in use, **Link down** is displayed.

## Resetting user data

All personal settings changed via the telephone menu or the web interface can be reset to factory settings.



Some images for the screensaver will be deleted or deleted default images will be restored.



Some ringer files will be deleted or deleted default ringer files will be restored.



Similarly, all of your personal information, and most importantly your conversation list with contacts, will also be deleted.

**Important:** All listed data is reset **without** a warning tone.

## Initiating the reset

If nec. Press the Main Menu key.

Open using the softkey

Open using the softkey.

Enter and confirm the User password.

Select the "Reset user data user data" menu.

Open using the softkey.

## Resetting selected user data

Use the right arrow to navigate to a list of data areas that may be reset.


Enable the toggle button option to select the areas you want to reset.

Click to continue with the resetting process.

A confirmation window is displayed.

Select to reset the selected user data to factory settings.

Select to discard the changes.

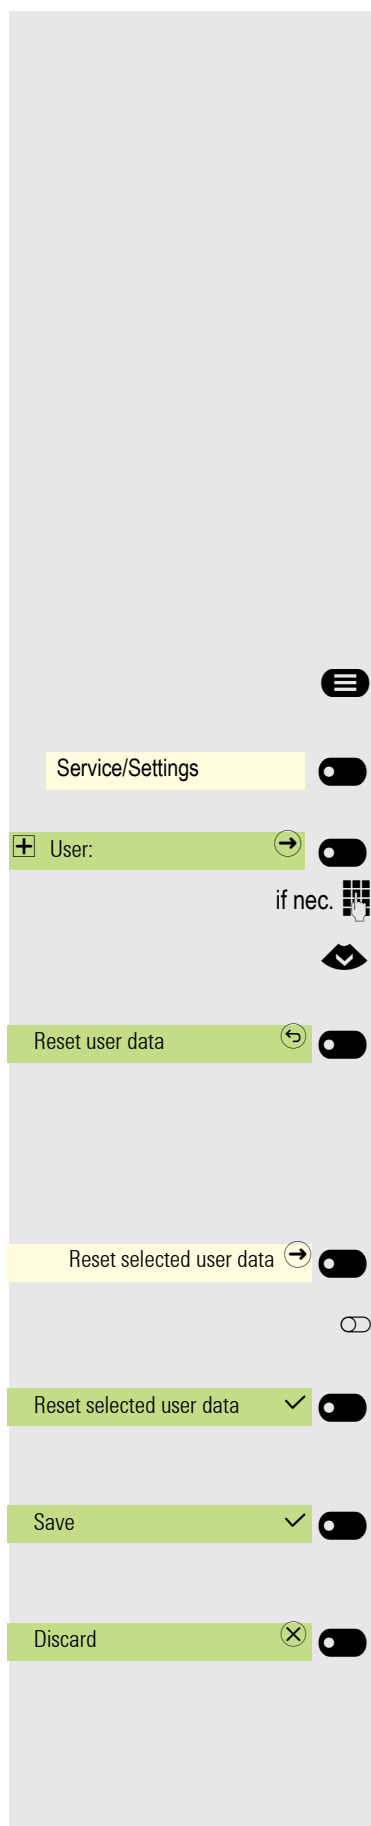

## Resetting all user data

Reset all user data



Enable the toggle button option to reset all user data.

Reset user data



Click to confirm the reset.


# Web interface

## General

You can configure a number of settings for your phone via the web interface. Communication occurs via a secure HTTPS connection. Access to the web interface must be activated by your administrator.

## Launching the web interface

---

 For more information on the IP address, the web interface address, and how to connect the phone to the network, refer to the section entitled "Network information."

---

To launch the interface, open a Web browser and enter the following:

**https://[IP address of the phone]**


[IP address of the phone] is the IP address of your phone.

or

**https://[Name of the phone]**

[Name of the phone] that was assigned by the administrator.

---

 You might receive a certificate notification from the browser. Follow the instructions to download the certificate.

You will be prompted to configure a user password the first time you call up the web interface → page 182. You must log in with this password every time you want to open the User pages in the future.

---

## Licenses

This area provides you with the information about EULA (End User License Agreement) and OpenSource licenses. For further information, consult your administrator or refer to the administration manual.

## Administrator pages

This area lets you configure settings for administering your phone and the network environment. Access to the Administrator pages is protected by the admin password. For further information, consult your administrator or refer to the administration manual.

## User pages

All entries under the user menu on the Web interface can also be found under the user menu on the phone → page 55.



You will be prompted to configure a user password the first time you call up the web interface → page 182. You must log in with this password every time you want to open the User pages in the future.

- Click a menu heading to display the individual menu entries. Click the menu heading again to close the menu.
- Click a menu entry to open the corresponding website.
- Make the desired changes.
- Click the corresponding button to save or discard your changes.

## Button functions

- "Login": Log in to the phone after you have entered the user password
- "Save": Applying changes
- "Reset": Reset original values
- "Update": Update the values
- "Log out": Log out from the phone


## User menu


User login

Password  → page 182



- Old password
- User password
- Confirm password

**Ringer**



- Local ringers
- Call type  → page 74
  - Internal call
    - Ringer
    - Pattern melody
    - Pattern sequence
  - External
    - Ringer
    - Pattern melody
    - Pattern sequence
  - Buzz
    - Ringer
    - Sample tone
    - Pattern sequence
  - Alert tone 1
    - Ringer
    - Sample tone
    - Pattern sequence
  - Single alert
    - Ringer
    - Sample tone
    - Pattern sequence
  - Multiple alert
    - Ringer

- Sample tone
- Pattern sequence
- Special 1
  - Ringer
  - Sample tone
  - Pattern sequence
- Special 2
  - Ringer
  - Sample tone
  - Pattern sequence
- Special 3
  - Ringer
  - Sample tone
  - Pattern sequence
- Alert tone 2
  - Ringer
  - Pattern melody
  - Pattern sequence
- Unspecified
  - Ringer
  - Sample tone
  - Pattern sequence
- US DSN-Precedence
  - Ringer
  - Sample tone
  - Pattern sequence
- US DSN-Routine
  - Ringer
  - Sample tone
  - Pattern sequence
- Emergency call
  - Ringer
  - Sample tone
  - Pattern sequence
- Ringer mode (  → page 74 )
  - HiPath
  - Local ringer


### Audio

- Settings
  - Ringer  → page 77
  - Room acoustic  → page 76
  - Headset socket → page 78




### Configuration

- Outgoing calls
  - Block dialing  → page 93
- Forwarding  → page 96
  - Forwarding favorites
  - Display all ☐
  - Favorites / recently used
- Busy
  - Direct destination
  - No reply ☐
  - Favorites / recently used
  - Direct destination
- Fixed forwarding allowed ☐



- Favorites / recently used
  - Direct destination
- Internal call forwarding allowed ☐
  - Favorites / recently used
  - Direct destination
- External call forwarding allowed ☐
  - Favorites / recently used
  - Direct destination
- Forward busy/no answer calls allowed ☐
  - Favorites / recently used
  - Direct destination
- Connected calls
- Insecure call alert
- Bluetooth
  - Configuration  → page 125
    - Active
    - Bluetooth address
    - Phone name
  - Beacon
    - Mode
    - URI
    - UUID
    - Major
    - Minor
    - Interval (ms)
- UC login information
  - UC username
  - UC password
- Microsoft® Exchange
  - Server
  - User name
  - Password
  - Folder to sync (optional)
- OpenScape UC

### Phone

- Display  → page 66
  - Brightness
  - Key module contrast
  - Key module brightness
- Idle screen  → page 70
  - Enabled
  - Monitor type
  - Wait time (minutes)
  - Transition delay (secs)
- Energy saving mode  → page 67
  - Activate after:
  - Lighting reduced
  - Backlight off

File transfer  → page 70

### Slideshow Figures

Select the image file you wish to use as slideshow images

Closing or navigating away from this page will cancel the file transfer

### Delete all user slideshow images

Default slideshow images will be restored

<input type="button" value="Delete"/>	Users image no 01
<input type="button" value="Delete"/>	Users image no 02
<input type="button" value="Delete"/>	Users image no 03
<input type="button" value="Delete"/>	Users image no 04
<input type="button" value="Delete"/>	Users image no 05
<input type="button" value="Delete"/>	Users image no. 06
<input type="button" value="Delete"/>	Users image no. 07
<input type="button" value="Delete"/>	Users image no. 08
<input type="button" value="Delete"/>	Users image no. 09
<input type="button" value="Delete"/>	Users image no. 10
<input type="button" value="Delete"/>	Users image no. 11
<input type="button" value="Delete"/>	Users image no. 12
<input type="button" value="Delete"/>	Users image no. 13
<input type="button" value="Delete"/>	Users image no. 14
<input type="button" value="Delete"/>	Users image no. 15
<input type="button" value="Delete"/>	Users image no. 16
<input type="button" value="Delete"/>	Users image no. 17

You can delete your installed images in full or individually.

#### Diagnostic information

## Fixing problems

### Responding to error messages on the display

Incorrect input

#### Possible causes:

Number is not correct.

#### Possible response:

Enter correct number.

No authorization

#### Possible cause:

Locked function attempted.

#### Possible response:

Apply for authorization to execute function from manager.

Currently not possible

#### Possible cause:

Dialing a non-existent number. Phone you are trying to reach is not in use.

#### Possible response:

Enter correct number. Call again later.

Phone number invalid

#### Possible cause:

Own number entered.

#### Possible response:

Enter correct number.

Key memory is full

#### Possible cause:

External phone number memory space in system currently full.

#### Possible response:

Try again later.

Conflict on another level

#### Possible 1st cause:

If "delete other level" shows in menu:

You have tried to save a function or internal phone number with LED-display using a key on an already occupied level (e.g. an external phone number).

#### Possible response:

Confirm "delete other level" to save the phone number/function.

### Possible 2nd cause:

If "clear LED support" shows in menu:  
You have tried to save a number without LED-display or an external number using a key that already has an internal number with LED-display.

### Possible response:

Confirm "clear LED support" to save the call number. The existing internal number remains on the other level without LED-display.

### Pressed key does not respond:


Check if the key is stuck.

### Phone doesn't ring when called:

Check if your phone is on silent (silent icon appears on status screen → page 22). If so, turn off silent mode.

### To correct any other problems:

Contact your administrator if a fault persists for more than 5 minutes, for example. Pass on the message displayed in the red field, if appropriate, as shown in the next example. Problems that cannot be corrected should be referred to Customer Service.

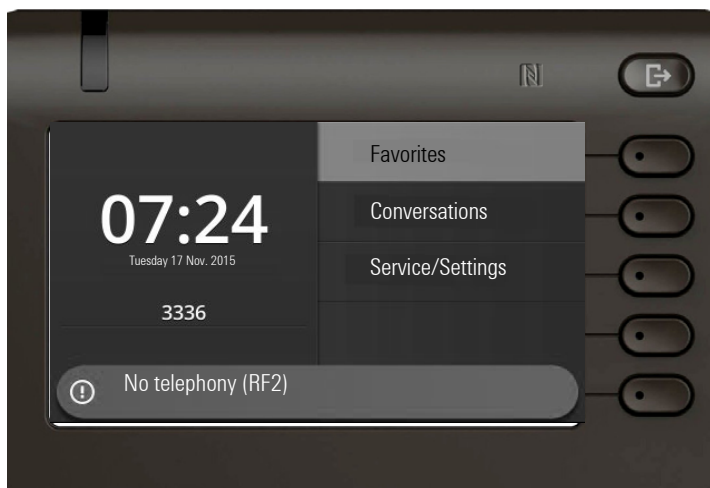

## Contact partner in case of problems

Contact your administrator if a fault persists for more than 5 minutes, for example.

## Key terms

### A

- Accepting a call
  - with line keys 136
- Administration 63
- Announcement 66
- Applications
  - Opening the context menu 29
  - Selecting an entry 29
- Applications menu 55
- Assign free keys 82
- Assigning function keys
  - Function 82
- Audio
  - Room acoustic 76
- Audio controls 19

### B

- Background lighting 67
- Beacon 131
- Bluetooth 109
  - NFC 109

### C

- Call
  - Door terminal 175
  - Forwarding 96
  - Incoming 89
- Call encrypted 188
- Call forwarding 96
- Call not encrypted 188
- Call transfer to the manager 150
- Call waiting
  - accept 105
- Callback 99
- CE marking 3
- Central speed dial numbers 79
- Change password 182
- Changing the user password 182
- Connection options 17
- Consult 104
- Contact, deleting 44
- Context-dependent displays 26
- Conversation
  - Accept 89
  - Ending 92
  - Parking a call 102
  - Retrieving a parked call 102
  - transfer 104
- Conversations 30

search, 37

### D

- Data privacy 156
- Deactivating the password 183
- Deactivating the user password 183
- Deleting a contact 44
- Dial plan 186
- Dialing
  - with line keys 139
  - with redialing 94
- Dialpad 21
- Direct station selection (DSS) keys
  - Answering a call 90
  - Call waiting 140
- Display icons
  - Connection status 48
- Do not disturb 181
- Door terminal 175
- DTMF dial tone (Tone dialing) 106

### E

- Eddystone Beacon 131
- Emergency call 186
- Emergency number 186
- Entry protection 146
- Exchange 194
- Exclusive parking 141

### F

- Fax messages 144
- Forwarding 96
  - For another connection 165
  - For Fax or PC 166
- Forwarding calls
  - for lines 137
- Free Programmable Key 25
- Free Programmable Keys screen 25
- Function keys
  - Display function 54

### G

- General information 11
- Graphic display 23
  - Icons for connection status 48

### H

- Holding 141
- House call system 160

### I

- Icons
  - Connection status 48
- ID entered for other phone 154

- Identifying the line 145
- Insecure call alert 193
- Intercom system 160
- K
- Key modules 18
- Keys
  - assign 82
  - program 82
- L
- LED displays 53
  - Line keys 134
- Level 58
- Line key 54
- Line keys 133
  - Accepting a call 136
  - Allowing/blocking entry 146
  - dialing with 139
  - Phoning with more than one participant 145
  - Three-party conference 146
- Line usage 134
- M
- Making calls 93
- Menu "Users" 201
- Messenger call 152
- Microphone 92
- Missed calls 94
- Mobility 156
- Mobility variants 156
- Mode keys 19
- N
- NFC 109
- O
- One Number Service
  - Mailbox (MWI) 144
- Open listening 101
- OpenScape Desk Phone CP600
  - Provides hands-free listening 101
- OpenScape Key Module 600 18
- Operating steps
  - programming a key 83
- Operation notes 3
- P
- Parameters 57
- Park (call) 102
- Parking 141
- Phone
  - Set-up 66
  - Phone programming 66
  - Phone Settings 66
  - Picking up a call (Team) 90
  - post-dialing
    - Tone dialing DTMF 106
  - Presence 24, 49
  - Primary line 133
  - Private 181
  - Private line 134
  - Procedure
    - programming a key 83
  - Program free keys 82
  - Programmable keys 51, 53
  - Programming free keys 82
  - Provides hands-free listening 89
- R
- Redial 94
- Representative (secretarial office) 152
- Ringer off 75
- S
- Safety notes 3
- Save appointments 153
- Second call (manager) 151
- Second phone (manager) 151
- Secondary line 133, 196
- Secure Call 188
  - Call encrypted 188
  - Call not encrypted 188
  - Connection status 188
  - Status query 188
  - Tips 188
- Secure connection 188
- Security 181
- Service menu 55
- Setting headset port 78
- Shared line 134
- softkey 26
- Softkeys 19
- Speaker call 66, 161
- Speakerphone mode
  - Function 89, 101
  - Tips 89
- Speed dial
  - Central 79
- Switches 56
- System-wide voice calling 161

## T

Telephony interface

    SingleLine 45

Three-party conference 146

Toggling 104

Tone dialing 106

Transfer (call) 104

## U

Unsecure connection 188

User interface 16

User menu 201

User support 15

Using a mini switch 18

Using network ports more efficiently 18

Using secure calls 188

    Call encrypted 188

    Call not encrypted 188

    Connection status 188

    Status query 188

    Tips 188

## V

Variable call forwarding 96

Voicemail 144

## W

Web interface 200

