



A MITEL
PRODUCT
GUIDE

OpenScape DECT Phone SL7 on Cordless IP

User Guide
04/2026

Notices

The information contained in this document is believed to be accurate in all respects but is not warranted by Mitel Europe Limited. The information is subject to change without notice and should not be construed in any way as a commitment by Mitel or any of its affiliates or subsidiaries. Mitel and its affiliates and subsidiaries assume no responsibility for any errors or omissions in this document. Revisions of this document or new editions of it may be issued to incorporate such changes. No part of this document can be reproduced or transmitted in any form or by any means - electronic or mechanical - for any purpose without written permission from Mitel Networks Corporation.

Trademarks

The trademarks, service marks, logos, and graphics (collectively “Trademarks”) appearing on Mitel’s Internet sites or in its publications are registered and unregistered trademarks of Mitel Networks Corporation (MNC) or its subsidiaries (collectively “Mitel”), Unify Software and Solutions GmbH & Co. KG or its affiliates (collectively “Unify”) or others. Use of the Trademarks is prohibited without the express consent from Mitel and/or Unify. Please contact our legal department at iplegal@mitel.com for additional information. For a list of the worldwide Mitel and Unify registered trademarks, please refer to the website: <http://www.mitel.com/trademarks>.

© Copyright 2026, Mitel Networks Corporation

All rights reserved

Contents


Overview	6
Handset	6
Illustration in the user guide	7
Safety precautions	8
Getting started	10
Contents of the package	10
Handset	10
Using the telephone	14
Getting to know your telephone	14
Making calls	18
Call lists	23
Message lists	24
Directories	25
Answering machine	32
Additional functions	33
Sound profiles	33
Calendar	34
Timer	36
Alarm clock	36
Protection against unwanted calls	37
Resource Directory	39
Bluetooth	40
Adjusting the telephone settings	43
Appendix	52
Manufacturer's advice	52
Technical data	54
Display icons	58
Index	61
Open Source Software	65



Not all functions described in the user guide are available in all countries or from all network providers.

Overview



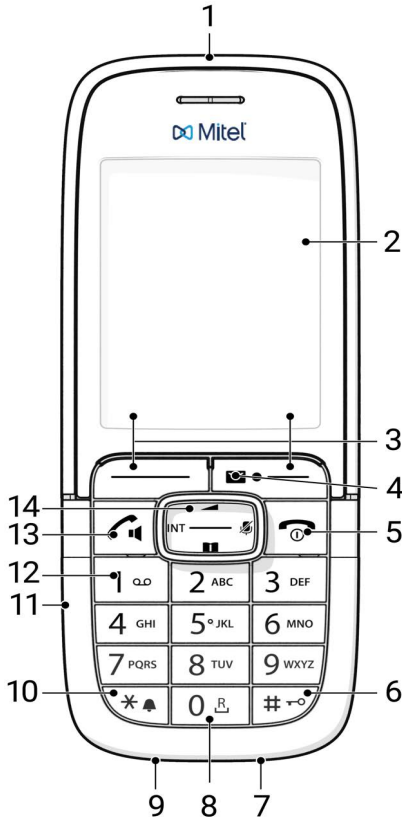

Handset






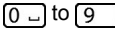





- 1 **Function key**
- 2 **Display**
- 3 **Display keys**
Various functions, depending on the operating situation
- 4 **Message key**
Access to the call and message lists;
Flashes: new message or new call

- 5 **End call key / On/off key**
End call; cancel function;
Go back one menu level ▶ Press **briefly**
Return to idle status ▶ Press and **hold**
Switch the handset on/off (in idle status) ▶ Press and **hold**
- 6 **Hash key / Lock key**
Lock/unlock the keypad (in idle status) ▶ Press and **hold**
Toggle between upper/lower case and digits (when inputting text) ▶ Press **briefly**
Insert a dialling pause ▶ Press and **hold**
- 7 **Microphone**
- 8 **Recall key**
Consultation call (flash) ▶ Press and **hold**
- 9 **USB connection socket**
For data exchange between the handset and PC
- 10 **Star key**
Enable/disable the ring-tone ▶ Press and **hold**
Open special characters table (when inputting text) ▶ Press **briefly**
- 11 **Headset connection**
(3.5 mm jack)
- 12 **Key 1**
Select network mailbox ▶ Press and **hold**
- 13 **Talk key / Handsfree key**
Accept call; dial number displayed; switch between receiver and handsfree mode
Open the redial list ▶ Press **briefly**
Start dialling ▶ Press and **hold**
- 14 **Control key / Menu key**
Open a menu; navigate in menus and entry fields; access functions (depending on the situation)

Illustration in the user guide

	Warnings, which if not heeded, can result in injury to persons or damage to devices.
	Important information regarding function and appropriate handling or functions that could generate costs.
	Prerequisite for being able to carry out the following action.
	Additional helpful information.



   




Keys

	Talk key		Handsfree key
	End call key		Number / letter keys
	Control key rim / centre		Message key
	Recall key		Star key
	Hash key		
OK, Back, Select, Change, Save, ...		Display keys	











Procedures

Example: Switching Auto answer on/off

-  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **Telephony** ▶ **OK** ▶ **Auto Answer** ▶ **Change** (= on)

Step	Follow this procedure
• 	When in idle status press the centre of the control key. The main menu opens.
•  	Navigate to the  icon using the control key  .
• OK	Select OK to confirm. The submenu Settings opens.
•  Telephony	Select the Telephony entry using the control key  .
• OK	Select OK to confirm. The submenu Telephony opens.
• Auto Answer	The function to switch Auto answer on/off appears as the first menu item.
• Change	Select Change to activate or deactivate. Function is activated <input checked="" type="checkbox"/> / deactivated <input type="checkbox"/> .

Safety precautions

	<p>Read the safety precautions and the user guide before use.</p> <p>Comprehensive user guides for all telephones and telephone systems as well as for accessories can be found online at https://wiki.unify.com/wiki/DECT_Handsets in the Support category. We thereby help to save paper while providing fast access to the complete up-to-date documentation at any time.</p>
	<p>The device cannot be used in the event of a power failure. In case of a power failure it is also not possible to make emergency calls.</p> <p>Emergency numbers cannot be dialled if the keypad/display lock is activated!</p>
	<p>Use only rechargeable batteries that correspond to the specification (see list of permitted batteries → https://wiki.unify.com/wiki/DECT_Handsets). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.</p>
	<p>The handset must not be operated if the battery cover is open.</p> <p>Ensure that the batteries can not be short-circuited by objects in the battery compartment</p>
	<p>Do not use the devices in environments with a potential explosion hazard (e.g. paint shops).</p>
	<p>The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.</p>
	<p>Use only the power adapter indicated on the device.</p> <p>Whilst charging, the power socket must be easily accessible.</p>
	<p>Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.</p>
	<p>Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.</p>
	<p>Keep small cells and batteries, which can be swallowed, out of the reach of children.</p> <p>Swallowing a battery can lead to burns, perforation of soft tissue and death. Severe burns can occur within 2 hours of swallowing.</p> <p>In the case of a swallowed cell or battery, seek medical care immediately.</p>



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your OpenScope DECT Phone SL7 product see "Technical data").



If a USB adapter cable is included, only use a USB power supply (5Volt) with USB-A connection. The use of other voltage sources e.g. PC's with USB connection can cause damage.

If a plug-in power supply is included, please use this power supply.

Getting started

Contents of the package

- 1 handset
- 1 battery cover (rear cover for the handset)
- 2 rechargeable batteries (AAA)
- 1 belt clip
- 1 user guide



The charging cradle is designed for use in closed, dry rooms within a temperature range of +5°C to +45°C.

Never expose the telephone to heat sources, direct sunlight or other electrical devices.

Protect your telephone from moisture, dust, corrosive liquids and vapours.

The device's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on furniture, contact marks on the surfaces cannot be completely ruled out.


Handset

Connecting the charging cradle

- Connect the flat plug of the power adapter.
- Plug the mains unit into your power socket.

To remove the plug from the charging cradle again:

- Disconnect the power adapter from the mains power supply.
- Press the release button.
- Pull out the plug.

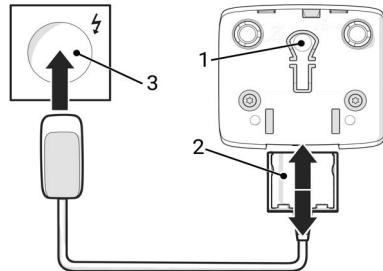




Setting up the handset for use

The display is protected by a plastic film. ▶ Please remove the protective film!

Inserting the batteries




Only use **rechargeable batteries** otherwise major health risks and injury may result. For example, the outer casing of the batteries could be damaged beyond repair or the batteries could explode. The device could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

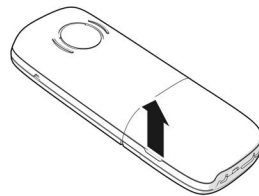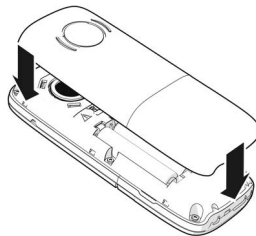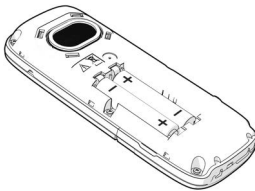

- Insert the batteries (for correct +/- direction, see diagram).
 - Fit the battery cover from the top.
 - Press the cover until it clicks into place.
- Re-open the battery cover:
- Insert a fingernail into the notch at the bottom of the cover and slide it upwards to remove.

Charge the battery

- Charge the battery fully prior to first use in the charging cradle or using a standard USB mains adapter.

The battery is fully charged when the power icon  disappears from the display.




The battery may heat up during charging. This is not dangerous.

After a time, the charge capacity of the battery will decrease for technical reasons. Switch the handset off if you are not using it for a couple of days.

If you are not using the handset for a couple of weeks, switch it off and remove the battery.

As soon as power is applied to the handset, a Setup wizard starts.

Setting the display language

- Press the control key  until the language required is selected on the display, e.g. **English** ▶ press the display key **OK**


You can also change the display language later on in the **Settings** menu.

Registering a handset







On the handset

You require the 4-digit system PIN (registration code).

If the handset is not yet registered with a base:

- **Register** . . . A search is performed for a base ready for registration ▶  enter the system PIN ▶ **OK**







If the handset is already registered with a base:

-  ▶   **Settings** ▶ **OK** ▶  **Registration** ▶ **OK** ▶  **Register Handset** ▶ **OK** . . . A search is performed for a base ready for registration ▶  enter the system PIN ▶ **OK**

Once registration is complete, the handset returns to idle mode. Your phone is now ready for use.




The handset can be registered with up to four base stations. Changing the base:

-  ▶   **Settings** ▶ **OK** ▶  **Registration** ▶ **OK** ▶  **Select Base** ▶ **OK** ▶  select the base ▶ **OK**

Attaching the belt clip

The handset has 2 notches on each side for attaching the belt clip.

- **Attaching the belt clip:** ▶ Press the belt clip onto the back of the handset so that the tabs on the belt clip click into place in the notches.
- **Removing the belt clip:** ▶ Press the centre of the belt clip firmly with your right thumb. ▶ Push the nail of your left thumb up between the clip and the casing. ▶ Slide the clip upwards to remove.

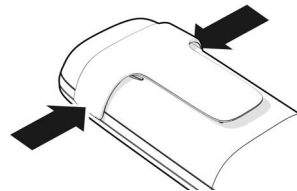


Connecting the headset

- Connect the headset with 3.5 mm jack to the left side of the handset.

or

- Connect headset via Bluetooth (→ p. 40)

Setting the headset volume: → p. 45

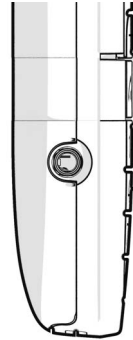


Connecting the USB data cable

For data exchange between the handset and PC:

- Connect the USB data cable with USB-C plug into the USB-C socket at the bottom of the handset.



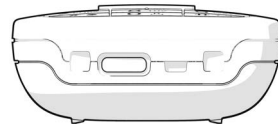

Connect the handset directly to the PC, **not** via a USB hub.



Using the telephone

 
Getting to know your telephone

Switch the handset on/off

- Switch on: • When the handset is switched off, press and **hold** the End call key 
- Switch off: • When the handset is in idle status, press and **hold** the End call key 

Lock/unlock the keypad

The keypad lock prevents any accidental use of the telephone.

Lock/unlock the keypad: ▶  Press and **hold**

Keypad lock activated: the following symbol appears 

PIN-protected keypad lock

Once you have assigned a PIN (not 0000) to the handset, you must enter this PIN to cancel the keypad lock.

Setting up a handset PIN: → p. 50

Define emergency numbers that can be dialled even when the keypad lock is PIN-protected: → p. 48



If a call is indicated on the handset, the keypad automatically unlocks and you can accept the call. It then locks again when the call is finished.





All data will be erased if you forget the PIN and try to unlock the handset.

Control key

 


The control key enables you to navigate the menus and input fields, and also to call up certain functions depending on the situation.

 
In the description below, the side of the control key (up, down, right, left) that you have to press in the different operating situations is marked in black, e. g.  for "press right on the control key" or  for "press the centre of the control key".

When the phone is idle

 
Open the main menu


















Open the list of available online directories (such as the central directory, the directory of a provider or a company directory)




Open the local directory:



Open the handset menu	
This function must be enabled	
Set the voice volume for receiver / handsfree function	 Press briefly
Open the profile selection	 Press and hold
Set the microphone sensitivity	 Press and hold
In submenus, selection and entry fields	
Confirm a function	
Navigate a line up/down	 / 
Select an option, move the cursor to the left/right	 / 
During a call	
Open the list of available online directories (such as the central directory, the directory of a provider or a company directory)	 Press briefly
Open the local directory:	 Press and hold
Open company directory (if enabled)	
Mute the microphone	 Press briefly
Set the microphone sensitivity, mute the microphone	 Press and hold
Change the voice volume for receiver / handsfree function	

Display keys

The display keys perform a range of functions depending on the operating situation.

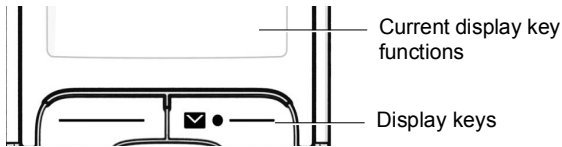

Display key icons → p. 58



The display keys have a function preset by default in idle status.







Change the assignment: → p. 49

Menu guidance



The functions of your telephone are displayed in a menu that consists of several levels.

Menu overview → p. 58

Selecting/confirming functions

Confirm selection using	OK or press the centre of the control key 
One menu level back using	Back
Change to idle status	 Press and hold
Switch function on/off using	Change on  / off 
Activate/deactivate option using	Select activated  / not activated 

Main menu

In idle status: ▶ Press the **centre** of the control key  ▶  select a submenu ▶ **OK**

The main menu functions are shown in the display as icons. The icon for the selected function is highlighted in colour and the name of the associated function appears in the display header.

Submenus


The functions in the submenus are displayed as lists.

To access a function: ▶  select a function ▶ **OK**


Return to the previous menu level:

- Press the display key **Back**

or

- Press the End call key  **briefly**

Returning to idle status



- Press and **hold** the End call key 





If a key is not pressed, after 2 minutes the display **will automatically** change to idle status.

Entering text

 
 
 
Input position


- Use  to select an entry field. A field is activated when the cursor is blinking inside it.
- Use  to move the position of the cursor.

Correcting incorrect entries



- Delete **characters** to the left of the cursor: ▶  Press **briefly**
- Delete **words** to the left of the cursor: ▶  Press and **hold**

Entering letters/characters

Multiple letters and numbers are assigned to each key between  and  and the  key. As soon as a key is pressed, the possible characters are displayed at the bottom of the display. The selected character is highlighted.

- Selecting letters/numbers: ▶ Press the key **briefly** several times in succession
- Switch between lower case, upper case and number entry mode: ▶ Press the hash key 

When editing a directory entry, the first letter and each letter following a space is automatically in upper case.

- Entering special characters: ▶ Press the star key  ▶  navigate to the desired character ▶ **Insert**
- Enter numbers to text field: ▶ Hold the desired digit key



The availability of special characters depends on the language setting.

Making calls

You can initiate or answer calls on a handset across the whole wireless network and change base station during a call (handover).



The handset is located in the wireless cell of at least one of the base stations registered with the phone system.

The handset is assigned a send and receive connection.

Making calls

- Enter the number ▶ Press **briefly** the **Talk** key

or

- Press and **hold** the Talk key ▶ enter the number

The connection is established over the SIP link assigned to the handset.

Cancel dialling: ▶ Press the **End** call key



If the display backlight is deactivated, you can reactivate it by pressing any key. **Digit keys** that are pressed appear in the display for pre-dialling, **other keys** have no further function.

Dialling from the redial list

The redial list contains the 20 numbers last dialled with the handset.

- **Briefly** press the **Talk** key . . . The redial list is opened ▶ select the entry ▶ Press the **Talk** key

If a name is displayed:

- **View** . . . The number is displayed ▶ Use as required to scroll through the numbers ▶ At the phone number required, press the **Talk** key

Managing entries in the redial list

- Briefly press the **Talk** key . . . The redial list is opened ▶ select an entry ▶ **Options** . . . Possible options:

Copy entry to directory:

- **Copy to Directory** ▶ **OK**

Copy the number to the display:



- **Display Number** ▶ **OK** ▶ Use as required to change or add . . . save in the directory as a new entry

Delete the selected entry:

- **Delete entry** ▶ **OK**

Delete all entries: • **Delete List** ▶ **OK**

Set automatic redial:

-  **Automatic Redial** ► **OK** . . . The selected number is automatically dialed at fixed intervals (at least every 20 seconds). The handsfree key flashes, "open listening" is activated.
The participant answers: ►  Press the **Talk** key . . . The function is ended
The subscriber does not answer: The call is interrupted after around 30 secs. The function is terminated after pressing any key or after ten unsuccessful attempts.


Dialling from a call list

The call lists (→ p. 23) contain the most recent accepted, outgoing and missed calls.

-  ►  **Call Lists** ► **OK** ►  select the list ► **OK** ►  select an entry ►  press the **Talk** key



The call lists can be displayed directly by pressing the display key **Calls** if the relevant function has been assigned to the display key.

The Missed calls list can also be opened by pressing the Message key .

Initiating ringback

 
 
If the line of a called subscriber is busy, you can arrange for a ringback (if the phone system or provider supports the CCBS and CCNR services).

CCBS (Completion of Call to busy subscriber) Ringback when busy




CCNR (Completion of Calls on No Reply) Ringback when call is not answered

The service code for enabling/disabling CCBS and CCNR must be configured in the provider settings.


Enabling ringback:

- Enter the service code specified for the phone system / provider, e.g.  

  If you do not want a ringback, you can disable the function.

- Enter the service code specified for the phone system / provider, e.g.   

Incoming calls

An incoming call for the connection assigned to your handset is indicated by ringing, by a display on the screen and by the flashing Talk / Handsfree key .

Accept the call:

- Press the Talk key  or ► **Accept**

If **Auto Answer** is enabled:

- Remove the handset from the charging cradle

Disable ringtone:

- Silence . . . You can accept the call as long as it is displayed on the screen

Reject the call:



- Press the **End** call key 

Information about the caller

If it is sent, the number of the caller is displayed. If the caller's number is saved in a directory, the name is displayed.

Accepting/rejecting a waiting call during a call


During an external call, the call waiting tone signals that another party is trying to call you. The number or name of the caller is displayed if the phone number is sent.

- Reject the call:
- **Options** ▶  **Reject waiting call** ▶ **OK**
- Accept the call:
- **Accept** ▶ Speak to the new caller. The first call is placed on hold.
- End the call, resume the call on hold:
- Press the **End** call key .

Calls with three parties


Consultation calls

During an external phone call, hold another external call. The first call is placed on hold.


- **Ext. Call** ▶  enter the number of the second party . . . The active call is put on hold and the second party is called.

If the second party does not answer: ▶ **End**

Ending a consultation call


- **Options** ▶  **End active call** ▶ **OK** . . . The connection to the first caller is reactivated.

or


- Press the **End** call key  . . . The first party is called again.

Call swapping

Switching between two calls (call swapping). The other call is placed on hold.

- During an external call, dial the number of a second party (consultation call) or accept a waiting caller . . . The display shows the numbers/names of both parties.
- The control key  enables you to switch between the parties.

Ending a currently active call

- **Options** ▶  **End active call** ▶ **OK** . . . The connection to the other caller is reactivated.

or

- Press the **End** call key  . . . The first party is called again.

Conference call

You can speak to two people simultaneously.

- During an external call, dial the number of a second party (consultation call) or accept a waiting caller . . . Then:

Start the conference call:

- **Conf.** . . . All the callers can hear each other and hold a call with each other.


Switching back to call swapping:

- **End Conf.** . . . You are reconnected to the party with whom the conference call was initiated.

End call with both participants:



- Press the **End** call key 

Each party can end their participation in the conference call by pressing the End call key

 or hanging up.

Transferring a call to another party

Transfer a call to another party (connect).

- Use the Display key **Ext. Call** to start an external consultation call ►  enter the number of the second party . . . The active call is put on hold . . . The second party is called ► Press the End call key  (during the call or before the second party has answered) . . . The call is forwarded to the second party.

or

- Use the Display key **Transf.**




The options for transferring calls must be set up correctly for the phone system.



During a conversation

Handsfree mode

Activating/deactivating handsfree mode during a call and when establishing a connection:

- Press the handsfree key 

Placing the handset in the charging cradle during a call:

- Press and **hold** down the handsfree key  ► Place the handset in the charging cradle ► **hold**  for a further 2 seconds

Call volume

Applies for the mode currently being used (handsfree, receiver or headset):

- Press  ► use  to set the volume ► **Save**



The setting is automatically saved after around 3 seconds, even if **Save** is not pressed.

Muting the microphone

When the microphone is switched off, callers will no longer hear you.

Switch the microphone on/off during a call: ► Press .

Adjust the microphone sensitivity




Adjust the microphone sensitivity for the receiver or wired headset during a call.

-  press and **hold** ► **Mic Sensitivity** ►  set the sensitivity ► **Save**








Changing without saving means the change only applies for the current call.

Permanent setting of the microphone sensitivity when the phone is idle:

-  press and **hold** ►  select **Earpiece / Corded headset / Bluetooth headset** ►  set the sensitivity ► **Save**

or

-  ►  **Audio Settings** ► **OK** ►  **Mic Sensitivity** ► **OK** ►  select **Earpiece / Corded headset** ►  set the sensitivity ► **Save**




 


 
 

 
 

Set the acoustic profile to loud surroundings:

- Press and **hold**  ►  set the sensitivity ► **Save**

Call lists







The telephone saves different types of calls (missed, accepted and outgoing calls) in lists.

Activating/deactivating the local call lists

-  ▶ Press buttons      ... ▶... then to ...
 - activate:
 -   
 - deactivate:
 -   





List entry

The following information is displayed in the list entries:

- The list type (in the header)
- Icon for the type of entry:
 -  **Missed calls,**
 -  **Accepted calls,**
 -  **Outgoing calls** (redial list)
- Caller's number. If the number is stored in the directory, the name and number type ( **Phone (Home)**,  **Phone (Office)**,  **Phone (Mobile)**) are shown instead. In the event of missed calls, the number of missed calls from this number is also shown in square brackets.
- Connection by which the call was received/made
- Date and time of call (if set)

Opening the call list

Via the menu:

-  ▶ ... use  to select  **Call Lists** ▶ **OK** ▶ ... use  to select the list ▶ **OK**





Via the Message key (missed calls):

- Press the **Message** key  ▶  **Missed Calls:** ▶ **OK**


Calling back a caller from the call list

-  ▶   **Call Lists** ▶ **OK** ▶  select list ▶ **OK** ▶  select entry ▶ Press the **Talk** key 



Additional options

-  ▶ ... use  to select  **Call Lists** ▶ **OK** ▶ ... use  to select list ▶ **OK**
... possible options:



View an entry:

- ... use  to select entry ▶ **View**

Copy the number to the directory:

- ... use  to select entry ▶ **Options** ▶  **Copy to Directory**

Delete an entry:


- ... use  to select entry ▶ **Options** ▶  **Delete entry** ▶ **OK**

Delete list:

- Options** ▶  **Delete List** ▶ **OK** ▶ **Yes**

Message lists


Notifications about missed calls, messages on the network mailbox and missed alarms are saved in the messages list.

As soon as a **new message** arrives, an advisory tone will sound. The Message key  also flashes (if activated).

Icons for message types and the number of new messages are shown on the idle display.

Notification for the following message types is available:

 on the network mailbox


 in the missed calls list

 in the missed alarms list



The icon for the network mailbox is always displayed, provided the number is stored in the telephone. The other lists are only displayed if they contain messages.

Display messages:

- Press the Message key  . . . Messages lists that contain messages are displayed, **Mailbox:** is always displayed

An entry is marked in **bold**: new messages are available. The number of new messages is shown in brackets.

An entry is **not** marked in bold: no new messages. The number of old messages is shown in brackets.

- . . . use  to select a list ► **OK** . . . the calls or messages are listed

Network mailbox: The network mailbox number is dialled.



The message list contains an entry for every answer machine assigned to the handset, e.g. for a network mailbox.

Directories

The following directories are available:

- The (local) directory on the handset
- Company directories provided over a server

The local directory is always available.

Open directories

Open directories with the Directory key

- Press the Directory key  (bottom of control key)

The  key is normally assigned as follows:

- Press **briefly** to open the selection of available online directories.
- Press and **hold** to open the local directory,

This assignment can be changed for every handset. Direct access (press briefly) can be assigned to a specific online directory. In this case, open the local directory by pressing and holding the Directory key .

Opening directories via the menu

Local directory:

-  ►   **Directory** ► **OK**

List of all online directories set up on the phone system

-  ►   **Online Directory** ► **OK**

Opening the company directory using the INT key

A company directory is available if it has been set up and when the phone system has access to this directory. The directory to open with the INT key can be set separately for every handset.

- Press the INT key  (left of control key)



It is not possible to transfer entries from the local directory to another handset.

Local handset directory

The local directory is unique to the handset.

Directory entries

Number of entries: Maximum 500

Information: First and last names, up to three phone numbers, email address, anniversary with signalling, VIP ringtone with VIP icon, CLIP image

Length of the entries: Numbers: max. 32 digits
First and last names: max. 16 characters
Email address: max. 64 characters

Creating an entry

- ► <New Entry> ► **OK** ► ► switch between the entry fields
 - **Name:**
 - enter the first and/or last name
 - **Numbers:**
 - ► **Tel.1 - Type** ► ► select a number type (**Home**, **Office** or **Mobile**) ► ► enter a number
 - Enter more numbers: ► ► toggle between the entry fields **Tel.1 - Type/Tel.2 - Type/Tel.3 - Type** ► enter a number
 - **eMail:**
 - enter the e-mail address
 - **Anniversary:**
 - activate/deactivate **Anniversary** ► enter date and time ► ► select type of alert (**Optical only** or a ringtone)
 - **Caller Melody (VIP):**
 - select the ringtone that will indicate a call from the participant . . . if a **Caller Melody (VIP)** has been assigned, the entry will appear in the directory with the **VIP** icon.
 - **Caller Picture:**
 - select a picture that is to be displayed during a call from the participant (→ Resource Directory).
- Save entry: ► **Save**



The entry is only valid if it contains at least one number.



For **Caller Melody (VIP)** and **Caller Picture**: the telephone number of the caller must be supplied.

Searching for/selecting a directory entry

- ► browse searched names
 - or
 - ► enter initial letters (max. 8 letters) . . . the display jumps to the first name starting with these initial letters ► ► continue browsing to the desired entry, if needed
- Scroll through directory: ► ► Press and **hold**

Displaying/changing an entry




-  ▶  select entry ▶ **View** ▶  select the field to be changed ▶ **Edit**

or

-  ▶  select an entry ▶ **Options** ▶ **Edit Entry** ▶ **OK**
-

Deleting entries

Delete the **selected** entry:

- ▶  ▶  select an entry ▶ **Options** ▶  **Delete entry** ▶ **OK**

Delete all entries:

- ▶  ▶ **Options** ▶  **Delete All** ▶ **OK** ▶ **Yes**
-

Setting the order of the directory entries

Directory entries can be sorted by first name or surname.

-  ▶ **Options** ▶  **Sort by Surname / Sort by First Name**

If no name was entered, the default telephone number is shown in the surname field. These entries appear at the beginning of the list, regardless of how the entries are sorted.

The sort order is as follows:

Space | Digits (0-9) | Letters (alphabetically) | Other characters.

Displaying the number of entries available in the directory

-  ▶ **Options** ▶  **Available Memory** ▶ **OK**
-

Copying number to the directory

Copy numbers to the directory:

- From a list e.g. the call list or the redial list
- When dialling a number

The number is displayed or highlighted.

- Press the display key  or **Options** ▶  **Copy to Directory** ▶ **OK** . . . possible options:

Create a new entry:


- **<New Entry>** ► **OK** ► select number type ► **OK** ► complete entry ► **Save**

Add number to an existing entry:

- select an entry ► **OK** ► select number type ► **OK** . . . the number is entered or a prompt to overwrite an existing number is displayed ► if required, answer the prompt with **Yes/No** ► **Save**

Copying a vCard using Bluetooth

Copy directory entries in vCard format, e.g. to exchange entries with a mobile phone.

 Bluetooth mode is activated
 The other handset/mobile phone supports Bluetooth.

- ► select an entry if needed ► **Options** ► **Copy entry / Copy all** ► **vCard via Bluetooth** . . . the **Known Devices** list is displayed ► select device ► **OK**


Receiving a vCard using Bluetooth


If a device in the **Known Devices** list sends a vCard to your handset, a directory entry is automatically created and a message is shown in the display.

If the sending device is not in the list: ► use to enter the PIN of the **sending** Bluetooth device ► **OK** . . . the copied vCard is available as a directory entry

Transferring contacts from other Bluetooth devices

Use the contacts of devices that are connected over Bluetooth, such as smartphones.

 Bluetooth is enabled, and the other device is entered as a trustworthy device, connected over Bluetooth and supports the exchange of contacts.
 On the smartphone: ► From the Bluetooth settings for the OpenScape DECT Phone SL7, enable access to the contacts

 The remote directory is only opened for viewing. Changing and deleting entries are not possible.







- ► **Directory** . . . The list of available directories is displayed ► **Bluetooth Directory** ► **OK** . . . The trustworthy devices with enabled contacts are displayed ► Select the required devices ► **Select**

Search for a contact: • Scroll through the list or enter the initial letters

See the details: • Select the entry ► **View**

Dial a phone number: • Select the entry ► Press the Talk key

or: ► **Options** ► **Display Number** ► **OK**

- Transfer a contact:
-  Select the number if required ► **OK**
 -  Select an entry ► **Options** ►  **Copy entry** ► **OK** ►  Select the phone number as required ► **OK**
- Transfer another contact: ► **Yes**
- End a transfer: ► **No**
- Transfer all contacts:
- **Options** ►  **Copy all** ► **OK** ►  Select the phone number as required ► **OK**



Contacts without a phone number are ignored. First and last names and a maximum of three phone numbers are displayed (**Mobile, Home, Office**). Other information is ignored.

The number of contact entries displayed and the sorting order are dependent on the device connected and the access permissions defined on it.


Company directory

If company directories (LDAP) are set up on the OpenScape DECT Phone SL7, they are available on the handset with the following functions:


- Scroll through directory or search directory entries
- Show directory entries with details (no editing or deleting)
- Select phone numbers directly from the directory
- Transfer directory entries to the local directory

When a phone number is entered or there is an incoming call, a search of the directory is automatically performed for an entry matching the phone number. When an entry is found, the name is displayed instead of the phone number.

Show the company directory on the phone display

The company directory is assigned to the INT key: ► Press 




Depending on the setting on the OpenScape DECT Phone SL7, you can also access a company directory from the directory key .

Directory entries

The following description is an example company directory display on a handset.

The menu shows all the directories that have been set up on the OpenScape DECT Phone SL7 and activated with the name assigned in each case. In the example on the right, the directory is displayed as **Our directory**.

-  Select the directory ► **OK**


The phone performs a query on the LDAP server.

The directory is shown in accordance with the following rules:


- The search starts in the (sub)directory defined as the search basis on the LDAP server.
- The entries are listed in alphabetical order.

- Entries are displayed with **Surname** and **First name** when both attributes are available in the LDAP database. Otherwise only the last name or first name is displayed.


Search directory

-  Scroll through the directory

or



-  Enter a name (or its starting letters)

As soon as you press a key on the keypad, the phone switches to search mode. You can enter up to 15 characters. All directory entries matching your entry are displayed.

Delete recent characters ► 

The current search term is shown in the topmost line.


Displaying a directory entry


-  Select the required entry
- Press **View** or 

or


 
- **Options** ► **View**

The directory entry is shown with detailed information.


 
-  Scroll through entry

Close entry: ► **Back** or press the End call key 

Select a number from the directory

-  Select the required entry
- Press the Talk key  . . . If only one phone number is stored, it is dialed. If there are two or more numbers, they are shown in a selection list.

or

-  Select the required phone number from the detailed view of the entry: **Phone (home)**, **Phone (office)** or **Phone (home)**
- Press the Talk key  . . . The number is dialed

Answering machine

The answering machine takes incoming calls for the handset.

Requirements

The following settings are required so that you can receive and listen to voice messages:

On the phone system

- A network mailbox is set up for the connection assigned to the handset.

On the handset


- In the handset configuration, the phone number is entered and the network mailbox is enabled.

If necessary, contact the administrator of the DECT network.

Enter/change numbers from the handset

-  ►   **Answer Machine** ► **OK** ►  **Network Mailbox** ► **OK** ►  enter or change the number of the network mailbox ► **Save**




Play messages on the handset

-  Press and hold the button

or

- Press the Messages  key ► **OK**

or



-  ►   **Answer Machine** ► **OK** ► **Play Messages** ► **OK**

Listen to announcement over speaker: ► Press the Speaker  button


Additional functions

Sound profiles

The telephone has sound profiles for adapting the handset to the environmental conditions: **Profile Loud**, **Profile Silent**, **Profile Personal**. You can use the **Do not disturb** profile to prevent the handset signalling an incoming call.

- Press and **hold**  . . . The profile currently set is shown
- Switch between profiles using 

or

-  select a profile ► **OK**






Set the microphone sensitivity to loud surroundings:

- Press and **hold**  during a call

Profile "Do not disturb"

- Press and **hold**  ►  select the profile

or

-  ►   **Audio Settings** ► **OK** ►  **Do Not Disturb** ► **Change** (= On)
- The idle display shows "**Do not disturb**" active. The status bar shows 
- Incoming calls are not signalled but show up in the call list as missed calls.
- Most messages are blocked. Exceptions: Appointments, alarm clock and anniversaries.




An incoming call occupies a line even if it is not signalled. If all the lines on the base are occupied, calls cannot be made.

Sound profiles

The profiles are set as follows by default:

Default setting		Profile Loud	Profile Silent	Profile Personal
Silent alert		On	Same as Profile Personal	Off
Ringtone		On	Off	On
Ringtone volume	Internal	5	Off	5
	External	5	Off	5
Handset volume	Receiver	5	3	3
	Handsfree	5	3	3
Advisory Tones	Key click	Yes	No	Yes
	Battery tone	Yes	Yes	Yes
	Confirmation tone	Yes	No	Yes

Activate alert tone for an incoming call for **Profile Silent**: ▶ after switching to **Profile Silent** press the display key **Beep** ... the icon  appears in the status bar



The set profile remains set when switching the phone off and back on.

Changes to the settings listed in the table:

apply in the Profile **Loud** and **Profile Silent** profiles as long as the profile is not changed.

- are permanently saved in **Profile Personal** for this profile.

Calendar

You can remind yourself of up to **30 appointments**.

In the calendar, the current day is outlined in white; on days with appointments, the numbers are displayed in colour. When a day is selected, it will be outlined in colour.

Saving appointments to the calendar





-  ▶  ▶  **Organizer** ▶ **OK** ▶  **Calendar** ▶ **OK** ▶  select desired day ▶ **OK** ... then



Switch on/off:

- **Activation:**  select **On** or **Off**



Enter date:

-  **Date** ... the selected day has been pre-set ▶  enter new date



Enter time:

-  **Time** ▶  enter hours and minutes of the appointment

Set name:

-  **Text** ▶  enter a description of the appointment (e.g. evening meal, meeting)


Set alarm tone:

-  **Signal** ▶  select the melody of the reminder alarm or deactivate the acoustic signal

Save appointment:

- **Save**



If an appointment has already been entered: ▶  **<New Entry>** ▶ **OK** ▶ then enter information for the appointment.

Notification of appointments/anniversaries

Anniversaries are transferred from the directory and displayed as an appointment. An appointment/anniversary is displayed in idle status and the selected ringtone plays for 60 seconds as a notification.

Acknowledge and stop the reminder: ▶ Press the display key **Off**




During a call, a reminder is indicated on the handset **once** with an advisory tone on the handset.


Displaying missed appointments/anniversaries

The following appointments and anniversaries are saved in the **Missed Appts** list:

- The appointment/anniversary call was not acknowledged.
- The appointment/anniversary was notified during a phone call.
- The handset was switched off at the time of the appointment/anniversary.

The last 10 entries are stored. The  icon and the number of new entries are shown in the display. The most recent entry appears at the top of the list.

Opening the list

- Press the Message key  ►  **Missed Appts:** ► **OK** ►  browse through the list of any appointments






or

-  ►  **Organizer** ► **OK** ►  **Missed Appts** ► **OK**

Each entry is displayed with the number or name, date and time. The most recent entry appears at the top of the list.

Delete an appointment/anniversary: ► **Delete**

Displaying/changing/deleting stored appointments

-  ►  **Organizer** ► **OK** ►  **Calendar** ► **OK** ►  select day ► **OK** . . . the appointment list is displayed ►  select date . . . possible options:

Display appointment details:

- **View** . . . the appointment settings are displayed

Change appointment:

- **View** ► **Edit**
or ► **Options** ►  **Edit Entry** ► **OK**


Activate/deactivate appointment:

- **Options** ►  **Activate/Deactivate** ► **OK**

Delete appointment:








- **Options** ►  **Delete entry** ► **OK**


Delete all appointments for a day:

- **Options** ►  **Delete all Appoints.** ► **OK** ► **Yes**

Timer

Setting the timer (countdown)

-  ►   **Organizer** ► **OK** ►  **Timer** ► **OK** . . . then
 - Enable/disable:
 - Activation:  select **On** or **Off**
 - Set the duration:
 -  **Duration** ► use  to enter the hours and minutes for the timer
Min.: 00:01 (one minute); Max.: 23:59 (23 hours, 59 minutes)
 - Save the timer:
 - **Save**

The timer starts the countdown. In the idle display, icon  and the remaining hours and minutes are displayed until one minute is left. From this point, the remaining seconds are counted down. At the end of the countdown, the alarm is triggered.













Disabling/repeating the alarm

- Switch off the alarm:
 - **Off**
- Repeat the alarm:
 - **Restart** . . . the timer display is displayed again ► set another duration as required ► **Save** . . . the countdown is restarted

Alarm clock



Activating/deactivating the alarm clock and setting the wake-up time

-  ►   **Alarm Clock** ► **OK** . . . then
 - Switch on/off:
 - **Activation:**  select **On** or **Off**
 - Setting the wake-up time:
 -  **Time** ►  enter hours and minutes
 - Set days:
 -  **Occurrence** ►  switch between Monday-Friday, Once and Daily
 - Set the volume:
 -  **Volume** ►  set volume in 5 levels s or select crescendo (increasing volume)
 - Set alarm:
 -  **Melody** ►  select a ringtone for the alarm
 - Save settings:
 - **Save**

When the alarm clock is activated, the icon  and the wake-up time are displayed in idle display.

Alarm

An alarm is shown on the display and indicated by the selected ringtone melody. The alarm sounds for 60 seconds. If no key is pressed, the alarm is repeated after 5 minutes. After the second repetition, the alarm call is deactivated for 24 hours.



During a call, the alarm is only indicated by a short tone.

Switching off/repeating the alarm after an interval (snooze mode)

Deactivate the alarm: ► **Off**

Repeat the alarm (snooze mode): ► Press **Snooze** or any key . . . the alarm is switched off and repeated after 5 minutes.

Protection against unwanted calls

Time control for external calls



Date and time have been set.

Enter a time period during which the handset should suspend ringing to indicate external calls e.g. during the night.

- ► **Audio Settings** ► **OK** ► **Ringtones (Handset)** ► **OK** ► **Time Control** ► **Edit** . . . then

- Switch on/off: • select **On** or **Off**
- Enter time: • switch between Suspend ring. from and Suspend ring. until ► enter start and end in 4-digit format
- Save: • **Save**



The time control only applies to the handset for which the setting is configured. The telephone will continue to ring for numbers that have been assigned to a VIP group in the directory.



Protection from anonymous callers

The handset will not ring if callers' numbers are not revealed.

- ► **Audio Settings** ► **OK** ► **Ringtones (Handset)** ► **OK** ► **Anon. Calls Silent** ► **Change** (= on) . . . the call is only signalled on the display



Switch off ringtone when in charging cradle

The handset will not ring when placed in the charging cradle. The call is only indicated on the display.

-  ►  **Audio Settings** ► OK ►  **Ringtones (Handset)** ► OK ► **Silent Charging** ► **Change** = ringtone is switched off when in charging cradle)

Disable the ringtone (do not disturb)

You can use the **Do Not Disturb** function to prevent the handset signalling an incoming call.

-  ►  **Do Not Disturb** ► Edit = enabled)
- The idle display shows "**Do not disturb**" active.
- Incoming calls are not signalled but show up in the call list as missed calls.
- Most messages are blocked. Exceptions: Appointments, alarm clock and anniversaries.



An incoming call occupies a line even if it is not signalled. If all the lines on the base are occupied, calls cannot be made.

Resource Directory










Sounds for ringtones and images that can be used as caller pictures (CLIP pictures) or as a screensaver are saved in the handset's resource directory. A range of monophonic and polyphonic sounds and pictures have been pre-set.

Media types

Type	Format
Sound Ringtones Monophonic Polyphonic Imported sounds	Internal Internal Internal WMA, MP3, WAV
Picture CLIP-picture Screensaver	BMP, JPG, GIF 240 x 172 pixels 240 x 320 pixels

If insufficient memory is available, you must delete one or more pictures or sounds before others can be saved.

Managing images (for screensaver and CLIP) and sounds






-  ►   **Additional Features** ► **OK** ►  **Resource Directory** ► **OK** ... possible options:
 - View image:
 -  **Screensavers / Caller Pictures** ► **OK** ►  select picture ► **View** ... the selected picture is displayed
 - Play sound:
 -  **Sounds** ► **OK** ►  select sound ... the selected sound is played
 - Set volume: ► **Options** ► **Volume** ► **OK** ►  select volume ► **Save**



The relevant options are not available if a picture/sound cannot be deleted.

Check memory

Display the available memory for screensavers and CLIP-pictures.

-  ►   **Additional Features** ► **OK** ►  **Resource Directory** ► **OK** ►  **Capacity** ► **OK** ... the percentage of available memory is displayed

Bluetooth

The handset is able to use Bluetooth™ to communicate wirelessly with other devices that also use this technology, e.g. to connect a Bluetooth headset or hearing aid.



Bluetooth is activated and the devices have been registered to the handset.

The following devices can be connected:

- A Bluetooth headset or hearing aid



The headset / hearing aid has the Headset or Handsfree **profile**. If both profiles are available, the handsfree profile is used to communicate.

It may take 5 seconds to establish a connection to the headset, whether a call is accepted using the headset or transferred to the headset, or a call is made from the headset.

- Up to 30 data devices (PCs, tablets or mobile phones) for the transmission of address book entries as a vCard or for the exchange of data with the computer.

In order for telephone numbers to be used further, the area code (international and local area code) must be saved to the telephone.

Operating Bluetooth devices → device user guides

Activating/deactivating Bluetooth mode

- ► ► **Bluetooth** ► **OK** ► ► **Activation** ► **Change** (☑ = activated)

If the local area code is still not saved: ► enter local area code ► **OK**

When in idle status, the activated Bluetooth mode is indicated on the handset by the icon.

Making a device visible/invisible

When Bluetooth is enabled, the handset is visible to Bluetooth devices in range for 5 minutes. It is then invisible after this time.

Making a device visible again:

- ► ► **Bluetooth** ► **OK** ► ► **Visibility** ► **Change** (☑ = enabled)

The icon in the status bar flashes whilst the handset is visible.



Even when the handset is invisible, requests from devices known as trustworthy are accepted.

Registering Bluetooth devices

The distance between the handset in Bluetooth mode and the active Bluetooth device (headset or data device) should not exceed 10 m.



Only one headset / hearing device can be registered. When more than one headset is found, enable the one required using the checkbox (☑ = enabled).

- ► ► **Bluetooth** ► **OK** ► ► **Search Devices** ► **OK** . . . the search starts (may take up to 30 seconds) . . . the names of found devices are displayed . . . possible options:

Register device: • **Options** ► ► **Trust Device** ► **OK**

The subsequent process is dependent on the device to which the connection is being made. Normally, both devices show the same authentication code.

- Confirm the authentication code on both devices . . . The devices are connected. The device is included in the list of known devices.

Showing information:

- ► Select the device as required ► **View** . . . The device name and address are displayed, as well as functions possible for this device

Repeat search: • **Options** ► **Repeat Search** ► **OK**

Cancel search: • **Cancel**

Editing the list of known (trusted) devices

Open the list

- ► ► **Bluetooth** ► **OK** ► ► **Known Devices** ► **OK** . . . the known devices are listed, an icon indicates the type of device



•Bluetooth headset



•Bluetooth data device

If a device is connected, the relevant icon is shown in the display header instead of .

Edit an entry

- ► ► **Bluetooth** ► **OK** ► ► **Known Devices** ► **OK** ► ► select entry . . . possible options:

View an entry: • **View** . . . the device name and device address are displayed ► Press **OK** to go back

De-registering a device:

- **Options** ► **Delete entry** ► **OK**

Deregister all devices:

- **Options** ► **Delete List** ► **OK**

Edit name:

- **Options** ► **Edit Name** ► **OK** ► ► edit name ► **Save**



If an active Bluetooth device is de-registered, it may try to re-connect as a "non-registered device".

Rejecting/accepting a non-registered Bluetooth device

When Bluetooth is enabled or Visibility is activated, the handset is only visible to other Bluetooth devices for 5 minutes (→ p. 40). A device is only able to request a connection during this time. Also, a connection can only be established when a register process is started.

- Start a register process as described in Section Registering Bluetooth devices.

Changing the Bluetooth name of the handset


The handset is shown by this name on another Bluetooth device.

-  ►  ► **Bluetooth** ► **OK** ►  Own Device ► **OK** . . . the name and the device address are shown ► **Change** ►  change the name ► **Save**

Usage as a Bluetooth beacon

The OpenScape DECT Phone SL7 can be used as a Bluetooth beacon. It can therefore be used in systems in which BLE (Bluetooth Low Energy) is used for communication, such as for localising the device, asset tracking, use in an alarm system, . . .

The Beacon function is enabled and set up by an Administrator. Which function the handset assumes here is dependent on the system in which it is used.

When the Beacon function is enabled on the handset, the  icon is shown in the status bar.

For further information, contact your Administrator.

Adjusting the telephone settings

Changing the language

- ► **Settings** ► **OK** ► **Language** ► **OK** ► select language ► **Select** (= selected)

If the handset has been set to an incomprehensible language:

- ► Press the keys slowly one after the other ► select the correct language ► press the right display key

Select country

Select the country where you are using the phone. Your selection is used for country-specific defaults.

- ► **Settings** ► **OK** ► **Telephony** ► **OK** ► **Country** ► **OK** ► select the country ► **Select** (= selected)

Display and keypad

Screensaver

A digital or analogue clock and a range of pictures can be selected to be displayed as a screensaver when in idle status.

- ► **Settings** ► **OK** ► **Display + Keypad** ► **OK** ► **Screensaver** ► **Edit** (= on) . . . then

- | | |
|---------------------|--|
| Switch on/off: | • Activation: select On or Off |
| Select screensaver: | • Selection ► select a screensaver (Digital Clock / Analog Clock / Slideshow / <Pictures>) |
| View screensaver: | • View |
| Save selection: | • Save |

The screensaver is activated approx. 10 seconds after the display has changed to idle status.



All pictures from the Screensaver folder of the Resource Directory are available for selection.

End screensaver

- Press the **End** call key briefly . . . the display changes to idle status

Large font

Show text and icons in call lists and in the directory in a larger size in order to improve legibility. Only one entry is shown in the display and names are abbreviated if necessary.

- ▶ **Settings** ▶ **OK** ▶ **Display + Keypad** ▶ **OK** ▶ **Large Font** ▶ **Change** = on)

Colour scheme

You can choose from a range of colour combinations for the display.

- ▶ **Settings** ▶ **OK** ▶ **Display + Keypad** ▶ **OK** ▶ **Colour Schemes** ▶ **OK** ▶ select the desired colour scheme ▶ **Select** = selected)

Display backlight

The display backlight always illuminates when the handset is taken out of the base station/ charging cradle or when a key is pressed. Any digit keys that are pressed appear on the display for pre-dialling.

Switch the display backlight on/off when in idle status:

- ▶ **Settings** ▶ **OK** ▶ **Display + Keypad** ▶ **OK** ▶ **Display Backlight** ▶ **OK** ▶ select when the setting is applied (In Charger / Out of Charger / In Talk State) ▶ select in each case with **On or Off** ▶ **Save**



The handset's standby time may be significantly reduced if the display backlight is switched on.

Feature key

You can change the function on the feature key.

- ▶ **Settings** ▶ **OK** ▶ **Display + Keypad** ▶ **OK** ▶ **Display Backlight** ▶ **OK** . . . then

Switch on/off:

- Activation ▶ select **On** or **Off**

Choose the function:

- Function ▶ select the function: Quick dial, Alarm key, Send key

Depending on the function, you have the following options:

Keypad locked:

- Select Key inactive or Key active

Via:

- Select **Earphone** or **Handsfree**

Call to:

- enter the number or choose from directory

Feature Key PIN:

- enter the PIN
- **Save**

You have additional options for the alarm key function:

Short key press:

- select **On** or **Off**

Long key press:

- select **On** or **Off**

Alarm delay:

- select the delay: Off / 5 sec. / 10 sec. / 15 sec. / 30 sec.
- select the melody
- select the volume









Keypad illumination

The keypad has 5 levels of brightness to choose from.

-  ►   **Settings** ►  ►  **Display + Keypad** ►  ►  **Key Illumination** ►  ►  select Intensity (1 - 5) ►  **Save**

Activating/deactivating automatic keypad lock

Automatically lock the keypad when the handset has been in idle status for around 15 seconds.

-  ►   **Settings** ►  ►  **Display + Keypad** ►  ►  **Auto Keypadlock** ►  **Change** (= on)

Tones and signals




Call volume

You can set the volume of the earpiece, handsfree function and headset on 5 levels independently of each other.







Changes are only saved permanently in Profile Personal.

During a conversation

-  **Handset Volume** ►  select volume ►  **Save** . . . the setting is saved

In idle status

-  **Handset Volume** ►  select what the setting is to apply for (Earpiece / Speaker / Corded headset) ►  select the volume ►  **Save** . . . The setting is saved

or

-  ►   **Audio Settings** ►  ► **Handset Volume** ►  ►  select what the setting is to apply for (**Earpiece** / **Speaker** / **Corded headset**) ►  set the volume ►  **Save**

Automatic volume control



Crescendo is not set for the ringtone volume (→ p. 47).

The phone is able to automatically adjust the volume of the receiver and ringtone to the ambient volume. Here you can set the sensitivity with which the phone reacts to changes in noise level (Very High, High, Medium, Low, Very Low).

- ► **Audio Settings** ► **OK** ► **Smart Volume** ► **OK** ► **Earpiece Volume / Ringtone Volume** ► **Edit**

- Enable/disable: • Activation: select **On** or **Off**
Adjust the sensor: • **Sensitivity** ► adjust the sensor sensitivity
Save: • **Save**

Headset – volume correction

Change the call volume for the wired headset. In addition to the standard settings for the call volumes, here you can compensate the audio setting characteristics of your headset.

- ► **Audio Settings** ► **OK** ► **Corded Hdset Boost** ► set the volume ► **Save**

Microphone sensitivity

Adjust the sensitivity of the microphone for the receiver or wired headset. This gives you improved acoustics in loud environments and when there are echoes.

- ► **Audio Settings** ► **OK** ► **Mic Sensitivity** ► **OK** ► select what the setting applies for (**Earpiece / Corded headset**) ► adjust the sensitivity ► **Save**

Earpiece and handsfree profile

Select a profile for the earpiece and handsfree mode in order to adapt the telephone as much as possible to the surroundings. Check which is the most comfortable profile for you and your caller.

- ► **Audio Settings** ► **OK** ► **Acoustic Profiles** ► **Earpiece Tones / Handsfree Profiles** ► **OK** ► select profile ► Select = selected)






Earpiece Tones: High frequency or Low frequency (default setting)

Handsfree Profiles: Standard (default setting) or Reduced Echo

Ringtones

Ringtone volume

Set different ringtone volumes for internal and external calls, and other connections configured (group calls, intercom, emergency calls) or set the same ringtone volume for all external calls.

-  ►  **Audio Settings** ► **OK** ►  **Ringtones (Handset)** ► **OK** ► **Volume** ► **OK** ►  Select **Internal calls** and appointments or **External calls** ►  Set the volume on 5 levels or Crescendo (increasing volume) ► **Save**



Changes are only saved permanently in Profile Personal.




Ringtone melody

Set different ringtones for internal and external calls, or other connections configured (group calls, intercom, emergency calls) or set the same ringtone for all external calls.

-  ►  **Audio Settings** ► **OK** ►  **Ringtones (Handset)** ► **OK** ►  **Melodies** ► **OK** ►  Select **Internal Calls** or **External calls** ►  Select the ringtone/melody in each case ► **Save**

Switching the ringtone on/off

Switching the ringtone off permanently

- Press and **hold**  ►  select **Profile Silent** . . . The following icon appears in the status bar: 


or: Enable "Do not disturb"

-  ►  **Audio Settings** ► **OK** ►  **Do Not Disturb** ► **Change**  = enabled)

Switching the ringtone on permanently

- Press and hold  ►  select **Profile Loud** or **Profile Personal**

Switching the ringtone off for the current call

- Silence or press the End call key 

Switching the alert tone (beep) on/off

Switch on an alert tone (beep) instead of the ringtone:

- Press and **hold**  ►  select **Profile Silent** ► Press **Beep** within 3 seconds . . . The following is shown in the status bar: 

Switching off the alert tone: ► Press and **hold**  or press the **Star** key  to change profile

Switching advisory tones on/off

The handset notifies acoustically about different activities and statuses. These advisory tones can be switched on/off independently of each other.

- ► **Audio Settings** ► **OK** ► **Advisory Tones** ► **OK** ... then

Tone when keys are pressed:

- **Key Tones:** select **On** or **Off**

Confirmation/error tone after making entries, advisory tone when a new message has been received:

- **Confirmation** ► select **On** or **Off**

Warning tone when there are fewer than 10 minutes of talktime remaining (every 60 seconds):

- **Battery** ► select **On** or **Off**

Warning tone when the handset is moved out of range of the base station:

- **Out of Range:** select **On** or **Off**

Save settings:

- **Save**

Auto answer

When Auto answer is enabled, the handset accepts an incoming call as soon as it is removed from the charging cradle.

- ► **Settings** ► **OK** ► **Telephony** ► **OK** ► **Auto Answer** ► **Change**
(= activated)

Regardless of the Auto Answer setting, the connection ends as soon as you place the handset back in the charging cradle. Exception: Press and **hold** the handsfree key for a further 2 seconds while placing the handset in the charging cradle.

Emergency numbers

 
 
You can enter up to three phone numbers as emergency numbers - that you can also dial when the keypad lock is PIN-protected.

- ► **Settings** ► **OK** ► **Telephony** ► **OK** ► **Emergency Numbers** ► **OK** ► select an entry (--- = empty entry) ► **Change** ► enter the name for the emergency number ► ► enter the emergency number ► **Save**

Delete entry: ► **C** delete the name and phone number ► **Save**

Fast access to numbers and functions

Assigning a number to digit keys (quick dial)



It is possible to assign a number from the directory to the keys  to .



A number has not been assigned to the digit key.

- Press and hold the digit key

or

- Briefly press the digit key ► Press the display key **QuickDial** . . . the directory opens.
- use  to select an entry ► **OK** ► use  to select a number if necessary ► **OK** . . . the entry is saved to the digit key



If the entry in the directory is deleted later, this will not affect the assignment of the digit key.

Dialling a number

- Press and **hold** the digit key . . . the number is dialled immediately


or

- **Briefly** press the digit key . . . the number/name (possibly in abbreviated form) is shown on the left display key ► press the display key . . . the number is dialled

Changing the digit key assignment

- **Briefly** press the digit key ► **Change** . . . the directory is opened . . . possible options:

Change the assignment:


-  select an entry ► **OK** ► select a number if required ► **OK**

Delete the assignment:

- **Clear Key**

Assigning display keys / Changing assignments

The left and right display keys have a function preset by default when in idle mode. The key can be re-assigned.

- Press and hold the left or right display key in idle status . . . the list of possible key assignments is opened ►  select the function ► **OK** . . . The assignment of the display key is changed

Possible functions: **Call Lists, INT, QuickDial, Timer, Alarm Clock, Calendar, Bluetooth, Redial, Do Not Disturb, Handset Directory, R Function**

Starting a function

With the telephone in idle status: ► **Briefly** press . . . the assigned function is executed

Changing the handset PIN

The handset is protected against unauthorised use by a PIN. The handset PIN must be entered e. g. when switching off the keypad lock.

Change the handset's 4-digit PIN (default setting: 0000):





-  ►  ►  **Settings** ► **OK** ►  **System** ► **OK** ►  **Handset PIN** ► **OK** ►  enter the current PIN ► **OK** ►  enter the new handset PIN ► **OK**



If the correct handset PIN is not entered after 5 failed attempts, a 15-second timer is started. Every failed attempt thereafter doubles the timer (up to a maximum delay of 8 hours between PIN entry attempts).

Resetting a handset

Reset any individual settings and changes that you have made.

-  ►  ►  **Settings** ► **OK** ►  **System** ► **OK** ►  **Handset Reset** ► **OK** ► Yes ... the handset's settings are reset



The following settings are not affected by a reset

- Registration of the handset to the base station
- Date and time
- Directory entries and call lists

Resetting the handset to the default settings

Reset all settings and personal information.

-  ►  ►  **Settings** ► **OK** ►  **System** ► **OK** ►  **Erase Handset** ► **OK** ►  enter the current PIN ► **OK**

All user information, lists, the directory and the handset registration with the base are erased. The Registration wizard is started.

Appendix

Manufacturer's advice

Disposal

- Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.
- All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.



- This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2012/19/EU.
- UK: The Waste Electrical and Electronic Equipment Regulations 2013.
- The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.
- For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product.

Care

- Wipe the device with a **damp** cloth or an antistatic cloth. Do not use solvents or micro-fibre cloths.
 - **Never** use a dry cloth; this can cause static.
 - In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.
 - Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.
-

Contact with liquid

- If the device comes into contact with liquid:
 1. Unplug all cables from the device.
 2. Remove the batteries and leave the battery compartment open.
 3. Allow the liquid to drain from the device.
 4. Pat all parts dry.
 5. Place the device in a dry, warm place **for at least 72 hours** (not in a microwave, oven etc.) with the battery compartment open and the keypad facing down (if applicable).
 6. Do not switch on the device again until it is completely dry.

When it has fully dried out, you will normally be able to use it again.

Technical data

Battery

Technology:	2x AAA NiMH
Voltage:	1.2 V
Capacity:	750 mAh

Handset operating times/charging times

The operating time of your OpenScape DECT Phone SL7 depends on the capacity of the battery, its age and the way it is used. (All times are maximum possible times.)

Standby time (hours)	320
Talktime (hours)	12
Operating time with 1.5 hours of calls per day (hours)	130
Charging time in charging cradle (hours)	5,5
Charging time in charging cradle up to 80% (hours)	2

No display lighting when the phone is idle and during a call

Power consumption of the handset in the charging cradle

When charging:	approx. 1.50 W
To maintain the charge status:	approx. 0.50 W

General specifications

DECT standard	Supported
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1880-1900 MHz
Duplex mode	Time division multiplexing, 10 ms frame length
Repetition frequency of the transmission pulse	100 Hz
Duration of the transmission pulse	370 µs
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW average power per channel, 250 mW pulse power
Range	Up to 50 m indoors, up to 300 m outdoors

Base station power supply	230 V ~/50 Hz
Environmental conditions for operation	+5 °C to +45 °C; 20% to 75% relative humidity
Dialling mode	DTMF (tone dialling)

Bluetooth

Version	5.1
Radio frequency range	2402-2480 MHz
Transmission power	4 mW pulse power

Power adapter for the handset

Manufacturer	Salom Electric (Xiamen) Co. Ltd. Commercial registration number: 91350200612003878C 31 Building, Huli Industrial District, Xiamen, Fujian 361006, P.R. China
Model identifier	C812 / C813
Input voltage	230 V
Input AC frequency	50 Hz
Output voltage	5 V (USB-C)
Output current	1 A
Output power	5 W
Average active efficiency	> 73.62 %
No-load power consumption	< 0.10 W

Character charts

The character set used on the handset is dependent on the language set.

Standard characters

Press the relevant key the number of times indicated.

Technical data
















	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1	1									
2	a	b	c	2	ä	á	à	â	ã	ç
3	d	e	f	3	ë	é	è	ê		
4	g	h	i	4	ğ	í	ì	î	ı	
5	j	k	l	5						
6	m	n	o	6	ö	ñ	ó	ò	ô	õ
7	p	q	r	s	7	ß				
8	t	u	v	8	ü	ú	ù	û		
9	w	x	y	z	9	ÿ	ý	æ	ø	å
0	␣ ¹⁾	.	,	?	!	← ²⁾	0			

- 1) Space
- 2) Line break





Display icons

The following icons are displayed depending on the settings and the operating status of your telephone.










Icons in the status bar

Icon	Meaning
	Signal strength (No Radiation off) 1% -100%
	white, if Maximum Range on; green, if Maximum Range off
	Red: no connection to the base station
	No Radiation activated: white, if Maximum Range on; green, if Maximum Range off
	Profile Silent activated (Ringtone switched off)
	"Beep" ringtone activated
	Keypad lock activated
	Bluetooth enabled
	Using the handset as a Bluetooth beacon
	Headset / hearing aid connected via Bluetooth
	Data device connected via Bluetooth
	"Do not disturb" enabled
	Battery charge status, depending on the bar length 0 – 100 %
	white: over 11%; red: below 11%; flashes red: Battery almost empty (approx. 5 minutes of talktime left)
	Battery is charging (current charge status): 0 % - 100 %

 









Display key icons

Icon	Meaning
	Last number redial
	Delete text
	Open the directory
	Copy number to the directory

Display icons to indicate . . .





















Icon	Meaning
	External call
	Internal call
	Establishing a call (outgoing call)
	Connection established
	No connection established/connection terminated
	Reminder for appointment
	Reminder for anniversary
	Alarm call
	Countdown timer

Other display icons

Icon	Meaning
	Missed calls
	Missed appointments
	New voice messages
	Alarm clock is activated, display with alarm time
	Timer switched on, display with countdown
	Action complete (green)
	Action failed (red)
	Information
	(Security) prompt
	Please wait ...

Display icons

Alarm icons

Icon	Meaning
	Bomb alarm
	Robbery alarm
	Chemical accident
	Evacuation
	Explosion
	Fire
	Flood
	Heart attack
	Risk of poisoning
	High volume
	Machine failure
	Personal accident
	Medical assistance required
	Medical emergency
	Nurse/carer requested
	Power failure
	Radiation/radioactivity
	Firearm use
	Poisonous gases
	Exposure to violence

Index

A

Advisory tones	48
Alarm	37
Alarm clock	36
switch on/off	36
Alert tone (beep)	34, 47
Anniversary, see Appointment	
Answer machine	
calling back a caller	23
Answer, auto	48
Answering machine, play messages	32
Appointment	
display missed	35
missed	35
notification	34
setting	34
Assigning number key	49
Authorisation	52
Auto answer	48
Automatic	
redial	19

B

Battery	
charging	11
inserting	11
Beacon	42
Beep (alert tone)	34, 47
Belt clip	12
Bluetooth	40
activate	40
beacon	42
changing the device name	42
copy directory (vCard)	28
copying directory	28
de-register devices	41
list of known devices	41
making a device visible/invisible	40
registering devices	41
Broken display	8

C

Calendar	34
Call	
external	18
incoming	19
Call list	
copying a number to the directory	23
delete	23
delete an entry	23
dialling	19
entry	23
opening	23
Call lists	23

Call protection	37
Call swapping, two external calls	20
Call transfer	21
Call, anonymous	
protection from	37
Calls	
making an external call	18
Care	53
Care of the device	53
Changing	
display language	43
Changing the device name (Bluetooth)	42
Changing the handset PIN	50
Character charts	55
Charging cradle (handset)	
connecting	10
Charging time of handset	54
CLIP image	
view in resource directory	39
CLIP-picture, in directory	26
Colour scheme	44
Company directory	25, 29
automatic search	29
dial number	30
open	29
search	30
search for entry	30
search mode	30
Conference call	21
ending	21
two external calls	21
Connecting the USB data cable	13
Consultation call	20
end	20
Contact	
sending from smartphone	28
Contact with liquid	53
Contents of the package	10
Control key	6, 14
Correcting incorrect entries	17
Countdown (timer)	36
Country	43
Customer Care	52
Customer Service	52

D

De-registering devices (Bluetooth)	41
Dialling	
from the call list	19
from the redial list	18
using quick dial	49
Directories	
using them	25
Directory	25
copy vCard (Bluetooth)	28
copying numbers	27

entry	25	handsfree volume	22
memory	27	idle status	16
open	25	keypad illumination	45
order of entries	27	muting	22
saving an entry	26	overview	6
searching	26	registering	12
selecting an entry	26	resetting	51
sending with Bluetooth	28	restoring to default setting	51
Directory key		set up	11
assignment	25	switch on/off	14
Display		using as a Bluetooth beacon	42
backlight	44	Handsfree key	21
broken	8	Handsfree mode	21
changing display language	43	Handsfree profile	46
colour scheme	44	Handsfree volume	22
directory memory	27	Hash key	6
large font	43	Headset (Bluetooth)	40
missed appointment/anniversary	35	Headset connection	6
network mailbox message	24	Headset socket	13
screensaver	43	Headset volume	46
setting	43	Help	52
Display icons	58		
Display keys	6, 15	I	
assigning	49	Icons	
icons	58	alarm clock	36
Display language		alarm icons	60
setting	12	displaying new messages	24
Disposal	52	indications	59
"Do not disturb" profile	33	on display keys	58
		status bar	58
		timer	36
E		Idle status	
Earpiece profile	46	returning to	16
Earpiece volume	22	Illumination, keypad	45
automatic	46	Indications, icons	59
Emergency numbers	48	INT key, open directory	25
not possible	8		
End call key	6, 18	K	
Entering numbers	17	Key 1 (fast access)	6
Entering special characters	17	Key, assigning	49
Entering text	17	Keypad illumination	45
Entering umlauts	17	Keypad lock, automatic	45
		Keys	
F		control key	6, 14
Feature key	44	display keys	6, 15
		end call key	6, 18
G		handsfree	21
Getting started	10	hash key	6
		menu	14
H		message key	6
Handset		on/off key	6
automatic keypad lock	45	recall key	6
changing the settings	43	star key	6
colour scheme	44	talk key	6
connecting the charging cradle	10		
display backlight	44	L	
display language	43	Language	
handset volume	22		

display	43
Large font	43
LDAP (Lightweight Directory Access Protocol)	29
Liquid	53
List	
known devices (Bluetooth)	41
Lock/unlock the keypad	14
Loud surroundings	22
Lower/upper case	17

M

Mains unit	
handset	55
Making calls	
external	18
Manufacturer's advice	52
Medical equipment	9
Melody	
ringtone for internal/external calls	47
Memory in the directory	27
Memory, resource directory	39
Menu key	14
Message key	6
Message lists	24
Messages	
play on network mailbox	32
Microphone	
adjust sensitivity	22, 46
switch on/off	22
volume	46
Missed anniversaries/appointments	35
Muting the handset	22

N

Network mailbox	32
enter number	32
play messages	32
Network MB, see Network mailbox	
Number	
copying to the directory	27
saving in the directory	26

O

On/off key	6
Open Source Software	65
Operating time of handset	54
Overview	
handset	6

P

Picture	
as CLIP image	39
as screensaver	39
formats	39
Play sound	39
Power adapter	8, 55
handset	55

Protection from calls	
"Do not disturb" profile	33
anonymous	37
switch off ringtone when in charging cradle	38
time control	37

R

Recall key	6
Redial list	18, 23
Registering (handset)	12
Registering device (Bluetooth)	41
Resource Directory	39
memory	39
Resource directory	
view CLIP image	39
Ringback	
disable on busy	19
when busy	19
Ringback when call is not answered	19
Ringtone	47
automatic volume	46
changing	47
disable	19
melody for internal/external calls	47
switch off when in charging cradle	38
time control	37
volume	47

S

Safety precautions	8
Screensaver	43
Searching in directory	26
Sensitivity	
volume	46
Setting up	
handset	11
Show new messages	24
Signal strength	58
Snooze mode (alarm)	37
Sound	
formats	39
playback	39
Sounds for ringtones	39
Speaker	21
Star key	6
Status bar	
icons	58
Switch on/off alarm (timer)	36
Symbols, see Icons	58

T

Talk key	6
Technical data	54
Telephone	
operating	14
Time control for external calls	37

Timer	36	VIP group, classify directory entry	26
<hr/>		VIP ringtone	26
U		Volume	
Upper/lower case	17	earpiece	45
USB connection socket	6	handset speaker/earpiece volume	22
<hr/>		headset	45, 46
V		speaker	45
Viewing network mailbox message.....	24		

All rights reserved. Rights of modification reserved.

Open Source Software

General

Your device includes Open Source software that is subject to various license conditions. With regard to Open Source software, the granting of usage rights that go beyond the operation of the device is governed by the relevant license conditions of the Open Source software. The corresponding licence conditions can be found below in their original version.

The respective license texts regularly contain limitations of liability with regard to the relevant licensor of Open Source Software. The exclusion of liability for the LGPL Version 2.1, for example, reads as follows:

„This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.”

The liability remains unaffected by this.

Licence and copyright information

Your device includes Open Source software. The corresponding licence conditions can be found below in their original version.

Licence texts

Copyright (c) 2001, Dr Brian Gladman < >, Worcester, UK.

All rights reserved.

LICENSE TERMS

The free distribution and use of this software in both source and binary form is allowed (with or without changes) provided that:

1. distributions of this source code include the above copyright notice, this list of conditions and the following disclaimer;
2. distributions in binary form include the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other associated materials;
3. the copyright holder's name is not used to endorse products built using this software without specific written permission.

DISCLAIMER

This software is provided 'as is' with no explicit or implied warranties in respect of its properties, including, but not limited to, correctness and fitness for purpose.
