



**OpenStage M3/M3 Plus
OpenStage M3 Ex/M3Ex Plus
on HiPath Cordless IP
OpenScape Office, OpenScape Voice**

User Guide

Our Quality and Environmental Management Systems are implemented according to the requirements of the ISO9001 and ISO14001 standards and are certified by an external certification company.

Copyright © Unify Software and Solutions GmbH & Co. KG <06/2014>
Mies-van-der-Rohe-Str. 6, 80807 Munich/Germany

All rights reserved.

Reference No.: A31003-H1012-C111-2-7619

The information provided in this document contains merely general descriptions or characteristics of performance which in case of actual use do not always apply as described or which may change as a result of further development of the products. An obligation to provide the respective characteristics shall only exist if expressly agreed in the terms of contract.

Availability and technical specifications are subject to change without notice.

Unify, OpenScape, OpenStage and HiPath are registered trademarks of Unify Software and Solutions GmbH & Co. KG. All other company, product and service names are trademarks or registered trademarks of their respective holders.

Safety notes

Using the OpenStage M3 Ex and OpenStage M3 Ex Plus handsets in potentially explosive working environments

This handset fulfils the requirements of the ATEX Directive and meets the required EN and IEC standards (see the appendix in the operating manual). See also the notes in the declaration of conformity.

OpenStage M3 Ex and OpenStage M3 Ex Plus were designed for use in potentially explosive working environments (Ex zones) and in compliance with fire prevention regulations. Local and operational factors may lead to an explosive atmosphere in an Ex zone. Therefore, please observe the following Ex safety notes:

Handset:



- The handset may only be operated in Ex zones where it is certified. Refer to the appendix in the operating manual, the device identification and the EC type examination certificate. A copy of the prototype verification certificate ZELM 08 ATEX 0379 X can be found in the appendix of this operating manual.
 - Users must check the handset for damage and verify that it is operating correctly before using it in the Ex zone. A damaged handset or a handset that is not fully functional may not be brought into or used in the Ex zone.
 - The following requirements must be met to satisfy the Ex protection and IP rating IP 65 (casing protection) in an Ex zone:
 - The battery compartment seal must not be damaged.
 - The cover of the battery compartment must be tightly screwed on.
 - Deactivate the handset immediately and remove it from the Ex zone if the following situations occur:
 - You notice damage to the handset.
 - If liquids have seeped into the handset.
 - Repair a damaged handset immediately.
 - Only service employees with Ex zone training and authorisation should repair and service the handset.
 - When swapping out a malfunctioning device/battery, the technician must return the malfunctioning device/battery to the manufacturer while specifying the customer data.
 - Inappropriate use of the handset will result in revocation of its certification for use in Ex zones.
-

Battery pack:



- Only use the approved battery pack (see → Page 82). Ex authorisation is only valid and the handset can only be operated if this battery pack is installed. Other battery packs are strictly prohibited. If they are used, Ex protection is no longer valid.
 - Never open the handset battery compartment in an Ex zone. Battery pack removal, charging or transportation is not permitted in these zones.
-

Charging the battery pack:



- The battery pack may only be charged:
 - Outside the Ex zone
 - While inside the handset
 - Using the supplied charging unit
 - The charging unit should only be used outside the Ex zone.
-

 **Headset:**

- A corded headset may not be used in the Ex zone. Only Ex authorised Bluetooth headsets may be used. For more information, consult your system administrator.
-

 **USB cable connection:**

- Data may not be transferred via USB cable in the Ex zone.
-

Using OpenStage M3, OpenStage M3 Plus, OpenStage M3 Ex and OpenStage M3 Ex Plus

 **Attention:**

- Do not use OpenStage M3 and OpenStage M3 Plus handsets in potentially explosive environments!
 - Please observe local safety regulations when using the handset.
 - The ringer, signal tones and handsfree talking (speakerphone mode) are played over the loudspeaker. Do not hold the handset to your ear when it rings, when a signal tone is emitted or if speakerphone mode is switched on. Otherwise you may seriously and permanently impair your hearing.
 - A transmitter signal is emitted by your handset. Please observe local safety regulations.
 - Handsets can interfere with the operation of medical equipment. Please observe the technical requirements of the relevant environment (hospital, for instance).
 - The handset can cause unpleasant humming in hearing aids.
-

 **Caution:**

- To avoid mutual interference, do not operate the handset in the vicinity of electronic equipment.
 - Only use the charging shell provided to charge the handset.
 - If you give your handset to someone else, remember to include the operating manual with it.
-

Using the battery pack for OpenStage M3 and OpenStage M3 Plus

 **Attention:**

- Only use the original battery pack from the manufacturer of the OpenStage M3/ OpenStage M3 Plus!
 - Do not use a standard rechargeable battery pack. This can result in serious injury and material damage (risk of explosion, degradation of battery pack cladding, functional interference and handset damage).
 - Avoid contact with fire and water.
-

Compliance with BGR 139 (personal alarm functionality)

Only for OpenStage M3 Plus and OpenStage M3 Ex Plus!

Notes:

- For BGR-compliant operation as a personal alarm signal device with a voice communication capability (PNG-S), the handset must operate in conjunction with an alarm server. Handset operation without an alarm server is not BGR-compliant.
- The alarm functionality cannot be deactivated by the user. Deactivation is only possible via a control call from the alarm server.
- For compliance with BGR 139, the handset may only be configured by specially qualified technicians. The PNG configuration menu is PIN-protected to prevent unauthorised configuration changes. The PIN should be kept secret.

Attention:

- The pre-alarm volume starts low and gradually rises until it becomes very loud. Users should be aware of this.
- The battery pack must always be sufficiently charged for the anticipated period of operation. The battery pack's charging capacity diminishes over its life. It should therefore be replaced by specially qualified technicians when capacity levels become insufficient (discharging accelerates over time). If necessary, consult your safety officer.

WEEE mark

Notes:

- All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.
- For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service, the shop where you purchased the product or your sales representative.



The statements quoted above are only fully valid for equipment which is installed and sold in the countries of the European Union and is covered by the European Directive 2002/96/EC. Countries outside the European Union may have other regulations regarding the disposal of electrical and electronic equipment.

Controls, parts of the device



- | | |
|--|--|
| 1 Alarm and emergency call key (red) | 12 Jack for pull cord or dummy connector |
| 2 LED for indicating mode activation and alarm status | 13 Hash key |
| 3 Example of a 2.5 mm jack for headset (not for OpenStage M3 Ex/ OpenStage M3 Ex Plus) | 14 Number keys |
| 4 Earpiece | 15 On-hook and on/off key |
| 5 Display | 16 Message key |
| 6 Display keys | 17 Volume key (+/-) |
| 7 Control key | 18 Battery cover |
| 8 Speakerphone key | 19 Mini USB connection (under battery cover) |
| 9 Talk key | 20 Screw for battery cover |
| 10 Star key | 21 Tone ringing/speakerphone loudspeaker |
| 11 Microphone | 22 Notch for attachment clip (both sides) |

How to use the keys: → Page 18

Contents

Safety notes	2
Using the OpenStage M3 Ex and OpenStage M3 Ex Plus handsets in potentially explosive working environments	2
Using OpenStage M3, OpenStage M3 Plus, OpenStage M3 Ex and OpenStage M3 Ex Plus ..	3
Using the battery pack for OpenStage M3 and OpenStage M3 Plus	3
Compliance with BGR 139 (personal alarm functionality)	4
WEEE mark	4
Controls, parts of the device	5
Operating instructions	9
Alarm functionality	9
Putting the handset into service	10
Checking the package contents	10
Removing the protective cover	10
Installing the charger	10
Fitting the attachment clip	11
Inserting the battery	12
Charging and using the battery	14
Inserting the dummy plug or connector	14
Connecting a corded headset	15
Connecting a USB data cable	15
Setting the handset display language	16
Setting the system display language	17
Description of controls	18
Function keys	18
Control key	19
Display keys	19
Menu icons in the main menu	20
Conducting calls – the basic functions	22
Activating/deactivating the handset	22
Dialling	23
Manual redial	23
Consultation	24
Answering or rejecting a call	24
Ending a call	25
Activating or deactivating the keypad lock	25
After leaving the radio network	25
Conducting calls – enhanced functions	26
Speakerphone mode	26
Conducting calls with the headset	27
Corded headset	27

Cordless headset	27
Number redial	29
Automatic redial	29
Deleting a redial entry or list	29
Adding a telephone number to the redial list	30
Phonebook of communications platform	30
Finding and dialling an entry	31
LDAP phonebook	32
Finding and dialling an entry	32
The handset's phonebook	33
Saving an entry	34
Finding and dialling an entry	34
Dialling an entry with the speed dialling digit	35
Viewing an entry	35
Changing an entry	35
Marking a VIP (Very Important Person) entry	36
Deleting an entry or phonebook	36
Displaying available memory	37
Sending an entry or phonebook to the handset or system	37
VoiceMail	39
Using dual-tone multifrequency signalling	39
Conducting calls – with multiple users	40
Transferring a call	40
Toggling (switching between calls)	40
Conducting a conference	41
Second call (call waiting)	42
Caller lists	44
Working with list entries	44
Deleting all lists	45
Additional functions	46
Handset alarm clock function	46
Appointment reminder function	47
Selecting a base	49
Setting the base	50
Speed dialling	50
Changing display key assignments	51
Call control from the PC	51
Initiating calls from the PC	51
Data communication with the PC	52
Bluetooth interface	52
Activating/deactivating Bluetooth mode	52
Registering Bluetooth devices	53
Editing the list of known (trusted) devices	54
Phonebook transfer	56
Setting the handset	57
Setting the speaker volume	57
During a call	57
In idle status	57
Setting advisory tones	58

Activating/deactivating the vibration alert	58
Setting the ringer	59
Setting ringing tones and pictures with resource directory	60
Viewing screensavers and caller pictures / Playing sounds	60
Renaming and deleting screensavers/caller pictures/sounds	61
Checking the available memory	62
Activating or deactivating the ringer	62
Activating or deactivating the alerting tone	62
Activating/deactivating automatic call answering	63
Setting the date and time	63
Setting the display	64
Setting the conversion list for vCard transfer	67
Setting the menu view	67
Resetting the defaults	68
Telephone blocking	70
Handset telephone lock	70
Personal alarm functionality	71
Alarm statuses	71
Terms	71
Alarm types (overview)	74
Activating monitoring	75
Prealarm	76
Technical warning on the handset	76
Sending an emergency alarm signal/calling for assistance	77
Deactivating monitoring	78
Function test when activating Alarm Mode and PNG Mode	79
Appendix	80
Troubleshooting	80
Cleaning the handset	81
General specifications	82
Handset	82
DECT	82
Bluetooth	82
Battery	82
Handset operating times/charging times	83
Charging shells	83
Accessories	84
EU directive	84
Writing and editing text	84
Setting upper/lower case or digits	84
Writing names	85
Accessing additional functions via the PC interface	85
Declaration of conformity	86
Index	87

Operating instructions

These operating instructions describe your handset and its functions on your communications system.

All functions that can be performed via your handset are described here. If some of the required functions are not available on your handset, it may be due to one of the following:

- The function is not configured for you or your handset - please contact your system administrator.
- Your communications platform does not feature this function - please contact your contract partner for the communications system.

Alarm functionality

 **Only** for OpenStage M3 Plus and OpenStage M3 Ex Plus!

OpenStage M3 Plus and OpenStage M3 Ex Plus offer personal alarm functionality with voice communication capability. A device with this functionality is also described in abbreviated form as PNG (personal alarm device) or as PNG-S (personal alarm device with voice communication capability).

A manual alarm can be triggered via an alarm key. Sensors detect non movement, man down and escape states, which can be signalled as automatic alarms.

An integrated time alarm function is used to determine whether the person being monitored is still responsive. A pull cord is used to check whether the OpenStage M3 Plus is still on the monitored person.

OpenStage M3 Plus and OpenStage M3 Ex Plus optionally monitor the following operating functions:

- Battery charging
- Synchronicity with DECT base
- Communication with an alarm server

A technical warning is reported on the handset in the event of a malfunction.

For more information on the alarm functionality please refer to → Page 71.

Putting the handset into service

Checking the package contents

- Handset
- Battery pack
- Accessory pack containing the following:
 - Battery cover
 - Screw for battery cover
 - Allen key
 - Attachment clip
 - Holder for attachment clip
 - Dummy plug (OpenStage M3 and OpenStage M3 Ex only)
 - Connector with cord for man down alarm (OpenStage M3 Plus and OpenStage M3 Ex Plus only)
- Document "Information on Handset"
- Document "Safety Notes"

Removing the protective cover



Remove the protective cover from the display before putting the handset into service.

Installing the charger

The charger is designed for operation in closed, dry rooms within a temperature range of +5 °C to +45 °C.

Position the charger on a level, non-slip surface.

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out.



Please note:

- Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices.
- Protect your handset from moisture, dust, corrosive liquids and fumes.

1. Connect the flat plug from the power adapter to the charger.
2. Plug the power adapter into the plug socket.




To disconnect the flat plug from the charger, press the release button and disconnect the flat plug.




Fitting the attachment clip

1. Press the attachment clip pin on the back of the handset until the tabs on the sides engage audibly in the recesses on the phone.

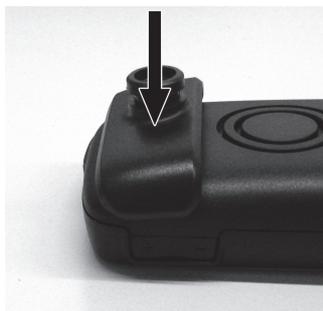

2. Slide the attachment clip onto the pin as it clicks audibly into place.

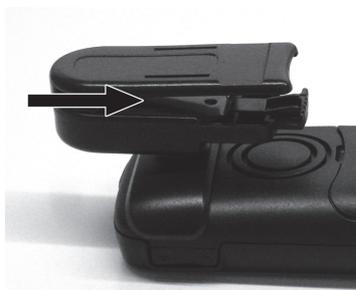

3. Secure the handset with the attachment clip to the belt. To do this, open the brackets by squeezing the free end and attach it to the belt.



To remove the handset, press the opener on the attachment clip and slide the handset from the pin.



➡ While you are wearing the handset on the belt you will be able to read the display without having to remove the handset, see → Page 66.


Inserting the battery

The handset is supplied with an approved battery. The battery is not charged when supplied. It is first charged in the handset.

- ➡ • Do not remove the battery in Ex zones.
- Please observe the safety notes → Page 2.
- Only use approved batteries → Page 82.
- Open the battery compartment in a dust-free environment only.
- Your phonebook entries and all settings remain stored even if you remove the battery. The date and time settings will be reset.
- Only remove the battery if it is defective. The battery's life diminishes each time it is removed.


Opening the battery compartment

1. Loosen and remove the screw from the battery cover with the Allen key.
2. Insert a suitable screwdriver into the recess between the housing and battery cover, turn it and then raise the battery cover.
3. Lift up the battery cover from the housing.

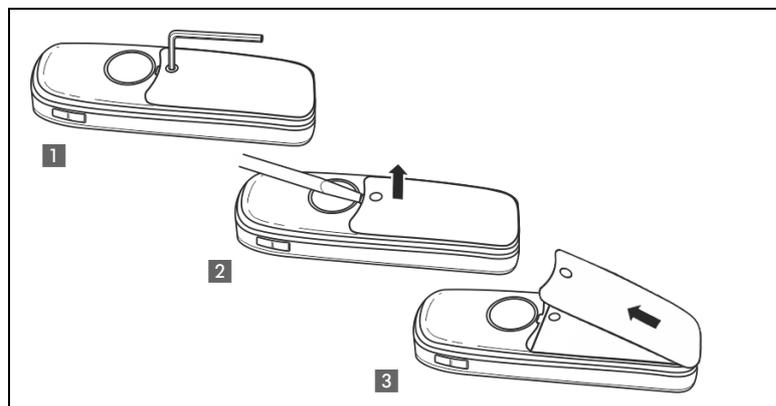


Inserting the battery

Insert the battery pack (at an angle, nose first and the contacts facing down). Then press it down into the compartment until the battery pack's positioning clip firmly snaps into place.

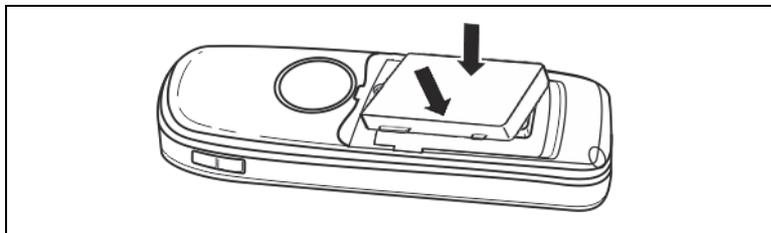

Closing the battery compartment

1. Replace the battery cover at the bottom of the housing into the recesses.
2. Then press down the battery cover until it rests firmly on the seal.
3. Insert and tighten the Allen screw.

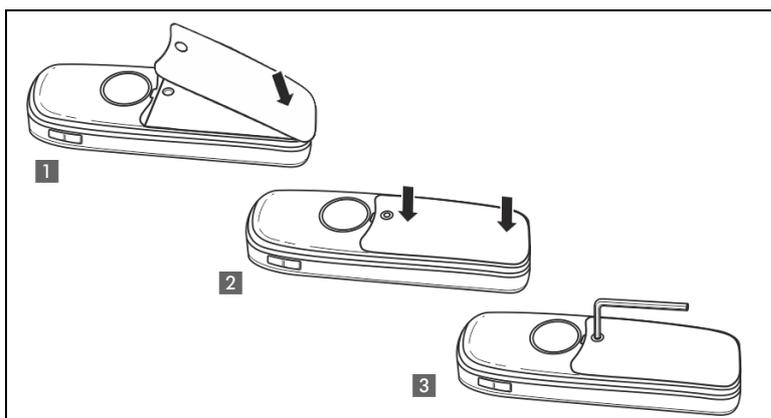

Charging and using the battery

To charge the battery, insert the handset into the charging shell with the keypad facing forwards.



Attention:

Only place the handset in the designated charger. (For order numbers see → Page 83).

The charging status is indicated by the charge status LED.


	lighting white: charged over 66%
	lighting white: charged between 34 % and 66 %
	lighting white: charged between 11% and 33%
	lighting red: charged below 11%
	flashing red: battery almost empty (less than 10 minutes talktime)
	lighting white: battery being charged



- Initial charging: Charge the battery for at least 10 hours without a break, regardless of the charging status icon.
- For future charging: you can replace your handset in the charging shell each time it has been used. Charging is electronically controlled which ensures that the battery is charged optimally.
- The capacity of the Ex battery pack can diminish due to ageing to the extent that it is no longer sufficient (increasingly faster discharge) for the intended operating life. The Ex battery pack must then be replaced by appropriately trained service personnel.

Inserting the dummy plug or connector

Insert the dummy connector (1) / connector with cord (2) into the recess provided. Make sure the dummy connector is positioned correctly.

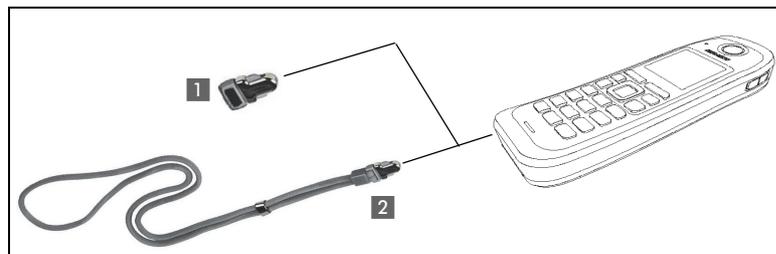

If you do not require the man down alarm function on the OpenStage M3 Plus or OpenStage M3 Ex Plus you can also use the connector without a cord as a dummy connector.




Regardless of whether or not a cord is used, the handset can be placed with the connector inserted in the charger. Run the cord out from the front of the charger.

Connecting a corded headset

 **Not** for OpenStage M3 Ex and OpenStage M3 Ex Plus!

You can connect a headset with a 2.5 mm jack plug to the left side of your handset.

1. To do this, open the rubber cover using your finger nail and bend it outward.
2. Insert the jack plug into the socket.

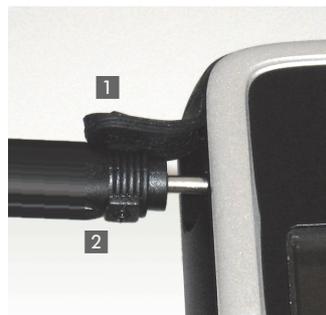

The headset volume corresponds to the setting for the earpiece volume → Page 57.

Use a Bluetooth headset for Ex-proof equipment, → Page 52.

Connecting a USB data cable

 The USB cable must not be connected in Ex zones!

You can connect a USB data cable into the port under the battery cover of your handset.

1. To do this, open the battery cover, as when inserting the battery → Page 12.
2. Insert the mini-USB plug into the socket.



Setting the handset display language

If your preferred language for handset display texts is not set as the default, you can set this yourself.

Opening the main menu

Open the handset's main menu.

Opening the first submenu

Select the menu icon and confirm.

Opening the second submenu

Select the menu item and confirm.


Selecting a language

Select and confirm the language you require.

Press the On-hook key to end the operation.



- If you inadvertently set a display language that you do not understand, press " 9_wxyz 5_ijkl"
- If you want to reset the default display language: → Page 68.
- You can also change the language of the display texts for the communications system: → Page 17.

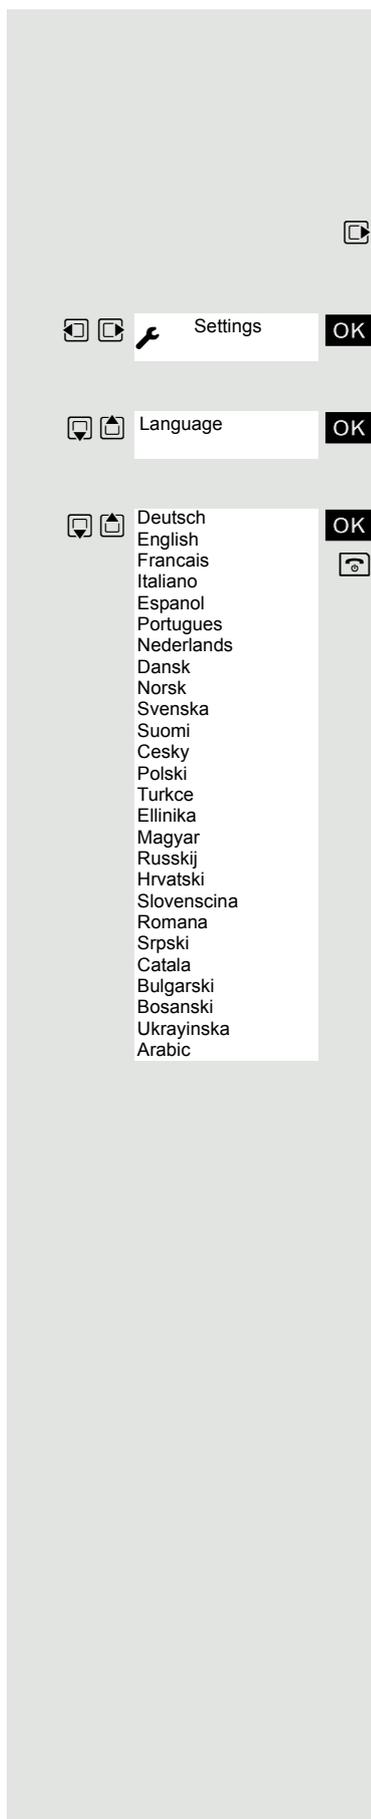

Setting the system display language

If you wish to change the language of the display texts, then you must also change the system language on the handset. A different language can be set for every handset on the system.

Press and hold the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.


Select the menu item and confirm.

Select and confirm the language you require.

Press the On-hook key to end the operation.



A description of further settings can be found from → Page 57.

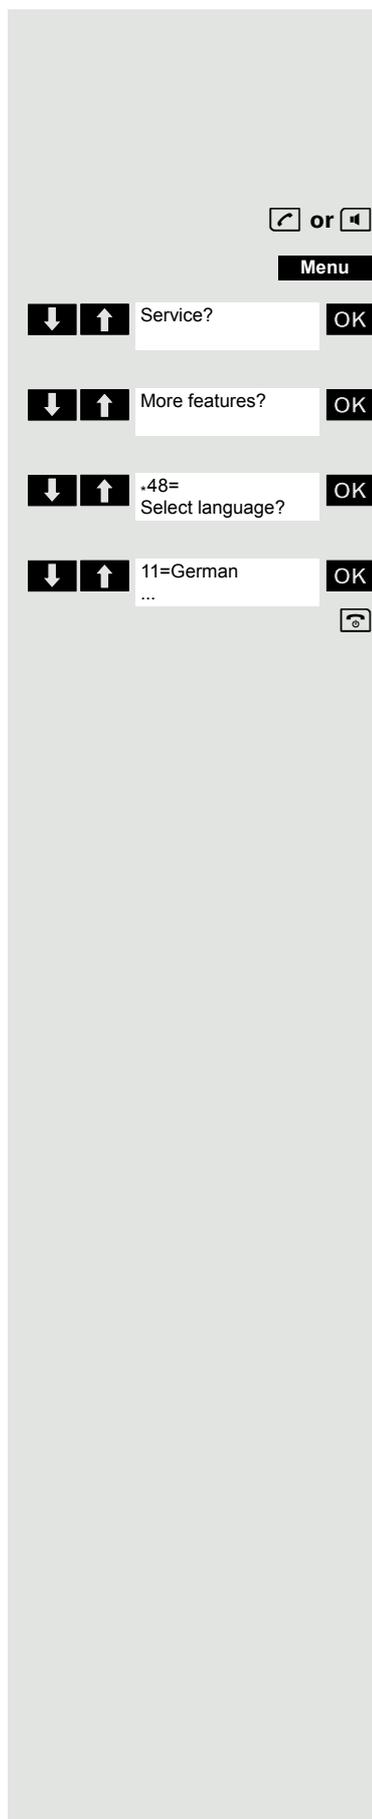

Description of controls

Function keys

The following function keys are available:

Key	Name	Usage
	On-hook and on/off key	<ul style="list-style-type: none"> • End a call • Cancel functions • Go back to the next menu level up • Activate or deactivate the handset
	Talk key	<ul style="list-style-type: none"> • Answer a call • Dial a phone number • Open the redial list • Access telephone system functions
	Speakerphone key	<ul style="list-style-type: none"> • Answer a call • Dial a phone number • Toggle between handset and speakerphone mode • Access telephone system functions
	Message list	<ul style="list-style-type: none"> • Access message lists
	Star key	<ul style="list-style-type: none"> • When entering the phone number: <ul style="list-style-type: none"> – Press and release: Insert "*" – Press and hold: Insert "R" • In editor mode (string): Show all special characters • In idle status: Press and hold to switch on/off the ringer
	Hash key	<ul style="list-style-type: none"> • When entering the phone number: <ul style="list-style-type: none"> – Press and release: Insert "#" – Press and hold: Insert a dialling pause (for example between the prefix and the phone number or when checking a mailbox) • In editor mode (string): Toggle between uppercase and lowercase and digits • In idle status: Press and hold to switch on/off the keypad lock
	Alarm and emergency call key	<ul style="list-style-type: none"> • For triggering a manual alarm or emergency call
	Volume key (+/-)	<ul style="list-style-type: none"> • Adjust the volume for ringtones • When conducting a call: Adjust the volume in handset and speakerphone mode and for the headset

Control key


The control key is assigned different functions depending on the operating situation:

Situation	 Press top of key	 Press bottom of key	 Press left side of key	 Press right side of key
In idle status	Call volume	Open the handset's phonebook	–	Open the handset's main menu
During a call	Call volume	Open the handset's phonebook	–	Select "Loud-speaker Vol", "GAP DTMF", "Base Settings"
In the main menu	Select a menu icon	Select a menu icon	Select a menu icon	Select a menu icon
In lists and menus	Next-higher item in the list	Next-lower item in the list	Next menu level up, cancel	Select an entry (OK)
In the input field	Move the cursor up one line	Move the cursor down one line	Move the cursor to the left	Move the cursor to the right
Change values	–	–	Reduce value	Increase value

The centre key (central key of control key) has an OK function for confirming/adopting a selection.

Display keys

The handset has two display keys, each with one or two functions. When the key is allocated two functions, press the right or left side of the key to select the corresponding function. The display key assignment depends on the operating status.

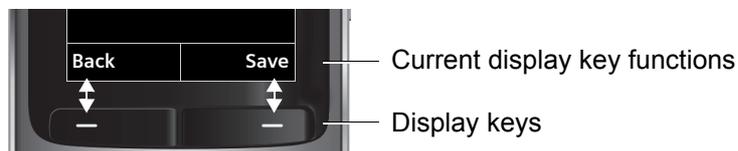

Some important display keys include:

Icon	Usage
	Open a context-specific menu
	Confirm your selection
	Delete character by character/word by word from right to left
	Go back one menu level/cancel operation
	Save input
	Open redial list

Menu icons in the main menu



The handset's main menu can be opened by right-clicking or pressing the centre key of the control key.

The menu icons are selected by pressing the left/right and top/bottom of the control key.

Alternatively, you can also press one of the numerical keys, e. g. **4** for "Alarm Clock" or **9** for "Settings".

Menu options that are only available in expert mode are marked with the  icon. Expert mode can be set by switching the menu view from simplified to complete. To set, see → Page 67.

Icon	Name	Usage
	Resource Directory	Manage images and tones: <ul style="list-style-type: none"> • Screensavers • Caller Pictures • Sounds • Capacity
	Bluetooth	Configure Bluetooth interface: <ul style="list-style-type: none"> • Activation • Search for Headset • Search Data Device • Known Devices • Own Device
	Additional Features	Alarm and emergency call configuration: <ul style="list-style-type: none"> • [Mode] Activation • Configuration (only with Service PIN) • Operating Mode (only with Service PIN, only with OpenStage M3 Plus and OpenStage M3 Ex Plus) • Display Rotate (only with OpenStage M3 Plus and OpenStage M3 Ex Plus) <p>For information on configuring and selecting the operating mode, see the "Alarm and Emergency Call Configuration" Service Manual.</p>
	Alarm Clock	Configure alarm call function.
	Call Lists	Open call list if calls are available.
	Voice Mail	Call mailbox if voicemail calls are available on the network answering machine.
	Organizer	Manage appointments: <ul style="list-style-type: none"> • Calendar • Missed Alarms
	Directory	Manage phonebook.

Icon	Name	Usage
	Settings	Configure handset: <ul style="list-style-type: none">• Date/Time• Audio Settings<ul style="list-style-type: none">– Handset Volume– Advisory Tones– Silent Alert– Ringtones(Handset)• Display + Keypad<ul style="list-style-type: none">– Screensaver– Large Font– Colour Schemes– Display Backlight– Keypad Illumination– Auto Keylock• Language• Registration<ul style="list-style-type: none">– Register Handset– Select Base (only if registered on several systems)• Telephony<ul style="list-style-type: none">– Auto Answer– Area Codes• System<ul style="list-style-type: none">– Handset PIN– Handset Reset– Base Reset• Menu View<ul style="list-style-type: none">– Simplified– Complete

Conducting calls – the basic functions

You can use your handset to make both internal and external calls.

Internal calls are calls that

- you make within the range of a communications system, for example, within your company,
- you make between networked communications systems, for example, to different company locations.

External calls are calls that you conduct with users of the public telephone network.

Activating/deactivating the handset



Press the On-hook key until the activation or deactivation is confirmed by a signal.

PIN

If the default PIN has not been changed (0000), the handset is ready for operation as soon as it is switched on. If a PIN was set, it must be entered before the handset can be operated.

Enter the PIN.

Confirm your entry. The handset is ready to use.

Please enter
PIN:



Displaying the connection quality

The strength of the incoming signal is displayed by the "receive field strength" icon in idle status:

	Flashing, no reception
	Low receive field strength
	50% receive field strength
	75% receive field strength
	100% receive field strength


The radio range is different indoors and outdoors → Page 82. Please consult your system administrator in the event of range problems.

Charging the battery

You may only use the charging shell provided for the handset.

The handset charges when sitting in the charging shell, even when deactivated.

If the handset deactivates because the battery is flat, it automatically reactivates and is ready for operation as soon as you place it in the charging shell. The charging operation starts. If a PIN was set, it must be entered first to allow charging to start.

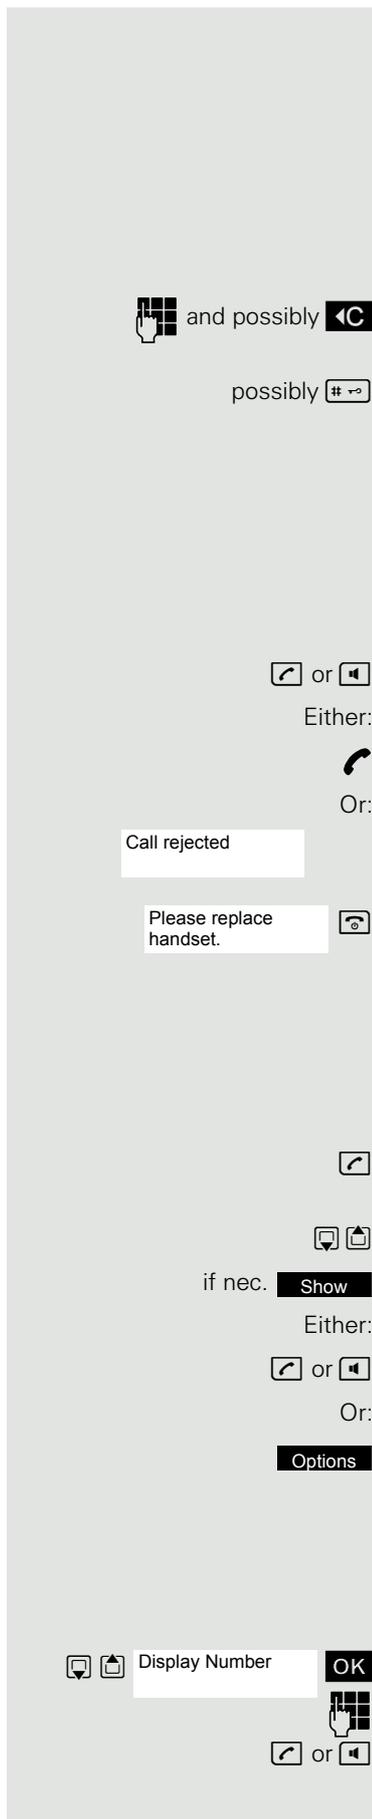

Language

If your preferred language for the display texts is not set, you can set this yourself → Page 16.

Dialling

Dialling preparation

Enter the required phone number and correct individual characters as necessary using the "Delete" display key.

Insert a dial pause. A "P" appears between the digits entered. You may have to insert a pause, for example, between the prefix and the phone number or when checking a mailbox.

 The dialling preparation function is also available with number redial and when dialling from the handset's phonebook ().

Dialling

Press the Talk or Speakerphone key. The user is called.

The user answers. You are conducting the call.

The user is busy or rejects the call. You are connected to the mailbox (if configured).

Press the On-hook key to end the operation.

Manual redial

The last 20 phone numbers dialled are saved in the redial list. A phone number that was dialled several times is only saved once.

When the handset is in idle status: Press the Talk or Speakerphone key briefly. The redial list is displayed.

Select the required telephone number.

If you want to see details of the selected phone number: Press the display key.

Press the Talk or Speakerphone key briefly. The connection is set up.

Open the redial menu. The menu contains the following functions → Page 29:

- Copy to Directory
- Automatic Redial
- Display Number
- Delete Entry
- Delete all

Select the menu item and confirm.

Change or complete the phone number, for example, with DDIA.

Press the Talk or Speakerphone key briefly. The connection is set up.

Consultation

You interrupt your call to consult with a user (including external users) and then resume the original call.

You are conducting a call.

Activating and conducting an enquiry/consultation call

Activate enquiry. The current call is placed "on hold", so that the first user waits.

Enter the phone number for the consultation call.

The number is dialled. The user answers. The consultation starts.

The second user is busy or does not answer

Press the display key to cancel the consultation. You are reconnected with the first partner.

During the consultation you can

- activate call waiting → Page 42 or
- press the menu key to send a callback or message to the second partner.

The consultation is ended and you return to the waiting call

The second user hangs up. You are reconnected with the first partner.

Open the system menu.

Select the menu item and confirm.

You will be connected to the first party again. The second partner hears the busy tone and hangs up; an OpenStage handset hangs up automatically.

However, you can also

- toggle between the partners → Page 40,
- set up a conference → Page 41 or
- transfer the waiting partner to the second partner → Page 40.

Answering or rejecting a call

Accepting a call

Your handset rings → Page 63. The caller information appears on the display. The name and/or telephone number of the caller can be displayed. You have the following options for answering a call:

 
The handset is in the charging shell: Remove the handset from the charging shell (only works if "Auto Answer" is active) → Page 63.

The handset is not in the charging shell. Press the Talk key or Speakerphone key.

When you have accepted the call you can:

- transfer the call → Page 40,
- place the call on hold and consult with someone else in the room → Page 24,
- place the call on hold and call a second partner → Page 24 in order to forward → Page 40 or toggle the call → Page 40 or to set up a conference → Page 41.





Reject call

Rejecting a call

If you do not wish to be disturbed, you can reject the call.

Confirm the message displayed with one of the two display keys. The call is rejected and the caller hears the busy tone. The caller is then connected to the mailbox (if configured).

Rejected calls are logged in the missed calls caller list → Page 44.

 or 

Ending a call

Press the On-hook key briefly or place the handset in the charging shell.

The call charges are displayed, depending on the communications system.

Activating or deactivating the keypad lock

This feature protects against accidentally pressing buttons when the handset is in a pocket, for example. The keypad lock turns off automatically when a call comes in and turns back on when the call has ended.



Press the hash key until the activation or deactivation is confirmed by a signal.

A key icon on the display indicates that the keypad lock is active.

After leaving the radio network

The message "No base" flashes on the display. The handset repeatedly attempts to synchronise with a base. The intervals between synchronisation attempts increase on account of the integrated power saving function.

You can switch off your handset to save the battery.

Conducting calls – enhanced functions

Speakerphone mode

Features

Speakerphone mode offers you the following advantages:

- Other persons can listen to and participate in the call.
- Your hands are free.
- When dialling, you can hear the ring tone, for example, without having to lift the handset to your ear.

Speakerphone mode can be used effectively up to a background noise level of 50 dB (A).

Activating speakerphone mode

Speakerphone mode can be activated during a call, when dialling or when answering a call:



Press the speakerphone key. Inform the other party when you want to activate the speakerphone to let others listen in.



Make sure you switch back to handset mode before you return the telephone directly to your ear. In this way you can avoid causing damage to your hearing.

Switching between speakerphone and handset mode



Press the speakerphone key. The handset switches from speakerphone to handset mode or vice versa.



If you wish to replace the handset in the charging shell during a call, for example, because the battery is flat, hold down the Speakerphone key to prevent the call from being disconnected.

Setting the speakerphone volume

The volume can be set during the call → Page 57.

Conducting calls with the headset

The handset can be used with a corded and cordless headset.

Corded headset

 **Not** for OpenStage M3 Ex and OpenStage M3 Ex Plus!

You can connect a corded headset via the jack on the side of the handset, see → Page 15. The headset must have a (2.5 mm) jack plug.

The earpiece and microphone functions are activated on the headset once it is connected.

Cordless headset

You can use a cordless Bluetooth headset with your handset. This means your hands are free while making calls and there are no annoying cables, for example, when you are working at your computer or when you are on the road.

Your Bluetooth headset must be registered on your handset before you can use it for the first time. After this, you can continue to use your Bluetooth headset until you decide to deregister it.

-  • If you register a headset, any headset that is already registered will be overwritten.
- If you would like to use a headset with your handset that is already registered at another device (e.g. a handset), please deactivate this connection before you start the registration process.
 - Theoretically, third parties can tap Bluetooth connections.
 - To improve protection against unauthorised tapping, deregister any devices you no longer require.

During a call, a second caller is not signalled at the Bluetooth headset.

Registering a Bluetooth headset at the handset

Set the headset to login mode (see the user manual supplied with your headset).

Open the handset's main menu.


Select the menu icon and confirm.


Select the menu item and confirm. The handset searches for a Bluetooth headset and sets up a wireless connection. The names of the devices found are displayed.

Select the required headset.

Press the display key.

Select the menu item and confirm.

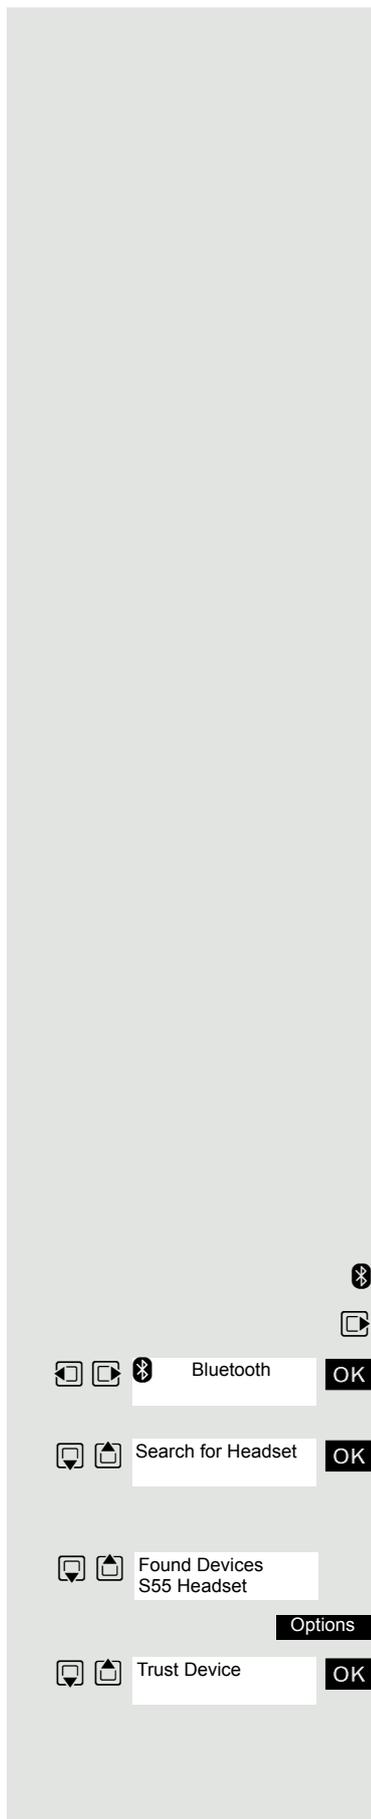

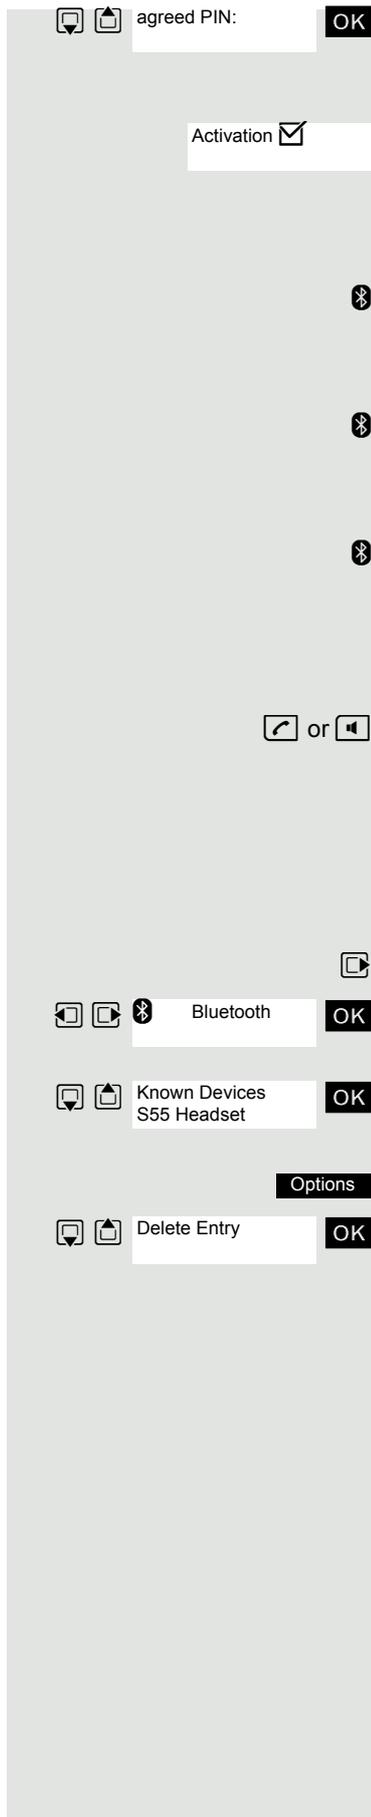

If necessary, enter and confirm the Bluetooth PIN for your headset (see the user manual supplied with your headset). The device is saved in the list of known devices.

The Bluetooth interface is automatically activated on your handset. The active Bluetooth function is ticked.

Conducting calls via the Bluetooth headset

If a Bluetooth headset is registered at the handset, the Bluetooth headset is activated immediately upon dialling.

Accepting a call on the Bluetooth headset

The headset uses a call tone to signal an incoming call. Press the Talk key on the Bluetooth headset (see the user manual supplied with your headset).

Number redial

To redial a number, double-click the Talk key on the headset.

Switching from the Bluetooth headset to the earpiece or speakerphone during a call

You are conducting a call via the Bluetooth headset.

Press the Talk key or Speakerphone key on the handset. The Bluetooth headset is disconnected. You can continue the call directly on the handset.

Deregistering the Bluetooth headset at the handset

To improve protection against unauthorised tapping, deregister the Bluetooth headset at the handset if you no longer wish to use it.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm. The name of the registered or detected Bluetooth headset is displayed.

Press the display key.

Select the menu item and confirm. The Bluetooth headset is deregistered and can no longer be detected by the handset.

Number redial

The last 20 phone numbers dialled are saved in the redial list. A phone number that was dialled several times is only saved once.

If you tried to call a party from the handset's telephone directory, the name of the party is displayed in case of number redial. For information on manual number redial, see → Page 23.

Automatic redial

The phone number is automatically redialled ten times at 20-second intervals. Speakerphone mode is automatically activated, the Talk key flashes. The function is deactivated after ten unsuccessful attempts and when a call is made in the interim.

Press the Talk key. The redial list is displayed.

Select the required telephone number.

Press the display key.

Select the menu item and confirm. Automatic redial is activated.

The user answers. Press the Talk key and conduct the call.

If you wish to cancel the function: press the Display key or any key.

Deleting a redial entry or list

Press the Talk key. The redial list is displayed.

Select the required telephone number.

Press the display key.

Select the menu item and confirm. The telephone number is deleted.

Select the menu item and confirm. The redial list is deleted.

Press the On-hook key to end the operation.



Adding a telephone number to the redial list

During dial preparation, you can add a number from your handset's redial list to your phonebook.


Press the Talk key briefly. The redial list is displayed.

Select the required telephone number.

Press the display key.

Select the menu item and confirm. The phonebook is displayed.

Select the menu item and confirm. The following selection mask appears:

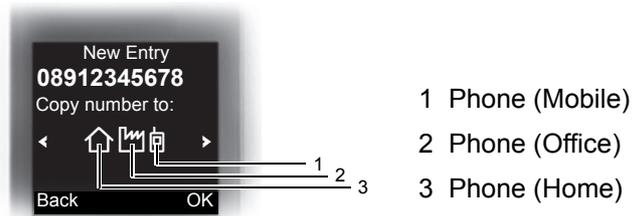

Select the icon for the required phone number type under which the phone number is to be added.


Confirm your entry.

Enter the remaining contact information, such as the first name and surname. For further information, see → Page 33 and → Page 34.


Phonebook of communications platform

If configured, phone numbers can be searched for and dialed based on the names in the system phonebook.

If the caller's phone number is saved in the system phonebook for an incoming call, the associated name is shown on the display while the handset is ringing. Additional phonebooks: Handset's local phonebook → Page 33 and LDAP phonebook → Page 32.

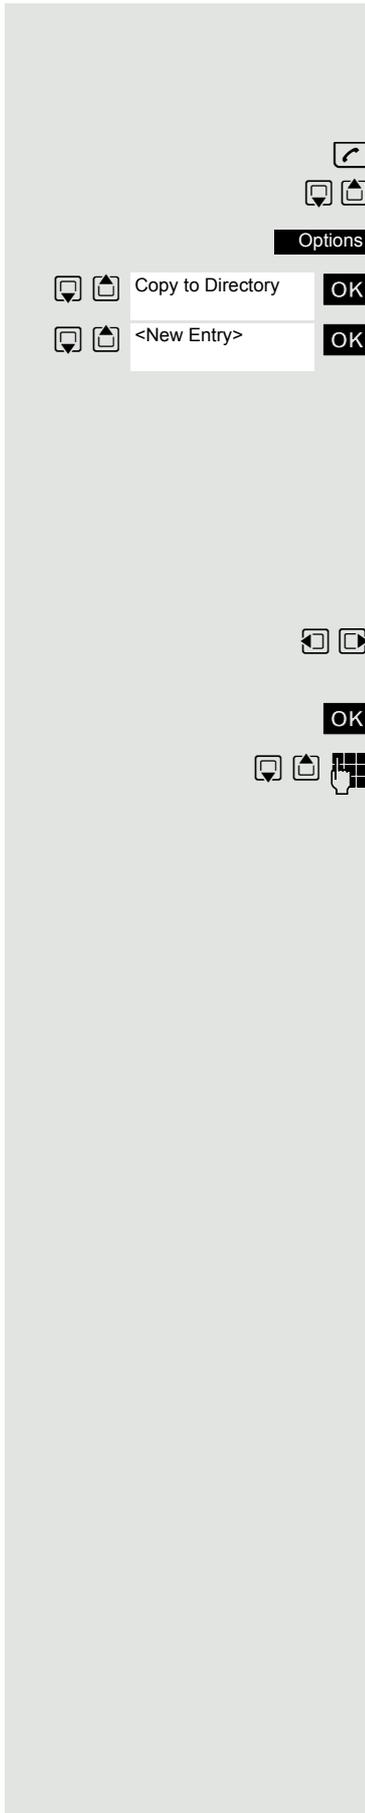

Finding and dialling an entry

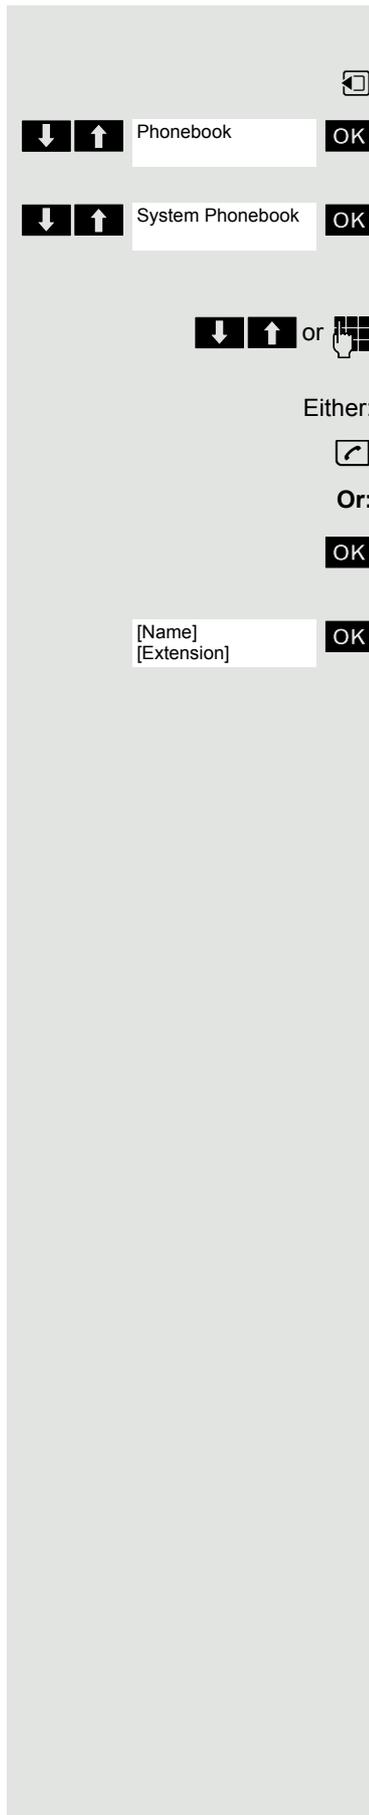

Press the INT key.

Select the menu item and confirm.

If an LDAP phonebook is available: Select the menu item and confirm. The first three entries are displayed.

Scroll to the required entry or enter the first letter of the relevant entry. If necessary, press a key several times in succession to enter the required letter.

Press the Talk key. The assigned phone number is dialled.

Confirm your selection.

Confirm the option shown. The phone number shown is dialled.

LDAP phonebook

If an LDAP directory service is available to you, phone numbers can be searched for and dialled based on the names in this phonebook.

Additional phonebooks: Handset's local phonebook → Page 33 and system phonebook → Page 30.

Finding and dialling an entry

Press the INT key.

Select the menu item and confirm.

If a system phonebook is available: Select the menu item and confirm.

Enter the first letter of the entry in the search dialog and confirm.

If necessary, press a key several times in succession to enter the required letter.

No entry is found.

If no entry corresponds to the search pattern, "No Entry" is output.

Delete individual letters or change the input and confirm again.


One or more entries are found.

Select the name and confirm.

Press the Talk key. The assigned phone number is dialled.

Confirm your selection.

Confirm the option shown. The phone number shown is dialled.

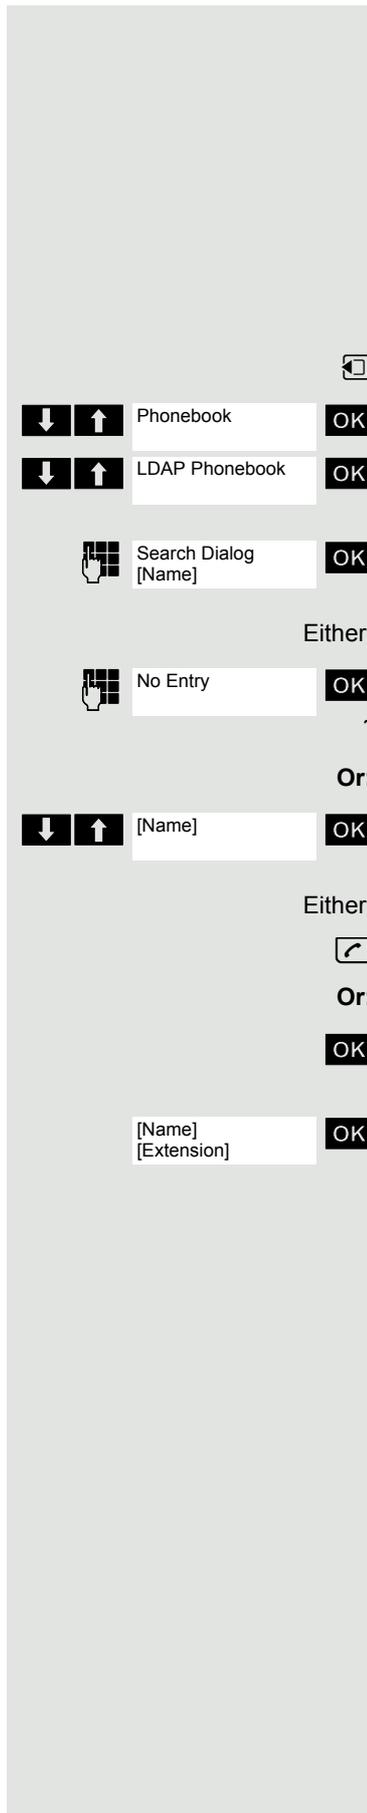

The handset's phonebook

You can save contact information for frequent call partners in the phonebook. Once a phone number has been saved in this way you no longer have to enter it in full when you want to call someone. All you have to do is select the required phonebook entry.


You can save a total of 500 entries at most in the phonebook.

Gigaset QuickSync → Page 52 is a software application for transferring data between your cordless OpenStage phone and your PC. You can use it at your phone to load data from your PC to your OpenStage over a USB data cable or Bluetooth and synchronise contacts with Microsoft Outlook, Microsoft Outlook Express and contacts in Microsoft Windows.

You can save the following contact information for every entry in the phonebook:

Information	Explanation
First Name*, Surname	A name must be entered in at least one of the fields. Each name can contain up to 16 characters.
Phone (Home), Phone (Mobile)*, Phone (Office)*	A number must be entered in at least one of the fields. Each number can contain up to 32 digits.
E-mail*	E-mail address with up to 60 characters. The special character "@" can be inserted after pressing the asterisk key.
Anniversary	You can select either "On" or "Off". If "On" is selected: <ul style="list-style-type: none"> • Anniversary (Date): Day/month/year, 8 digits* • Anniversary (Time): Hour/minute, 4 digits, for reminder call • Anniversary (Signal): Type of signalling, acoustic or visual (time need not be specified)
Caller Melody (VIP)	Mark an address book entry as a VIP (Very Important Person) by assigning a specific ringtone to it.
Caller Picture*	Display a picture for an incoming call when CLIP is active. Caution: This function is not supported by the system and should therefore not be used.

* = new for vCard format

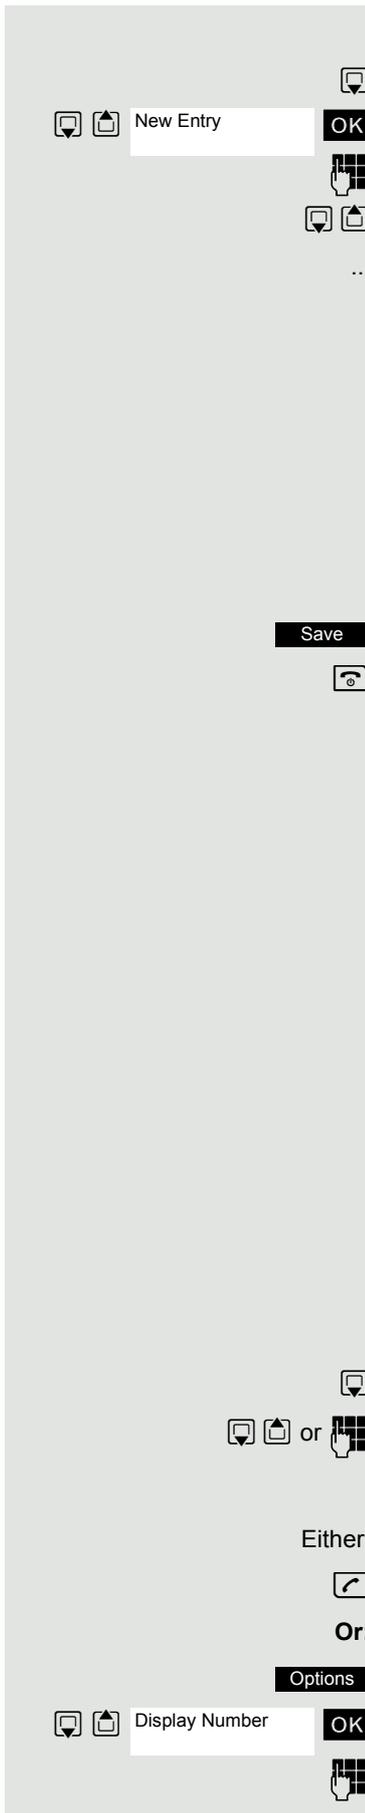

Saving an entry

Open the phonebook.

Select the menu item and confirm. The input mask is displayed.

Enter the relevant information, see above.

Jump to the next line.

etc.

Functions for text input:

	Switches mode from abc to Abc, from Abc to 123 and from 123 to abc If predictive text is off: press the key briefly. If predictive text is on: press and hold down the key.
	Deletes the letter to the left of the cursor.
	Opens the table of special characters.

Save the settings.

Press the On-hook key to end the operation.

Changing the sequence of entries:

The phonebook entries are generally sorted in alphabetical order by surname. Spaces and digits have first priority here. If the phonebook only contains a subscriber's first name, this is listed instead of the surname in the sequence.

The sort sequence is as follows:

1. Space
2. Digits (0 - 9)
3. Letters (alphabetical)
4. Other characters

If you want to change the sequence of entries in the alphabetical list, you could insert a space or a digit before the first letter of the surname. These entries then move to the top of the phonebook. Names preceded by an asterisk are listed at the end of the phonebook.

Finding and dialling an entry

Open the phonebook.

You can scroll to the required entry or enter the first letter of the relevant entry. If necessary, press a key several times in succession to enter the required letter (e. g. press 7 three times for r).

Either:



Press the Talk key. The assigned phone number is dialled.

Or:

Options


Open the menu.

Display Number

OK

Select the menu item and confirm. The number is displayed.

Change or complete the phone number, for example, with DDIA.

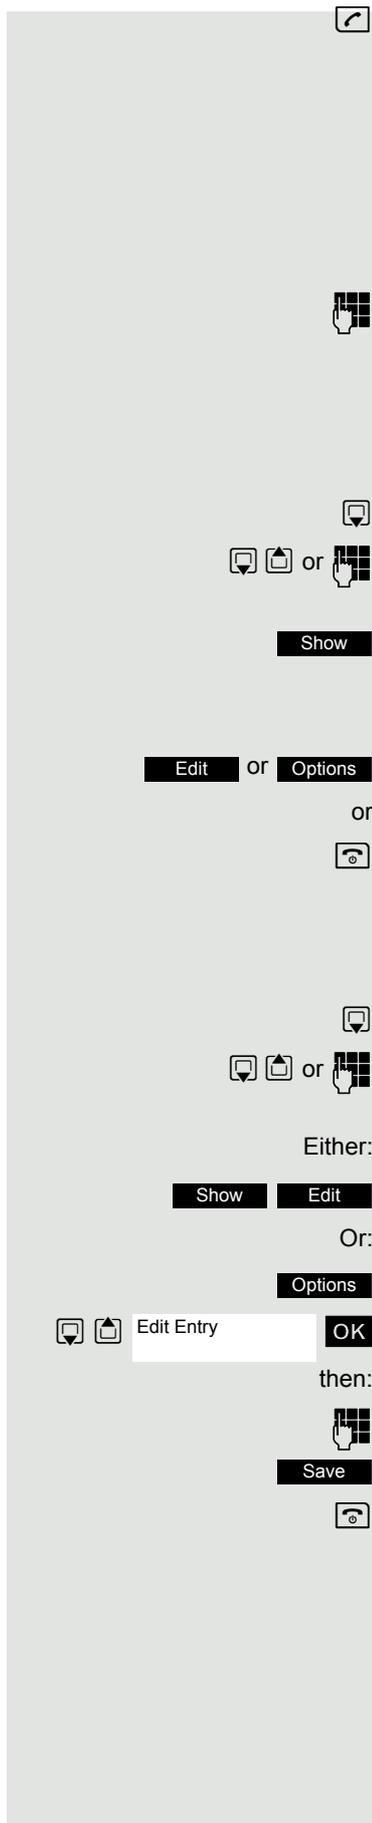

Press and hold down the Talk key.

Dialling an entry with the speed dialling digit

You can call up and dial the phone number associated with an entry to which you assigned a speed dialling digit by simply pressing this speed dialling digit → Page 50.

Press and hold down the required speed dialling digit. The assigned phone number is dialled.

Viewing an entry

Open the phonebook.

You can scroll to the required entry or enter the first letter of the relevant entry. If necessary, press a key several times in succession to enter the required letter.

Press the display key. The entry's data is displayed.

Changing to the list

Select

Press the On-hook key to return to the list.

Changing an entry

Open the phonebook.

You can scroll to the required entry or enter the first letter of the relevant entry. If necessary, press a key several times in succession to enter the required letter.

Press the display keys one after the other. The entry's data is displayed.

Press the display key.

Select the menu item and confirm. The entry's data is displayed.

Enter changes.

Press the display key.

Press the On-hook key to return to the list.

Marking a VIP (Very Important Person) entry

An incoming call for a VIP-marked entry is signalled with a VIP ringtone.

When the handset is idle: Open the phonebook.

Select the entry you want.

Open the menu.

Select the menu item and confirm. The input mask for marking a VIP entry is displayed.

Activate the VIP marking.

Move the cursor down one line.

Select a melody, for example "Circles".

Press the On-hook key to end the operation.

Deleting an entry or phonebook

Open the phonebook.

Select the entry you want.


Press the display key.


Select the menu item and confirm. The telephone number is deleted.

Select the menu item and confirm. A security check question appears.

Confirm the security check question. The phonebook is deleted.

Press the On-hook key to end the operation.

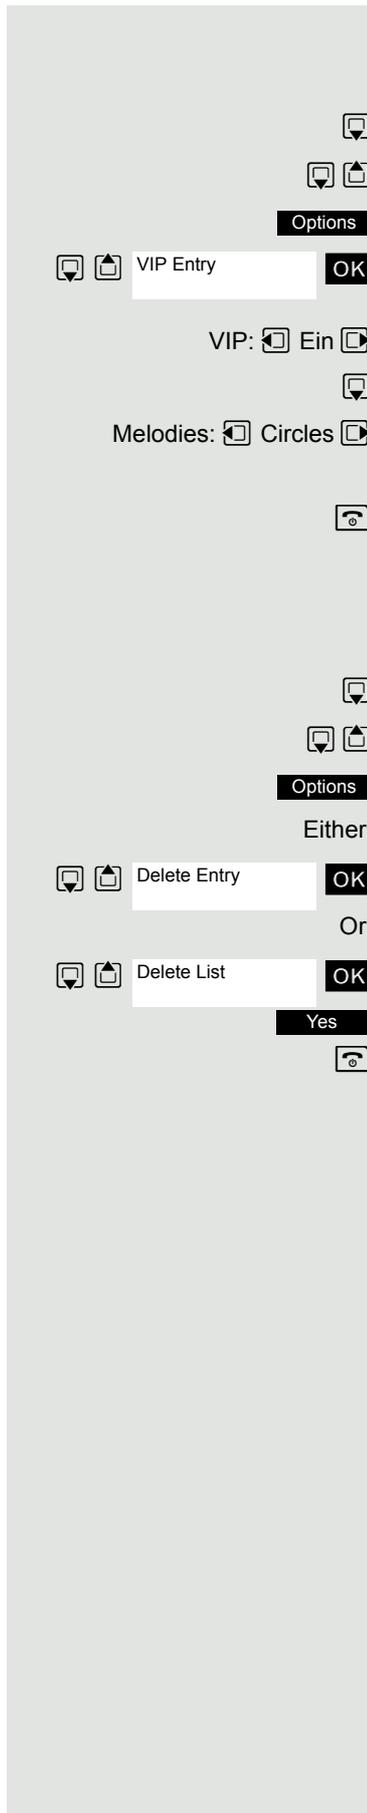

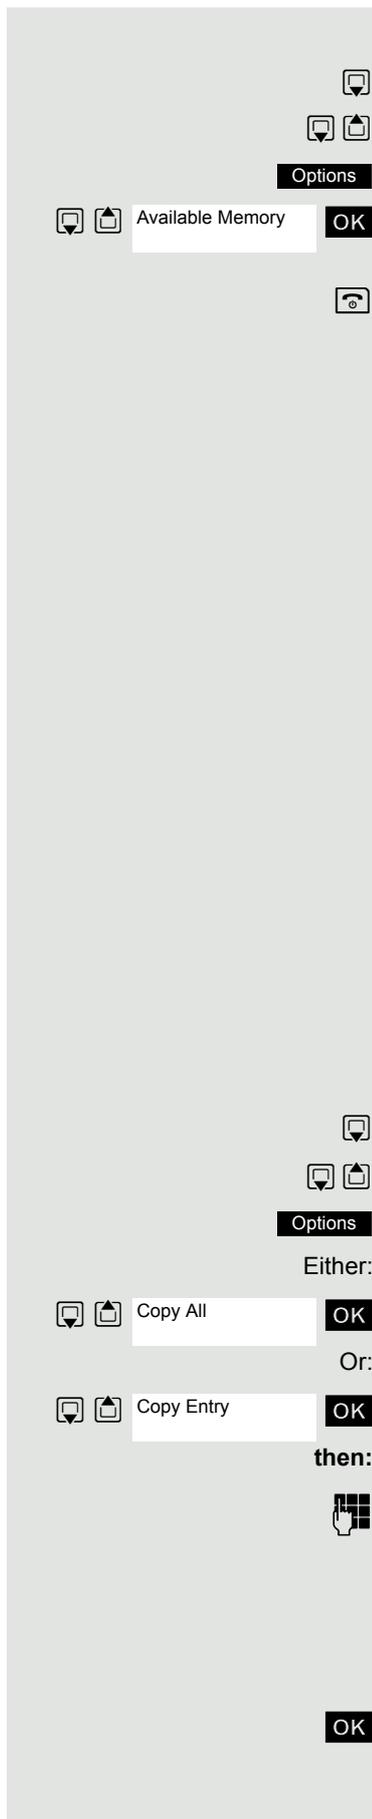

Displaying available memory

- Open the phonebook.
- Select any entry.
- Press the display key.
- Select the menu item and confirm. The amount of memory used and available is displayed.
- Press the On-hook key to end the operation.

Sending an entry or phonebook to the handset or system

You can send individual entries or the entire phonebook to other handsets or to the communications system.

For phonebook transfer in vCard format via Bluetooth see → Page 52.


If your handset and the recipient's handset have phone numbers between 1 and 99, you can send or receive a list or entry directly from one handset to the other. If the handsets' phone numbers start at 100, you must first send the list or entry to the communications system. The recipient can then use his or her handset to download the list or entry from the communications system.

Restrictions when copying over the communications system

The entries in the handset's phonebook are stored in vCard format → Page 33. The communications system, however, uses another format. This can cause loss of phonebook entry information. The features that are new for the vCard format are indicated in the table → Page 33 by "new for vCard format". The phone numbers are not affected.

Sending a list/entry

- Open the phonebook.
- Select the entry you want.
- Press the display key.
- Select the menu item and confirm.
- Or:
- Select the menu item and confirm.
- then:
- Enter the station number. The following phone numbers are possible:
 - 1... 98 – the list or entry is sent directly to the recipient's handset.
 - 00 – the list or entry is sent to the communications system and can then be downloaded by any handset.
 - 99 – The list or entry is sent to the communications system and can then only be downloaded by your handset.
- Confirm your entry. The list or entry is sent.

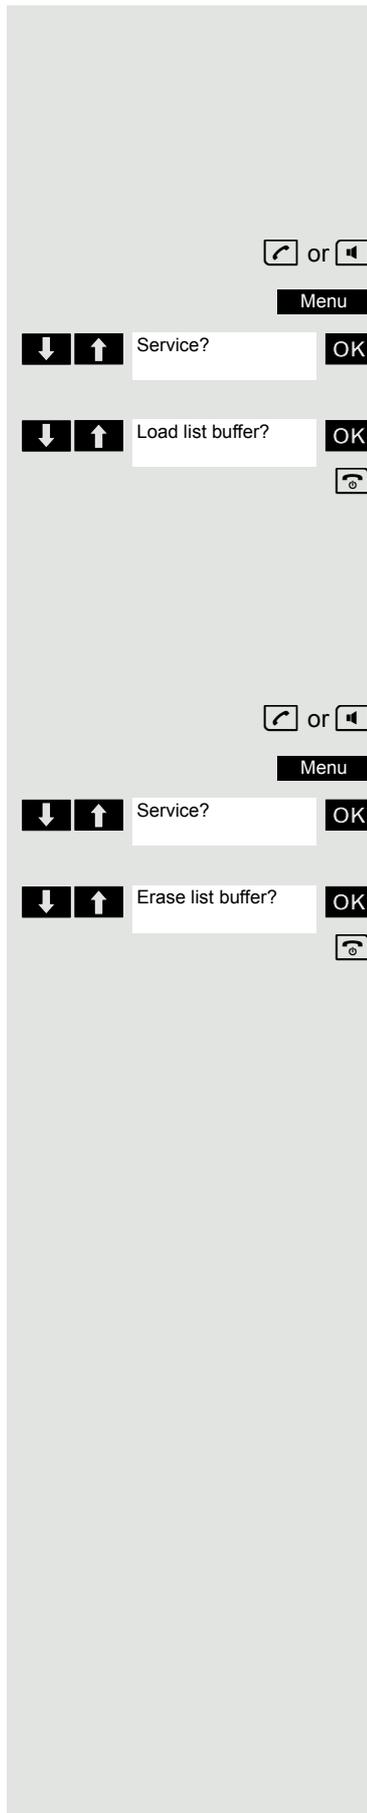

If a phone number from 1 to 98 was dialled, the list or the entry is automatically received by the recipient's handset.

Loading a list or entry from the communications system

Prerequisite: You sent an entry or list to the communications system by dialling the phone number 00 or 99.

Press and hold the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Press the On-hook key once. You will receive a call from the system and the transfer starts once you answer this call.

Deleting a list or entry in the communications system

Prerequisite: A currently unused list or entry is saved on the communications system.

Press and hold the Talk or Speakerphone key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm. The handset starts to delete the list/entry.

Press the On-hook key to end the operation.

VoiceMail

Depending on the communications platform, a voicemail function (answering machine) may be available to you (if set up, please consult your service technician).

VoiceMail is the default destination for call forwarding → Page 39.

Checking VoiceMail

Dial the VoiceMail number and press the Talk key. VoiceMail is called.



Or:



Press the INT key.



Select the menu item and confirm.



Select the menu item and confirm.



Press the Talk key. VoiceMail is called.

Or:

If new VoiceMail messages are available (message key flashes).



Press the flashing message key.



Select the menu item and confirm.



Press the Talk key. VoiceMail is called.

Using dual-tone multifrequency signalling

Your handset operates on the basis of digital information transmission. However, certain applications, for example answering machines, can only be operated using analogue technology. For this you have to send signals using the dual-tone multifrequency signalling (DTMF) process.

Depending on how your system is configured (automatic tone dialling on or off - to be configured by the service engineer) you must first switch to DTMF dialling. This means, for example, that you can communicate with a variety of voice storage systems.

You will find further details in the operating instructions for the relevant applications.

Conducting calls – with multiple users

Transferring a call

Transferring a call means that you wish to hand over a call you are conducting on your handset to another user.

Transferring (without announcing the call transfer)

You can use this function to forward a call you answered to another user.

Press the display key.

Enter the phone number of the user to whom the call is to be transferred. The current call is placed "on hold", so that the first user waits.

The number is dialled.

Press the On-hook key. The target user's phone rings. He picks up the call by lifting the handset.

You receive a recall:

If the required user does not answer for some time after the transfer.

Transfer (announcing the transfer)

You can use this function to forward a call you answered to another user.

Press the display key. The current call is placed "on hold", so that the first user waits.

Enter the phone number of the user to whom the call is to be transferred.

The number is dialled. The user answers. You announce the call presently on hold.

Press the On-hook key. The user takes the call.

Toggling (switching between calls)

The Toggle function allows you to switch between two users without allowing them to speak to each other directly. The two users can be either external or internal users. You can also withdraw from the calls and connect the two users with each other. You can also start a conference.

You are conducting a call.

Press the display key. The current call is placed "on hold", the user waits.

Enter the phone number of the second user.

The second user answers.

Press the display key to switch between the two calls.

When you terminate the call, both parties are connected to one another.



Enquiry



Enquiry



Enquiry



Toggle

Conducting a conference

You can connect up to 3 internal or external partners with each other in a telephone conference.

Setting up a conference

You decide to set up a conference while talking to a user.

You are on a call and wish to start a conference.

Press the display key. The caller is placed on hold.

Enter the phone number of the new user.

The user is free and answers the phone. You announce the conference.

Open the system menu.

Select the menu item and confirm.

You and your two partners are connected in a conference call.

Ending a conference

You are connected with two partners in a conference call.

Open the system menu.

Select the menu item and confirm. Station 1 (last party called) is removed from the conference.


or

Select the menu item and confirm. Station 2 (first party called) is removed from the conference.

Press the On-hook key. The conference is ended.

Leaving a conference

If one of the two users leaves the conference, you remain connected to the other two users.

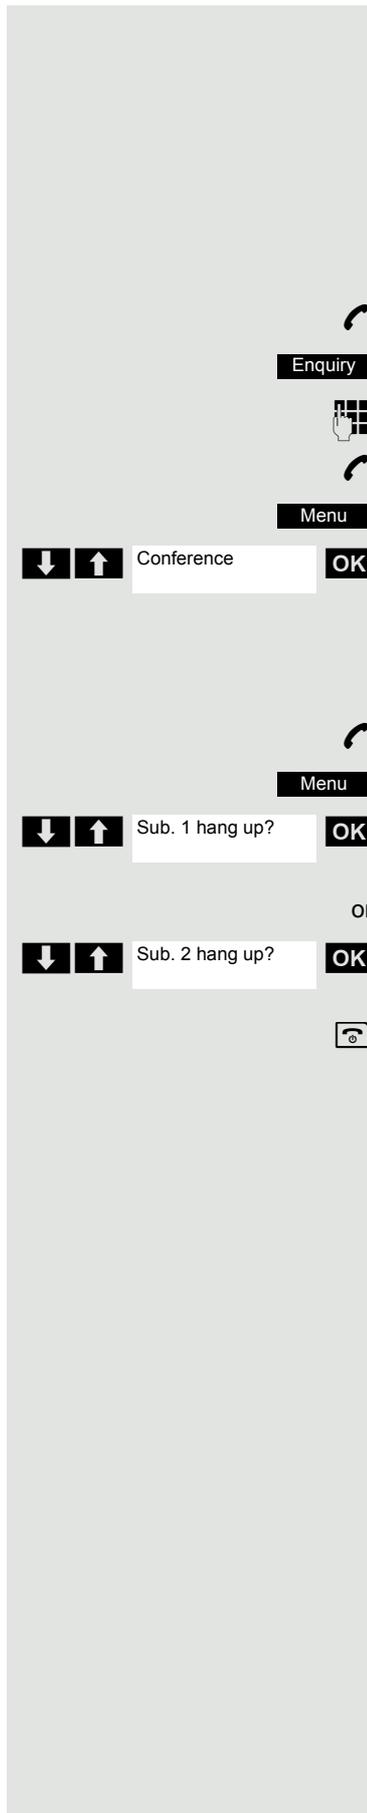

Second call (call waiting)

If the call waiting function is set up, you can accept second calls on your handset.

When a second call is incoming (call waiting), you will be informed of the second call during a call by a call waiting tone and a message on the display. The caller hears a ringing tone. You can decide whether to accept or reject the second call.

You can activate and deactivate second calls. If the function is deactivated, the second caller hears a busy tone or is forwarded to another number.

Activating call waiting

Press the INT key.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm. The display shows "activated".

Press the On-hook key to end the operation.

To deactivate, repeat the procedure.

Placing the call on hold, accepting the second call


You are on a call and hear the call waiting tone.


Open the system menu.

Select the menu item and confirm. You are connected to the second caller. The first call is now on hold.

You can now:

- Transfer the call → Page 40
- Toggle between calls → Page 40
- Initiate a conference → Page 41

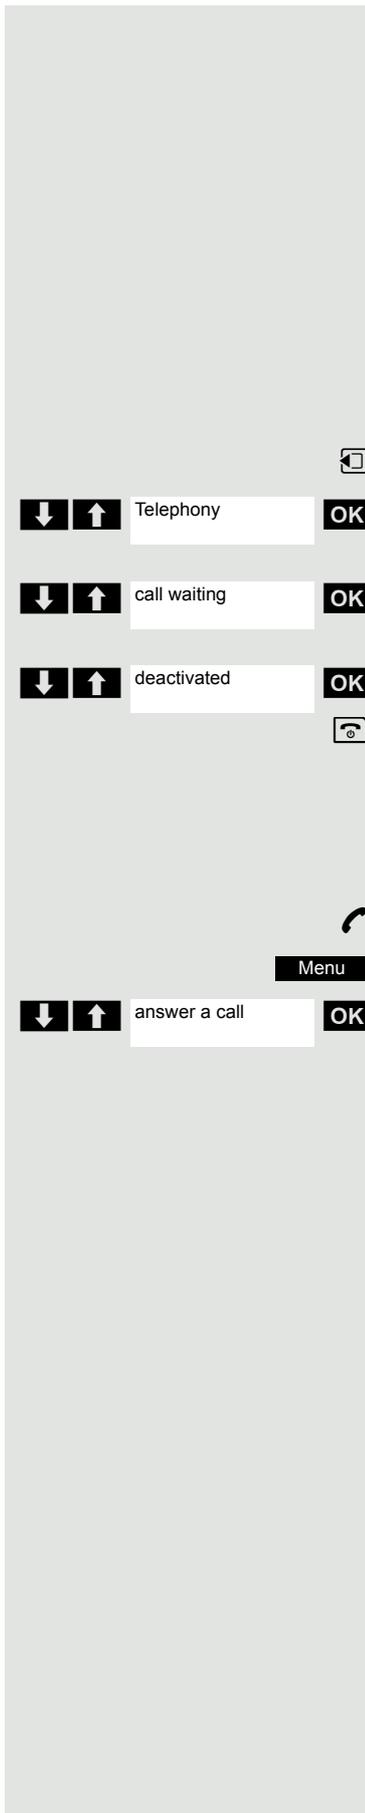

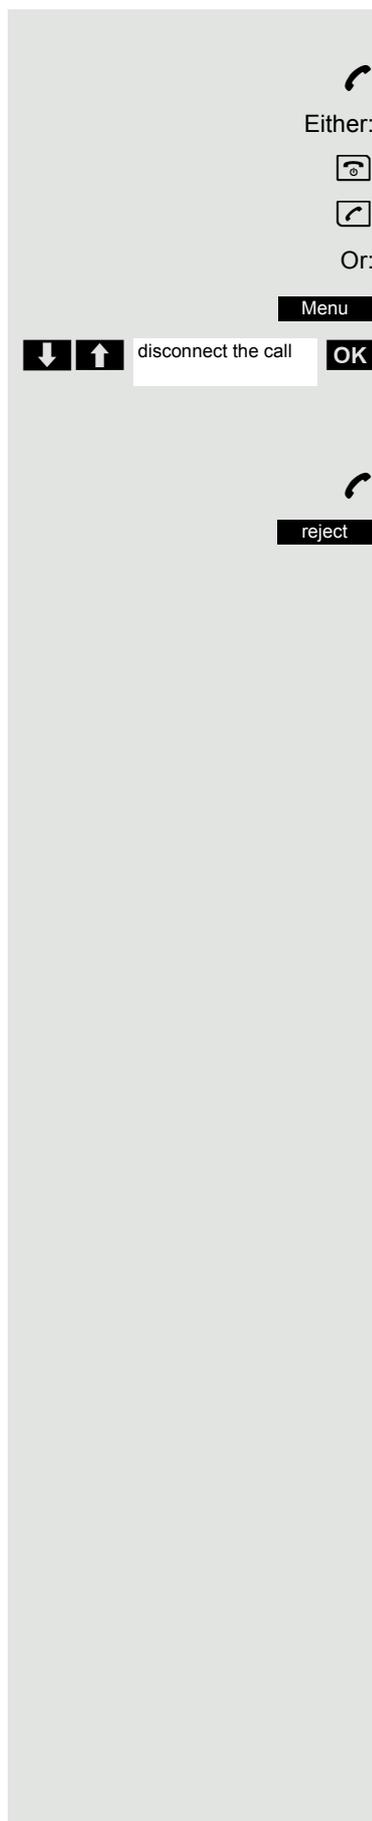

Placing the call on hold, accepting the second call

You are on a call and hear the call waiting tone.

Either:



Press the On-hook key. Your handset rings.



Press the Talk key. You are connected to the second caller.

Or:

Menu

Open the system menu.



disconnect the call

OK

Select the menu item and confirm. You are connected to the second caller.

Rejecting a second call

You are on a call and hear the call waiting tone.

reject

Press the display key. The caller hears the busy tone or is forwarded.

Caller lists

All calls are logged in caller lists. There is a separate list for the following call types:

- Calls for VoiceMail → Page 39 (if set up).
- Missed calls.
- Forwarded calls.
- Answered calls.

Up to ten calls per list are stored in chronological order. Each call is assigned a time stamp. The display starts with the latest call request still not called. When several calls are received from one caller, the number of calls is shown.

Entries in the caller lists can be transferred to the redial list.

Working with list entries

Selecting an entry

Either:



Press the message key.

Or:



Press the INT key.



Caller lists

OK


Select the menu item and confirm.



Select "VoiceMail", "missed", "forwarded" or "answered" and confirm.



Select the call and confirm.

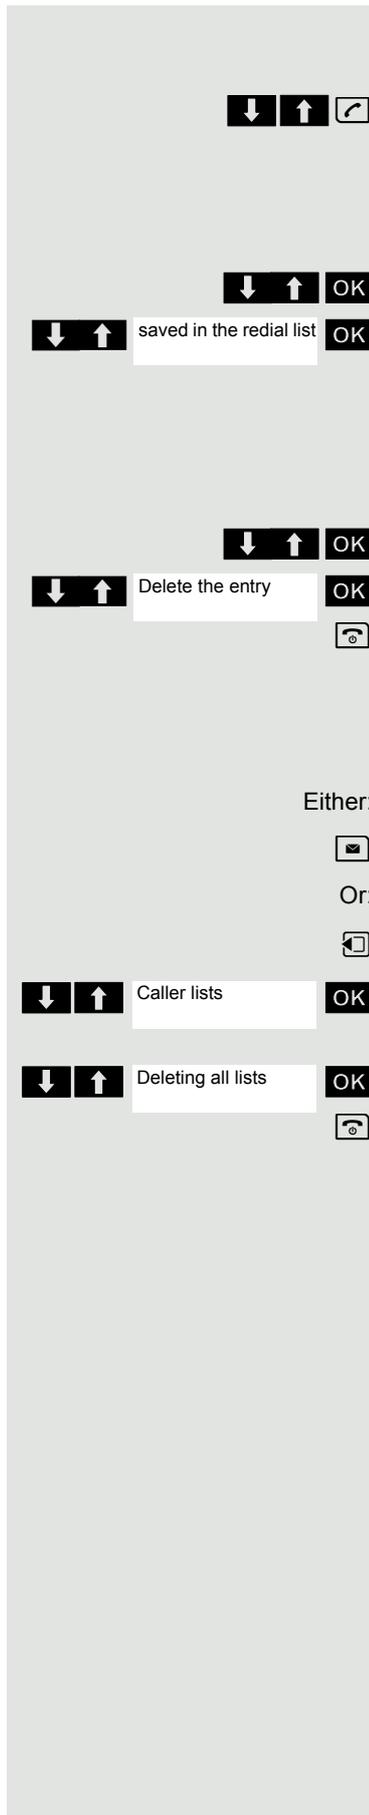

Calling back a caller

Select an entry (see above).

Select the caller and press the Talk key. The connection is set up.

Copying an entry to the redial buffer

Select an entry (see above).

Select the call party and confirm.

Select the menu item and confirm. The entry is saved in the redial list
→ Page 29.

Removing an entry from the caller list

Select an entry (see above).

Select the call party and confirm.

Select the menu item and confirm. The entry is deleted.

Press the On-hook key to end the operation.

Deleting all lists

Press the message key.

Or:

Press the INT key.

Select the menu item and confirm.

Select the menu item and confirm. The lists are deleted.

Press the On-hook key to end the operation.

Additional functions

Handset alarm clock function

When the alarm clock is activated, it rings every day or every day from Monday to Friday at the set time. The alarm clock is deactivated during automatic number redial.

➔ The alarm will only sound with the set melody if the handset is in idle status. During a call, the alarm is only signalled by a short tone.


Prerequisite: The date and time must be set.

Setting the alarm clock

The handset is in idle status.

Open the handset's main menu.

Select the menu icon and confirm. The input mask for setting the alarm is displayed.

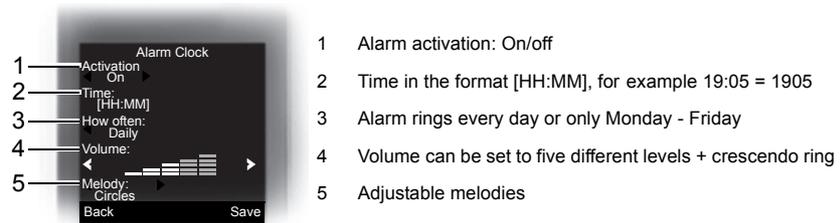

- 1 Alarm activation: On/off
- 2 Time in the format [HH:MM], for example 19:05 = 1905
- 3 Alarm rings every day or only Monday - Friday
- 4 Volume can be set to five different levels + crescendo ring
- 5 Adjustable melodies

Define the setting.

Move the cursor down one line.

Enter the time.

Move the cursor down one line.

etc.

Save the settings.

The alarm clock is activated.

Press the On-hook key to end the operation.

Deactivating an alarm/repeating after a pause

The alarm rings for 60 seconds. The ☹ symbol appears on the display. If you do not press anything, the alarm repeats after five minutes and then deactivates.

During the alarm:

Either:


Off

Press the display key. The wake-up call is deactivated.

Or:

Snooze

Press the display key or any key. The alarm deactivates and is repeated after five minutes. The alarm is repeated twice and then permanently deactivated.

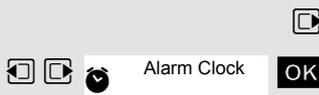

...

Save



Appointment reminder function

You can use your handset to remind yourself of up to 30 appointments. The handset must be in idle status at the time of the appointment reminder. The appointment reminder function is deactivated during automatic number redial. The date and time must be set.

Saving an appointment

The handset is in idle status.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm. The current month's calendar is displayed with the current day marked.

Select and confirm the required day for the new appointment reminder. The input mask for entering a new appointment reminder appears.

Select and confirm the menu item or select an existing appointment entry. The "New Entry" option only appears if an appointment entry already exists.

Define the setting.

Move the cursor down one line.

Enter the date, for example 11 November = 1111.

Move the cursor down one line.

Enter the time, for example 19:05 = 1905.

Move the cursor down one line.

Enter the name for the appointment reminder.

If applicable, delete the old text.

Move the cursor down one line.

Define a melody to signal appointments.

Save the settings.

The appointment reminder function is activated. The check mark after the appointment indicates that the appointment is active.


Press the On-hook key to end the operation.


Confirming an appointment reminder call

An appointment reminder call is signalled in the same way as an incoming call.

Press the display key during the appointment reminder call.

If you do not confirm the appointment reminder call, it will be stored in a missed dates list.

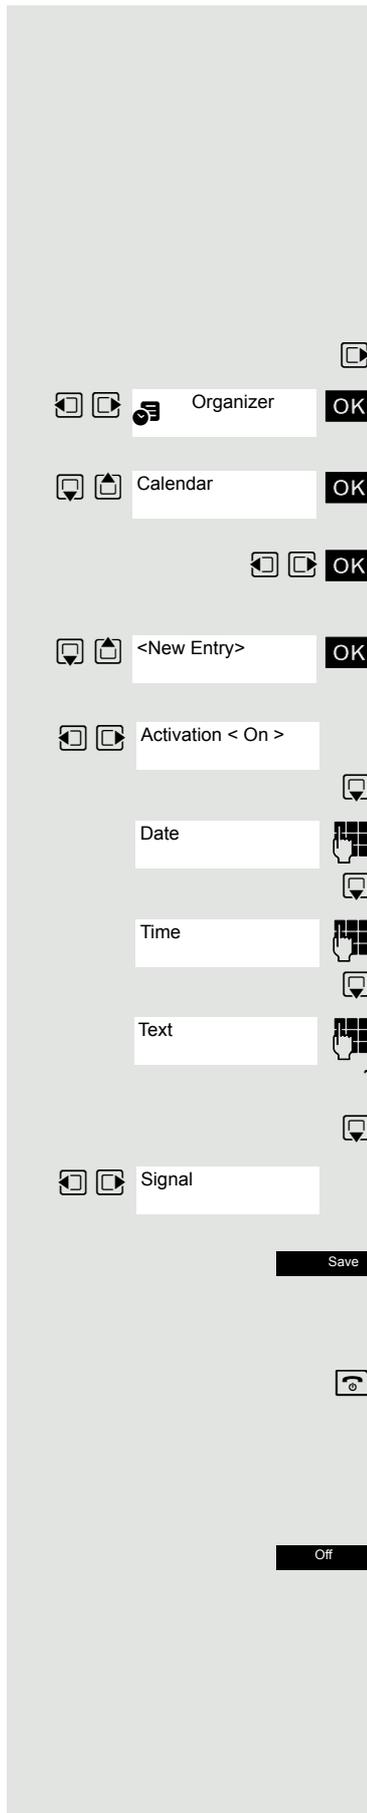

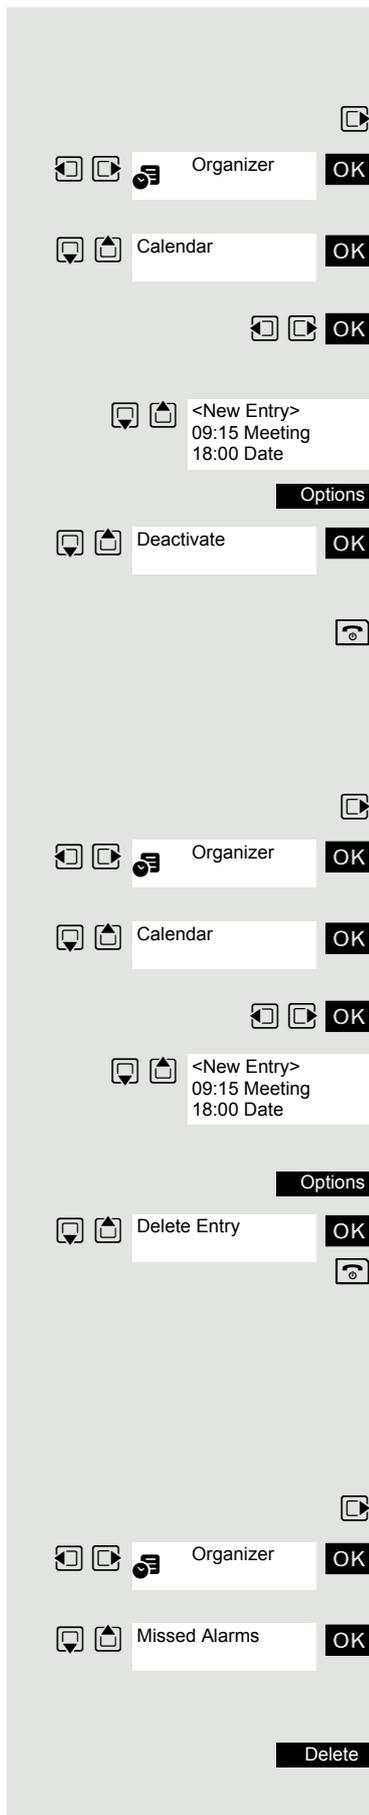

Deactivating an appointment reminder

The handset is in idle status.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm. The calendar for the current month is displayed.

Select and confirm the required day with at least one available appointment. The list of appointments is displayed.

Select the appointment reminder that you want to deactivate.

Open the additional menu.

Select the menu item and confirm. The selected appointment reminder is deactivated (check mark removed).

Press the On-hook key to end the operation.

Deleting an appointment

The handset is in idle status.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm. The calendar for the current month is displayed.

Select and confirm the date you want. The list of appointments is displayed.

Select the appointment reminder that you want to delete.

Open the additional menu.

Select the menu item and confirm. The appointment is deleted.

Press the On-hook key to end the operation.

Displaying an unconfirmed appointment


If you have not confirmed an appointment reminder call, the  icon and the number of **new** entries are shown on the display. This unconfirmed appointment must also be saved in a missed dates list.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm. The date and time of the unconfirmed appointment are displayed. If 10 entries are already stored in the list, the next appointment reminder will delete the oldest entry.

Delete entry manually from the list.

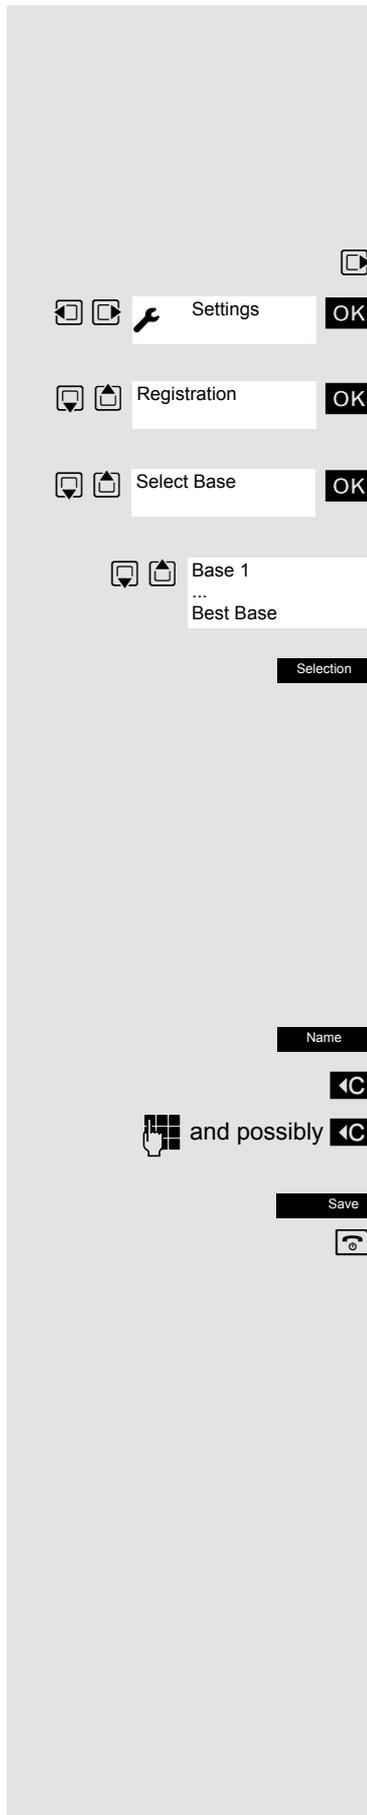

Selecting a base

If your handset is registered at multiple bases (cordless systems), then you can set a specific base or the base with the best reception as the base to be used. The handset then switches automatically to this base.

You can change the base name that is displayed on the handset at any time.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Select the required base.

Select base. The selected base is ticked:

- Base 1 - 4: Selecting base n defines one specific HiPath cordless system where the handset is registered.
- Best Base: If the handset is registered at multiple cordless systems, it automatically switches to one of these systems when it enters the relevant range. Example: The handset is registered at the Gigaset home base as well as at the cordless system in the company.

Changing the base station name

You can change the name of the base station.

Press the display key.

Delete text.

Enter the required text and correct individual characters as necessary using the "Delete" display key.

Save the settings.

Press the On-hook key to end the operation.

The new base station name is now displayed in idle status.

The cordless system overwrites the display information "Name base station" with the own phone number as soon as an incoming or outgoing call is initiated. In this case, the name of the base station only reappears after the handset has been switched off and back on again.

Setting the base

 Cannot be set on HiPath 3000.

You can configure individual settings on your system with your handset depending on how your system is configured.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Select the required menu item and confirm.

Speed dialling

You can program the number keys **0 +** and **2 ABC** to **9 WXYZ** with a phone number. You then dial the number by pressing the key.

Configuring speed dialling

Press the required number key **briefly**.

If this key is not already programmed with a function, the number key can be assigned a new phone number.

Press the display key.

If the key is already programmed with a function, it appears on the left display key.

Press the display key.


Select the required phone number from the phonebook and confirm.

Press the display key to delete the assignment.

Dial a phone number

Press and **hold** the number key programmed with the required phone number. The phone number is dialled.

If the number key has not been assigned a phone number, the list appears for you to select a phone number.

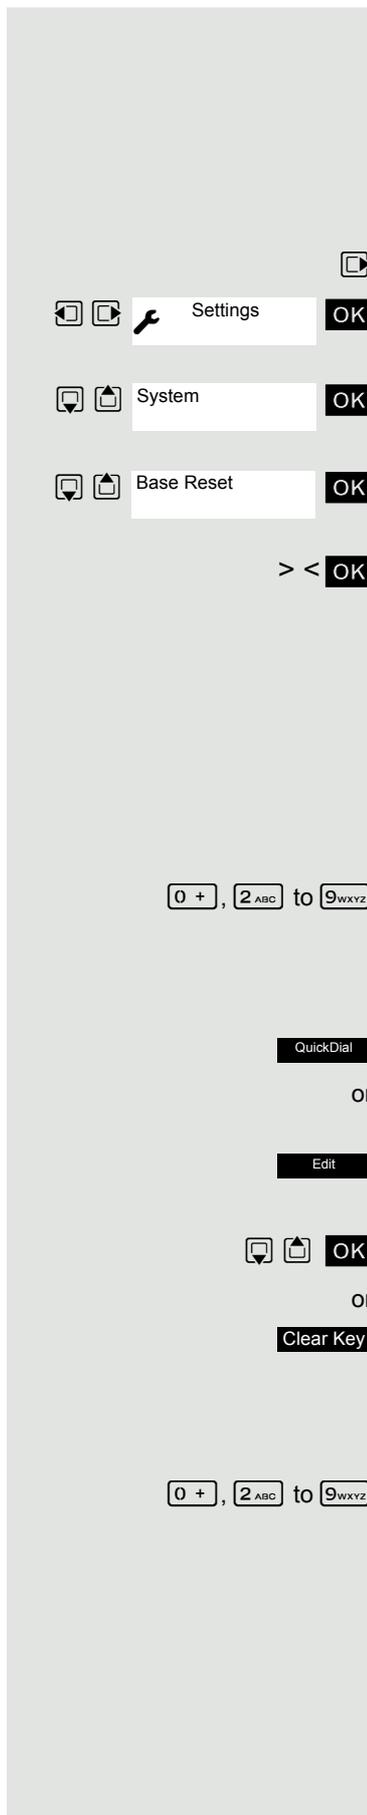

Changing display key assignments

You can assign functions to display keys and/or change the current assignment. The function is then started by pressing the key.

Changing the assignment

Press and **hold** the required display key.

A list of the functions that can be programmed on the key is displayed. The following functions are available for selection:

- INT
- Alarm Clock
- Calendar
- Bluetooth
- Redial

Select and confirm an entry.

Calling the function

Press the required display key **briefly**.

The function is selected.

Call control from the PC

You can initiate calls using a CTI program (CTI = Computer Telephony Integration). The call is conducted as usual on your handset.

The CTI program depends on your communications platform:


- OpenScape Office LX/MX: myPortal
- OpenScape Voice: WebClient

Initiating calls from the PC

Call a subscriber using a CTI program (see operating instructions for software).

Your handset rings and the message "CTI Call In" and the phone number/name of the subscriber is displayed.

Accept the call. As soon as you lift the handset, the subscriber is called.

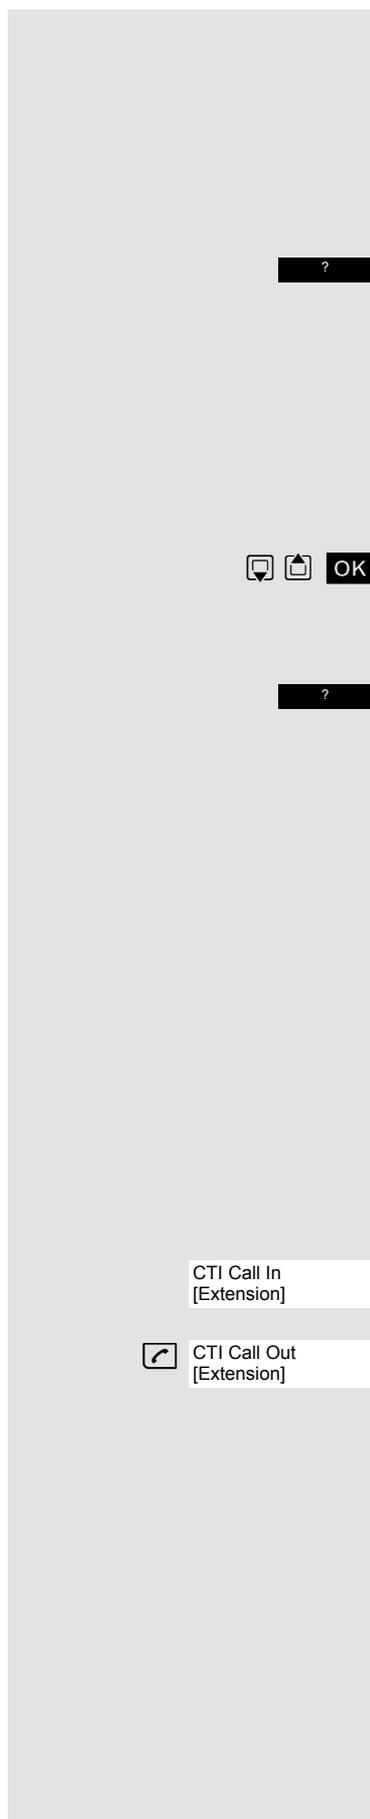

Data communication with the PC

To enable your handset to communicate with the PC, the **Gigaset QuickSync** program must be installed on your PC (free to download at http://wiki.unify.com/wiki/DECT_Handset_accessory)

After installing "Gigaset QuickSync", connect the handset to your computer using Bluetooth → Page 52 or via a USB data cable → Page 15.

Transferring data

Start the "Gigaset QuickSync" program. You can now:

- Synchronise your handset's address book with Outlook
- Download caller pictures (BMP, JPG, GIF) from the computer to the handset
- Download pictures (BMP, JPG, GIF) as screensavers from the PC to the handset
- Download sounds (ringer melodies) from the PC to the handset

"Data Transfer" is shown on the display during data transfer between the handset and PC. During this time, the keypad is disabled and incoming calls are ignored.

Bluetooth interface

Before you can use your Bluetooth device, activate Bluetooth, ensure the devices are visible and then register the handset.

You can register one Bluetooth headset at the handset. You can also register up to five data devices (PCs, PDAs and handsets) to send and receive address book entries as vCards or exchange data with the computer (→ Page 56).

To use the phone numbers, dialling codes (country and area code) must be stored in the directory (→ Page 67).

You will find a description of how to operate your Bluetooth devices in the user guides for these devices.



Attention:

The mobile phone will not be accessible when activating or deactivating Bluetooth.

Third parties can tap Bluetooth connections.

Activating/deactivating Bluetooth mode

You can deactivate the Bluetooth interface if you do not need it for extended periods of time. This increases your handset's standby time.


Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

The active Bluetooth function is ticked.

Confirm again to activate.

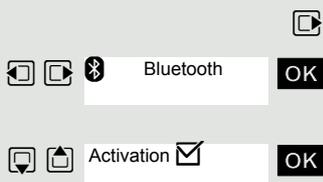

Registering Bluetooth devices

The distance between the handset in Bluetooth mode and the activated Bluetooth device (headset or data device) should be no more than 10 m.

To connect a Bluetooth headset, see → Page 27.

If the Bluetooth connection is not yet established between the handsets, perform the following steps:

Searching on your handset

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm. The handset searches for Bluetooth-enabled devices. This may take a few minutes. If devices are found, these will be shown in a list.

Select the required device, for example, the other handset.

Trusting the device

Press the display key.

Select the menu item and confirm.


Enter the Bluetooth PIN and confirm (default: 0000). The device is saved in the list of known devices.


Cancelling/repeating current search

Press the display key to cancel the search.

Press the display key.

Select and confirm the menu item in order to repeat the search.

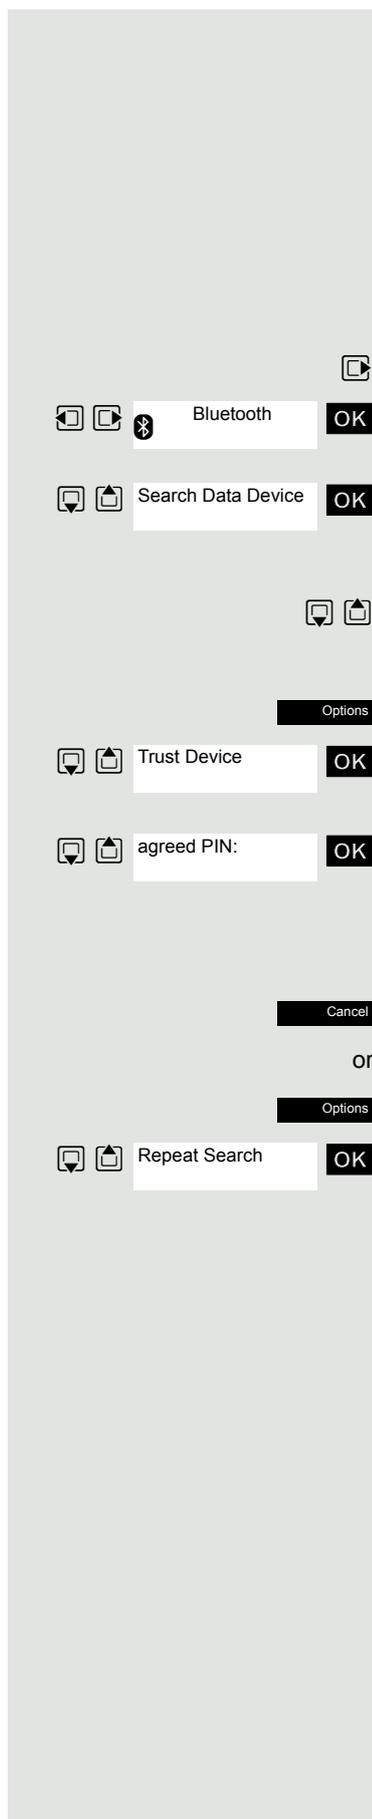

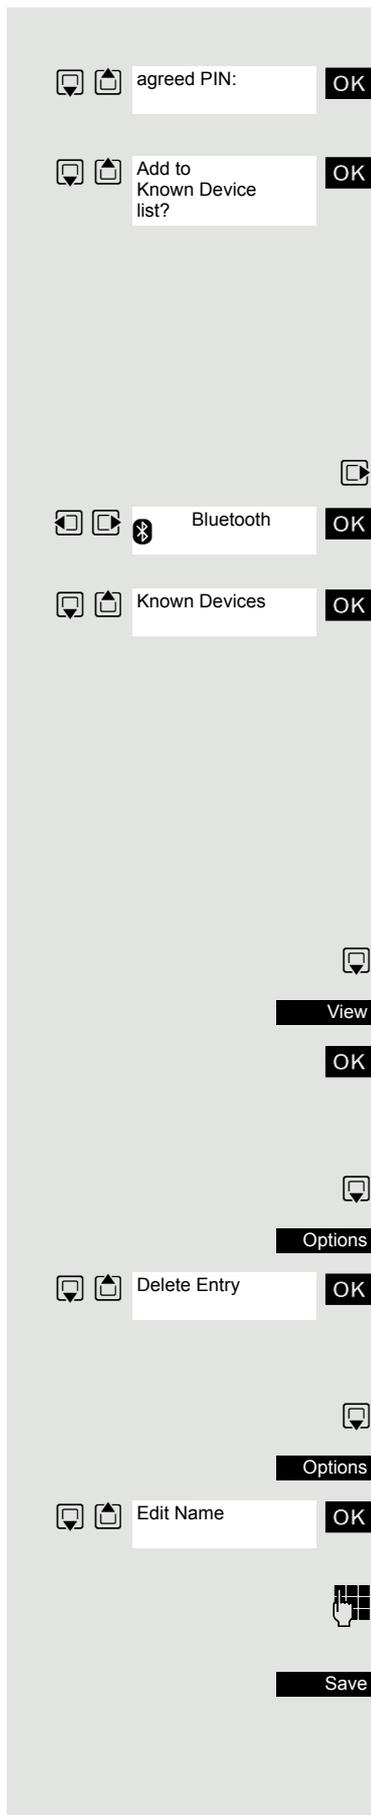

Confirming the connection on the other device

Enter and confirm identical Bluetooth PINs within a few seconds (default: 0000). If you were not fast enough, repeat the previous steps.

Confirm the prompt.

The Bluetooth connection is established. The two devices can now exchange data in vCard format.

Editing the list of known (trusted) devices

Opening the list

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

A corresponding icon appears next to each device name in the list displayed:

Icon	Explanation
	Bluetooth headset
	Bluetooth data device

Viewing entries

Select the entry.

Press the display key. Device name and address are displayed.

Press to switch back to the overview.

Deregistering Bluetooth devices

Select the entry.

Press the display key.

Select the menu item and confirm.

Changing the name of a Bluetooth device

Select the entry.

Press the display key.

Select the menu item and confirm.

Rename.

Press the display key.

Rejecting/accepting an unregistered Bluetooth device

If a Bluetooth device that is not registered in the list of known devices tries to connect with the handset, you will be prompted on the display to enter the PIN for the Bluetooth device (bonding).

Rejecting

Press the On-hook key **briefly**.

Accepting

Enter the PIN for the Bluetooth device **you want to accept** and confirm.

If you have accepted the device, you can use it temporarily (i.e. as long as it is within receiving range or until you deactivate the handset) or save it to the list of known devices.

Following PIN confirmation

Press the display key to add the device to the list of known devices.

Press the display key to use the device temporarily.

Changing the Bluetooth name of own handset

You can change the handset name used to identify it on the display of another Bluetooth device.


Select the menu icon and confirm.

Select the menu item and confirm.

Press the display key.

Rename.

Press the display key.

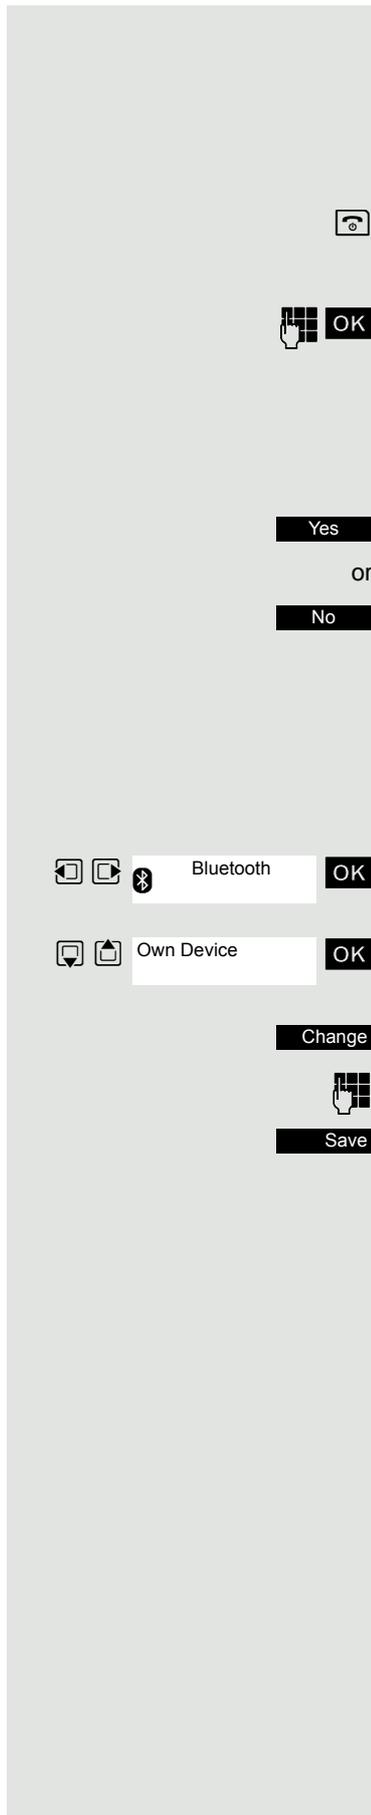

Phonebook transfer

 To transfer the phonebook data between handsets or with the system without using Bluetooth, see → Page 37.

Prerequisite: The Bluetooth connection between the devices is established → Page 53.

Open the phonebook.

Select the entry.

Press the display key.


Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Select and confirm the target device or the other handset. The vCard data is sent to the target device.

Now follow the instructions on your handset display.

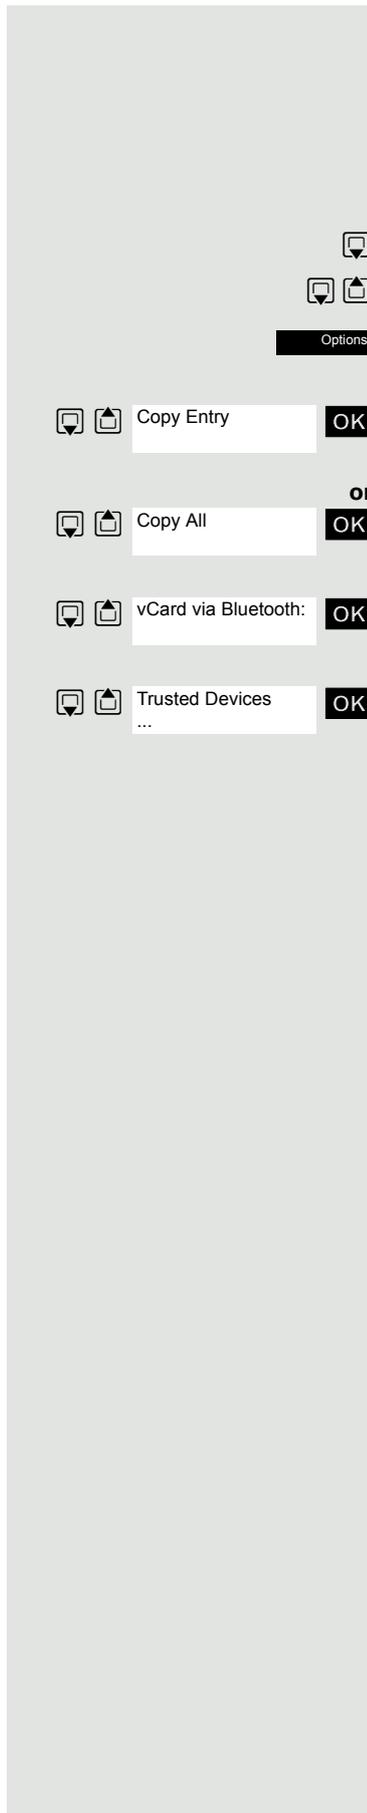

Setting the handset

You can change the standard settings of the handset if you are not happy with them.

Setting the speaker volume

During a call

You can adjust the speaker volume during a call via the earpiece or speakerphone using a menu function. The relevant volumes are adjustable depending on whether you are conducting the call via the earpiece or speakerphone.

You are conducting a call.

Press the control key to open the **Handset Volume** menu.

Adjust the earpiece or speakerphone volume.

Save the settings.

The setting will be saved automatically after approx. 3 seconds.

In idle status

You can change the speaker volume via the menu or using the  key in idle mode.


Changing the volume via the menu:

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.


Select the menu item and confirm.

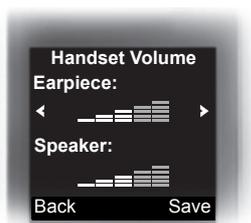

Select the required menu item.

Define the setting.

Press the display key.

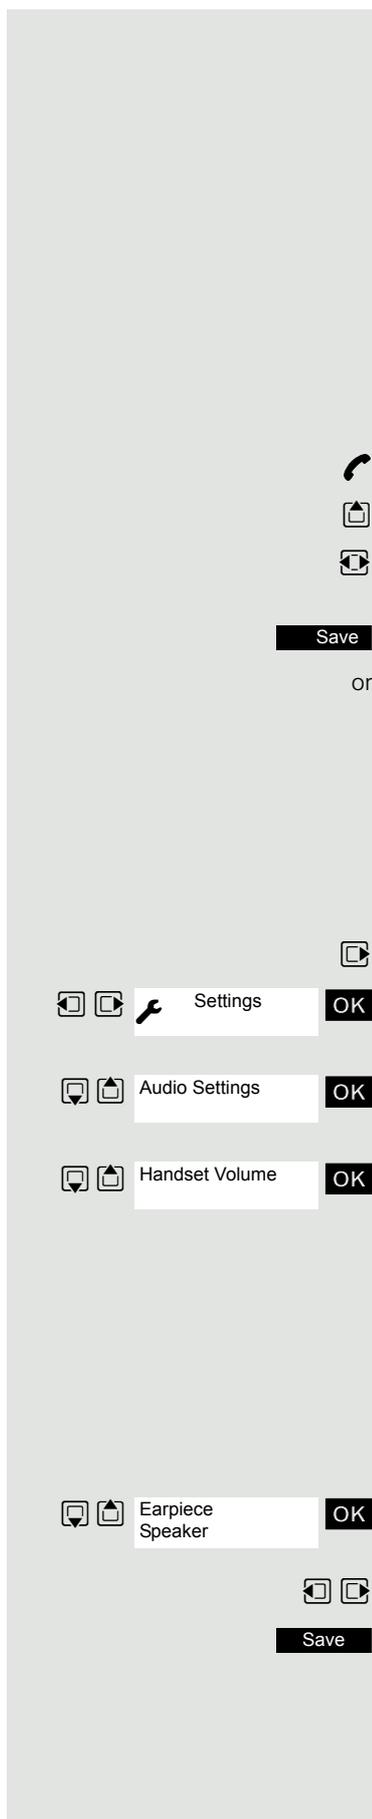


Setting advisory tones

 Can only be set if this menu item is visible. To set, see → Page 67.

The advisory tones have the following meaning:

Advisory	Explanation
Key Tones	Every key press is confirmed.
Confirmation	<ul style="list-style-type: none"> Confirmation tone when saving inputs/settings and when placing the handset in the charging shell Error beep (decreasing tone sequence) to signal incorrect inputs End-of-menu beep at the menu end
Battery	The batteries must be charged.

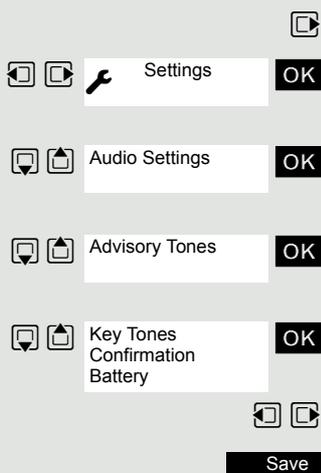

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item and confirm.


Select the required menu item.

Activate or deactivate.

Save the settings.

Activating/deactivating the vibration alert

Incoming calls and other messages are indicated by a silent alert.

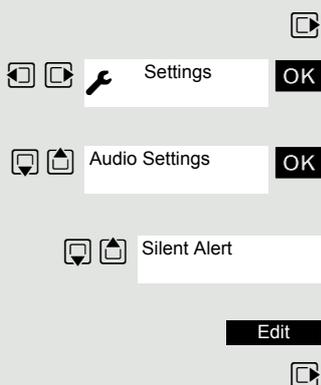

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item.

Press the display key.

Activate or deactivate.

Setting the ringer

Tones and melodies are saved on your handset. If you select the menu items **Volume** and **Melodies**, the ringtone sounds at the current setting.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item and confirm.


Select the required menu item and confirm.

 The "Anon. Calls Silent" function is not available on your communications system.

Setting the volume

Select the menu item and confirm.

You can choose between three ringer volumes as well as a crescendo ring (volume increases gradually).

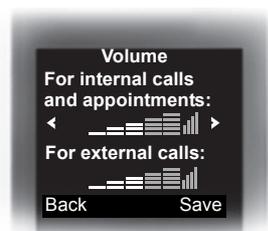

Select the required menu item.

Define the setting.

Press the display key.

Setting melodies


You can set ringing tones differently on your handset for different calls to help you differentiate between calls and appointments:

Select the menu item and confirm.

Select the required menu item.

Define the setting.

Press the display key.

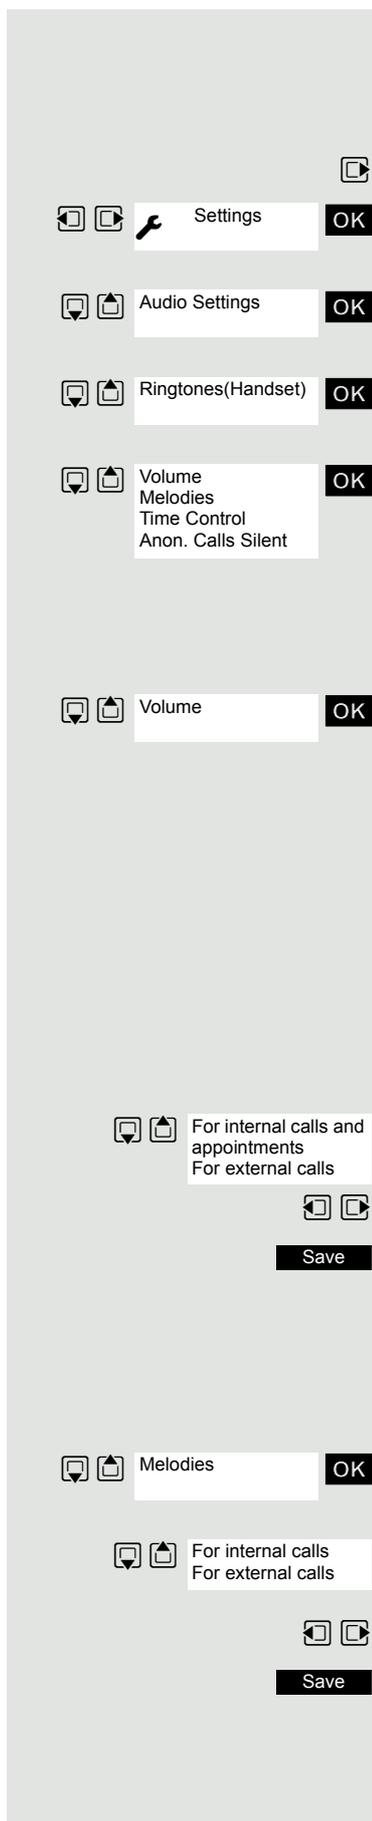

Setting time control for external calls

Specify a time period when you do not want the telephone to ring, for example during the night.

Select the menu item and confirm.

Specify **On** or **Off**.

If active:

Select the required menu item.

Enter the time.

Save the settings.



Time Control OK




Suspend ring. from
Suspend ring. until



Save

Setting ringing tones and pictures with resource directory

Your handset's resource directory is used to manage sounds that you can use as ringing tones and pictures that you can use as screensavers. The resource directory can manage the following media types:

Type	Format
Sounds: Ringtones Monophonic Polyphonic Imported sounds	Internal Internal Internal WMA, MP3, WAV
Pictures: Caller picture Screensaver	BMP, JPG, GIF 128 x 86 pixels 128 x 160 pixels

Your handset comes with a number of mono- and polyphonic sounds and pictures pre-installed. You can listen to the available sounds and display the pictures.

You can download pictures and sounds from a PC → Page 52. If there is not enough memory available, you must first delete one or more pictures or sounds.

Viewing screensavers and caller pictures / Playing sounds

Open the handset's main menu.

Select the menu icon and confirm.

Select the required menu item and confirm.

Select the entry.




Resource Directory OK



Screensavers
Caller Pictures
Sounds
Memory OK



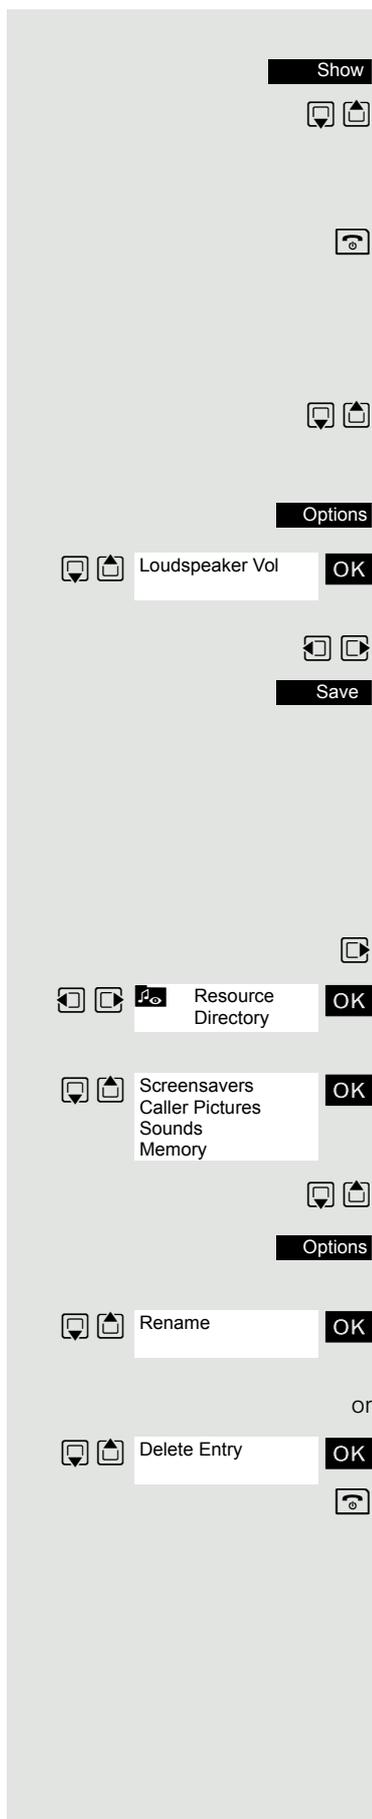

Screensavers/caller pictures

Press the display key.

Toggle between the pictures.

If you have saved a picture in an invalid file format, you will see an error message after selecting the entry.

Press to exit the menu level.

Sounds

The selected sound is played immediately.

Toggle between the sounds.

You can set the volume during playback.

Press the display key.

Select the menu item and confirm.

Adjust the volume.

Save setting.

Renaming and deleting screensavers/caller pictures/sounds

You selected an entry.

Open the handset's main menu.

Select the menu icon and confirm.

Select the required menu item and confirm.

Select the entry.

Press the display key. If a picture/sound is blocked (🔒), the options are not available.

Select the menu item and confirm. The name of the entry can be modified. Length: up to 16 characters. Then confirm your entry.

Select the menu item and confirm. The entry is deleted.

Press to exit the menu level.


Checking the available memory

You can show how much memory is left.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

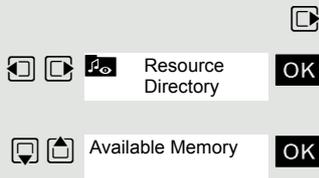

Activating or deactivating the ringer

Deactivating the ringer

Hold down the key until a confirmation tone is emitted. The  icon appears on the display.

Activating the ringer

Hold down the key until a confirmation tone is emitted.

Activating or deactivating the alerting tone

You can activate an alerting tone instead of the ringing tone. A short beep sounds for a call instead of the ringing tone.

If the handset is in a call pickup group, a pickup call is also signalled by the alerting tone.

Activating the alerting tone

Hold down the key until a confirmation tone is emitted.

Press the display key within three seconds.

The alerting tone is activated. The volume of the alerting tone is coupled with the volume of the external ringer.

Deactivating the alerting tone

Hold down the key until a confirmation tone is emitted.



Beep on



Activating/deactivating automatic call answering

 Can only be set if this menu item is visible. To set, see → Page 67.

This function allows you to accept calls by removing the handset from the charging shell.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item.

Press the display key. The activated function is ticked () and can be deactivated by selecting it once more.

Setting the date and time

The date and time setting can be used to ensure that the date and time are assigned correctly to incoming calls and in order to use the alarm.

The handset date and time are automatically set when you set up a call to another station. If your communications system does not support this function, you can set the date and time manually.

Either:

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Or:

If the date and time have not yet been set:

Press the display key.

then:


Enter the date, for example 22.09.2007 = 22092007.

Move the cursor down one line.

Enter the time, for example 19:05 = 1905.

Save the settings.

 If your communications system does not automatically set the date and time, you must check the setting from time to time and if necessary, correct it.

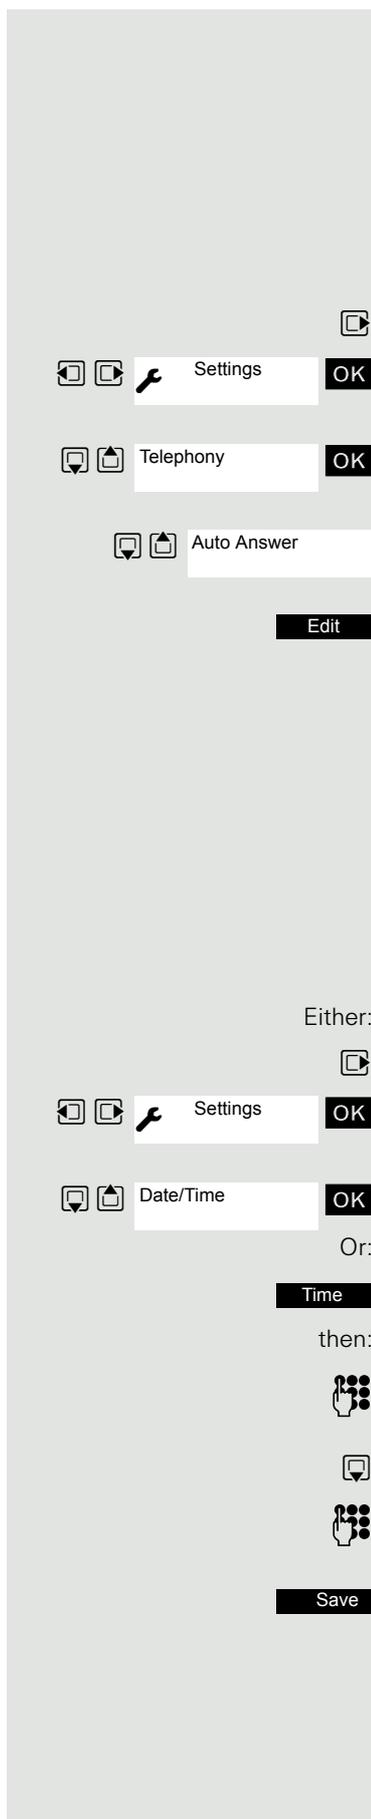

Setting the display

A number of options are available for setting the display. You can set the screensaver (screen picture), the colour scheme, the font size and the display lighting.

Screensaver/slide show

A picture or slide show (all the pictures are displayed one after the other) from the resource directory → Page 60 or the time can be displayed as a screensaver when the handset is idle. This will replace the idle status display. The calendar, date, time and name are covered as a result.

The screensaver is not displayed in certain situations, for example during a call or if the handset is signed off.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item.

Press the display key.

Activation:

Activate or deactivate.

Selection:

Move the cursor down one line.

Select the required entry. **Digital Clock** and **Analog Clock** show the current time as a screensaver in large digits on the display.

The selected screensaver is displayed.

Save the settings.

Setting large font

You can increase the font size of print and symbols in call lists and the directory to improve readability.

Open the handset's main menu.


Select the menu icon and confirm.


Select the menu item and confirm.

Select the menu item.

Press the display key.

= on).

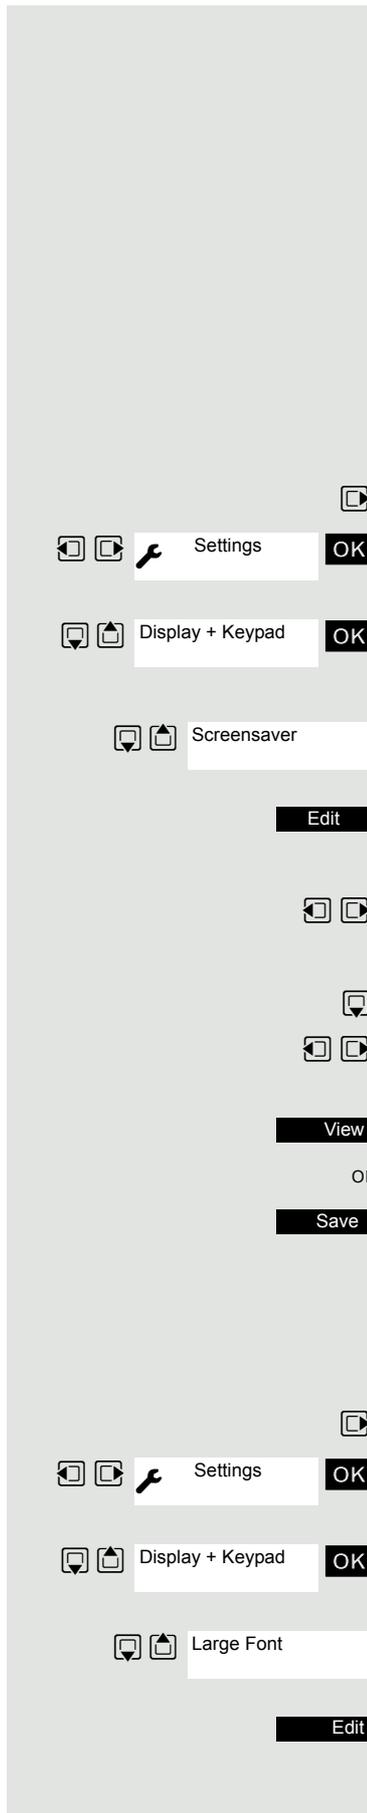

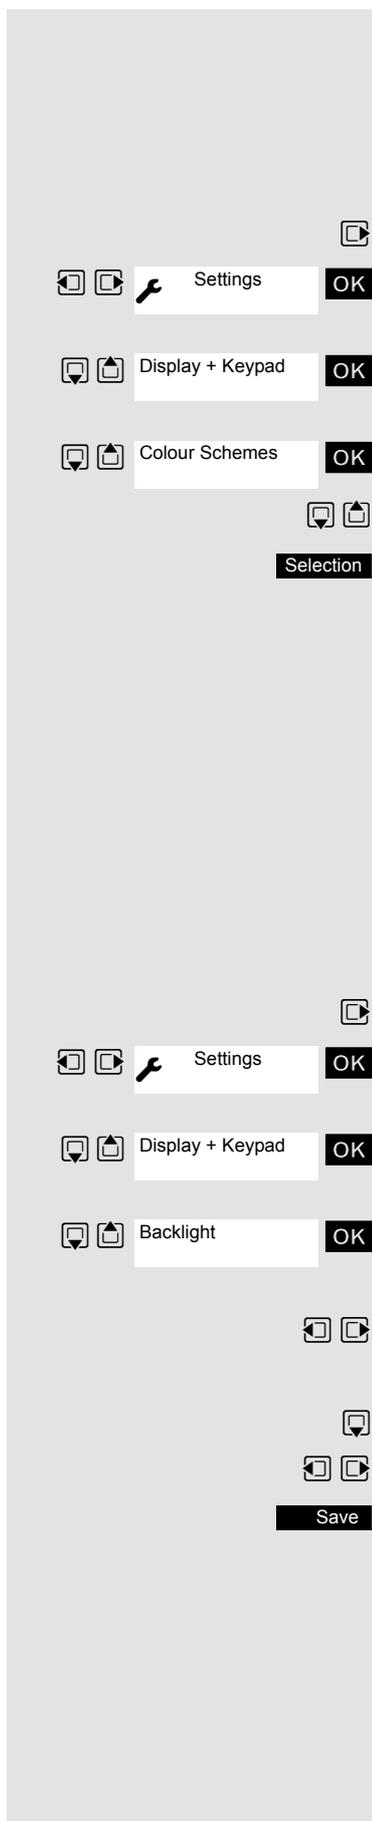

Colour scheme

Five colour schemes are saved on your handset. By selecting a colour scheme you define the colours to be used for the font, menu items and background.

If you change to a different colour scheme during a setting, it is immediately pre-viewed to show how it will appear later for all menus.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Select the entry.

Press the display key.

Illumination

 Can only be set if this menu item is visible. To set, see → Page 67.

You can set whether the display should light up when the handset is in or out of the base/charging shell. If it is activated, the display stays dimmed. When the display backlight is disabled, the display lights up again the next time any key is pressed, without any other keystroke action.

 This setting impacts the battery life.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

In Charger:

Activate or deactivate.

Out of Charger:

Move the cursor down one line.

Activate or deactivate.

Save setting.



Setting keypad illumination

You can activate and deactivate keypad illumination.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item.

Press the display key.

(☑ = on).

Rotating the display automatically

Only OpenStage M3 Plus and OpenStage M3 Ex Plus!

You can activate and deactivate the automatic position-dependent rotation of the information on the display.

When activated, the display is rotated by 180° (upside down) in non movement and call statuses when you move the handset from a vertical to a horizontal position.

This setting is useful if you are wearing the handset on a belt and you would like to see the display in the event of an alarm or call without having to remove the handset from the belt. You can then read the information on the display by simply tilting the handset outwards.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item.

Press the display key.

(☑ = on).

Setting the conversion list for vCard transfer



Can only be set if this menu item is visible. To set, see → Page 67.

See also **Gigaset QuickSync** → Page 52,

Phone numbers are usually specified as follows in e-mail programs, such as Microsoft Outlook for example: +49 (30) 11111111. The handset is unable to use this format, however, to dial the phone number. If the phone number above is a local fixed network number, it is converted to 011111111, for instance, when dialled. The conversion pairs are defined in the conversion table and can be modified if they deviate from the default values.

Consult your system administrator about the conversion rules that apply to your handset.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item and confirm. The conversion table is displayed.

Change entry

Press the up/down control key to navigate to another input field; Press the left/right control key to move the cursor within an input field.

Save setting.

Press the On-hook key to end the operation.

Setting the menu view

You can decide whether only a selection of the most important menu items or all menu items are to be shown in the menus.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select and set **Simplified** or **Complete**.

Press the On-hook key to end the operation.



Resetting the defaults

 Can only be set if this menu item is visible. To set, see → Page 67.

This function allows you to reset your mobile phone to the defaults, for example, if you want to pass it on to someone else or reset it.

The handset features are handled as follows:

Feature	Action
Sound settings	are reset
Language	set to English
System registration	is retained
Phonebook	is retained
Redial list	is retained
Date/Time	is retained
Entries in the calendar	are retained
Content of resource directory	is retained

Resetting

Open the handset's main menu.


Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item and confirm. A security check question appears.

Confirm the security check question. The handset is returned to the default.

 For information about deleting the phonebook see: → Page 36.

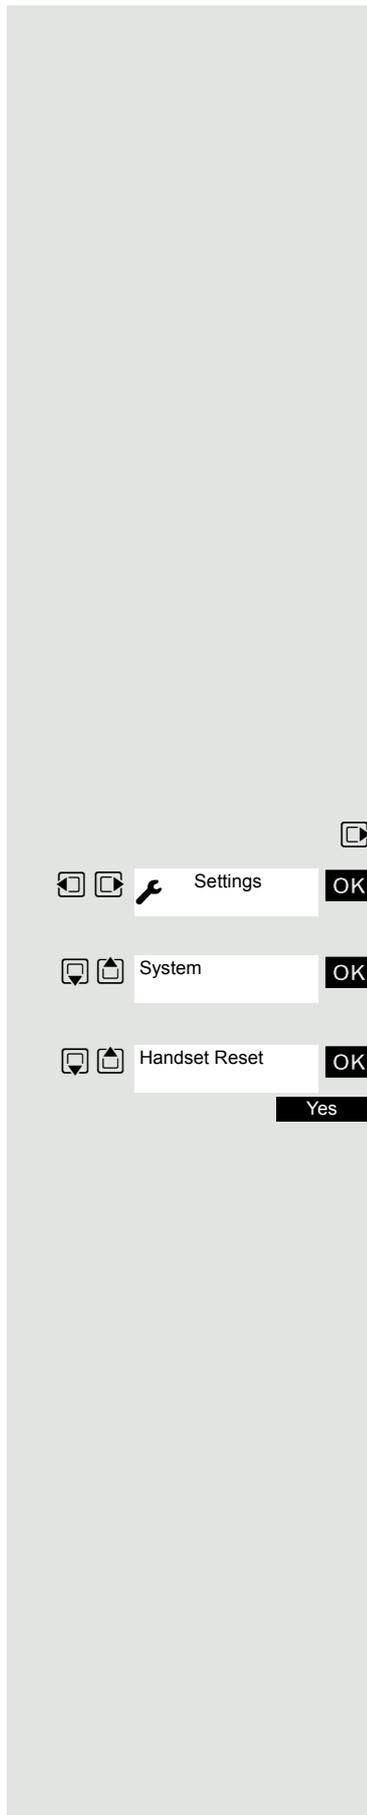

Default settings

Setting	Explanation/notes	Levels	Default state
Tones and signals	Ringer volume	5	5
	Ringer melody, external	20	01
	Ringer melody, internal	20	03
	Alerting tone	-	off
	Earpiece volume	5	3
	Volume in speakerphone mode	5	3
	Timed reminder		
	Melody	20	Sonic
	Volume	5	Cannot be set
	Key tones, audible each time a key is pressed	-	on
	Warning tone, audible approximately five minutes before the battery expires	-	on
Confirmation tone, indicates whether actions were successful or unsuccessful	-	on	
Auto. answer	Call is automatically accepted by removing the handset from the charging shell	-	on
Select base	Select the base	4	retained
Lighting	Display lighting	-	in charging shell: on/out of charging shell: off
Screen picture	Display in idle status	-	None
Character set	Available character set	-	Standard
Select and confirm the language	Select different languages:	26	English
Bluetooth	Bluetooth activation	-	off

Telephone blocking

Handset telephone lock

 Can only be set if this menu item is visible. To set, see → Page 67.

You can protect your handset against theft by entering a 4-digit numerical code (PIN) to lock it.

The PIN is preset to "0000" (default). The handset does not prompt for a PIN in this setting. As soon as you have changed the PIN you will need to enter it when you turn on the handset.

Enter the value "0000" again to deactivate the PIN.

 If you have forgotten your PIN, please contact our Service. It will be reset at your own expense. The handset is returned to the default state (see → Page 68).

Attention:

The registration and phonebook are also lost however in the process! The delivery status is restored.

Entering a new PIN

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item and confirm.


Enter and confirm the old PIN. If a PIN has not yet been set, then enter "0000".

Enter and confirm the new PIN.

Press the On-hook key to end the operation.

Battery charging when PIN lock active

If the handset deactivates because the battery is flat, it automatically reactivates as soon as you place it in the charging shell. The charging operation starts. If you have already set a PIN, you must enter it so that the handset can receive calls.

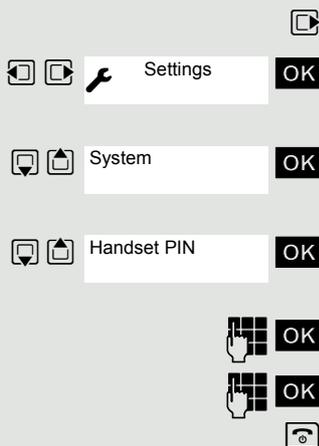

Personal alarm functionality

The OpenStage M3 Plus and OpenStage M3 Ex Plus handsets are equipped with a sensor that allows them to be operated as a PNG-S.

These handsets are referred to below as personal alarm devices with voice communication capability, or by the abbreviation PNG-S.

Alarm statuses

Integrated sensors detect alarm statuses such as:

- Non movement
- Position detection (deviation from the upright position, e.g. the person has fallen)
- Intense motion (escape)
- Cyclical response monitoring (timed)
- Loss of PNG-S (via pull-away contact with cord)

Terms

Operating modes

The OpenStage M3 Plus and OpenStage M3 Ex Plus handsets can be used as personal alarm devices with voice communication capability (PNG-S) in Alarm Mode and PNG Mode. Various settings are performed on the handset for this purpose, which enable automatic or manual alerting.

The configuration may only be performed by appropriately trained service personnel for professional use (e.g. in accordance with BGR 139).

A service PIN is used to protect mode activation from unwanted changes by third parties.

The configuration of the operating modes is described in a separate service manual.

Alarm sensors

The alarm sensors detect operating states from which alarm situations can develop. The handset can detect and signal automatic alarms. These include non movement, man down, time, escape and pull cord alarms.

In addition to automatic alarms, there are also manual alarms, which are triggered by means of an alarm key.

Alarm key

The alarm key initiates a manual alarm. The alarm destination (default: phone number 112) can be configured. The alarm key also works even if monitoring mode is not activated.

When the alarm key is pressed, the current function is first interrupted or ended and the configured alarm function is then executed.

The alarm key and the keys for resetting the prealarms can be operated if a key lock is activated.

Attention:

If the alarm key is pressed while one of the following functions is active, the alarm signalling can be executed with a delay:

- Phonebook/Record Pattern
- Phonebook/Copy Entry
- Phonebook/Delete All
- Phonebook/Copy All
- "Data Transfer" menu
- "Alarm Clock" menu
- "Media-Pool" menu
- Settings/ Date/Time
- Settings/Handset/Area Codes
- Data exchange via MPM Manager

Example: If the entire handset phonebook is deleted, this can mean that the alarming signal is delayed by approx. 2 minutes! This operating mode is not compliant with BGR 139.

Prealarms

The handset signals a prealarm in monitoring mode if an alarm is pending. The pending alarm can be prevented by resetting the reason for the alarm or pressing a prealarm reset button (any display key or "+/-" key).

Technical warning

The handset monitors operating states while in monitoring mode (e.g. battery charging, DECT ready to receive). If faults are detected, the user receives a warning.

Prealarm/technical warning signal

Prealarms and technical warnings can be signalled acoustically via the loud-speaker (signal, volume configurable) or silently via the vibration alarm.

Alarming signal

If an alarming signal is triggered, the handset automatically generates alarm calls to the configured alarm destination. The alerted party recognises the alerting party from the caller's phone number for example.

The alarm subscriber's phone number has to be transmitted for this purpose. The communications system used must support the caller ID function.

In order to ensure if at all possible that an alarm call reaches the configured alarm destination, the alarm calls are repeated cyclically. The duration and number of alarm calls can be predefined.

 **Note:**

In the case of alarm calls, call charges may be incurred for each alarm call.

The call duration and ringing interval are identical. The call duration and ringing interval are incremented by one second after each alarm call.

Communication with the alarm destination is only possible for the duration of the connection because of the automatic alarm call retry.

An alarm callback by the alarm server is possible for example if an alarm server is being used. This server ends the alarm retries and establishes a voice connection to the alerting PNG. The alarm callback is answered automatically by the PNG. Handsfree mode and handset mode are possible here.

 **Attention!**

Please note the legal requirements with respect to using this functionality. (Potential listening in option in the alarm status of the PNG).

Alarm signal

An alarm signal/positioning tone can be issued by the handset in order to locate the alerting party. Depending on the alarm type, it can be established whether or not a positioning tone is to be issued in the event of an alarm.

The manual alarm can also be triggered with/without a positioning tone depending on the situation:

- Longpress – no positioning tone
- Shortpress – positioning tone

Communication with the alarm destination is only possible when the alarm signal/positioning tone is active if the alarm signal/positioning tone is disabled manually with the "+" or "-" key. Manual suppression of the alarm signal can be configured. The alarm signal suppression is only effective for the duration of the connection.

Monitoring LED

The monitoring LED visually indicates the following PNG operating states:

Monitoring Off:	continuously off
Monitoring On:	flashing, 50 ms on/1000 ms off
Prealarm Active:	flashing, 500 ms on/500 ms off
Alarm:	continuously on
Technical Warning:	continuously on
Automatic Alarm Off:	flashing, 500 ms on/2000 ms off

Language support in Additional Features menu

The Additional Features menu is only available in German and English.

If you choose a language other than German when setting the language, the display output in the Additional Features menu will be in English.

Alarm types (overview)

Alarm Type	Explanation
Manual personal alarm	Triggered by pressing the red alarm key on the handset.
Automatic personal alarm	<p>Triggered independently by the handset after a specific time if a defined event occurs and the pre-alarm (see below) was not confirmed by the person in question:</p> <ul style="list-style-type: none"> • Person no longer moving (Non Movement) • Person falls (Man Down Alarm) • Person does not respond to the prealarm which is signalled if there is no input on the handset for a configurable period (Time Alarm) • Person loses the handset (Pull Cord Alarm; with pull cord) • Person is moving frantically (Escape Alarm) <p>The particular alarms that are activated on your handset depend on your handset's PNG configuration. Response times, prealarm times and acoustic alarm signals can likewise be set on the handset.</p> <p>The settings must be performed before the handset is commissioned initially.</p>
Technical warning	If a technical fault occurs on the handset, for example low battery charge, you will hear an error tone.
Prealarm	The prealarm sounds before an automatic personal alarm. If the prealarm is confirmed within a certain time by the user, the automatic personal alarm is not triggered.

Activating monitoring



Note:

The alarm functionality must be configured prior to initial use.

Press the centre key three times.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm. The procedure for activating the alarm functionality is started.

The handset immediately activates monitoring mode.

Shown on the display when the handset is in monitoring mode.

The monitoring LED on the handset flashes!

(flashing rhythm: 50 ms on/1000 ms off)

This menu option is now activated.



Note:

In monitoring mode: Do not remove the battery pack to ensure that monitoring is not interrupted.

Unavailable functions


The following functions are not available in monitoring mode because they would delay the alarming signal:

- Phonebook/Record Pattern
- Phonebook/Copy Entry
- Phonebook/Delete All
- Phonebook/Copy All

- "Data Transfer" menu
- "Alarm Clock" menu
- "Resource Directory" menu

- Settings/ Date/Time
- Settings/Handset/Area Codes

- Data exchange via MPM Manager

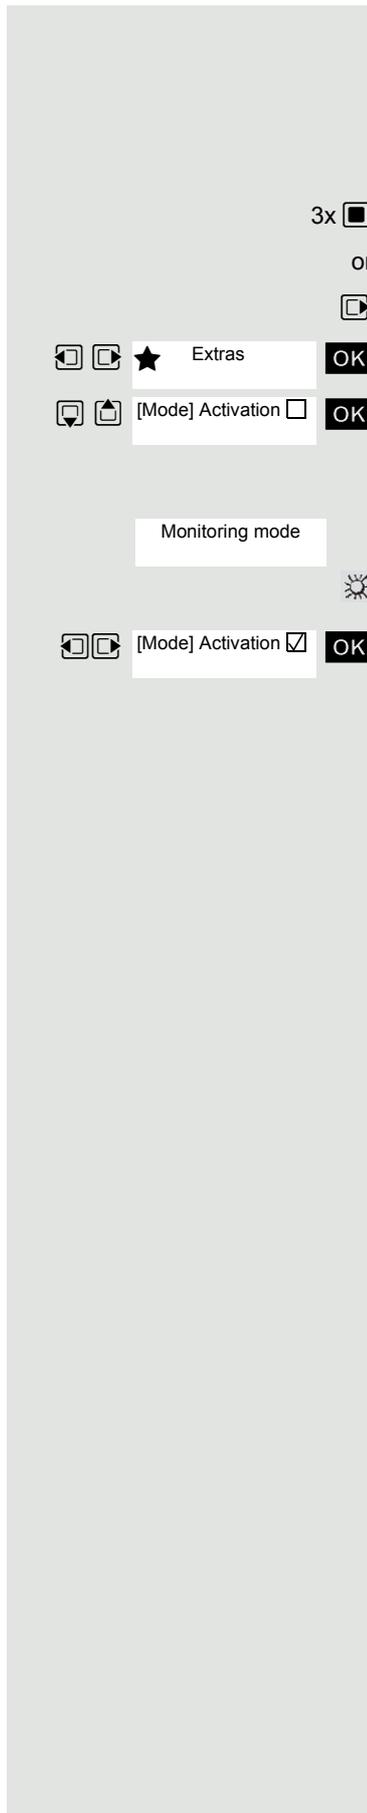

Prealarm
Non Movement

Either:

OK

Or:

Prealarm

The prealarm signals a pending alarm. If you do not confirm this prealarm, the handset sends emergency alarm signals to the configured location.

Note:

If a prealarm is signalled during a call, you have to first confirm the prealarm in order to prevent the pending alarm. You can then continue the call.

A prealarm is indicated with Prealarm and the relevant alarm type on the display. The handset signals the prealarm by means of the configured warning tone.

Press any display key

Immediately press any display key or the volume key (+/-) in order to confirm the prealarm. The prealarm is reset and the pending alarm is prevented. This avoids a false alarm being issued.

Confirm triggering event

The prealarm can also be confirmed by resolving the triggering event, i.e.:

- Move handset (Non Movement)
- Move handset less (Escape Alarm)
- Position handset upright (Man Down Alarm)
- Reinsert inadvertently removed pull cord contact (cord)
- Confirm Time Alarm by pressing any key

Attention:

The prealarm only persists for a short time. This duration can be exceeded and therefore a false alarm induced. It is more reliable to confirm the prealarm using a display key.

Technical warning on the handset

The handset can be configured so as to allow the following operating functions to be monitored:

- Synchronicity with DECT base station
- Charge status of battery pack

If a technical fault is detected, the handset issues a warning signal, which can be reset like a prealarm. The reason for the fault is shown on the display.

If the fault persists, the warning signal is repeated after a configurable time.

Danger:

An alarming signal is no longer guaranteed. Exit the danger zone and resolve the cause of the fault!

Sending an emergency alarm signal/calling for assistance

In monitoring mode

The handset is in monitoring mode.

Automatic alarming signal

The alarm sensors in the handset recognise operating statuses that trigger an alarming signal.

Certain alarm types initially generate a prealarm (configurable). If you do not acknowledge this alarm, the handset sends emergency alarm signals to the configured alarm destination.

Manual alerting

Press the red alarm key on the handset. The handset sends emergency alarm signals to the configured alarm destination.

An existing call is automatically terminated. The handset repeatedly sends emergency alarm signals (maximum number of retries is configurable).

The necessary assistance measures are initiated by the location that received the emergency call following the alarming signal.



In alarm status

The handset has sent an emergency alarm signal and is consequently in alarm status.

In alarm status: Reset the alarm functionality

The handset is in alarm status.

Press the display key. The handset disables the alarm status/alarming signal and monitoring.

"PNG Off" is displayed again after every alarm call.

"PNG Off" is only displayed after five alarm calls. If "PNG Off" is not pressed, the handset repeats the alarm calls according to the configuration. The call duration and ringing interval are each extended by one second.



Remark:

If you do not want the alarm to be disabled on the handset, a configuration with an alarm server must be used.




Attention:

Pressing the "PNG Off" display key or pressing and holding (longpress) the On-hook key either cancels an alarm prematurely or ends it after it has already been triggered.

The monitoring LED on the handset is now extinguished!

PNG Off

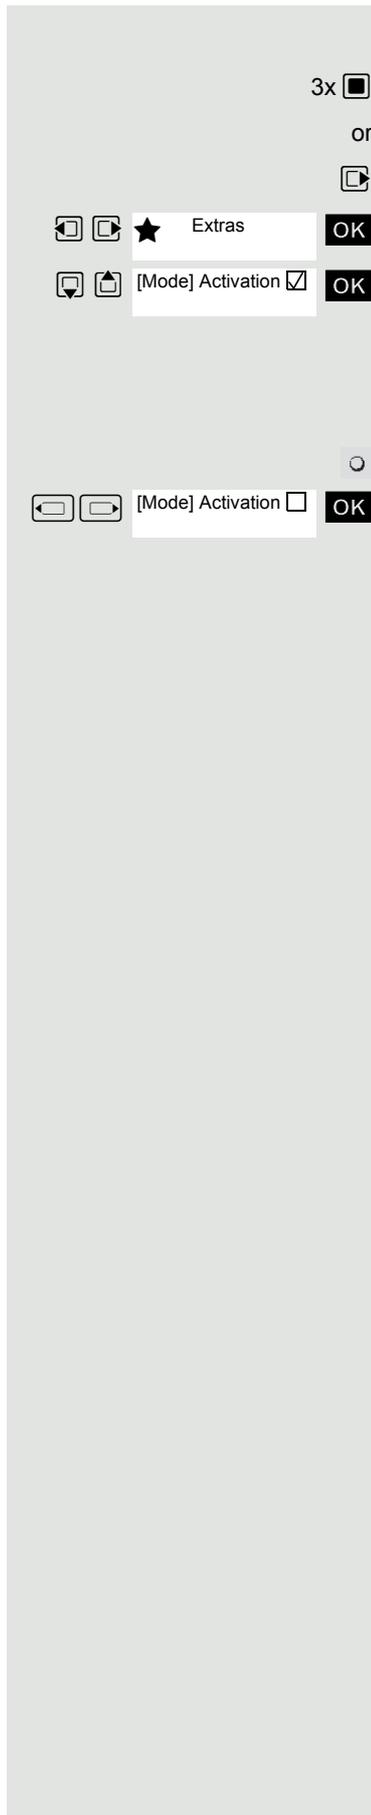

Deactivating monitoring

Press the centre key three times.

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm. The procedure for disabling the alarm functionality is started.

The handset disables the alarm functionality automatically.

The handset is now no longer in monitoring mode.

The monitoring LED on the handset is now extinguished!

This menu option is now no longer activated.

The check box is not marked if the function is disabled. By selecting the function again you can activate it again (→ Page 75).

Function test when activating Alarm Mode and PNG Mode

A function test has to be performed before the Alarm Mode or PNG Mode is used. This test is performed automatically by the handset.

Please follow the instructions on the display.

1. Test: Charge status of battery pack

If the battery pack is adequately charged, no reference is made to the battery test.

If the battery charge is too low, the message "Battery low!" appears, the entire function test is cancelled and "Test Failed!" is displayed. Make sure the battery pack is adequately charged and start the startup procedure again!

2. Test: Alarm sensors (movement test)

Move the handset vigorously for a few seconds. An acknowledgement tone signals that the test has ended.

Shown on display if the test was successful. If not, the entire function test is cancelled and "Test Failed!" is displayed. Start the startup procedure again.

3. Test: Alarm sensors (non movement and man down test)

Hold the handset still for a few seconds or put it down. An acknowledgement tone signals that the test has ended.

Shown on display if the test was successful. If not, the entire function test is cancelled and "Test Failed!" is displayed. Start the startup procedure again.

4. Test: Alarm key

Press the red alarm key. An acknowledgement tone signals that the test has ended.

Shown on display if the test was successful. If not, the entire function test is cancelled and "Test Failed!" is displayed. Start the startup procedure again.

5. Test: Pull Cord Alarm

This test is only performed if the Pull Cord Alarm is activated on the handset.

Remove the cord and re-insert it. An acknowledgement tone sounds both when the cord is removed and when it is replaced.

Shown on display if the test was successful. If not, the entire function test is cancelled and "Test Failed!" is displayed. Start the startup procedure again.



Note:

If the function test fails repeatedly, shut down the handset immediately and send it to the manufacturer.

When the function test has ended, the handset automatically calls the alarm server and passes on the test result.

Look out for display and voice output from the alarm server.

Function Test
Shake Sensor

Please shake
handset

Test Passed!

Function Test
Position Sensor

Please hold handset
in vertical position

Test Passed!

Function Test
Emergency Key

Please press
emergency key

Test Passed!

Function Test
Pull Cord Alarm

Please detach and
attach cord to handset

Test Passed!

Appendix

Troubleshooting

Some malfunctions can be resolved without outside intervention. The following table provides a list of such malfunctions. All other malfunctions should be reported to the relevant service personnel.

Error	Possible cause	Remedy
No display.	The handset is not switched on. Batteries are empty.	Press the On-hook key until confirmation is received. Charge or replace the batteries.
You cannot dial an external number.	The handset is locked.	Unlock the handset.
No reaction to keystroke.	Keypad lock activated. The key is stuck.	Press the hash key until confirmation is received. Release the key.
De-crescendo tone sequence during input.	An incorrect entry was made.	Repeat key sequence while watching the display; where applicable, consult the operating instructions.
The line "Base n" flashes (n= 1 - 4).	The handset is outside the base radio range; radio signals too weak. Handset not registered. Intervals between synchronisation attempts are too long.	Come closer to the base radio range, change your position. Register the handset. Switch off the handset and switch it back on again.
No ringer on the handset.	The ringtone is deactivated. "Do Not Disturb" is activated.	Activate ringer. Deactivate "Do Not Disturb".
The following, for example, appears: Base 1 Outgoing and incoming calls and activation/deactivation are not possible.	Handset is blocked.	Remove the batteries from the handset and then re-insert them. Proceed as when loading batteries for first time → Page 14.
The following appears: incomplete!	Maximum input time was exceeded. The On-hook key was not pressed.	Avoid long pauses between keystrokes. Press the On-hook key.
The following appears: incomplete!	The communication system is overloaded.	Wait and try again later.
The following appears: Currently not accessible	Function is currently not available. No connection available for the phone number dialled.	Wait and try again later. Enter the phone number correctly or call the attendant console.

Error	Possible cause	Remedy
The following appears: Not possible or: Incorrect input or: Nothing stored	Speed-dial number not available, appointment entered incorrectly, entry blocked or not allowed, prerequisite not fulfilled (for example if there is no second partner for toggling), number dialled was incomplete.	Correct your input, select a permitted option, enter the phone number in full.
The following appears: Not authorized	Blocked function was called.	Apply to the relevant service personnel for the COS for the blocked function.
The following appears: PIN incorrect	Incorrect PIN was entered.	Enter the correct PIN.
The following appears: Not available	Phone number was not fully entered, the star or hash key was not pressed.	Enter the phone number correctly or as prescribed.
The following appears: Do not disturb	Data transfer is active.	Wait and try again later.

Cleaning the handset

Removing everyday dirt

To clean the handset and the charging shell, simply wipe them with a damp or anti-static cloth. Never use a dry cloth. Do not use abrasive cleaning agents.

After contact with liquids

1. Deactivate the handset immediately. Do NOT activate it!
2. Remove the batteries immediately. Leave the battery compartment open.
3. Allow the liquid to drain off:
 - Hold the handset in a horizontal position with the open battery compartment facing down.
 - Hold the handset in a vertical position with the open battery compartment facing down. Shake the handset gently, slightly tilting it back and forth.
 - Dab all components dry and then leave the handset in a warm spot (other than a microwave, oven, etc...) for at least 72 hours with open battery compartment and keypad facing down.

When it has fully dried out, you will usually be able to use it again.

Storage

To avoid damage, the handset should not be stored with sharp objects, such as knives or tools, etc. We recommend using a protective pouch → Page 84.

General specifications

Handset

Maximum sound pressure level according to TBR10, Annex D	less than 118 dB (A)
Weight incl. battery	approx. 100 g
Dimensions (W x H X D)	approx. 48 x 127 x 19 mm

DECT

DECT standard	Supported
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1880-1,900 MHz
Duplex method	Time multiplex, 10 ms frame length
Pulse repetition rate	100 Hz
Pulse transmission length	370 μ s
Channel grid	1,728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW, average power per channel 250 mW pulse power
Range	Up to 300 m outdoors, up to 50 m indoors
Environmental conditions in operation	+5 °C to +45 °C, 20 % to 75 % relative humidity

Bluetooth

Radio frequency range	2402-2,480 MHz
Transmission power	4 mW pulse power

Battery

Technology	Lithium ion (Li-Ion)
Voltage	3.7 V
Capacity	750 mAh
Type for OpenStage M3 and OpenStage M3 Plus	V30145-K1310-X363
Type for OpenStage M3 Ex and OpenStage M3 Ex Plus	V30145-K1310-X453

The handset is supplied with the recommended battery. Only an original battery may be used. Replacement batteries can be ordered if necessary from Unify Service.

Handset operating times/charging times

The operating time of your handset depends on the capacity and age of the battery and the way it is used. (All times are maximum possible times).

Stand-by mode (hours) ^a	200/160
Talktime (hours)	17
Charging time in charger (hours)	4

a without/with display backlight

Charging shells

European Union	S30852-H2486-R101
United Kingdom	S30852-H2486-L101
US (110V)	S30852-H2486-U101
Australia	S30852-H2486-C401

Accessories

Use only original accessories. This will avoid possible health risks and personal injury and also ensure that all the relevant regulations are complied with.

Source

For information on accessories (such as headsets, protective pouches), contact us at the following address:

http://wiki.unify.com/wiki/DECT_Handset_accessory

EU directive

The handset and accessories listed conform to the following EU directive:

99/05/EC "Radio and Telecommunication Terminal Equipment"

Writing and editing text

- Each key between **0** and **9** is assigned several letters and characters.
- Control the cursor with **←**, **→**, **↑**, **↓**. Press and **hold** **←** or **→** to move the cursor **word by word**.
- Characters are inserted at the cursor position.
- Press the star key *** Δ** to display the table of special characters. Select the required character and press the display key **Insert** to insert the character at the cursor position.
- Press and **hold** **0** to **9** to enter digits.
- Press display key **<C** to delete the **character** to the left of the cursor. Press and **hold** to delete the **word** to the left of the cursor.
- The first letter of the name of address book entries is automatically capitalised, followed by lower case letters.

Setting upper/lower case or digits

Repeatedly press the hash key **# ↵** to change the text input mode.

123	Writing digits
Abc	Upper case ^a
abc	Lower case

^a First letter in capitals, all others in lower case

The active mode is indicated at the bottom right of the screen.

Writing names

- Enter the individual letters/characters by pressing the corresponding key.
The characters assigned to the key are shown in a selection line at the bottom left of the screen.
The selected character is highlighted.
- **Briefly** press the key several times in succession to select the required letter/character.

Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1	1									
2	a	b	c	2	ä	á	à	â	ã	ç
3	d	e	f	3	ë	é	è	ê		
4	g	h	i	4	ï	í	ì	î		
5	j	k	l	5						
6	m	n	o	6	ö	ñ	ó	ò	ô	õ
7	p	q	r	s	7	ß				
8	t	u	v	8	ü	ú	ù	û		
9	w	x	y	z	9	ÿ	ý	æ	ø	å
0	␣ ^a	.	,	?	!	← ^b	0			

a Space

b Line feed

Accessing additional functions via the PC interface

To enable your handset to communicate with the PC, the **Gigaset QuickSync** program must be installed on your PC (free to download at http://wiki.unify.com/wiki/DECT_Handset_accessory)

Transferring data

After installing **Gigaset QuickSync**, connect the handset to your computer → Page 15 using Bluetooth → Page 52 or USB data cable.

Start the **Gigaset QuickSync** program. You can now synchronise your handset directory with Outlook; download caller pictures (.bmp) and images (.bmp) as a screensaver and sounds (ringtones) from the computer to the handset (and vice versa) (see also → Page 52).

Declaration of conformity

Your handset is supplied for use within a specific country, which is displayed on the underside of the device. Country-specific requirements have been taken into consideration.

The device complies with the basic requirements of the R&TTE Directive and therefore displays the CE symbol.

Declaration of conformity

We, the Unify GmbH & Co. KG, declare that the DECT Handset

OpenStage M3 Ex / Ex Plus

S30852-S2471-R121-x

-R141-x

conforms to the following European Directives and European standards:

Directive 1999/5/EC: Radio and Telecommunications Terminal Equipment

Information technology equipment (ITE)

EN 60950-1:2006 Safety

+A11:2009+A1:2010

+A12:2011

Information technology equipment (ITE) - Electromagnetic compatibility (EMC)

EN 61000-6-2:2005 Immunity for industrial environments

Human exposure to electromagnetic fields - basic restrictions

EN 50371:2002 Compliance of low power electronic and electrical apparatus

EN 62479:2010 Compliance of low power electronic and electrical apparatus

Electromagnetic compatibility and Radio spectrum Matters (ERM)

EN 300 328 V1.7.1 Wideband transmission systems

ElectroMagnetic Compatibility (EMC) standard for radio equipment and services

EN 301 489-1 V1.9.2 Common technical requirements

EN 301 406 V2.1.1 Digital Enhanced Cordless Telecommunications (DECT)

EN 301 489-6 V1.3.1 Specific conditions for DECT equipment

EN 301 489-17 V2.2.1 Specific conditions for Broadband Data Transmission Systems

Directive 94/9/EC: Equipment intended for use in potentially explosive atmospheres

EN 60079-0:2012 Explosive atmospheres: Equipment - General requirements

EN 60079-11:2012 Explosive atmospheres: Equipment protection by intrinsic safety "i"

EN 60079-31:2009 Explosive atmospheres: Equipment dust ignition protection by enclosure "t"

Directive 2011/65/EU: Restriction of the use of certain hazardous substances (RoHS) in electrical and electronic equipment.

Documentation according to EN 50581:2012

Munich, 10th December 2013



Richard Wendt,
Head of Embedded Systems



Johann-Heinrich Schinke,
Head of Devices & Embedded Systems

Unify GmbH & Co. KG

Hofmannstr. 51,
D-81379 Munich,
Germany

Telephone
+49 (89) 7007 0

UNIFY Harmonize
your enterprise

Formerly Siemens Enterprise Communications

Copyright © Unify GmbH & Co. KG, 2013
Hofmannstr. 51, D-81379 Munich, Germany
All rights reserved.

Unify, OpenScape, OpenStage and HiPath are registered trademarks of Unify GmbH & Co. KG. All other company, brand, product and service names are trademarks or registered trademarks of their respective holders.

Index

Numerics

2.5 mm jack 5

A

Accessories 84
 Activating 22
 Advisory tones 58
 Alarm clock 46
 Alarm functionality 71
 Alarm functionality (compliant with BGR 139)
 Alarm key 5
 Alarm functionality (not compliant with BGR 139)
 Alarm key 77
 Prealarm 76
 Sending an emergency alarm signal 77
 Alarm key 5, 18, 72
 Alarm sensors 71
 Alarm statuses 71
 Alarming signal 73
 Alerting tone 62
 Allocating 40
 Appointments
 ~ on handset 47
 Activating 47
 Confirming 47
 Deactivating 48
 Attachment clip 5
 Audio functions 57
 Auto. call answering 63
 Auto. Number redial 29
 Available memory 37

B

Base
 Changing the name displayed 49
 Selecting 49
 Setting 50
 Batteries
 Inserting 12
 Warning tone 69
 Battery cover 5
 Battery tone
 Function 69
 Setting 58
 Bluetooth 27
 Registering devices 53
 Bluetooth interface 52

C

Caller list 44
 Calling for assistance 77
 Calls
 Accepting 24
 Making 23
 Rejecting 25
 Changing a phone number 35
 Changing display key assignments 51
 Charging status 14
 Cleaning 81
 Clip 5
 Colour scheme, setting 65
 Conducting calls with the headset 27
 Conference
 Ending 41
 Leaving 41
 Setting up 41
 Confirmation tone
 Function 69
 Setting 58
 Connection quality 22
 Consultation (second connection) 24
 Control key 5, 19
 Converting prefixes 67
 Copy All 37
 Copy Entry 37
 Copying the phonebook 37
 Cord 5
 Corporate phonebook 30

D

Deactivating 22
 Declaration of conformity 86
 Default state 68
 Deleting
 Entry 29, 36
 Phonebook 36
 Redial list 29
 Dialling 23
 A phonebook entry 34
 Dialling a number 34
 Dialling preparation 23
 Dimensions 82
 Directives 84
 Display 5
 Colour scheme 65
 Lighting 65
 Screensaver (screen picture) 64
 Setting 64
 Display keys 5, 19
 Display lighting 65
 DTMF dialling 39

- E**
- Earpiece 5
 - EMC 3
 - Emergency call key 18
 - Entry
 - Changing 35
 - Deleting 29, 36
 - Dialling 23, 29, 34
 - Dialling from the system phonebook 31, 32
 - Marking as VIP 36
 - Saving 34
 - Searching for 35
 - Viewing 35
 - Escape Alarm 74
 - EU directives 84
 - Everyday dirt 81
- F**
- Function keys 18
 - Function Test 79
- H**
- Hash key 5, 18
 - Headset 27
- I**
- Interface 52
 - Interference with electronic equipment 3
- J**
- Jack for headset 5
- K**
- Key tone
 - Function 69
 - Setting 58
 - Keypad lock 25
 - Keys
 - Control key 19
 - Display keys 19
 - Function keys 18
- L**
- Languages 74
 - LDAP phonebook 32
 - Leaving the radio network/re-registering 25
 - LED 5, 73
 - Liquids 81
 - Loudspeaker 5
- M**
- Making calls 23
 - Man Down Alarm 74
 - Manual redial 23
 - Memory 37
 - Message key 5
 - Message list 18
 - Microphone 5
 - Mini USB connection 5
 - Monitoring
 - Activating 75
 - Deactivating 78
 - Monitoring LED 73
- N**
- Non Movement Alarm 74
 - Number
 - Changing 35
 - Dialling from the phonebook 34
 - Dialling from the system phonebook 31, 32
 - Saving 34
 - Number keys 5
 - Number redial
 - Adding a phone number 30
 - Automatic 29
 - Deleting an entry/list 29
 - List 23, 29
 - Manual 23
 - Number, applying 34
- O**
- On/off key 5, 18
 - On-hook key 5, 18
 - Opening/closing battery compartment 12
 - Operating modes 71

- P**
- Parts of the device 5
 - Personal alarm
 - Automatic 74
 - Manual 74
 - Phonebook
 - ~ on handset 33
 - Company-wide 30
 - LDAP 32
 - Phonebook entries, sorting 34
 - Phonebook, copying 37
 - PIN 22, 70
 - PNG functionality 71
 - Prealarm 74, 76
 - Prealarm signal 72
 - Prealarms 72
 - Programming keys
 - Changing the assignment 51
 - Speed dialling 50
 - Protective cover 10
 - Protective pouch 81
 - Pull cord 5
 - Pull Cord Alarm 74
- R**
- Radio range 22
 - Range problems 22
 - Recall 40
 - Registering devices (Bluetooth) 53
 - Rejecting a call 25
 - Resetting 68
 - Resource Directory 60
 - Ringing 59
- S**
- Safety notes 2
 - Saving a phone number 34
 - Screw for battery cover 5
 - Second call
 - Accepting 42, 43
 - Second connection (enquiry) 24
 - Send
 - Entry 37
 - List 37
 - Setting the date 63
 - Setting the language
 - Handset 16
 - System 17
 - Setting the menu view 67
 - Setting the ringer 59
 - Setting the screen picture 64
 - Setting the screensaver 64
 - Setting the time 63
 - Sorting phonebook entries 34
 - Sound pressure level, maximum 82
 - Speaker volume 57
 - Speakerphone key 5, 18
 - Speakerphone loudspeaker 5
 - Speakerphone mode 26
 - Speed dialling 50
 - Dialling 35
 - Star key 5, 18
 - Status LED 5
 - Storage 81
 - Switching between calling partners 40
 - System phonebook 30
- T**
- Talk key 5, 18
 - Technical data 82
 - Technical warning 72, 74, 76
 - Technical warning signal 72
 - Telephone volume 57
 - Toggling 40
 - Tone ringing loudspeaker 5
 - Tones 58, 59
 - Transfer 40
 - Transferring 40
 - Transferring a call 40
 - Troubleshooting 80
- U**
- USB 5
- V**
- vCard 33, 37
 - Converting prefixes 67
 - VIP 36
 - Voice Mail 39
 - VoiceMail 39
 - Volume 57
 - Volume key 5, 18