

OpenScape DECT Phone S5 on HiPath Cordless Office

User Guide

A31003-D1000-U102-2-7619

Our Quality and Environmental Management Systems are implemented according to the requirements of the ISO9001 and ISO14001 standards and are certified by an external certification company.

© Unify Software and Solutions GmbH & Co. KG 12/2015
Mies-van-der-Rohe-Str. 6, 80807 Munich/Germany

All rights reserved.

Reference No.: A31003-D1000-U102-2-7619

The information provided in this document contains merely general descriptions or characteristics of performance which in case of actual use do not always apply as described or which may change as a result of further development of the products. An obligation to provide the respective characteristics shall only exist if expressly agreed in the terms of contract.

Availability and technical specifications are subject to change without notice.

Unify, OpenScape, OpenStage and HiPath are registered trademarks of Unify Software and Solutions GmbH & Co. KG. All other company and product and service names are trademarks or registered trademarks of their respective holders.

Contents

Overview	6
Using the user guide effectively	7
Safety notes	8
Getting started	9
Installing the charging cradle	9
Connecting the charging cradle (if included)	9
Setting up the handset for use	9
Changing the display language	10
Setting the date and time	10
Connecting the headset	11
Connecting the USB data cable	11
Getting to know your telephone	12
Control key	12
Volume keys	12
Menu guidance	13
Entering text	13
Incoming calls	15
Directory	16
Opening the directory	16
Directory entries	16
Creating an entry	16
vCard	18
Calendar	19
Resource Directory	24
Bluetooth	25
Additional functions using the PC interface	27
Multiple handsets	29
Registering a handset to multiple base stations	29
Registering/de-registering the handset	29

Adjusting the handset settings	30
Display and keypad	30
Large font	30
Color scheme	30
Activating/deactivating auto answer	31
Changing the earpiece and speaker volume	31
Ringtones	31
Activating/deactivating the ringtone	32
Activating/deactivating advisory tones	32
Fast access to numbers and functions	32
Assigning a number to digit keys (quick dial)	32
Changing the handset PIN	33
Resetting the handset to the default settings	33
System	34
Own area code	34
Restoring the phone to default settings	34
Questions and answers	35
Manufacturer's advice	35
Authorization	35
Care	36
Contact with liquid	36
Technical data	37
General specifications	37
Character charts	38
Standard characters	38
Central Europe	38
Cyrillic	38
Greek	38
Turkish	38
Arabic	39
Display icons	40
Menu overview	41
System functions	43
Calling functions via the menu	43
Calling functions via codes	43
Functions and codes	44
Making calls to multiple parties	46
Consultation	46
Call waiting	47
Call waiting tone off/on	48
Disabling/enabling automatic call waiting	49
Override	50
Placing a call on hold	50

Transferring a call	51
Toggling (switching between calls)	52
Conducting a conference	53
Using the second call feature	55

Central directories (group directory) 56

System phonebook	56
Telephone database (LDAP).	57
System speed dialing	60
System speed dialing, individual	61

Team functions 63

Activating/deactivating group calls	63
Ringing group on.	65
UCD (Universal Call Distribution)	66
Mulap group (Multiple Line Application)	69

Message functions 71

Leaving a message/advisory message.	71
Sending/calling text messages	72
Answering a message or voicemail message.	73

More features 75

Callback	75
Answering or rejecting a call	76
Picking up a call in a call pickup group	76
Forwarding calls	77
Directed assignment of an MSN (multiple subscriber number).	78
Making calls using identification codes	78
Using the handset as a second line	79
Deactivating the phone number display	79
Directed call transfer	80
Activating/deactivating do not disturb	80
Call charge display	81
Tracing a call.	82
Entrance telephone.	82
Activating control relays	84
External call forwarding with a multiple subscriber number	86
Using night service	87
Using dual-tone multifrequency signaling	88
Parking/activating calls	89
System appointment function	90
Telephone lock code programming	91
Locking/unlocking the handset	92

Index 93




Overview



- 1 **Display**
- 2 **Status bar**
Icons display current settings and operating status of the phone
- 3 **Volume keys**
for receiver/headset, ringtone, handsfree mode, alarm clock and appointment reminders
- 4 **Display keys**
- 5 **End call key, On/Off key**
End call; cancel function;
Go back one level ▶ Press *briefly*
Return to idle status ▶ Press and *hold*
Switch the handset on/off (in idle status) ▶ Press and *hold*
- 6 **Message key**
Access to calls and message lists;
Flashes: new message or new call
- 7 **Profile key**
Switch between sound profiles ▶ Press *briefly*
Switch the microphone off/ ▶ Press and *hold* on
- 8 **Hash key**
Lock/unlock the keypad (in idle status) ▶ Press and *hold*
Toggles between upper/lowercase and digits (when inputting text): ▶ Press *briefly*
- 9 **USB connection socket**
For exchanging data between the handset and PC
- 10 **Microphone**
- 11 **Star key**
Open special characters table (when inputting text) ▶ Press *briefly*
Disable all ringtones ▶ Press and *hold*
- 12 **Headset port**
(2.5 mm jack)
- 13 **Recall key**
Insert a dialing pause (only for HiPath Cordless Office) ▶ Press *briefly*
- 14 **Talk key / Handsfree key**
Accept call; dial number displayed; switch between receiver and handsfree mode
Open redial list ▶ Press *briefly*
Start dialing ▶ Press and *hold*
- 15 **Control key / Menu key**

Using the user guide effectively

Icons






	Warnings that if not heeded can result in injury to persons or damage to devices or also give rise to costs.
	Prerequisite for being able to carry out the following action.
	Important information regarding function and appropriate handling.

Keys

Talk key / Handsfree key 	End call key 
Number / letter keys  to 	Star key  / Hash key 
Message key  / Recall key 	Control key rim  / center 
Microphone key 	

Display keys (→ p. 11), e.g. *OK, Back, Select, Change, Save*






Select/confirm functions















Confirm selection using	<i>OK</i>
Go back one level using	<i>Back</i>
Change to idle display using	Press  and <i>hold</i>
Switch function on/off using	<i>Change</i> on  / off 
Activate/deactivate option using	<i>Select</i> activated  / deactivated 


Procedures

Example: Activating/deactivating automatic call answering

Illustration in the user guide

- ▶  ▶ ... use  to select  *Settings* ▶ *OK* ▶  *Telephony* ▶ *OK* ▶ *Auto Answer* ▶ *Change* ( = on)

Step	Follow this procedure
▶ 	When in idle status, press the center of the control key. The main menu opens.
▶  	Use the control key  to navigate to the  icon.
▶ <i>OK</i>	Select <i>OK</i> to confirm (or press the center of the control key ). The submenu <i>Settings</i> opens.
	 Alternative icon for the submenu <i>Settings</i> on some handsets: 
▶  <i>Telephony</i>	Use the control key  to select the entry <i>Telephony</i> .
▶ <i>OK</i>	Select <i>OK</i> to confirm (or press the center of the control key ). The submenu <i>Telephony</i> opens.
▶ <i>Auto Answer</i>	The function to switch auto answer on/off appears as the first menu item.
▶ <i>Change</i>	Select <i>Change</i> to activate or deactivate (or press the center of the control key ). Function is activated  / deactivated  .

 Not all of the functions described in this user guide are available in all countries or from all network providers and systems.

Recent manuals in PDF format under
→ wiki.unify.com/wiki/OpenScape_DECT_Phone_S5



Safety notes

	<p>Be sure to read this user guide and the safety precautions before using your telephone. Explain their content and the potential hazards associated with using the device to your children.</p> <p>The device cannot be used in the event of a power failure. It is not possible either to make emergency calls.</p> <p>Emergency numbers also cannot be called when the keypad lock is activated.</p>
	Do not use the device in environments with a potential explosion hazard (e.g. paint shops).
	The devices are not splash-proof. For this reason, do not install them in a damp environment such as bathrooms or shower rooms.
	Use only the power adapter indicated on the device.
	Use only rechargeable batteries that correspond to the specification (see "Technical data"), as this could otherwise result in significant health risks and personal injury. Rechargeable batteries that are noticeably damaged must be replaced.
	If you give your handset to a third party, make sure you also give them the user guide.
	Remove faulty devices from use or have them repaired by our Service team, as they could interfere with other wireless services.
	Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to the hands or face. Send the device to our Service department to be repaired.
	<p>Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you may seriously and permanently impair your hearing.</p> <p>Your handset is compatible with the majority of digital hearing aids on the market. However, perfect function with all hearing aids cannot be guaranteed.</p> <p>The telephone may cause interference in analog hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.</p>
	<p>Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.</p> <p>If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your handset, see "Technical data").</p>
	To prevent loss of hearing, avoid listening at high volume over long periods of time.

Getting started

Contents of the package

- One *handset*,
- One battery cover,
- Two batteries,
- One charging cradle,
- One belt clip,
- One user guide.

Installing the charging cradle

The charging cradle is designed for operation in closed, dry rooms within a temperature range of +5 °C to +45 °C.

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out.




Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices.

Protect the telephone from moisture, dust, corrosive liquids and fumes.

Pay attention to the range of the base station. This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The range is reduced when *Maximum Range* is deactivated.

Connecting the charging cradle (if included)

- ▶ Connect the flat plug of the power adapter **1**.
- ▶ Plug the power adapter into the power socket **2**.

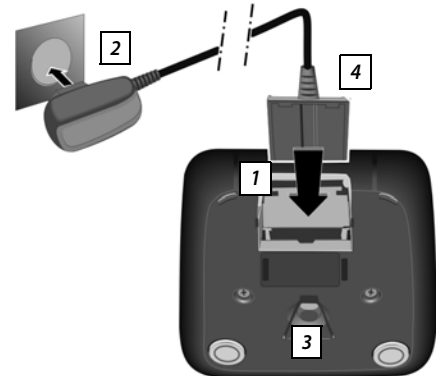

To remove the plug from the charging cradle again:

- ▶ Disconnect the power adapter from the mains power supply.
- ▶ Press the release button **3**.
- ▶ Pull out the plug **4**.

Setting up the handset for use

The display is protected by a plastic film. ▶ *Please remove the protective film!*

Inserting the batteries




Only use rechargeable batteries as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.





- ▶ Insert the batteries (for correct +/- direction, see diagram).
- ▶ Fit the battery cover from the top.
- ▶ Press the cover until it clicks into place.
- To re-open the battery cover:
 - ▶ Insert a fingernail behind the notch at the top of the cover and slide the cover downwards.

Charging the batteries

- ▶ Charge the batteries fully prior to first use in the base station/charging cradle. The batteries are fully charged when the power icon  disappears from the display.



 The handset may only be placed on the designated base station or charging cradle.

 The battery may heat up during charging. This is not dangerous. After a while, the charge capacity of the battery will decrease for technical reasons. Handsets contained in the package have already been registered to the base station. In the event that a handset is not registered however (indicated by "*Please register handset*"), please contact the administrator.

Attaching the belt clip





The handset has notches on each side for attaching the belt clip.


- Attaching the belt clip: ▶ Press the belt clip onto the back of the handset until the tabs on the clip engage in the notches.
- Removing the belt clip: ▶ Press the center of the belt clip firmly with your thumb. ▶ Press the nail of the thumb on your other hand up between the clip and the casing. ▶ Slide the clip upwards to remove.



Changing the display language




You can change the display language if the telephone has been set to an incomprehensible language.

- ▶ Press the middle of the control key .
- ▶ Press the keys **[9]** and **[5]** slowly in succession ... the language settings display appears and the set language (e.g. English) is highlighted ( = selected).
- ▶ Select a different language: ▶ Press the control key  until the desired language is marked in the display, e.g. French ▶ press the key on the right directly underneath the display to activate the language.
- ▶ To revert to idle status: ▶ Press the End call key  and *hold*





Setting the date and time


Set the date and time so that the date and time can be assigned correctly to incoming calls and to enable the alarm to be used.

- ▶ Press the display key **Time**
- or, if the date and time have already been set:
 - ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶ **Date/Time** ▶ **OK**




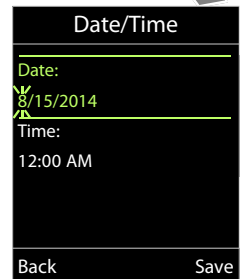
The active cursor position flashes ▶ ... use  to change the cursor position ▶ ... use  to switch between cursor positions

Enter date:

- ▶ ... use  to enter the day, month and year in 8-digit format, e.g. **[1][5][0][8][2][0][1][4]** for 15/08/2014.

Enter the time.

- ▶ ... use  to enter hours and minutes in 4-digit format, e.g. **[0][7][1][5]** for 07:15.



To save settings:

- ▶ Press the display key **Save** ... the message **Saved** is shown on the display and you hear a confirmation tone ... the telephone returns to the **Settings** menu item.

Connecting the headset


- ▶ Connect a headset with a 2.5 mm jack to the left side of the handset **1**.
The headset volume corresponds to the setting for the earpiece volume (→ p. 30).



Connecting the USB data cable

For exchanging data between the handset and PC:

- ▶ Connect the USB data cable with micro-USB plug into the USB socket at the bottom of the handset **1**.

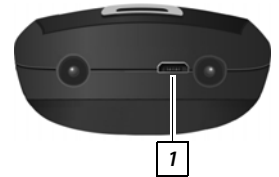


Connect the handset *directly* to the PC, *not* via a USB hub.

Getting to know your telephone


Switching the handset on/off

Switch on: ▶ When the handset is switched off, press the End call key  and **hold**

Switch off: ▶ When the telephone is in idle status, press the End call key  and **hold**

Locking/unlocking the keypad

The keypad lock prevents any accidental use of the telephone.

Lock/unlock the keypad: ▶  Press and **hold**





When a call is indicated on the handset, the keypad automatically unlocks and you can accept the call. It then locks again when the call is finished.

It is not possible to call emergency numbers either when the keypad lock is activated.

Control key



The control key enables you to navigate the menus and input fields and also to call up certain functions depending on the situation.


In the description below, the side of the control key (up, down, left, right) that you have to press in the different operating situations is marked in black, for example  for "press right on the control key" or  for "press the center of the control key".

In idle status

Open the directory

Open the main menu

Open the system menu

 Press **briefly**

 or 



In submenus, selection and entry fields

Confirm a function



During a conversation

Open the directory

Switch the microphone off/on

Select the left display
(only for HiPath Cordless Enterprise)

Adjust the loudspeaker volume for receiver and handsfree mode














Volume keys

Set volume for **receiver/headset, ringtone, handsfree mode** and indicating **appointments**: ▶ Press the volume keys  /  on the right side of the handset

Display keys

The display keys perform a range of functions depending on the operating situation.

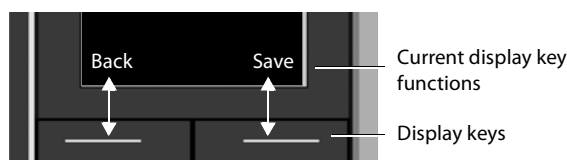

Display key icons → p. 39





The display keys have a function preset by default in idle status. Change the assignment: → p. 32

Menu guidance


The functions of your telephone are displayed on a menu that consists of several levels. Menu overview → p. 40.

Main menu

In idle status: ▶ Press the **center**  of the control key ▶ ... use the control key  or number keys 1 to 9 to select a submenu ▶ **OK**


The main menu functions are shown in the display as icons. The icon for the selected function is highlighted in color and the name of the associated function appears in the display header.

Example

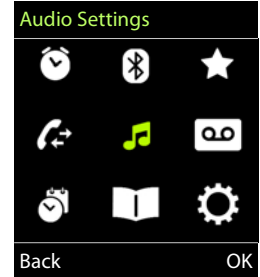

Submenus


The functions in the submenus are displayed as lists.

To access a function: ▶ ... use the control key  to select a function ▶ **OK**


Return to the previous menu level:

▶ Press the display key **Back**


or

▶ Press the End call key  **briefly**

Example

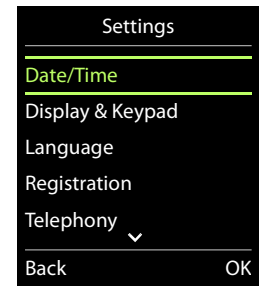

Returning to idle status



▶ Press the End call key  and **hold**





If no key is pressed, the display will **automatically** change to idle status after around 2 minutes.

Entering text




Input position




- ▶ Use  to select an input field. A field is activated when the cursor is flashing inside it.
- ▶ Use  to move the position of the cursor.


Correcting incorrect entries

- Delete **characters** to the left of the cursor: ▶  **Press briefly**
- Delete **words** to the left of the cursor: ▶  **Press and hold**

Entering letters/characters

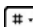Multiple letters and numbers are assigned to each key between  and  and the  key. As soon as a key is pressed, the possible characters are displayed at the bottom of the display. The selected character is highlighted.

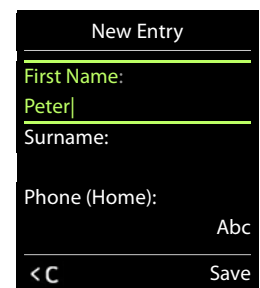


- Select letters/digits: ▶ Press the key **briefly** several times in succession
- Switch between lowercase, uppercase and number entry mode: ▶ Press the hash  key
When editing a directory entry, the first letter and each letter following a space are automatically in uppercase.
- Enter special characters: ▶ Press the star key  ▶ ... use  to navigate to the desired character ▶ **Insert**



The availability of special characters depends on the character set of the handset, → Character set tables p. 37.

Making calls

Making calls

- ▶ ... use  to enter a number ▶ press the Talk key  briefly
- Cancel dialing: ▶ Press the End call key 





When the display backlight is off (→ p. 29), the display lights up again the next time any key is pressed. **Digit keys** appear on the display for pre-dialing, **other keys** have no further function.

Dialing from the directory

- ▶ ... use  to open the directory ▶ ... use  to select an entry ▶ press the Talk key 

If multiple numbers are entered:




- ▶ ... use  to select a number ▶ press the Talk key  ... the number is dialed





For fast access (quick dial): Assign numbers from the directory to the digit or display keys (→ p. 31).

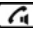Dialing from the redial list











The redial list contains the 20 numbers last dialed with the handset.

- ▶ Press the Talk key  briefly ... the redial list is opened ▶ ... use  to select an entry ▶ press the Talk key 

If a name is displayed:

- ▶ **View** ... the number is displayed ▶ ... use  to browse numbers if required ▶ ... when the desired number is reached, press the Talk key 

Managing entries in the redial list




- ▶ Press the Talk key  briefly ... the redial list is opened ▶ ... use  to select an entry ▶ **Options** ... possible options:
 - Copy an entry to the directory: ▶  **Copy to Directory** ▶ **OK**
 - Copy the number to the display:
 - ▶  **Display number** ▶ **OK** ▶ ... use  to amend or add numbers if necessary ... use  to save as an entry in the directory
 - Delete the selected entry: ▶  **Delete entry** ▶ **OK**
 - Delete all entries: ▶  **Delete all** ▶ **OK**
- Set automatic line seizure:
 - ▶  **Automatic Redial** ... The selected number is automatically dialed at fixed intervals (at least every 20 seconds). The handsfree key flashes; "open listening" is activated.
 - The participant answers: ▶ Press the Talk key  ... the function is terminated
 - The participant does not answer: The call is terminated after approx. 30 seconds. The function is terminated after pressing any key or after ten unsuccessful attempts.

Dialing in to extension systems (Delayed Extension Dialing)


When dialing in to a large corporate network (PBX systems), it is possible to dial an extension number directly after dialing the dial-up number.




The telephone number is saved in the directory as follows: Dial-in number, 2 stars, extension number (e.g. 1234567**128).


- ▶  Open directory ▶ ... use  to select an entry ▶ press the Talk key  ... the phone dials the number before the ** ... possible options:

Dial a saved extension: ▶ *Dial Ext.*


Dial a different extension: ▶ ... use  to enter a number ▶ *Dial Ext.*

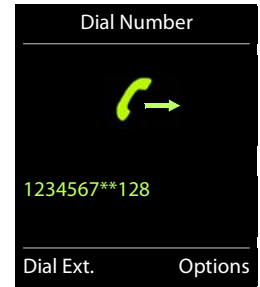

Incoming calls

An incoming call is indicated by ringing, by a display on the screen and by the flashing Talk key .

Accept a call:

- Press the Talk key or  or ▶ *Accept*
- If *Auto Answer* is activated (→ p. 30): ▶ Remove the handset from the charging cradle
- Accept a call on the bluetooth headset → p. 24

Switch off ringtone: ▶ *Silence* ... the call can be accepted for as long as it is shown on the display


Information about the caller

The caller's phone number is displayed. If the caller's phone number is saved in the directory, the name is displayed.



During a conversation

Handsfree mode

Activating/deactivating handsfree mode during a call and when establishing a connection:







- ▶ Press the handsfree key 

Placing the handset in the charging cradle during a call:

- ▶ Press the handsfree key  and hold down ▶ ... place the handset in the charging cradle hold ▶ ...  for a further 2 seconds

Call volume

Applies for the current mode (handsfree, receiver or headset):

- ▶ Press the volume keys  /  or  ▶ ... use  /  or  to set the volume ▶ *Save*




The setting is automatically saved after around 3 seconds, even if *Save* is not pressed.

Muting the microphone

When the microphone is switched off, callers will no longer hear you.





Switch the microphone on/off during a call:

- ▶ Press and hold the microphone key .

Directory

The local directory is unique to the handset. However, it is possible to send entries to other handsets (→ p. 17).






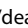
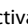



Opening the directory

- ▶ Press  briefly in idle status
- or
- ▶  ▶ ... use  to select  **Directory** ▶ **OK**


Directory entries

- Number of entries: up to 500
- Information: First name and surname, up to three telephone numbers, e-mail address, anniversary with alert, VIP ringtone with VIP icon, CLIP picture
- Length of the entries: Numbers: max. 32 digits.
First name, surname: max. 16 characters
E-mail address: max. 64 characters.

Creating an entry

- ▶  ▶  <New Entry> ▶ **OK** ▶ ... use  to switch between the entry fields and enter data for the entry:.
- Names / numbers:**
- ▶ ... use  to enter first names and/or surnames, at least one number (personal, office or mobile) and an e-mail address, if applicable
- Anniversary:**
- ▶ ... use  to activate/deactivate **Anniversary** ▶ ... use  to enter the date and time ▶ ... use  to select the type of alert (**Visual only** or a ringtone)
- Caller Melody (VIP):**
- ▶ ... use  to select the ringtone that will indicate a call from the participant ... if a **Caller Melody (VIP)** has been assigned, the entry will appear in the directory with the  icon.
- Caller Picture:**
- ▶ ... use  to select a picture that is to be displayed during a call from the participant (→ Resource Directory, p. 23).
- Save entry: ▶ **Save**

Example

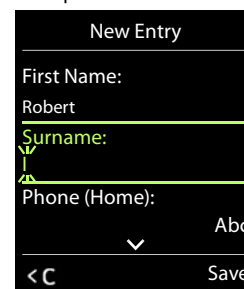

New Entry

First Name:
Robert

Surname:
v

Phone (Home):
Abc

< C Save




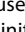
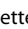




An entry is only valid if it contains at least one number.






For **Caller Melody (VIP)** and **Caller Picture**: the telephone number of the caller must be supplied.




Searching for/selecting a directory entry



- ▶  ▶ ... use  to browse searched names
 - or
 - ▶  ▶ ... use  to enter initial letters (max. 8 letters) ... the display jumps to the first name starting with these initial letters ▶ ... use  to continue browsing to the desired entry, if needed
- Scroll through directory: ▶  ▶  Press and **hold**

Displaying/changing an entry

- ▶  ▶ ... use  to select an entry ▶ **View** ▶ ... use  to select the field to be changed ▶ **Edit**
- or
- ▶  ▶ ... use  to select an entry ▶ **Options** ▶ **Edit entry** ▶ **OK**



Deleting entries

Delete the *selected* entry: ▶  ▶ ... use  to select an entry ▶ *Options* ▶  *Delete entry* ▶ *OK*

Delete *all* entries: ▶  ▶ *Options* ▶  *Delete all* ▶ *OK*

Setting the order of the directory entries

Directory entries can be sorted by first name or surname.

▶  ▶ *Options* ▶  *Sort by Surname / Sort by First Name*

If no name was entered, the default telephone number is shown in the surname field. These entries appear at the beginning of the list, regardless of how the entries are sorted.

The sort order is as follows:



Space | Digits (0-9) | Letters (alphabetically) | Other characters.

Displaying the number of entries available in the directory


▶  ▶ *Options* ▶  *Available Memory* ▶ *OK*

Copying number to the directory



The number is displayed or highlighted.

- When dialing a number:
 - ▶ Press the display key .
- From a list, e.g. the call list or the redial list.
 - ▶ **Options** ▶  **Copy to Directory** ▶ **OK**.

Create a new entry:

- ▶ **<New Entry>** ▶ **OK** ▶ ... use  to select a number type ▶ **OK** ▶ complete entry ▶ **Save**

Add number to an existing entry:

- ▶ ... use  to select an entry ▶ **OK** ▶ ... use  to select a number type ▶ **OK** ... the number is entered or a prompt to overwrite an existing number is displayed ▶ ... if required, answer the prompt with **Yes/No** ▶ **Save**

vCard



An external call interrupts the transfer.

Caller pictures and sounds are not transferred. Only the date is transferred for an anniversary.

Both handsets support vCards:

- No entry with the name is available: a new entry is created.
- An entry with the name is already available: the entry is expanded to include the new numbers. If the entry contains more numbers than allowed by the recipient handset, a second entry is created with the same name.

The recipient handset does not support vCards:

A separate entry is created and sent for each number.

The sending handset does not support vCards:

A new entry is created on the receiving handset and the transferred number is added to the **Phone (Home)** field. If an entry with this number already exists, the copied number is discarded.






Copying a vCard using Bluetooth

Copy directory entries in vCard format, for example to exchange entries with a mobile phone.




Bluetooth mode is activated (→ p. 24)

The other handset/mobile phone supports Bluetooth.

- ▶  ▶ ... use  to select an entry if needed ▶ **Options** ▶  **Copy Entry / Copy All** ▶  **vCard via Bluetooth** ... the **Known Devices** list is displayed (→ p. 25) ▶ ... use  to select a device ▶ **OK**

Receiving a vCard using Bluetooth

If a device in the **Known Devices** list (→ p. 25) sends a vCard to your handset, a directory entry is automatically created and a message is shown on the display.


If the sending device is not in the list: ▶ ... use  to enter the PIN of the **sending** Bluetooth device ▶ **OK** ... the copied vCard is available as a directory entry

Calendar

You can remind yourself of up to **30 appointments**.

The current day is outlined in white in the calendar, while numbers are highlighted in color on days with appointments. When a day is selected, it will be outlined in color.

Assign calendar call-up to a display key → p. 32.

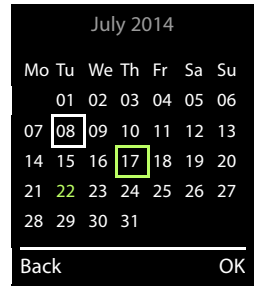

Saving appointments to the calendar




- ▶ ▶ ... use to select **Organiser** ▶ **OK** ▶ **Calendar** ▶ **OK** ▶ ... use to select the desired day ▶ **OK** ... then
 - Switch on/off: ▶ **Activation:** ... use to select **On** or **Off**
 - Enter date: ▶ **Date** ... the selected date is set by default ▶ ... use to enter a new date
 - Enter the time: ▶ **Time** ▶ ... use to enter the hours and minutes of the appointment
 - Set the name: ▶ **Text** ▶ ... use to enter a description of the appointment (e.g. evening meal, meeting)
 - Set alarm tone:
 - ▶ **Signal** ▶ ... use to select the melody of the reminder alarm or deactivate acoustic signaling
 - Enter information for the appointment:
 - ▶ ... use to select **Date**, **Time**, **Text** and **Signal** in succession ▶ ... use or in each case to set the value ▶ **Save**
 - Save appointment: ▶ **Save**



Notification of appointments/anniversaries

Anniversaries are transferred from the directory and displayed as an appointment. An appointment/anniversary is displayed in idle status and the selected ringtone plays for 60 seconds as a notification.

- Acknowledge and stop the reminder: ▶ Press the display key **OFF**
- Modify the ringtone volume permanently: ▶ ... Press the volume keys / during the reminder



Displaying missed (unacknowledged) appointments/anniversaries

The following appointments and anniversaries are saved in the **Missed Alarms** list:

- The appointment/anniversary call was not acknowledged.
- The appointment/anniversary was notified during a call.
- The handset was switched off at the time of the appointment/anniversary.

The last 10 entries are stored. The icon and the number of new entries are shown on the display. The most recent entry appears at the top of the list.

Opening the list

- ▶ Press the message key ▶ **Missed Alarms:** ▶ **OK** ▶ ... use to browse through the list of any appointments





or

- ▶ ▶ ... use to select **Organiser** ▶ **OK** ▶ **Missed Alarms** ▶ **OK**

Every entry is displayed with number or name, date and time. The most recent entry appears at the top of the list.

- Delete an appointment/anniversary: ▶ **Delete**

Displaying/changing/deleting stored appointments

▶  ▶ ... use  to select  **Organiser** ▶ **OK** ▶  **Calendar** ▶ **OK** ▶ ... use  to select the day ▶ **OK** ... the appointment list is displayed ▶ ... use  to select the date ... possible options:

Display appointment details:

▶ **View** ... The appointment settings are displayed


Change ▶ **View** ▶ **Edit**

appointment:

or ▶ **Options** ▶  **Edit entry** ▶ **OK**


Activate/deactivate appointment:

▶ **Options** ▶  **Activate/Deactivate** ▶ **OK**

Delete ▶ **Options** ▶  **Delete entry** ▶ **OK**

appointment:

Delete all appointments for a day:

▶ **Options** ▶  **Delete all Appoints.** ▶ **OK** ▶ **Yes**

Alarm clock



The date and time have been set.

Activating/deactivating the alarm clock and setting the wake-up time

- ▶ ▶ ... use to select **Alarm Clock** ▶ **OK** ... then
 - Switch on/off: ▶ **Activation:** ... use to select **On** or **Off**
 - Set wake-up time: ▶ **Time** ▶ ... use to enter hours and minutes
 - Set days: ▶ **Occurrence** ▶ ... use to switch between **Monday-Friday** and **Daily**
 - Set the volume: ▶ **Volume** ▶ ... use to set the volume in 5 increments or select **crescendo** (increasing volume)
 - Set alarm: ▶ **Melody** ▶ ... use to select a ringtone for the alarm
 - Enter wake-up data: ▶ ... use to enter **Time**, **Occurrence**, **Volume** and **Melody** in succession ▶ ... use or in each case to set the value ▶ **Save**
 - Save setting: ▶ **Save**

The icon and the wake-up time are displayed on the idle display when the alarm clock is activated.

Alarm

An alarm is shown on the display and indicated by the selected ringtone melody. The alarm sounds for 60 seconds. It is then repeated after 5 minutes if no key is pressed. The alarm is disabled for 24 hours after the second retry.



During a call, the alarm is only indicated by a short tone.

Switching off / repeating the alarm after an interval (snooze mode)

Deactivate the alarm: ▶ **OFF**

Repeat the alarm (snooze mode): ▶ **Snooze** Press or any key ... the alarm is switched off and repeated after 5 minutes.

Protecting against unwanted calls

Time control for external calls




The date and time have been set.

Enter a time period during which the handset is not to ring to indicate external calls, for example during the night.

- ▶ ▶ ... use to select **Audio Settings** ▶ **Ringtones (Handset)** ▶ **OK** ▶ **Time Control** ▶ **OK** ▶ ... then
- Switch on/off: ▶ use to select **On** or **Off**
- Enter the time: ▶ use to switch between **Suspend ring. from** and **Suspend ring. until** ▶ ... use to enter the start and end of the period in 4-digit format
- Save: ▶ **Save**

Example

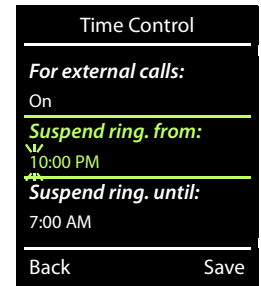

Time control only applies to the handset for which the setting is configured.

The telephone will continue to ring for numbers that have been assigned to a VIP group in the directory.

Switching off the ringtone when in the charging cradle

The handset will not ring when placed in the charging cradle. A call is only indicated on the display.

- ▶ ▶ ... use to select **Audio Settings** ▶ **Ringtones (Handset)** ▶ **OK** ▶ **Silent Charging** ▶ **Change** (= ringtone is switched off when in charging cradle)

Other functions

The phone also offers other functions:

- Resource Directory for saving sounds for ringtones and images that can be used as caller images (CLIP pictures) or as screensavers
- Additional functions via the PC interface with ***Gigaset QuickSync***: sync handset phonebook with Outlook, download images and sounds from the computer to the handset, update the firmware

Resource Directory

Sounds for ringtones and images that can be used as caller images (CLIP pictures) or as screensavers are saved in the handset's resource directory. A range of monophonic and polyphonic sounds and pictures have been pre-set but further images and sounds can be downloaded using a PC (→ p. 26).

Media types:

Type	Format
Sound Ringtones Monophonic Polyphonic Imported sounds	Internal Internal Internal WMA, MP3, WAV
Picture CLIP picture Screensaver	BMP, JPG, GIF 128 x 86 pixels 128 x 160 pixels

If there is not enough memory available, you must first delete one or more pictures or sounds before others can be saved.

Managing CLIP pictures/sounds






- ▶ ▶ ... use to select **Additional Features** ▶ **OK** ▶ **Resource Directory** ▶ **OK** ... possible options:
 - View CLIP picture: ▶ **Caller Pictures** ▶ **OK** ▶ ... use to select picture ▶ **View** ... the selected picture is displayed
 - Play sound: ▶ **Sounds** ▶ **OK** ▶ ... use to select sound ... the selected sound is played
 - Set volume: ▶ **Options** ▶ **Volume** ▶ **OK** ▶ ... use to select the volume ▶ **Save**
 - Rename picture/sound:
 - ▶ select **Caller Pictures / Sounds** ▶ **OK** ▶ ... use to select sound/image ▶ **Options** ▶ **Rename** ▶ ... use to delete name, use to enter a new name ▶ **Save** ... the entry is saved with the new name
 - Delete picture/sound: ▶ Select **Caller Pictures / Sounds** ▶ **OK** ▶ ... use to select sound/image ▶ **Options** ▶ **Delete entry** ... the selected entry is deleted



The relevant options are not available if a picture/sound cannot be deleted.

Checking the memory

Display the available memory for screensavers and CLIP pictures.

- ▶  ▶ ... use  to select  **Additional Features** ▶ **OK** ▶  **Resource Directory** ▶ **OK** ▶  **Capacity** ▶ **OK** ... the percentage of available memory is displayed

Bluetooth

The handset is able to use Bluetooth™ to communicate wirelessly with other devices that also use this technology, for example for exchanging directory entries.



Bluetooth is activated and the devices have been registered to the handset.

The following devices can be connected:

- A Bluetooth headset



The headset features the **Headset** or **Handsfree Profile**. If both profiles are available, the handsfree profile is used to communicate.






It may take 5 seconds to establish a connection, whether a call is accepted using the headset or transferred to the headset, or a call is made from the headset.


- Up to 5 data devices (PCs, PDAs or mobile telephones) for the transmission of address book entries as a vCard or for the exchange of data with the computer (→ S. 26).

To use the phone numbers, dialing codes (international and local area code) must be saved to the telephone.

Operating Bluetooth devices → User guides for devices

Activating/deactivating Bluetooth mode

- ▶  ▶ ... use  to select  **Bluetooth** ▶ **OK** ▶  **Activation** ▶ **Change** (= activated)
If the local area code is still not saved: ▶ ... use  to enter the local area code ▶ **OK** (→ p. 33)

When in idle status, the activated Bluetooth mode is indicated on the handset by the  icon.

Registering Bluetooth devices

The distance between the handset in Bluetooth mode and the activated Bluetooth device (headset or data device) should be no more than 10 m.



The registration of a headset overwrites a previously registered headset.

If a headset is to be registered that is already registered with a different device, this connection must be deactivated before registering.

- ▶ ▶ ... use to select **Bluetooth** ▶ **OK** ▶ **Search for Headset / Search Data Device** ▶ **OK** ... the search starts (may take up to 30 seconds) ... the names of found devices are displayed ... possible options:
 - Register device: ▶ **Options** ▶ **Trust Device** ▶ **OK** ▶ ... use to enter the PIN of the Bluetooth device to be registered ▶ **OK** ... the device is added to the list of known devices
 - Display information about a device:
 - ▶ ... use to select a device, if necessary ▶ **View** ... the device name and device address are displayed
 - Repeat search: ▶ **Options** ▶ **Repeat Search** ▶ **OK**
 - Cancel search: ▶ **Cancel**

Editing the list of known (trusted) devices

Opening the list

- ▶ ▶ ... use to select **Bluetooth** ▶ **OK** ▶ **Known Devices** ▶ **OK** ... the known devices are listed, an icon indicates the type of device
 - Bluetooth headset
 - Bluetooth data device

If a device is connected, the corresponding icon is shown in the display header instead of .

Editing entries

- ▶ ▶ ... use to select **Bluetooth** ▶ **OK** ▶ **Known Devices** ▶ **OK** ▶ ... use to select an entry ... possible options:
 - View an entry: ▶ **View** ... the device name and device address are displayed ▶ To go back, press **OK**
 - De-register a Bluetooth device:
 - ▶ **Options** ▶ **Delete entry** ▶ **OK**
 - Edit name: ▶ **Options** ▶ **Edit Name** ▶ **OK** ▶ ... use to edit the name ▶ **Save**



If an active Bluetooth device is de-registered, it may try to re-connect as a "non-registered device".

Rejecting/accepting a non-registered Bluetooth device

If a Bluetooth device that is not registered in the list of known devices tries to connect with the handset, you will be prompted on the display to enter the PIN for the Bluetooth device (bonding).

- Reject: ▶ Press the End call key **briefly**.
- Accept: ▶ ... use to enter the PIN of the Bluetooth device to be accepted ▶ **OK** ▶ ... wait for PIN confirmation ... then
 - Add the device to the list of known devices: ▶ **Yes**
 - Use the device temporarily: ▶ **No** ... the Bluetooth connection can be used as long as the device is located within the transmission range or until it is switched off

Changing the Bluetooth name of the handset

The handset is shown by this name on another Bluetooth device.

- ▶ ▶ ... use to select **Bluetooth** ▶ **OK** ▶ **Own Device** ▶ **OK** ... the name and the device address are shown ▶ **Change** ▶ ... use to change the name ▶ **Save**

Additional functions using the PC interface



The *Gigaset QuickSync* program has been installed on the computer.
Free to download at → wiki.unify.com/wiki/OpenScope_DECT_Phone_S5

QuickSync functions:

- Sync the handset's directory with Outlook
 - Upload CLIP pictures (.bmp) from the computer to the handset
 - Upload pictures (.bmp) as screensavers from the computer to the handset
 - Upload sounds (ringtone melodies) from the computer to the handset
 - Update the firmware
- ▶ Connecting the handset to the computer via Bluetooth (→ p. 24) or via a USB data cable (→ p. 10).



Connect the handset *directly* to the PC, *not* via a USB hub.

Transferring data



Data transfer using Bluetooth:

- The computer has Bluetooth capability.
- A USB data cable is not plugged in. If a USB data cable is plugged in during an existing Bluetooth connection, the Bluetooth connection is interrupted.

- ▶ Launch the *Gigaset QuickSync* program on the computer.

The message *Data transfer in progress* is shown on the display while data is being transferred between the handset and PC. During this time, it is not possible to enter any data using the keypad and incoming calls are ignored.

Carrying out a firmware update



- ▶ Connect the telephone and PC using a *USB data cable* (→ p. 10) Launch ▶ *Gigaset QuickSync* ▶ Establish the connection to the handset
- ▶ Start the firmware update in *Gigaset QuickSync* . . . Information about this can be found in the *Gigaset QuickSync* help

The update process may take up to 10 minutes (not including the download time).



Do not interrupt the process and do not remove the USB data cable.

The data is first downloaded from the online update server. The amount of time this takes depends on the speed of the Internet connection.







The display on your phone is switched off and the Message key  and the Talk key  start flashing. Once the update is complete, your phone will automatically restart.

Procedure in the event of an error


If the update procedure fails or the phone does not work properly following the update, repeat the update procedure:

- ▶ End the "*Gigaset QuickSync*" program on the PC ▶ Remove the USB data cable from the phone ▶ Remove the battery (→ p. 8) ▶ Replace the battery
- ▶ Carry out the firmware update again as described above

If the update procedure fails several times or you can no longer connect to the PC, carry out an *Emergency Update*:

- ▶ End the "*Gigaset QuickSync*" program on the PC ▶ Remove the USB data cable from the phone ▶ Remove the battery (→ p. 8)
- ▶ Press and hold keys  and  at the same time with the forefinger and middle finger ▶ Replace the battery
- ▶ Release keys  and  . . . the Message key  and the Talk key  flash alternately
- ▶ Carry out the firmware update as described above







Always save pictures and sounds uploaded onto the handset on the PC also, as they are deleted during an *Emergency Update*.

Multiple handsets

Registering a handset to multiple base stations

The handset can be registered to up to four base stations. The active base station is the base station to which the handset was last registered. The other base stations remain saved in the list of available base stations.

▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **Registration** ▶ **OK** ▶ **Select Base** ▶ **OK** ... possible options:

Change active base station: ▶ ... use  to select the base station or **Best Base** ▶ **Select** ( = selected)

Best Base: The handset chooses the base station with the best reception as soon as it loses connection to the current base station.

Change name of a base station:

▶ ... use  to select a base station ▶ **Select** ( = selected) ▶ **Name** ▶ change name ▶ **Save**

Registering/de-registering the handset

A handset can be registered to up to four base stations (systems).





Please contact your service engineer concerning registering and de-registering handsets.

Adjusting the handset settings

Changing the language

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Language** ▶ OK ▶ ... use  to select the language ▶ **Select** ( = selected)










If the handset has been changed to an incomprehensible language:

- ▶  ▶ Press the keys **9** **5** *slowly* in succession ▶ ... use  to select the correct language ▶ press the right display key


Display and keypad

Screensaver

A dialog or analog clock, Info Services and a range of pictures can be selected to be displayed as a screensaver when in idle status.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Screensaver** ▶ **Edit** ( = on) ... then
 - Switch on/off: ▶ **Activation:** ... use  to select **On** or **Off**
 - Select screensaver:
 - ▶  **Selection** ▶ ... use  to select a screensaver (**Digital Clock / Analog Clock** / <Pictures > / **Slideshow**)
 - View screensaver: ▶ **View**
 - Save selection: ▶ **Save**

The screensaver is activated approx. 10 seconds after the display has changed to idle status.

 All pictures from the **Screensaver** folder of the **Resource Directory** (→ p. 23) are available for selection.

End screensaver

- ▶ Press the End call key  *briefly* ... the idle display appears








Large font

You can increase the font size of text and icons in call lists and in the directory in order to improve legibility. Only one entry is shown in the display and names are abbreviated if necessary.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Large Font** ▶ **Edit** ( = on)

Color scheme









The display may appear in a range of color combinations.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Colour Schemes** ▶ OK ▶ ... use  to select the desired color scheme ▶ **Select** ( = selected)

Display backlight

The display backlight always illuminates when the handset is taken out of the base station/charging cradle or a key is pressed. Any **digit keys** that are pressed appear on the display for pre-dialing.

Switch the display backlight on/off when in idle status:

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Display Backlight** ▶ OK ... then
 - Backlight in the charging cradle:
 - ▶ **In Charger:** ... use  to select **On** or **Off**
 - Backlight when not in the charging cradle:
 - ▶  **Out of Charger** ▶ ... use  to select **On** or **Off**
 - Save selection: ▶ **Save**



The handset's standby time may be significantly reduced if the display backlight is activated.

Switching the keypad illumination on/off

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Display & Keypad** ▶ OK ▶ **Key Illumination** ▶ **Change** (= on)

Activating/deactivating automatic keypad lock

Automatically lock the keypad when the handset has been in idle status for around 15 seconds.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Display & Keypad** ▶ OK ▶ **Auto Keypadlock** ▶ **Change** (= on)

Activating/deactivating auto answer

When set to auto answer, the handset accepts an incoming call as soon as it is removed from the charging cradle.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Telephony** ▶ OK ▶ **Auto Answer** ▶ **Change** (= on)

Regardless of the **Auto Answer** setting, the connection ends as soon as you place the handset back in the charging cradle. Exception: Press and hold the handsfree key for a further 2 seconds while placing the handset in the charging cradle.

Changing the earpiece and speaker volume

You can set the volume of the earpiece and speaker at 5 levels independently of each other.

During a conversation

- ▶ Press the volume keys / on the right side of the handset
- or
- ▶ **Handset Volume** ▶ ... use to select the volume ▶ **Save** ... the setting is saved



The setting will be saved automatically after approx. 3 seconds without saving.

In idle status


- ▶ ▶ ... use to select **Audio Settings** ▶ OK ▶ **Handset Volume** ▶ OK ... then
- For the earpiece: ▶ **Earpiece:** ... use to set the volume
- For the speaker: ▶ **Speaker** ▶ ... use to set the volume
- Save setting: ▶ **Save**

Ringtones

Ringtone volume

- ▶ ▶ ... use **Audio Settings** ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶ **Volume** ▶ OK ▶ ... use to select **For internal calls and alarms** or **External Calls** ▶ ... use to set the volume in 5 increments or in crescendo mode (increasing volume) ▶ **Save**

Example

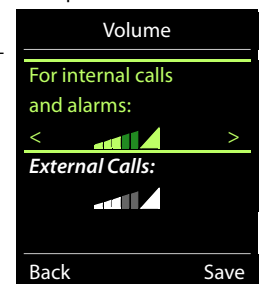

When the telephone rings, you can permanently change the ringtone volume using volume keys (louder) or (quieter).

Ringtone melody

Set a variety of ringtones for internal and external calls.

- ▶ ▶ ... use **Audio Settings** ▶ **OK** ▶ **Ringtones (Handset)** ▶ **OK** ▶ **Melodies** ▶ **OK** ▶ ... use to select the connection ▶ ... use to select the ringtone/melody in each case ▶ **Save**

Activating/deactivating the ringtone

Deactivating the ringtone permanently

- ▶ Press and hold the key. The icon appears in the status bar

Activating the ringtone permanently

- ▶ Press and hold the key.

Deactivating the ringtone for the current call

- ▶ **Silence** Press Silence or the End call key

Activating/deactivating the vibration alarm

Incoming calls and other messages are indicated by a vibration.

- ▶ ▶ ... use **Audio Settings** ▶ **OK** ▶ **Silent Alert** ▶ **Change** = on)

Activating/deactivating advisory tones

The handset notifies acoustically about different activities and statuses. These advisory tones can be activated/deactivated independently of each other.

- ▶ ▶ ... use **Audio Settings** ▶ **OK** ▶ **Advisory Tones** ▶ **OK** ... then
 - Tone when keys are pressed: ▶ **Key Tones:** ... use to select **On** or **Off**
 - Confirmation/error tone after making entries, advisory tone when a new message has been received:
 - ▶ **Confirmation** ▶ ... use to select **On** or **Off**
 - Warning tone when there are fewer than 10 minutes of talktime remaining (every 60 seconds):
 - ▶ **Battery** ▶ ... use to select **On** or **Off**
 - Warning tone when the handset is moved out of range of the base station:
 - ▶ **Out of Range:** ... use to select **On** or **Off**
 - Save setting: ▶ **Save**

Fast access to numbers and functions

Number keys: The keys and to can each be assigned a **number from the directory**.

Display keys: The left and right display keys have a **function** preset by default, but the keys can be re-assigned.

The number is then dialed or the function started by simply pressing a key.

Assigning a number to digit keys (quick dial)

You have to assign a number to the digit key.

- ▶ Press and **hold** the digit key
- or
- ▶ Press the digit key **briefly** ▶ Press the display key **Quick Dial**

The directory opens.


- ▶ ... use to select an entry ▶ **OK** ▶ ... use to select a number if required ▶ **OK** ... the entry is saved to the digit key

If you delete or edit the entry in the directory at a later date, this will not affect the assignment to the number key.


Dialing a number


- ▶ Press and **hold** the digit key ... the number is dialed immediately
- or
- ▶ Press the digit key **briefly** ... the number/name (possibly in abbreviated form) is shown on the left display key ▶ ... press the display key ... the number is dialed

Changing the digit key assignment

- ▶ Press the digit key **briefly** ▶ **Change** ... the directory is opened ... possible options:
 - Change the assignment: ▶ ... use  to select an entry ▶ **OK** ▶ ... select a number if required ▶ **OK**
 - Delete the assignment: ▶ **Clear Key**

Assigning display keys, changing assignments

- ▶ Press and **hold** the left or right display key in idle status ... the list of possible key assignments is opened ▶ ... use  to select a function ▶ **OK** ... possible options:

Quick Dial	Assign a number from the directory to the display key (→ p. 31)
Alarm Clock	Set and activate/deactivate the alarm clock (→ p. 20)
Calendar	Open the calendar (→ p. 18)
Bluetooth	Open the Bluetooth menu (→ p. 24)
Redial	Show the redial list (→ p. 13)
More Functions...	▶ OK ▶ ... use  to select other function
Call Lists	Show the call list (→ p. 54)
Call Divert	Activate/deactivate call forwarding (→ p. 77)

Starting a function

With the telephone in idle status: ▶ Press the display key **briefly** ... the assigned function is executed

Changing the handset PIN

The handset is PIN-protected to prevent unauthorized use (default setting: **0000**). Each time you turn on the handset, the PIN is requested.

Change the handset's 4-digit PIN (default setting: **0000**):

- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **System** ▶ **OK** ▶  **Handset PIN** ▶ **OK** ▶ ... use  to enter the current handset PIN ▶ **OK** ▶ ... use  to enter the new handset PIN ▶ **OK**

Resetting the handset to the default settings

Reset any individual settings and changes that you have made.

- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **System** ▶ **OK** ▶  **Handset Reset** ▶ **OK** ▶ **Yes** ... the handset's settings are reset

The following settings are **not** affected by the reset:

- Registration of the handset to the base station
- Date and time
- Directory entries and call lists
- SMS lists

System

Date and time

To ensure you have the correct time for incoming calls and to use the alarm clock and calendar, for example, the date and time have to be set.

If the date and time have not yet been set on the handset, the display key *Time* appears.

- ▶ Press the display key *Time*

or

- ▶ ▶ ... use to select **Settings** ▶ **OK** ▶ **Date/Time** ▶ **OK** ... then
 - Set the date: ▶ **Date:** ... use to enter the day, month and year in 8-digit format.
e.g. 1 4 0 1 2 0 1 4 for 14/01/2014
 - Set the time: ▶ **Time** ▶ ... use to enter hours and minutes in 4-digit format
e.g. 0 7 1 5 for 07:15
 - Save setting: ▶ **Save**

Own area code

The area code (international and local area code) must be saved on the phone in order to transfer phone numbers (e.g. in vCards)


Some of these numbers are already preset.

- ▶ ▶ ... use to select **Settings** ▶ **OK** ▶ **Telephony** ▶ **OK** ▶ **Area Codes** ▶ **OK** ▶ Check (pre-)set area code

Edit the number:

- ▶ ... use to select/switch entry field ▶ ... use to change entry position ▶ ... delete digit if appropriate ▶ ... use to enter digit ▶ **Save**

Example

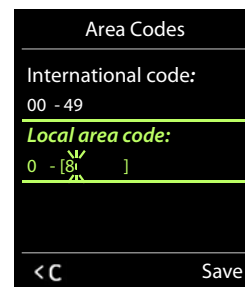

Restoring the phone to default settings


When the settings are reset

- the date and time are retained,
- handsets are still registered,
- the system PIN is retained,
- **Maximum Range** is activated and **No Radiation** is deactivated.

- ▶ ▶ ... use to select **Settings** ▶ **OK** ▶ **System** ▶ **OK** ▶ **Base Reset** ▶ **OK** ▶ ... use to enter the system PIN ▶ **OK** ▶ **Yes** ... the base station is restarted. The restart takes around 10 seconds.

Questions and answers

The display is blank.

- The handset is not switched on. ▶  Press and **hold**
- The battery is empty. ▶ Charge the battery or replace it (→ p. 8)

"No Base" flashes on the display.

- The handset is outside the range of the base. ▶ Reduce the distance between the handset and base

"Please register handset" flashes on the display.

- The handset is not yet registered or was de-registered when another handset was registered. ▶ Register the handset again

The handset does not ring.

- The ringtone is deactivated. ▶ Activate the ringtone (→ p. 31)
- The phone does not ring during a specific period or for certain numbers.
 - ▶ Check the time control for external calls (→ p. 21)

The other party cannot hear you.

- The handset is "muted". ▶ Reactivate the microphone (→ p. 14)

The caller's number is not displayed.

- **Calling Line Identification (CLI)** is not enabled for the caller. ▶ The *caller* should ask the network provider to enable Calling Line Identification (CLI).
- **Calling Line Identification Presentation (CLIP)** is not supported or enabled by the network provider. ▶ Ask the network provider to enable Calling Line Identification Presentation (CLIP).
- The phone is connected via a PABX or a router with an integrated PABX (gateway) that does not forward all information.
 - ▶ Reset the system: Pull out the power plug briefly. Reinsert the plug and wait until the device restarts.
 - ▶ Check the settings on the PABX and activate phone number display if necessary. To do this, search for terms such as CLIP, calling line identification, telephone number identification, caller ID, ... in the system user guide or ask the system manufacturer.

You hear an error tone when keying in (descending tone sequence).

- Action has failed/invalid input. ▶ Repeat the process. Read the display and refer to the user guide if necessary.

No time is specified for a message in the call list.

- The date/time are not set. ▶ Set the date and time.

Registration or connection problems with a Bluetooth headset.

- ▶ Reset the Bluetooth headset (see the user guide for the headset).
- ▶ Delete the registration data on the handset by de-registering the device (→ p. 24).
- ▶ Repeat the registration process (→ p. 25).

Manufacturer's advice

Authorization

Depending on the variant, this device is intended for analog phone lines in the German/Luxembourg or Austrian network (see device label).

Country-specific requirements have been taken into consideration.

We, Unify Software and Solutions GmbH & Co. KG, declare that this device meets the essential requirements and other regulations laid down in Directive 1999/5/EC.

The EU declaration of conformity for your country under 1999/5/EC can be found at:

wiki.unify.com/wiki/Declarations_of_Conformity#Cordless_Phones.

This declaration may also be available in the files "International Declarations of Conformity" or "European Declarations of Conformity" in some cases.

Therefore please also read these files.

CE 0682

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority. Dispose of batteries in the green boxes designated as "common collection system for batteries" at specialist retailers.

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.



This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local authority refuse center or waste disposal service.

Care

Always use a **damp** or antistatic cloth to clean the device. Do not use solvents or microfiber cloths.

Never use a dry cloth as this can cause a static charge.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Not all substances have been tested due to the wide variety of chemical products available on the market.

Impairments to high-gloss finishes can be carefully removed using display polishes for mobile phones.

Contact with liquid

If the device comes into contact with liquid:

- 1 Disconnect it from the power supply.**
- 2 Remove the batteries and leave the battery compartment open.**
- Allow the liquid to drain from the device.
- Dab all components dry.
- Place the handset in a dry, warm place for **at least 72 hours** with the battery compartment open and keypad (if applicable) facing down (**not** in a microwave, oven, etc..).
- 6 Do not switch on the device again until it is completely dry.**

When it has fully dried out, you will usually be able to use it again.

Technical data

Batteries

Technology:	2 x AAA NiMH
Voltage:	1.2 V
Capacity:	750 mAh

Handset operating times/charging times

The operating time of your handset depends on the capacity and age of the battery and the way it is used. (All times are maximum possible times).

Standby time (hours) *	165
Talktime (hours)	12
Operating time with 1.5 hrs of calls per day (hours) *	95
Charging time in base station (hours)	5
Charging time in charging cradle (hours)	7

* without display backlight (Setting the display backlight → p. 29)



The operating times of the phone can be extended by using a more powerful battery.

Power consumption of base station

In standby mode:	Handset in charging cradle	approx. 1.2 W
	Handset not in charging cradle	approx. 0.55 W
During a call:		approx. 0.65 W

General specifications

DECT standard	Supported
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1880-1,900 MHz
Duplex mode	Time division multiplexing, 10 ms frame length
Pulse repetition rate	100 Hz
Pulse transmission length	370 µs
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW, average power per channel, 250 mW pulse power
Range	Up to 50 m indoors, up to 300 m outdoors
Base station power supply	230 V ~/50 Hz
Environmental conditions for operation	+5 °C to +45 °C; 20 % to 75 % relative humidity
Dialing mode	DTMF (tone dialing)/ PD (pulse dialing)

Bluetooth

Radio frequency range	2402-2480 MHz
Transmission power	4 mW pulse power

Character charts

Standard characters

Press the relevant key the indicated number of times.

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1	1									
2	a	b	c	2	ä	á	à	â	ã	ç
3	d	e	f	3	ë	é	è	ê		
4	g	h	i	4	ï	í	ì	î		
5	j	k	l	5						
6	m	n	o	6	ö	ñ	ó	ò	ô	õ
7	p	q	r	s	7	ß				
8	t	u	v	8	ü	ú	ù	û		
9	w	x	y	z	9	ÿ	ý	æ	ø	å
0	← ¹⁾	.	,	?	!	← ²⁾	0			

- 1) Space
- 2) Line break

Central Europe

Press the relevant key the indicated number of times.

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1	1	Š	š							
2	a	b	c	2	ą	ä	á	â	ć	ç
3	d	e	f	3	ď	ę	ě	é	ê	
4	g	h	i	4	í	î				
5	j	k	l	5	ł					
6	m	n	o	6	ń	ñ	ó	ö	õ	ô
7	p	q	r	s	7	ř	ß	ś	š	
8	t	u	v	8	t'	ű	ü	ú	û	
9	w	x	y	z	9	ý	ź	ż	ž	
0	← ¹⁾	-	.	0						

- 1) Space

Cyrillic

Press the relevant key the indicated number of times.

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1	1									
2	а	б	в	г	2	а	б	с		
3	д	е	ё	ж	з	3	д	е	ф	
4	и	й	к	л	4	г	h	i		
5	м	н	о	5	ж	к	л			
6	п	р	с	6	м	н	о			
7	т	у	ф	х	7	р	q	r	s	
8	ц	ч	ш	щ	ъ	8	t	u	v	
9	ы	ь	э	ю	я	9	w	x	y	z
0	← ¹⁾	.	,	?	!	← ²⁾	0			

- 1) Space
- 2) Line break

Greek

Press the relevant key the indicated number of times.

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x
1	1											
2	α	β	ά	2	α	β	с					
3	δ	ε	φ	ε	3	δ	е	ф				
4	γ	η	ι	ή	ί	ϊ	ϊ	4	g	h	i	
5	κ	λ	5	ж	к	л						
6	μ	ν	ο	ω	ό	ώ	6	m	n	o		
7	π	ρ	ς	σ	ψ	7	p	q	r	s		
8	θ	τ	8	t	u	v						
9	ζ	ξ	υ	χ	ύ	ϋ	ϋ	9	w	x	y	z
0	← ¹⁾	.	,	?	!	← ²⁾	0					

- 1) Space
- 2) Line break

Turkish

Press the relevant key the indicated number of times.

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1	1									
2	a	b	c	ç	2	ä	á	à	â	ã
3	d	e	f	3	ë	é	è	ê		
4	g	ğ	h	ı	ı	4	ï	í	ì	î
5	j	k	l	5						
6	m	n	o	ö	6	ñ	ó	ò	ô	õ
7	p	r	s	ş	7	q	ß			
8	t	u	ü	v	8	ú	ù	û		
9	y	z	9	w	x	ÿ	æ	ø	å	
0	← ¹⁾	.	,	?	!	← ²⁾	0			

- 1) Space
- 2) Line break

Arabic

Press the relevant key the indicated number of times.

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x
1	1										
2	a	b	c	2	ث	ج	ح	خ			
3	d	e	f	3	ا	ب	ة	ت	أ	إ	آ
4	g	h	i	4	ظ	ط	ع	غ			
5	j	k	l	5	س	ش	ص	ض			
6	m	n	o	6	د	ذ	ر	ز			
7	p	q	r	s		ي	ى	ع	ئ		
8	t	u	v		م	ن	ه	و	ف		
9	w	x	y	z		ف	ق	ك	ل		
0	ل ¹⁾	.	,	؟	!	← ²⁾	0				

- 1) Space
- 2) Line break

Display icons

The following icons are displayed dependent on the settings and the operating status of your telephone.

Icons in the status bar

Icon	Meaning
	Signal strength (<i>No Radiation</i> off) 1% - 100% white, if <i>Maximum Range</i> on; green, if <i>Maximum Range</i> off
	Red: no connection to the base station
	<i>No Radiation</i> activated: white, if <i>Maximum Range</i> on; green, if <i>Maximum Range</i> off
	<i>Profile Silent</i> activated (ringtone switched off)
	"Beep" ringtone activated

Icon	Meaning
	Keypad lock activated
	Battery charge status: White: between 11% and 100% charged Red: less than 11% charged Flashing red: battery almost empty (approx. 5 minutes of talktime left)
	Battery is charging (current charge status) 0% - 100%

Display key icons

Icon	Meaning
	Last number redial
	Delete text

Icon	Meaning
	Open the directory
	Copy number to the directory

Display icons to indicate ...

Icon	Meaning
	External call
	Internal call
	Establishing a call (outgoing call)
	Connection established
	No connection established/ connection terminated

Icon	Meaning
	Reminder for appointment
	Reminder for anniversary
	Wake-up call

Other display icons


Icon	Meaning
	Alarm clock is on, display with alarm time
	Action complete (green)
	Action failed (red)

Icon	Meaning
	Information
	(Security) prompt
	Please wait...

Menu overview



Not all of the functions described in this user guide are available in all countries or from all network providers.

Open the main menu: ► press this key when the handset is in idle mode 



Alarm Clock

→ p. 20



Bluetooth

→ p. 24

Activation
Search for Headset
Search Data Device
Known Devices
Own Device

→ p. 24

→ p. 25

→ p. 25

→ p. 25

→ p. 25



Additional Features

Resource Directory

→ p. 18



Call Lists

→ p. 54



Audio Settings

Handset Volume
Advisory Tones
Silent Alert
Ringtones (Handset)

→ p. 30

→ p. 31

→ p. 31

→ p. 30

Volume
Melodies
Time Control
Silent Charging

→ p. 31

→ p. 21

→ p. 21



Answer Machine

No function



Organiser

Calendar
Missed Alarms


→ p. 18

→ p. 18



Directory

→ p. 15



Settings

Date/Time		→ p. 33
Display & Keypad	Screensaver	→ p. 29
	Large Font	→ p. 29
	Colour Schemes	→ p. 29
	Display Backlight	→ p. 29
	Key Illumination	→ p. 30
	Auto Keypadlock	→ p. 30
Language		→ p. 29
Registration	Register Handset	→ p. 28
	De-register Handset	→ p. 28
	Select Base	→ p. 28
Telephony	Auto Answer	→ p. 30
	Area Codes	→ p. 33
System	Handset Reset	→ p. 31
	Handset PIN	→ p. 32
	Base Reset	→ p. 33

System functions



The system functions can be called up via the menu or directly by entering codes.

Calling functions via the menu

Press and hold down the Talk key.


Open the system menu.

Either:

  Suppress call ID? 

Select and confirm the function.

Or:

  Service? 

Select the menu item and confirm.

  -41=Temporary MNS? 

Select and confirm the function.


Or:

  Service? 

Select the menu item and confirm.

  More functions? 

Select the menu item and confirm.

  #58=View callbacks? 

Select and confirm the function.



Press the End call key to end the operation.

Calling functions via codes

Press and hold down the Talk key.

Either:

Enter code according to table → page 44.

Or:


 

Enter code according to table → page 44.

then:



Press the End call key to end the operation.

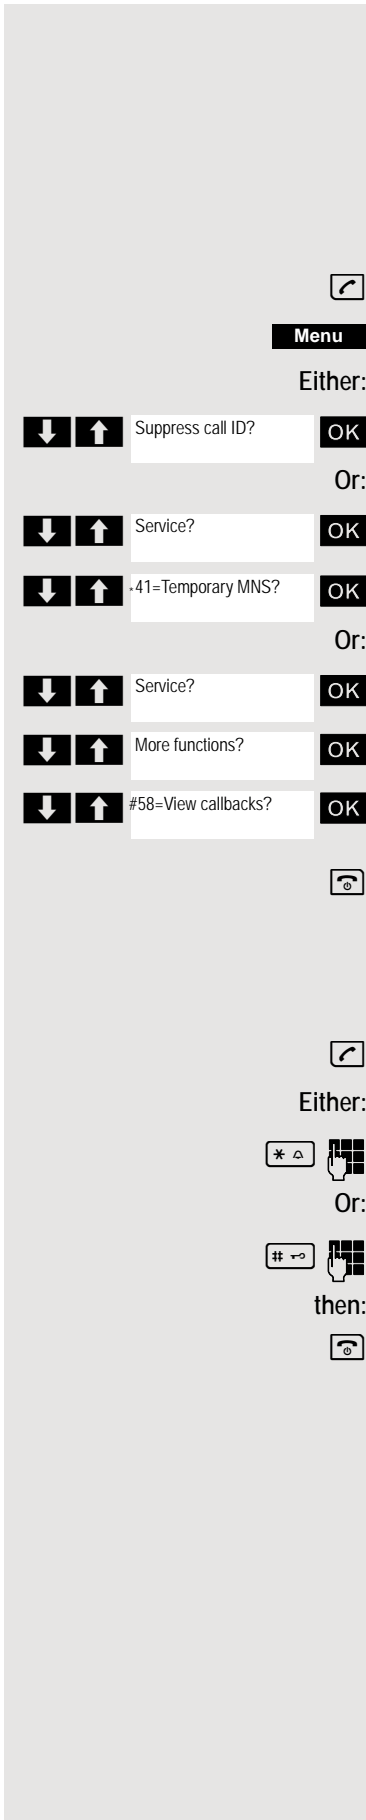

Functions and codes

Note:

The following functions and codes are standard on the HiPath 3000 / OpenScape Business. However, they could also be changed in your system. Please consult your system administrator.

Functions	Codes
Automatic call wait.term.on	* Δ 490
Automatic call wait.trm.off	# ↵ 490
Waiting tone off	* Δ 87
Waiting tone on	# ↵ 87
Call waiting	* Δ 55
Caller list	
- Call	# ↵ 82
- Saving a number	* Δ 82
Advisory msg. on	* Δ 69
Advisory msg. off	# ↵ 69
DND on	* Δ 97
DND off	# ↵ 97
UCD:	
- Log on	* Δ 401
- Log off	# ↵ 401
- Work on	* Δ 403
- Work off	# ↵ 403
- Available	* Δ 402
- Not available	# ↵ 402
- UCD night on	* Δ 404
- UCD night off	# ↵ 404
- Calls in queue	* Δ 405
Override (authorized telephone only)	* Δ 62
FWD for MULAP on	* Δ 501
FWD for MULAP off	# ↵ 501
Speaker call	* Δ 80
Trace call	* Δ 84
Temporary phone	* Δ 508
Messages	
- Sending	* Δ 68
- View sent message	# ↵ 68
Conference:	
- on	* Δ 3
- off	# ↵ 3
Show call charges	* Δ 65
Use speed dialing	* Δ 7
Change speed dial	* Δ 92
Toggle/connect	* Δ 2
DTMF dialing	* Δ 53
Night answer on	* Δ 44
Night answer off	# ↵ 44

Functions	Codes
Park:	
- Parking a call	* Δ 56
- Retrieve call	# ↵ 56
Account code	* Δ 60
Callback	* Δ 58
View callbacks	# ↵ 58
Suppress phone number	* Δ 86
Temporary phone number (MSN)	* Δ 41
Restore phone number	# ↵ 86
Ringing group on	* Δ 81
Ringing group off	# ↵ 81
Hunt group/join hunt group	* Δ 85
Hunt group/leave hunt group	# ↵ 85
Control Relay On	* Δ 90
Control Relay Off	# ↵ 90
Change PIN	* Δ 93
Language selection	* Δ 48
Locking the phone	* Δ 66
Unlocking the phone	# ↵ 66
Directory (system, LDAP)	* Δ 54
Telephone data service	* Δ 42
Timed reminder on	* Δ 46
Timed reminder off	# ↵ 46
Door opener on	* Δ 89
Door opener off	# ↵ 89
Door opener	* Δ 61
Pickup group	* Δ 57
Pickup, directed	* Δ 59
Forwarding on	* Δ 1
Forwarding off	# ↵ 1
Trunk FWD on	* Δ 64
Trunk FWD off	# ↵ 64
CFNR off	# ↵ 495
CFNR on	* Δ 495
Return to held call	* Δ 0

Making calls to multiple parties

Consultation

You interrupt your call to consult with a user (including external users) and then resume the original call.

You are conducting a call.

Activating and conducting an inquiry/consultation call

Activate inquiry. The current call is placed "on hold", so that the first user waits.

Enter the phone number for the consultation call.

The number is dialed. The station answers. The consultation starts.

The second user is busy or does not answer

Press the display key to cancel the consultation. You are reconnected with the first party.

During the consultation you can

- Book a callback → page 75,
- Activate call waiting → page 47 or
- Busy override → page 50.

The consultation is ended and you return to the waiting call

The second user hangs up. You are reconnected with the first party.

Either:

Or:

Menu


Open the system menu.

Select the menu item and confirm.

You are reconnected with the first party. The second partner hears the busy tone and hangs up; a handset hangs up automatically.

However, you can also

- Toggle between the partners → page 52,
- Set up a conference → page 53 or
- Transfer the waiting partner to the second partner → page 51.

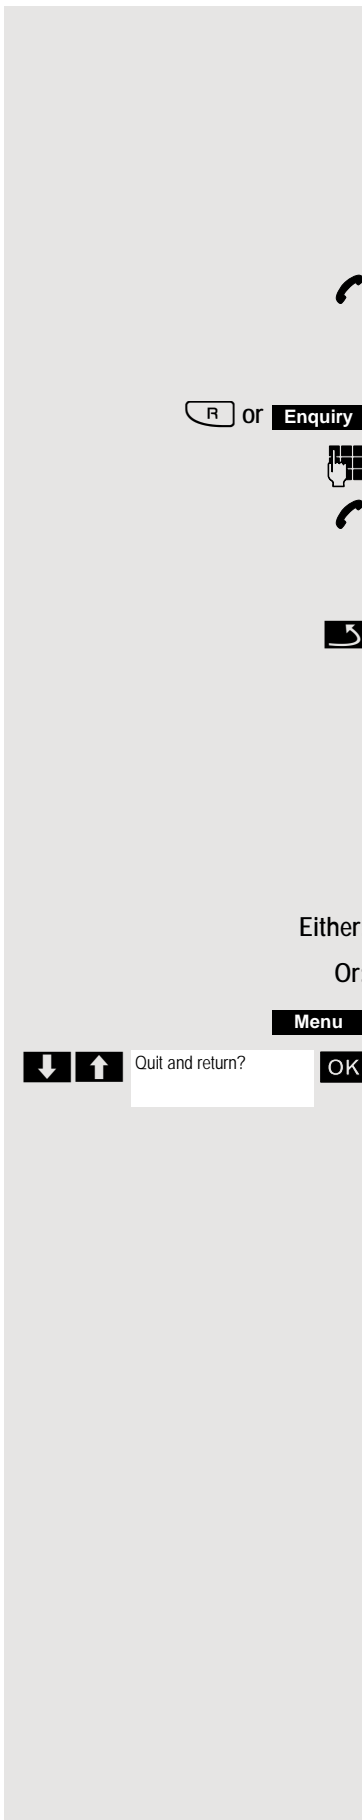

Call waiting

You need to speak to a user in your communications system urgently, even though this user's line is busy. You can send a call waiting signal during the call to let the user know you want to talk to him or her. The user either answers immediately or you will be automatically connected when he or she has finished his call.

This function is only available if it has been configured by the service engineer.

The user is busy. You want to use call waiting.

Wait until the message "Camp-on" appears on the display (ringing tone).

You receive a call waiting signal (second call)

You are still available to other callers, even though you are on the telephone. The call waiting signal informs you of the second call while you are conducting a call. You can answer this call without ending the first call.

You are on a call and hear a call waiting signal.

If you want to answer the second call, you can either place the first call on hold (the first caller waits) or end the first call.

Placing the first call on hold and answering the second call

Answer the second call.

Talk to the second caller. The first caller waits. His or her call is on hold. You can now:

- Toggle between the two callers → page 52 or
- Set up a conference → page 53.

Ending the second call

Open the system menu.

Select the menu item and confirm.

Either:

Menu



Quit and return?

OK

Or:



Press the End call key. The following message appears on the display: "Recalling". Your phone rings.



Press the Talk key to talk to the first caller again.

Toggle



Press the display key to switch to the first caller.

Press the End call key. The first call is ended. Your phone rings.



Press the Talk key and answer the second call.

Call waiting tone off/on

You can suppress the call waiting tone for external calls.

Deactivating the call waiting tone

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Press the End call key to end the operation.


Activating the call waiting tone

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Press the End call key to end the operation.

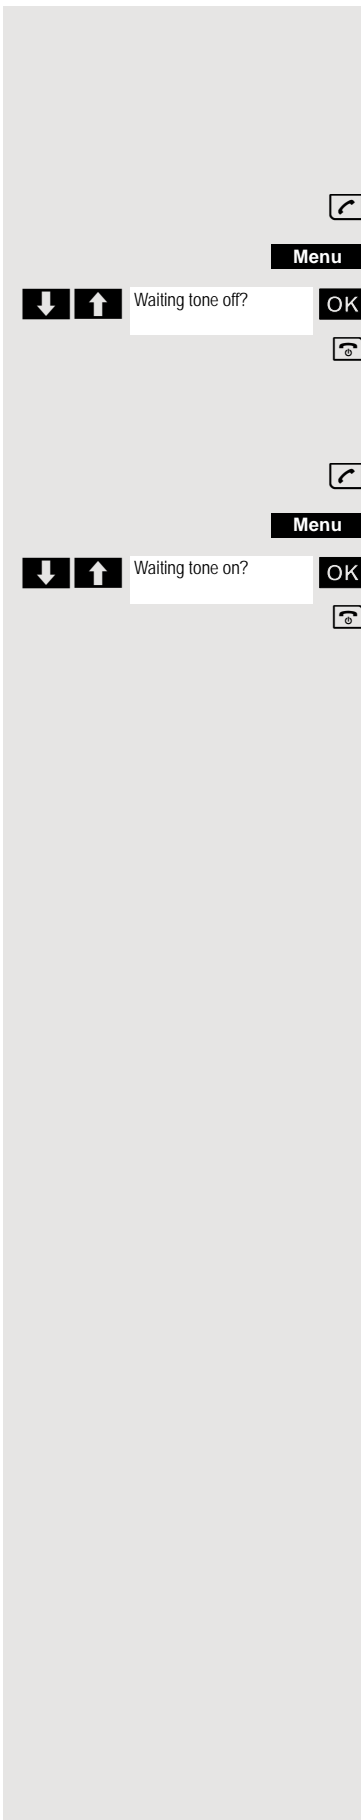

Disabling/enabling automatic call waiting

You can disable/ enable automatic call waiting signaling for a second call during a telephone conversation.



Note:


This function is only available if call waiting is activated for you in the system (consult your administrator).

Disabling the call waiting tone

- Press and hold down the Talk key.
- Open the system menu.
- Select the menu item and confirm.
- Select the menu item and confirm.
- Select the menu item and confirm.
- Press the End call key to end the operation.

Enabling the call waiting tone

- Press and hold down the Talk key.
- Open the system menu.
- Select the menu item and confirm.
- Select the menu item and confirm.
- Select the menu item and confirm.
- Press the End call key to end the operation.

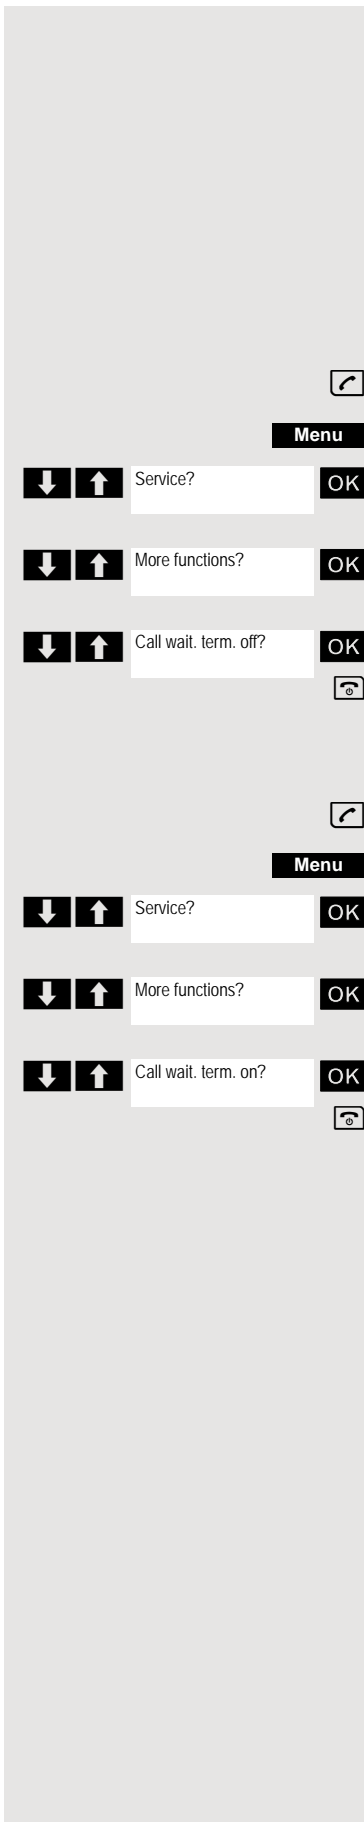

Override

You need to speak to an internal user urgently, even though his or her line is busy. The "Override" function allows you to interrupt the ongoing call to pass on a message.

This function is only available when the code has been input and if it has been configured by the service engineer.

The user is busy.

Call the function.

The override is established. The user name or phone number, to whom/which the call has been transferred, is displayed.

Override is ended when you replace the handset.



Note:

During override

- all users hear an override tone and everything that is said,
- all users see the following message on the display "Override:.....".

Placing a call on hold

You can interrupt a call temporarily if, for example, you want to talk to someone else in the room. The line is placed "on hold".

You are conducting a call.

Press the R key or Display key. The current call is placed "on hold", the user waits.

Resuming the call with the waiting user


Open the system menu.

Select the menu item and confirm.

You are reconnected to the partner.

Or:

Press the R key.

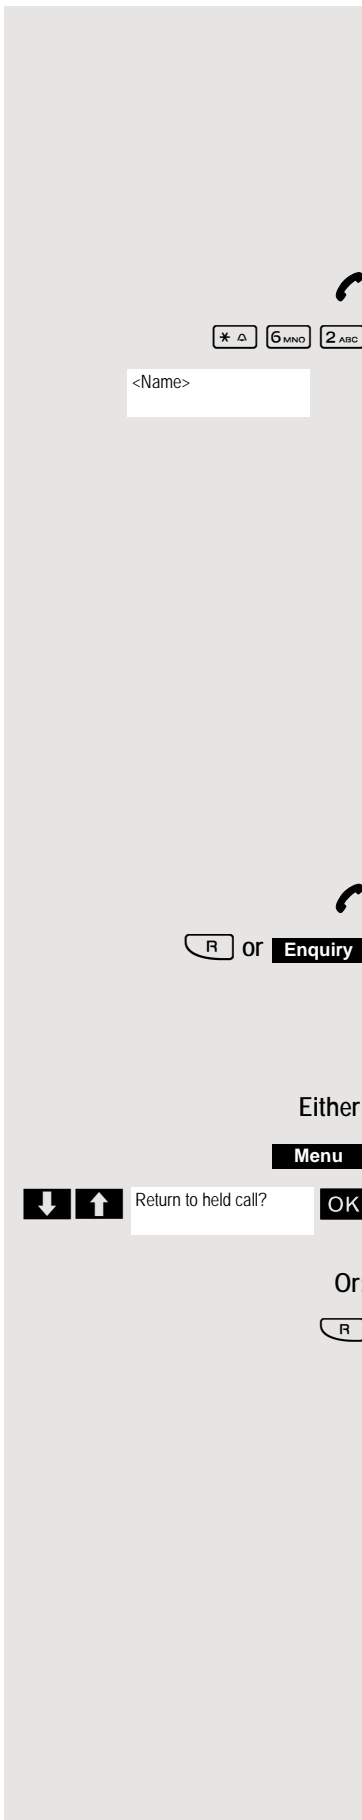

Transferring a call

Transferring a call means that you wish to hand over a call you are conducting on your handset to another user.

Transfer (without announcing the transfer)

You can use this function to forward a call you answered to another user.

Open the system menu.

Select the menu item and confirm.

Press the key shown.

The current call is placed "on hold", so that the first user waits.

Enter the phone number of the user to whom the call is to be transferred.

The number is dialed.

Either:



Press the End call key. The destination user's phone rings. He or she picks up the call by lifting the handset.

Or:

Menu

Open the system menu.

Select the menu item and confirm.


Press the End call key. The destination user's phone rings. He or she picks up the call by lifting the handset.

You receive a recall:

- immediately if you have made a mistake,
- 45 seconds after the transfer if the required user does not answer.

If you do not answer recalls, another telephone defined by the service engineer is called (intercept station).



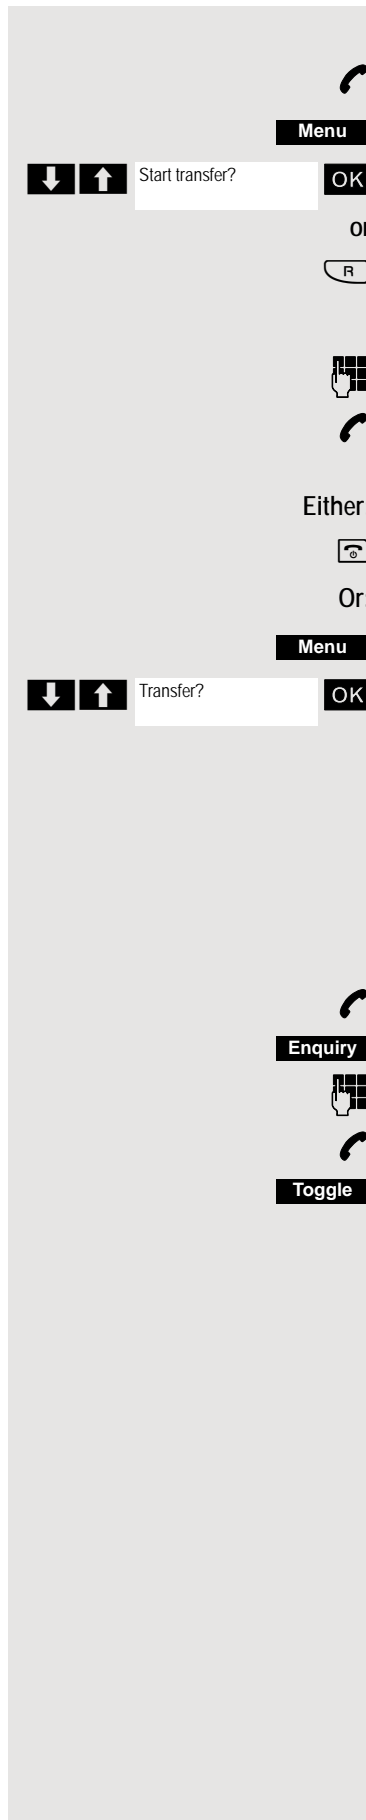

Transfer (announcing the transfer)

You can use this function to forward a call you answered to another user.

Open the system menu.

Select the menu item and confirm.

or



Press the key shown.

The current call is placed "on hold", so that the first user waits.

Enter the phone number of the user to whom the call is to be transferred.

The number is dialed. The station answers. You announce the call presently on hold.

Either:



Press the End call key. The user takes the call.

Or:

Open the system menu.

Select the menu item and confirm.

Toggling (switching between calls)

The Toggle function allows you to switch between two users without allowing them to speak to each other directly. The two users can be either external or internal users. You can also withdraw from the calls and connect the two users with each other. You can also start a conference.

You are conducting a call.

Press the display key. The current call is placed "on hold", the user waits.

Enter the phone number of the second user.

The second user answers.

Press the display key to switch between the two calls.

When you end a call, the two users are connected with each other (not possible when both users are external).

Conducting a conference

You can connect up to 5 internal or external partners with each other in a telephone conference. You can include up to 4 external users in the conference.

For information purposes, you will hear an alerting tone every 30 seconds during a conference call (can be disabled - ask your service engineer).

Setting up a conference

You decide to set up a conference while talking to a user.

You are on a call and wish to start a conference.

Open the system menu.

Select the menu item and confirm.

Enter the phone number of the new user.

The user is free and answers the phone. You announce the conference.

Open the system menu.

Select the menu item and confirm.

You and your two partners are connected in a conference call.

Forming a conference

A conference has not yet been set up. However, you are already connected to two users and are toggling between them. You now want to form a conference involving all partners.

You are talking to one user.

Open the system menu.

Select the menu item and confirm.

You and your two partners are connected in a conference call.

Adding a party

You can expand an existing conference to include up to five users.

You are connected with two or more partners in a conference call.

Open the system menu.


Select the menu item and confirm. The conference is placed "on hold", the users wait.


Enter the phone number of the new user.

The user is free and answers the phone. You announce the conference.

Open the system menu.

Select the menu item and confirm. The new user is included in the conference call.

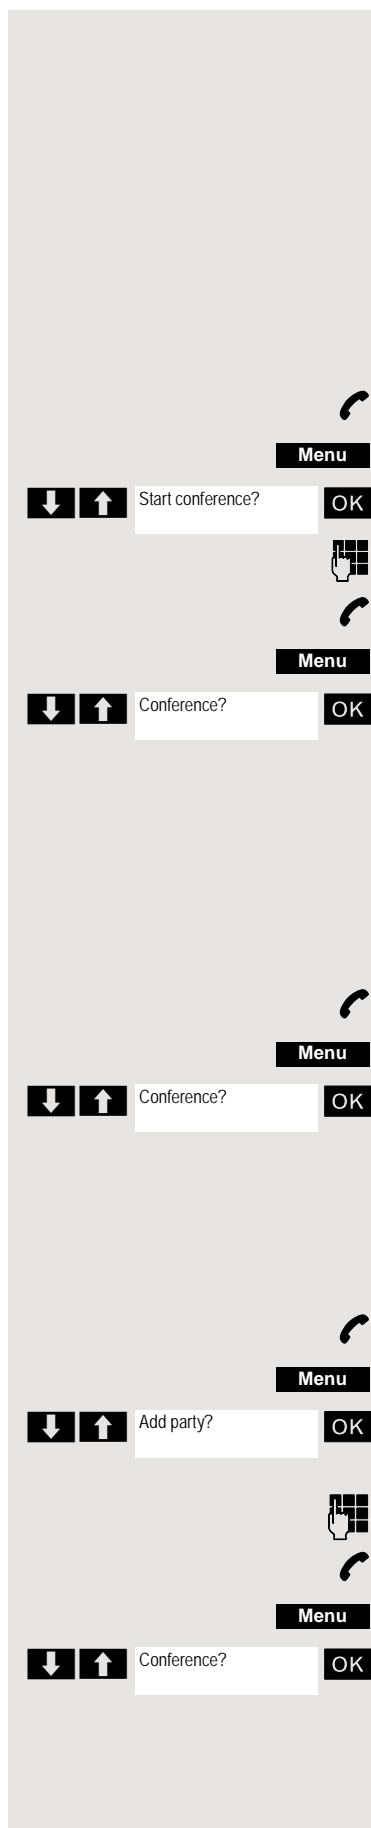

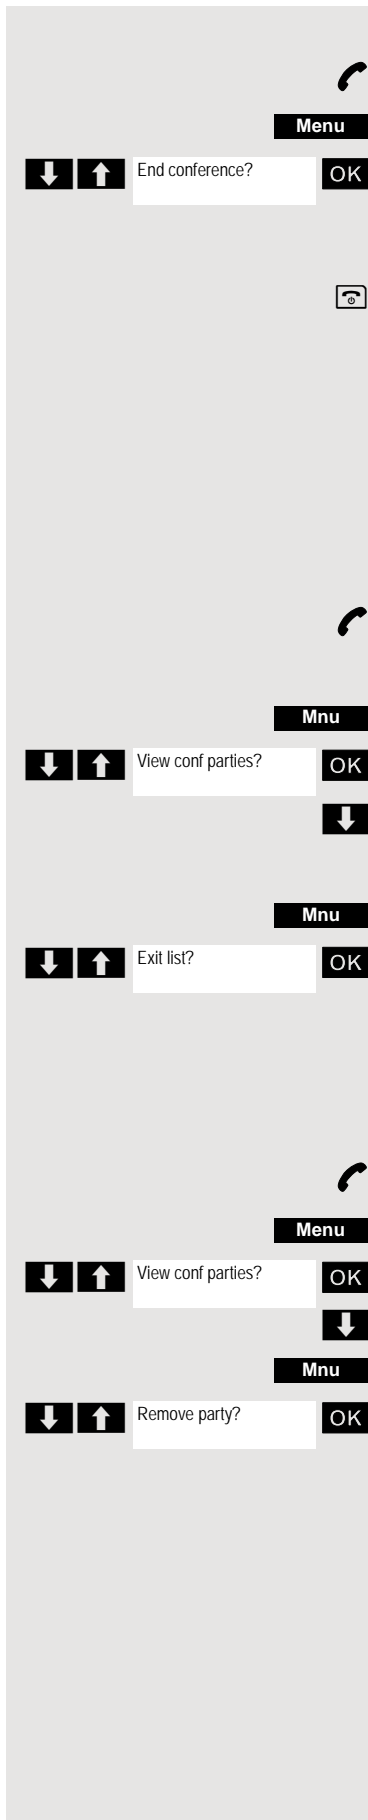

Ending a conference

You are connected with two or more partners in a conference call.

Open the system menu.

Select the menu item and confirm. The conference is ended.

Leaving a conference

Press the End call key. You exit the conference.

When one user leaves the conference, the other two users remain connected. If the party who convenes the conference leaves the conference, all calls are ended.

Viewing the names of conference parties

As the convener of the conference, you can view the names of all conference parties.

You are connected with two or more partners in a conference call.

Viewing the conference parties list

Open the additional menu.

Select the menu item and confirm. The first party is displayed.

View other parties.

Closing the conference party list

Open the additional menu.

Select the menu item and confirm. The conference party list is closed.

Disconnecting a party from the conference

As the convener of the conference, you can disconnect users from the conference.

You are connected with two or more partners in a conference call.


Open the system menu.

Select the menu item and confirm. The first party is displayed.

Display the required party.

Select the menu item and confirm.

Select the menu item and confirm. The relevant party is disconnected from the conference.

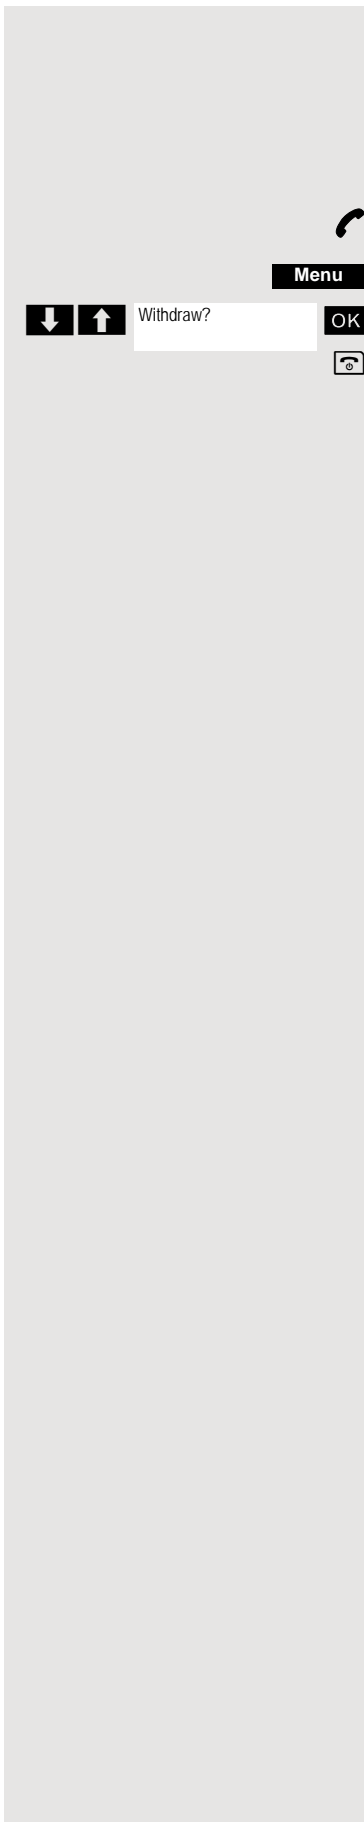

Connecting parties

As the conference convener, you can leave the conference and thereby connect the other parties with each other. If you were previously connected with two or more parties, the other parties remain in a conference. Otherwise, the remaining two users conduct a one-to-one call.

You are connected with two or more partners in a conference call.

Open the system menu.

Select the menu item and confirm. The first party is displayed.

Press the End call key. You leave the conference; the remaining parties are connected with each other.

Using the second call feature

The second call is an incoming call that is signaled on your handset during a call and that can be queried by you (for example, → page 47).

A second call can be answered in the following call states:

- You are on a single call,
- You are on a consultation call,
- You are holding a conference,
- You are on a call which you intend to add to a conference,
- You are toggling between two partners.



Note:

A second call is not signaled on the Bluetooth headset.

Central directories (group directory)

System phonebook

If the system administrator has entered a name for at least one internal user or system speed dialing destination, then you can use the system phonebook for dialing.

Opening the system phonebook

Press and hold down the Talk key.

Open the system phonebook. The first entry is displayed on the screen.

If several phonebooks have been configured: Select the menu item and confirm.

Finding an entry

Enter the first letters of the name you are looking for. The name is searched for. The search result becomes more precise as each letter is entered, i.e. the number of names found is reduced.

Select the user you want.

Dialing an entry

Confirm your selection. The selected number is called.

Quitting the phonebook

Press the display key.



Note:

Phone numbers dialed from the system phonebook are not stored in the redial list.



Telephone database (LDAP)

If your company has an LDAP telephone database and access to it is configured in your communications system, you can query it with your handset. This LDAP telephone database can contain far more entries than the phonebook on your communications system or your handset. The LDAP telephone database is installed on an LDAP server. This telephone database is accessed over the LDAP Internet protocol (Lightweight Directory Access Protocol).

This function can also be called directly by entering the code → page 43.

Activating the LDAP telephone database

Press and hold down the Talk key.

Press the display key.

If several phonebooks have been configured: Select the menu item and confirm.

Entering a name and finding an entry

You can now enter the name via the handset's keypad. Each key is assigned several letters and each letter is selected by pressing the key an appropriate number of times. For example, you have to press the "7" key three times to enter an "r".

Enter the name you want to find (maximum 16 characters). You can enter an incomplete name, e.g. "mei" for "Meier". The more characters entered, the more precise the search result.

If configured, you can search for first and last names. First and last names must be separated by a space. Do this by pressing the "0" key. You can enter incomplete names, e.g. "mei p" for "Meier Peter".

If you wish to delete an incorrect letter entered by mistake:

Open the additional menu.


Select the menu item and confirm.


Press the display key.

Select the menu item and confirm.

Press the display key.

The system starts to search for the entry. This can take a few seconds. The entries found are then displayed.

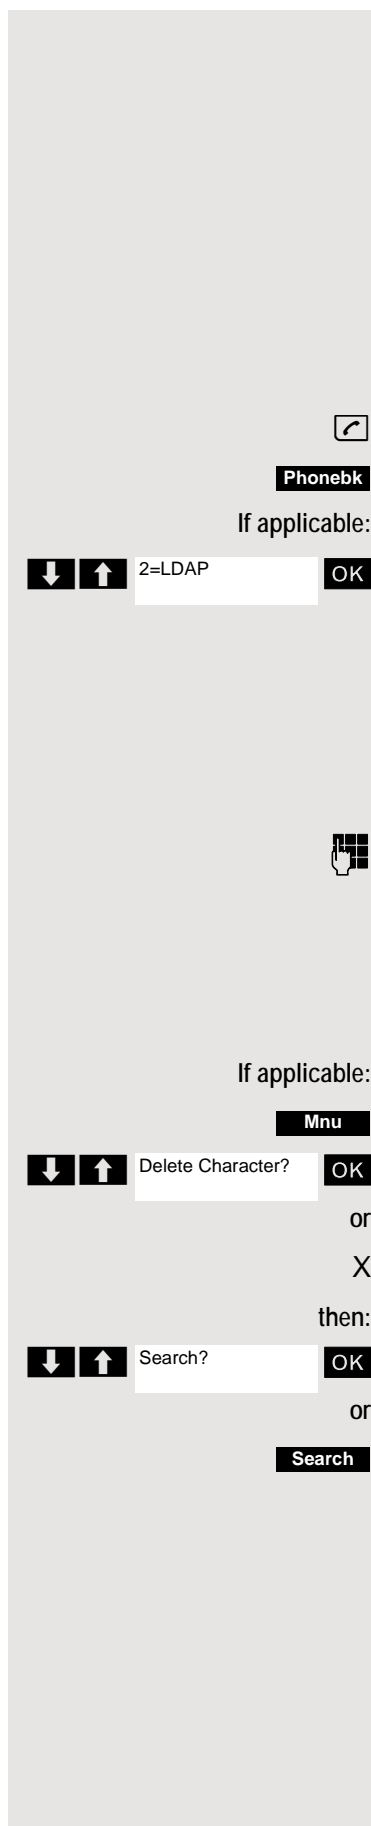

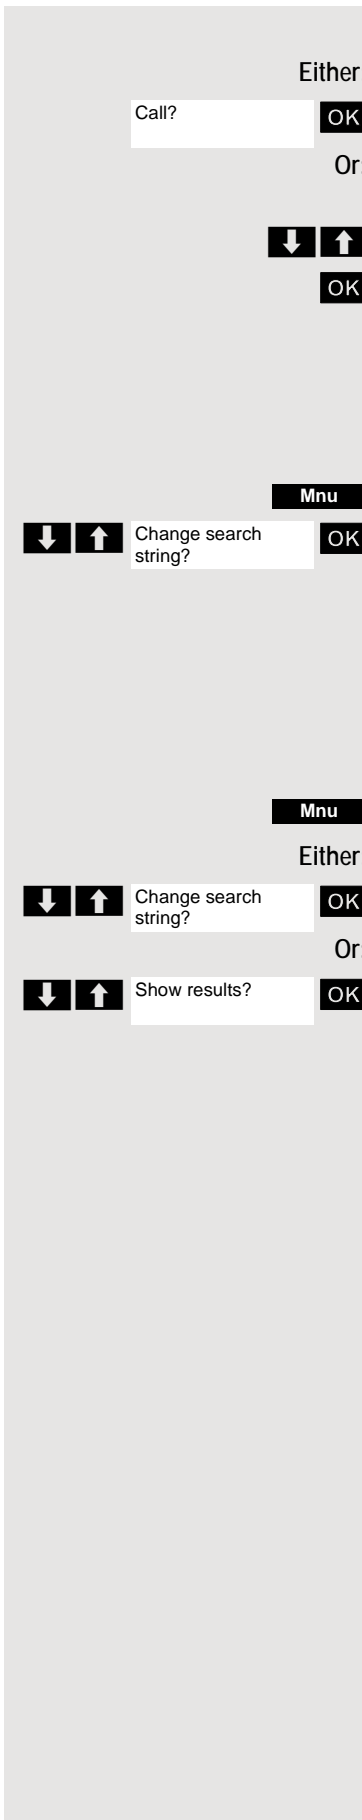

Selecting an entry

Either: If a single entry is found, it is displayed.

Call? Select the menu item and confirm. The user is called.

Or: If more than one entry is found, the first entry is displayed. A maximum of 50 hits can be displayed.

Scroll through the entries.

Confirm the entry. The user is called.

If no entries were found

If no entries were found, you can extend the search range by deleting some of the characters entered.

Open the additional menu.

Change search string? Select the menu item and confirm. You can now change your search entry.

If too many entries were found


The hit list is not displayed in full if more than 50 entries matching your search query were found. We recommend narrowing down the search by entering more characters. However, even if you do not do this, you can still display the entire hit list, select the required entry and call the selected party.

Open the additional menu.

Change search string? Select the menu item and confirm. You can now change your search entry.

Or:

Show results? Select the menu item and confirm. The hit list is displayed.

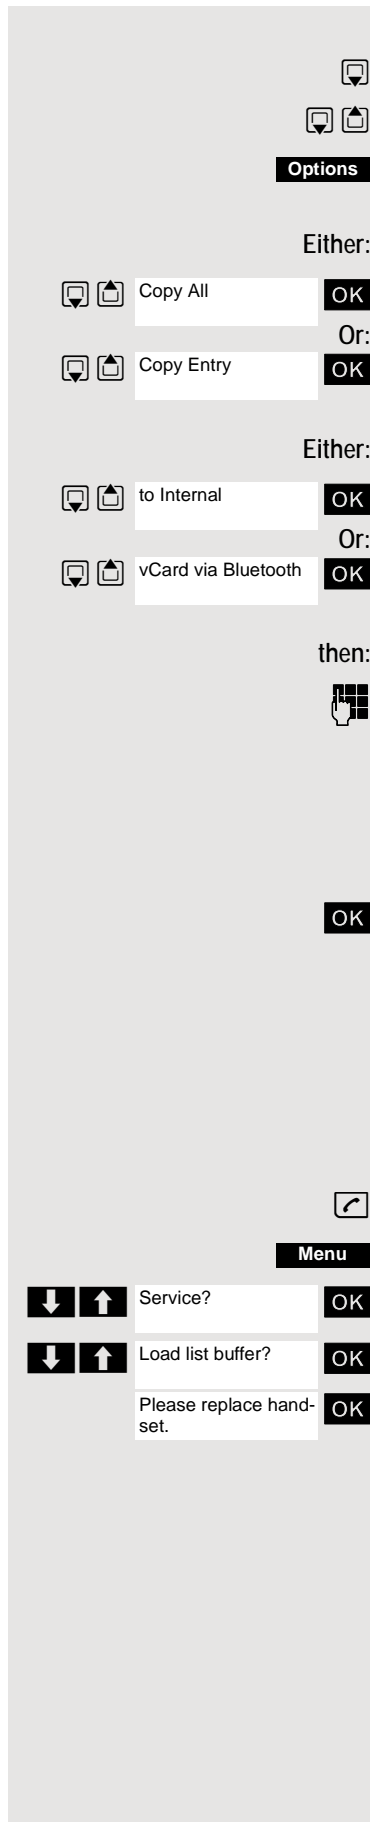

Sending a list/entry

Open the phonebook.

Select the entry you want.

Press the display key.

Either:

Copy All **OK**

Select the menu item and confirm.

Or:

Copy Entry **OK**

Select the menu item and confirm.

Either:

to Internal **OK**

Select the menu item and confirm.

Or:

vCard via Bluetooth **OK**

Select the menu item and confirm.

then:



Enter the phone number. The following phone numbers are possible:

- 1... 98 – the list or entry is sent directly to the recipient's handset.
- 00 – the list or entry is sent to the communications system and can then be downloaded by any handset.
- 99 – the list or entry is sent to the communications system and can then only be downloaded by your handset.

OK

Confirm your entry. The list or entry is sent.

If a phone number from 1 to 98 was dialed, the list or the entry is automatically received by the recipient's handset.

Loading a list or entry from the communication system

Prerequisite: You sent an entry or list to the communications system by dialing the phone number 00 or 99.



Press and hold down the Talk key.

Menu

Open the system menu.

Service? **OK**

Select the menu item and confirm.

Load list buffer? **OK**

Select the menu item and confirm.

Please replace handset. **OK**

Replace handset. The phone rings and the transfer starts automatically.

Deleting a list or entry in the communication system

Prerequisite: A currently unused list or entry is saved on the communications system.

If the handset with phone number 00 was used to send the list or entry to the communications system, any handset can be used to delete this list or entry. If the list or entry was sent by the handset with the phone number 99, the list or entry can only be deleted by the handset that sent it.

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm. The handset starts to delete the list/entry.

Press the End call key to end the operation.

System speed dialing

Your system administrator can save up to 8000 external phone numbers as system speed dialing destinations in your communications system. You can dial these speed dialing destinations with a three-digit code (0000 7999).

Dialing a system speed dialing destination

Press and hold down the Talk key.

Open the system menu.


Select the menu item and confirm.

Select the menu item and confirm. This function can also be activated directly by entering the appropriate code → page 43.

Enter the required code (4 digits, 0000 - 7999).

Note:

The saved speed dialing destinations and the associated codes can be obtained from the organizational unit responsible for administering the communications system.

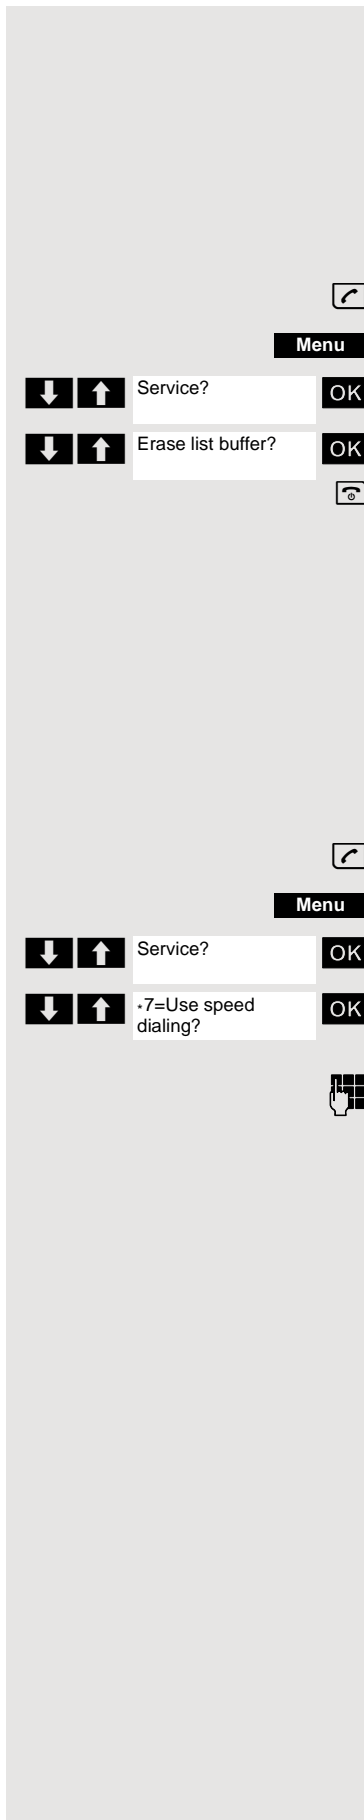

Dialing a system speed dialing destination with suffix-dialing or a DID number

System speed dialing destinations can be saved in your communications system and then dialed by means of suffix-dialing or DDIA. These speed dialing destinations let you enter an additional suffix-dialing or DID number up to five seconds after entering the three-digit service code. If you do not make an entry within this time frame, the default suffix-dialing number, for example, "0" for the exchange, is dialed.

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the required code (3 digits, 000 - 999).

Within five seconds: enter the suffix-dialing or DID number.

System speed dialing, individual

You can save up to ten external phone numbers as speed dialing destinations for your handset in your communications system. These speed dialing destinations are dialed using a 2-digit code (*0 to *9). Please note that you may need to save an external code in front of the phone number.

This function can also be called directly by entering the code → page 43.

Setting up an individual speed dialing destination

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Call the first destination.

Call the next destination.


Open the additional menu.


Select the menu item and confirm.

Enter the external phone number (with external code).

Save the settings.

Press the End call key to end the operation.

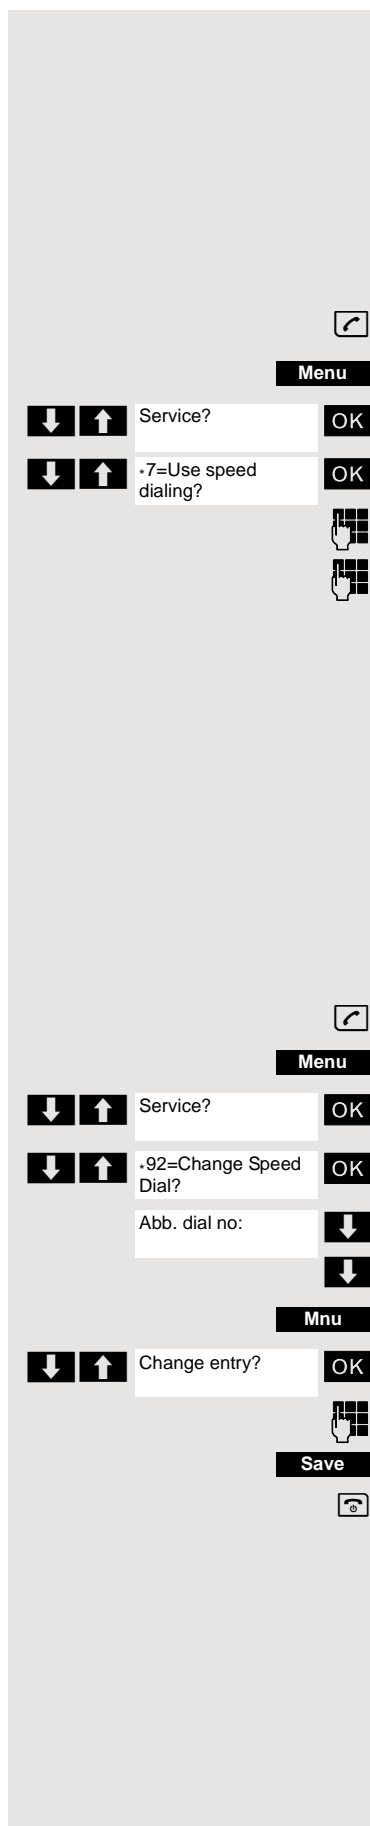

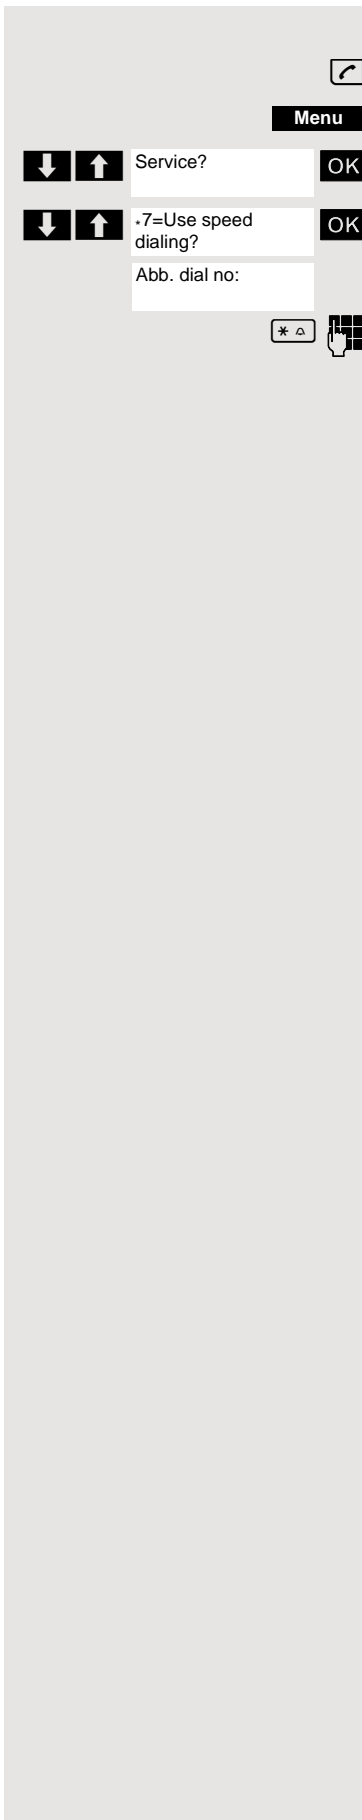

Dialing an individual speed dialing destination

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the code for the speed dialing destination (*0 - *9).

Team functions

Activating/deactivating group calls

If this has been configured by the service engineer, you belong to one or more groups of internal users that can be reached at a hunt group or group call phone number. Calls are signaled on all telephones in the group either in succession (=hunt group) or simultaneously (=group call), until a member of the group answers the call. Every user in the group can also remain available under his own phone number.

You can leave and re-join specific groups or leave and re-join all groups.

These functions can also be called directly by entering the relevant code → page 43.

You belong to a hunt group or group call group

Use this function to leave or re-join the hunt group or group.

Press and hold down the Talk key.

Open the system menu.



Menu

Either:



Leave hunt group?

OK

Or:



Join hunt group?

OK

then:



Select the menu item and confirm. You have now left the hunt group or group.

Select the menu item and confirm. You have now re-joined the hunt group or group.

Press the End call key to end the operation.

You belong to multiple groups

Leaving and re-joining individual groups

Press and hold down the Talk key.

Open the system menu.

Either:

Leave hunt group? **OK**

Select the menu item and confirm.

Or:

↓ ↑ Join hunt group? **OK**

Select the menu item and confirm.

then:

↓ Group 1
Group 2 **Mnu**

Select the required group and call the additional menu.

Either:

↓ ↑ Leave hunt group? **OK**

Select the menu item and confirm. You have now left the selected group.

Or:

↓ ↑ Join hunt group? **OK**

Select the menu item and confirm. You have now joined the selected group.

then:

☎

Press the End call key to end the operation.

Leaving and re-joining all groups

Press and hold down the Talk key.

Open the system menu.

Either:

↓ ↑ Leave hunt group? **OK**

Select the menu item and confirm.

Or:

↓ ↑ Join hunt group? **OK**

Select the menu item and confirm.

then:

Group 1
Group 2

The list of groups is displayed.

↵

Press the hash key. You have now left all groups.

Or:


*** Δ**

Press the star key. You have now joined all groups.

then:

☎

Press the End call key to end the operation.

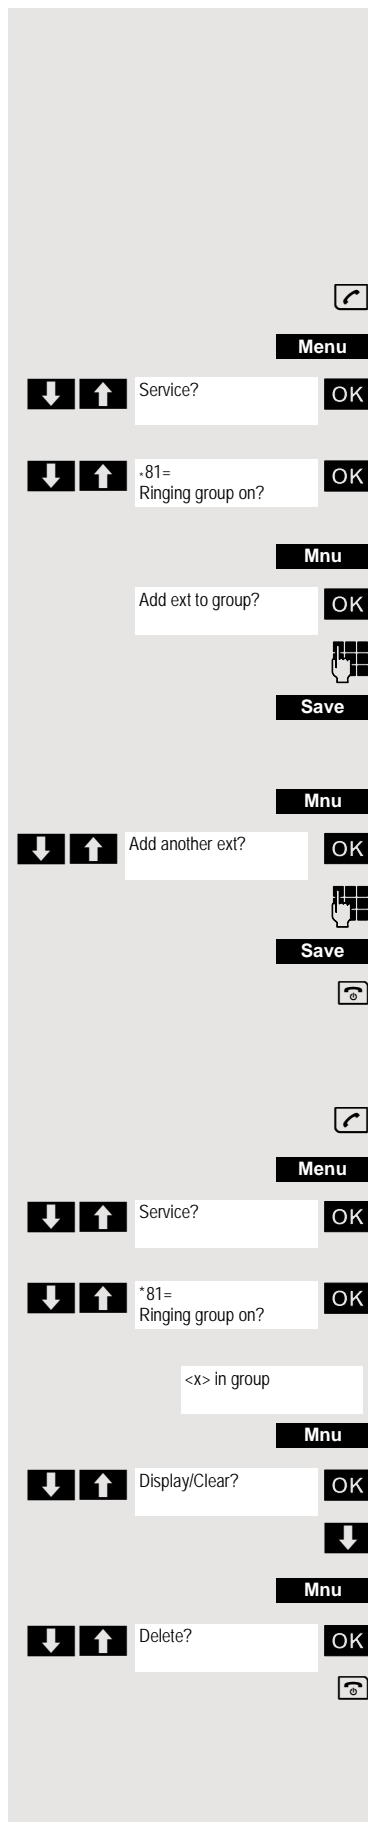

Ringing group on

You can have calls to your handset signaled acoustically on up to five other telephones. The call is received by the person who answers the call first.

Adding users to a group

First user

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Open the additional menu.

Confirm the option shown.

Enter the required internal phone number.

Save the settings.

Other users:

Open the additional menu.

Select the menu item and confirm.

Enter the required internal phone number.

Save the settings.

Press the End call key to end the operation.

Deleting users

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

The number of parties added is displayed.

Open the additional menu.

Select the menu item and confirm. The first user added is displayed.

Scroll to the required user.

Open the additional menu.

Select the menu item and confirm. The addition of the first user is cleared.

Press the End call key to end the operation.

UCD (Universal Call Distribution)

This function enables calls to be distributed in a team. An incoming call is always delivered to the team member who has been idle longest. Team members can also work in separate rooms, for example, on the company's premises and at a teleworking station. The teams (call distribution groups) and team members are set up by the service engineer.

Logging on/off

You must log on and off at the system when you start/finish work.

Register

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Enter your identifier number (assigned by the service engineer).

Press the End call key to end the operation.

Logging off

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Press the End call key to end the operation.

Logging on/off temporarily (availability)

You can log on or off at the system temporarily, for example, during break times.

Logging off (not available)

Press and hold down the Talk key.


Open the system menu.


Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Press the End call key to end the operation.

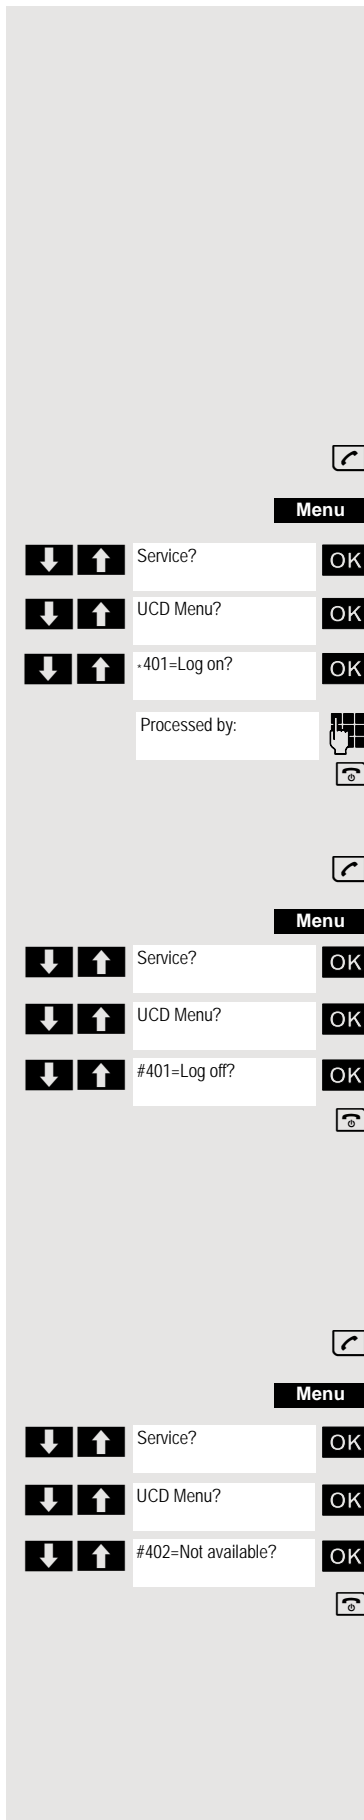

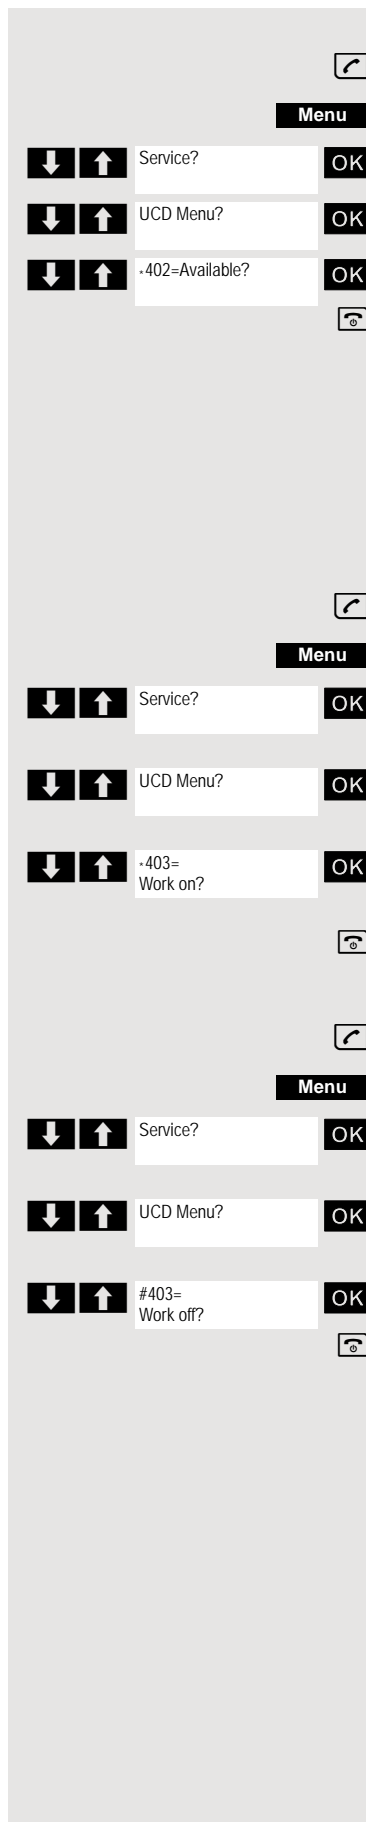

Logging on (available)

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Press the End call key to end the operation.

Wrap-up time

If you need more time than the actual call lasts, you can request/activate a wrap-up time for the last call. This can be a fixed length of time or, alternatively, you must deactivate the wrap-up time yourself (log back on).

Requesting time

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Press the End call key to end the operation.

Logging back on

Press and hold down the Talk key.


Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Press the End call key to end the operation.

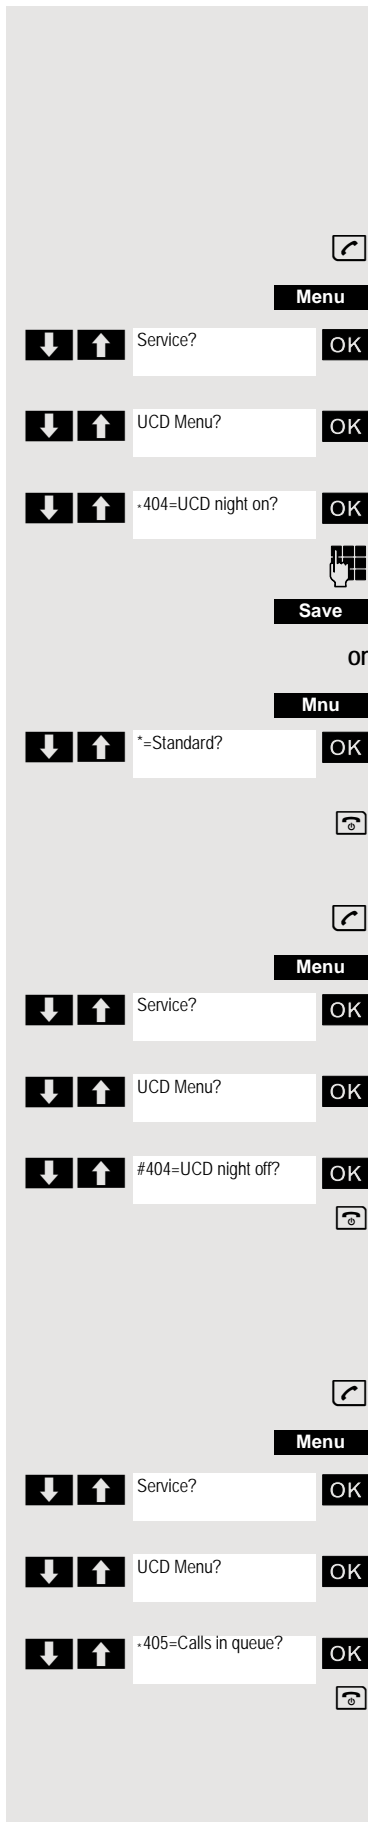

UCD night service

UCD night service is a separate night service for call distribution. It is not affected by the system night service.

All incoming calls are forwarded to a special call distribution destination.

Night destination on

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Enter required night destination.

Save the settings.

or

Call the menu.

Select the menu item and confirm.

Press the End call key to end the operation.

Night destination off

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Press the End call key to end the operation.

Display the number of waiting calls

You can check the number of waiting calls for the group.

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Press the End call key to end the operation.

Mulap group (Multiple Line Application)

If your handset's line belongs to a Mulap group (Multiple Line Application), then you can

- answer calls for the group (press the Talk key in group calls)
- make external telephone calls under the group phone number (the group phone number is stored in the called party's caller list, for example)
- activate and deactivate the group call function for your handset's line
- forward the lines of the Mulap group to internal or external destinations

Activating/deactivating group calls

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.


Press the End call key to end the operation.

Forwarding a Mulap line

You can immediately forward internal and/or external calls to your lines to different internal or external telephones (destinations) (external destinations are also possible if the system is configured accordingly).

If you activate call forwarding for a line, this shall apply to all line keys of your group for this line.



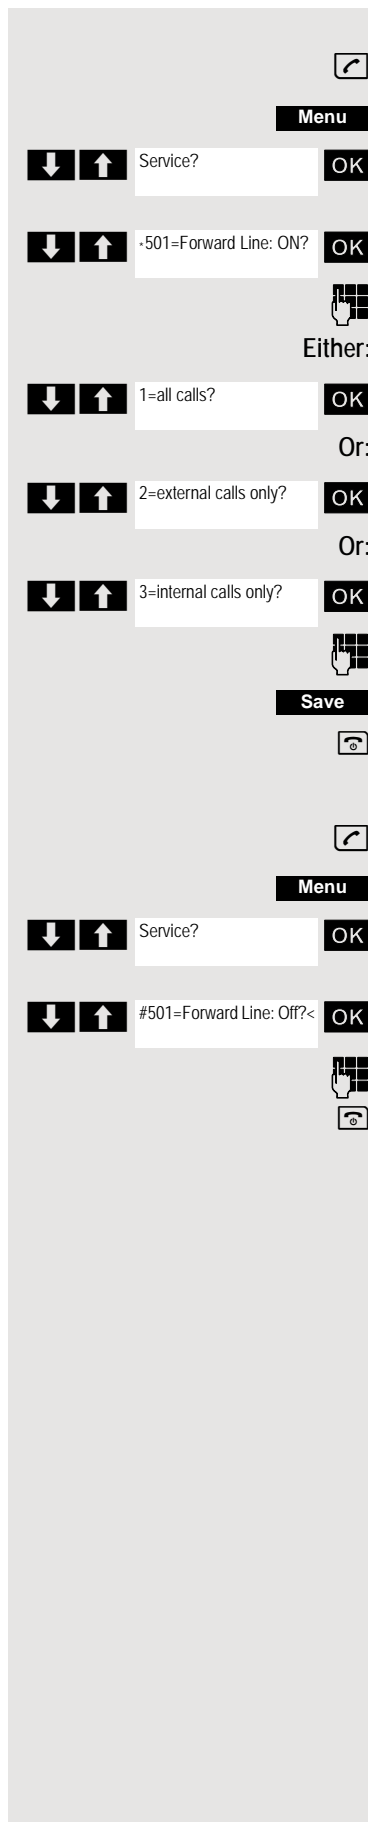

Forwarding on

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the trunk number.

Select the menu item and confirm.

Or:

Select the menu item and confirm.

Or:

Select the menu item and confirm.

Enter the destination number.

Save the settings.

Press the End call key to end the operation.

Forwarding off

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the trunk number.

Press the End call key to end the operation.

Message functions

The message functions enable you to react to voicemail/callback services of the communication system or of other users or to initiate information features yourself.

Leaving a message/advisory message

A number of advisory messages are stored in your communication system that can be automatically sent to the caller when an internal call is not answered (in the case of handsets and telephones with display). These advisory messages can be selected and supplemented in part by you:

- 0 = Will return at:
- 1 = On vacation until:
- 2 = On trip until:
- 3 = Out all day
- 4 = Out to lunch
- 5 = Not available
- 6 = Home phone:
- 7 = Contact:
- 8 = Avail at:
- 9= In room no.:

These advisory messages are standard texts and may have been changed in your communication system.

Activating an advisory message

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the required advisory message.

Add text if appropriate, e.g. time 12.00 or date 26.01. (use the Star key to create the period sign).

Save the settings.

Select the menu item and confirm.

Enter the required advisory message.

Typing errors can be corrected: activate delete mode by double-clicking the hash key and then use the hash key to delete a character.


Note:

For example, if you want to enter the third character on a key: press the relevant key three times in succession.

Save the message.

Press the End call key to end the operation.



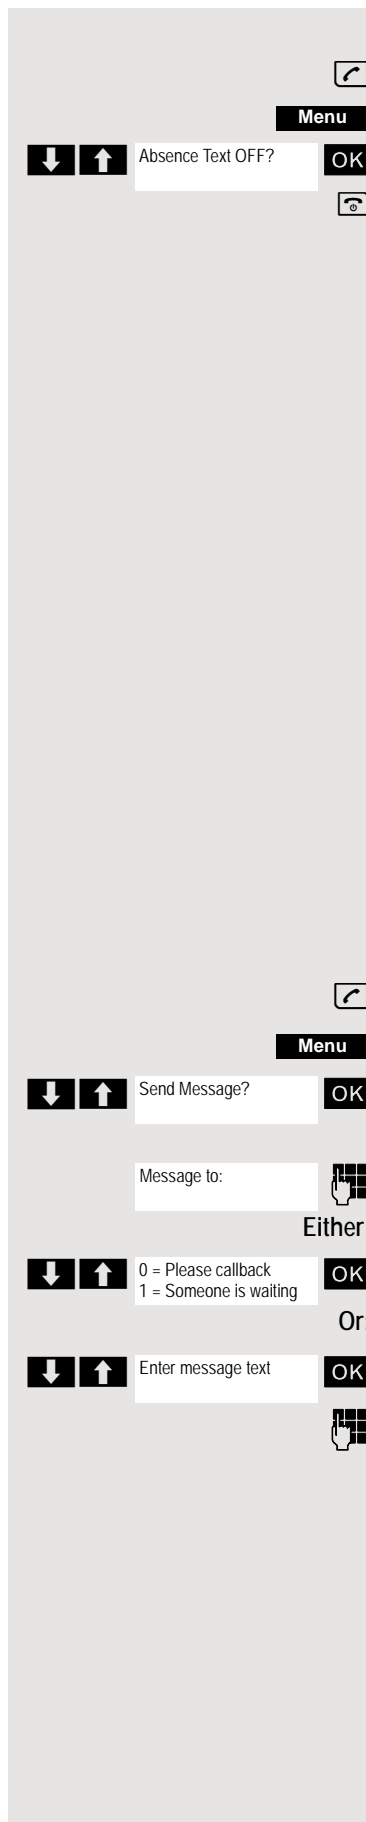

Deactivating an advisory message

- Press and hold down the Talk key.
- Open the system menu.
- Select the menu item and confirm.
- Press the End call key to end the operation.

Sending/calling text messages

You can send short messages to individual internal users or to groups of internal users. These must have a handset or telephone with display.

These text messages can be selected and supplemented in part by you:

- 0 = Please call back
- 1 = Someone is waiting
- 2 = Appointment
- 3 = Urgent call
- 4 = Do not disturb
- 5 = FAX waiting
- 6 = Dictation please
- 7 = Please come see me
- 8 = Please make coffee
- 9 = Ready to depart


These text messages are standard texts and may have been changed in your communication system.

Sending a text message

- Press and hold down the Talk key.
- Open the system menu.
- Select the menu item and confirm.
- Enter the phone number for the required internal user or the group.
- Select the required advisory message.
- Or:
- Select the menu item and confirm.
- Enter the required text message.
- Typing errors can be corrected: activate delete mode by double-clicking the hash key and then use the hash key to delete a character.

Note:

For example, if you want to enter the third character on a key: press the relevant key three times in succession.
Press the Start key first to switch to upper-case input.

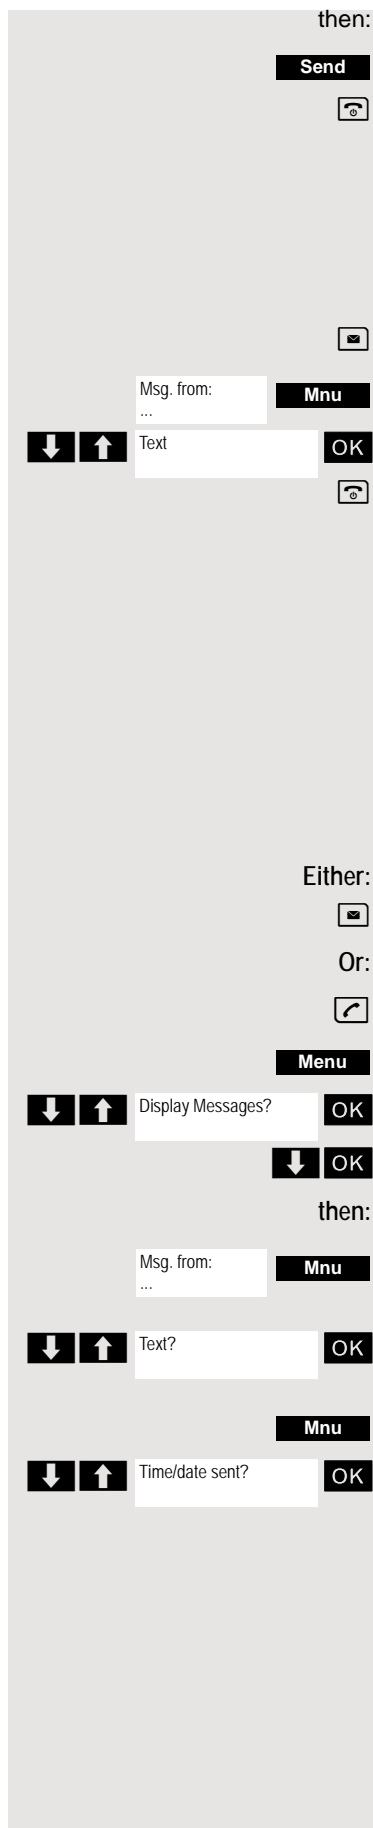

Press the display key.
 Press the End call key to end the operation.

Opening an incoming text message

An advisory message appears and the message key flashes when one or more text messages have been received for you. The date and time of incoming text messages are based on your communication system's clock.

Press the "message list" key.

Open the additional menu.

Select the menu item and confirm. The text message is displayed.

Press the End call key to end the operation.

Answering a message or voicemail message

An advisory message appears and the message key flashes when one or more information messages or voicemails have been received for you.

Viewing a new message

Press the message key.

Or:



Press and hold down the Talk key.

Menu

Open the system menu.

↓ ↑ Display Messages? OK

Select the menu item and confirm.

↓ OK

Select the required message and confirm your selection.

then:

Msg. from: Mnu

Open the additional menu.

↓ ↑ Text? OK

Select the menu item and confirm.

Mnu

Open the additional menu.

↓ ↑ Time/date sent? OK

Select the menu item and confirm. The time of the message is displayed.



Open the additional menu.

Select the menu item and confirm. You call back the sender.

Or:

Select the menu item and confirm. The entry is deleted.

then:



Press the End call key to end the operation.

Checking for a new voicemail message

Either:



Press the message key.

Or:



Press and hold down the Talk key.

Menu

Open the system menu.

Navigation arrows (down and up) and "Display Messages?" with an "OK" button.

Select the menu item and confirm.



Follow the user guidance system from this point onwards.



Press the End call key to end the operation.

Checking for an old text message

Old messages that have not been deleted cannot be displayed using the message key . To view these messages, proceed as follows:



Press and hold down the Talk key.

Menu

Open the system menu.

Navigation arrows (down and up) and "Display Messages?" with an "OK" button.

Select the menu item and confirm.

Navigation arrow (down) and "Msg. from: ..." with a "Mnu" button.

Select the required message and call the additional menu.

Navigation arrows (down and up) and "Text?" with an "OK" button.

Select the menu item and confirm.

Navigation arrows (down and up) and "<Text>" with a "Mnu" button.

Open the additional menu.

"Time/date sent?" with an "OK" button.

Select the menu item and confirm. The time of the message is displayed.

Navigation arrows (down and up) and "at: ..." with a "Mnu" button.

Open the additional menu.

Either:

Navigation arrows (down and up) and "Call Sender?" with an "OK" button.

Select the menu item and confirm. You call back the sender.

Or:

Navigation arrows (down and up) and "Delete?" with an "OK" button.

Select the menu item and confirm. The entry is deleted.

then:



Press the End call key to end the operation.

More features

Callback

This function enables you to call a user who does not answer or whose line is busy. The Callback function enables you to contact this user as soon as he or she hangs up or re-uses his or her telephone. Please note that a line is signaled as busy when it is being called by another user. You can continue to use your handset without restriction when a callback has been booked.

You can also send a callback request as a message → page 72. This function can also be called by entering the code → page 43.

Booking a callback

The number is dialed. You hear the busy tone or the user does not answer.

Save the callback request.

Press the End call key to end the operation.

You receive a callback

You will receive the callback as soon as the user you want has hung up or the first time the user uses his or her telephone. The following appears on your handset display "Callback:...".

Press the Talk key briefly. The connection is set up.

Note:

Callbacks are repeated until a connection is established or until the callback is deleted. A handset can initiate up to five callbacks and can be the destination for up to five callback requests. If these conditions are met, any further callbacks are rejected.

Deleting a callback request

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Select the entry.

Open the additional menu.

Select the menu item and confirm.

Press the End call key to end the operation.



Answering or rejecting a call

Accepting a call

Your handset rings → page 25. The caller information appears on the display. The name and/or telephone number of the caller can be displayed. You have the following options for answering a call:

The handset is in the charging shell: Remove the handset from the charging cradle (only works if "Auto Answer" is active, → page 25).

The handset is not in the charging cradle. Press the Talk key.

When you have accepted the call you can:

- Transfer the call → page 51,
- Place the call on hold and consult with someone else in the room → page 50,
- Place the call on hold and call a second partner → page 50 in order to forward → page 51 or toggle the call → page 52 or to set up a conference → page 53.

Rejecting a call

If you do not wish to be disturbed, you can reject the call.

Confirm the message displayed with one of the two display keys. The call is rejected and the caller hears the busy tone. You are routed to the other party's mailbox (if configured) or can program a callback request → page 75.

Picking up a call in a call pickup group

You can use your handset to pick up calls to telephones within your call pickup group (set by the service engineer). This is also possible when you are conducting a call.

Prerequisite:


You hear that a telephone in your call pickup group is ringing.

Press and hold down the Talk key. The message "Call for:" appears on the display.

Open the system menu.

Select the menu item and confirm.

You are conducting the call.

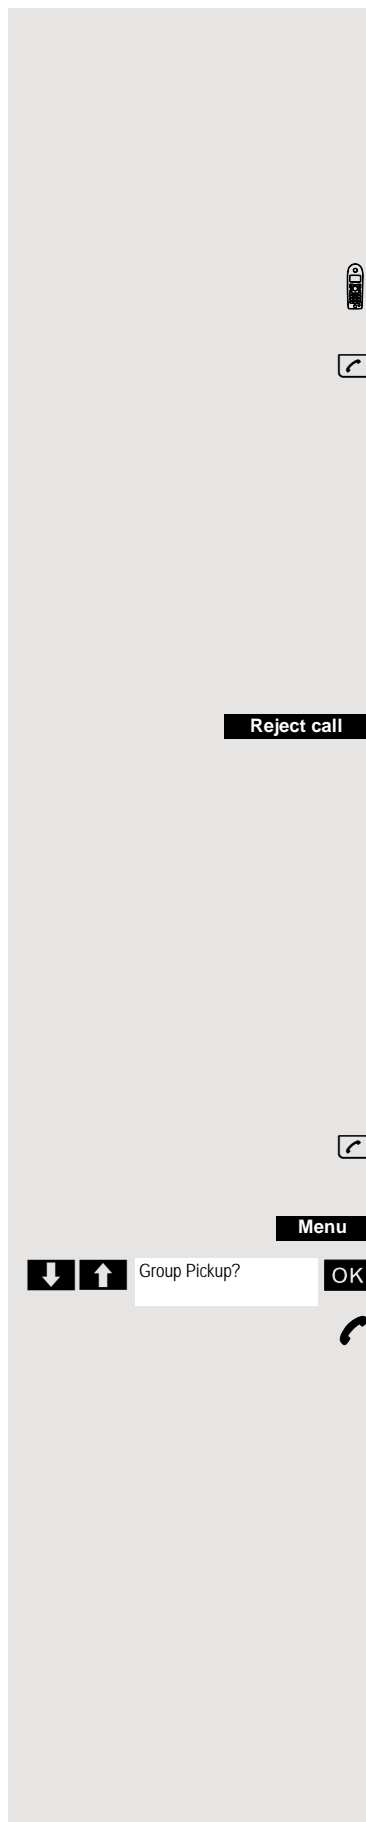

Forwarding calls

This function is for when you leave your desk for a while and want certain calls to be forwarded to your new location. The forwarding destination for internal calls can be any internal or external phone number. The destination number is usually an external phone number because you can be reached internally anytime by means of your handset.

Activating call forwarding

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the destination number.

Save the settings.

Press the End call key to end the operation.



Note:

The external code must be entered before external phone numbers.

Deactivating call forwarding

Prerequisite:


The call forwarding function is activated.

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Press the End call key briefly to end the operation.

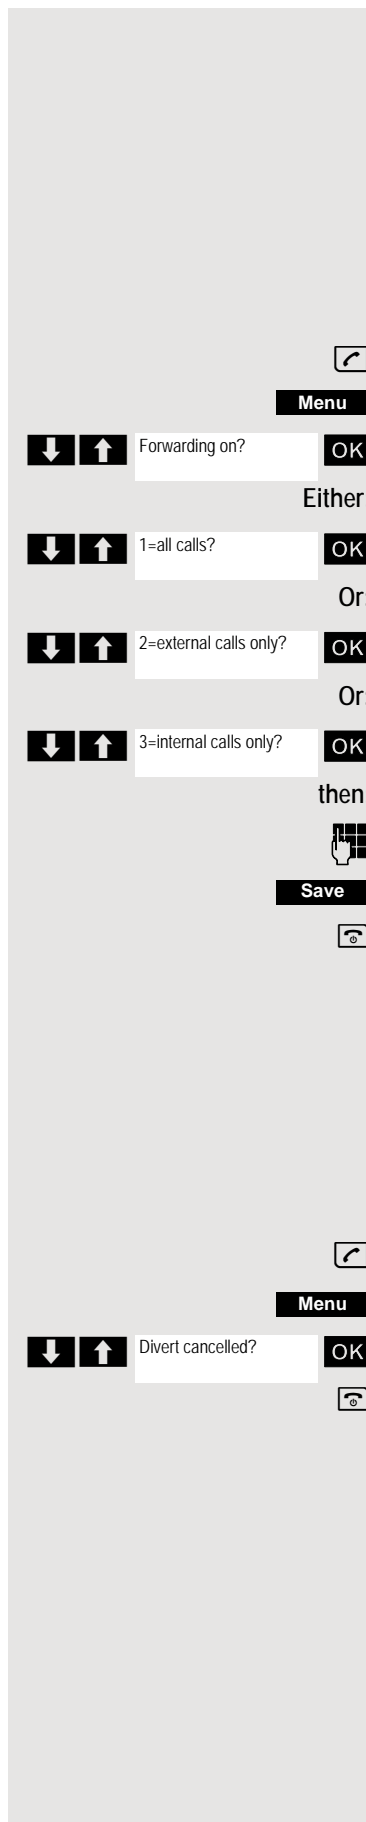

Directed assignment of an MSN (multiple subscriber number)

Multiple subscriber numbers are phone numbers belonging to an ISDN multiple device line. They are used for the directed addressing of terminals, for example when a fax machine has a separate number. Before selecting an external connection, you can directly assign a configured multiple subscriber number. The assigned number then appears on the called party's display.

This function can also be called by entering the code → page 43.

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the required MSN (for example 111).

Enter the required external phone number. The phone number is dialed.

Making calls using identification codes

In the case of calls you make to external partners, you can enter and charge the call costs on the basis of individuals, customers, accounts and private calls, for example, by means of account codes. The account code (ACCT) can contain up to 11 characters and is included in the data printout. The ACCT is only transferred after a call has been completed. The ACCT can be entered before and during the external call.

This function can also be called by entering the code → page 43.

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the required account code (optional).


Save the settings.

Enter the external phone number. The phone number is dialed.



Note:

If a call is transferred, the costs are still assigned to the ACCT entered.

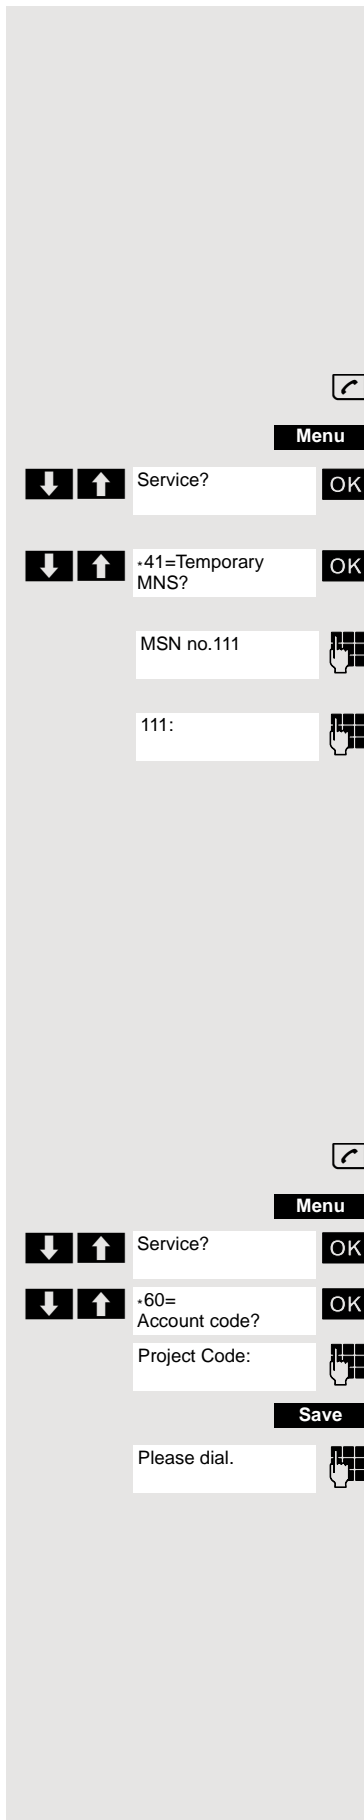

Using the handset as a second line

You can use your mobile phone for an outgoing call as if it were another line (temporary phone).

This function can also be called by entering the code → page 43.

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the internal phone number for the relevant line.

Enter the code (lock code) for the relevant line → page 57. Do not use the default phone code (00000) for the user.

If there is no personal code for the relevant line, the system will prompt you to enter the code.

Enter the number you wish to dial. The phone number is dialed.

The "Temporary phone" function is discontinued again after the call is complete.

Deactivating the phone number display

Your service engineer can deactivate the display of your phone number and name on the called party's display for external outgoing calls. You can also activate and deactivate the phone number display on your own handset yourself.

Deactivating the phone number display

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Press the End call key to end the operation.

Activating the phone number display

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Press the End call key to end the operation.





Directed call transfer

You can transfer calls to other telephones to your handset. This is also possible when you are conducting a call.

This function can also be called directly by entering the code → page 43.

Another telephone rings.

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm. The called user is displayed.

Open the additional menu.

Select the menu item and confirm.

Note:

If several users are called simultaneously, only the first user called is displayed. However, you can transfer by entering the phone number of any of the users called.

Select the menu item and confirm.

You are conducting the call.

Activating/deactivating do not disturb

You can block calls to your handset on a temporary basis, while still being able to make calls yourself. Internal callers hear the busy tone, while external callers reach another telephone defined by the service engineer (intercept position). Authorized internal callers automatically override the DND feature after five seconds.


Activating do not disturb

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Press the End call key to end the operation.

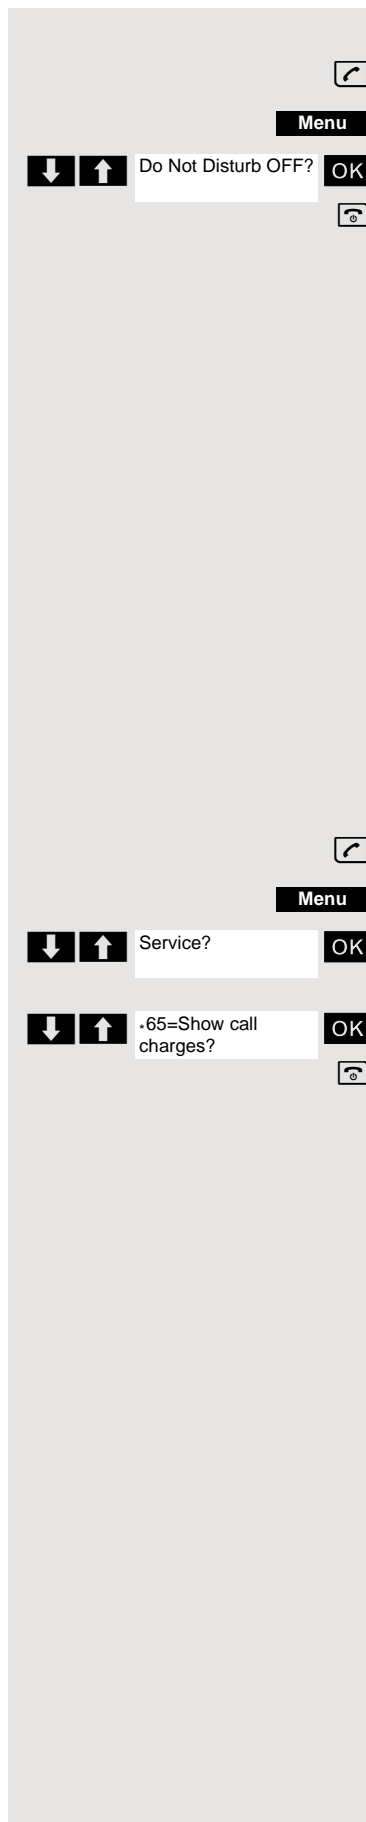

Deactivating do not disturb

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Press the End call key to end the operation.

Call charge display

After a call has ended, the display shows the connection charges for the current call as standard. If the costs are to be displayed continuously during an outgoing call, this function must be requested from the carrier.



Note:

If a call is transferred, the costs are assigned to the telephone to which the call was transferred from this point onwards.

You can check and display the call charges for your phone number as a total for a period that can be set by the service engineer.

First the call charges for the last charged call are displayed. The total call charges are displayed after five seconds.

This function can also be called directly by entering the code → page 43.

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Press the End call key to end the operation.

Tracing a call

You can apply to your carrier for "call tracing" on malicious calls. An authorized extension is then in a position to request the identification of the phone number.

This also works for 30 seconds after the malicious caller has hung up. However, you should not hang up.

This function can also be called directly by entering the code → page 43.

You receive a malicious call.
Do not hang up.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm. The caller is identified in the attendant console.

Press the End call key to end the operation.

Entrance telephone

If the service engineer has set up an entrance telephone, you can speak to the door intercom and activate the door opener from your handset.

If you are authorized to release a door, then a user can open the door by entering a five-digit code (for example, by means of a DTMF transmitter or installed keypads).

Some of the functions described below can also be called directly by entering the relevant code → page 43.

Talking to a visitor by means of the door opener equipment

Your handset rings.

Either:



Press the Talk key within 30 seconds. You are connected to the entrance telephone immediately.


Or:



If more than 30 seconds have passed: Press and hold down the Talk key.



Enter the internal phone number for the door opener. You are connected to the door opener.

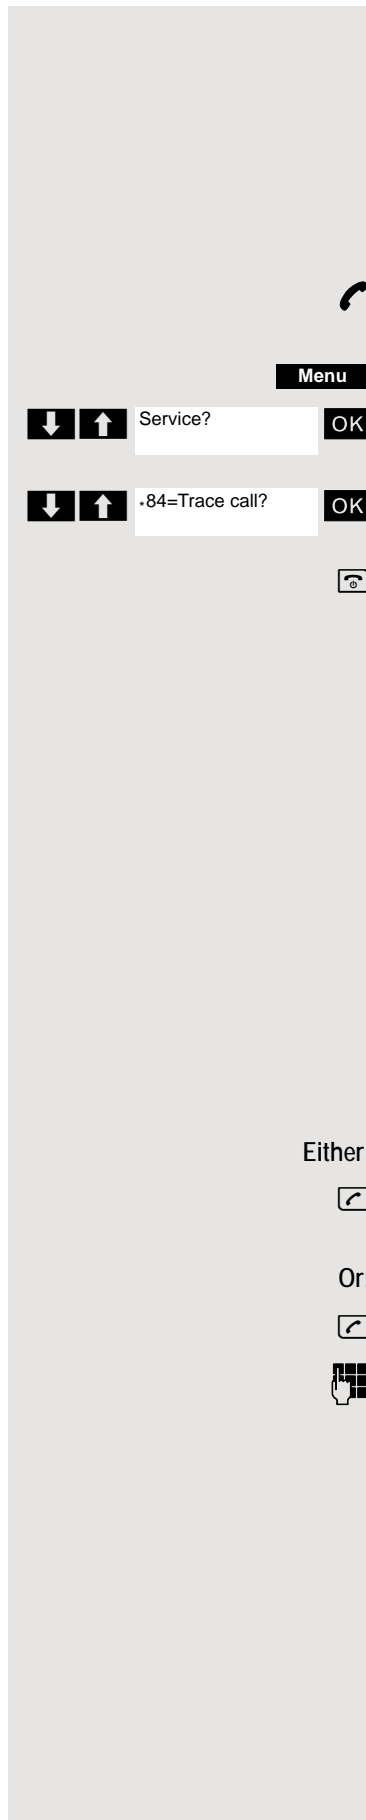



Using the handset to open the door opener during a call

Select the menu item and confirm.

Using the handset to open the door opener without holding a conversation

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the internal phone number for the door opener. The door is opened.

Press the End call key to end the operation.

Activating the door release

This function only works if it has been configured by the service engineer.

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Follow the user guidance system from this point onwards. Enter the internal phone number of the door opener, as well as the code and type of door release:

- 1=enable with ring,
- 2=enable w/o ring,
- 3=change password.

Confirm your entries.

Press the End call key to end the operation.

Note:

Standard code "00000". To change the code, confirm option "3=change password". Follow the user guidance system.

Deactivating the door opener

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Press the End call key to end the operation.

Activating control relays

The service engineer can set up a maximum of 4 control relays that enable various equipment (for example, door opener) to be activated and deactivated.

It is possible to access a specific control relay. Depending on the configuration, the control relays can be

- activated and deactivated automatically, or
- activated and deactivated automatically on the basis of a timer.

Prerequisite: The service engineer has set up at least one switch.

This function can also be called directly by entering the code → page 43.

Activating a control relay

Press and hold down the Talk key.

Open the system menu.


Select the menu item and confirm.

Select the menu item and confirm.

Follow the user guidance system from this point onwards. Enter the required switch code (1... 4).

Press the End call key to end the operation.



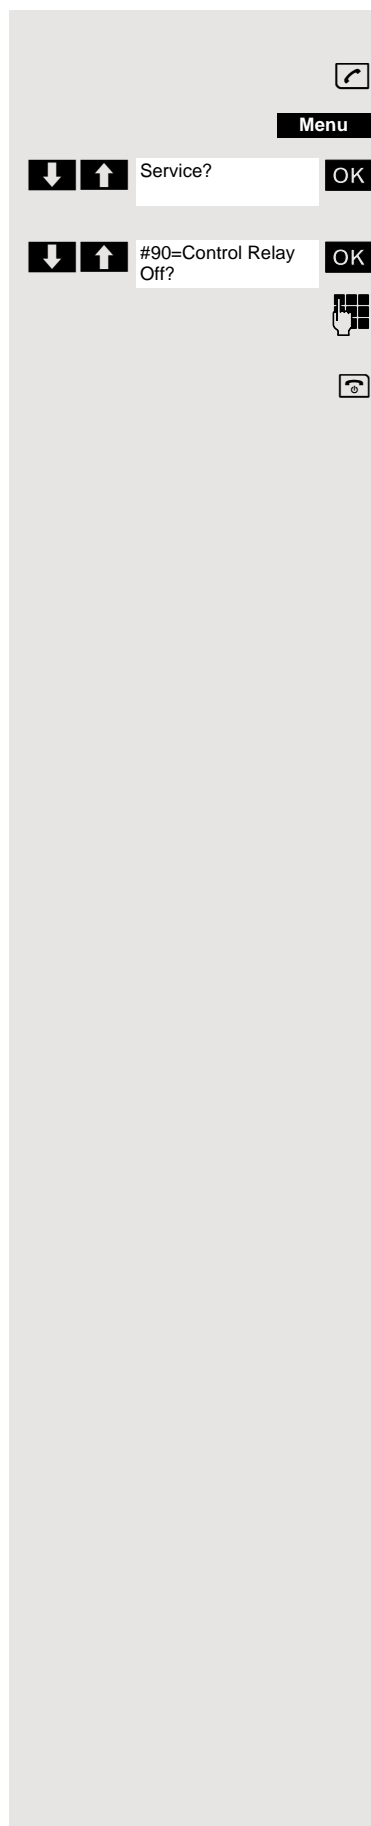

Deactivating a control relay

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Follow the user guidance system from this point onwards. Enter the required switch code (1... 4).

Press the End call key to end the operation.

External call forwarding with a multiple subscriber number

If your communications system is connected to an ISDN multiple device line, then you can forward all incoming calls from the public network through your multiple subscriber number (MSN) to an external destination.

There are three types of forwarding:

- Calls are forwarded immediately (1=immediate call forwarding).
- Calls are forwarded after a certain time (2=unanswered calls).
- Calls are only forwarded when the line is busy (3=when busy).

Activating call forwarding to a "trunk"

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter and confirm your own multiple subscriber number.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the destination number (without the external code).

Save the settings.

Deactivating call forwarding to a "trunk"

Press and hold down the Talk key.

Open the system menu.


Select the menu item and confirm.

Select the menu item and confirm.

Follow the user guidance system from this point onwards (enter a multiple subscriber number or DID and forwarding type).

Confirm your entries.

Press the End call key to end the operation.

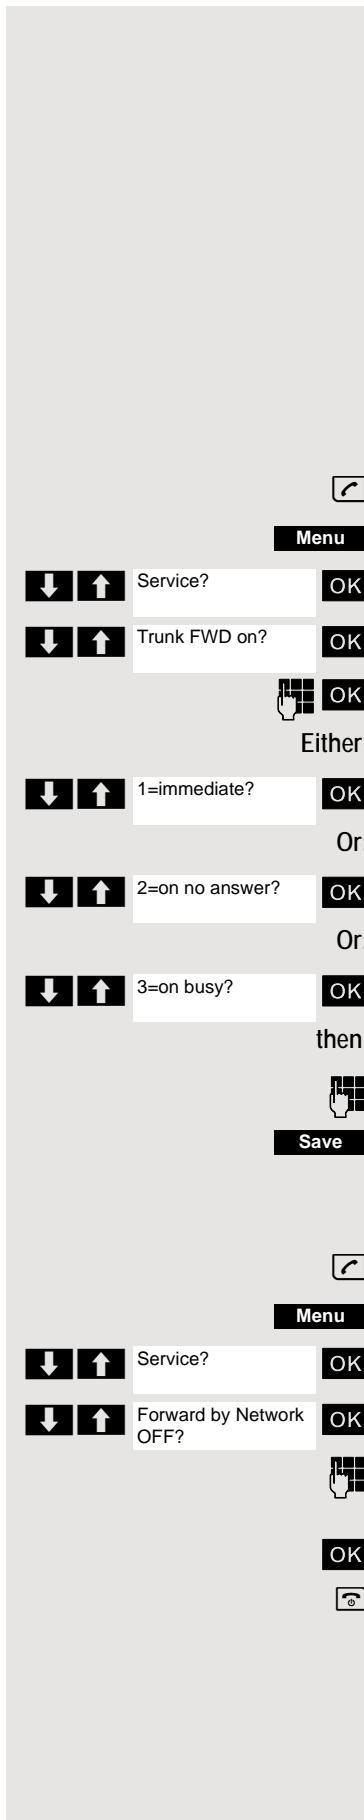

Using night service

In night service mode, for example, during lunch breaks or after office hours, all external calls are forwarded to a particular internal telephone (night station). The night station can be defined by the service engineer (= standard night service) or by you (= temporary night service). When night service is active, the night station assumes the function of the intercept station.

Note:

You have to have the appropriate COS to activate night service.

Activating night service

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

"Standard night service" is configured.

Enter your internal station number.

Save the settings.

"Temporary night service" is configured.

Press the End call key to end the operation.

Deactivating night service

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Press the End call key to end the operation.



Using dual-tone multifrequency signaling

Your handset operates on the basis of digital information transmission. However, certain applications, for example answering machines, can only be operated using analogue technology. For this you have to send signals using the dual-tone multifrequency signaling (DTMF) process.

Depending on how your system is configured (automatic tone dialing on or off - to be configured by the service engineer) you must first switch to DTMF dialing. This means, for example, that you can communicate with a variety of voice storage systems.

You will find further details in the operating instructions for the relevant applications.

Automatic tone dialing is not active

During a connection you have to first switch to dual-tone multifrequency signaling.

You are conducting a call.

Open the system menu.


Select the menu item and confirm.

Select the menu item and confirm.

Enter the numbers. All entries are sent as DTMF signals.

Automatic tone dialing is active

Enter the numbers. All entries are sent as DTMF signals.

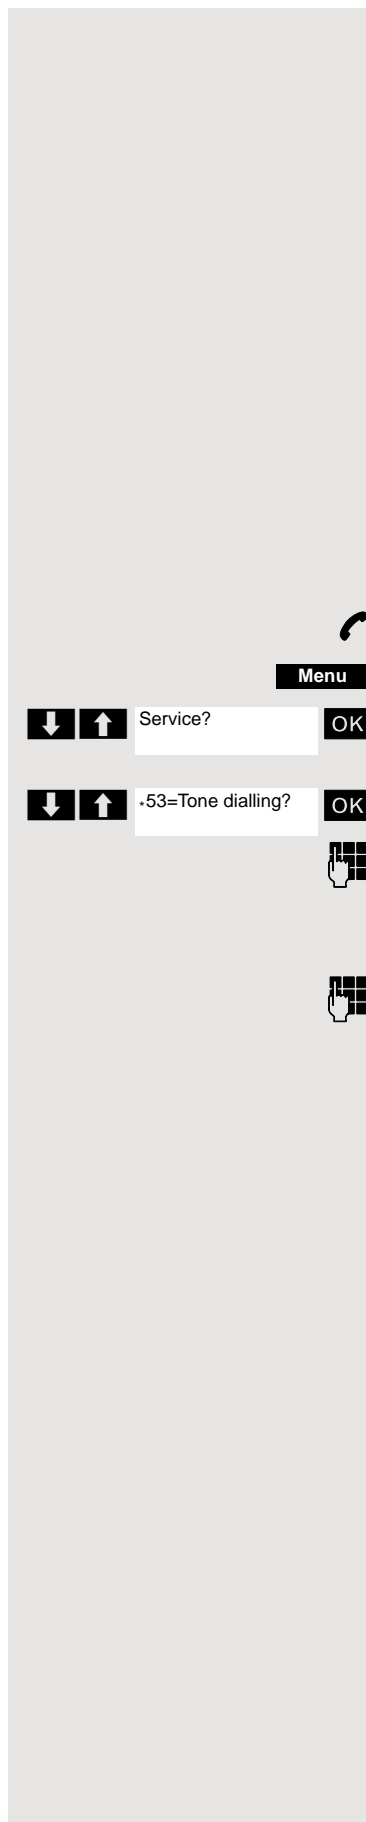



Parking/activating calls

You can park up to ten calls (i.e. place them on hold) and then reactivate them at other telephones in your communication system.

Parking a call

You are on a call you wish to park.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the parking position number (0... 9) and note it down.
If the parking position number entered is already in use, you have to enter another one.

Picking up a specific parked call

Prerequisite:

One or more calls have been parked. Your handset is in stand-by status.

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the parking position number you have noted.

Note:

If a parked call is not picked up, it returns to the station from which it was parked after a certain time (= recall). The following appears on the display "Recalling: (phone no. or name)" or "recalling from (phone no. or name)".

System appointment function

You can use your handset to enter a single appointment for the next 24 hours or an appointment that recurs on a daily basis.

When the appointment is due, your handset rings for approx. 20 seconds to remind you of your appointment. The entered appointment appears on the display. This appointment call is deleted when you confirm it. Alternatively it is deleted automatically after it has been repeated 5 times at one-minute intervals.

This function can also be called directly by entering the code → page 43.

Saving an appointment

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the required time.


Note the required data format: Appointment at (HHMM); HH = two-digit hour setting mm = minutes, two digits Example: 0905 for 9.05 (= 9.05 a.m.) or 1430 for 14.30 (= 2.30 p.m.).

Select the menu item.

Select the menu item and confirm.

Save the settings.

Press the End call key to end the operation.

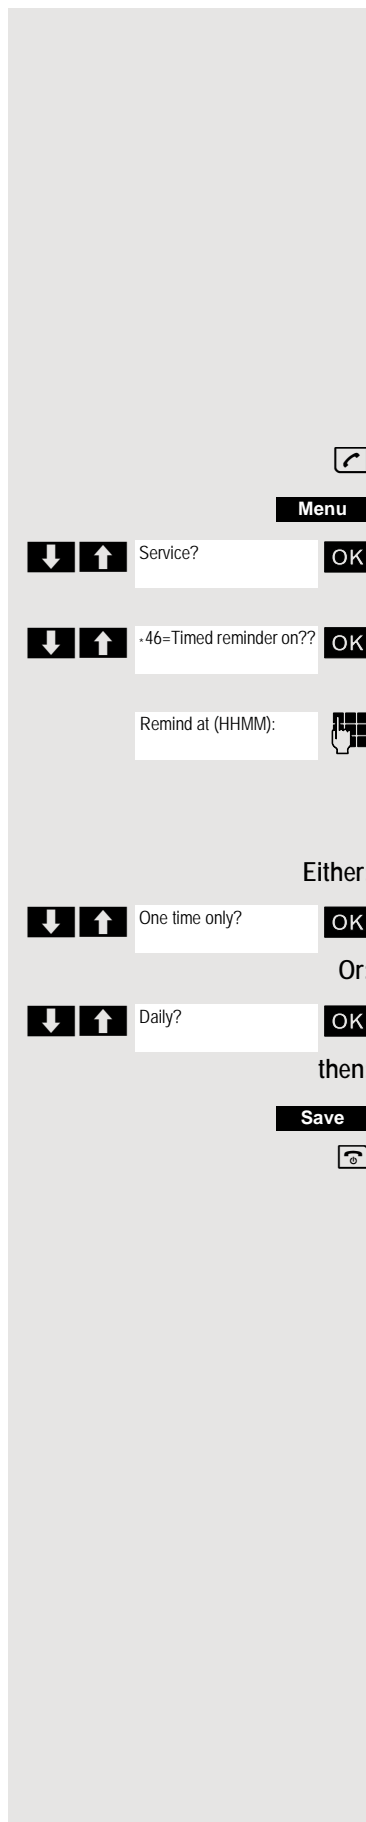



Deleting/checking entered appointments

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Open the additional menu.

Select the menu item and confirm.

Select the menu item and confirm.

Press the End call key to end the operation.

Confirming an appointment

The handset rings and the appointment is displayed.

Press the Talk key.

Press the End call key. The appointment is confirmed.

Telephone lock code programming

You can protect your handset against unauthorized access (thereby safeguarding personal data) by entering a 5-position code to lock and unlock it.

To change a code, first enter the old code and then key in the new code twice.

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the old code (5 digits, default "00000").

Enter the new PIN, for example, 1111 (5 digits).

Re-enter the new code.

Press the End call key to end the operation.

Note:

If you have forgotten your PIN, contact your service engineer for help. He or she will be able to reset your PIN to "00000".

It is also possible to open your handset from a central station, for example, from the attendant terminal.

Locking/unlocking the handset

You can lock your handset to prevent external dialing and programming, thereby preventing unauthorized use in your absence, for example.

Prerequisite: You have defined a personal code or use the default code "00000".

Locking the handset

Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Enter the PIN code (5 digits, default "00000").

Press the End call key to end the operation.



Note:

Even though it is locked, you can still use your handset to answer external calls and make internal calls. When an external connection is established, the following message appears on the display "Telephone Lock Active".

Your handset can also be locked from a central station → page 91.

Unlocking the handset


Press and hold down the Talk key.

Open the system menu.

Select the menu item and confirm.

Enter the PIN code (5 digits, default "00000").

Press the End call key to end the operation.

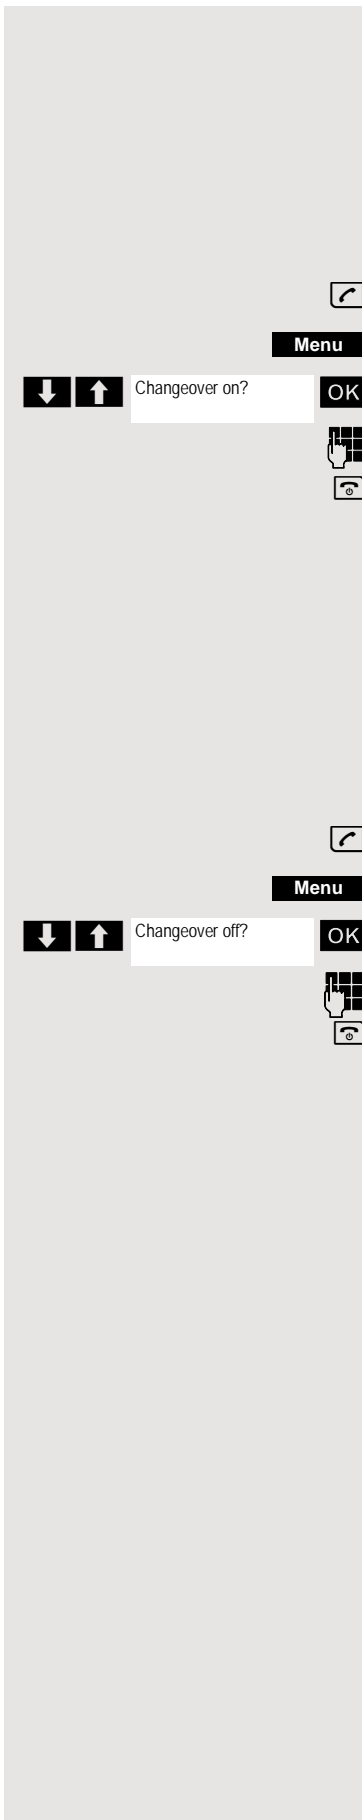

Index

- ## A
- Absence text 71
 - Account code 78
 - Advisory tones 32
 - Alarm 21
 - Alarm clock 21
 - switching on/off 21
 - Alerting tone 53
 - Allocating 51
 - Anniversary, see Appointment
 - Answering a voicemail 73
 - Answering calls 80
 - Appointment
 - displaying missed 19
 - missed 19
 - notification 19
 - setting 19
 - Appointments
 - ~ system 90
 - confirming 91
 - deleting 91
 - entering 90
 - viewing 91
 - Assigning number key 32
 - Authorization 35
 - Automatic
 - answer 31
 - redial 14
 - Automatic call waiting 49
- ## B
- Base station
 - changing 29
 - changing the name 29
 - restoring to default settings 34
 - setting 34
 - Battery
 - charge status 40
 - charging 10
 - inserting 9
 - Best Base 29
 - Bluetooth 25
 - activating 25
 - changing device name 26
 - copying directory (vCard) 18
 - de-registering devices 26
 - list of known devices 26
 - registering devices 26
- ## C
- Calendar 19
 - Call
 - accepting 15, 76
 - anonymous ~ 79
 - directed call transfer 80
 - directed transfer 76
 - external 14
 - picking up 76
 - rejecting 76
 - Call answering 31
 - Call answering group 76
 - Call charges 78, 81
 - Call forwarding 77
 - Call forwarding to a fixed destination 77
 - Call number
 - suppression 79
 - Call pickup group 76
 - Call trace 82
 - Call waiting 47
 - automatic ~ 49
 - Call waiting tone off/on 48
 - Callback 75
 - Caller Melody (VIP) 16
 - Calling
 - external 14
 - Calls
 - rejecting 76
 - Caring for your device 36
 - Changing
 - display language 30
 - earpiece volume 31
 - speaker volume 31
 - Changing device names (Bluetooth) 26
 - Character charts 38
 - Charge status of the batteries 40
 - Charging cradle (handset)
 - connecting 9
 - installing 9
 - CLIP picture 32
 - viewing in resource directory 24
 - CLIP picture, in directory 16
 - Code programming 91
 - Code table 44
 - Color scheme 30
 - Conference 53
 - adding a party 53
 - connecting parties 55
 - disconnecting 54
 - ending 54
 - leaving 54
 - setting up 53
 - viewing 54
 - Connect with base station 29
 - Connecting parties 55

- Connecting the headset 10
 - Consultation (second connection) 46
 - Contact with liquid 36
 - Control key 6, 12
 - Control relays 84
 - Correcting incorrect entries 13
- D**
- DDIA with speed dialing 61
 - Deactivating/activating group calls 63
 - Delayed extension dialing 14
 - De-registering devices (Bluetooth) 26
 - Dialing
 - from the directory 14
 - from the redial list 14
 - using quick dial 32
 - Directed answering of calls 80
 - Directed assignment of an MSN 78
 - Directed transfer of calls 80
 - Directory 16
 - copying numbers 18
 - copying vCard (Bluetooth) 18
 - creating an entry 16
 - dialing numbers 14
 - entry 16
 - LDAP 57
 - memory 17
 - opening 16
 - order of entries 17
 - searching 16
 - selecting an entry 16
 - sending entry/list to handset 18
 - Display
 - backlight 30
 - changing display language 30
 - color scheme 30
 - memory in the directory 17
 - missed appointment/anniversary 19
 - screensaver 30
 - setting 30
 - Display icons 40
 - Display keys 6, 12
 - assigning 32
 - icons 40
 - Do not disturb 32, 80
 - switching off ringtone when in charging cradle 22
 - time control 22
 - Door release
 - activating 83
 - deactivating 83
 - DTMF dialing 88
- E**
- Earpiece volume 15
 - End call key 6, 14
 - Entering codes 43
 - Entering special characters 13
 - Entering special letters 13
 - Entering text 13
 - Entering umlauts 13
 - Entrance telephone 82
 - Environment 36
 - Extension systems, dialing in
(delayed extension dialing) 14
 - External call forwarding 86
- F**
- Fast access 14, 32
 - Firmware update 27
 - Functions and codes 44
- G**
- Getting started 9
 - Gigaset QuickSync 23
 - Group functions 63
- H**
- Handset
 - advisory tones 32
 - automatic keypad lock 31
 - changing the settings 30
 - changing to a different base station 29
 - changing to best reception 29
 - color scheme 30
 - connecting the charging cradle 9
 - display backlight 30
 - display language 30
 - earpiece volume 15, 31
 - idle status 13
 - keypad illumination 31
 - locking/unlocking 92
 - muting 15
 - registering 29
 - registering to another base station 29
 - restoring to default setting 32
 - setting up for use 9
 - speaker volume 15, 31
 - switching on/off 12
 - using multiple 29
 - Handset charging time 37, 38

Handset operating time	37, 38
Handsfree key	15
Handsfree mode	15
Hash key	6
Headset (Bluetooth)	25
Headset port	11
Hearing aids	8
Help	35
Holding	50
Holding a call	50
Hunt group	63

I

Icons	
alarm clock	21
indications	40
on display keys	40
status bar	40
Identification code	78
Idle status	
returning to	13
Illumination, keypad	31
Indications, icons	40
Individual system speed dialing	61
Information message, viewing	73

K

Key 1 (fast access)	6
Key, assigning	32
Keypad illumination	31
Keypad lock, automatic	31
Keys	
control key	6, 12
display keys	6, 12
end call key	6, 14
fast access	6
handsfree	15
hash key	6
menu	12
message key	6
on/off key	6
profile key	6
recall key	6
star key	6
talk key	6
volume	12
volume keys	6

L

Language, display	10, 30
LDAP telephone database	57
Liquids	36
List	
known devices (Bluetooth)	26
Lock telephone	91
Locking/unlocking the keypad	12
Locking/unlocking the telephone	92
Lower/uppercase	13

M

Mailbox function	71
Making anonymous calls	79
Making calls	
accepting a call	15
external	14
Medical equipment	8
Melody	
ringtone for internal/external calls	32
Memory in the directory	17
Memory, resource directory	25
Menu key	12
Message	
leaving	71
viewing	73
Message functions	71
Message key	6
Messages	71, 72
Microphone	6
switching on/off	15
Missed appointments/anniversaries	19
MSN	78, 86
Mulap group	
activating/deactivating group calls	69
forwarding	
activating	70
deactivating	70
forwarding a line	69
Multiple subscriber number	78, 86
Muting the handset	15

N

Night answer	87
Number	
copying to the directory	18
saving in the directory	16
Numbers	
entering	13

O

On/off key	6
Override	50

P

Package contents	9
Parking a call	89
PC interface	27
Phone	
setting	34
Phonebook	
~ system	56
Picking up a call	76
Picture	
as CLIP image	24
as screensaver	24
deleting	24
formats	24
renaming	24
Picture CLIP	32
PIN	91, 92
Power adapter	8
Power consumption	37
Profile key	6
Protection from calls	32

Q

Questions and answers	35
-----------------------------	----

R

Range	9
Recall	51, 89
Recall key	6
Redial list	14
Registering (handset)	29
Registering devices (Bluetooth)	26
Rejecting a call	76
Resource directory	23, 24, 32
memory	25
viewing CLIP picture	24
Ringing group on	65
Ringtone	
changing	31
melody for internal/external calls	32
switching off when in charging cradle	22
time control	22
Ringtones	31

S

Safety notes	8
Screensaver	30
Searching in directory	16
Second call	55
Second connection (consultation)	46
Second line	79
Service code groups	44
Setting the date	10, 34, 42
Setting the system	34
Setting the time	10, 34, 42
Setting up for use, handset	9
Show call charges	81
Signal strength	40
Signal tone, see Advisory tones	
SMS	72
Snooze mode (alarm clock)	21
Sound	
deleting	24
format	24
playback	24
renaming	24
Sounds for ringtones	24
Speaker	15
Speaker volume	15
Speed dialing	
suffix-dialing/DDIA	61
system	60
system (individual)	61
Star key	6
Status bar	6
icons	40
Suffix-dialing with speed dialing	61
Switching between calling partners	52
System speed dialing	60
System speed dialing, individual	61

T

Talk key	6
Technical data	37
Telephone blocking	91
Telephone conference	53
Temporary phone	79
Text message	72
Time control for external calls	22
Toggle/connect	52
Transfer	51
Transferring	51
Transferring a call	51, 76
Troubleshooting	
general	35

U

UCD night service	68
Uniform Call Distribution	66
Update	27
Upper/lowercase	13

V

Vibration alarm	32
Viewing a message	73
VIP group, classify directory entry	16
VIP ringtone	16
Volume	
earpiece	31
handset speaker volume	31
handset speaker/earpiece volume	15
speaker	31
Volume keys	6, 12

W

Warning tone, see Advisory tones	
Wrap-up time	67