OpenScape Business V3

How To Configure SIP Trunk for SCALDIS ict & telecom

Table of Contents

Configuration Data 2
Configuration Wizard 4
Internet Telephony 4
Internet Telephony configuration 6
Define bandwidth (# Trunks) 9
Special phone numbers 9

Table of History

Date	Version	Changes
2021-03-15	1.0	First version
2021-06-02	1.1	Second version
2021-12-13	1.2	Released with OpenScape Business V3R1 FR2
2024-09-06	1.3	editorial changes

Note: The basis for this document is the current OpenScape Business at the time of certification. Since OpenScape Business is constantly developed, input masks and interfaces as well as requirements may change in the future. The settings and entries described here then apply accordingly.

Configuration Data

Information from ITSP SCALDIS ict & telecom

Name	**Example**
Call Number:	(077) 3020190……3020199
Gebruikersnaam:	104675001
Wachtwoord:	e.g. 58#$II9*
Number of voice-channels:	2

Configuration Wizard

Internet Telephony

Go to „Central Telephony – Internet Telephony“

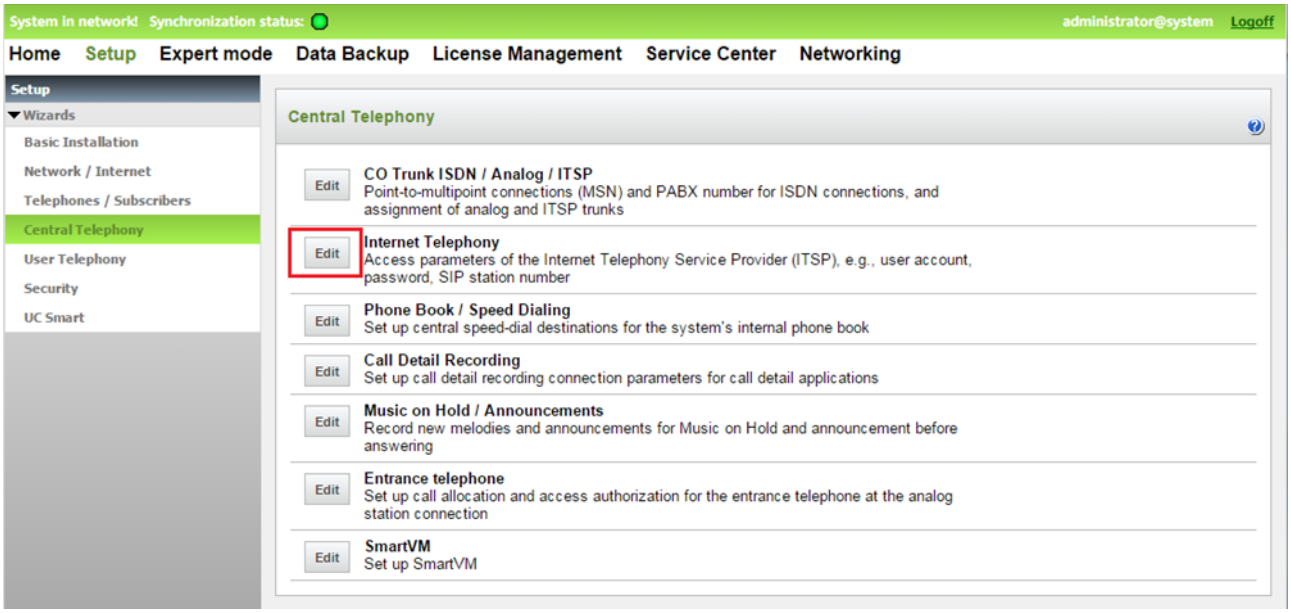

The overview page appears for entering the location data. The most flexible type of configuration is to enter the Country code only.

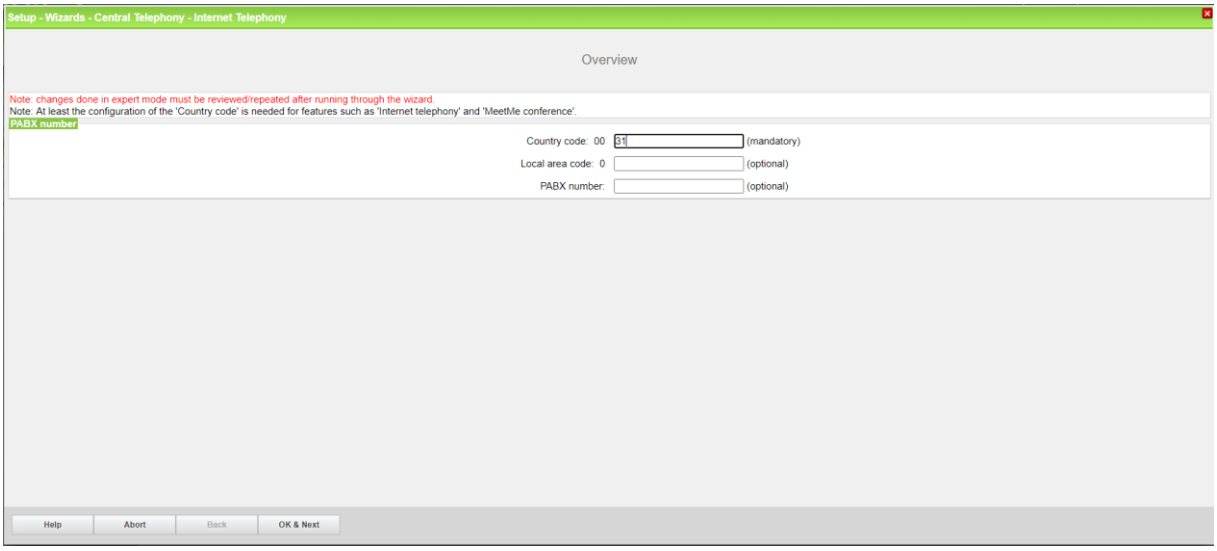

In this case, remaining digits are filled in DID field.
Click [OK & Next]

Provider configuration and activation for Internet Telephony -> No call via Internet -> uncheck

Use County specific view : Netherlands and select Scaldis B.V.

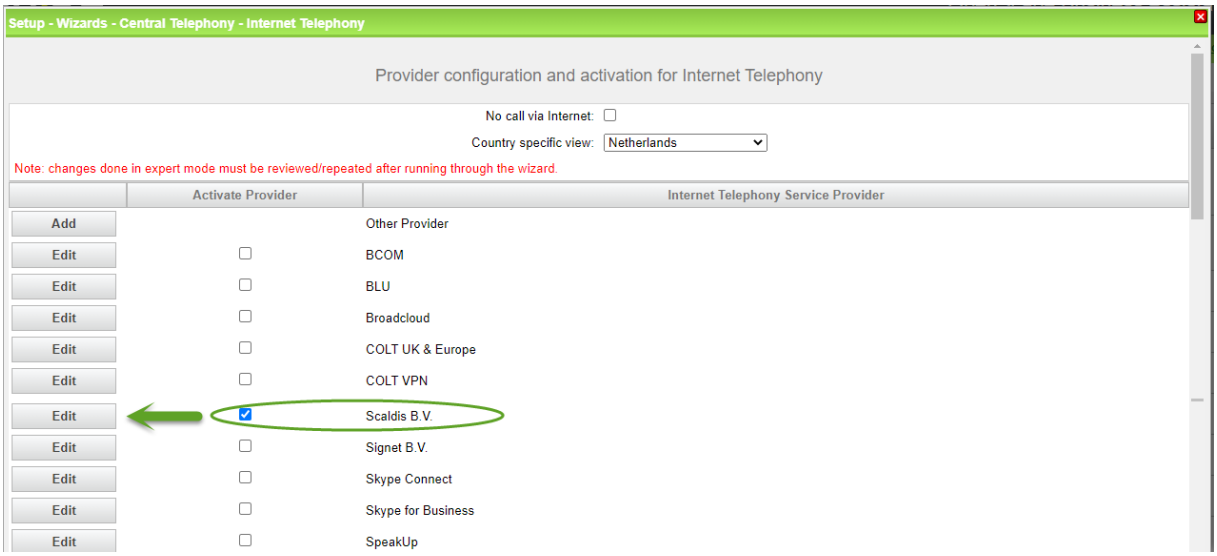

Activate Provider and click on [Edit].

The following settings are shown. They should not be changed.

Only in case Call deflection must be used, the flag “Route optimize active” needs to be activated. In this case an external call forward will be done by the provider and the trunk channels in the system will remain free. If A-number presentation is preferred with Scaldis ICT & Telecom trunk parameter must be set.

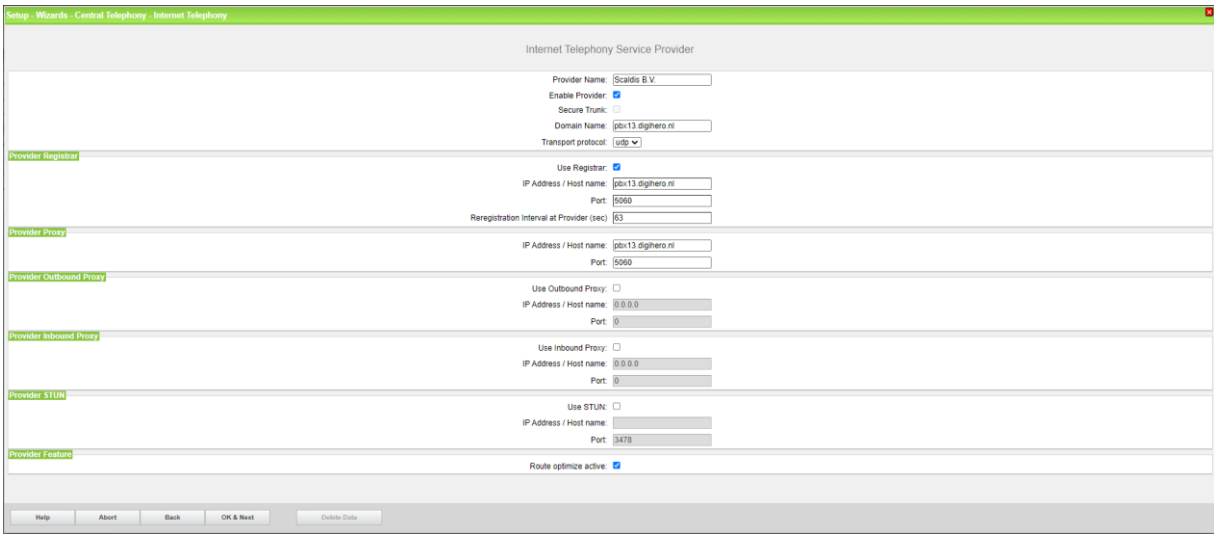

Internet Telephony configuration

In this dialog the specific customer SIP User data will be configured.

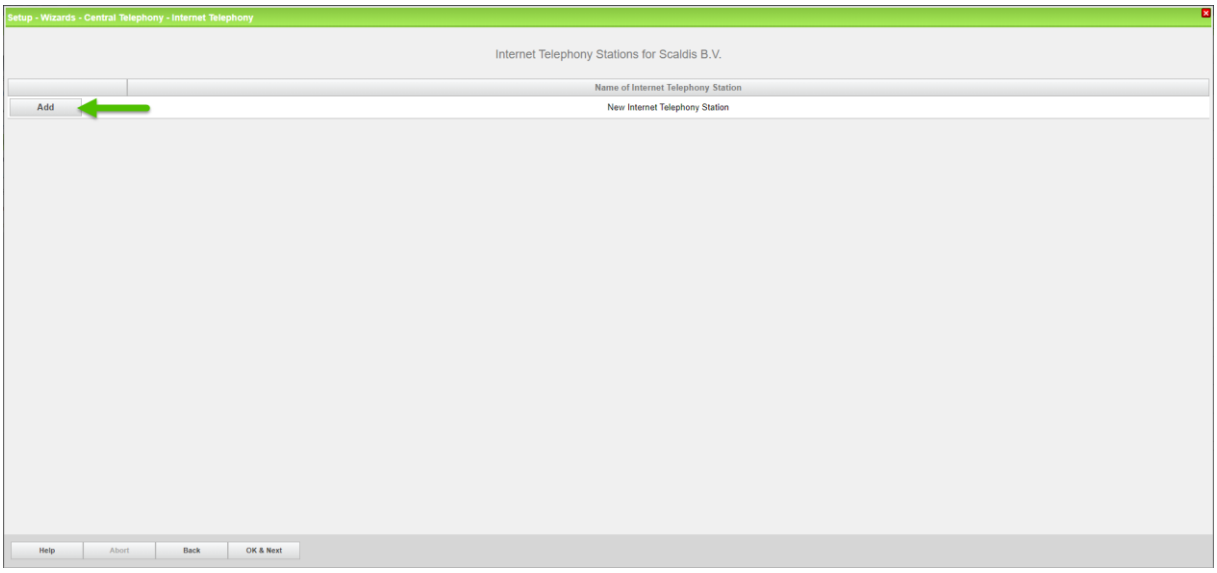

Click on [Add].

Data provided by ITSP SCALDIS ict & telecom is inserted here.

Internet telephony station:	“SIP-User” is inserted here.
Authorization name:	“SIP-User” is inserted here.
Password:	“Wachtwoord” provided by ITSP SCALDIS is inserted here.
Call number assignment:	select “Use public number (DID)”. This is the easiest and preferred way to define the phone numbers in the system. Phone numbers are treated as a normal DID number in the system as if it was normal ISDN.
ITSP multiple route:	Must be used in case more then one account of the same provider (in this case SCALDIS) has to be configured on the same system. When this flag is activated you will be able to define extra accounts.
Default number:	Main number of the connection. The default number is used as Outgoing number when no DDI number is assigned to a station. (number must be in Implicitly international format)

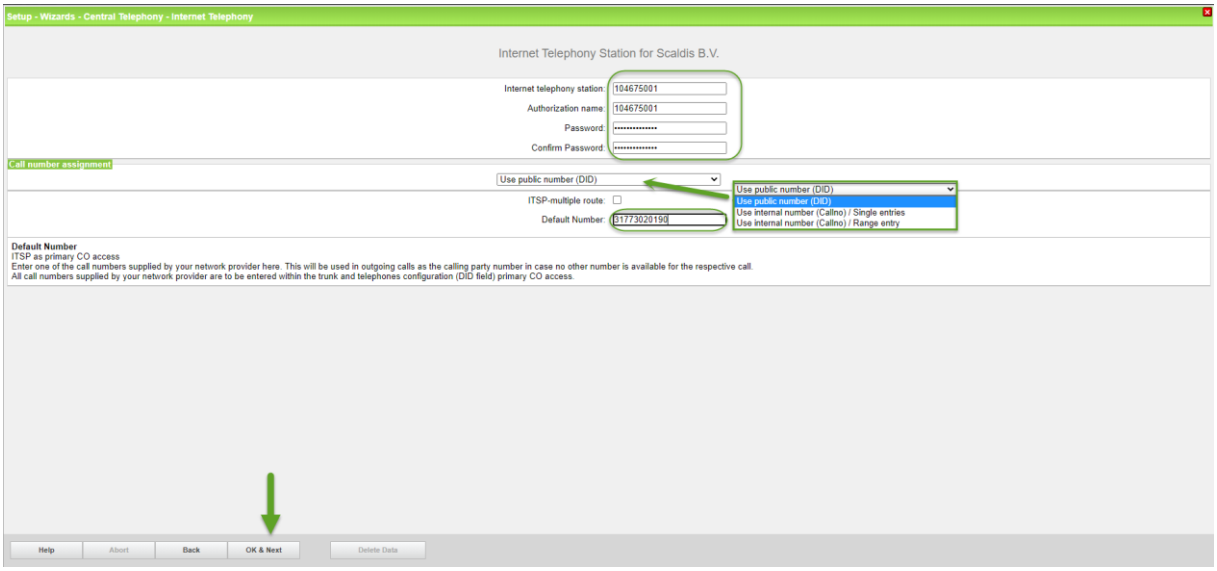

Click [OK & Next].

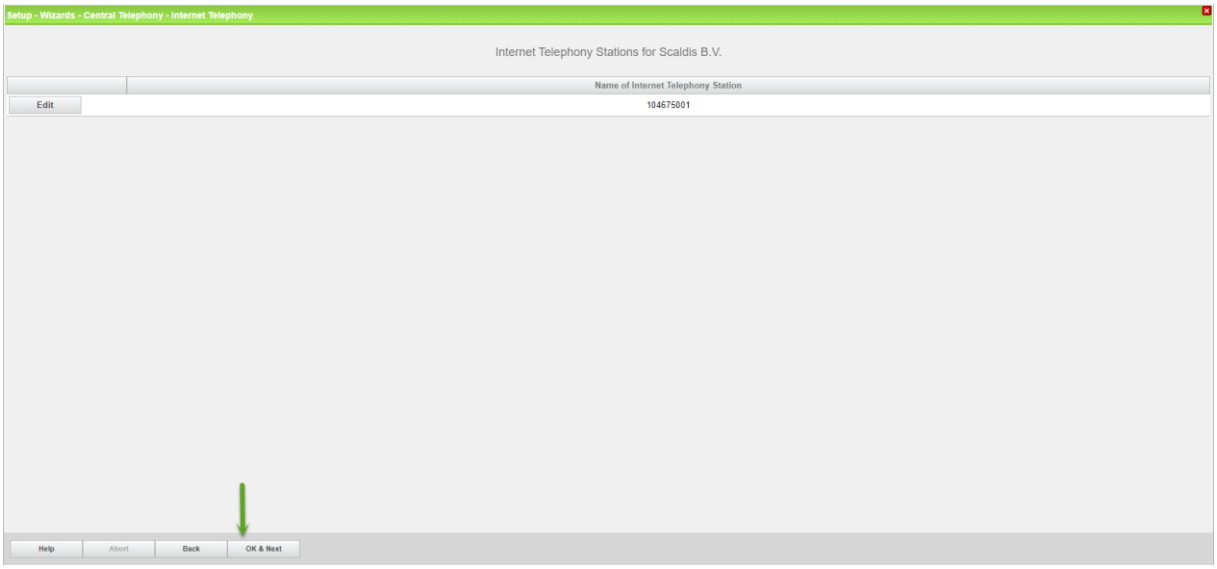

Click [OK & Next].

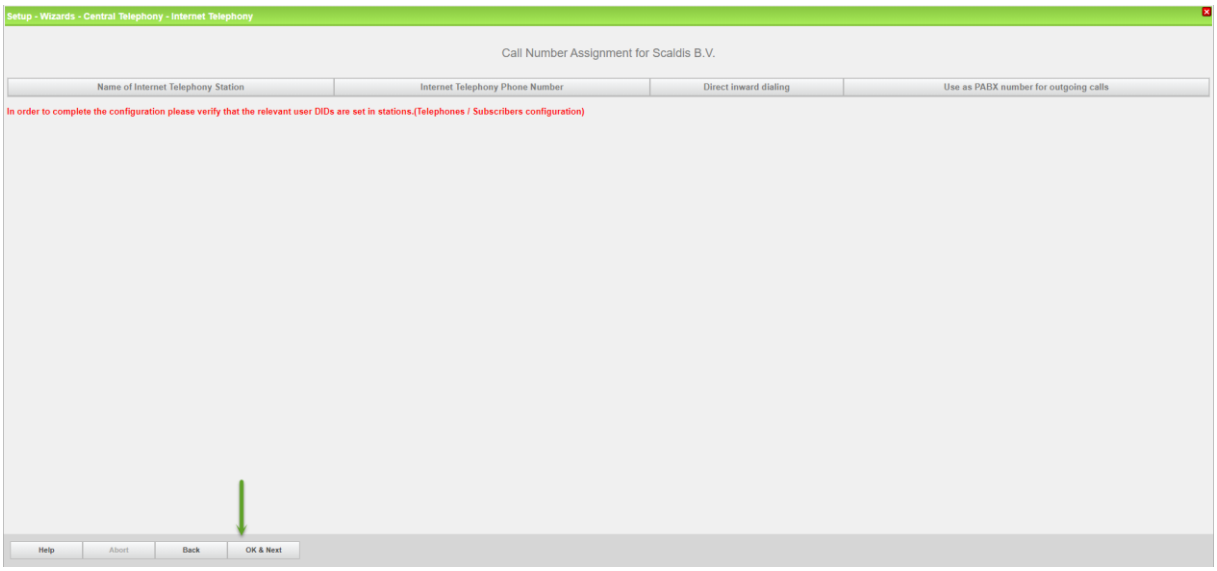

Click [OK & Next] (no input needed)

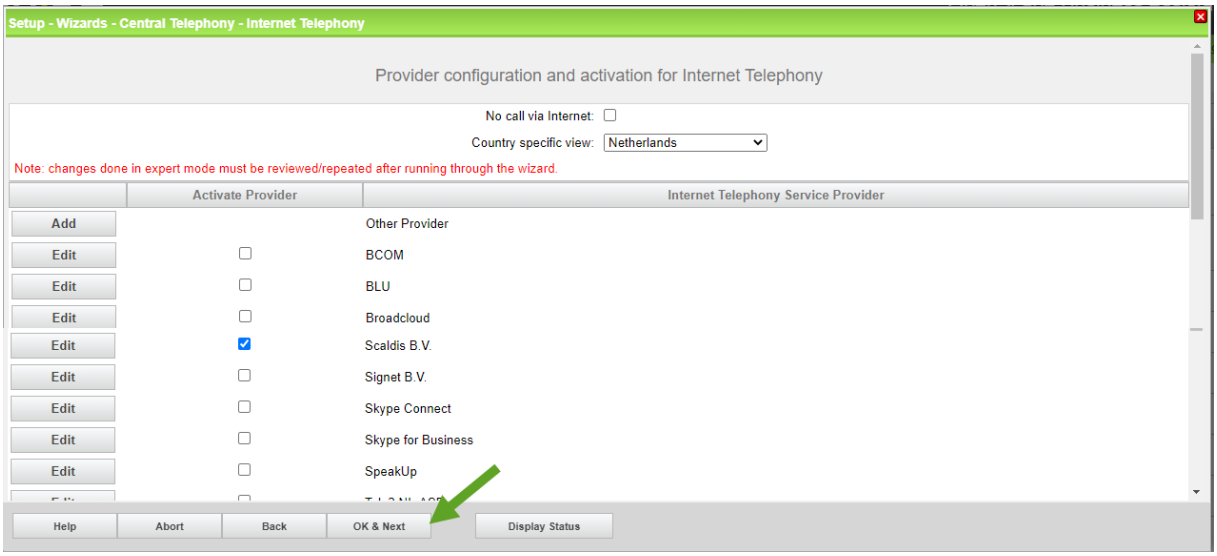

Click [OK & Next] (no input needed)

Define bandwidth (# Trunks)

In the next part the number of simultaneous calls via the SIP trunk will be defined. The calculation of the number of trunks is done by the wizard automatically depending on the bandwidth. For each 128K, one trunk is created. The number can also be defined manually.

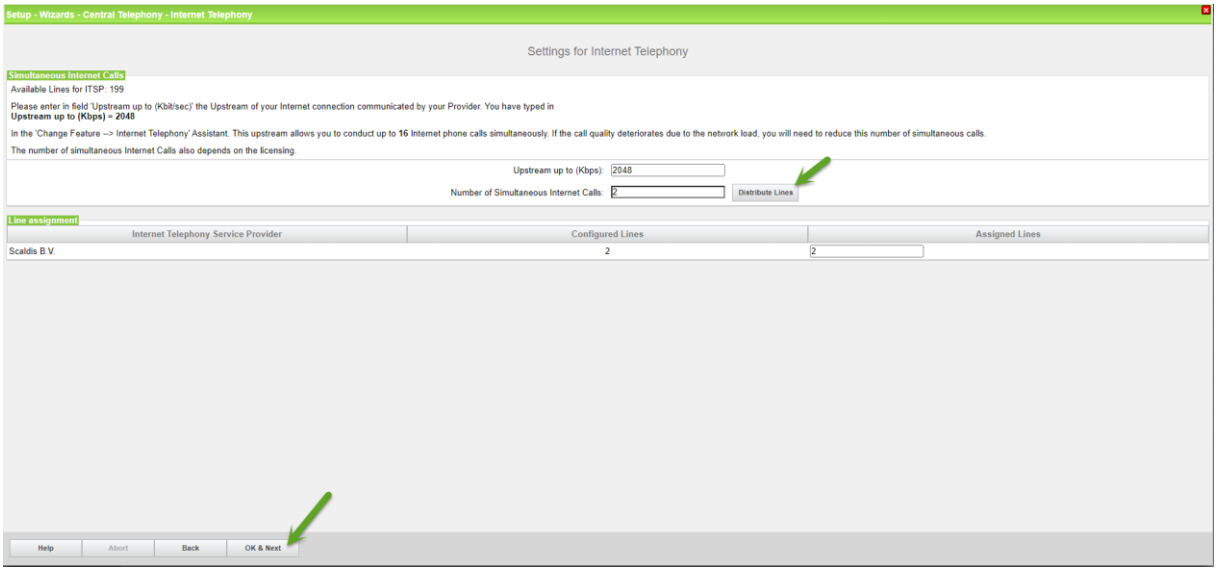

Click [OK & Next]

Special phone numbers

In this dialog it is possible to route special phone numbers. When special phone numbers are not supported over the ITSP route it is possible to change this here.

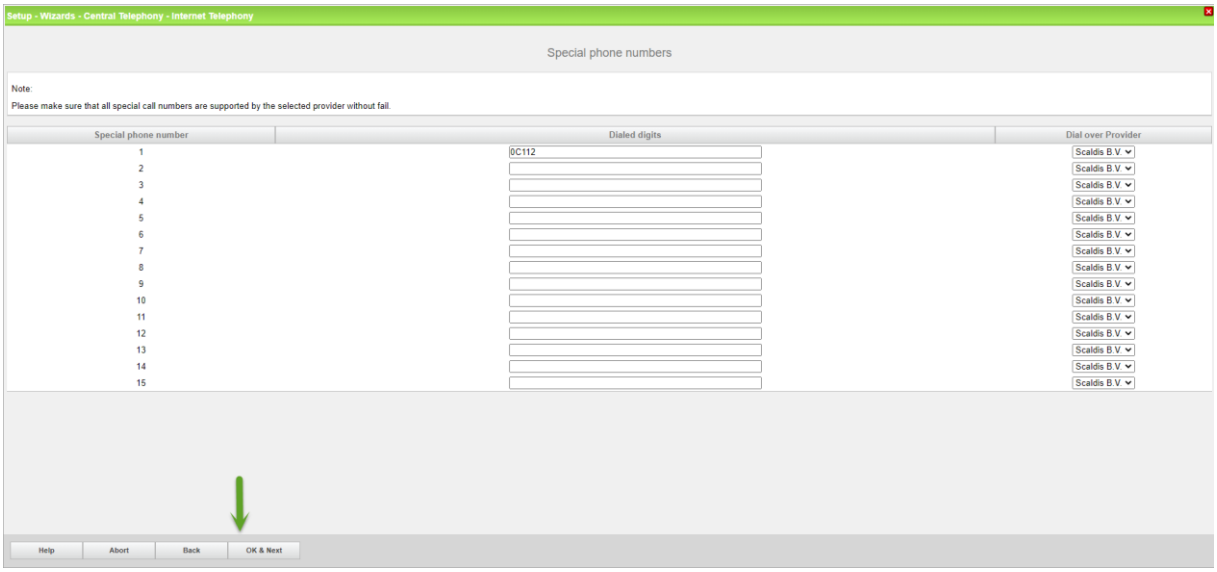

Click OK & Next and the ITSP status will be displayed

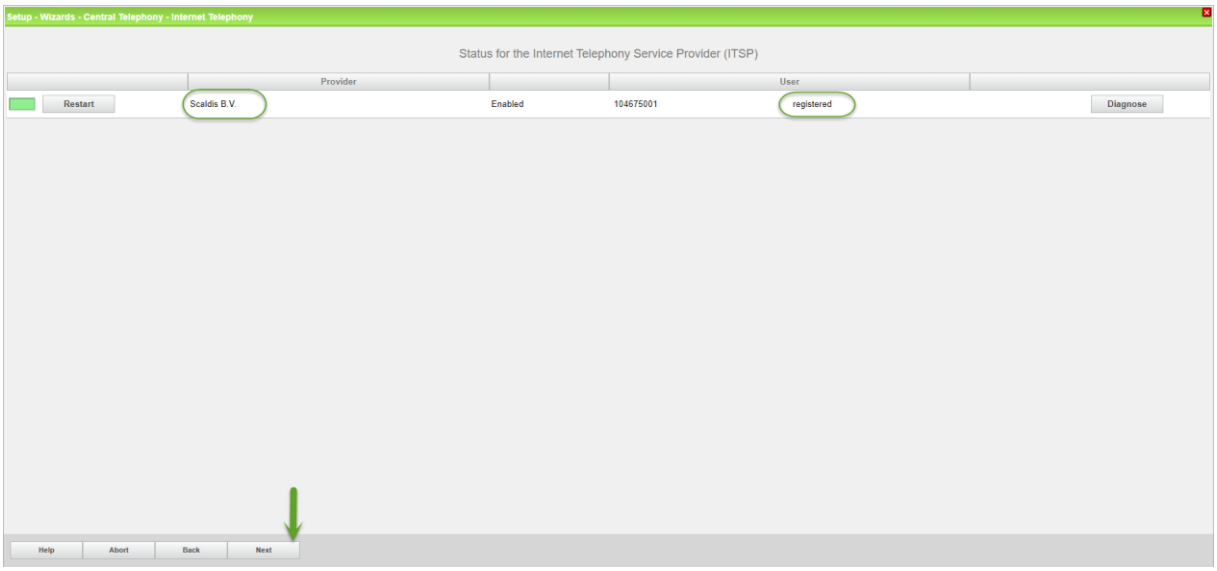

In case status LED is orange there is something wrong in the previous configuration.

After this status page the dialog with „Exchange Line Seizure“ is displayed.

Here you need to configure your own local area code. This is needed to make external calls without the area code. The LCR will be adapted accordingly.

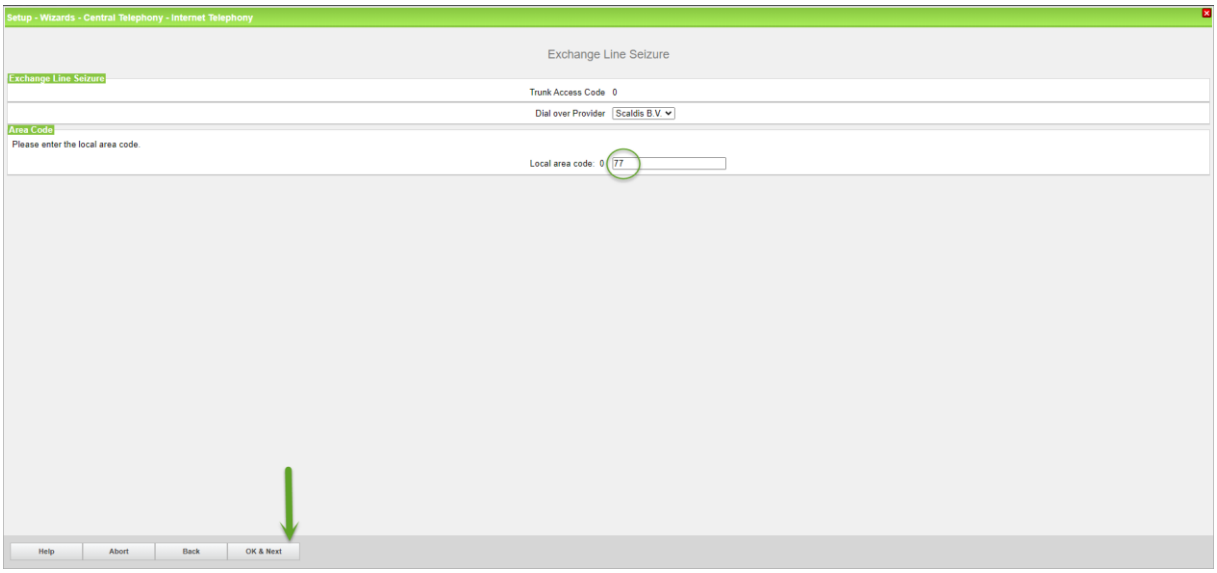

Remarks:

Since G.729 is not supported, it must be deactivated in Codec Parameters:

ITSP Scaldis does not support T.38 faxing, so T.38 must be deactivated in Codec Parameters. With T.38 disabled G.711 faxing is still possible.