



A MITEL  
PRODUCT  
GUIDE

# OpenScape Business V3

SIP Trunk (ITSP) configuration guide

Release Number 09/2024

# Contents

<b>History of Changes .....</b>	<b>3</b>
<b>1 Introduction .....</b>	<b>4</b>
<b>2 OpenScape Business Internet Configuration .....</b>	<b>5</b>
2.1 ISP and ITSP access with external Router at LAN .....	5
2.2 ISP and ITSP access with external Router at WAN .....	6
2.3 ISP with external Router at LAN and ITSP access at WAN .....	7
2.3.1 ISP@LAN and ITSP@WAN with access device acting as Router .....	7
2.3.2 ISP@LAN and ITSP@WAN with access device acting as SBC .....	8
<b>3 Internet Telephony Configuration .....</b>	<b>9</b>
<b>4 Appendix .....</b>	<b>22</b>
4.1 Known restrictions .....	22
4.2 Fax .....	24
4.3 Codecs and RFC2833 Setup.....	25
4.4 Configure STUN.....	26
4.4.1 Global STUN configuration: .....	26
4.4.2 ITSP specific STUN configuration: .....	28
4.5 Multisite Configuration.....	29

## History of Changes

Date	Issue	Summary
2013-07-15	1.0	OpenScape Business V1
....		
2015-04-17	2.0	update for OpenScape Business V2
...		
2024-09-19	3.0	update for OpenScape Business V3

Comments and corrections are welcome, please contact: [osbiz-certification@mitel.com](mailto:osbiz-certification@mitel.com)

# 1 Introduction

This document describes how to set up the OpenScape Business communication system for Internet Telephony via ITSP (Internet Telephony Service Provider) using Web-Based Management (WBM).

The guide covers mostly VoIP trunks with SIP protocol which provide a range of call numbers for business users (direct dialing inward, DDI).

General administration is covered by the respective WBM administrator documentation.

For actual ITSP issues, documentation and ITSP Certification Process see:

[https://wiki.unify.com/wiki/Collaboration\\_with\\_VoIP\\_Providers](https://wiki.unify.com/wiki/Collaboration_with_VoIP_Providers).

## 2 OpenScape Business Internet Configuration


An internet connection from your ITSP or from another Internet Service Provider (ISP) is required for Internet Telephony. The DSL bandwidth at the customer site determines the maximum number of concurrent calls (e.g. 128 kbit/s for a G.711 call).

The most common connection scenarios are described in the following chapters. A detailed description can be found in our Wiki under

[https://wiki.unify.com/wiki/OpenScape\\_Business#Configuration\\_of\\_LAN.2FWAN\\_interface\\_for\\_VoIP](https://wiki.unify.com/wiki/OpenScape_Business#Configuration_of_LAN.2FWAN_interface_for_VoIP)


### 2.1 ISP and ITSP access with external Router at LAN

The most preferred configuration is

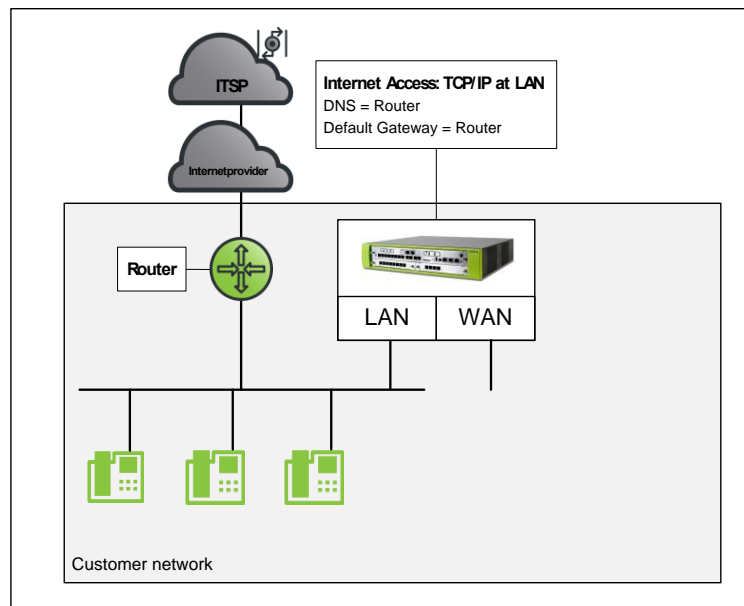

ISP and ITSP @LAN

## 2.2 ISP and ITSP access with external Router at WAN

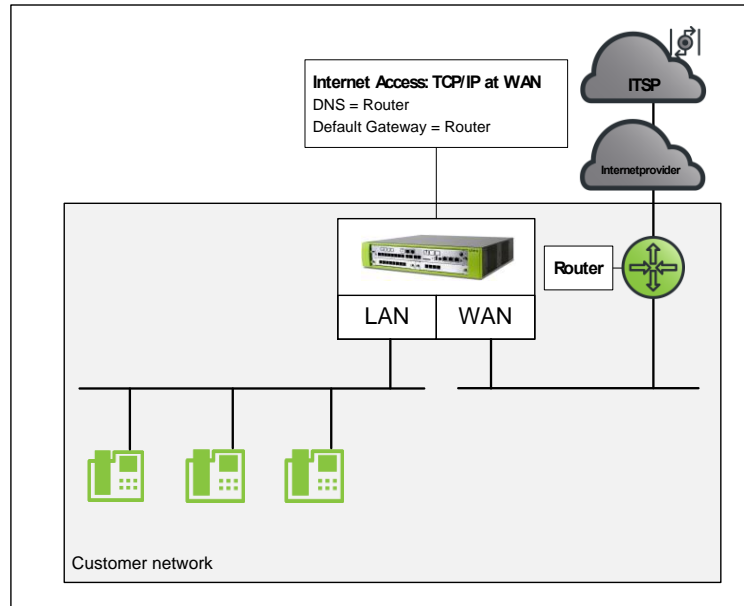

ISP and ITSP @WAN

### Restrictions:

- Device@Home is not released in this configuration
- When the WAN interface is configured, all ITSP connections MUST use this interface


## 2.3 ISP with external Router at LAN and ITSP access at WAN

Several ITSPs deliver an access device to their customers and assign a dedicated network to the interface where the OpenScape Business is connected. In such scenarios the OpenScape Business WAN interface is used to connect to the access device. (if the assigned address does not fit in the customers network infrastructure).

The access device may operate in different modes:

- a) the access device acts as Router
  - static routes for all ITSP related traffic (signalling and media) must be defined
  - SIP message content is generated in OpenScape business and sent via the router to the ITSP
- b) the access device acts as SBC
  - SBC is addressed in ITSP profile, no static routes necessary
  - all ITSP related traffic (signalling and media) is routed via SBC
  - it is the task of the SBC to pass the relevant information to the ITSP and change SIP message content if necessary

### 2.3.1 ISP@LAN and ITSP@WAN with access device acting as Router

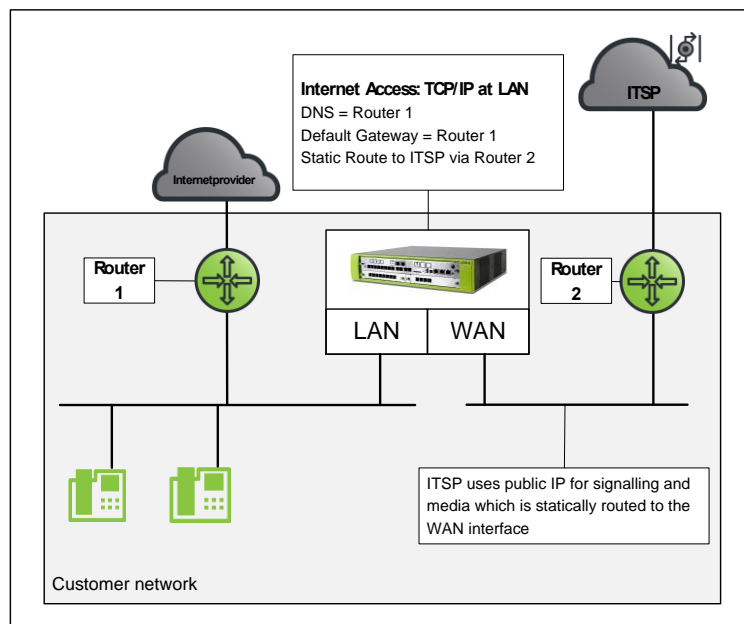


ISP@LAN and ITSP@WAN with access device acting as router

Restrictions:

- **all ITSP's must** use the same interface
- Device@Home is not released in this configuration

### 2.3.2 ISP@LAN and ITSP@WAN with access device acting as SBC

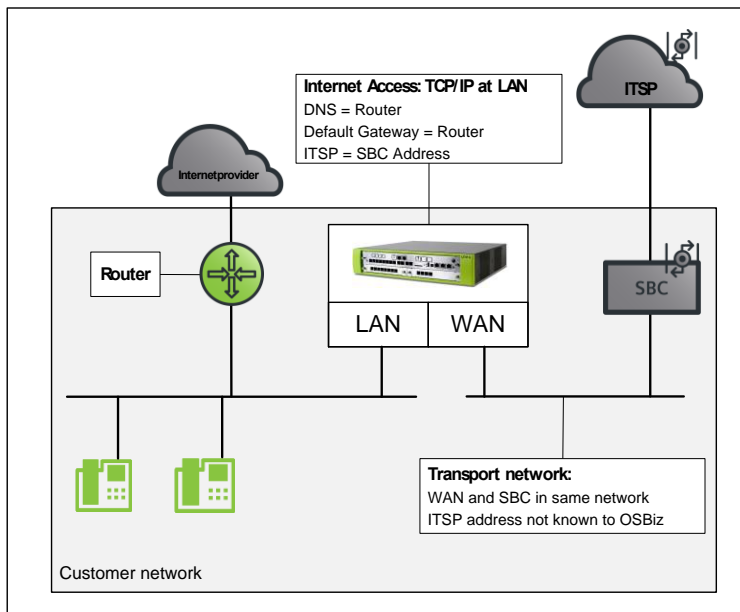

ISP@LAN and ITSP@WAN with access device acting as SBC


#### Restrictions:

- due to the restriction that ALL ITSP's MUST use the same interface, this configuration is limited to **one** ITSP only
- Device@Home is not released in this configuration




# 3 Internet Telephony Configuration

The **Internet Telephony** wizard must be used to activate an Internet Telephony Service Provider (ITSP). You can configure Internet telephony stations for up to eight ITSPs.

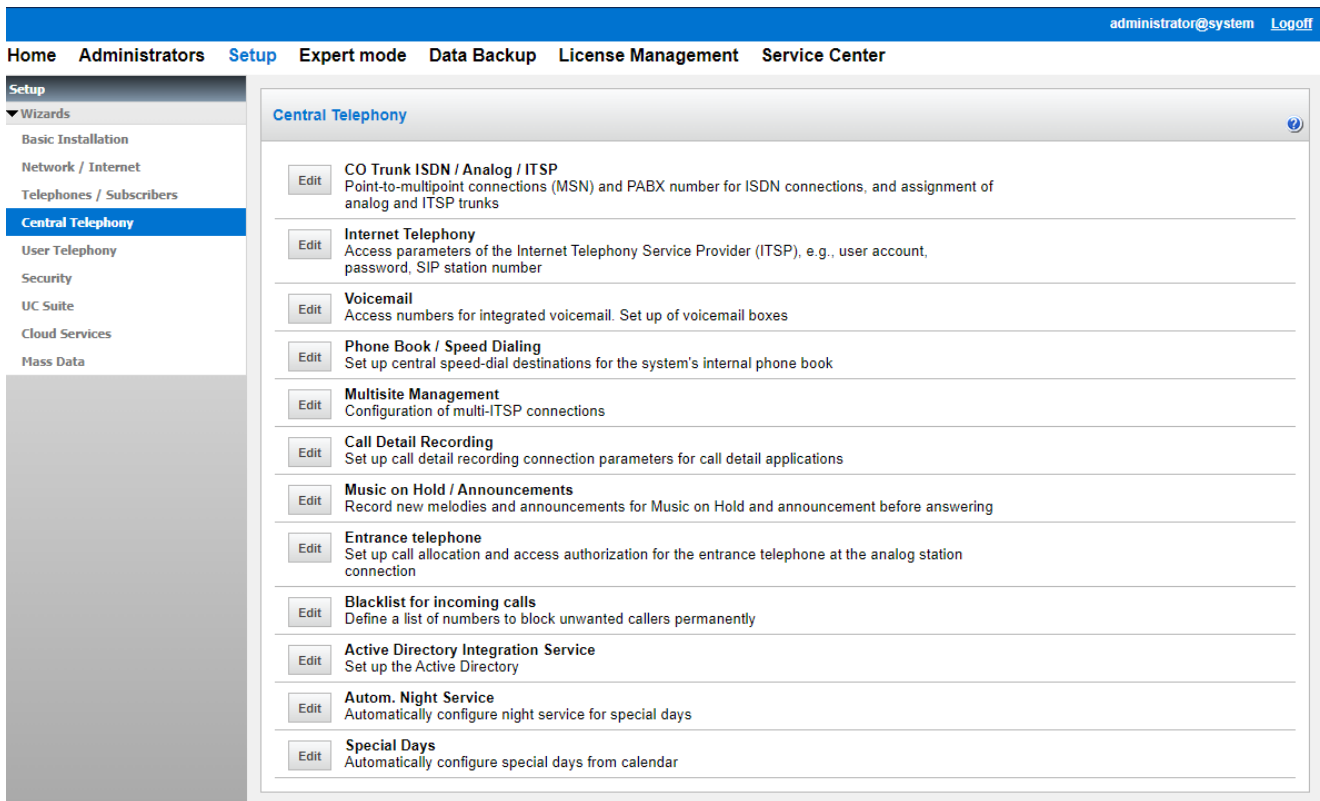


1. In the navigation bar, click [**Setup**].
2. In the navigation tree, click **Wizards > Central Telephony**.
3. Click [**Edit**] to start the **Internet Telephony** wizard.
4. Insert the location data (if not previously configured). Please note that country code is mandatory. The number are entered without prefixes and leading “+”

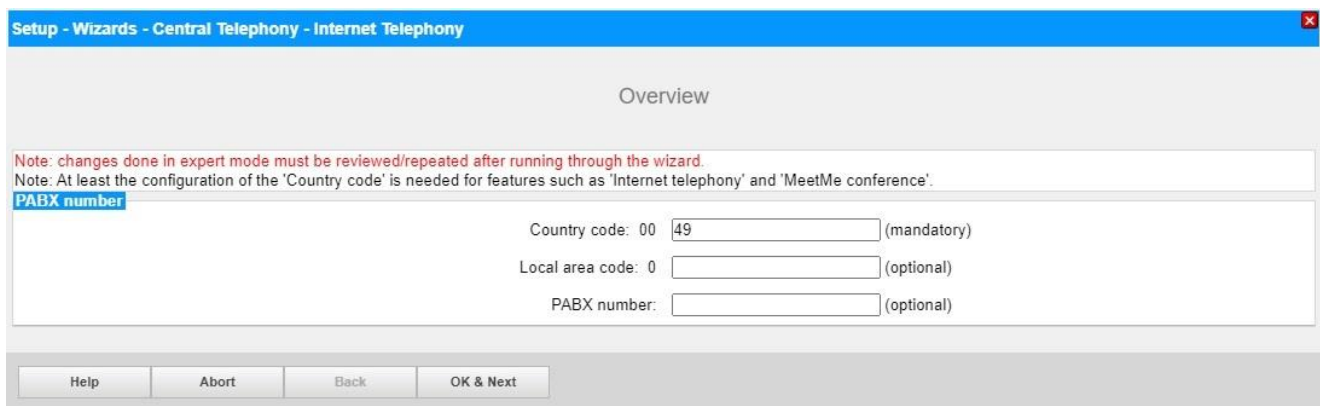

5. Click [**OK & Next**]

6. Clear the **No call via Internet** check box. A list of the configured ITSPs is displayed. By default the country specific ITSPs are shown. By selecting 'all countries' you can see all providers. If required, click **Display Status** to check which ITSPs have already been activated and which Internet telephony subscribers have already been configured under each ITSP.

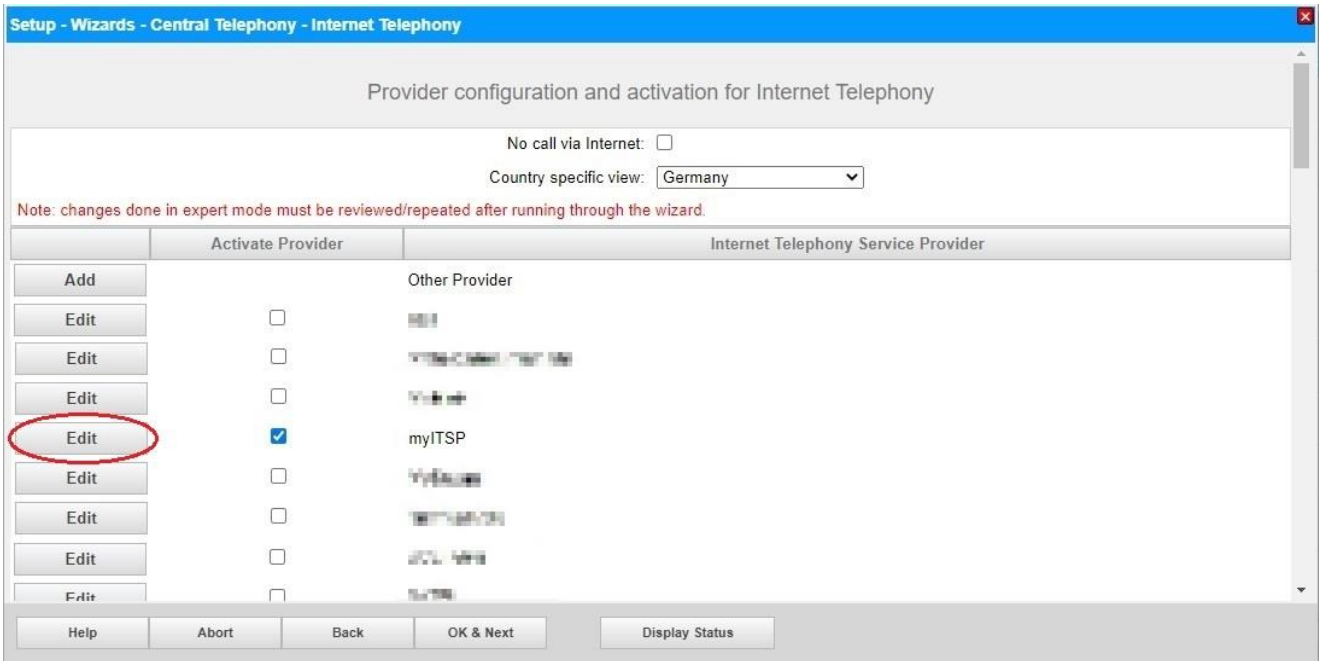


**Note:**

If the system is upgraded from an older version or older minor releases then ITSP activation/deactivation may not be available in Internet Telephony wizard until a reset to LCR is done.


Already activated ITSPs will continue to work even without the LCR Reset. In order to make any activation/deactivation change in the wizard, the LCR Reset is needed.

Please go to Expert Mode > LCR > LCR Flags and click the "Reset LCR Data" flag as seen below:.

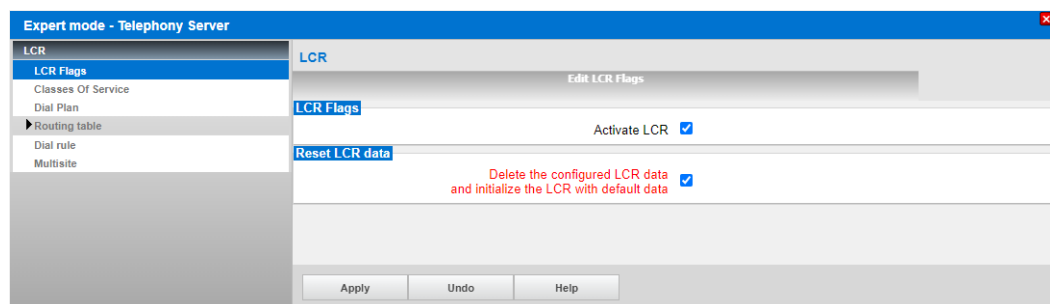


7. Click [**Edit**] at your ITSP Profile to manage your accounts and ITSP Stations.

If you have already configured the accounts and ITSP stations and just want to activate your existing profile then click OK & Next, skip the next steps and continue with number [21](#).

	<p><b>Warning:</b></p> <p>If you perform manual changes in Expert mode -&gt; Trunks Routing section deactivation and reactivation of your ITSP may delete/change these manual data. Manual changes have to be performed again after each activation.</p> <p>To avoid these configuration please use the “Restart” function for the ITSP. The Restart button is available in the Display Status screen. For more information please refer to step <a href="#">24</a> below.</p>
---	--

The next page gives an overview of the predefined ITSP address configuration and allows for the activation of a secure trunk, if available for your ITSP.

If your ITSP uses customer specific address values these addresses must be entered here.

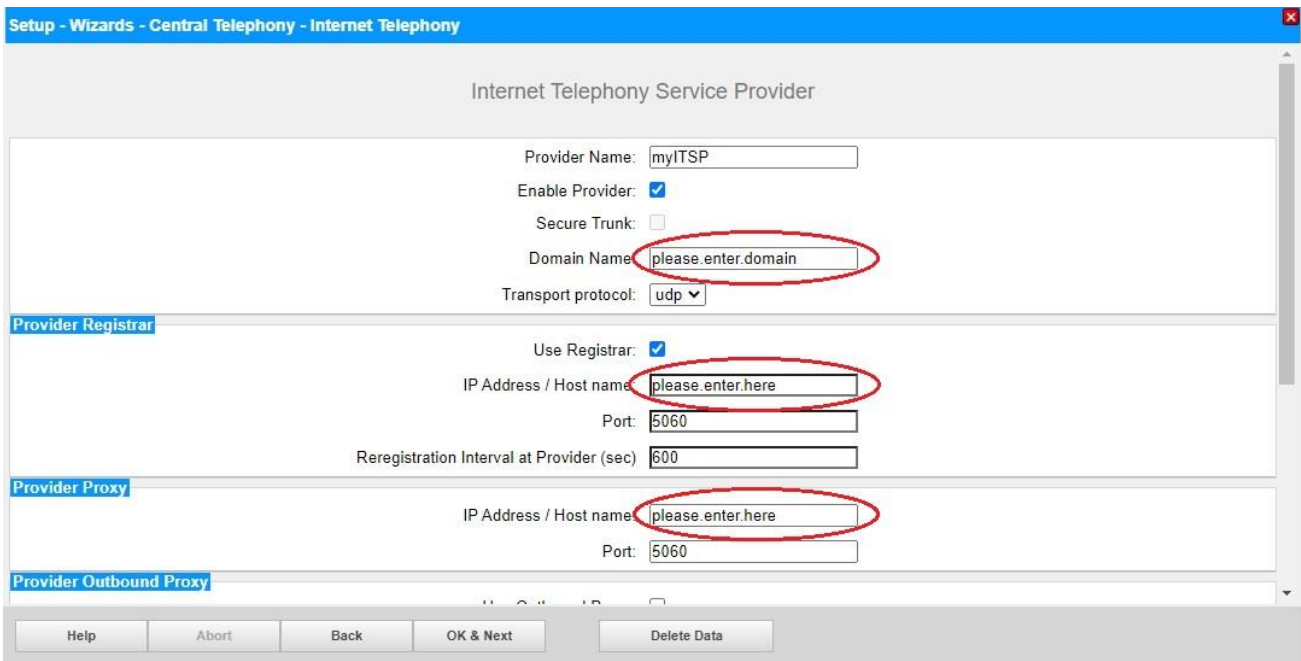


**Provider Features:** If the Call forwarding by rerouting (SIP 302) is supported by your ITSP an additional configuration option is shown on this page:

<b>Provider Feature</b>	Route optimize active: <input type="checkbox"/>
-------------------------	---

In default call forwarding is performed by initiating a new call (Forward switching)

+ call management can be used after call forwarding is initiated


- two ITSP channels are used when call is active

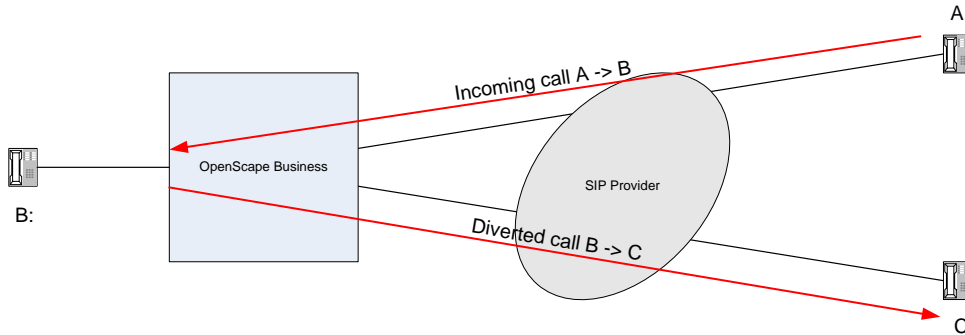


When Route optimization is activated the call is released with a 302 SIP response and call forwarding by rerouting is performed by the ITSP.

+ no ITSP channel used when call is active

- no control of the call when call deflection is initiated

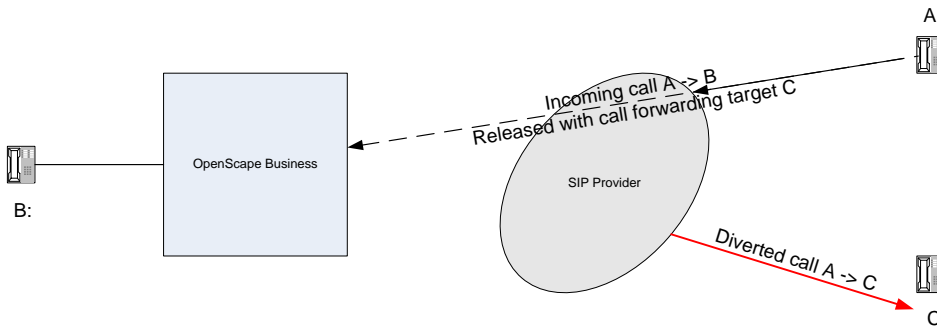

8. If you are done with this page click **[OK & Next]**

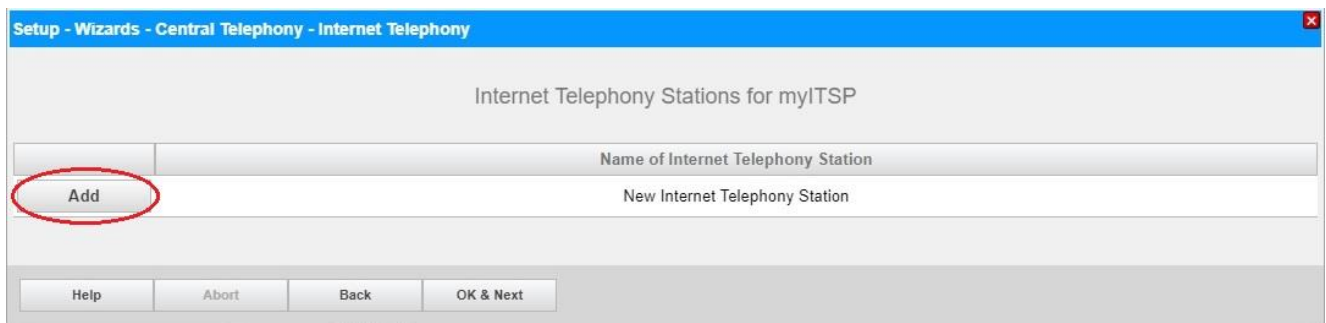

9. Click **[Add]** in this screen

Setup - Wizards - Central Telephony - Internet Telephony

Internet Telephony Station for myITSP

Internet telephony station:

Authorization name:

Password:

Confirm Password:

**Call number assignment**

Use public number (DID)

Use public number (DID)

Use internal number (Callno) / Single entries


Use internal number (Callno) / Range entry

**Default Number**  
 ITSP as primary CO access  
 Enter one of the call numbers supplied by your network provider here. This will be used in outgoing calls as the calling party number in case no other number is available for the respective call.  
 All call numbers supplied by your network provider are to be entered within the trunk and telephones configuration (DID field) primary CO access.

Help Abort Back OK & Next Delete Data

On this screen you must choose the type of Call Number Assignment first:

- **Use public number (DID):**  
 This is the preferred and most common mode for an ITSP trunk access. In this mode all ITSP numbers are based on the station's DID, Location data and Route settings. No mapping is done, just like on ISDN CO interfaces.
- **Use internal number (Callno) / Single entries or Range entry:**  
 In this mode all ITSP numbers must be created separately and assigned/mapped to internal call numbers based on the station's Call Number (Callno). This mode cannot be used for central access in networked systems. Each node must have its own ITSP access.

	<p><b>Remarks:</b>          Please note that the selection between the types is available only for the first time you configure an Internet Telephony Station for an ITSP.</p>
---	--

Below are the next steps (10-14) for configuring DID mode.

If you want to use the Internal Call number (Callno) mode please **skip to step 15**.

## “Use public number (DID)” Mode

Internet Telephony Station for myITSP

Internet telephony station: +4923026672100

Authorization name: +4923026672100

Password: \*\*\*\*\*

Confirm Password: \*\*\*\*\*

**Call number assignment**

Use public number (DID)

ITSP-multiple route:

Default Number: +4923026672100

**Default Number**  
ITSP as primary CO access  
Enter one of the call numbers supplied by your network provider here. This will be used in outgoing calls as the calling party number in case no other number is available for the respective call.  
All call numbers supplied by your network provider are to be entered within the trunk and telephones configuration (DID field) primary CO access.

Help Abort Back OK & Next Delete Data

10. The Telephony Station configuration has two options:

- If your ITSP is using registration:  
enter the name or number provided by your ITSP in **Internet Telephony Station**.  
Enter the **Authorization Name** and **Password** which was provided by your ITSP
- If the ITSP does not use registration  
enter a name of your choice (e.g. the pilot number of the DDI range or a name) in **Internet Telephony Station**  
Most ITSPs does not use authentication if no registration is used. In this case nothing is entered in Authorization name and Password  
If your ITSP has provided credentials for Authentication (Username/Password) enter them here

11. The ITSP multiple route flag is needed for configurations where more than one registration / route is needed for configuring the ITSP trunk. More information can be found in a separate guide available in the Wiki:  
[https://wiki.unify.com/wiki/Collaboration\\_with\\_VoIP\\_Providers#General\\_Configuration\\_guides](https://wiki.unify.com/wiki/Collaboration_with_VoIP_Providers#General_Configuration_guides)

12. Enter the Default Number in the format required by your ITSP

Please note that this number will be used in the SIP headers exactly as entered here. No change of number format based on location data and route settings will apply.

In outgoing calls the calling number is presented according to the following rule:

- use the configured DID or CLIP number
- if no DID / CLIP is configured use the DID/CLIP of the Intercept/Attendant station
- if no DID / CLIP for Intercept present, use the **Default Number**

Internet Telephony Stations for myITSP

	Name of Internet Telephony Station
Edit	+4923026672100

Help Abort Back OK & Next

13. Click [OK & Next]

Setup - Wizards - Central Telephony - Internet Telephony

Call Number Assignment for myITSP

Name of Internet Telephony Station	Internet Telephony Phone Number	Direct inward dialing	Use as PABX number for outgoing calls
------------------------------------	---------------------------------	-----------------------	---------------------------------------

In order to complete the configuration please verify that the relevant user DIDs are set in stations.(Telephones / Subscribers configuration)

Help Abort Back OK & Next

14. Nothing to be entered on this page, in public number DID mode the DID numbers are entered in the station configuration. Click **[OK & Next]**

**Continue in step 21.**

## “Use internal number (Callno)” mode

This mode is intended to be used for accounts where each single call number needs a SIP registration. But with some ITSP’s this mode is even used for registration of several call numbers.

For Accounts with a range of consecutive call numbers you may select this option but DID mode is preferred due to its simplicity. Also the configuration and allocation of numbers is easier. Usually DID is offered from the ITSPs when there is a range of number

15. Enter the **relevant account (username) or number in Internet Telephony Station**.

16. Enter the **Authorization Name** and **Password** which was given to you for the VoIP account by your provider, if necessary

17. “Use internal number (Callno)” mode has two options:

- a) **single number**: For Accounts with single call numbers select this option and enter the phone number and click **[Add]** for every phone number you received from your provider.

Setup - Wizards - Central Telephony - Internet Telephony

Internet Telephony Station for myITSP

Internet telephony station: +4923026672  
Authorization name: +4923026672  
Password: \*\*\*\*\*  
Confirm Password: \*\*\*\*\*

**Call number assignment**

Use internal number (Callno) / Single entries

Internet Telephony Phone Numbers

Add +4923026672100

Enter all call numbers supplied by your network provider here.  
Assignment of call numbers to telephones takes place in a further configuration step.

Help Abort Back OK & Next Delete Data

- b) For Accounts with a range of consecutive call numbers you may select this option

Setup - Wizards - Central Telephony - Internet Telephony

Internet Telephony Station for myITSP

Internet telephony station: +4923026672  
Authorization name: +4923026672  
Password: \*\*\*\*\*  
Confirm Password: \*\*\*\*\*

**Call number assignment**

Use internal number (Callno) / Range entry

**Internet telephony system phone number**

System phone number (Prefix): +4923026672

Call numbers from 100 up to 110

Here you may enter the call numbers supplied by your network provider by defining a range of numbers and a prefix, which is common to all numbers.  
Assignment of call numbers to telephones takes place in a further configuration step.


Help Abort Back OK & Next Delete Data

Enter **System phone number** which is the common prefix for all numbers in the range and add the range.


18. Click **[OK & Next]**.



19. An overview of all Internet Telephony Stations is shown.

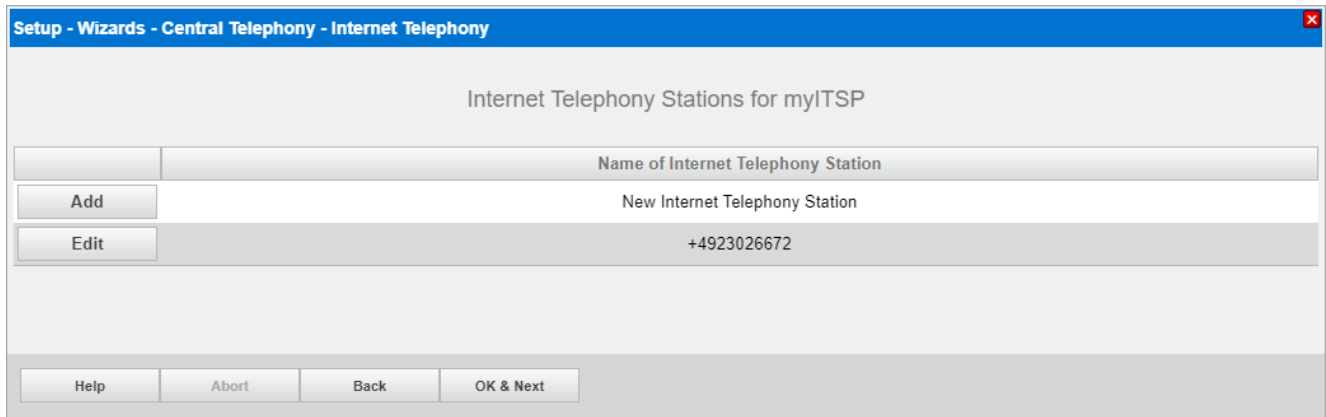

Click [OK & Next].

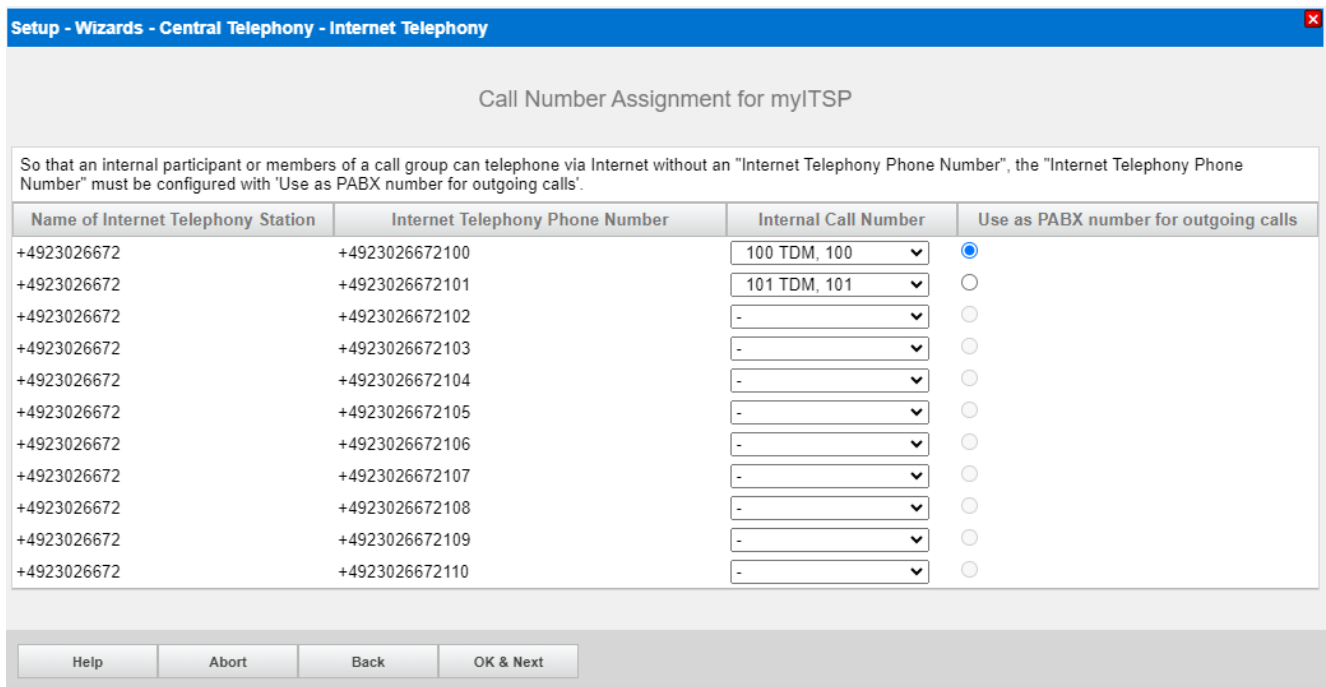

20. Assign one **internal call number** each to all Internet telephony phone numbers.

For subscribers without Internet telephony phone number one number **MUST** be selected as **PABX number for outgoing calls**.

21. Click [OK & Next].

An overview of your ITSP providers is shown. Click [OK & Next].

22. At the next step you have to configure the maximum number of simultaneous calls based on the Upload Bandwidth of your internet connection and distribute the lines per ITSP.

The maximum number of simultaneous calls depends on the Upload. If voice quality falls as a result of network load, you must reduce the number here.

The preconfigured upload value derives from the value used in the Internet Wizard (e.g. for 512 kbps upload you can have up to 4 calls).

If all configured ITSP's should share the same number of simultaneous calls, press "Distribute Lines" in order to distribute the defined number to each ITSP. If you have more than one ITSP and the amount of calls should be different, you can edit the values in the column "Assigned Lines".

The number of assigned lines should be equal to the value of "parallel calls" booked at the respective ITSP.

Setup - Wizards - Central Telephony - Internet Telephony

Settings for Internet Telephony

**Simultaneous Internet Calls**

Available Lines for ITSP: 170

Please enter in field 'Upstream up to (Kbit/sec)' the Upstream of your Internet connection communicated by your Provider. You have typed in **Upstream up to (Kbps) = 2048**

In the 'Change Feature --> Internet Telephony' Assistant. This upstream allows you to conduct up to 16 Internet phone calls simultaneously. If the call quality deteriorates due to the network load, you will need to reduce this number of simultaneous calls.

The number of simultaneous Internet Calls also depends on the licensing.

Upstream up to (Kbps):

Number of Simultaneous Internet Calls:

**Line assignment**

Internet Telephony Service Provider	Configured Lines	Assigned Lines
myITSP	0	<input type="text" value="4"/>

Click **[OK & Next]** when finished.

23. Next you can define the handling of special numbers. The table consists of a country specific default of numbers which should be dialed without further manipulation.

If you want to add additional numbers which needs to be dialed as entered you may add them in the **Dialed digits** column. The entries will be stored in the LCR dial plan with the following syntax ::

- 0 to 9: allowed digits
- -: Field separator
- X: Any digit from 0 to 9
- N: Any digit from 2 to 9
- Z: One or more digits to follow up to the end of dialling
- C: Simulated dial tone (can be entered up to three times)

Use the **Dial over Provider** column to specify which trunk should be used for the special number. Please make sure that emergency numbers are allowed by the specified provider.

Note:  
Please make sure that all special call numbers are supported by the selected provider without fail.


Special phone number	Dialed digits	Dial over Provider
1	0C112	myITSP
2	0C110	myITSP
3	0C0137Z	myITSP
4	0C0138Z	myITSP
5	0C0900Z	myITSP
6	0C118Z	myITSP
7	0C116Z	myITSP
8	0C115	myITSP
9	0C010Z	myITSP
10		myITSP
11		myITSP
12		myITSP

Buttons: Help, Abort, Back, OK & Next

24. Click **[OK & Next]**.

25. The following picture shows the status of the ITSP connection.


In this screen you can also restart your ITSP. In case that the ITSP is using registration, this will result to a de-registration and a re-registration.

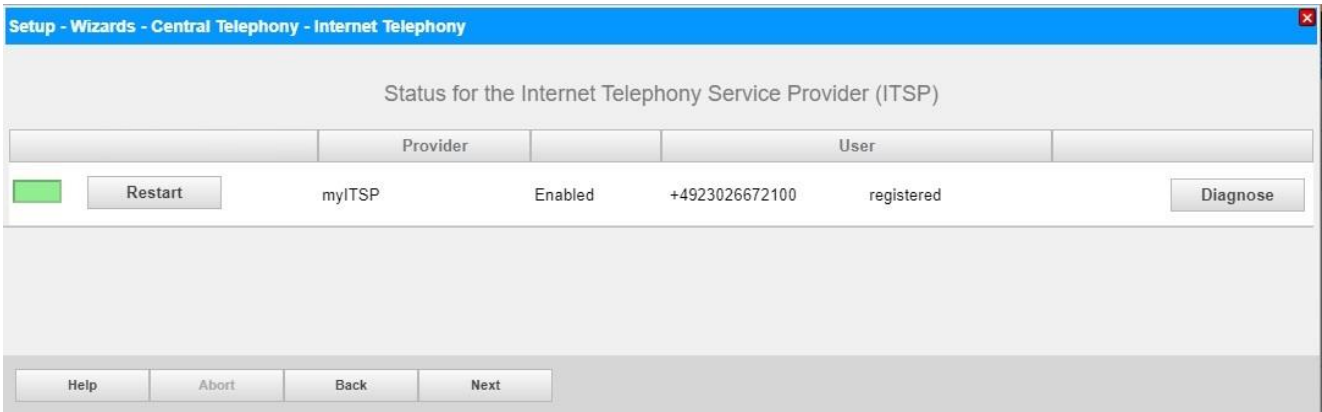


Pressing the Diagnose button will open a new browser window to display status and configuration information. This information should help to analyse problems. Close the window and return to the Status page

26. Click **[Next]**

In this page we choose the "Provider" which is selected by seizure code 0. In addition, the area code (w/o National prefix) is configured, if prompted.

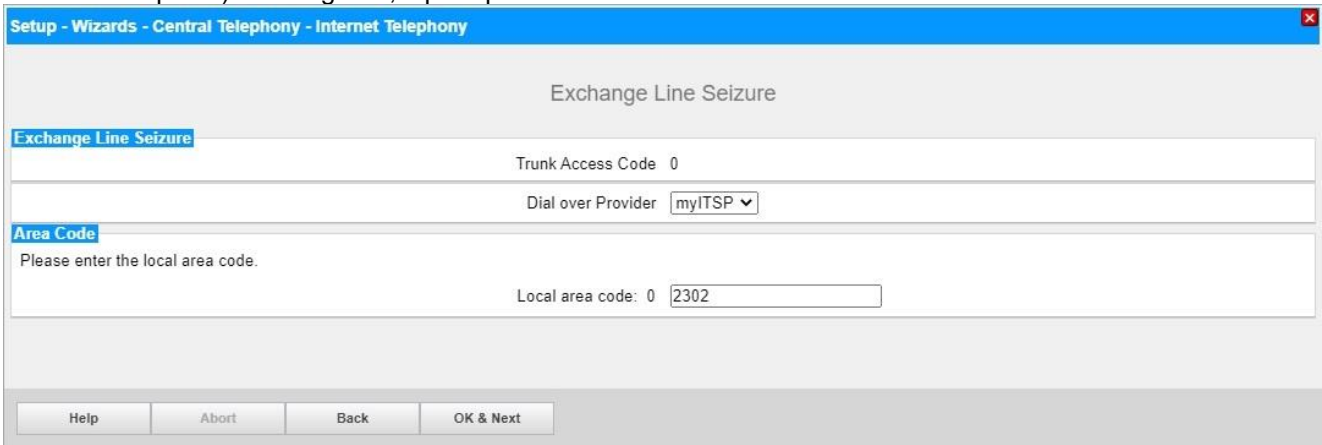

27. Click **[OK & Next]** for an overview about the seizure codes to place an outgoing call

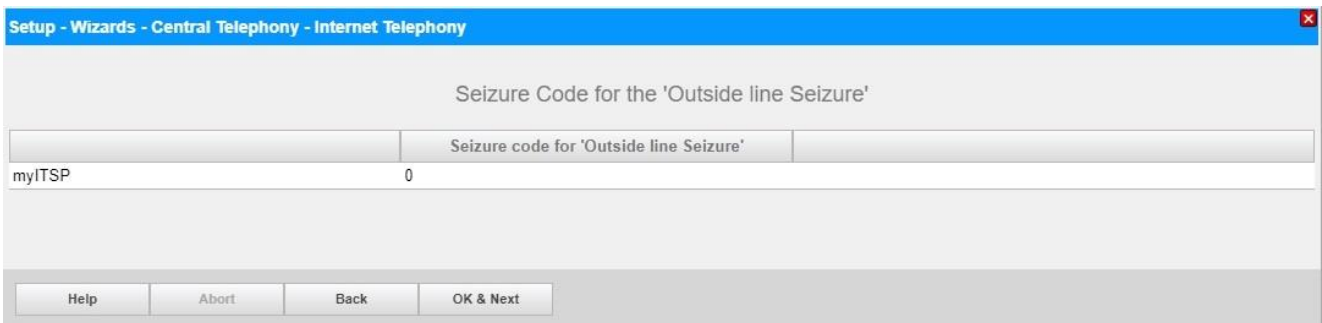

28. Click **[OK & Next]** and then **[Finish]** to exit the **Internet Telephony** wizard.

29. The last step is to configure the licenses for the SIP Trunks.  
Go to tab **License Management > CO Trunks** and set the ITSP/SIP Trunks you want to activate.

The screenshot shows the 'License Management' interface with the 'CO Trunks' tab selected. The left sidebar contains a navigation menu with the following items: License Management, License information, Additional Products (OpenScape Personal Edition), Local User licenses (Overview, IP User, TDM User, Mobility User, Deskshare User), CO Trunks (highlighted), System Licenses, License Profiles (Create Profiles, Assign Profiles), Registration (Activate License Online, Activate CLS Connect, Activate License File), and Settings.

The main content area is titled 'CO Trunks' and contains the following information:

- A message: "The access to central office via PRI(S2m/T1) trunks or via Internet telephony is licensed by CO trunk licenses. Available licenses for SIP and PRI(S2m/T1) trunks: 246"
- A section for 'SIP trunks' with the following configuration:
  - The configured number of simultaneous Internet calls for each Internet Telephony Service Provider is: 4
  - License number of simultaneous Internet calls in this node: 4
  - License demand for number of simultaneous Internet calls in this node: 4 (with a dropdown arrow)
- A section for 'PRI (S2M/T1)' with a table header:

Type Slot	Port	Feature	Demands	used licenses
-----------	------	---------	---------	---------------

At the bottom of the main content area, there are two buttons: 'Abort' and 'Apply'.

## 4 Appendix

### 4.1 Known restrictions

Due to different reasons, OpenScape Business does not support some features, which may be offered by an ITSP. This section contains a list of feature limitations at the ITSP access.

#### Media Types

---

OpenScape Business offers support for the media types of **audio** (Voice and voice band data) and **image** (fax) on the ITSP interface. All other media types (e.g. Video) are NOT supported on the ITSP interface. This limitation does not apply to the internal SIP interfaces.

#### Media Transport

---

The integrated SBC function terminates all media streams of the ITSP. Only one UDP stream is supported per connection (RTP/T.38).

#### DTMF

---

The system supports DTMF according to the RFC2833/4733 standard. Sending and receiving of DTMF-relay in the body of an INFO or NOTIFY message is NOT supported. If an ITSP does not support RFC2833/4733, control of the UC application is NOT possible.

#### Early media rendering

---

OpenScape Business will render early media based on the information in the received provisional responses. If SDP is present the P-Early-Media header field will be used (if present) to decide if early media needs to be rendered.

OpenScape Business has no means to supervise the RTP stream.

If early media is rendered, OpenScape Business stays connected to that stream until the call is answered. There is no fallback to local ringback tone if early media stops (regardless of received P-Early-Media header fields).

#### Early media in combination with forking

---

OpenScape Business will render the media announced in the last provisional response containing valid media information when a forked call results in several early media streams. During early media a change in the codec is not supported.

#### Subscribe/Notify for Message Waiting Indication

---

As OpenScape Business systems have internal voicemail systems they do not support subscriptions for message waiting to public voicemail systems provided by the ITSP.

#### Transfer

---

REFER requests are rejected on the ITSP interface due to security considerations.

Handling of these messages would mean to create new calls to a number that was provided by an external, possibly untrusted, party, which may result in high costs (toll fraud).

The OpenScape Business system does not send REFER to the ITSP leg.

There is no signalling for call number update towards the ITSP during transfer. In call transfer scenarios, where an OpenScape Business user transfers a call with an external subscriber or transfers a call to a PSTN subscriber, the PSTN subscribers don't display the connected party, but continue to display the OpenScape Business user.

In blind transfer scenarios from an OpenScape Business user, during the transfer the transferred party hears MOH instead of ring back tone.

## Call forwarding

---

302 (Redirect/Diversion) responses are rejected on the ITSP interface due to security considerations. There is no signalling for call number update towards the ITSP on the incoming leg during call forwarding. In call forwarding scenarios, where an OpenScape Business user forwards a call with a PSTN subscriber, the forwarded PSTN subscriber will display the original (dialled) OpenScape Business user and not the connected (forwarded to) party.

In case of diversion, OpenScape Business does not forward the Diversion information header from initial INVITE. Moreover, diversion counter is not incremented.

## Feature activation using Keypad

---

Some ITSP allow feature activation by sending of the characters \* and/or # followed by a feature code (stimulus feature activation). Using \* and # on the ITSP interface has to be explicitly allowed by the system configuration (system flag).

In a SIP-URI "#" is an invalid character which has to be escaped. Therefore, the ASCII representation in Hex is sent on the line: # is 0x23 -> %23 in SIP-URI



**Note:** When invoking features by “stimulus” procedures, no indication might be given to the user (e.g. no special dial tone, no display information). Thus using stimulus features is not recommended and requires a careful handling by the user.

## STUN (see 4.4 for details)

---

STUN can be enabled/disabled for each individual provider separately. Nevertheless, all providers which have STUN enabled use the same STUN server and STUN mode.

## Trunk selection for myPortal, myAttendant, myAgent

---

A trunk prefix for selecting a SIP trunk as an alternate trunk can be used from the OpenScape Business client's dial box but not from client's directories and settings. Due to this limitation SIP trunks cannot be used for presence-based call forwarding if a TDM trunk is present in parallel.

## 4.2 Fax

Fax is possible in two ways, either by protocol T.38 or by using a transparent channel with codec G.711. Fax over T.38 is more reliable and secure than fax over G.711.

- For fax T38, nothing special needs to be configured. It is enabled by default.
- If the ITSP does not support T38, T38 should be disabled to send the fax via G.711

Expert Mode > Telephony Server > Voice Gateway > Codec Parameters > Disable the flag "Fax T.38". All the other settings should remain at the default values.

The screenshot shows the 'Expert mode - Telephony Server' configuration window. The left sidebar is expanded to 'Codec Parameters'. The main area is titled 'Edit Codec Parameters' and contains a table of codec settings. Below the table are sections for 'Enhanced DSP Channels', 'T.38 Fax', 'T.30 Fax', 'Misc.', and 'RFC2833'. The 'T.38 Fax' section has a checkbox labeled 'T.38 Fax:' which is currently checked and highlighted with a red box. Other settings in this section include 'Use FillBitRemoval:' (checked), 'Max. UDP Datagram Size for T.38 Fax (bytes):' (1472), and 'Error Correction Used for T.38 Fax (UDP):' (t38UDPRedundancy). The 'T.30 Fax' section has 'Enable ECM:' checked. The 'Misc.' section has 'ClearChannel:' checked and 'Frame Size:' set to 20 msec. The 'RFC2833' section has 'Transmission of Fax/Modem Tones according to RFC2833:' unchecked, 'Transmission of DTMF Tones according to RFC2833:' checked, 'Payload Type for RFC2833:' set to 98, and 'Redundant Transmission of RFC2833 Tones according to RFC2198:' unchecked. At the bottom are 'Apply', 'Undo', and 'Help' buttons.

Codec	Priority	Voice Activity Detection	Frame Size
G.711 A-law	Priority 1	VAD: <input type="checkbox"/>	20 msec
G.711 μ-law	Priority 2	VAD: <input type="checkbox"/>	20 msec
G.729A	Priority 4	VAD: <input type="checkbox"/>	20 msec
G.729AB	Priority 3	VAD: <input checked="" type="checkbox"/>	20 msec

**Enhanced DSP Channels**  
Use G.711 only

**T.38 Fax**  
T.38 Fax:   
Use FillBitRemoval:   
Max. UDP Datagram Size for T.38 Fax (bytes): 1472  
Error Correction Used for T.38 Fax (UDP): t38UDPRedundancy

**T.30 Fax**  
Enable ECM:

**Misc.**  
ClearChannel:  Frame Size: 20 msec

**RFC2833**  
Transmission of Fax/Modem Tones according to RFC2833:   
Transmission of DTMF Tones according to RFC2833:   
Payload Type for RFC2833: 98  
Redundant Transmission of RFC2833 Tones according to RFC2198:

For more detailed information about each ITSP settings, please check the document available under [https://wiki.unify.com/index.php/Collaboration\\_with\\_VoIP\\_Providers#Released\\_SIP\\_Providers\\_in\\_Detail](https://wiki.unify.com/index.php/Collaboration_with_VoIP_Providers#Released_SIP_Providers_in_Detail)



### 4.3 Codecs and RFC2833 Setup

In the above screen you can also configure the codecs and its priorities for Gateway calls (calls via TDM stations). If G729 is used by the provider, then both G.729A and G.729AB MUST be activated.

Also RFC2833 is configured here. The RFC2833 dynamic payload type is negotiated between the OpenScape Business system and the ITSP. If the provider does not support negotiation and request for a specific value, this must be entered under "Payload Type for RFC2833".

For more detailed information about each ITSP settings, please check its Configuration Guide document (if available) located at:

[https://wiki.unify.com/wiki/Collaboration\\_with\\_VoIP\\_Providers#Tested\\_VoIP\\_Providers\\_by\\_Countries](https://wiki.unify.com/wiki/Collaboration_with_VoIP_Providers#Tested_VoIP_Providers_by_Countries)



**Redundant Transmission of RFC2833 Tones according to RFC2198:**

This parameter is deactivated by default in new systems. In systems which have been configured before the parameter may be activated. Even if the support of RFC2198 is negotiated as part of the SDP offer/answer procedure some ITSP reject a call setup if RFC2198 is offered.

For that reason it is recommended to deactivate RFC2198

## 4.4 Configure STUN

In case where the OpenScape Business system is connected behind a Router and the Interface used for ITSP calls has a private IP address the address information in SIP and SDP contains this private IP. Some ITSPs require to receive the public IP of the router in SIP (e.g. in Via:/Contact:) and SDP (c= line/m=line) to route packets correctly. For this use case the system has a STUN component to provide the correct address information in the SIP and SDP. The STUN component has different operation modes which needs to be configured. As the requirements differ between the various ITSPs the necessary configuration is identified during the ITSP certification.


To allow a better understanding of the STUN component, the configuration options are described below.

The STUN configuration is divided in two parts:

1. the global STUN configuration
2. the ITSP specific STUN configuration


More information about STUN can be found in the wiki under:

[https://wiki.unify.com/index.php/Network\\_Configuration\\_for\\_VoIP\\_Providers](https://wiki.unify.com/index.php/Network_Configuration_for_VoIP_Providers)

	<p><b>Important:</b></p> <p>If STUN is needed for an ITSP both parts <b>MUST</b> be configured. The global STUN mode <b>AND</b> the activation in the profile.</p>
---	--

### 4.4.1 Global STUN configuration

"Expert Mode > Voice Gateway > Internet Telephony Service Provider > Edit STUN Configuration"

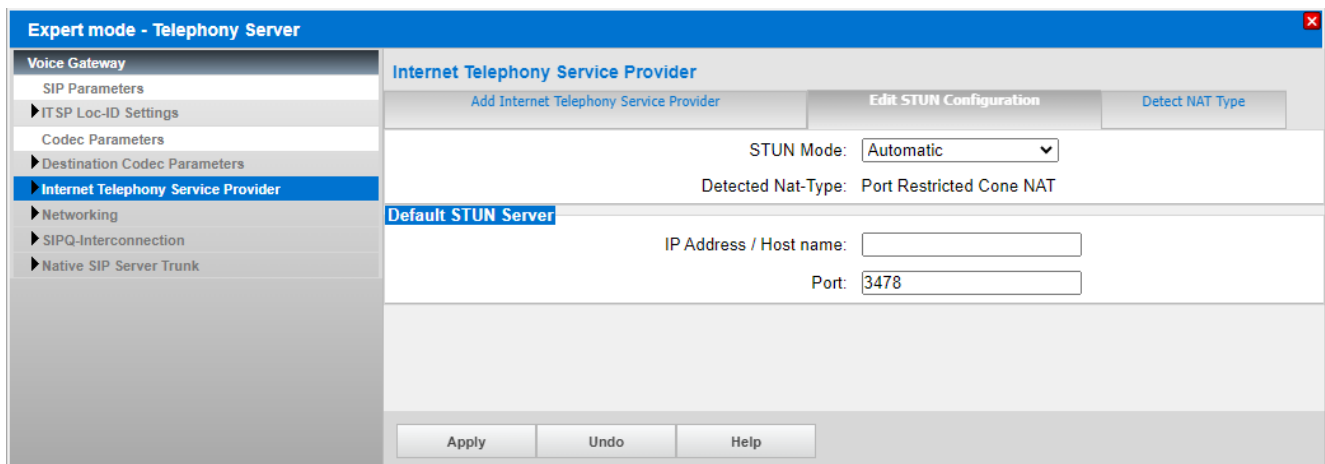

The screenshot shows the 'Expert mode - Telephony Server' interface. On the left is a navigation tree with 'Internet Telephony Service Provider' selected. The main area is titled 'Internet Telephony Service Provider' and contains the following configuration options:

- STUN Mode:** A dropdown menu set to 'Automatic'.
- Detected Nat-Type:** 'Port Restricted Cone NAT'.
- Default STUN Server:** A section with two input fields: 'IP Address / Host name' (empty) and 'Port: 3478'.


At the bottom of the configuration area are three buttons: 'Apply', 'Undo', and 'Help'.

On this page you can change the **global** STUN mode used for **ALL** VoIP traffic going to the internet ( e.g. ITSP, Device@Home).

In addition this page is used to define a "**Default STUN Server**" which is used for Device@Home if no ITSP is used. Please note that this setting is **NOT** used if an active ITSP has a STUN server configured.

## STUN mode:

- **“Automatic”(Default)** The system determines if STUN is needed based on the configuration and the detected NAT type.  
Please note: symmetric NAT is not supported.  
If STUN usage is possible, the STUN protocol is used to determine the public IP address and port to be used in SIP signaling and media (SDP).
- **“Always”** STUN is always active, even if no ITSP is active.  
The STUN protocol is used to determine the public IP address and port to be used in SIP signaling and media (SDP).
- **“Use static IP”** In this mode the IP address and port to be used in SIP and SDP is configured. For SIP signaling the public port is configured here, for media (SDP) the ports configured in port management are used.

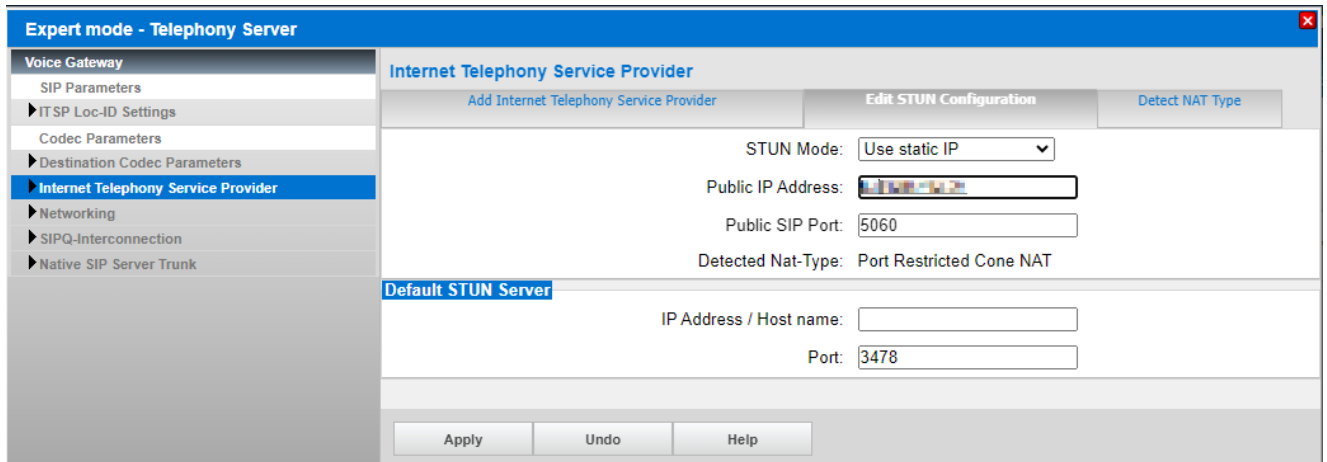

The screenshot shows the 'Expert mode - Telephony Server' configuration window. The left sidebar lists various settings categories, with 'Internet Telephony Service Provider' selected. The main panel is titled 'Internet Telephony Service Provider' and contains the following configuration options:


- STUN Mode:** A dropdown menu set to 'Use static IP'.
- Public IP Address:** A text input field containing a public IP address.
- Public SIP Port:** A text input field containing '5060'.
- Detected Nat-Type:** A text input field containing 'Port Restricted Cone NAT'.
- Default STUN Server:** A section with two input fields: 'IP Address / Host name' and 'Port' (containing '3478').

At the bottom of the window, there are three buttons: 'Apply', 'Undo', and 'Help'.

- **“Port Preserving Router”** In this mode the STUN protocol is used to determine the public IP address to be used in SIP signaling and media (SDP). The port is used unchanged in SIP/SDP

#### 4.4.2 ITSP specific STUN configuration

The usage of STUN can be activated / deactivated individually for each provider. This is possible with the profile parameter: "Use STUN" as seen below.

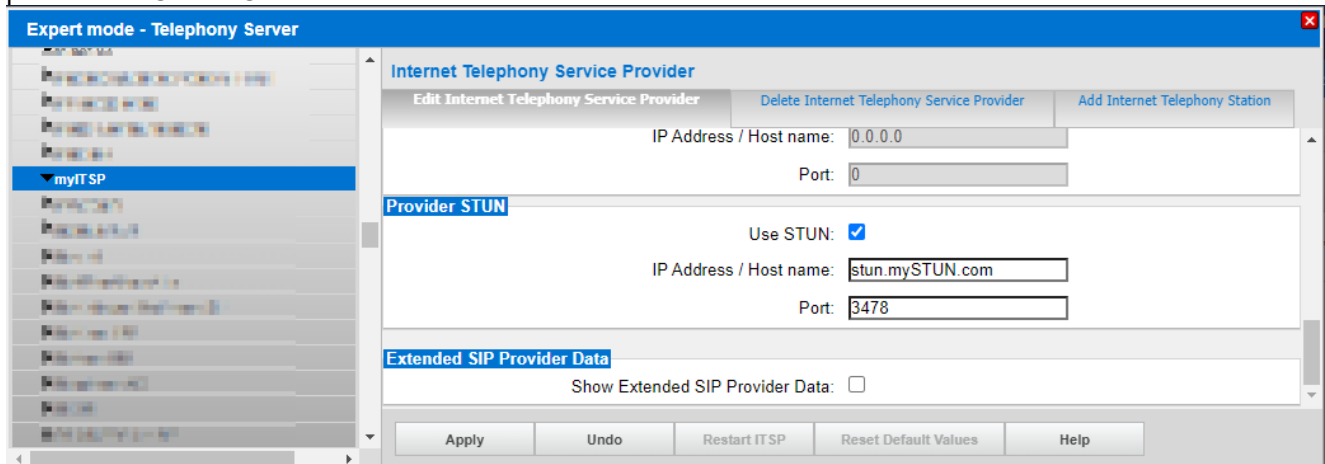

**Important:**

If the global STUN mode is set to **Use static IP** the STUN server address must be filled in as well (even if no server is used). You can use a place holder like **use.static.ip** for the server name

## 4.5 Multisite Configuration

The main concept of the feature is to host several locations and ITSPs (up to 8) in a centralized OpenScape Business system and use the appropriate ITSP depending on the station location. Calls within the same area will be possible without dialing the area code (functionality is supported by some countries only, e.g. Germany). All ITSP calls will have access code "0" for all users regardless of the station's location. For all these, two new concepts are introduced:


### Area assignment:

Each station belongs to a preconfigured location/area. Dial Rule "SIP local" based on location.

### Dedicated Route:

Each location will be configured to use a specific ITSP. Calls from specific station will overrule static "Route" entry in LCR Routing Table.

### Scenario Overview:

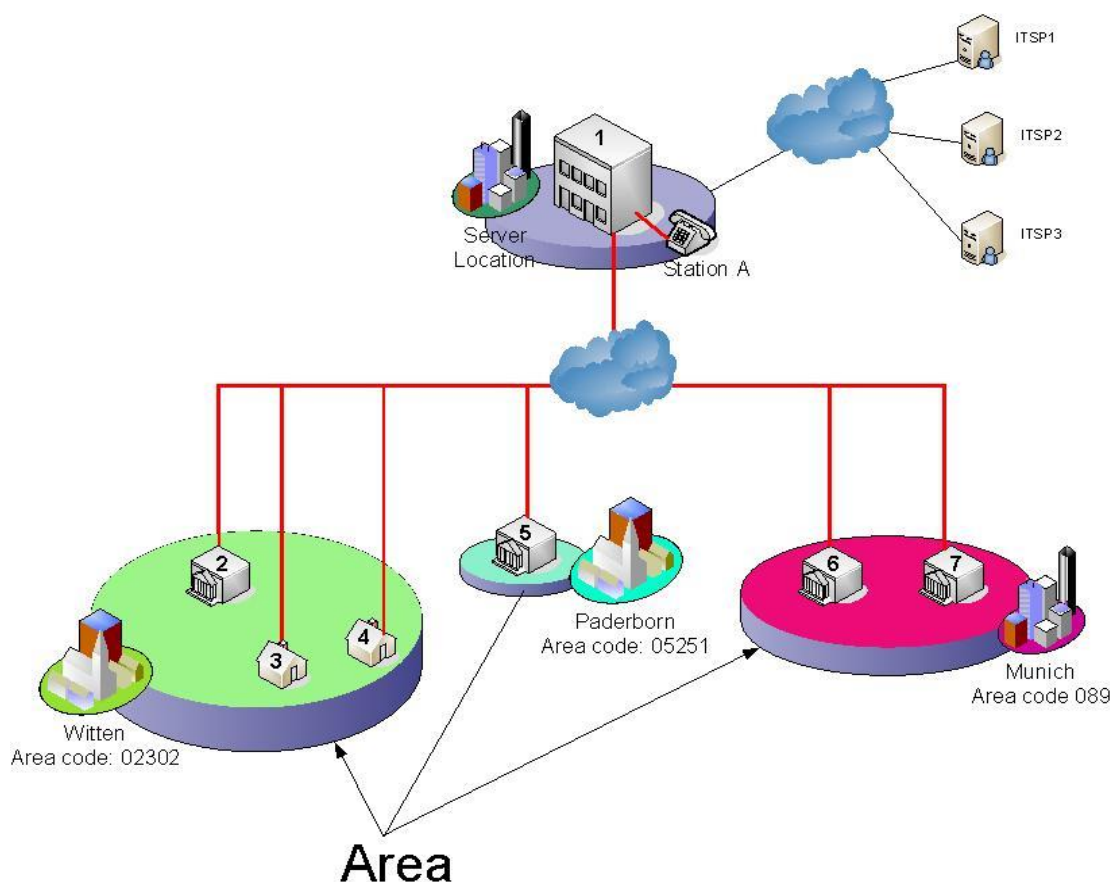


For this example, we will use 3 locations and 3 respective ITSPs (maximum can be 8) and assume that all 3 ITSPs are already activated. The concept is to use a specific ITSP for each area.

- Area Witten > ITSP 1 (profile: myITSP)
- Area Paderborn > ITSP 2 (profile: myITSP\_2)
- Area Munich > ITSP 3 (profile: myITSP\_3)

To configure a Multisite scenario, please use the "Multisite Management" wizard in Setup > Central Telephony as seen below. Please note that the wizard is visible only when at least one ITSP is already activated, and system is not part of an OpenScape Business network.


More details: <https://wiki.unify.com/images/3/37/OSBiz-ITSP-Multisite-Management.pdf>.

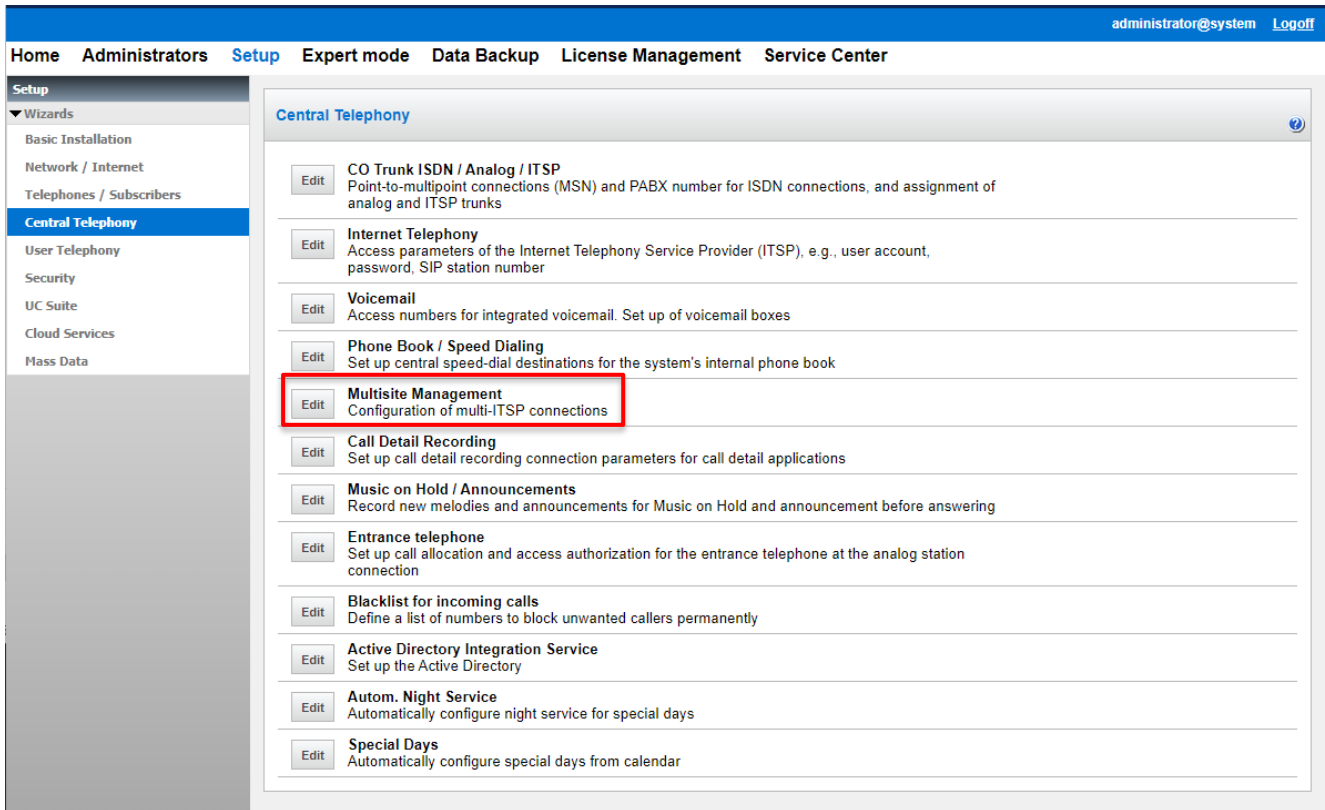

This is the first screen of the **Multisite Management** wizard. Here the areas must be defined. The Area Code for the first area is provided by default (derives from Location data).

Please keep in mind that the Area Code field configured in this screen is not the same as the Local Area Code in Route settings. The Area Code set here will be used later in the LCR (H parameter).


Please also note that all ITSP Routes must have only the Country Code configured, no Local Area Code should be configured for the Multisite functionality. Here also a dedicated route must be configured for each area (one ITSP per location).

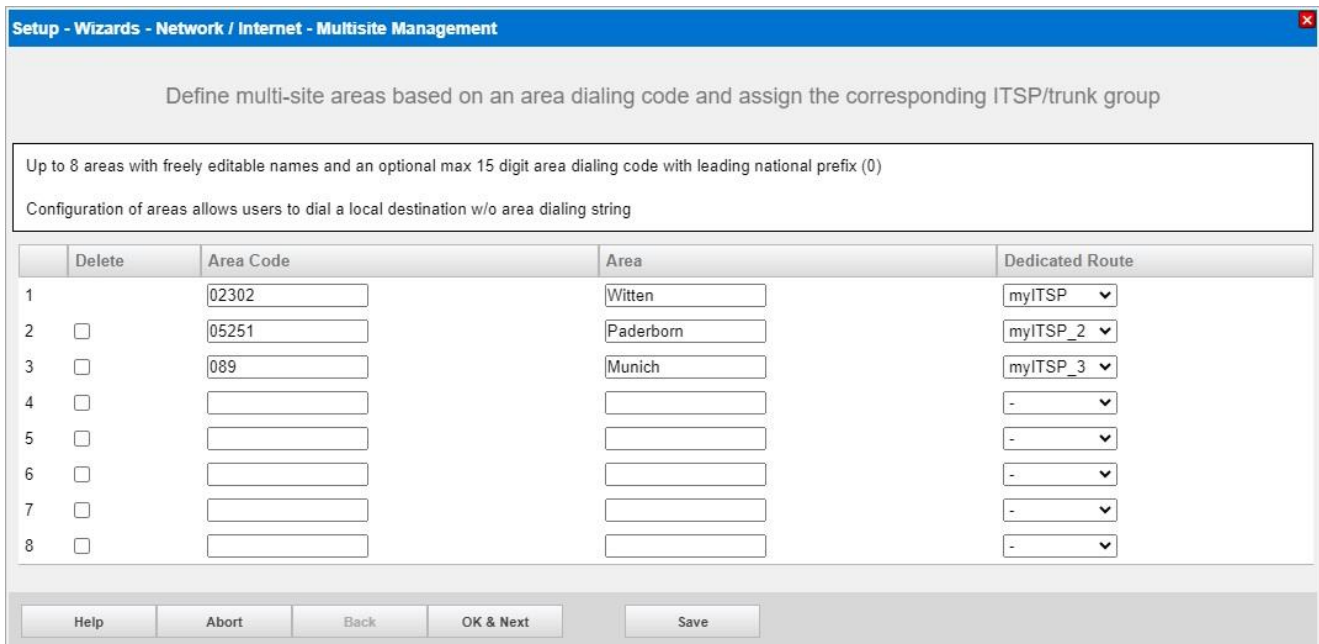

Click **[OK & Next]**


The next step is to assign stations to a specific area. By default, all stations belong to the first area. Search is possible by various criteria/ filters. Specific stations can be selected or whole groups and moved to another Area. Here we have filtered to system clients, then chose station to move to area Munich. To apply this change, please click **[Save]**.

After pressing the **[Save]** button, the change is applied, and you may continue with other changes in the same screen. After finishing all changes please click **[OK & Next]**.

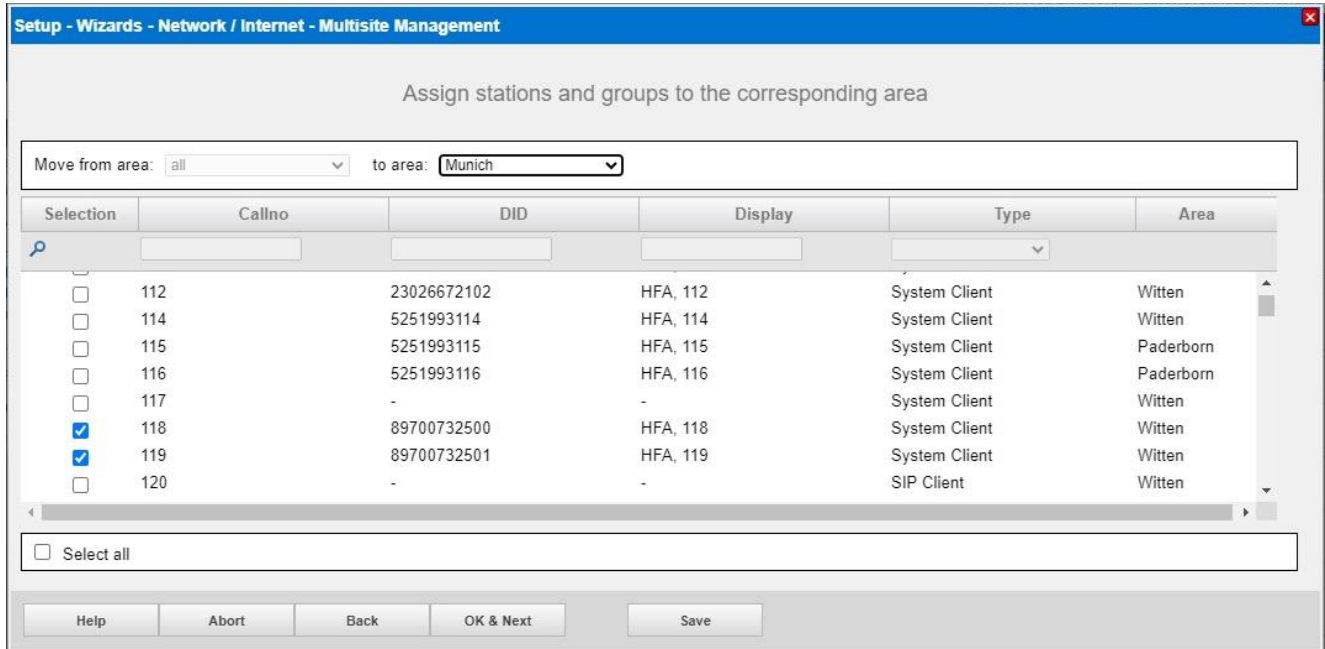

So, the final assignment is:



- Station 110 - 112 belongs to Area Witten
- Station 115 and 116 belongs to Area Paderborn
- Station 118 and 119 belongs to Area Munich

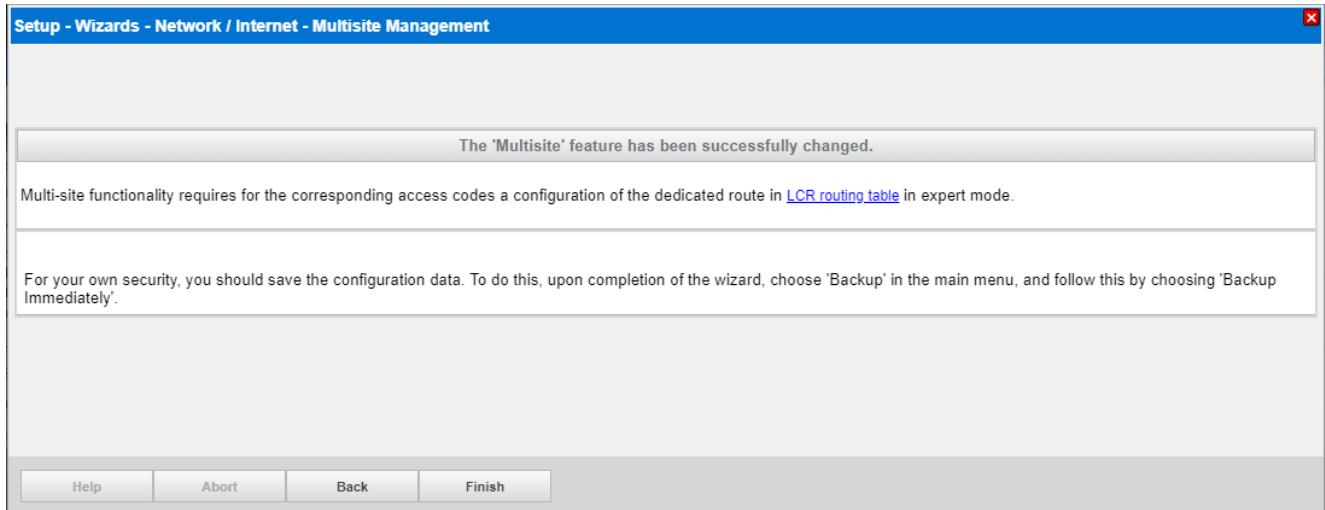

The next steps must be done in Expert Mode > LCR:

In LCR the Dial Rule “SIP Local” is set to HE2A (Provided by default or after LCR reset) where H is parameter that reflects the respective area configured earlier. All ITSPs will be accessible via seizure code 0 (dial rules 0CZ, 0C1Z and 0CNZ). Therefore, all the seizure codes in all ITSP routes should be changed to 0.

The next step is to go to LCR and activate dedicated route for the Default ITSP for the respective routing tables (by default: table 4 with dial rule “SIP” and table 5 with dial rule “SIP Local”):

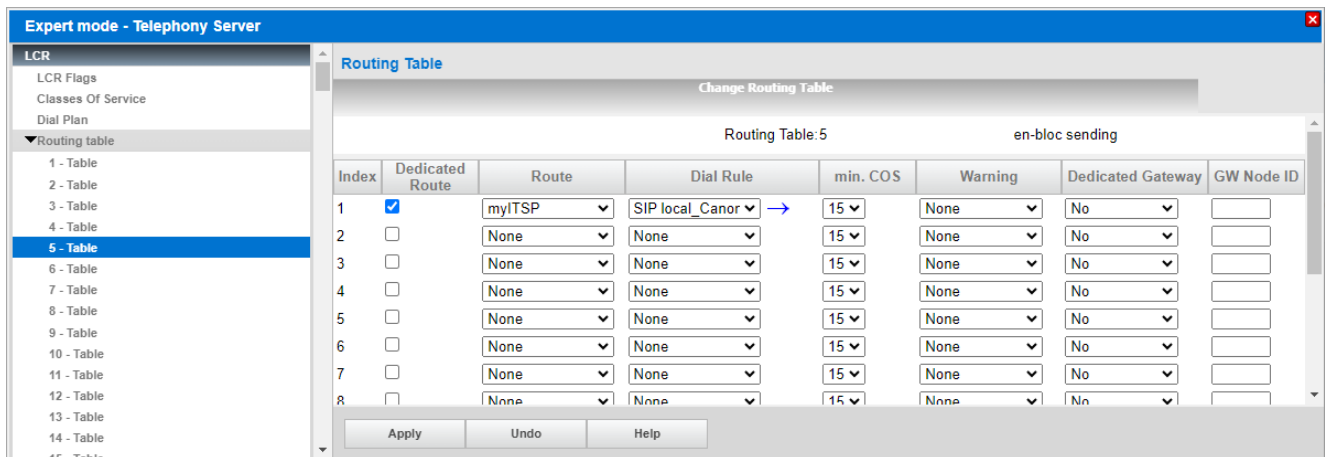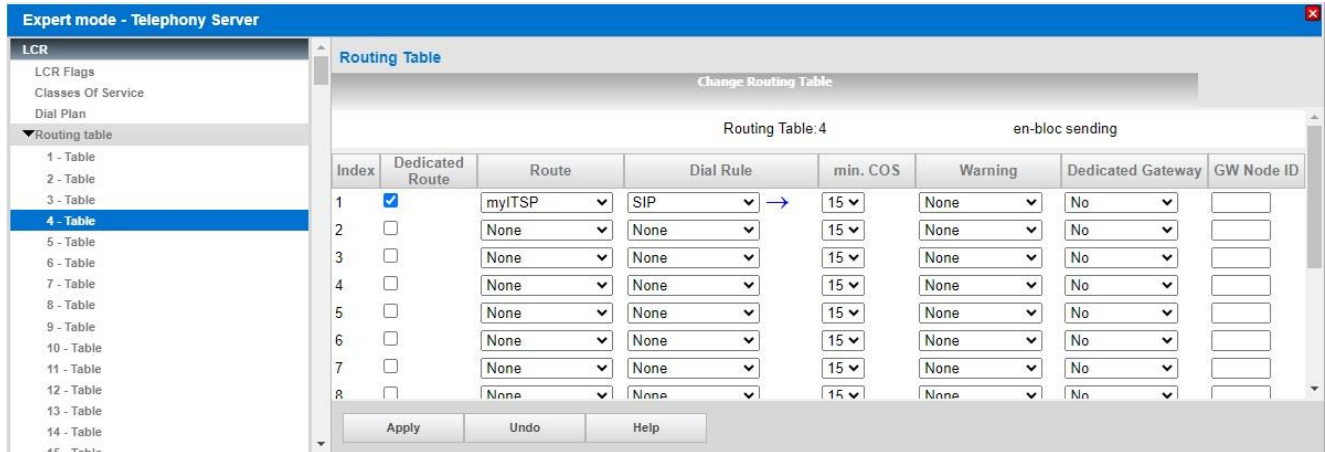


In our example we have assumed that default ITSP is myITSP. The default ITSP is used in cases where no (user specific) dedicated route can be determined. E.g. calls initiated for conference.

**Remark:** In these cases an area cannot be determined as well, therefore the H-Rule will add the area code of Area 1 (relevant for destination numbers without area code)



Areas and Stations assignment configuration done earlier in Multisite Wizard is accessible also in Expert Mode > LCR:

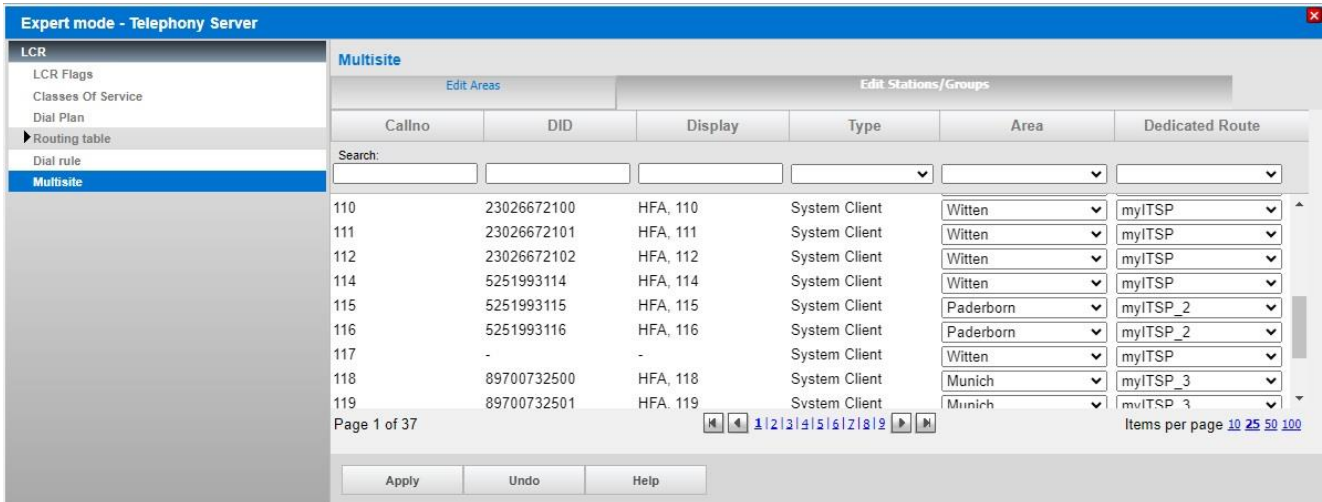

The configuration is now finished. Here are some use case examples for better understanding of the Multisite functionality:

Station 118 belongs to Area “Munich” with area code “089”

**Example Case 1:**

Station 118 wants to dial number 123456 that belongs to the same area Munich.  
 Station 118 will dial 0123456 (no local area is dialled).  
 This will result in an outgoing INVITE to the myITSP\_3 where the TO field will be: 089123456.

**Example Case 2:**

Station 118 wants to dial an international destination, e.g. 0030210123456  
 This call will be routed via myITSP\_3 and TO field will be 0030210123456

**Example Case 3:**

Station 118 wants to dial a destination by dialling the myITSP\_3 prefix.  
 In this case station 118 can dial the relevant myITSP\_3 prefix (e.g. 858) and call will be routed as normal ITSP call without the location algorithm.

**Example Case 4:**

Station 118 wants to dial a destination via another ITSP (e.g. myITSP or myITSP\_2).  
 In this case station 118 can dial the relevant ITSP prefix (e.g. 856 or 857) and call will be routed as normal ITSP call without the location algorithm.

**General Conditions and Limitations**

- Multisite is available on both Server and Embedded System.
- All sites must have the same country code, same CO access code.
- ITSPs must be configured in public number DID mode.
- Multisite is recommended to be used in a single node system.  
 (Multisite node may be part of a network, but configuration can be done only via expert mode)
- Multisite wizard is available when at least one ITSP is active.
- Application controlled call scenarios:  
 Destination call numbers configured on application side e.g. UC suite must be in dialable format including area code (national) or canonical format (recommended).
- IP Mobility not supported / allowed. Reason: Potential problems concerning handling of emergency calls.

The example described was a multi-site and multi ITSP.

We can also have all type of combinations:

- A) Multiple locations with multiple ITSPs > the example that was analyzed
- B) 1 location with multiple ITSPs > Location algorithm can be used as well as described for dialing within the same area. Alternatively the default seizure codes for each ITSP can be used as well (without the location algorithm).
- C) Multiple locations with 1 ITSP > Similar configuration with case A can apply.

