

OpenStage 40, OpenStage 40 G
OpenStage Key Module 40
HiPath 3000, OpenScape Business,
OpenScape Office

Operating Instructions

A31003-S2000-U107-14-7619

Unser Qualitäts- und Umweltmanagementsystem ist
entsprechend den Vorgaben der ISO9001 und ISO14001
implementiert und durch ein externes
Zertifizierungsunternehmen zertifiziert.

Copyright © Unify GmbH & Co. KG <03/2014>
Hofmannstr. 51, 81379 München/Deutschland

Alle Rechte vorbehalten.




Sachnummer: A31003-S2000-U107-14-7619

Die Informationen in diesem Dokument enthalten lediglich allgemeine Beschreibungen bzw. Leistungsmerkmale, die je nach Anwendungsfall nicht immer in der beschriebenen Form zutreffen oder sich durch Weiterentwicklung der Produkte ändern können. Eine Verpflichtung, die jeweiligen Merkmale zu gewährleisten besteht nur, sofern diese ausdrücklich vertraglich zugesichert wurden.

Liefermöglichkeiten und technische Änderungen vorbehalten.

Unify, OpenScape, OpenStage und HiPath sind eingetragene Warenzeichen der Unify GmbH & Co. KG. Alle anderen Marken-, Produkt- und Servicennamen sind Warenzeichen oder eingetragene Warenzeichen ihrer jeweiligen Inhaber.

Important information

	<p>For safety reasons, the telephone should only be supplied with power:</p> <ul style="list-style-type: none">• using the original power supply unit. Part number: L30250-F600-C14x (x: 1=EU, 2=UK, 3=US) or• in a LAN with PoE (Power over Ethernet), which complies with the IEEE 802.3af standard.
	<p>Never open the telephone or a key module. Should you encounter any problems, consult your administrator.</p>
	<p>Use only original accessories. The use of other accessories may be hazardous and will render the warranty, extended manufacturer's liability and the CE marking invalid.</p>

Trademarks



The device conforms to the EU Directive 1999/5/EC as attested by the CE marking.

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.



The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.


For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service, the shop where you purchased the product or your sales representative.

The statements quoted above are only fully valid for equipment that is installed and sold in the countries of the European Union and is covered by the European Directive 2002/96/EC. Countries outside the European Union may have other regulations regarding the disposal of electrical and electronic equipment.

Location of the telephone

- The telephone should be operated in a controlled environment with an ambient temperature between 5°C and 40°C.
- To ensure good speakerphone quality, the area in front of the microphone (front right) should be kept clear. The optimum speakerphone distance is 50 cm.
- Do not install the telephone in a room where large quantities of dust accumulate; this can considerably reduce the service life of the telephone.
- Do not expose the telephone to direct sunlight or any other source of heat, as this is liable to damage the electronic components and the plastic casing.
- Do not operate the telephone in damp environments, such as bathrooms.

Software update

 During a software update, the phone must not be disconnected from the power supply unit, the LAN line or the phone line.
An update action is indicated by messages on the display and/or by flashing LEDs.

Product support on the Internet

Information and support for our products can be found on the Internet at:

<http://www.unify.com>.

Technical notes, current information about firmware updates, frequently asked questions and lots more can be found on the Internet at:

<http://wiki.unify.com/>.

Contents

Important information 3

Trademarks	3
Location of the telephone	4
Software update	4
Product support on the Internet	4

General information 11

About this manual	11
Service	11
Intended use	12
Telephone type	12
Voice encryption	12
Speakerphone quality and display legibility	12
Multi-line telephone, executive/secretary functions	13
Group functions	13

Getting to know the OpenStage 14

The user interface of your OpenStage 40/40 G	14
Ports on the underside of the phone	15
Using network ports more efficiently	16
Key module	17
OpenStage Key Module 40	17
OpenStage Key Module 15	18
BLF	19
Keys	20
Function keys	20
Audio keys	20
5-way navigator	21
Programmable sensor keys	22
Dialpad	23
Display	25
Idle mode	25
Telephony dialogs	27
Mailbox	29
Messages	29
Voicemail	29
Caller list	30
Menu	31
Program/Service menu	31
Telephone user menu	32
Control and monitoring function	32

Basic functions 33

Accepting a call	33
Accepting a call via the handset	33
Accepting a call via the loudspeaker (speakerphone mode)	34
Accepting a call via the headset	34
Switching to speakerphone mode	35
Switching to the handset	35
Open listening during a call	35
Making calls	36
Off-hook dialing	36
On-hook dialing	36
Dialing with the headset connected	37
Dialing with redial keys	37
Redialing a number	37
Ending a call	38
Rejecting calls	38
Turning the microphone on and off	38
Calling a second party (consultation)	39
Switching to the held party (alternating)	39
Transferring a call	39
Forwarding calls	40
Using variable call forwarding	40
Using call forwarding no reply (CFNR)	41
Call forwarding in the event of telephone failure (CFSS)	42
Call forwarding in the carrier network and forwarding multiple subscriber numbers (MSN) (not for U.S.)	43
Using callback	44
Saving a callback	44
Accepting a callback	44
Viewing and deleting a saved callback	45

Enhanced phone functions 46

Accepting calls	46
Accepting calls via the headset	46
Accepting a specific call for your colleague	46
Using the speakerphone	47
Answering calls from the entrance telephone and opening the door	48
Accepting a call from an answering machine	49
Making calls	50
En-bloc sending/correcting numbers	50
Using the caller list	51
Calling a subscriber from the personal phonebook	52
Calling a subscriber from the corporate directory	52
Calling a subscriber from the internal system phonebook	52
Using the LDAP directory from the system phonebook	53
Making calls using system speed-dial numbers	55
Dialing with speed-dial keys	55
Talking to your colleague with a speaker call	56
Talking to your colleague with discreet calling	57
Automatic connection setup (hotline)	57
Reserving a trunk	57
Assigning a station number (not for U.S.)	58
Associated dialing/dialing aid	58

During a call	59
Using call waiting (second call)	59
Preventing and allowing call waiting (automatic camp-on)	60
Turning the call waiting tone on and off	60
Saving a number	60
Parking a call	61
Holding external calls	62
Conducting a conference	63
Activating tone dialing/DTMF suffix dialing	65
Recording a call	65
Transferring a call after a speaker call announcement in a group	66
Sending a trunk flash	66
If you cannot reach a destination	67
Call waiting (camp-on)	67
Busy override - joining a call in progress	67
Using night answer	68
 Programming sensor keys	 69
Configuring function keys	69
Overview of functions	70
Programming a procedure key	72
Configuring redial keys	73
Changing the label	74
Deleting sensor key programming	74
 Displaying and assigning call charges	 75
Displaying call charges (not for U.S.)	75
Displaying call charges for another telephone (not for U.S.)	76
Dialing with call charge assignment	76
 Privacy/security	 77
Voice encryption	77
Notes on voice encryption	77
Turning ringer cutoff on and off	78
Activating/deactivating "Do not disturb"	78
Caller ID suppression	79
Monitoring a room	80
Trace call – identifying anonymous callers (not for U.S.)	80
Changing the user password	81
Locking the telephone to prevent unauthorized use	82
Locking another telephone to prevent unauthorized use	83
Saving your PIN code	83

More functions/services 84

Appointment reminder function	84
Saving appointments	84
Using timed reminders	85
Sending a message	85
Creating and sending a message	85
Viewing and editing incoming messages	86
Leaving an advisory message	87
Deleting advisory messages	87
Displaying the number of waiting calls/overload display	88
Using another telephone like your own for a call	88
Using a mobile phone number at a random phone	89
Logging on to the "guest telephone"	89
Moving the connection to the next telephone	90
Logging off from the "guest telephone"	90
Fax details and message on answering machine	91
Resetting services and functions (system-wide cancelation for a telephone)	91
Activating functions for another telephone	92
Using system functions from outside	
DISA (Direct Inward System Access)	93
Using functions in ISDN via code dialing (keypad dialing)	94
Controlling connected computers/programs/telephone data service	94
Communicating with PC applications over a CSTA interface	95
Controlling relays (only for HiPath 3000)	96
Sensors (HiPath 33x0/35x0 only)	96
Paging persons (not for U.S.)	96

Phonebooks 97

Personal phonebook	97
Creating a new contact	97
Editing a contact	97
Deleting a contact	98
Deleting all contacts	98
Searching for a contact	99
Corporate directory	100
Searching for a contact	100
Advanced phonebook editing	101
Quick search	102

Making calls in the team/executive/secretary configuration. . 103

Lines	103
Line utilization	103
Line seizure	103
Line/trunk keys	103
Accepting calls with the trunk keys	104
Dialing with trunk keys	104
Placing a call on hold on a trunk key and retrieving the held call	105
Making calls on multiple lines alternately	105
MULAP conference release	105

Direct station selection keys	106
Using DSS keys to answer calls	106
Calling a team member directly	106
Transferring a call in progress	106
Picking up a call for another team member	107
Forwarding calls on trunks	107
Transferring calls directly to the executive phone	109

Using team functions 110

Activating/deactivating a group call	110
Picking up a call for another member of your team	112
Ringing group	112
Uniform Call Distribution (UCD)	113

Special functions in the LAN 115

Leaving hunt group/group call	115
Setting up "follow me" call forwarding	116
Using night service	117
Ringing group	118
Controlling relays (only for HiPath 3000)	119
Opening a door	119

Individual phone configuration 120

Adjusting display properties	120
Adjusting the display to a comfortable reading angle	120
Setting contrast	120
Adjusting the brightness	120
Adjusting displays on the Open Stage Key Module	121
Audio	121
Setting the ring tone mode	121
Adjusting audio settings	122
Adjusting the receiving volume during a call	122
Adjusting the ring volume	122
Adjusting the ringer pitch	122
Adjusting the attention ring volume	122
Adjusting the speakerphone to the room acoustics	123
Activating/deactivating the ring tone	123
Setting local ring tones	123
Setting headset port use	124
En-bloc dialing (local)	125
Viewing network information	126
Language for system functions	126

Testing the phone	127
Testing the phone's functionality	127
Checking the key assignment	127
 Differing display views in a HiPath 4000 environment	128
 Web interface	129
General	129
Launching the web interface	129
Administrator Pages	129
User Pages	130
User menu	130
 Fixing problems	132
Responding to error messages on the display	132
Contact partner in case of problems	133
Troubleshooting	134
Care and cleaning instructions	134
Labeling keys	134
 Local user menu	135
Opening the user menu on the phone	135
User menu display	135
 Index	137
 Overview of functions and codes (alphabetical)	141

General information



About this manual


This document contains general descriptions of the technical options, which may not always be available in individual cases. The required features must therefore be individually defined in the terms of the contract.

If a particular function on your phone is not available to you as described, this may be due to one of the following reasons:

- The function is not configured for you or your telephone. Please contact your system administrator.
- Your communication platform does not feature this function. Please contact your Unify sales partner for information on how to upgrade.

This user guide is intended to help you familiarize yourself with the **OpenStage** phone and all of its functions. It contains important information on the safe and proper operation of the **OpenStage** phone. These instructions should be strictly complied with to avoid operating errors and ensure optimum use of your multifunctional telephone in the network.


These instructions should be read and followed by every person installing, operating or programming the **OpenStage** phone.

 For your own protection, please read the section dealing with safety in detail. Follow the safety instructions carefully in order to avoid endangering yourself or other persons and to prevent damage to the unit.

These operating instructions are designed to be simple and easy to understand, providing clear step-by-step instructions for operating the **OpenStage** phone.

Administrative tasks are dealt with in a separate manual. The Quick Reference Guide contains quick and reliable explanations of frequently used functions.

Service

 The Unify service department can only help you if you experience problems or defects with the phone itself.
Should you have any questions regarding operation, your specialist retailer or network administrator will gladly help you.
For queries regarding connection of the telephone, please contact your network provider.

If you experience problems or defects with the phone, please dial the service number for your country.

Intended use

The **OpenStage** phone is a desktop or wall-mounted unit designed for voice transmission and for connection to a LAN. Any other use is regarded as unintended.

Telephone type

The identification details (exact product designation and serial number) of your telephone can be found on the nameplate on the underside of the base unit. Specific details concerning your communication platform can be obtained from your service technician.

Please always have this information to hand when you contact our service department regarding faults or problems with the product.

Voice encryption

On HiPath 3000/**OpenScape Business** (from R 4), **HiPath Open Scape Office** (V1), your **OpenStage 40/40 G** supports voice encryption from software release 2 (V1 R2.xxxx). This allows you to use your **OpenStage** to conduct calls without the risk of eavesdropping. Voice transmission is encrypted and then decrypted again on the call partner's phone and vice versa.

If "Secure Mode" is enabled on your phone (consult your administrator) and a connection is established to a phone that does not support voice encryption, the call is not encrypted and is thus not secure.

Your administrator can define in your communication system whether you are notified of unencrypted calls and how → Page 77.

Speakerphone quality and display legibility

- To ensure good speakerphone quality, the area in front of the telephone (front right) should be kept clear.
The optimum distance is approx. 50 cm.
- Proceed as follows to optimize display legibility:
 - Turn the phone and tilt the display so that you have a frontal view of the display while eliminating light reflexes.

Multi-line telephone, executive/secretary functions

Your **OpenStage 40/40 G** is a "multi-line telephone". This means that multiple lines can be configured by your administrator, which is not the case with single-line phones. Each line is assigned an individual phone number that you can use to make and receive calls.

The programmable sensor keys on multi-line phones function as trunk keys → Page 103.

When using a multi-line phone to make and receive calls, certain particularities must be taken into account → Page 104 ff.

The executive-secretary configuration is a special case. This is a multi-line telephone with special features (e.g. "Ring transfer" and "Pick up call"), configured especially for executive/secretary use → Page 103ff.

Group functions

For even more efficient telephone functionality, your administrator can configure various team functions such as call pickup, hunt groups and call distribution groups.

Getting to know the OpenStage


The following sections describe the most frequently used controls and displays.

The user interface of your OpenStage 40/40 G



1	You can make and receive calls as normal using the handset .
2	The display permits intuitive operation of the phone → Page 25.
3	You can customize your telephone by assigning phone numbers and functions to the programmable sensor keys → Page 22.
4	You can use function keys when conducting a call to access frequently used functions (such as Disconnect/Release) or to open the Service Menu and mailbox → Page 20.
5	Audio keys are also available, allowing you to optimally configure the audio features of your telephone → Page 20.
6	The 5-way navigator is a convenient navigation tool → Page 21.
7	The dialpad can be used to enter phone numbers and write text → Page 23.
8	Incoming calls are visually signaled via the call display .

Ports on the underside of the phone

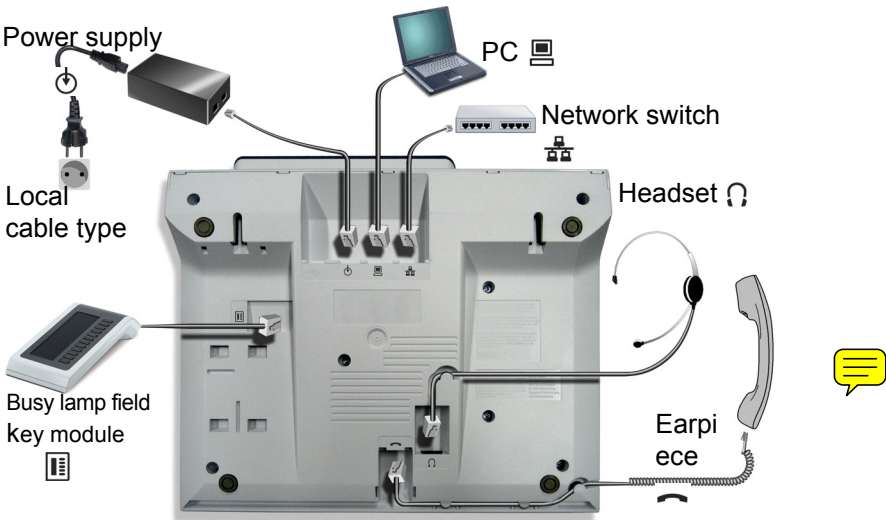

Properties of your OpenStage 40/40 G

OpenStage	40	40 G
LCD display, 40 x 6 characters	✓	✓
Illuminated display	✓	✓
Programmable sensor keys	6	6
Full-duplex speakerphone function	✓	✓
Headset	✓	✓
10/100 Mbps Ethernet switch → Page 16	✓	-
1000 Mbps Ethernet switch → Page 16	-	✓
Interface for key modules	✓	✓
Wall mounting	✓	✓

Using network ports more efficiently

The **OpenStage 40** has a built-in 10/100 Mbps Ethernet switch. The **OpenStage 40 G** has a 1000 Mbps Ethernet switch. This means that you can connect a PC to the LAN directly via the phone. The option for connecting the telephone and PC must first be activated on the telephone by your administrator.



Using this connection option saves one network port for each switch used and requires fewer or shorter network cables when arranged correctly.

Key module

OpenStage Key Module 40

The **OpenStage Key Module 40** is a key module attached to the side of the phone that provides an additional 12 illuminated, programmable keys.


Like keys on the phone, these keys can be programmed and used according to your needs
→ Page 22.



You can attach up to two **OpenStage Key Module 40** modules to your **OpenStage 40/40 G**.

OpenStage Key Module 15

The **OpenStage Key Module 15** is a key module attached to the side of the phone that provides an additional 18 illuminated keys that can only be programmed for phone numbers. Like keys on the phone, these keys can be programmed with phone numbers and used according to your needs (for labelling, see → Page 134).

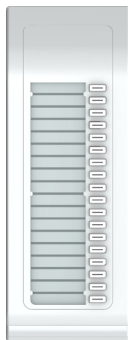

You can only attach one **OpenStage Key Module 15** to your **OpenStage 40**. You **cannot** combine the **OpenStage Key Module 15** with the **OpenStage Key Module 40**.

BLF

➡ Your **OpenStage 40/40 G** can be configured as an attendant console in conjunction with an **BLF** (consult your administrator).

The **BLF** is a key module attached to the side of the phone that provides 90 illuminated, programmable keys.

Like keys on the phone, these keys can be programmed and used according to your needs
→ Page 22.



You can only attach 1 **BLF** to your **OpenStage 40/40 G**.

Key labeling

Your **BLF** is delivered with label strips. Write functions or names in the white fields on the relevant label strips.

Alternatively, you can use the Key Labeling Tool to conveniently create new label strips. You can find this including instructions at






http://wiki.unify.com/wiki/Key_Labelling_Tool

Lay the labeled strips on the relevant key fields and place the transparent cover over them (rough side up).

Keys


Function keys








Key	Function when key is pressed
	End (disconnect) call → Page 38.
	Saved number redial (last number dialed) → Page 37.
	Button for call forwarding (with red key LED) ¹ → Page 40.
	Open mailbox (with red key LED) → Page 29.
	Open Service Menu (with red LED key) → Page 31.


¹ If the key LED on your phone is flashing, your station has been set up as a forwarding destination.

Audio keys

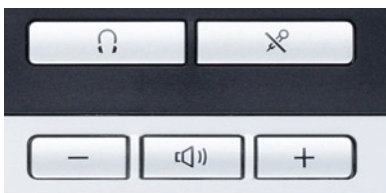











Key	Function when key is pressed
	Activate/deactivate the headset → Page 46
	Activate/deactivate microphone (also for speakerphone mode) → Page 38
	Set volume lower and contrast brighter → Page 120.
	Turn speaker on/off (with red key LED) → Page 35.
	Set volume louder and contrast darker → Page 120.

5-way navigator


 Remove the protective film from the ring around the 5-way navigator before using the phone.

This control allows you to manage most of your phone's functions as well as its displays.

Operation	Functions when key is pressed
 Press the  key.	<p>In idle mode:</p> <ul style="list-style-type: none">• Open the idle menu → Page 26 <p>In lists and menus:</p> <ul style="list-style-type: none">• Go to next level <p>You can now access a context menu:</p> <ul style="list-style-type: none">• Open the context menu
 Press the  key.	<p>In lists and menus:</p> <ul style="list-style-type: none">• Go back one level or go back to the telephony interface by pressing several times <p>During en-bloc dialing:</p> <ul style="list-style-type: none">• Delete character to the left of the cursor
 Press the  key.	<p>In lists and menus:</p> <ul style="list-style-type: none">• Scroll down• Long press (key held down): Jump to the end of the list/menu
 Press the  key.	<p>In lists and menus:</p> <ul style="list-style-type: none">• Scroll up• Long press (key held down): Jump to the start of the list/menu
 Press the  key.	<p>In idle mode:</p> <ul style="list-style-type: none">• Open the idle menu → Page 26 <p>Entry selected:</p> <ul style="list-style-type: none">• Perform action

Programmable sensor keys


Your **OpenStage 40/40 G** features six illuminated sensor keys that you can program on two levels. You can assign functions and phone numbers at the first level and only phone numbers at the second level.

 Increase the number of programmable sensor keys by connecting a key module → Page 17.



Depending on how they are programmed, you can use the sensor keys as:

- Function keys → Page 69
- Redial keys → Page 73
- Procedure keys → Page 72

 You can program all programmable sensor keys (except "Shift") on two levels. The "Shift" key must be configured for this → Page 69 and extended key functionality must be active (consult your administrator).
Only external phone numbers and internal phone numbers without LED display can be saved on the second level → Page 73.




Touch the key briefly to activate the programmed function or dial the stored number.

Press and hold the key to open a menu for programming it → Page 72.


A label for the function is displayed to the left of the key. You can define the labelling according to your requirements → Page 74.

The status of a function is shown by the LED on the corresponding sensor key.

Meaning of LED displays on function keys and DSS keys


LED		Meaning of function key	Meaning of DSS key
	Off	The function is deactivated.	The line is free.
	Flashing ¹	Indicates the function status.	The line is busy.
	On	The function is activated.	There is a call on the line.

¹ In this manual, flashing sensor keys are identified by this icon, regardless of the flashing interval. The flashing interval represents different statuses, which are described in detail in the corresponding sections of the manual.



 The programmable sensor keys on multi-line phones function as trunk keys → Page 103.

Dialpad













In cases where text input is possible, you can use the dialpad to input text, punctuation and special characters in addition to the digits 0 to 9 and the hash and asterisk symbols. To do this, press the numerical keys repeatedly.

- Example: To enter the letter "h", press the number  key on the keypad twice.
- Alphabetic labeling of dial keys is also useful when entering vanity numbers (letters associated with the phone number's digits as indicated on the telephone spell a name, e.g. 0700 - PATTERN = 0700 - 687837).

Multi-function keys

Function		
Press and hold	Turn ring tone on/off → Page 123	Turn phone lock on/off → Page 82
Text input → Page 24	Next letter in uppercase	Delete character.

Character overview (depends on the current language setting)



Key	1x	2x	3x	4x	5x
	1	1			
	a	b	c	2	
	d	e	f	3	
	g	h	i	4	
	j	k	l	5	
	m	n	o	6	
	p	q	r	s	7
	t	u	v	8	
	w	x	y	z	9
	+	.	-	0	
	2				
	3				


- 1 Space
- 2 Next letter in uppercase
- 3 Delete character

Text input


The current label appears on the first line. Delete it with the key before entering new characters.

Enter the required characters using the dialpad.

Choose the functions using the  and  keys.

Confirm with .

Example: Changing the key label → Page 74.

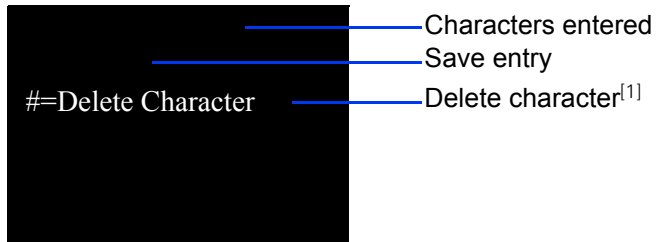


[1] Alternatively, press the key .

Display

Your **OpenStage 40/40 G** comes with a tilt-and-swivel black-and-white LCD display. Adjust the tilt and contrast to suit your needs → Page 120ff.

Idle mode

If there are no calls taking place or settings being made, your **OpenStage 40/40 G** is in idle mode.

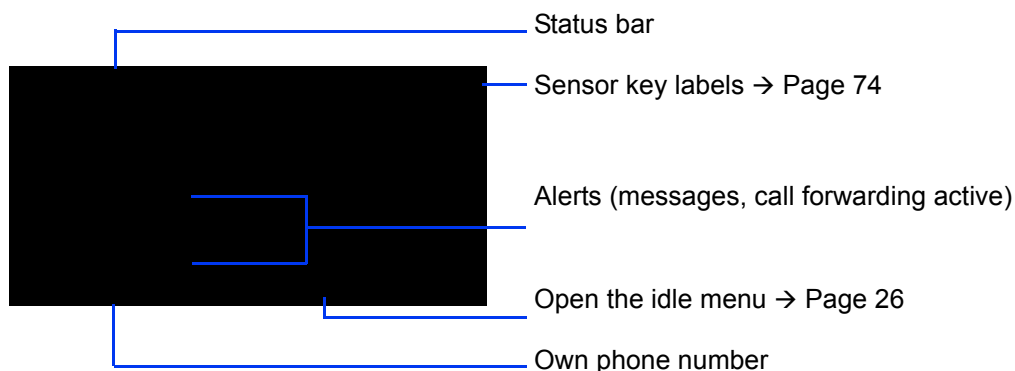

The left area contains the status bar on the first line and is followed by a five-line field for additional displays.

A logo is displayed in the middle; it can be set up by your administrator.


Icons that appear under the logo inform you about callback requests, voice messages and activated call forwarding.

The right area shows the labels of programmable sensor keys.

Explanation of the icons

Icon	Meaning
	The ring tone is deactivated → Page 123
	The "Do not disturb" function is activated → Page 78
	The phone lock is activated → Page 82
	You received new voicemail → Page 29
	Call forwarding is active → Page 40
	A mobility user is logged on to the phone → Page 89

Idle menu

When in idle mode, press the  key on the 5-way navigator → Page 21 to display the idle menu. You can call up various functions here. The idle menu includes selected functions from the **Service Menu** → Page 31.

The idle menu may contain the following entries:

- Caller list
- Forwarding on
- Lock phone
- DND on¹
- Advisory msg. on
- Ringer cutoff on
- Send message
- View sent message²
- View callbacks³
- Phonebook (system phonebook)
- HF answerback on
- Suppress call ID
- Waiting tone off
- DISA internal





1. Must be activated by the administrator.
2. Only appears when there are messages that the recipient has not yet viewed.
3. Only appears if callback requests are saved.

Telephony dialogs

Connection-dependent conditions and situations, for example when your telephone rings, when dialing a number or during a call are depicted graphically on the display.


Situation-dependent functions that automatically appear on the display can be selected and activated with the 5-way navigator → Page 21.

|||➡ The scope and type of functions offered automatically to you may vary.

When an arrow appears to the right of a selected entry, another menu level is available, which you can select with the  or  keys → Page 21.


Appearance during dialing

Example: You have lifted the handset or pressed the speaker key.

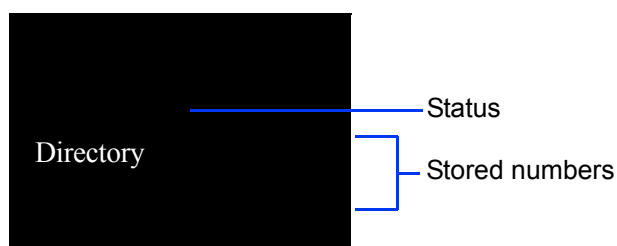


Appearance during en-bloc dialing

Example: You are entering a number.

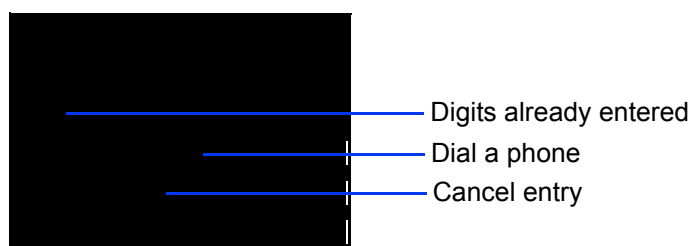

Appearance during an ongoing call

Example: You are connected to a caller.

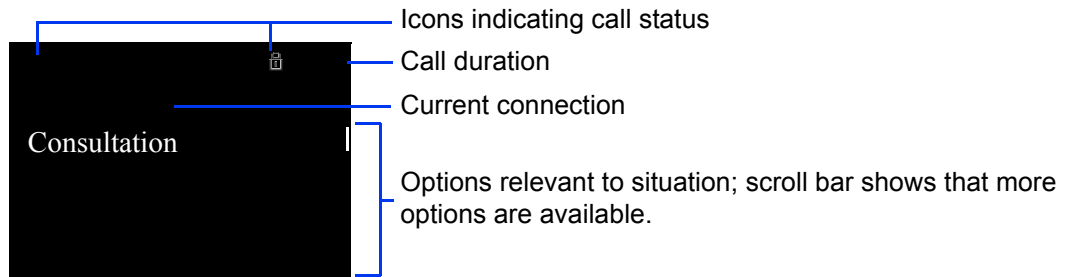

Icons for frequent call states

Icon	Meaning
—	The call is active.
⚡	The call has been disconnected.
⏸	You have placed the call on hold (e.g. consultation hold).
⏸	Your call partner has placed the call on hold.
🔒	You are conducting a call over a secure connection.
🔓	You are conducting a call over a non-secure connection.

➡ Detailed descriptions of the various functions can be found in the sections "Basic functions" → Page 33 and "Enhanced phone functions" → Page 46.


Mailbox


Depending on the type and configuration of your communication platform (consult the relevant administrator), messages from services, such as HiPath Xpressions, are displayed in this application in addition to messages received.

Messages


You can send short text messages to individual internal stations or groups.


In idle mode (→ Page 25) the following signals alert you to the presence of new messages:

-  key LED lights up
- Display → Page 25.

Press the mailbox key .

Example:

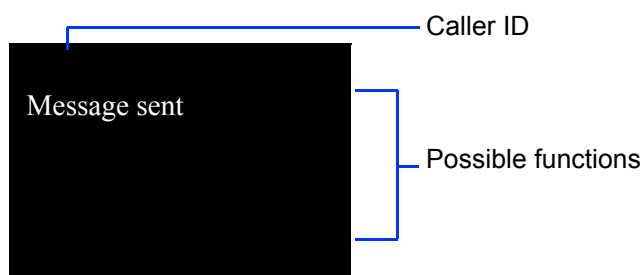

 For a description of how to edit the entries → Page 86.

Voicemail

If your telephone is connected to a voicemail system (such as Entry Voice Mail), the Mailbox key will also light up to alert you to any messages that have arrived.

To listen to your voicemail, follow the instructions on the display.

Caller list

If you are unable to accept an external or internal call, this call attempt is stored in the caller list. External answered calls can also be saved in the caller list (consult your administrator).


Your telephone stores up to ten calls in chronological order. Each call is assigned a time stamp. The oldest entry not yet deleted in the list is displayed first. Multiple calls from the same caller do not automatically generate new entries in the caller list. Instead, only the most recent time stamp for this caller is updated and its number incremented.

The caller list is automatically displayed → Page 51 in the idle menu → Page 26.

|||➡ Callers with suppressed numbers cannot be saved in the call list.


Information is displayed regarding the caller and the time at which the call was placed.

Example:

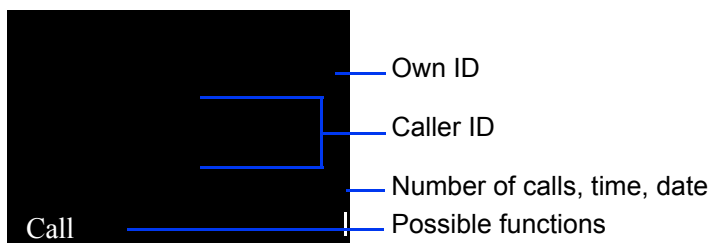


|||➡ For a description of how to edit the caller list → Page 51.


Menu

Use the menu key  to access the following options:

- **Service Menu** for your communication system
- Personal (local phonebook)
- Corporate (corporate directory)
- User (local telephone settings for users)
- Administrator (local telephone settings for administrators)

The menu key LED remains red as long as you are in this menu.


To access: Press the  key.

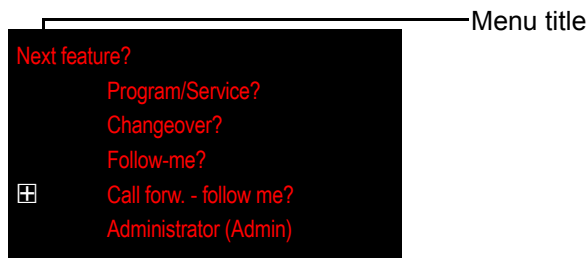

Program/Service menu

You can use the **Service Menu** option to access your communication system's extensive functions.




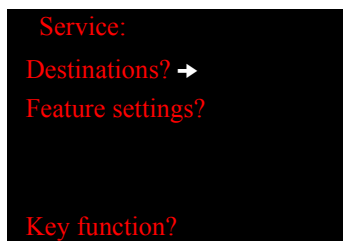



Example:




The arrow next to an entry indicates the availability of additional options for this entry. The menu structure comprises several levels. The first line in this structure shows the menu currently selected while the second line shows an option from this menu.

Accessing the menu

The **Service Menu** on your communication system can be accessed in three ways:

1. Press the menu key , select the **Service Menu** first with the  or  keys and then the function and confirm the selected entry with .
2. Press the  key and select a function from the idle menu → Page 26.
3. Press  or  in idle mode and select the code for the relevant function.

 You will find an overview of the available functions as well as the corresponding codes on → Page 141.

Telephone user menu

You can configure settings for your **OpenStage** here.

Opening the user menu

To access: Press the  key. Select and confirm the "**User**" option with the  or  keys.

If necessary, enter the user password → Seite 137.

The menu structure contains several levels.



You can also configure some of the settings using the web interface → Seite 146 of your **OpenStage**.

Control and monitoring function


A control or monitoring function can be activated on your phone for service purposes by remote maintenance.

Control function


Your administrator has the option to activate and deactivate features of the phone via remote maintenance. During maintenance, the handset, microphone, loudspeaker and headset are deactivated. You are additionally informed on the display that the control function is active.

Monitoring function

In order to detect malfunctioning of a phone, for example, your administrator can install a monitoring function. You can use your phone as normal during monitoring. However you will first be informed about the operation with a message on the display and prompted to allow monitoring.

If your administrator has activated a function on your phone, which continuously transmits operating data to a server, you will see the flashing  icon in the upper display line.


Basic functions

 Please read the introductory chapter "Getting to know the **OpenStage**" → Page 14 carefully before performing any of the steps described here on your phone.


Accepting a call

Your **OpenStage** rings with the tone signal set when an incoming call is received. The call is also visually signaled on the call display.

- When you receive an internal call, your telephone rings once every four seconds (single-tone sequence).
- When you receive an external call, your telephone rings twice in rapid succession every four seconds (dual-tone sequence).
- When you receive a call from the entrance telephone, your telephone rings three times in rapid succession every four seconds (triple-tone sequence).
- If a call is waiting, you hear a short tone (beep) every six seconds.

 Your administrator can adjust the ring cadence for external and internal calls for you. In other words, different ring cadences can be set for different internal callers.

If information on the calling party (name, phone number) is transmitted, it will appear on the graphic display.




 Any settings you are currently making on the phone will be interrupted by an incoming call.

Accepting a call via the handset

The phone rings. The caller appears on the screen.
Pay attention to the notes on voice encryption → Page 77.

Lift the handset.

Adjust the call volume. Keep pressing the key until the desired volume is set.

if nec.   or 

Accepting a call via the loudspeaker (speakerphone mode)

Notes on using speakerphone mode

- Tell the other party that you are using speakerphone mode.
- The speakerphone works best at a low receiving volume.
- The ideal distance between the user and the telephone in speakerphone mode is about 50 cm (approx. 20 inches).

The phone rings. The caller appears on the screen.
Pay attention to the notes on voice encryption → Page 77.

Press the key shown. The LED lights up.



or

Answer

if nec. or

Confirm the option shown.
The speakerphone function is activated.

Adjust the call volume. Keep pressing the key until the desired volume is set.

Ending the call

Press the key shown. The LED goes out.



or



Press the key shown.

Accepting a call via the headset

Prerequisite: A headset is connected.



Make sure your headset port is set up properly → Page 124.

The phone rings. The key flashes.

Press the key shown.



Adjust the call volume.

if nec. or

Switching to speakerphone mode

Prerequisite: You are conducting a call via the handset.

Hold down the key and replace the handset. Then release the key and continue the call.

Adjust the call volume. Keep pressing the key until the desired volume is set.

U.S. mode

If the country setting is set to U.S. (consult your administrator), you do not have to hold down the loudspeaker key when replacing the handset to switch to speakerphone mode.

Press the key shown.

Replace the handset. Proceed with your call.

Adjust the call volume. Keep pressing the key until the desired volume is set.

Switching to the handset

Prerequisite: You are conducting a call in speakerphone mode.

Lift the handset.

The key LED goes out.

Proceed with your call.

Open listening during a call

You can let other people in the room join in on the call. Let the other party know that you have turned on the speaker.


Prerequisite: You are conducting a call via the handset.



Activating

Press the key shown. The LED lights up.



Deactivating

Press the key shown. The LED goes out.



if nec.  or 



if nec.  or 



Making calls

Off-hook dialing



Lift the handset.



Internal calls: Enter the phone number.

External calls: Enter the external code and the station number.

Pay attention to the notes on voice encryption → Page 77.

The called party does not answer or is busy



Replace the handset.

On-hook dialing



Internal calls: Enter the phone number.

External calls: Enter the external code and the phone number.



Your system may also be programmed so that you have to press the "internal" key before you dial the internal number. You then do not have to enter an external code to call the external party (automatic trunk seizure/prime line is not active; consult your administrator).

Pay attention to the notes on voice encryption → Page 77.

The other party answers with speaker



Lift the handset.

or

On-hook dialing: Speakerphone mode.

The called party does not answer or is busy



Press the key shown. The LED goes out.

Dialing with the headset connected

Prerequisite: The headset is connected.

Internal calls: Enter the phone number.

External calls: Enter the external code and the phone number.

The headset key lights up.

The connection is set up as soon as your input is complete.

 Make sure your headset port is set up properly → Page 124.

Pay attention to the notes on voice encryption → Page 77.

Dialing with repdial keys

Prerequisite: You have saved a number on a repdial key → Page 73.


Press the key with the saved number.

If the number is saved at the second level, press the "Shift" key first.

Lift the handset.


Press the key shown.

Pay attention to the notes on voice encryption → Page 77.

 You can also press the repdial key during a call and automatically initiate a callback → Page 39.

Redialing a number

The last ten external phone numbers dialed are stored automatically.

 If this feature is configured (consult your administrator), account codes entered are also saved → Page 76.

You can redial them simply by pressing a key.


Displaying and dialing saved station numbers

Press the key shown.

Keep selecting and confirming the option shown until the phone number you want appears.

Select and confirm the option shown.

Pay attention to the notes on voice encryption → Page 77.

 On a multi-line phone, the last number dialed on the primary line is always saved.



or



or



Next

Call

Ending a call

Replace the handset.

Press the key shown.

Rejecting calls

You can reject calls you do not wish to take. The call is then signaled on another definable telephone (consult your administrator).

The phone rings. The caller appears on the screen.

Press the key shown.

Select and confirm the option shown.

If a call cannot be rejected, your telephone will continue to ring. The message "currently not possible" is displayed (e.g. in the case of recalls).

Turning the microphone on and off

To prevent the other party from listening in while you consult with someone in your office, you can temporarily switch off the handset microphone or the handsfree microphone. You can also switch on the handsfree microphone to answer an announcement via the telephone speaker (speaker call, → Page 47).

Prerequisite: A connection is set up, the microphone is activated.

Press the key shown. The LED lights up.

Press the illuminated key. The LED goes out.

only the red highlighted Displays are variables.

Consultation



Return to held call

or

Quit and return

Toggle/Connect

Conference

Leave conference

Consultation



or

Transfer

Calling a second party (consultation)

You can call a second party while a call is in progress. The first party is placed on hold.

Confirm the option shown.

Call the second party.

Pay attention to the notes on voice encryption → Page 77.

Return to the first party, the second party does not answer:

Confirm the option shown.

End the consultation:

Select and confirm the option shown.

Switching to the held party (alternating)

Select and confirm the option shown.

Pay attention to the notes on voice encryption → Page 77.

Initiating a three-party conference

Select and confirm the option shown.



If voice encryption is not activated or not available on a conference party's phone, the entire conference is not secure. It may be indicated that the call is not secure → Page 77.

Leaving a conference

Select and confirm (for more information on conferences, see → Page 63).

Transferring a call

If the person you are speaking to wants to speak to another colleague of yours, you can transfer the call to that colleague.

Confirm the option shown.

Enter the number of the party to whom you want to transfer the call.

Announce the call, if necessary.

Replace the handset.

Select and confirm the option shown¹.

1. "Differing display views in a HiPath 4000 environment" → Seite 128

Forwarding calls

Using variable call forwarding

You can immediately forward internal or external calls to different internal or external telephones (destinations). (External destinations require special configuration in the system.)

➡ When call forwarding is active, a special dial tone sounds when you lift the handset.

If DID DTMF is active (consult your administrator), you can also forward calls to this destination. Destinations: Fax = 870, DID = 871, Fax-DID = 872.

If you are a call forwarding destination, the call forwarding key will flash → Page 20.

➡ Special features must be taken into consideration if your telephone operates with system networking via LAN → Page 116!

Press the key shown.

Open the idle menu → Page 26.

Select and confirm the option shown.

Confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Enter the destination number.

Confirm the option shown.

The call forwarding symbol as well as the phone number and possibly also the forwarding destination name are displayed.

Deactivating call forwarding

Press the key shown.

Open the idle menu → Page 26.

Select and confirm the option shown.



or



Forwarding on

1=all calls

or

2=external calls only

or

3=internal calls only



Save

100168



or



Forwarding off

Using call forwarding no reply (CFNR)

Calls that are not answered after three rings (=default, can be adjusted by the administrator) or that are received while another call is ongoing can be automatically forwarded to a specified telephone.

Open the Program/Service menu → Page 31.

Confirm the option shown.

Select and confirm the option shown.

If a phone number is already entered:

Confirm the option shown.

Enter the destination number.

- Enter the internal station number for internal destinations
- Enter the external code and the external station number for external destinations

Confirm the option shown.

Deactivating call forwarding no reply

Open the Program/Service menu → Page 31.

Confirm the option shown.

Select and confirm the option shown.

Confirm to deactivate and delete the forwarding destination.

Select and confirm to return to idle mode and not deactivate call forwarding.



If CFNR is activated, "CFNR on" appears briefly on the display after you hang up.

The screenshot shows a vertical menu on a device screen. At the top right is a back arrow icon. The menu items are: "Destinations →", "CFNR on", "if nec.", "Change", a numeric keypad icon, "Save", another back arrow icon, "Destinations →", "CFNR off", "Delete", "or", and "Exit".

Call forwarding in the event of telephone failure (CFSS)

If configured (consult your administrator), you can define an internal or external call forwarding destination that activates in the event of telephone failure.

Open the **Service Menu** → Page 31.

Confirm the option shown.

Select and confirm the option shown.

If a phone number is already entered:

Confirm the option shown.

Enter the destination number.

Confirm the option shown.

Deactivating call forwarding/deleting a destination

Open the **Service Menu** → Page 31.

Confirm the option shown.

Select and confirm the option shown.

Confirm to deactivate and delete the forwarding destination.

Select and confirm to return to idle mode and not deactivate call forwarding.

The screenshot shows a vertical menu on a light gray background. At the top right is a small icon of a document with a checkmark. Below it is a button labeled 'Destinations →'. Underneath is a button labeled 'Forward Line: CFSS on'. To the right of this button is the text 'if nec.'. Below that is a button labeled 'Change'. To the right of this button is a small icon of a grid with a hand cursor. Below that is a button labeled 'Save?'. To the right of this button is a small icon of a document with a checkmark. Below that is a button labeled 'Destinations →'. Underneath is a button labeled 'Forward Line: CFSS off'. Below that is a button labeled 'Delete'. To the right of this button is the text 'or'. Below that is a button labeled 'Exit'.

Call forwarding in the carrier network and forwarding multiple subscriber numbers (MSN) (not for U.S.)

If this function has been configured (consult your administrator), you can forward calls to your assigned multiple subscriber number (MSN) (DID number) directly within the carrier network.

For example, you can forward your phone line to your home phone after business hours.

Open the **Service Menu** → Page 31.

Confirm the option shown.

Select and confirm the option shown.

Confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Enter your DID number.

Enter the destination number (without the external code).

Confirm the option shown.

Deactivating call forwarding

Select and confirm the option shown.

Confirm the displayed call forwarding type.

Enter your DID number.

The screenshot shows a vertical menu interface with the following elements from top to bottom:

- A small icon with a right arrow and three horizontal lines.
- A button labeled "Destinations →".
- A button labeled "Trunk FWD on".
- A button labeled "1=immediate".
- The text "or" centered between two buttons.
- A button labeled "2=on no answer".
- The text "or" centered between two buttons.
- A button labeled "3= on busy".
- A small icon with a grid of dots and a hand cursor.
- A small icon with a grid of dots and a hand cursor.
- A button labeled "Save".
- A button labeled "Trunk FWD off".
- An empty rectangular button.
- A small icon with a grid of dots and a hand cursor.

Using callback

You can request a callback if the internal station called is busy or if nobody answers. This also applies for external calls via ISDN exchanges. This feature saves you from having to make repeated attempts to reach the user.

You receive a callback:

- When the other party is no longer busy,
- When the user who did not answer has conducted another call.



When configured (consult your administrator), all callback requests are automatically deleted overnight.

Saving a callback

Prerequisite: You have reached a busy line or no one answers.

Confirm the option shown.

Accepting a callback

Prerequisite: You have saved a callback.

Your telephone rings and the following message appears on the display "Callback: ...".

Lift the handset.



or



or

Press the key shown. The LED lights up.

Select and confirm the option shown.

You hear a ring tone.

Pay attention to the notes on voice encryption → Page 77.

Callback

Answer

Viewing and deleting a saved callback

if nec. ☐

or



Press the programmed sensor key "Callback".

Open the idle menu → Page 26.

View callbacks

Select and confirm the option shown¹.

Next callback

Select and confirm to display additional entries.

Delete

Deleting a displayed entry

Confirm the option shown.

Exit

Ending retrieval

Select and confirm the option shown.

or



Press the key shown. The LED goes out.

or



Press the key shown. The LED goes out.

1. "Differing display views in a HiPath 4000 environment" → Seite 128

Enhanced phone functions

Accepting calls

Accepting calls via the headset

Prerequisite: The headset is connected.

The LED flashes when a call is received.

Press the key shown. The LED lights up.

Confirm the option shown.

 Make sure your headset port is set up properly → Page 124.

Pay attention to the notes on voice encryption → Page 77.

Ending the call

Press the key shown.

Press the key shown. The LED goes out.

Accepting a specific call for your colleague

You hear another telephone ring.

Open the **Service Menu** → Page 31.

Select and confirm the option shown.

Select and confirm the option shown¹.

The called party appears on the display.


Select and confirm until the name/number of the required subscriber is displayed.

Confirm the option shown.

If you know the number of the telephone that is ringing, enter it directly.

Press the flashing key.

Pay attention to the notes on voice encryption → Page 77.

 Answering a call in a team → Page 112.

1. "Differing display views in a HiPath 4000 environment" → Seite 128

Using the speakerphone

A colleague addresses you directly over the speaker with a speaker call. You hear a tone before the announcement. The other party's name or station number appears on the screen.

You can conduct the call with the handset or in speakerphone mode.

Lift the handset and answer the call.

Press the "OK" key to confirm your selection and answer the call.

Press the key and answer.



If handsfree answerback is enabled (see below), you do not need to switch on the microphone - you can answer directly. You can answer immediately in speakerphone mode.

If handsfree answerback is disabled (default setting), follow the procedure described above. Placing a speaker call to a colleague → Page 56.

Enabling and disabling handsfree answerback

Open the idle menu → Page 26.

Select and confirm the option shown.

Select and confirm the option shown.



or

Mute off

or



HF answerback on

or

HF answerback off

Answering calls from the entrance telephone and opening the door

If an entrance telephone has been programmed, you can use your telephone to speak to someone at the entrance telephone and to activate a door opener. If you have the proper authorization (consult your administrator), you can activate the **door opener**, enabling visitors to open the door themselves by entering a 5-digit code (e.g. using a DTMF transmitter or the keypad installed).

Speaking to visitors via the entrance telephone

Prerequisite: Your telephone rings.

Lift the handset within thirty seconds. You are connected to the entrance telephone immediately.



or



Lift the handset after more than thirty seconds.

Dial the entrance telephone number.

Opening the door from your telephone during a call from the entrance telephone

Confirm the option shown.

Open door

Opening the door from your telephone without calling the entrance telephone

Open the **Service Menu** → Page 31.

Select and confirm the option shown.



More features →

Select and confirm the option shown.

Open door



Dial the entrance telephone number.




Special features must be taken into consideration if your telephone operates with system networking via LAN → Page 119!

Opening the door with a code (at the door)

After ringing the bell, enter the five-digit code (using the keypad or a DTMF transmitter). Depending on how the door opener has been programmed, a doorbell call signal may or may not be forwarded.



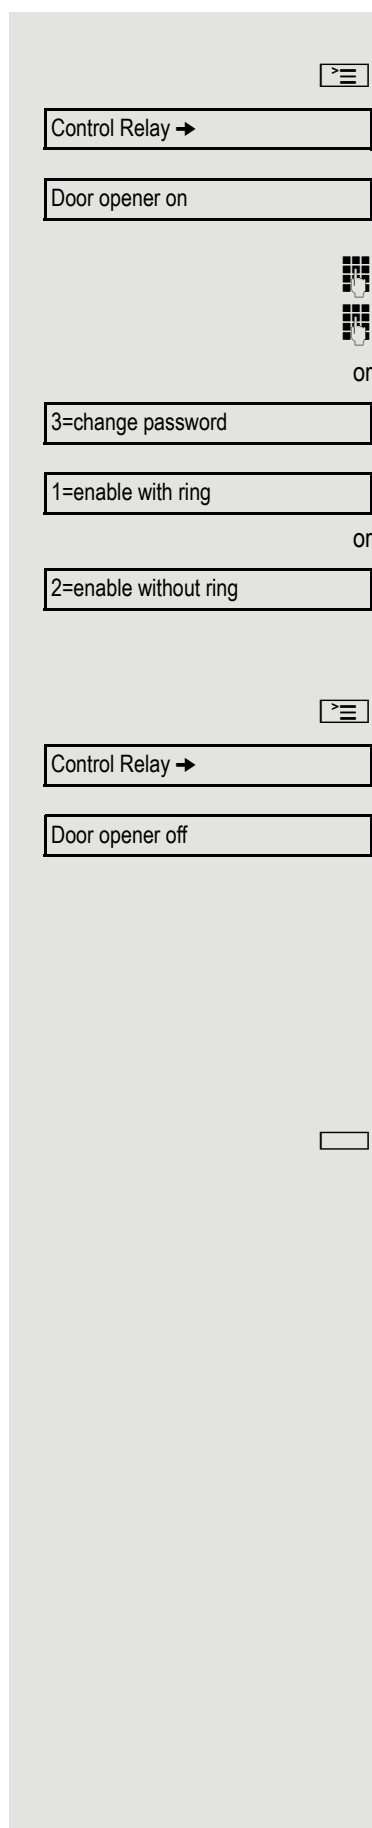

Activating the door opener

Open the Program/Service menu → Page 31.

Select and confirm the option shown.

Select and confirm the option shown.

Dial the entrance telephone number.

Enter the five-digit code. Default code = "00000".

Select the displayed function and press "OK" to change the code.

Select and confirm the option shown.

You can also open the door without a doorbell ring.

Deactivating the door opener

Open the Program/Service menu → Page 31.

Select and confirm the option shown.

Select and confirm the option shown.

Accepting a call from an answering machine

If an answering machine is connected to your system (consult your administrator) and you have programmed the answering machine's internal number on a key → Page 69, you can accept the call from the answering machine.

The LED lights up. Press the key shown.

Making calls

Making calls

En-bloc sending/correcting numbers

If this feature is configured (consult your administrator), a connection is not attempted immediately when a station number is entered. This means that you can correct the number if necessary.

The station number is only dialed at your specific request.



Internal calls: Enter the phone number.

External calls: Enter the external code and the phone number.



or

Call?

Dialing entered/displayed numbers

Lift the handset.

Confirm the option shown¹.

Correcting numbers entered



A station number can only be corrected as it is being entered. Station numbers stored for number redial, for example, cannot be corrected.

Delete number?



Select and confirm the option shown.

The last digit entered in each case is deleted.

Enter the required digit(s).

Canceling en-bloc sending

Cancel?

or



Select and confirm the option shown.

Press the key shown. The LED goes out.

1. Pay attention to the notes on voice encryption → Page 77.

Using the caller list

Detailed information as well as a sample display entry are provided on → Page 30.

Retrieving the caller list

Prerequisite: Your administrator has set up a caller list for your telephone. Open the idle menu → Page 26.

Confirm the option shown¹.

The most recent entry is displayed on the screen.

Continue pressing to view other calls.

Ending retrieval

Select and confirm the option shown.

Press the key shown. The LED goes out.


Press the key shown. The LED goes out.

Detailed view of a call

Prerequisite: You have retrieved the caller list and the required entry is selected.

Press to view detailed information, see the example on → Page 30.

Select and confirm the option shown for a detailed view of further entries.

 An advisory tone marks the end of the list.

Dialing a station number from the caller list

Prerequisite: You are viewing detailed information on an entry.


Confirm the option shown.

Pay attention to the notes on voice encryption → Page 77.

Removing an entry from the caller list

Prerequisite: You will see the detailed view of a call.

Select and confirm the option shown.

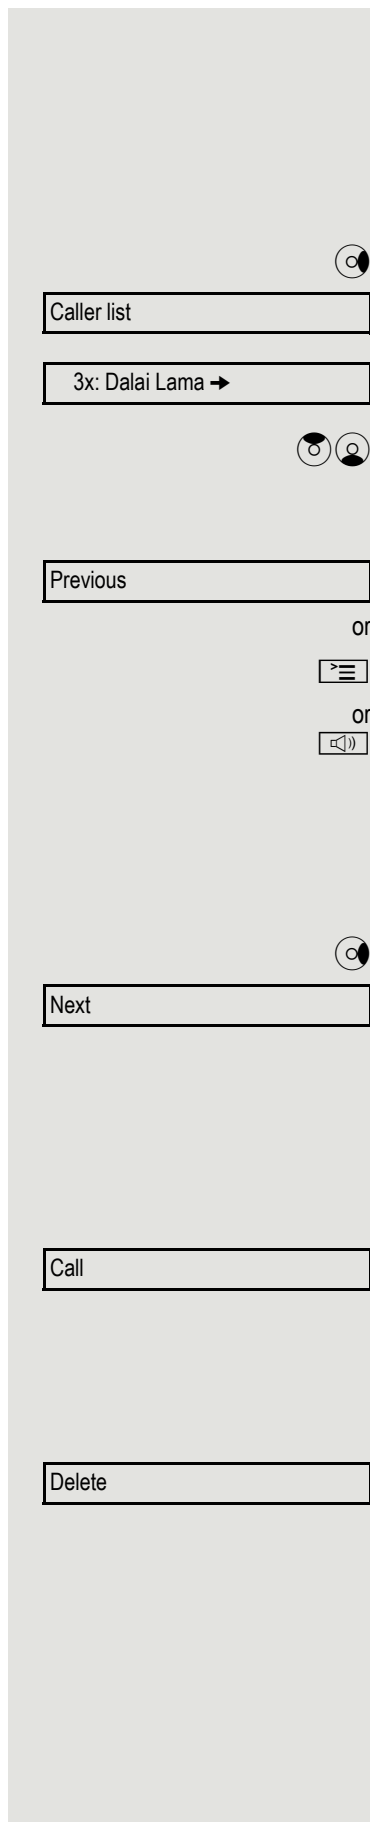

1. "Differing display views in a HiPath 4000 environment" → Seite 128

Calling a subscriber from the personal phonebook

Open the **Menü** → Page 31.

Select and confirm to open the local phonebook.

Select and confirm the relevant entry. The connection is set up (see also → Page 97).

Calling a subscriber from the corporate directory

Prerequisite: You have searched for and selected a subscriber in the corporate directory → Page 100.

Confirm the subscriber. The connection is set up.

Calling a subscriber from the internal system phonebook

The internal system phonebook contains all station numbers and system speed-dial numbers assigned to a name. Consult your administrator to find out if one was configured for your system.

Prerequisite: Names have been assigned to the station numbers stored in the system.

Lift the handset.

Press the key shown. The LED lights up.

Open the idle menu → Page 26.

Confirm the option shown.

If several phonebooks have been configured:

Confirm the option shown. The first entry is displayed on the screen.

Press the relevant key to select the next/previous entry.


Select and confirm the option shown to see the next eight entries in the list.


Select and confirm the option shown to see the previous eight entries in the list.

Enter the name you want to find, or just the first few letters, using the dialpad → Page 23.

The entry you wish to dial appears on the screen

Press the key shown to dial the number immediately.

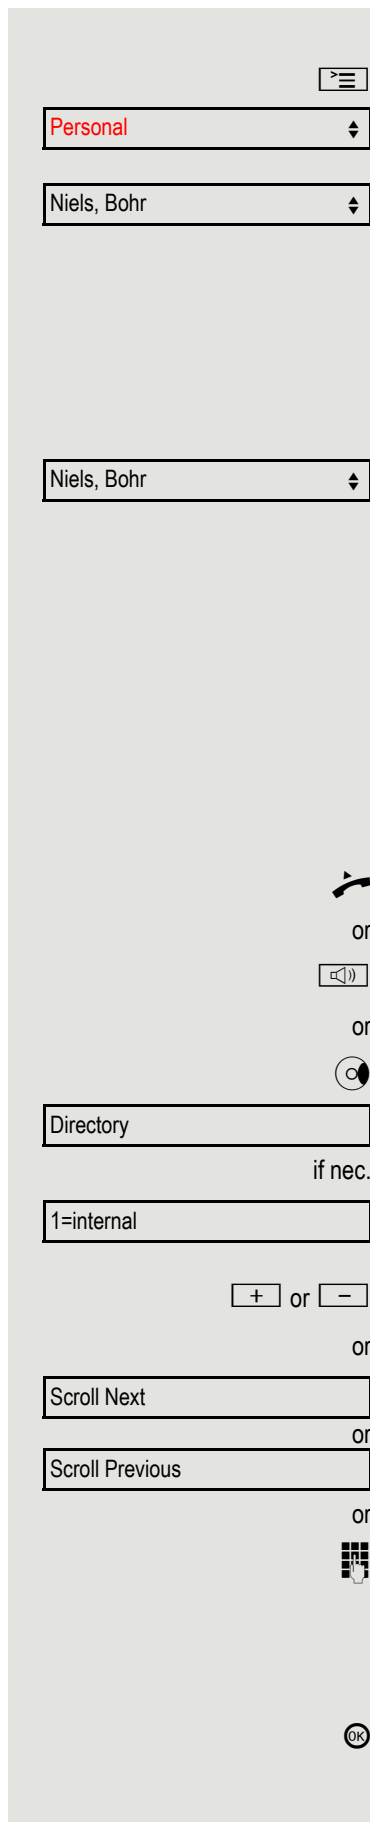

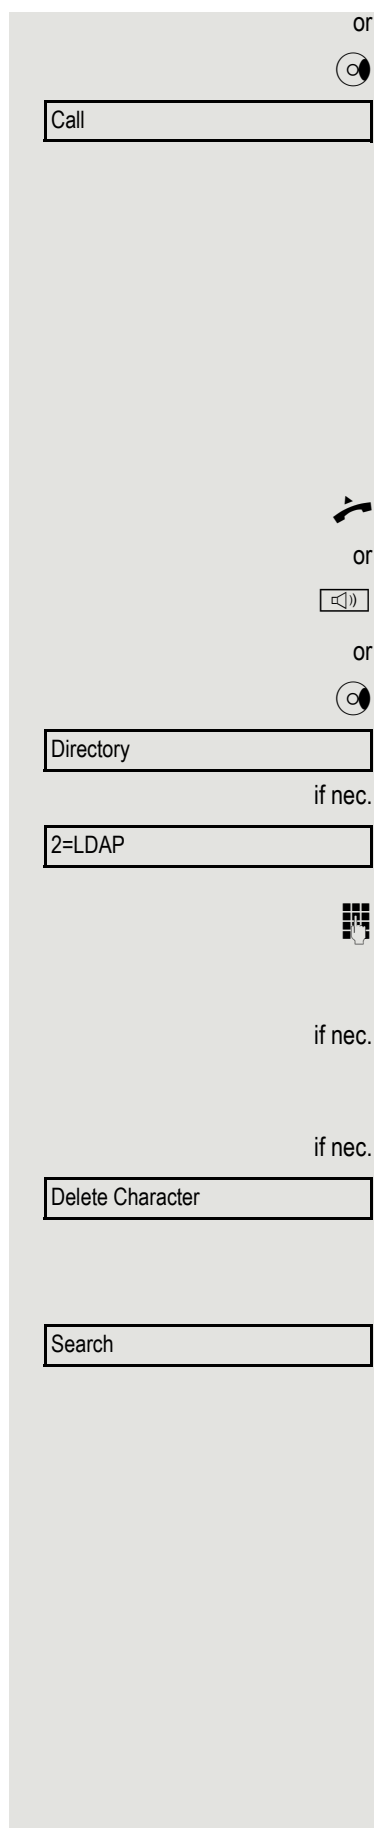

Press the key shown.

Select and confirm the option shown.

Pay attention to the notes on voice encryption → Page 77.

Using the LDAP directory from the system phonebook

If configured (consult your administrator), you can search for directory data in the LDAP database and dial the number of any subscriber you find there.

Prerequisite: The LDAP search feature has been configured in the system.

Lift the handset.

Press the key shown. The LED lights up.

Open the idle menu → Page 26.

Confirm the option shown.

If several phonebooks have been configured:

Select and confirm the option shown.

Enter the name you wish to search for using the dialpad (max. 16 characters) → Page 23.

Partial entries are accepted, for example "Mei" for Meier.

If configured (consult your administrator), you can also search for last name and first name. To separate last name and first name by a space, enter "0". Partial entries are accepted, for example, "Mei P" for "Meier Peter".

Select and confirm each letter to be deleted. The last letter entered is deleted.



In large databases, the results of the search may be incomplete if too few characters are entered → Page 54.

Confirm the option shown.

The name is searched for. This may take a few seconds.

Call

or

or

Scroll Next

or

Scroll Previous

Call

Modify search

Show matches

or

Modify search

The result is displayed

If only one name is found, it is displayed.

Confirm the option shown.

If several names are found (max. 50), the first name is displayed.

Press this key.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Pay attention to the notes on voice encryption → Page 77.

If no name is found

If your search does not yield any name corresponding to your query, you can extend the range of the search, for example by deleting characters.

Select and confirm the option shown.

For further procedure, see above.

If too many names are found

If more than the maximum of 50 names are found corresponding to your query, only an incomplete list of results can be displayed.

You can view these results, select any of the names or change the search (e.g. narrow the search by entering more characters).



In this case it is advisable to narrow down the search so that all corresponding names can be displayed.


Confirm to view the incomplete list.

For further procedure, see above.

Narrow down the search.

Select and confirm in order to change the search.

For further procedure, see above.

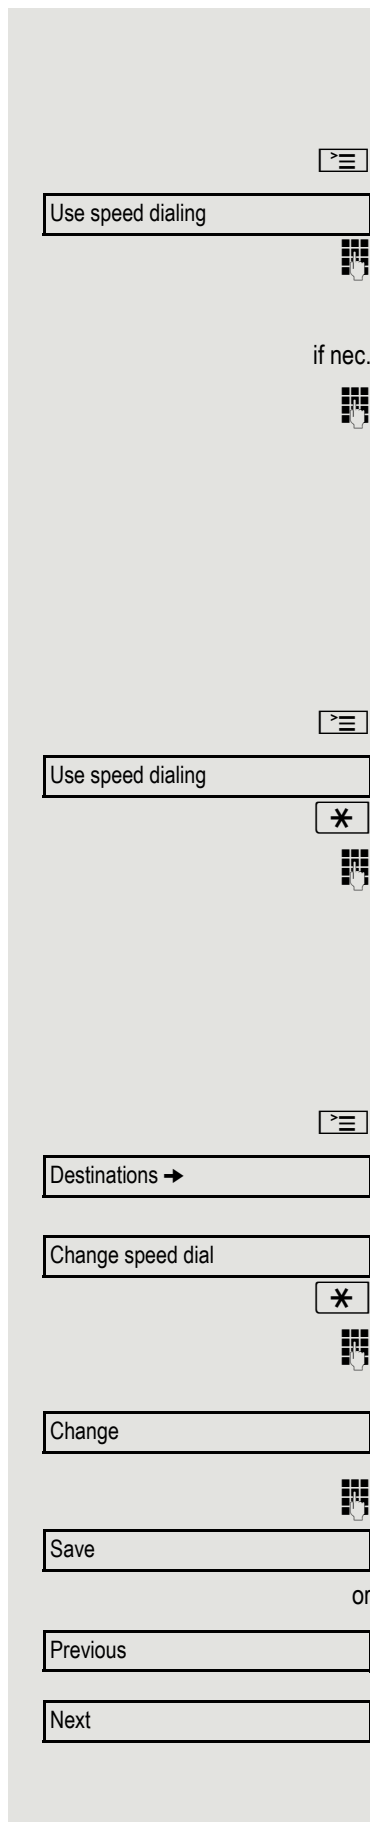

Making calls using system speed-dial numbers

Prerequisite: You know the system speed-dial numbers (consult your administrator).

Open the Program/Service menu → Page 31.

Select and confirm the option shown¹.

Enter a three-digit speed-dial number.

Pay attention to the notes on voice encryption → Page 77.

Suffix dialing

If necessary, you can suffix-dial additional digits (for example, the user's extension) at the end of the saved station number.

If this feature is configured, a suffix is automatically dialed (for example, "0" for the exchange) if no entries are made within 4 or 5 seconds.

Dialing with speed-dial keys

Prerequisite: You have configured speed-dial keys → Page 55.

Open the Program/Service menu → Page 31.

Select and confirm the option shown^[1].

Press the key shown.

Press the required speed-dial key.

Pay attention to the notes on voice encryption → Page 77.

Configuring a speed-dial key

You can program the keys to with ten frequently used phone numbers.

Open the Program/Service menu → Page 31.

Confirm the option shown.

Select and confirm the option shown^[1].

Press the key shown.

Press the required speed-dial key. If the key is already in use, the programmed phone number appears on the screen.

Confirm the option shown.

First enter the external code and then the external station number.


Confirm the option shown.

If you make a mistake:

Select and confirm the option shown. This deletes all numbers entered.

Confirm the option shown.

1. "Differing display views in a HiPath 4000 environment" → Seite 128

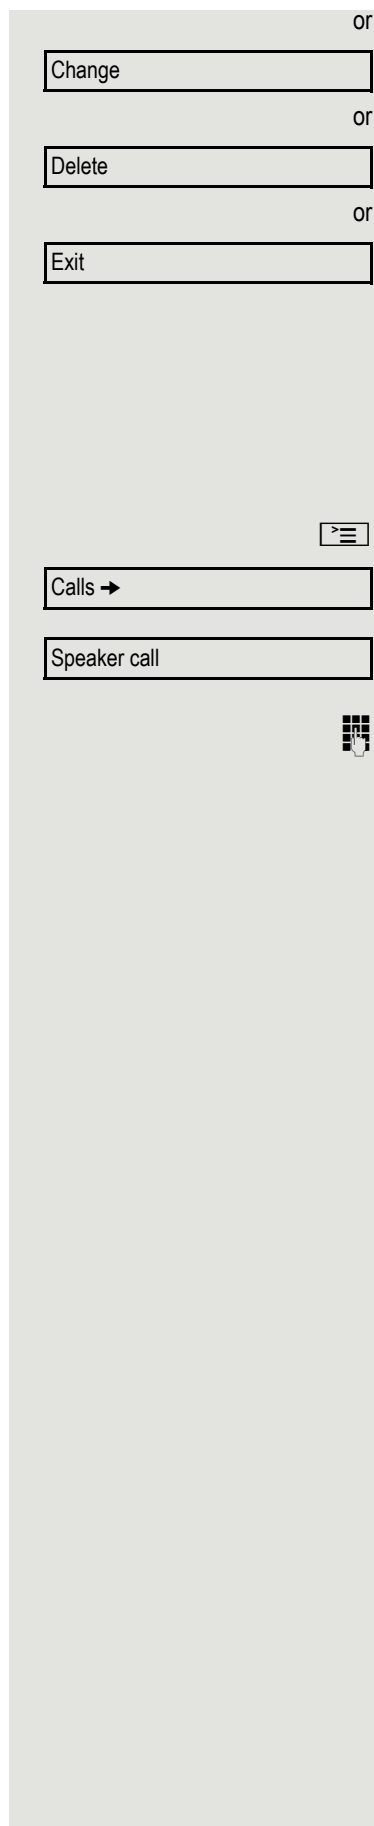

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Talking to your colleague with a speaker call


You can make a speaker announcement through a loudspeaker if connected (consult your administrator) or to an internal user with a system telephone without any action on their part.

Open the Program/Service menu → Page 31.

Select and confirm the option shown.

Select and confirm the option shown¹.

Enter the phone number.

 Responding to a speaker call → Page 47.

1. "Differing display views in a HiPath 4000 environment" → Seite 128


Talking to your colleague with discreet calling

If this function has been configured (consult your administrator), you can join an ongoing call conducted by an internal user on a system telephone with display. You can listen in unnoticed and speak to the internal user without being overheard by the other party (discreet calling).

Lift the handset.

Enter the code.

Enter your internal station number.

 Your administrator can protect your telephone against discreet calling.

Automatic connection setup (hotline)

If this function is configured (consult your administrator), the system automatically sets up a connection to a preset internal or external destination.

Lift the handset.

Depending on the setting, the connection is either set up **immediately** or only **after a preset period of time** (= hotline after a timeout).

Reserving a trunk

If configured (consult your administrator), you can reserve an occupied line for yourself.

When the line is free, you receive a call and a note on the display.

Prerequisite: "Currently busy" appears on the display.

Confirm the option shown.

Reserved line is free:

Your telephone rings. "Trunk is free" appears on the display.

Lift the handset. You will hear the dial tone.

Enter the external phone number.



Reserve trunk



Assigning a station number (not for U.S.)

If this function has been configured (consult your administrator), you can selectively assign a specific number (DID number) to your telephone before making an external call. The assigned number then appears on the called party's display.

Open the Program/Service menu → Page 31.

Select and confirm the option shown.

Confirm the option shown¹.

Enter the DID number you wish to use.

Dial the external number.

Associated dialing/dialing aid

If this function has been configured (consult your administrator), you can use a dialing aid to dial numbers and set up calls for your telephone.

The operating procedure depends on whether the dialing aid is connected to the **S₀ bus** or the **a/b (T/R) port**.

You can also use your system telephone as a dialing aid for other telephones.

Dialing aid on the S₀ bus:

On the PC, select a destination and start dialing.

The speaker on your telephone is switched on. Lift the handset when the other party answers.

Dialing aid at the a/b (T/R) port:

On the PC, select a destination and start dialing.

"Lift the handset" appears on the PC screen.

Lift the handset.


Dialing aid from your telephone for another telephone:

Open the Program/Service menu → Page 31.

Select and confirm the option shown.

Enter the internal station number ("Call for:").

Enter the number you wish to dial.

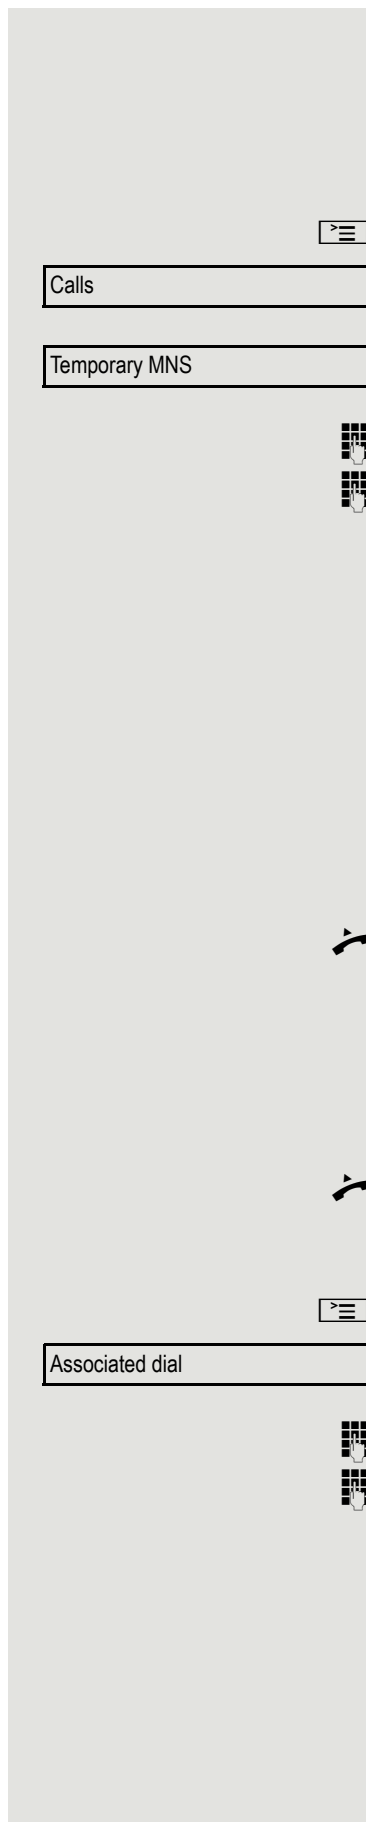

1. "Differing display views in a HiPath 4000 environment" → Seite 128

During a call

Using call waiting (second call)

Callers can still reach you while you are conducting another call. A signal alerts you to the waiting call.

You can ignore or accept the second call.

When you accept the waiting call, you can either end the first call or place it on hold and resume the call later on.

You can also block the second call or the signal tone → Page 60.

Prerequisite: You are conducting a phone call and hear a tone (approx. every six seconds).

Ending the first call and answering the waiting call

Replace the handset. Your telephone rings.

Pay attention to the notes on voice encryption → Page 77.

Answer the second call. Lift the handset.

Placing the first call on hold and answering the second call

Select and confirm the option shown.

Pay attention to the notes on voice encryption → Page 77.

You are connected to the second caller. The first party is placed on hold.

Ending the second call and resuming the first one



Confirm the option shown.

Replace the handset.

Recall the first party.



Lift the handset.

You are reconnected with the first party.



Call waiting

Quit and return

or



↩ • 23189 Coco

Preventing and allowing call waiting (automatic camp-on)

If this function has been configured (consult your administrator), you can prevent or allow a second call → Page 59 from being signaled by automatic camp-on during an ongoing call.

Open the Program/Service menu → Page 31.

Select and confirm the option shown¹.

Select and confirm the option shown.

Turning the call waiting tone on and off

You can suppress the call waiting tone (approx. every six seconds) for second calls. A single special dial tone then alerts you to the waiting call.

Activating the call waiting tone

Open the idle menu → Page 26.

Select and confirm the option shown.

Deactivating the call waiting tone

Open the idle menu → Page 26.


Select and confirm the option shown.

Saving a number

You can save your call partner's station number for subsequent redialing from the caller list → Page 51.

Prerequisite: You are on a call or an external station is being called.

Confirm the option shown.

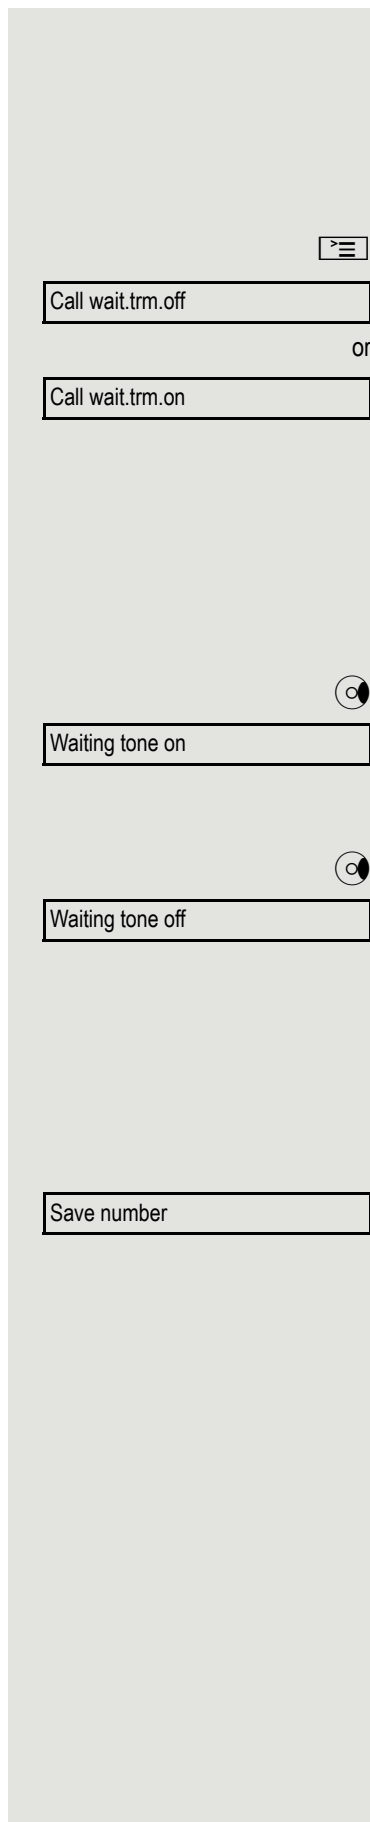

1. "Differing display views in a HiPath 4000 environment" → Seite 128

Parking a call

You can park up to ten internal and/or external calls. Parked calls can be displayed and picked up on another telephone. This feature is useful, for example, if you want to continue a call at another phone.

Prerequisite: You are conducting a call.

Open the Program/Service menu → Page 31.

Select and confirm the option shown.

Select and confirm the option shown.

Enter the number of the park position (0 - 9) and make a note of it. If the park position number you entered is not displayed, it is already in use; enter another one.

Retrieving a parked call

Prerequisite: One or more calls have been parked. The phone is idle.

Open the Program/Service menu → Page 31.

Select and confirm the option shown.


Select and confirm the option shown¹.

Enter the park position number you noted earlier.

If the park position number you enter is not in use, you cannot retrieve the call.



If a parked call is not picked up, after a specific period of time the call is returned to the telephone from where it was parked (recall).

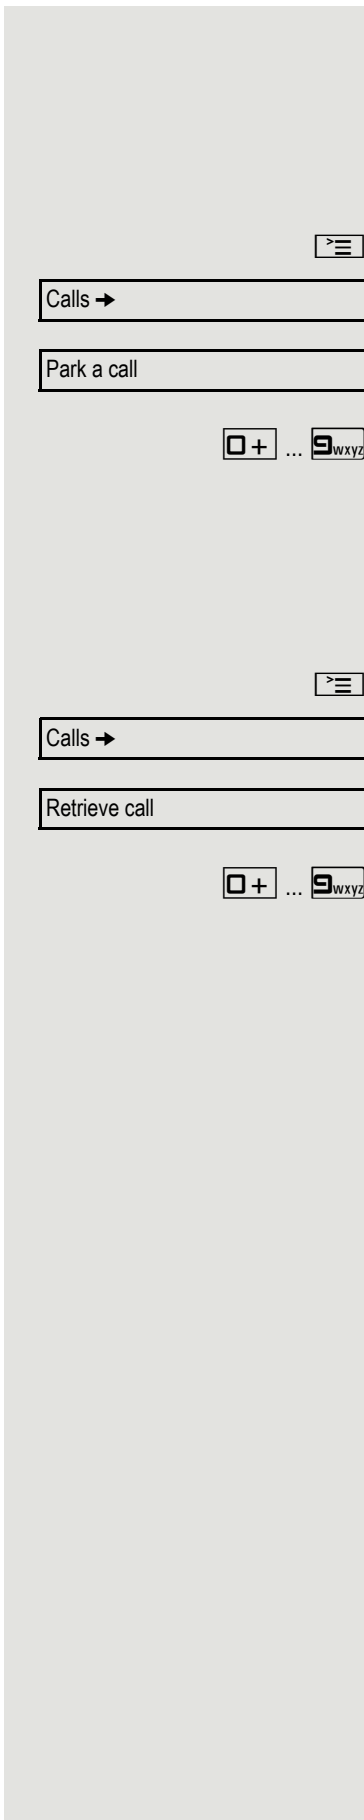

1. "Differing display views in a HiPath 4000 environment" → Seite 128

Holding external calls

If you have programmed a hold key on your phone → Page 69, you can put external calls on hold.

All other stations can then pick up the call on the assigned line.

Press the "Hold" key.

The message of the relevant trunk appears (e.g. 801); note the trunk number. If available, the LED of the assigned trunk key flashes slowly.

Replace the handset or press the key shown.

Depending on the configuration, this may be necessary so other members can also pick up the call on hold.

Picking up a call on hold

Prerequisite: One or more calls are on hold. The phone is idle.

Open the Program/Service menu → Page 31.


Select and confirm the option shown.


Select and confirm the option shown.

If the "Retrieve" key → Page 69 is available, press it.

Enter the noted trunk number.

If there is a "Line:" key available for the relevant trunk, the LED flashes slowly. Press the key shown.

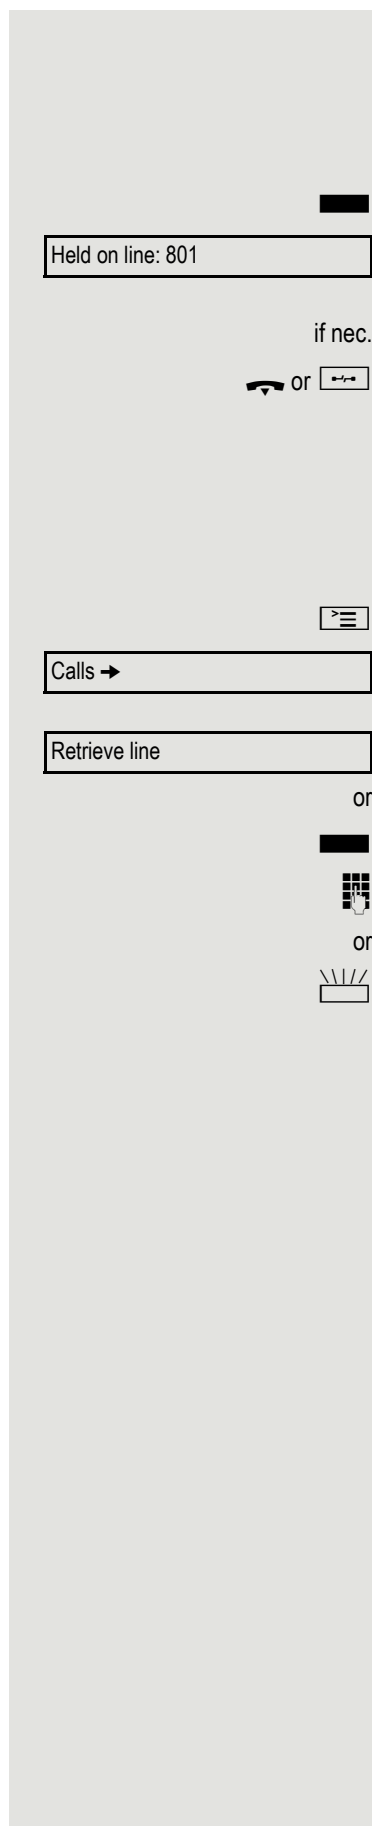

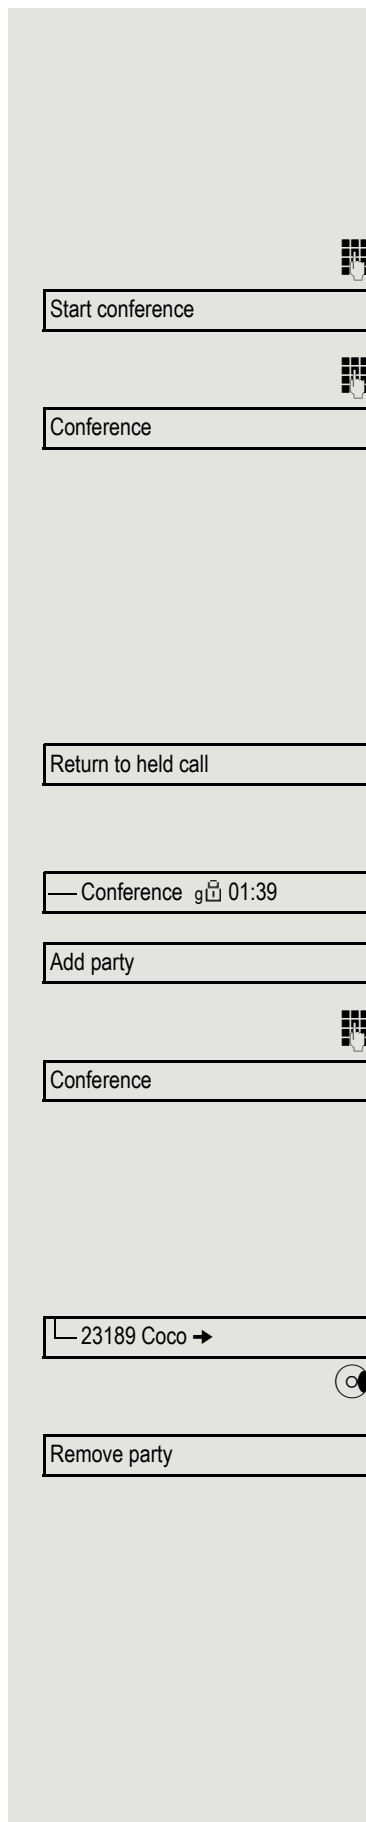

Conducting a conference

In a conference call, you can talk to as many as four other parties at the same time. These may be internal or external users.



You can only add parties to or remove them from a conference if you initiated the conference.

Call the first party.

Select and confirm the option shown.

Call the second party. Announce the conference.

Select and confirm the option shown.

A tone sounds every 30 seconds to indicate that a conference is in progress (can be disabled, consult your administrator).



If voice encryption is not activated or not available on a conference party's phone, the entire conference is not secure. It may be indicated that the call is not secure → Page 77.

If the second party does not answer

Confirm the option shown.

Adding up to five parties to a conference

Confirm the option shown.

Confirm the option shown.

Call the new party. Announce the conference.

Select and confirm the option shown.

Removing parties from the conference

You are connected to a conference and wish to disconnect one of the participants.

Select the user you want.

Press the key shown.

Confirm the option shown.



If a participant who was connected to the conference via an unencrypted line leaves, the conference remains unsecured.

— Conference g 01:39

Leave conference

or



— Conference g 01:39

End conference

or



— Conference g 01:39

Drop last conf. party

Leaving a conference

Confirm the option shown.

Select and confirm the option shown.

Replace the handset if this feature is configured (consult your administrator).

Ending a conference

Confirm the option shown.

Select and confirm the option shown.

Replace the handset if this feature is configured (consult your administrator).

Removing the central office party from the conference

Confirm the option shown.

Select and confirm the option shown.

Activating tone dialing/DTMF suffix dialing

You can transmit **dual-tone multifrequency** (DTMF) signals to control devices such as an answering machine or automatic information system.

Open the Program/Service menu → Page 31.

Select and confirm the option shown.

Select and confirm the option shown¹.

You can use the keys through , and to transmit DTMF signals.



Ending the call also deactivates DTMF suffix dialing.

Your system may be configured so that you can start DTMF suffix dialing immediately after setting up a connection.

Recording a call

If configured (consult your administrator for details), you can record an active call.

Prerequisite: You are on a call, the "Recording" key is configured → Page 69.

Press the "Recording" key. The LED lights up.

You and the other party hear an announcement that recording has started and as long as recording is still running, you hear an acoustic signal approx. every 15 seconds.



During recording, it is not possible to add further call parties.

Stopping recording

Press the illuminated "Recording" key. The LED goes out.

Listening to a recording

Playback of the recording depends on the voice recording system used (see the relevant user manual).

1. "Differing display views in a HiPath 4000 environment" → Seite 128

Transferring a call after a speaker call announcement in a group

If this function has been configured (consult your administrator), you can use a speaker call (announcement → Page 56) to announce a call in progress to a group of users → Page 110.

Once a member of the group has accepted the call request, you can transfer the waiting party.

Prerequisite: You are conducting a call.

Confirm the option shown. The other party is placed on hold.

Press the key shown.

Select and confirm the option shown.

Select and confirm the option shown.

Enter the group's station number.

Announce the call.

When a member of the group accepts the call → Page 47, you are connected to this party.

Replace the handset.

Select and confirm the option shown¹.



If the connection between the two other parties is not established within 45 seconds, the call from the first party returns to you (=recall).

Sending a trunk flash

To activate ISDN-type services and features through the network carrier's analog trunks or those of other communication platforms (such as "consultation hold"), you must send a signal to the trunks before dialing the service code or telephone number.

Prerequisite: You have set up an external connection.

Open the Program/Service menu → Page 31.

Select and confirm the option shown.

Select and confirm the option shown².

Enter the service code and/or telephone number.

1. "Differing display views in a HiPath 4000 environment" → Seite 128

2. "Differing display views in a HiPath 4000 environment" → Seite 128

If you cannot reach a destination

Call waiting (camp-on)

Prerequisite: You have dialed an internal number and hear a busy signal. It is important that you reach the called party.

Wait (approx. 5 seconds) until "Camp-on" appears on the display and the busy tone is followed by the ring tone.

The called party can then respond → Page 59.



The called party can prevent this automatic call waiting → Page 60.

If this feature is configured (consult your administrator), you will hear the ring tone and the message "Camp-on" is immediately displayed.

Camp-on

Busy override - joining a call in progress

This function is only available if it has been configured (consult your administrator).

Prerequisite: You have dialed an internal number and hear a busy signal. It is important that you reach the called party.

Select and confirm the option shown.

The called party and person to whom this party is talking hear an alerting tone every two seconds.

If the called party has a system telephone with display, the following appears on the screen: „Override: (Number or name)".

You can now start talking.

Override

Using night answer

When night answer mode is active, for example during a lunch break or after office hours, all external calls are immediately forwarded to a specific internal telephone (night station). The night station can be defined by your administrator (= standard night answer service) or by you (= temporary night answer service).



Special features must be taken into consideration if your telephone operates with system networking via LAN → Page 117!

Activating

Select and confirm the option shown.

Press the "OK" dialog key to confirm (= standard night answer service).

Enter the destination number (= temporary night answer service).

Confirm the option shown.

Deactivating

Select and confirm the option shown.

The administrator can also configure an "automatic night answer service". The automatic night answer service activates at specific times for your telephone depending on how it is programmed.

You can deactivate the automatic night answer service or replace it with a night answer service you configured (see above).

Night answer on

*=default

or



Save


Night answer off

Programming sensor keys

You can program frequently used functions, station numbers or procedures onto the sensor keys on your **OpenStage 40/40 G** or key module.

Configuring function keys

See also → Page 22.

 A list of all available functions is displayed, see the overview → Page 70.

Example: Programming the Shift key

Hold down the key shown.

Confirm the option shown.

Open the Program/Service menu → Page 31.

Select and confirm the option shown.

Press the key shown.

Confirm the option shown.

Select and confirm the option shown.

Confirm the option shown.

Select and confirm the option shown.

Some functions (e.g. with "Call forwarding") can be saved even if they are incomplete. This means that when later initiating the function by pressing the button, further inputs are required.

Confirm the option shown.

Select and confirm the option shown.

The label appears automatically and cannot be changed for the Shift key. It can be changed for all other functions.

The LED displays show the status of the function → Page 22 and → Page 70.

Assign telephony function

or



Prog. feature key

Change key

More features →

Shift key

if nec.

Save incomplete

Exit

or

Another key

Overview of functions

The functions are split into the following menus:

- Destinations
- Control Relay
- PIN and Authorization
- Calls
- More Features



The available functions depend on your configuration. If a function is missing, consult your administrator.

Saved function LED messages

Call forwarding, Forwarding - trunk, Forward line, Night answer, Do not disturb, Telephone lock, Advisory message, Ringer cutoff, HF answerback on/off, Join/leave group, Caller ID suppression, Call wait.trm., Waiting tone off, Ring transfer, Recording, Door opener on/off, Control relay (only for HiPath 3000), Ringing group on, Shift key, UCD (Available on/off, Work on/off), Night answer on/off, MULAP Privacy Release:



Saved function is not activated.



Saved function is activated.

Callback:



You have no entry for callback.



You have an entry for callback.

Redial key (internal), Direct station select:



Party not on a call.



Party is on a call or has activated DND.



Flashing quickly - I'm being called, please accept.

Flashing slowly - another party is being called and has not yet accepted the call.

Call key, General call key, Trunk key, MULAP key, Temporary MSN:



No call via corresponding trunk.















Active call via the corresponding trunk.



Flashing quickly - call on the corresponding trunk, call pickup is possible by pressing the sensor key.

Flashing slowly - a call is placed on hold on the relevant trunk.

	Trunk group key: At least one trunk is free.
	All lines in this trunk group are occupied.
	View call charges: No chargeable calls have been set up since the last check.
	Chargeable calls have been set up since the last check.
	Call forwarding, Forward line: Flashing slowly - your line is a call forwarding destination.
	Fax/answering machine details: No fax received or no message on the answering machine.
	Fax received or message on the answering machine.
	View the number of calls: No waiting callers.
	Flashing quickly - callers waiting (certain number is exceeded). Flashing slowly - callers waiting (certain number is reached).
	Data I/O service: No connection to an application.
	Active connection to an application.
	Flashing slowly - connection to an application is temporarily interrupted.

The following functions programmed on keys do not have a LED function:

Redial key (external), Procedure key, Trace call, Speed dial, Clear, Lock all phones, Send message, Directory (1=internal, 2=LDAP), Call waiting, Toggle/Connect, Conference, Speaker call, Retrieve line, Reserve trunk, Release trunk, Temporary phone, Override, Park a call, Pickup - directed, Pickup - group, Account code, Show call charges, Page, Answer page, Timed reminder, Open door, DTMF dialing, Recall key, Room monitor, Hold key, Consult internal, Consultation, Associated dial, Associated serv., Tel. data service, Mobile login, Discreet call.

Programming a procedure key

Numbers and functions that require further input, i.e. which contain several operating steps, can be saved on a key on your telephone. The relevant administrator must have granted the appropriate authorization.

For example the function "Associated dialing" → Page 58 together with the required input (phone number of the phone for which the call is to be made + phone number to be dialed) can be saved on a sensor key. Numbers that require further input can also be saved.

Hold down the key shown.

Confirm the option shown.

Open the Program/Service menu → Page 31.

Select and confirm the option shown.

Press the key shown.

Confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Enter procedure. Example: ***67 231 123456**

Code for associated dialing.

Number of the phone for which the call should be made.

The number to be dialed.

Press the "Pause" key to enter pauses (a "P" appears on the display).

Confirm the option shown.

If you make a mistake:

Select and confirm the option shown. This deletes all numbers entered.

Confirm the option shown.


Select and confirm the option shown.



Select the saved procedure by pressing the key.

Procedures with activatable/deactivatable functions are activated by pressing the key once and deactivated by pressing it again.

You can press the procedure key during a call to automatically send the saved digits as DTMF signals → Page 65. For display messages when saving procedures, see → Page 132.

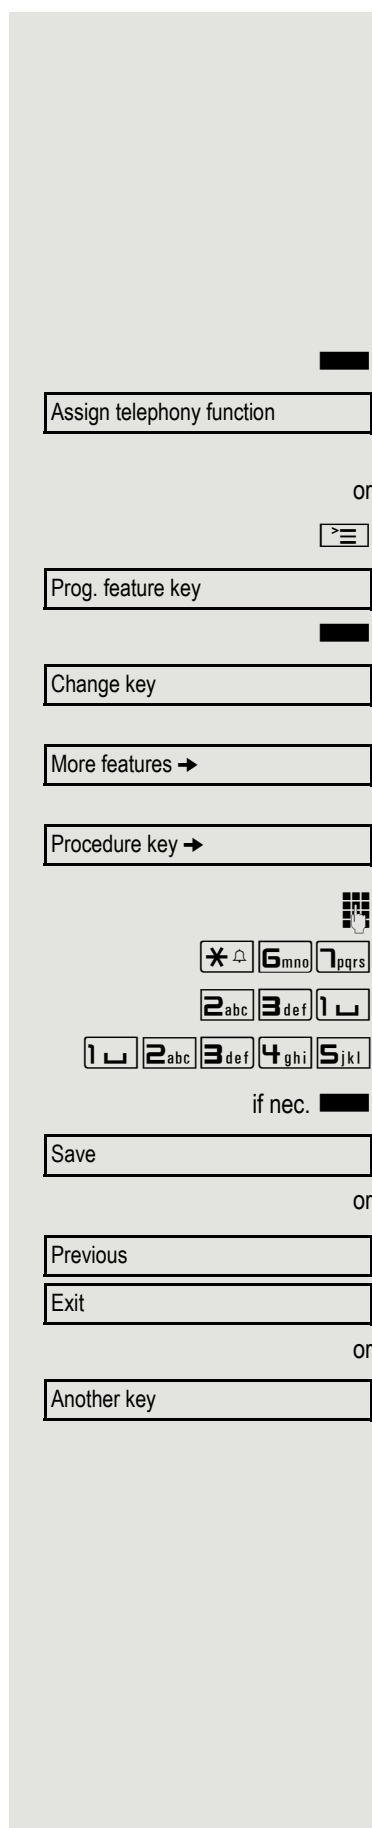

Configuring repdial keys

You can also program internal and external station numbers at the second level. The LED function is not available for internal station numbers at the second level. A "Shift" key → Page 69 has to be configured in order to program the second level.

See also → Page 22.

Hold down the key shown.

Confirm the option shown.

Open the Program/Service menu → Page 31.

Select and confirm the option shown.

Press the key shown.

Confirm the option shown.

Select and confirm the option shown.

Confirm the option shown.

Confirm the option shown.

Enter the phone number.

If you make a mistake:

Press this key. This deletes all entered digits.

Confirm the option shown.

Select and confirm the option shown.

Select and confirm to assign the label → Page 74.



You dial the saved number by pressing the key → Page 37.

You can also save a number during a call.

Assign telephony function

or



Prog. feature key

Change key

if nec.

+ = Next level

Destinations →

Redial key



Exit

or


Another key

or

Key label

Changing the label

The label set when a redial key was programmed can also be subsequently changed.

 You cannot change the labels on function keys.

Changing the label

Hold down the key shown.

Confirm the option shown.

Open the Program/Service menu → Page 31.

Select and confirm the option shown.

Press the required key.

Select and confirm the option shown.

Select and confirm the option shown.

Confirm the option shown.


Enter text via the dialpad (max. 12 characters) → Page 24.

Select and confirm to reset to the default label.

Confirm to apply the changes.

Select and confirm to reject the changes made.

Confirm the option shown.


 Adapt the contrast of the key label to your surroundings → Page 120.

Deleting sensor key programming

Deleting a function/phone number/label

Press and hold the required sensor key.

Select and confirm the option shown.

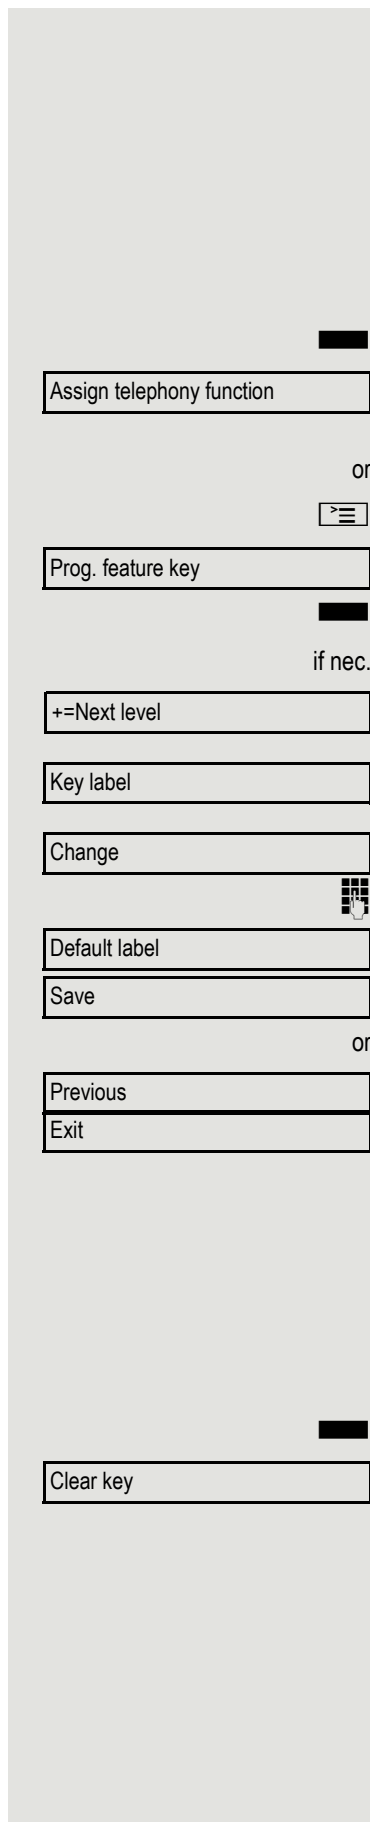

Displaying and assigning call charges

Displaying call charges (not for U.S.)

For the current call

Call charges are shown by default on the display when a call ends. If you want to display call charges as they occur during a chargeable call, your administrator must request this option from the network operator. Call charge display must be requested from the network operator and configured by the relevant administrator. Depending on the setting, call charges are displayed during or after a call. Depending on the network operator, free external calls are also displayed. The message "Free of Charge" appears on the screen either before or during the call. If the cost indication facility has not been installed, the display will show the dialed number and/or the duration of the telephone call.



If a call is forwarded, call charges are assigned to the destination of the call transfer operation.

For all calls and for the last call

Connection charges for the last chargeable call made are displayed first. After five seconds, the accumulated connection charge (total) is displayed.



More features →

Show call charges

Open the Program/Service menu → Page 31.

Select and confirm the option shown.

Select and confirm the option shown¹.

1. "Differing display views in a HiPath 4000 environment" → Seite 128

Displaying call charges for another telephone (not for U.S.)

If configured (consult your administrator), you can also display and print information on chargeable calls for other phones (such as a pay phone).

Prerequisite: You have programmed the function "Show call charges" on a key → Page 69.

The LED lights up to indicate that you have conducted a chargeable call since the last time you viewed the charges.

Press the "Call Charges" key. Chargeable calls are displayed.

Press to display further chargeable calls.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Dialing with call charge assignment

You can assign external calls to certain projects.

Prerequisite: Your administrator has defined account codes for you.

Open the Program/Service menu → Page 31.

Select and confirm the option shown.

Select and confirm the option shown¹.

Enter the account code.

Press this key.

Confirm the option shown.

Required depending on the configuration; consult your administrator.

Enter the external phone number.




You can also enter the account code during an external call.

1. "Differing display views in a HiPath 4000 environment" → Seite 128

Privacy/security

Voice encryption

 Please see also the explanations on → Page 12.

Notes on voice encryption

Warning about an unencrypted connection

Your administrator can define in the communication system whether and how you are notified of unencrypted calls.

Warning tone

This message appears on the display.

You will then receive a warning tone and/or a message on the display when you accept a call, accept a consultation call or are connected to a conference and the connection to a call partner is unencrypted.

Notice about an encrypted connection


A closed padlock icon appears next to the subscriber ID.

Notice about an unencrypted connection

An open padlock icon appears next to the subscriber ID.


and/or

Unencrypted call

— 23189 Coco →  01:39

— 23133 Yves →  01:63

Turning ringer cutoff on and off

If you do not wish to take calls, you can activate the ringer cutoff function. Calls are only identified by one ring signal, an indication on the display and a key that has been programmed to flash (such as a trunk key).

Activating

Open the idle menu → Page 26.

Select and confirm the option shown¹.

Deactivating

Open the idle menu → Page 26.

Confirm the option shown.

Activating/deactivating "Do not disturb"

If you do not wish to take calls, you can activate do not disturb. Internal callers hear the busy tone, external callers are connected to another phone, which you can specify (consult your administrator).

Activating

Open the idle menu → Page 26.

Select and confirm the option shown.

Activating

Open the idle menu → Page 26.

Confirm the option shown.



When you lift the handset, you will hear a special tone (continuous buzzing) reminding you that "Do not disturb" is activated.

Authorized internal callers automatically override the DND feature after five seconds.

1. "Differing display views in a HiPath 4000 environment" → Seite 128

Caller ID suppression

You can prevent your station number or name from appearing on the displays of external parties you call. The feature remains active until you deactivate it.

Activating

Open the idle menu → Page 26.

Select and confirm the option shown.

Deactivating

Open the idle menu → Page 26.

Select and confirm the option shown.



Your administrator can activate/deactivate caller ID suppression for all phones.



Suppress call ID



Restore caller ID

Monitoring a room

You can use a phone to monitor a room. This function must be enabled on the monitoring phone.

When you call this phone, you can immediately hear what is happening in that room.

Activating the telephone to be monitored

Open the Program/Service menu → Page 31.

Select and confirm the option shown.

You can either leave the telephone in speakerphone mode or lift the handset and leave it directed towards the noise source.

Deactivating the telephone to be monitored

Press the illuminated key. The LED goes out.

Replace the handset.

Monitoring the room

Enter the internal station number of the phone located in the room that you wish to monitor.

Trace call – identifying anonymous callers (not for U.S.)

You can identify malicious external callers. You can record the caller's phone number during a call or for up to 30 seconds after a call. You should not hang up in the process.

Open the Program/Service menu → Page 31.

Select and confirm the option shown.



If the trace is successful, the transmitted data is stored by your network operator. Consult your administrator.



Changing the user password

Your **User password** allows you to protect your user-defined settings.

The **User password** can also be modified via the web interface → Seite 134.

Open the menu → Page 31.

Select and confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Enter the current password (at least six characters) and confirm your entry.

Select and confirm the option shown.

Enter the new password (at least six characters) and confirm your entry.

Select and confirm the option shown.

Enter and confirm the new password once more.

Select and confirm the option shown.

The screenshot shows a vertical sequence of menu items and input fields on a light gray background. At the top right, there is a hamburger menu icon. Below it is a button with a right-pointing arrow and a list icon. The first menu item is 'User' with a dropdown arrow. Below this is the text 'if nec.' followed by a 3x3 grid icon. The next menu item is 'Change user password' with a dropdown arrow. Below this is the menu item 'Current Password' with a dropdown arrow. This is followed by a 3x3 grid icon. The next menu item is 'New user password' with a dropdown arrow. Below this is another 3x3 grid icon. The next menu item is 'Confirm New user password' with a dropdown arrow. This is followed by a 3x3 grid icon. The final menu item is 'Options = Save & exit?' with a dropdown arrow.

Locking the telephone to prevent unauthorized use

You can prevent unauthorized parties from accessing certain functions on your phone during your absence, for example you can prevent external phone numbers being dialed or your mailbox being accessed. Consult your administrator to determine which functions are locked.

You can see whether the function is activated or deactivated from the corresponding icon in the status bar on the display → Page 25.

Locking the phone

Hold down the key shown.



or



Open the idle menu → Page 26.

Lock phone

Select and confirm the option shown.



Enter code (telephone lock) → Page 83.

The lock icon appears on the status bar → Page 25.



When the phone is locked, a special dial tone sounds when the handset is lifted. Internally, users can make calls as normal.

Your phone can also be locked or unlocked by an authorized party → Page 83.

Unlocking the phone

Hold down the key shown.



or



Open the idle menu → Page 26.

Unlock phone

Select and confirm the option shown.



Enter code (telephone lock) → Page 83.

Locking another telephone to prevent unauthorized use

If configured (consult your administrator), you can lock and unlock other telephones to prevent unauthorized access.

If a phone user locks his or her phone and forgets the PIN code, you can use this function to unlock the phone.

Open the Program/Service menu → Page 31.

Select and confirm the option shown.

Enter the internal station number of the phone you wish to lock/unlock.

Confirm the option shown.

Select and confirm the option shown.

Saving your PIN code

Enter a PIN code to use the functions

- for protecting your phone against unauthorized use → Page 82
- for using another telephone like your own → Page 88

You can save this code.



If you forget your code, contact your administrator to have the default code restored.

The default code is "00000".

Open the Program/Service menu → Page 31.

Select and confirm the option shown.


Confirm the option shown¹.

Enter the current five-digit code.

If you have not yet set a code, use "00000" the first time.

Enter the new code.

Re-enter the new code.

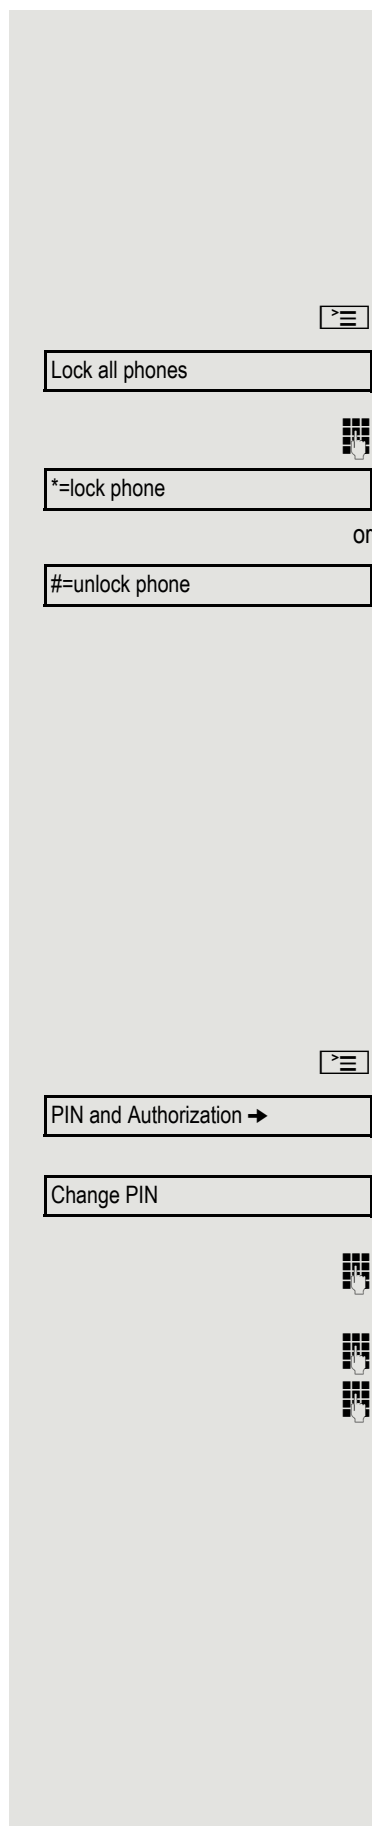

1. "Differing display views in a HiPath 4000 environment" → Seite 128

More functions/services

Appointment reminder function

You can configure your phone to call you to remind you about appointments
→ Page 85.

You must save the required call times. You can enter a single appointment that will take place in the next twenty-four hours or you can enter a daily recurring appointment.

Saving appointments

Open the Program/Service menu → Page 31.

Select and confirm the option shown.

Enter a 4-digit time such as 0905 for 9.05 (= 9.05 a.m.) or 1430 for 14.30 (= 2.30 p.m.).

If the selected language is "US English" → Page 127 you can enter the code 2 for "am" or 7 for "pm" (default = "am").

Confirm the option shown.

Select and confirm the option shown.

Confirm the option shown.


Deleting and checking a saved appointment

Press the key shown.

Select and confirm the option shown.

Confirm the option shown.

Select and confirm the option shown.

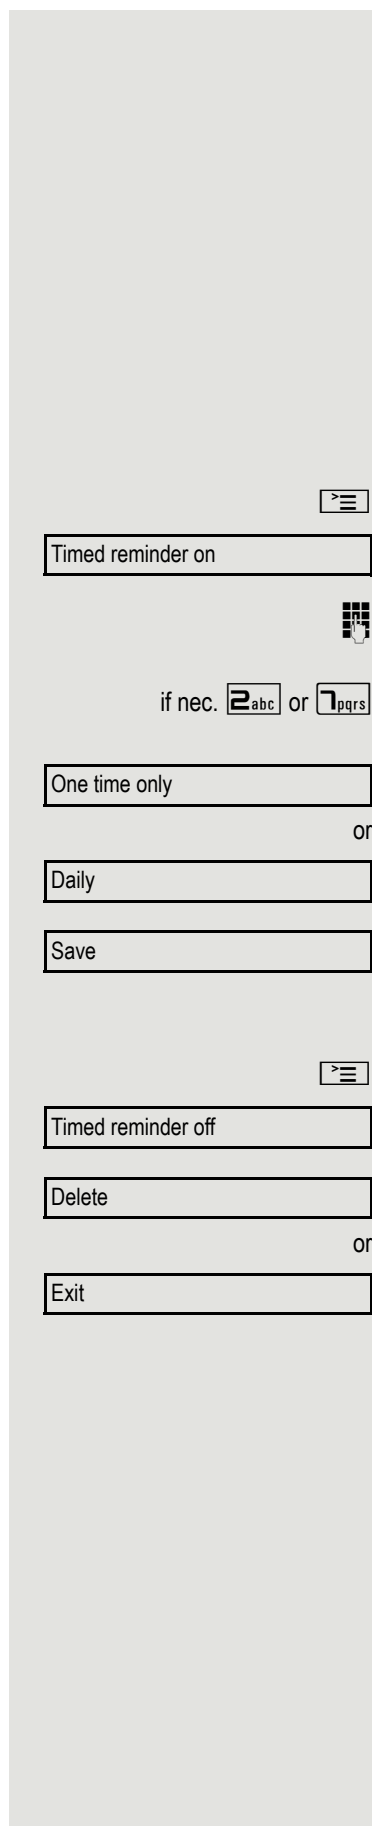

Using timed reminders

Prerequisite: You have saved a reminder → Page 84. The saved time arrives.
The phone rings. The appointment time is displayed.
Press the key twice.

Lift the handset and replace it again.



If you do not answer the timed reminder, it is repeated five times and then deleted.

Sending a message

You can send short text messages to individual stations or groups of stations with system telephones.

Creating and sending a message

Open the idle menu → Page 26.

Select and confirm the option shown.

Enter the internal station number of the recipient or group.

Select predefined text (can be changed by the administrator) and confirm.

Enter the code directly.

The code is shown on your display with the corresponding message.


Select and confirm the option shown.

Enter message (up to 24 characters) → Page 23.

Confirm the option shown.



Transmitted text messages are saved as callback requests on system telephones with no display and on ISDN, pulse or tone dialing telephones.

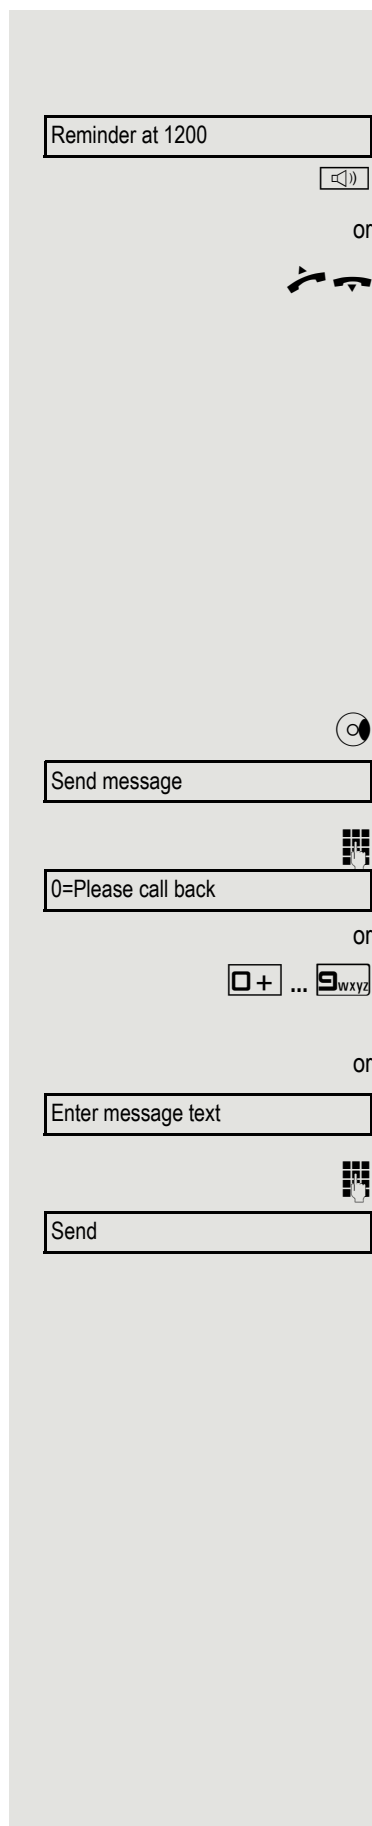

Displaying and deleting messages you have sent

Prerequisite: The recipient has not yet accepted a sent message.

Open the idle menu → Page 26.

Select and confirm the option shown.

Confirm the option shown.

The text message is displayed.

Select and confirm the option shown.

The message is deleted.

Viewing and editing incoming messages

Pay attention to the notes on → Page 29.

The LED lights up. Press the key shown.

The sender's caller ID appears in the first line on the display, see the example on → Page 29.

Confirm the option shown.

The text message appears on the display.

Viewing the transmission time


Confirm the option shown.

Call sender

Select and confirm the option shown.

Deleting messages

Select and confirm the option shown.

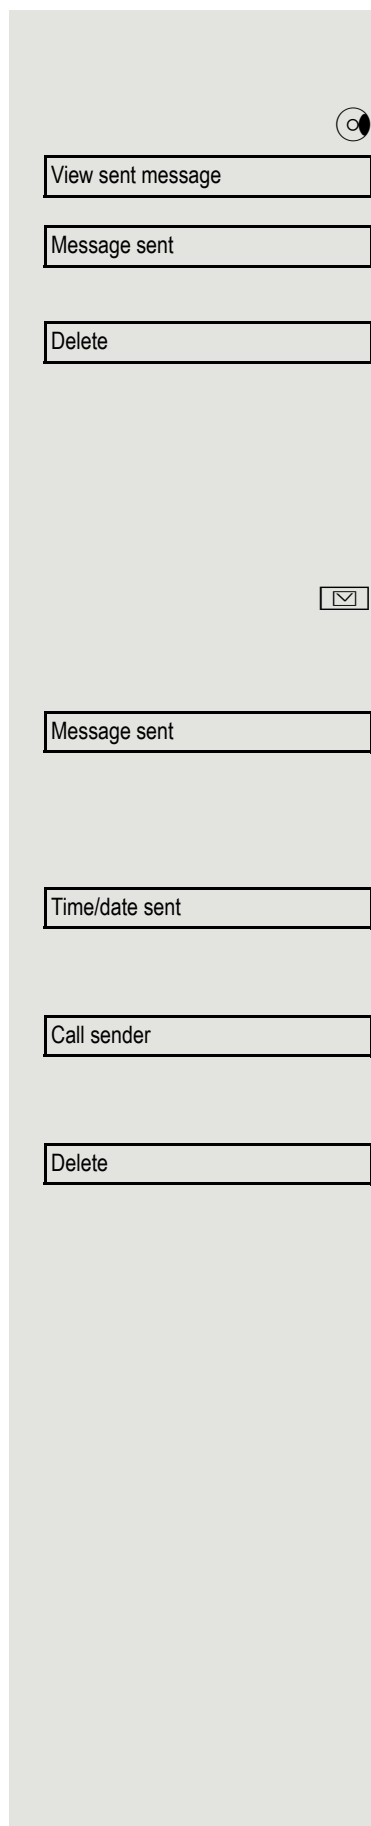

Leaving an advisory message

You can leave messages/advisory messages on your phone's display for internal callers who wish to contact you in your absence. When you receive a call, the message appears on the caller's display.

Open the idle menu → Page 26.

Select and confirm the option shown.

Select predefined text (can be changed by the administrator) and confirm.

Enter the code directly.

The code is shown on your display with the corresponding message.



Predefined messages with a colon can be completed by entering a digit.

Select and confirm the option shown.

Enter message (up to 24 characters) → Page 23.


Confirm the option shown.

Deleting advisory messages

Open the idle menu → Page 26.

Confirm the option shown.

When the "Advisory message" key is available → Page 69, the LED lights up. Press the key shown.

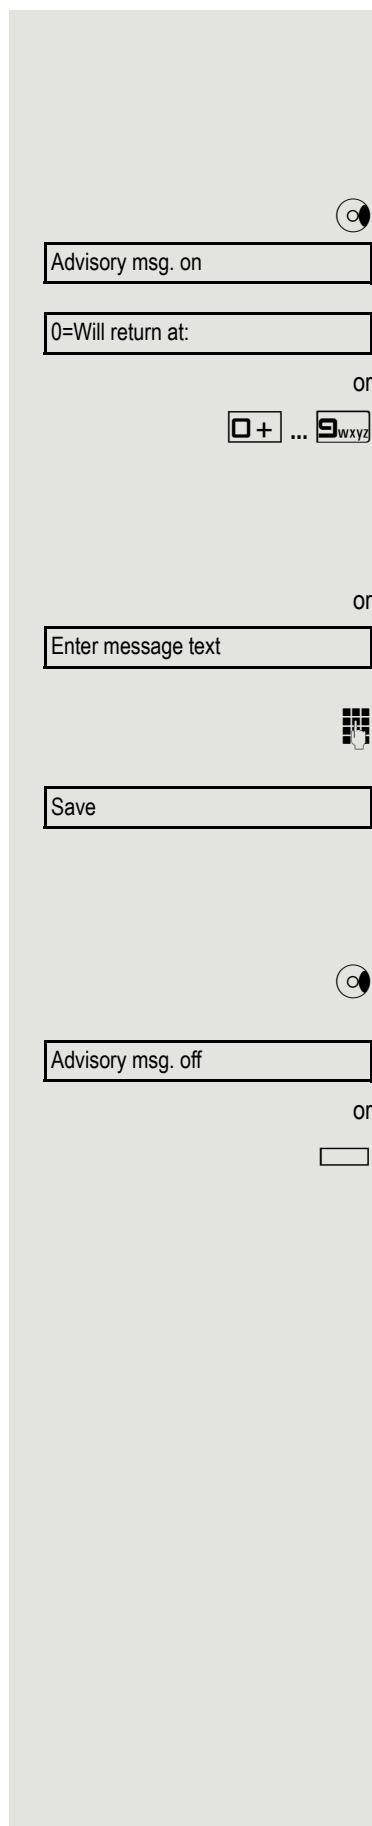

Displaying the number of waiting calls/ overload display

You can show the number of external waiting calls on the display if you programmed a key with "View number of calls" → Page 69.

Press the "Calls in Q" key.

If the number of waiting calls exceeds a preset limit while you are conducting another call (overload), the LED on the key lights up.

- LED off: There are no waiting calls.
- LED is flashing slowly: The set limit has been reached.
- LED is flashing quickly: The limit has been exceeded (overload).

Using another telephone like your own for a call

Other parties can temporarily use your phone like their own for an outgoing call.

Open the Program/Service menu → Page 31.

Select and confirm the option shown.

Select and confirm the option shown¹.

Enter the number of the other user.

Enter the other user's code → Page 83.

If the other user has not set a PIN, he or she is prompted to do so on his or her phone.

Dial the external number.

This state is canceled as soon as the call is ended.



PIN and Authorization →

Temporary Phone



if nec.

Change PIN



1. "Differing display views in a HiPath 4000 environment" → Seite 128

Using a mobile phone number at a random phone

You can program a mobile phone number that was set up especially for you by your administrator at a system-based **OpenStage** phone of your choice. The original "guest telephone" setting is deactivated. The mobile phone number remains available until you log off from the "guest telephone".

Logging on to the "guest telephone"

Log on to the "guest telephone" with a mobile phone number.

Prerequisite: You received a mobile phone number and, where applicable, a password (consult your administrator). The Mobile Login" key is configured on your **OpenStage**.

Press the "Mobile Login" key.

If a key is not configured

Enter the code for "Mobile Login (Log on)", see → Page 141).
You see the prompt "New number".

Enter the mobile phone number.

You are prompted to enter the "Code for **nnn**" (e.g. 834):

Enter the password and confirm.

Press the key shown.

Confirm the option shown.

The logon procedure begins.

Your mobile phone number will appear on the last line to the left of the display when you are correctly logged on, preceded by the mobility icon → Page 25.

You can no longer see the original user settings for the "guest telephone" but you can now use your mobile connection. Entries are only temporarily saved in the call lists and personal phonebook, in other words they are no longer there the next time you log on.



Entry complete

Moving the connection to the next telephone

If you want to move your connection from the first "guest telephone" to a second "guest telephone", log on to the second "guest telephone" in the usual fashion (see → Page 89).

The message "Log off successful" is output on the first "guest telephone". The second "guest telephone" is now blocked. You can now use the second "guest telephone" in the same way as the first one.

Logging off from the "guest telephone"

Press the "Mobile Login" key.

If a key is not configured

Enter the code for "Mobile Login (Log off)", see → Page 141)

The logoff procedure begins.

The "guest telephone" is now available again with its original phone number, features and functions.

Fax details and message on answering machine

If a fax or answering machine is connected to your system and you have assigned the "Fax details" function to a programmable key → Page 69, the key lights up when a fax or a message has been received.

Deactivating signaling



Press the illuminated "Fax service" key. The LED goes out.

Resetting services and functions (system-wide cancelation for a telephone)

A general reset procedure is available for initiated functions. The following functions are deleted, if enabled:

- Forwarding on
- Advisory msg. on
- Ringing group on
- Hunt group off
- Suppress call ID
- Waiting tone off
- DND on
- Ringer cutoff on
- Received messages
- View callbacks



Open the Program/Service menu → Page 31.

More features →

Select and confirm the option shown.

Reset services

Select and confirm the option shown¹.

1. "Differing display views in a HiPath 4000 environment" → Seite 128

Activating functions for another telephone

If configured (consult your administrator), you can activate and deactivate the following functions for other phones (associated service):

- Do not disturb,
code *97/#97 → Page 78
- Call forwarding, code *11, *12, *13, #1 → Page 40
- Lock and unlock phone,
code *66/#66 → Page 82
- Ringing group
code *81/#81 → Page 110
- Leave an advisory message,
code *69/#69 → Page 87
- Group call,
code *85/#85 → Page 110
- Reset services and functions,
code #0 → Page 91
- Control relays,
code *90/#90 → Page 96
- Night answer,
code *44/#44 → Page 68
- Timed reminders,
code *46/#46 → Page 84

Open the Program/Service menu → Page 31.

Select and confirm the option shown.

Enter the internal station number of the phone for which you wish to activate the function.

Enter code (for example, *97 for "Do not disturb on").

For any additional input, follow the instructions on your display.



Associated serv



Using system functions from outside DISA (Direct Inward System Access)

If configured (consult your administrator), you can use an external phone like an internal station to set up an outgoing external connection via the system. You can also activate or deactivate the following system functions:

- Reset services and functions,
code #0 → Page 91
- Call forwarding, code *1/#1 → Page 40
- Lock and unlock phone,
code *66/#66 → Page 82
- Save your PIN code,
code *93 → Page 83
- Send a message,
code *68/#68 → Page 85
- Leave an advisory message,
code *69/#69 → Page 87
- Ringing group, code *81/#81 → Page 110
- Group call, code *85/#85 → Page 110
- Caller ID suppression,
code *86/#86 → Page 79
- Camp-on tone, code *87/#87 → Page 60
- Open door, code *61 → Page 48
- Release door opener, code *89/#89 → Page 49
- Control relays, code *90/#90 → Page 96
- Do not disturb, code *97/#97 → Page 78
- Ringer cutoff, code *98/#98 → Page 78
- Dial using speed dial, code *7 → Page 55
- Associated service, code *83 → Page 92

Prerequisite: Your phone supports tone dialing (DTMF) or you can switch your phone to tone dialing. The phone is not connected to the system.

Establish a connection to the system. Enter the station number (consult your administrator).

Wait for the continuous tone (if necessary, switch phone to tone dialing) and enter the internal number assigned to you and the corresponding PIN code.

Enter the code (only required if programmed in the system).

Wait for the dial tone and enter the code for example, *97 for Do not disturb on. If necessary, make further entries; refer also to the user guide for dial pulse/DTMF phones.

Dial the external number.



You can only perform one function/establish one outgoing connection at a time.

The connection is cleared as soon as the function is successfully activated.

In the case of an external call, the connection is cleared as soon as one of the call partners hangs up.



or



Using functions in ISDN via code dialing (keypad dialing)

If authorized (consult your administrator), you can access ISDN functions in some regions using codes.

Open the Program/Service menu → Page 31.

Confirm the option shown.

Enter the required trunk number (consult your administrator).

Enter a code for the required ISDN function (consult your administrator).



Contact your network provider to find out which ISDN functions can be code-operated in your country.

Unify GmbH & Co. KG shall not be liable for damages/costs that may be incurred by fraudulent activities or remote operation (such as toll fraud).

Controlling connected computers/programs/telephone data service

If this function has been configured (consult your administrator), you can control connected computers or programs running on them, such as hotel services or information systems, from your telephone.

Prerequisite: You have set up a connection.

Open the Program/Service menu → Page 31.

Select and confirm the option shown.

For entering data, you are guided by the connected computer. However, depending on the configuration (consult your administrator), you have to enter your data in one of the following ways:

Input in en-bloc mode

Enter data.

Complete entry.


Confirm the option shown.

Input in online mode

The connected computer processes your entries directly.

Enter the code.

Enter data.

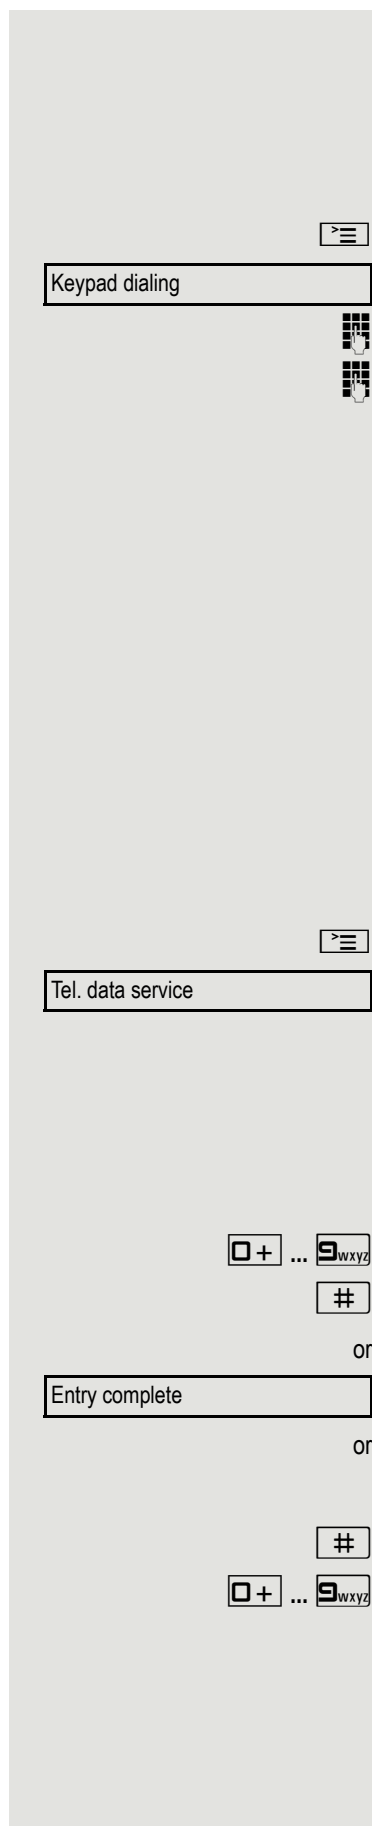

Communicating with PC applications over a CSTA interface

If configured (consult your administrator), you can use your phone to communicate with PC applications (CSTA = **C**omputer **S**upported **T**elecommunications **A**pplications). You send information to the application and receive information from the application, for example, via your phone display.

Press the "Data I/O" key.
(Key programming → Page 69).

Enter the three-digit ID for the application you wish to control.

Use the relevant keys to communicate with the application.

Temporarily interrupting communication with the application

The phone rings. You accept the call.

The "Data I/O" key flashes: Communication with the application was automatically interrupted.


Resuming communication with the application

Press the flashing "Data I/O" key. The LED lights up.

Ending communication with the application

Select and confirm the relevant CSTA message.

Lift the handset and replace it again.



or



Controlling relays (only for HiPath 3000)

If this function has been configured (consult your administrator), you can use up to four relays to enable/disable different devices (such as a door opener). Depending on how you program the relays, you can activate and deactivate them manually or configure them to activate and deactivate automatically (after timeout).



Special features must be taken into consideration if your telephone operates with system networking via LAN → Page 119!

Control Relay On

or

Control Relay Off

1 ... 4 ghi

Select and confirm the option shown.

Select and confirm the option shown.

Enter the relay.

Sensors (HiPath 33x0/35x0 only)

If configured (consult your administrator), sensors are able to recognize signals, call your phone and display an appropriate message on the screen.

Paging persons (not for U.S.)

If radio paging equipment (PSE) is connected to your system (consult your administrator), you can locate people via their pocket receivers.

Pocket receivers signal a call request to the person you want to page. This person can then answer the page at the nearest phone.

Paging persons

To ensure that you can be found, you must have enabled a ringing group → Page 112, call forwarding → Page 40 or call forwarding-no answer (service engineer) to the internal station number of your PSE.
A call request is signaled automatically.

Answering the page from the nearest telephone

Lift the handset.

Enter the code.

Enter own station number.



Phonebooks

Personal phonebook

The personal phonebook is restricted to 100 entries.

Creating a new contact

You can create contacts more conveniently via the web interface → Seite 134.

Open the menu → Page 31.

Select and confirm to open the local phonebook.

Select and confirm the option shown.

Fill in the three fields

- Last name
- First name
- Number

accordingly.

Select and confirm to save the phonebook entry.

Editing a contact

You can edit contacts more conveniently via the web interface → Seite 134.

Open the menu → Page 31.

Select and confirm to open the local phonebook.


Select and confirm the relevant entry.

Select and confirm the option shown.

Select and confirm, for example the Last name field.

Change and confirm .

Select and confirm the option shown.

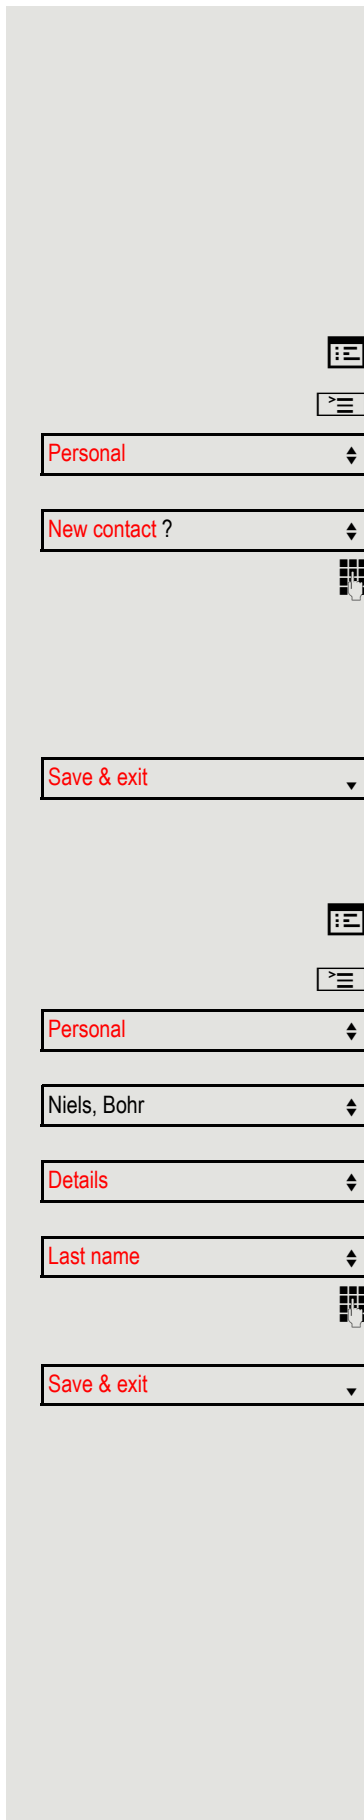

Deleting a contact

You can delete contacts more conveniently via the web interface → Seite 134.

Open the menu → Page 31.

Select and confirm to open the local phonebook.

Select and confirm the relevant entry.

Select and confirm the option shown.

Confirm the option shown.

Select and confirm to cancel the process.

Deleting all contacts

You can delete contacts more conveniently via the web interface → Seite 134.

Open the menu → Page 31.

Select and confirm to open the local phonebook.

Select and confirm the option shown.

Confirm the option shown.

Select and confirm to cancel the process.

The screenshot shows a mobile phonebook interface. At the top, there are two icons: a list icon and a menu icon. Below these, there are four dropdown menus. The first dropdown menu is labeled 'Personal' in red. The second dropdown menu is labeled 'Niels, Bohr'. The third dropdown menu is labeled 'Delete' in red. The fourth dropdown menu is labeled 'Delete?'. Below these, there is a text 'or' and a fifth dropdown menu labeled 'Cancel ?' in red. The interface is light gray with black text and red highlights for the selected options.


Searching for a contact

Open the menu → Page 31.

Select and confirm to open the local phonebook.


The last entry used is displayed.

Enter the first letter of the name you are searching for, e.g. K.

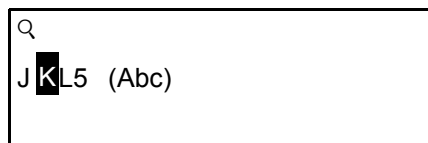

Q J **K** L5 (Abc)


The first name found with the initial letter K is displayed after a short time. If you are looking for a name that begins with Kr, also enter the second letter in the search field:

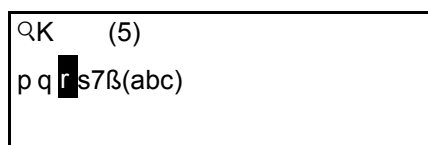

Q K (5)
p q **Kr** s7B(abc)

The first name with the initial letters Kr is displayed.

You can also browse the phonebook with the navigation keys until you reach the required party → Seite 17.

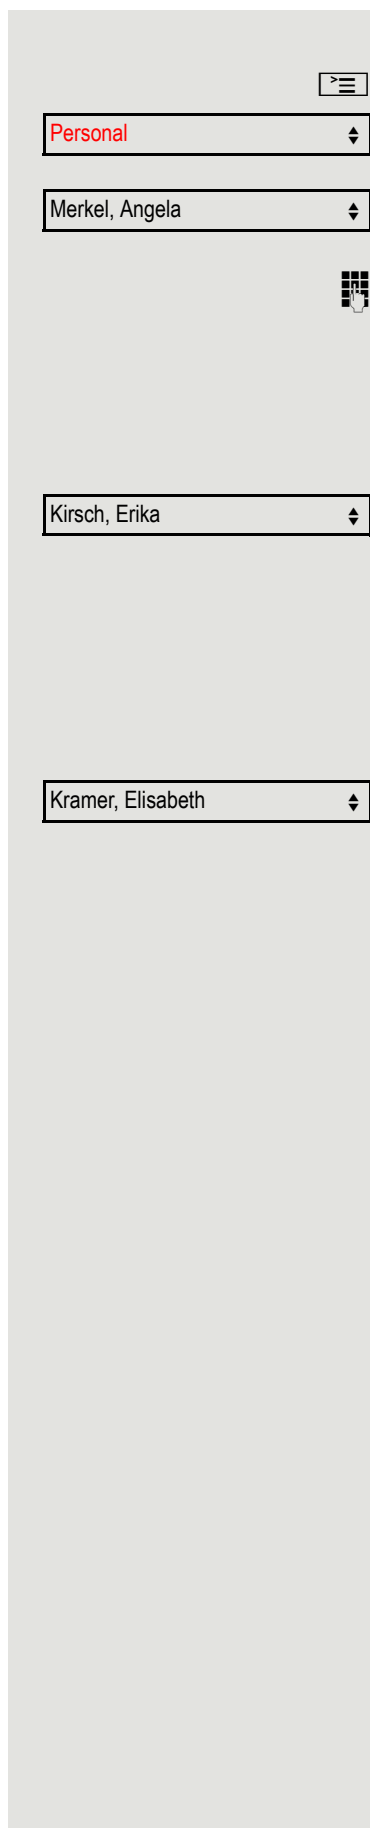

Corporate directory

The corporate directory is an LDAP database. You can search the database for contact entries if you can access this database over your network and your access was correctly configured by your administrator.

You can search for contacts using the name (simple search) or different criteria for an entry (advanced search), for example job title or address.

Searching for a contact

Open the menu → Page 31.

Select and confirm to open the company-wide "**Corporate**" directory.

Select and confirm the option shown.


The following 11 search fields can be used:

- Last name
- First name
- Office 1
- Office 2
- Mobile
- Home
- Company
- Address 1
- Address 2
- Professional role
- E-mail

Select and confirm the required search field (e.g. "**Last name**").

Enter a search text. If you for example only enter the first letter of the last name, all entries with this initial letter are displayed.

Select and confirm when you have completed one or more search fields. The search begins. If the entry you searched for is found, you can dial or view the entry details.

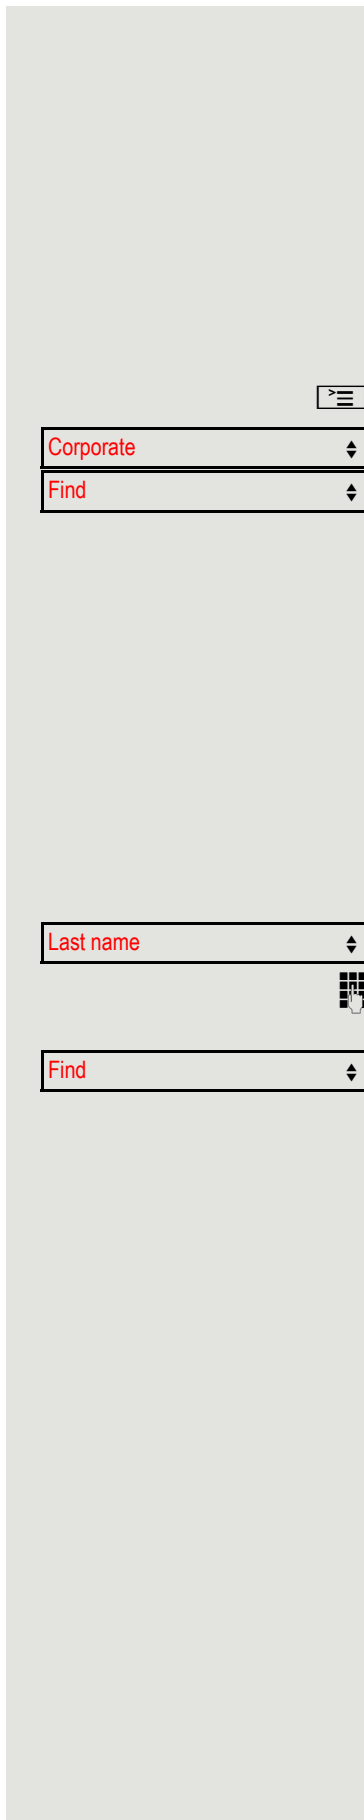

Advanced phonebook editing

Viewing entries

Prerequisite: You found and selected an entry (see above).

Select and confirm the option shown. All fields of the entry are displayed.

Resetting the search fields

Prerequisite: The search fields are listed.

Select and confirm the option shown. You can now enter new search criteria for a search.

Defining a qualifier before a search

Prior to a search, you can select which qualifiers should also appear in the output list.

Select and confirm the option shown. You may choose between the following criteria:

- No qualifier
- Job function
- Address 1
- Email
- Business 1
- Mobile
- Business 2
- Private
- Company
- Address 2

Select and confirm the desired qualifier.




Select and confirm to close the list.


Details

Delete

Qualifier

Back

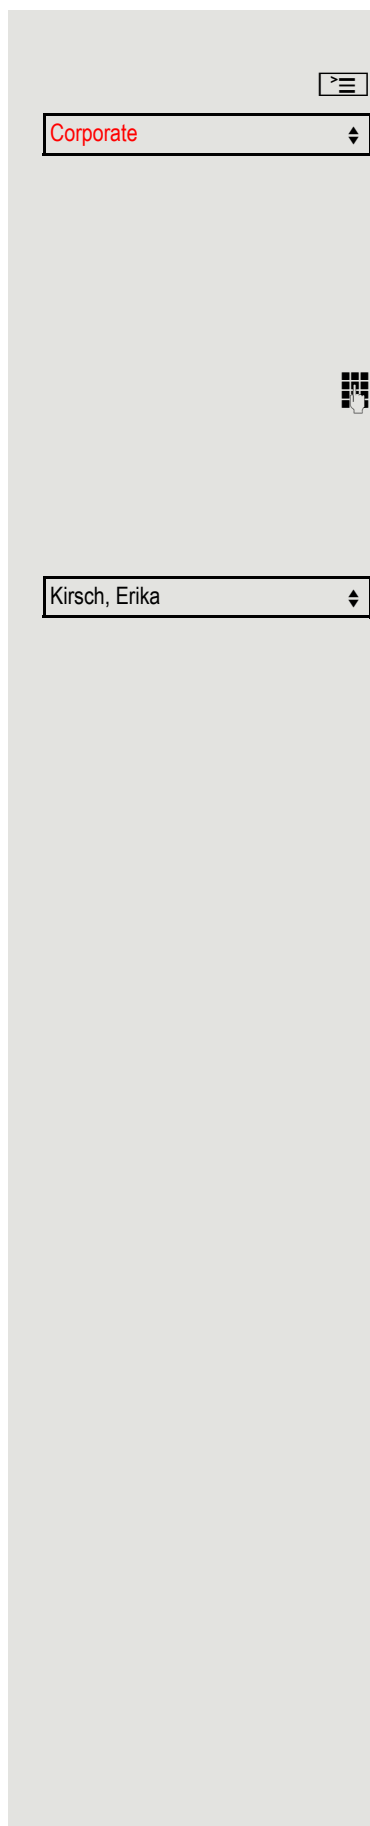

Quick search

Open the menu → Page 31.

Select and confirm to open the company-wide **phonebook**.

Q

Enter the name (Abc)

Enter the first letter of the name you are looking for, e.g. "K".

QK

J K L 5 (Abc)

If you do not enter any further characters, all available names with the corresponding initial letter are displayed after a predefined period of time or after pressing to confirm.

QKr

p q r s 7 B (abc)

You can restrict the output by entering the second and other letters. The key is used to switch between letters and numbers. The keys are used to delete individual characters again.

You can control the search individually by entering extended characters. To select extended characters, first press the key.

Rule list:

Character	Description
#	Searches for the exact string before the extended character.
*	Wildcard. This searches for the character entered and all possible subsequent characters.

You enter this character by selecting it in the extended characters.

Making calls in the team/executive/secretary configuration

If configured (consult your administrator), you belong to a team of subscribers with multiple lines (MultiLine → Page 13). Your phone features trunk keys (MULAP keys) → Page 103.

Lines

A distinction is made between primary and secondary lines. Each of these line types can be used on a private or shared basis → Page 103.

Primary line

All multi-line telephones have a primary line. This line can be reached in the usual manner via your public phone number. Incoming calls to your number are signaled on this line.

Secondary line

A secondary line on your phone is used as a primary line by another subscriber. Your primary line, which is configured on another telephone, simultaneously functions as the secondary line on that telephone.

Line utilization

Private line

A line that is used by a single telephone. This line cannot be used as a secondary line by another telephone.

Shared line

A line that is configured on multiple telephones. The line status is displayed for all telephones that share this line (if configured). If, for example, a shared line is being used by a telephone, a status message indicating that this line is busy is displayed on all other telephones that share this line.

Direct call line

A line with a direct connection to another telephone.
You can see the status of the line from the LED display.

Line seizure

Line seizure must be configured (consult your administrator). If automatic line seizure is configured, a trunk is automatically assigned when you lift the handset or press the speaker key.

Line/trunk keys




The programmable sensor keys on multi-line phones function as line or trunk keys. Every key programmed as a "Trunk key" (key label: Transfer Trk) corresponds to one trunk with the result that you can configure up to six trunks in **OpenStage 40/40 G**.

As a team member, you can independently program the following functions on sensor keys → Page 69:

- Direct station select
- Join/leave group
(not available on executive phone in an executive / secretary team)
- Ring transfer: On/Off
(only in an executive/secretary team)

You can also program a sensor key with the function "Forward Line" (call forwarding) for each line.


LED displays on trunk keys

LED	Meaning
 Off	– The line is in idle mode.
 Flashing ¹	– Incoming call on the line. – Hold reminder is activated. – The line is on "Hold".
 On	– The line is busy.

¹ In this manual, flashing sensor keys are identified by this icon, regardless of the flashing interval. The flashing interval represents different statuses, which are described in detail in the corresponding sections of the manual.

Accepting calls with the trunk keys

Prerequisite: Your phone rings and/or a trunk key flashes quickly.

if nec. 

Press the trunk key that is flashing quickly.
(not necessary for automatic trunk seizure/prime line is not active).



or

Lift the handset.

On-hook dialing: Speakerphone mode.

Dialing with trunk keys

if nec. 

Press the free trunk key you wish to use to establish the connection
(not necessary for automatic trunk seizure/prime line is not active).



Dial the phone number.



or

If the party answers: Lift the handset.


On-hook dialing: Speakerphone mode.

Placing a call on hold on a trunk key and retrieving the held call

Prerequisite: You are conducting a call via one of your group's trunks. The "Hold" key has been programmed on your telephone → Page 69.

Holding

Press the "Hold" key.

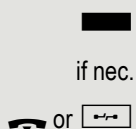

Replace the handset or press the disconnect (release) key.

Depending on the configuration (consult your administrator), this may be necessary so other team members can also pick up the call on hold.

Retrieving the call

Press the trunk key that is flashing slowly.



Making calls on multiple lines alternately

Prerequisite: You are conducting a call via one of your group's trunks. Another trunk key is flashing.

Press the flashing line key. The first call party is on hold on the other trunk.

Press the trunk key that is flashing slowly. The second call party is on hold.

You can switch between lines as often as you wish. Press the trunk key flashing slowly each time.



MULAP conference release

If configured (consult your administrator), you can program a sensor key on your phone with the function "MULAP Privacy Release" → Page 69. The default label is "Priv Release".

If you program this key, you do not have to use the menu to set up a conference. Your team partner only has to press the flashing trunk key associated with your trunk on his or her phone to immediately join the conference.

You are conducting a call.

Press the "Priv Release" key. The LED lights up.

Up to three team members can now join the conference.

Prerequisite: The trunk on which you are speaking is configured on the other phone as a trunk key.

Press the flashing line key.



Direct station selection keys

Each team member has a direct station selection key for every other team member.

This means that each team member can be reached directly by other team members at the touch of a button.

Understanding LED messages from DSS keys



LED on the DSS key is off - the team member is not conducting a phone call.

or



LED on the DSS key is lighting – the team member is conducting a phone call or has activated do not disturb.

or



LED on the DSS key is flashing **quickly** - a call has arrived for you and needs to be answered.


or



LED on the DSS keys is flashing **slowly** – a caller is trying to reach another member of your team, who has not yet answered.

Using DSS keys to answer calls

Prerequisite: Your telephone rings or the DSS key flashes.



Press the flashing DSS key.

This is not necessary if you are called directly (DSS key flashes quickly).



Lift the handset.

or

On-hook dialing: Speakerphone mode.

Calling a team member directly



Press the DSS key.

or



If the team member you wish to reach is conducting another call, the DSS key on your telephone lights. You can still make the call in this case.



If the party answers: Lift the handset.

or

On-hook dialing: Speakerphone mode.

Transferring a call in progress



Press the DSS key and announce the call if necessary.



Replace the handset.

or



Press the key shown.

Picking up a call for another team member



Press the flashing DSS key or trunk key.



Lift the handset.

or

On-hook dialing: Speakerphone mode.

Forwarding calls on trunks

You can immediately forward internal and/or external calls to your lines to different internal or external telephones (destinations) (external destinations are also possible if the system is configured accordingly).

Activating call forwarding for one trunk activates the function for all trunk keys assigned to this trunk in your group.



Open the Program/Service menu → Page 31.

Destinations →

Select and confirm the option shown.

Forward Line: ON

Select and confirm the option shown.

or



If available, press the "CFW MULAP" key.
(You have programmed a key with the incomplete "CFW MULAP" function, excluding the call forwarding type and destination → Page 69).



Press the required line key.

or



Enter the required trunk number.

1=all calls

Select and confirm the option shown.

or

2=external calls only

Select and confirm the option shown.

or

3=internal calls only

Select and confirm the option shown.



Enter the destination number.

Save

Confirm the option shown.

or



If available, press the "CFW MULAP" key. (You have stored the call forwarding type and destination on the "CFW MULAP" key, → Page 69.)

Deactivating call forwarding

Open the Program/Service menu → Page 31.

Select and confirm the option shown.

Select and confirm the option shown.

Press the required line key.

Enter the required trunk number.

If available, press the "CFW MULAP" key.



If you have activated call forwarding for a trunk, a special dial tone sounds when the line is seized.

Understanding LED messages of the "CFW MULAP"

The LED on the "CFW MULAP" key is off – call forwarding is not active for this trunk.

The LED on the "CFW MULAP" key lights up – call forwarding is active for this trunk.

The LED on the "CFW MULAP" key flashes **slowly** - the trunk is the destination of call forwarding.

Transferring calls directly to the executive phone

Normally, all calls for the executive are audibly signaled only by the secretary phone.

You can set audible signaling so calls are only signaled acoustically by the executive phone or by a second phone assigned to it.

Prerequisite: There is a sensor key programmed with the function "Ring Transfer" on your phone. The default label is "Ring xfer".

Activating

Press the "Ring xfer" key. The LED lights up.



or



Ring Transfer: On



or



Enter the required trunk number.

Deactivating

Press the "Ring xfer" key. The LED goes out.



or



Ring Transfer: Off



or



Enter the required trunk number.

Using team functions

If configured (consult your administrator), your telephone is part of a team. The team consists of internal phones that are able to use certain functions.

Activating/deactivating a group call



Special features must be taken into consideration if your telephone operates with system networking via LAN → Page 115!

If configured (consult your administrator), you belong to one or more groups of stations, which can be reached via hunt group or group call station numbers. Incoming calls are signaled one after the other (= hunt group) or simultaneously (= group call) on all phones in the group, until a group member answers the call. You can also belong to a team (including executive/secretary configurations) in which station numbers are programmed on trunk keys → Page 103.

Each station in the group can still be reached via its own station number.

You can activate and deactivate the audible signal for a hunt group, group call or individual trunks in a group (including executive/secretary).

If the LED on a programmed "Group call" key is illuminated → Page 69, this means that the audible tone was activated for at least one group.



This function is not available for the executive phone in team/executive/secretary configurations.



Leave group

or

Join group

■ or □

Open the idle menu → Page 26.

Select and confirm the option shown¹.

Select and confirm the option shown.

Press the "Group call" key.

1. "Differing display views in a HiPath 4000 environment" → Seite 128

You belong to multiple groups or to one group with trunk keys (including executive/secretary configuration)

Open the idle menu → Page 26.

Select and confirm the option shown^[1].

Select and confirm the option shown.

Press the "Group call" key.

If an "X" appears between group/trunk number (such as 301) and group name, the audible tone is active for this group or trunk.

No "X" means that the audible tone is deactivated.

Confirm the option shown. The next group/trunk number is displayed with a group name.

Select and confirm the option shown^[1].

The audible tone for the group/trunk displayed is deactivated.

Select and confirm the option shown^[1].

The audible tone for the group/trunk displayed is activated.

Select and confirm the option shown¹.

The audible tone for all groups and trunks is deactivated.

Select and confirm the option shown^[1].

The audible tone for all groups and trunks is activated.



If you have activated the audible tone for another group/trunk or deactivated the audible tone for all groups/trunks you belong to, you will hear a special dial tone when you lift the handset.

1. "Differing display views in a HiPath 4000 environment" → Seite 128

Picking up a call for another member of your team


You can use your own telephone to pick up calls for other telephones in your team, even while on a call (call pickup groups; consult your administrator).

Prerequisite: Your telephone rings briefly. The display shows "call at:" with the phone number/name of the initiator and number/name of the caller in the lower line.

Confirm the option shown.

Ringling group

You can have calls for your telephone signaled audibly at up to five other internal phones. The phone that answers the call first receives the call.

 Special features must be taken into consideration if your telephone operates with system networking via LAN → Page 118!


Saving, displaying and deleting telephones for the ringing group

Open the Program/Service menu → Page 31.

Confirm the option shown.

Select and confirm the option shown¹.

Follow the display prompts (enter the internal station number).

 If your phone belongs to a ringing group, your display will show the station number or the name of the initiator on the upper line and that of the caller on the lower line.

Removing all telephones in a call ringing group

Select and confirm the option shown.

Pickup - group



Destinations →

Ringling group on

Ringling group off

1. "Differing display views in a HiPath 4000 environment" → Seite 128

Uniform Call Distribution (UCD)

If configured (consult your administrator), you may belong to a group of stations (agents), to which calls are distributed.

An incoming call is always assigned to the agent idle the longest.

Logging on and off at the beginning and end of your shift

Open the Program/Service menu → Page 31.

Confirm the option shown.

Select and confirm the option shown¹.

Confirm the option shown.

Select and confirm the option shown.

To log on, enter your identification number ("Agent:"). Consult your administrator to find out what it is.

Logging on and off during your shift


Open the Program/Service menu → Page 31.

Confirm the option shown.

Select and confirm the option shown^[1].

Confirm the option shown.

Select and confirm the option shown.

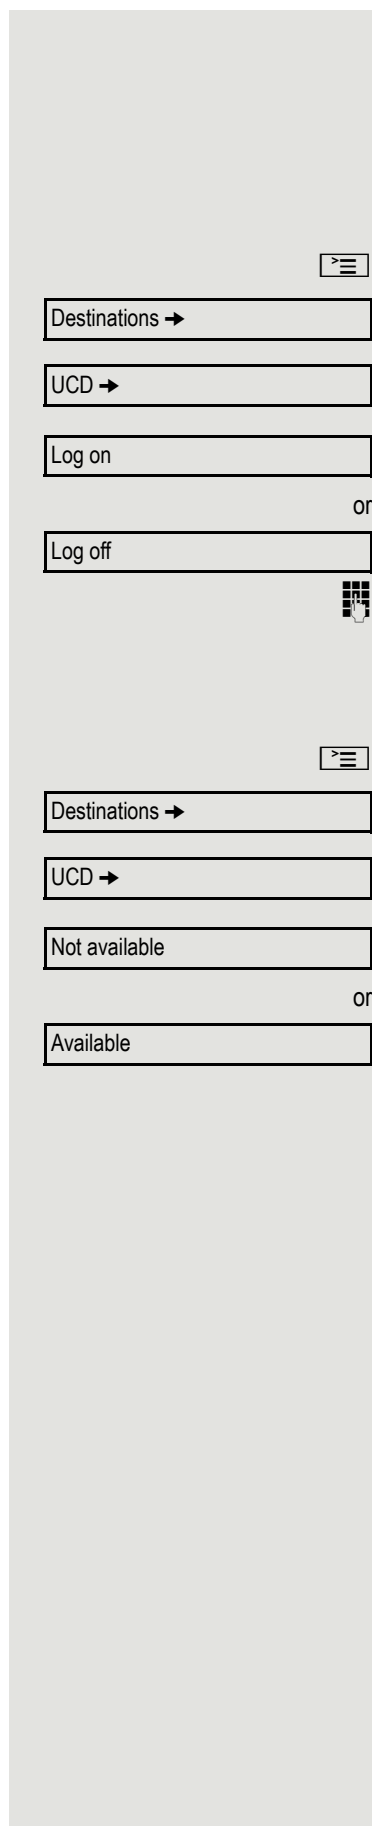

1. "Differing display views in a HiPath 4000 environment" → Seite 128

Requesting and activating work time

You can request/activate work time to ensure you have enough time to wrap up the last call. Your phone is excluded from call distribution for a set period or until you log back on.

Open the Program/Service menu → Page 31.

Confirm the option shown.

Select and confirm the option shown¹.

Confirm the option shown.

Select and confirm the option shown.

Turning the night service on and off for UCD

Open the Program/Service menu → Page 31.

Confirm the option shown.

Select and confirm the option shown^[1].

Confirm the option shown.

Select and confirm the option shown.

Display the number of waiting calls

Open the Program/Service menu → Page 31.

Confirm the option shown.

Select and confirm the option shown^[1].

Confirm the option shown.

1. "Differing display views in a HiPath 4000 environment" → Seite 128

dont worry about the wrong formatted text - will be repaired later on

Special functions in the LAN

If your telephone is operating in an environment in which multiple **HiPath 3000 / OpenScape Business** and/or **OpenScape Office MX/LX** systems are interconnected via a LAN (Local Area Network, such as a proprietary PC network), you are conducting a call via the LAN (PC network).

In this instance, you must note certain particularities for some functions. These are described in this section.

Leaving hunt group/group call

Prerequisite: You are part of a hunt group/group call → Page 110 in another **HiPath 3000/OpenScape Business** or **OpenScape Office MX/LX**.

Open the idle menu → Page 26.

Select and confirm the option shown.

Enter the (DISA) call number of the other **HiPath 3000/OpenScape Business** or **OpenScape Office MX/LX**.

Confirm your entry.

Enter the (DISA) station number of your phone.


Confirm your entry.

Confirm the option shown.

Select and confirm the option shown.

You belong to multiple groups associated with another **HiPath 3000/OpenScape Business** or **OpenScape Office MX/LX**

Enter group number for "directed joining/leaving".

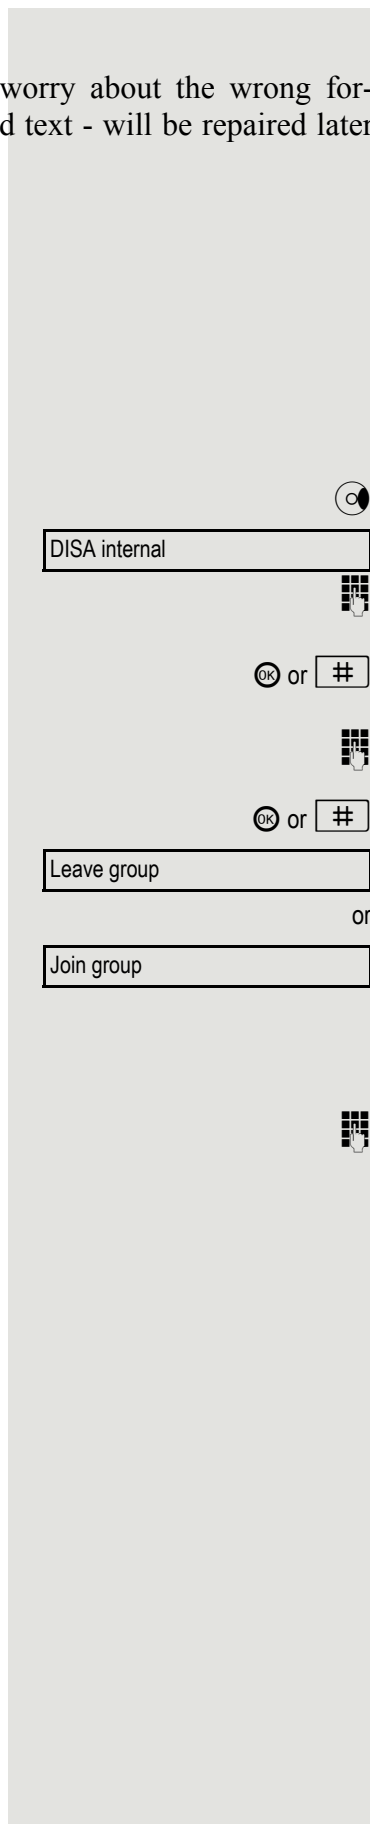

Setting up "follow me" call forwarding

You can activate/deactivate call forwarding → Page 40 for your phone from other phones in the LAN.

Open the idle menu → Page 26.

Select and confirm the option shown.

(DISA) station number of your **HiPath 3000/OpenScape Business** or **OpenScape Office MX/LX**.

Confirm your entry.

Enter the (DISA) station number of your phone.

Confirm your entry.

Activating

Open the idle menu → Page 26.

Select and confirm the option shown.

Confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.


Enter the destination phone number.

Confirm the option shown.

Deactivating

Open the idle menu → Page 26.

Select and confirm the option shown.

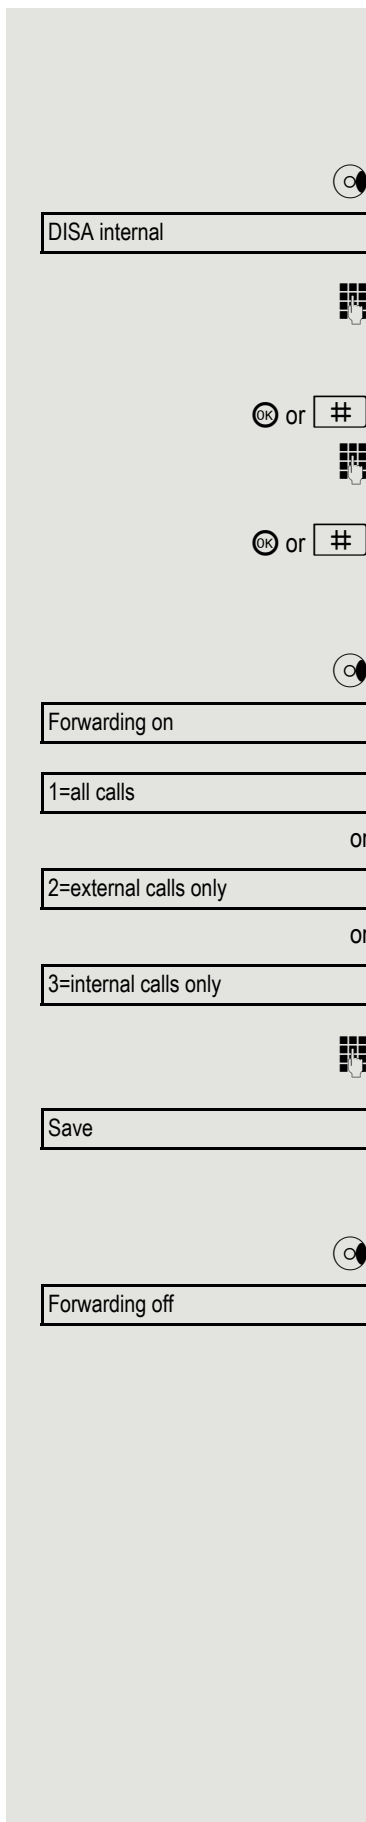

Using night service

If authorized (consult your administrator), you can define telephones in other HiPath 3000/OpenScape Business or **OpenScape Office MX/LX** communication platforms as the night answer → Page 68.

Open the idle menu → Page 26.

Select and confirm the option shown.

Enter the (DISA) number of the HiPath 3000/OpenScape Business or **OpenScape Office MX/LX** to which the night answer phone is connected.

Confirm your entry.

Enter the (DISA) station number of the phone you wish to use to activate/deactivate night answer.

Confirm your entry.

Activating

Open the idle menu → Page 26.

Select and confirm the option shown.


Enter the destination number (= temporary night answer service).

Select and confirm the option shown.

Deactivating

Open the idle menu → Page 26.

Select and confirm the option shown.

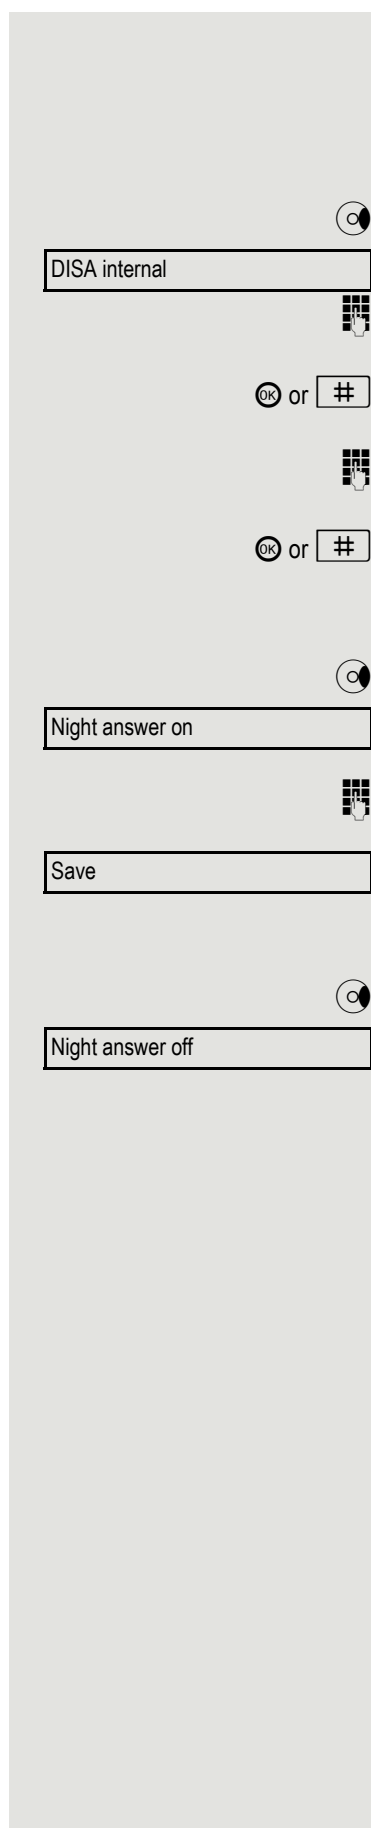

Ringing group

You can have calls for your telephone signaled audibly at external telephones or at telephones in other **HiPath 3000/OpenScape Business** or **OpenScape Office MX/LX** communication platforms → Page 110.

Saving, displaying and deleting telephones for the ringing group

Open the Program/Service menu → Page 31.

Confirm the option shown.

Select and confirm the option shown.

Confirm the option shown.

Select and confirm the option shown.

Select and confirm, then follow the operating instructions.

Enter the phone number.

Select and confirm the option shown.


Confirm the option shown.

Select and confirm the option shown.

Removing all telephones in a call ringing group

Open the idle menu → Page 26.

Select and confirm the option shown.

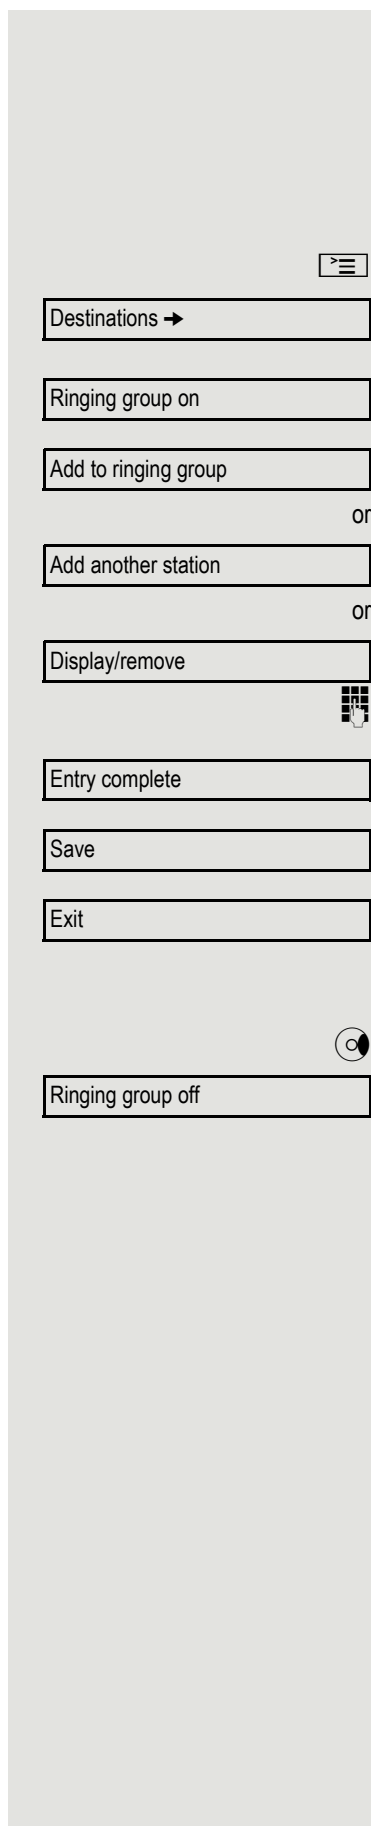

Controlling relays (only for HiPath 3000)

If this feature is configured (consult your administrator), you can also control relays → Page 96 in other **HiPath 3000** communication platforms.

Select and confirm the option shown.

Enter the (DISA) station number of the **HiPath 3000** where you wish to control the relay.

Confirm your entry.

Enter the (DISA) station number of the phone you wish to use to control the relay.

Confirm your entry.

Confirm the option shown.

Select and confirm the option shown.

Enter the relay.

Opening a door

If this feature is configured (consult your administrator), you can also activate the door opener → Page 48 in other **HiPath 3000/OpenScape Business** or **OpenScape Office MX/LX** communication platforms.

Open the idle menu → Page 26.

Select and confirm the option shown.

Enter the (DISA) station number of the **HiPath 3000/OpenScape Business** or **OpenScape Office MX/LX** where you wish to control the relay.


Confirm your entry.

Enter the (DISA) station number of the phone you wish to use to control the relay.

Confirm your entry.

Select and confirm the option shown.

Dial the entrance telephone number.

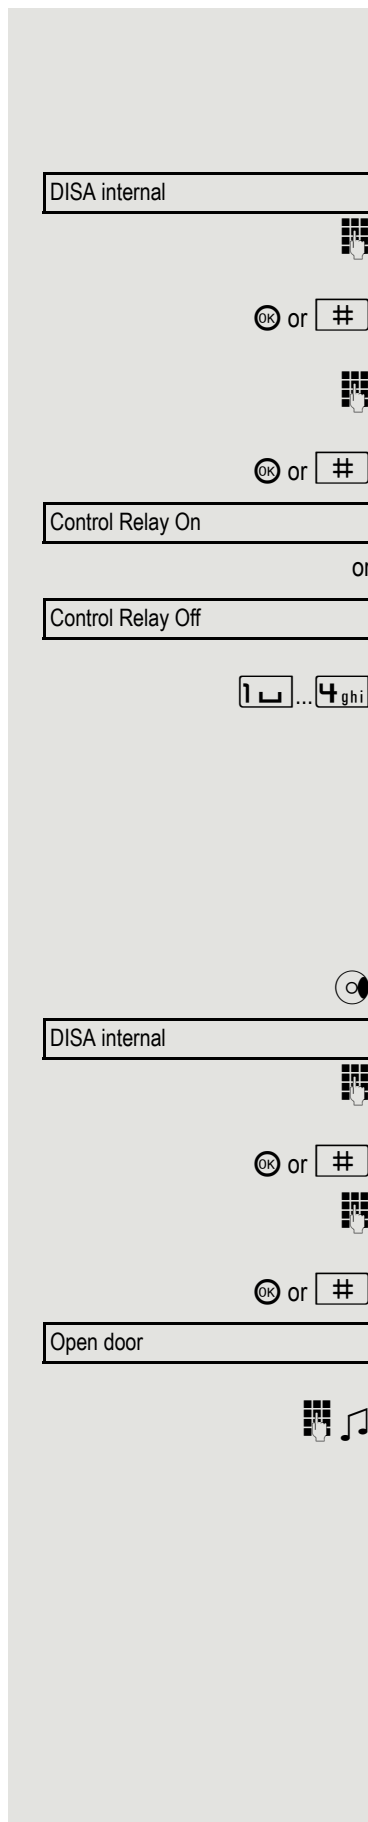

Individual phone configuration

Adjusting display properties

Adjusting the display to a comfortable reading angle

You can swivel the display unit. Adjust the display unit so that you can clearly read the screen.

Setting contrast

The display has eight contrast levels that you can set according to your light conditions.

Press one of the keys shown in idle mode → Page 25.

Select and confirm the option shown.

Keep pressing the key until the desired contrast is set.

Save.

Adjusting the brightness

You can adjust the brightness freely from the user menu.

You can also configure the following setting via the **web interface** → Seite 134.

Open the menu → Page 31.

Select and confirm the option shown.

Enter and confirm the user password.


Select and confirm the option shown.

Confirm the option shown.

Confirm the option shown.

Set and confirm the brightness.

Select and confirm the option shown.

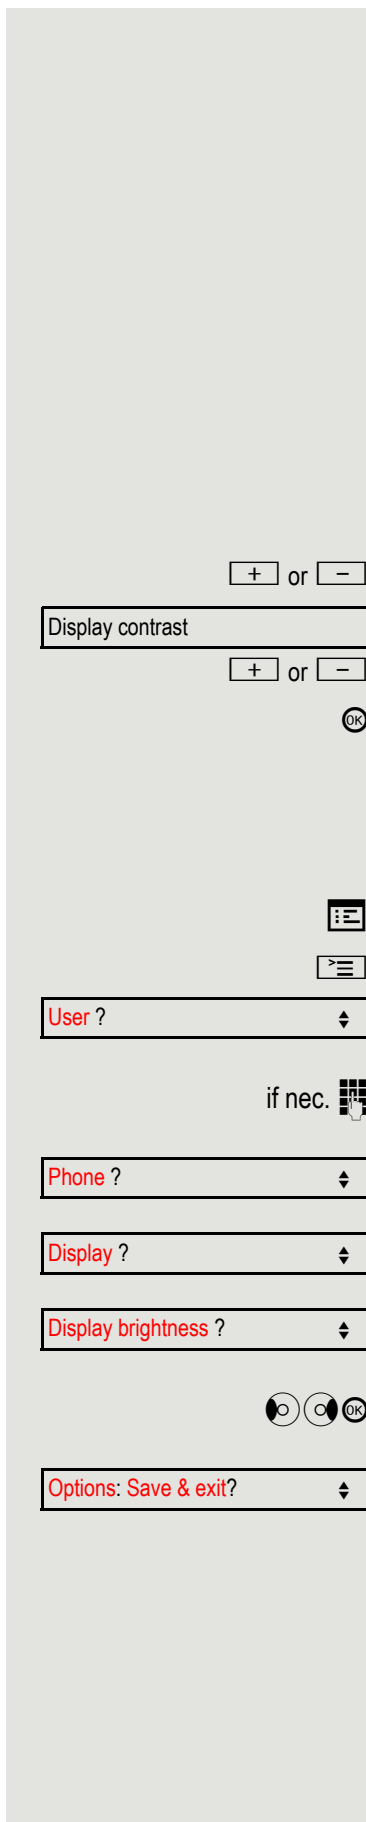

Adjusting displays on the Open Stage Key Module

You can adjust the contrast setting for any OpenStage Key Module connected to suit the current light conditions (eight settings available).

Press one of the keys shown in idle mode → Page 25.

Select and confirm the option shown.

Keep pressing the key until the desired contrast is set.

Save.

Audio

Setting the ring tone mode

You can use the two ring tone mode options

- HiPath
- Local ringer

to decide how the ring tone is generated on the telephone. With the setting "HiPath", the system sends the ring tone type and the dependent ring tone, which you can adjust subsequently → Page 122.

If "Local ringer" is selected, the system sends the ring tone type and you select which ring tone is required for the respective ring tone type in the "Local ringers" menu → Page 123.

You can also configure the following setting via the **web interface** → Seite 134.

Open the menu → Page 31.

Select and confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

The screenshot shows a vertical menu on a light gray background. At the top, there are two rows of controls for 'Key label contrast': a row with '+' and '-' buttons separated by 'or', followed by a text box containing 'Key label contrast', and another row with '+' and '-' buttons separated by 'or'. Below this is a small circular 'OK' button. Further down, there are two menu icons: one with three horizontal lines and a right-pointing arrow, and another with three horizontal lines. Below these are several dropdown menus, each with a red label and a downward arrow: 'User ?', 'Ringer ?', 'Ringer mode ?', 'HiPath?', and 'Local ringer ?'. Between the 'User ?' and 'Ringer ?' menus, there is a small icon of a keypad and the text 'if nec.'. At the bottom, there is a dropdown menu with the red label 'Options: Save & exit?'. The word 'or' is positioned between the 'HiPath?' and 'Local ringer ?' menus.

Adjusting audio settings

Optimize the audio settings on your **OpenStage** for your work environment and according to your personal requirements.

Adjusting the receiving volume during a call

You are conducting a call.

Raise or lower the volume. Keep pressing the key until the desired volume is set.
Save.

Adjusting the ring volume

Press one of the keys shown in idle mode → Page 25.

Confirm the option shown.

Raise or lower the volume. Keep pressing the key until the desired volume is set.
Save.

Adjusting the ringer pitch

Press one of the keys shown in idle mode → Page 25.

Select and confirm the option shown.

To adjust the ringer pitch: Keep pressing the keys until the desired pitch is set.
Save.


Adjusting the attention ring volume

If you are part of a team with trunk keys, other calls can be signaled acoustically in the team during a call. You will hear the attention ring.

Press one of the keys shown in idle mode → Page 25.

Select and confirm the option shown.

Raise or lower the volume. Keep pressing the key until the desired volume is set.
Save.

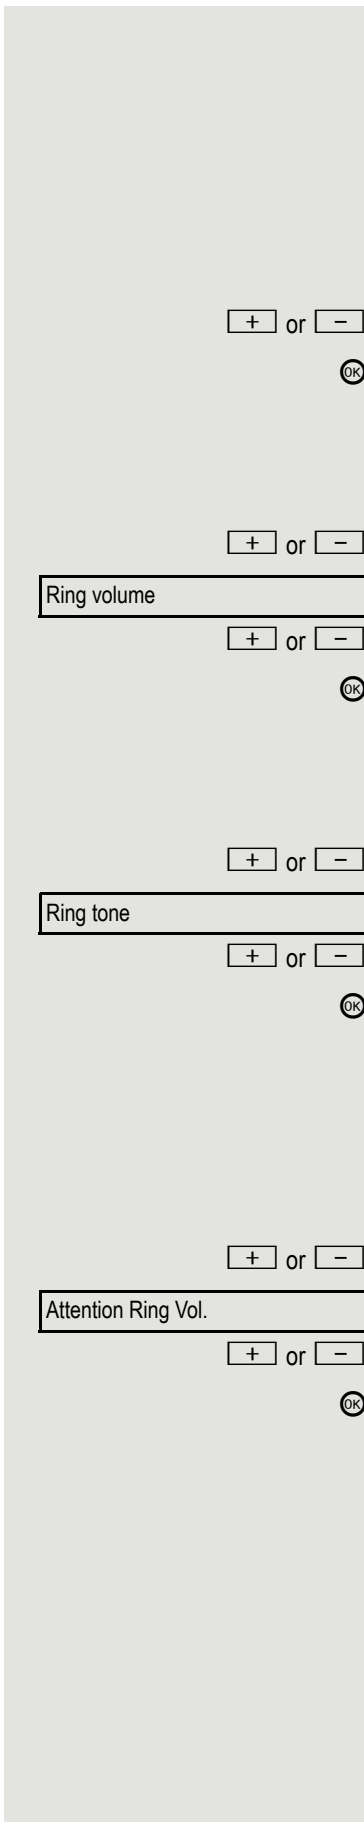

The screenshot shows a vertical menu of settings on a light gray background. At the top, there are two small square buttons with '+' and '-' symbols, followed by the text 'or'. Below this is a rectangular box containing the word 'Handsfree'. Another pair of '+' and '-' buttons with 'or' is below that. Further down is a small circular button with 'OK' inside. Below that is a small square button with a star symbol. At the bottom of the menu, there are several more settings: a button with a list icon, a button with a right arrow and list icon, a dropdown menu showing 'User', a label 'if nec.' followed by a small icon, a dropdown menu showing 'Ringer ?', a dropdown menu showing 'Local ringers ?', a dropdown menu showing 'Internal ?', and a dropdown menu showing 'ABC.wav'.

Adjusting the speakerphone to the room acoustics

To help the other party understand you clearly while you are talking into the microphone, you can adjust the telephone to the acoustics in your environment: „T0343 Quiet room," "T0344 Normal room" and "T0345 Noisy room."

Press one of the keys shown in idle mode.

Select and confirm the option shown.

To set the room type: Keep pressing these keys until the setting you want appears on the screen.

Save.

Activating/deactivating the ring tone

You can see whether the function is activated or deactivated from the corresponding icon in the status bar on the display → Page 25.

Hold down the key shown.

Setting local ring tones

Selecting and configuring the call type

The ring tone mode "Local ringer" is set. Different ring tone types are sent by the **OpenScape Business/HiPath 3000**. Not all of the following types will necessarily be used in your system configuration:

- Internal
- External
- Attention

Select the required call type and adjust to suit your requirements.

You can also configure the following setting via the **web interface** → Seite 134.

Open the menu → Page 31.

Select and confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

For instance, select "**Internal**" and confirm the option shown.

Select the required ring tone file^[1] or "pattern". You will hear the associated ring tone melody. Confirm current ring tone file.

1. The phone displays the current setting

Settings for the ring tone "pattern"

If you selected "Pattern" as the ring tone, you can still make settings for the pattern melody and the pattern sequence:

Select and confirm the option shown.

Select the required pattern melody between 1 and 8 (e.g. **4**). You will hear the associated **Pattern melody**. Confirm the selected **Pattern melody**.

Select and confirm the option shown.

Select the required **Pattern sequence** between 1 and 6 (e.g. **2**). You will hear the set **Pattern melody** with the selected **Pattern sequence**. Confirm the selected setting.

Select and confirm the option shown.

Setting headset port use

Here you set whether you are using a wired or cordless DECT headset.

You can also configure this setting via the web interface → Seite 134.

Open the menu → Page 31.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select the option shown.

Select and confirm the relevant option¹ shown in the context menu:

- Wired headset
- Wireless headset
- Conference phone

Select and confirm the option shown.

The screenshot shows a vertical list of settings on a light gray background. Each setting is in a white box with a red label and a dropdown arrow. The settings are: 'Pattern melody' (value 4), 'Pattern sequence' (value 2), 'Options: Save & exit?', 'User' (with a password input field and a 'if nec.' label), 'Audio', 'Settings', 'Headset port', 'Wired headset', and 'Save & exit'.

1. The phone displays the current setting

En-bloc dialing (local)

This function is not supported by HiPath 3000.

If en-bloc dialing is activated, you can delete characters with the backspace key as you enter a phone number and then enter new characters. The connection is only established when you confirm "Dial".

You can also configure this setting via the web interface → Seite 134.

Open the menu → Page 31.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select the "En-block dialing" option.

Select and confirm the setting^[1] you want in the context menu ("Activated" or "Deactivated").

Select and confirm the option shown.



1. The phone displays the current setting

Viewing network information

The information you need to launch the web interface → Seite 134 can be found here.

In addition, you will find real-time information on network activity that may be important for the administrator for troubleshooting purposes.

Open the menu → Page 31.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

IP address: Displays the IP address or name that was assigned to the phone in the network.

WBM URL: HTTP address of the web interface. This address is specified in the address line of the Internet browser and is used to call the web interface of the phone in the browser.

LAN/PC byte input: The network or PC interface data packets received are illustrated dynamically as columns.

LAN/PC byte output: The network or PC interface data packets sent are illustrated dynamically as columns.

LAN/PC autonegotiated: [Yes|No]: Displays whether the network or PC interface data transfer rate is set to automatic (**Yes**) or manual (**No**).

LAN/PC port speed: [10|100|1000] Mbit/s: Data transfer rate of the network or PC interface. If an interface is not in use, **Link down** is displayed.


Language for system functions

Open the Program/Service menu → Page 31.

Select and confirm the option shown.

Confirm the option shown.

Select the language you wish to use (e. g. "Spanish") and confirm.

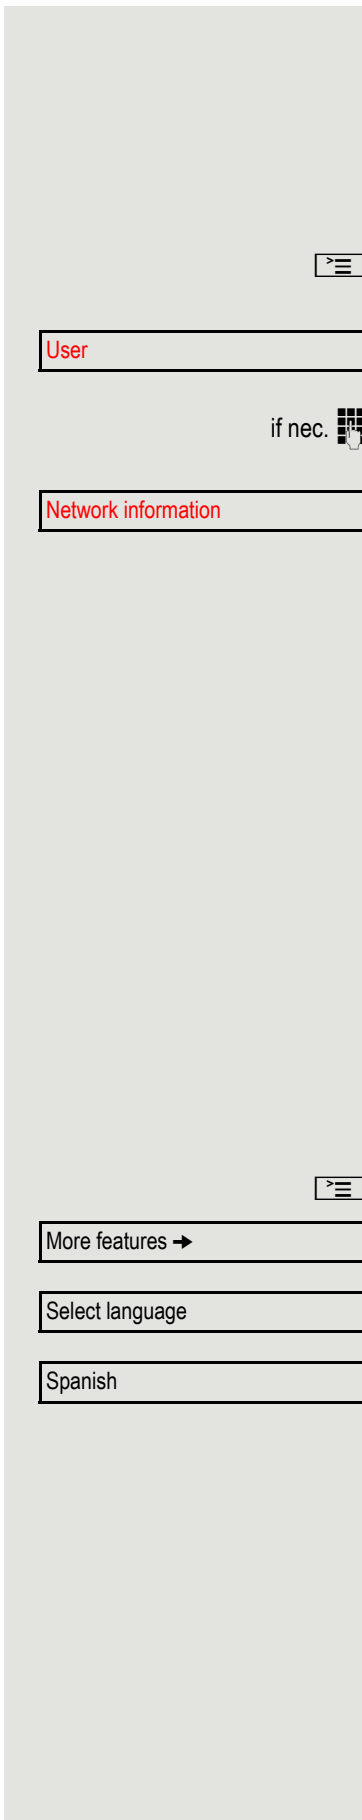

Testing the phone

Testing the phone's functionality

You can test your phone's functionality.

Prerequisite: The phone is in idle mode.

Open the Program/Service menu → Page 31.

Select and confirm the option shown.

If everything is functioning correctly:

- all LEDs on the phone and on the key module flash
- your station number is displayed
- all pixels are active on the display
- the ring tone is audible.

Checking the key assignment


You can check the key assignment on your phone to determine which functions are assigned to which keys.

Open the Program/Service menu → Page 31.

Select and confirm the option shown.

Press any key. The key assignment is displayed.

Select and confirm the option shown.

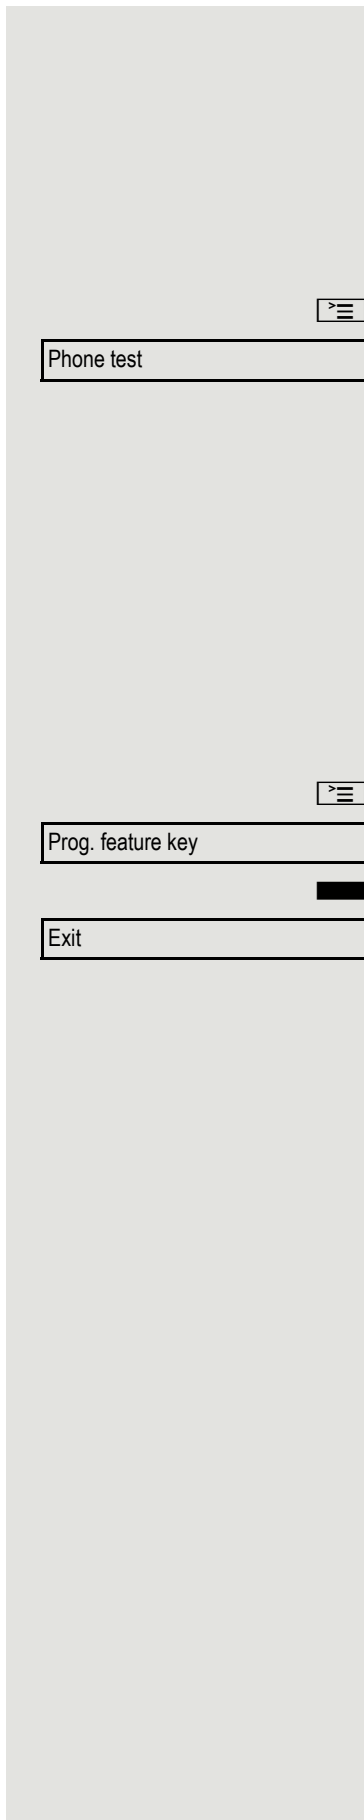

Differing display views in a HiPath 4000 environment

Depending on the system configuration, some functions may not always be offered in the display as described in this document.

In addition, display texts may differ from those described in this document depending on the system configuration.

The following table provides an overview:


HiPath 3000/OpenScape Business OpenScape Office display	HiPath 4000 display	Description
Program/Service	Service menu?	→ Page 31
Transfer	Transfer?	→ Page 39 → Page 66
View callbacks	Show callback destinations?	→ Page 45
Pickup - directed	Directed pickup	→ Page 46
Caller list	Call list/log?	→ Page 51
Use speed dialing	Use speed dialing?	→ Page 55
Change speed dial	Speed dial?	
Call waiting trm.	Second call release?	→ Page 60
Call wait.trm. on/off	Second call on/off?	→ Page 60
Ringer cutoff on/off	Ringer cutoff on/off?	→ Page 78
In/Out of hunt group	All hunt groups on/off	→ Page 110
Join/leave group	Hunt group on/off?	→ Page 110
Transfer trunk	Transfer trunk?	

Web interface

General

You can configure a number of settings for your phone via the web interface. Communication is via a secure HTTPS connection. Access to the web interface must be activated by your administrator.

Launching the web interface

 For more information about the IP address, the web interface address and how to connect the telephone to the network, refer to the section entitled "Network information" → Page 126.

To launch the interface, open a web browser and enter the following:


https://[IP address of the phone]

[IP address of the phone] is the IP address of your phone.

or

https://[Name of the phone]

[Name of the phone] that was assigned by the administrator.

 You might receive a certificate notification from the browser. Follow the instructions to download the certificate.

You will be prompted to configure a user password → Page 81 the first time you call up the web interface. You must log in with this password in future every time you want to open the **User Pages**.

Administrator Pages

This area lets you configure settings for administering your phone and the network environment. Access to the **Administrator Pages** is protected by the admin password. For further information, consult your administrator or refer to the administration manual.

User Pages

The web interface homepage opens once you have entered and confirmed the phone's IP address.

1. Click a menu heading to display the individual menu entries. Click the menu heading again to close the menu.
2. Click a menu entry to open the corresponding form.
3. Make the desired changes.
4. Click the corresponding button to save or discard your changes.

Button functions

- „Login“: Log in to the phone after you have entered the user password
- „Submit“: Apply changes
- „Reset“: Reset original values
- „Refresh“: Update the values.
- „Logout“: Log out from the phone

User menu

You can also configure the following settings via the user menu on the phone.



User Pages

User login


Authentication

- Old password
- User password  → Page 81
- Confirm password

Ringer

- Ringer mode ( → Page 121)
 - HiPath
 - Local ringer
- Local ringers  → Page 123
 - Name
 - Internal
 - Ringer file
 - Pattern melody
 - Pattern sequence
 - External
 - Ring tone
 - Pattern melody
 - Pattern sequence
 - Attention
 - Ringer file
 - Pattern melody
 - Pattern sequence


Audio

- Settings
- Headset socket  → Page 124




User Configuration (not supported by HiPath 3000)

- Outgoing calls
- Block dialling  → Page 125

Phone

- Display  → Page 120
- Display-Einstellungen
 - Display brightness:
 - -3
 - -2
 - -1
 - Standard
 - +1
 - +2
 - +3

Phonebook

- Contact list  → Page 97
- New contact  → Page 97
 - Last name
 - First name
 - Number
- Delete all contacts  → Page 98
 - Confirm delete

Fixing problems

Responding to error messages on the display

Incorrect input

Possible causes:

Station number is incorrect.

Possible reactions:

Enter correct station number.

Not authorized

Possible causes:

Locked function selected.

Possible reactions:

Apply to the administrator for authorization for relevant function.

Currently not possible

Possible causes:

Dialed a non-existent station number. Called phone is unplugged.

Possible reactions:

Enter correct station number. Call this station again later.

Invalid station number

Possible causes:

Dialed your own station number.

Possible reactions:

Enter correct station number.

Key memory is full

Possible causes:

The system currently has no free space for external station numbers.

Possible reactions:

Try again later.

Key affects other level

Possible cause 1:

If "Clear other level" appears on the menu:
you tried to program a function or internal station number with LED on a key that is already programmed on the second level (for example, external station number).

Possible reactions:

Confirm "Clear other level" to save the station number/ function.

Possible cause 2:

If "Clear LED support" appears in the menu:
you tried to program a station number without LED display or an external station number on a key that is already programmed with an internal phone number with LED display.

Possible reactions:

Confirm "Clear LED support" to save the station number. The existing internal station number remains on the other level without LED display.

Contact partner in case of problems

Consult your administrator if a fault persists for more than five minutes, for example.

Troubleshooting

Pressed key does not respond

Check if the key is stuck.

Telephone does not ring

Check whether the "Do not disturb" function is activated on your telephone ("Do not disturb" icon appears on the screen → Page 25). If so, deactivate the "Do not disturb" function → Page 78.

You cannot dial an external number

Check whether your telephone is locked (The following message appears on the screen: „Not authorized"). If the phone is locked, enter your PIN to unlock it → Page 82.

To correct any other problems

First consult your administrator. If the problem still cannot be resolved, the administrator has to contact Customer Service.

Care and cleaning instructions

- Never spray the phone with liquids as the penetrating fluids can lead to malfunctions or may damage the device.
- Clean the phone with a soft and slightly damp cloth.
- Do not use substances such as alcohol, chemicals, household cleaners or solvents, as these substances can lead to surface damage or cause the coating to peel.

Labeling keys


The following options are available for labeling keys of the **OpenStage Key Module 15** (→ Page 18) with the functions or numbers assigned to them:

Labeling

- By hand:
Labeling strips are supplied with your **OpenStage Key Module 15**. Note the function or name in the white field on the strip and insert the strip on your **OpenStage Key Module 15**.
- With a computer via the Internet:
You can find the "online labeling tool" together with the user interface at http://wiki.unify.com/index.php/Key_Labelling_Tool.
- Select the appropriate key labeling tool in your language. You can use the tool online via the browser or you can download it for local use.

Local user menu

Opening the user menu on the phone

To open the user menu, press the  key.

Select the **User** menu option. You are prompted to enter the **User password** → Page 81. Confirm this with **OK**. The options of the user menu are available.

User menu display

The majority of settings that can be made via the user menu on the phone can also be made via the web interface → Page 129.

Changes are usually confirmed using the **Save & exit** option or discarded using the **Exit (no save)** option.

User

Ringer?

- **Local ringers?** → Page 123
 - 1: **Internal**
 - Options: **Save & exit**
 - Name: **Internal**
 - Ringer sound: **Ring file**
 - Pattern melody: **2**
 - Pattern sequence: **2**
 - 2: **External**
 - Options: **Save & exit**
 - Name: **External**
 - Ringer sound: **Ring file**
 - Pattern melody: **2**
 - Pattern sequence: **2**
 - 3: **Attention**
 - Options: **Save & exit**
 - Name: **Attention**
 - Ringer sound: **Ring file**
 - Pattern melody: **2**
 - Pattern sequence: **2**
- **Ringer mode?** → Page 121)
 - Options: **Save & exit**
 - Mode: **HiPath**
 - **Local ringer?**
 - **Back?**

Audio?

- **Settings?** → Page 124
 - **Headset socket**
 - **Wired headset**
 - **Cordless headset**
 - **Conference unit**

Configuration (not supported by HiPath 3000)

- Outgoing calls → Page 125
- Block dialling
 - Activated
 - Deactivated





Phone

- Display → Page 120
- Helligkeit: 

Change user password?

- Current password: → Page 81
- New user password:
- Confirm password:
- Options: Save & exit

Network information?

- Options: Exit
- Phone address: → Page 126
- Web address:
- IP address:
- LAN RX: 
- LAN TX: 
- PC RX: 
- PC TX: 
- LAN autonegotiated: Yes
- LAN information: 10 Mbps full duplex
- PC autonegotiated : Yes
- PC information: Link down
- Back?

Index

Numerics

5-way navigator 21

A

Absence text 87
 Leaving 87
 Activating door opener 48
 Advisory message
 Delete 87
 Agents 113
 Announcement 56
 Answering machine 91
 Call pickup 49
 Assigning a DID number 58
 Associated dialing/dialing aid 58
 Associated service 92
 Attention ring volume 122
 Audio controls 20
 Audio keys 20
 Automatic call waiting
 Preventing/allowing 60
 Automatic connection setup 57
 Automatic trunk seizure/prime line is not active 36

C

Call
 Accepting 33
 Accepting from the answering machine 49
 Directed pickup 46
 Distributing 113
 Entrance telephone 48
 Forwarding 40
 Forwarding in a team 107
 Forwarding MSN in CO 43
 In a team with trunk keys 104
 Parking 61
 Picking up in a group 112
 Picking up in a team 107
 Placing on hold 62
 Recording 65
 Rejecting 38
 Retrieving from hold 62
 Retrieving from park 61
 Transferring 39, 106
 Transferring after announcement 66
 Using DSS keys in a team 106
 Call charge assignment 76
 Call charges

 For another phone 75
 For your phone 75
 Call duration 75
 Call forwarding 40
 In the event of telephone failure 42
 MSN in CO 43
 Call list 30
 Call request 30
 Call volume 33, 122
 Call waiting 67
 Accepting 59
 Tone off 60
 Call waiting tone on/off 60
 Callback 44
 Caller ID suppression 79
 Caller list, using 51
 Calling a second party 39
 Calls in queue 88, 113
 CE marking 3
 Central telephone lock 83
 CFNR 41
 Charges
 For another phone 75
 For your phone 75
 Checking the key assignment 127
 Cleaning information 134
 Code dialing in ISDN 94
 Code lock
 Central 83
 For phone 82
 Conducting calls with the headset 46
 Conference 39
 Connection options 15
 Connection setup
 Automatic 57
 Consultation 39
 Control relays 96
 Corporate directory 100
 CSTA 95

D

Details, fax 91
 Dialed number, editing 50
 Dialing
 Dialing aid 58
 En-bloc 50
 From the caller list 51
 From the internal phonebook 52
 From the LDAP database 53
 Internal / external 36
 On-hook 36

Using redial	37
Using repdial keys	37
Using speed dialing	55
Dialing aid	
S0 bus	58
Dialing external calls	36
Dialing internal calls	36
Dialing the CO	36
Dialpad	23
Direct Inward System Access	93
Direct station select	70, 106
Directory	
LDAP	100
Local phonebook	
New contact	97
Directory LDAP	53
DISA	93
Discreet calling	57
Display angle	120
Display contrast	120
Display icons	
Connection status	28
Messages	25
Status bar	25
Display views for	
HiPath 4000 environment	128
Distributing calls	113
DNS domain	126
Do not disturb	78
Door opener	49
DTMF suffix dialing (tone dialing)	65

E

Editing a dialed number	50
Editing number	50
En-bloc dialing	50
Entrance telephone	48
External code	36

F

Fax details	91
Forwarding	40
Multiple subscriber number (MSN)	43
Forwarding MSN in CO	43
Forwarding multiple subscriber number (MSN)	43
Function keys	20
Functions	
For another phone on/off	92
Programming a key	69
Resetting	91
Using from externally	93

G

General information	11
Graphic display	25
Group call	110

H

Handsfree answerback	47
Disabling	47
Enabling	47
Headset	46
HiPath 3000	
Control relays	119
Opening a door	119
Relays	119
Holding	62
In the team	105
Hot line	57
Hotline delayed	57
Hunt group	110

I

Icons	
Connection status	28
Messages	25
Status bar	25
Important information	4
Incoming calls	30
Internal phonebook	52
IP address	126
IP telephony	115

K

Key modules	17, 19
Keypad dialing	94
Keys	
Assigning	69
Programming	69
Save incomplete	69

- L**
- LAN telephony 115
 - LDAP 100
 - LDAP directory 53
 - LED displays
 - DSS keys 22
 - Function keys 22
 - Line/trunk keys 104
 - LED messages, understanding 70, 106, 108
 - Line key 103
 - Line utilization 103
 - Location of the telephone 4
 - Locking/unlocking 82
 - Loudspeaker 34
- M**
- Making mobile calls 88
 - Message (text)
 - Answer 86
 - Deleting/viewing 85
 - Receiving 86
 - Sending 85
 - MULAP keys, trunk keys 103
 - MULAP privacy release 105
 - MultiLine phone 13
- N**
- Network activity 126
 - Night answer 68
 - Non-secure call 12, 77
- O**
- Open listening 35
 - Opening a door 48
 - Using a code 48
 - OpenStage Busy Lamp Field 40 19
 - OpenStage Key Module 40 17
 - Operating instructions 3
 - Operating steps
 - Programming a key 72
 - Outgoing calls 30
 - Overload indication 88
 - Override 67
- P**
- Parking a call 61
 - Personal identification number 83
 - Phone
 - Locking 82
 - Locking another 83
 - Locking/unlocking 82
 - Locking/unlocking centrally 83
 - Testing 127
 - Using another phone like your own 88
 - Phone settings 120
 - Pickup (call) 46, 112
 - PIN 83
 - PIN, saving 83
 - Primary line 103
 - Private line 103
 - Procedure
 - Programming a key 72
 - Program/Service menu 31
 - Programmable sensor key 22
 - Programming free keys 69
 - Project calls 76
 - Project code, account code 76
- Q**
- Quick search 102
- R**
- Radio paging equipment (PSE) 96
 - Recall 66
 - Receiving volume 33, 122
 - Recording 65
 - Redialing a number 37
 - From the caller list 51
 - Relays 96
 - Reserve trunk 57
 - Reserving trunk 57
 - Resetting functions 91
 - Resetting services 91
 - Ring tone 122
 - Ring transfer
 - In an executive/secretary team 109
 - Ring volume 122
 - Ringer cutoff 78
 - Ringing group 112
 - Room monitor 80
 - Room monitoring 80
- S**
- Safety notes 3

Searching for a contact 99, 100
 Second call
 Allowing 60
 Preventing 60
 Second level 37
 Secondary line 103
 Secure call 12, 77
 Sensors 96
 Setting headset port 124
 Settings 120
 Shared line 103
 Shift 37
 Shift key 37
 SingleLine phone 13
 Speaker call 56
 Speakerphone distance 4
 Speakerphone mode 34, 35, 123
 Special dial tone 78
 Speed dial
 Dialing 55
 Saving station speed dialing 55
 Suffix dialing 55
 System 55
 Station number
 Assigning 58
 Correcting 50
 Deactivating display 79
 Saving 73
 Suppression 79
 Station speed dialing 55
 Status information 126
 Suffix dialing
 Automatic 55
 DTMF tone dialing 65
 System speed dialing 55
 System-wide cancelation 91

T

Telephone data service 94
 Telephone maintenance 134
 Telephone test 127
 Temporary phone 88
 Testing the phone's functionality 127
 Testing the telephone 127
 Three-party conference 39
 Timed reminder 84
 Timed reminder, answering 85
 Toggle/connect 39
 In the team 105
 Tone dialing 65
 Trace call 80
 Transferring (call) 39, 106
 After announcement 66
 Troubleshooting 126, 134
 Trunk flash 66

Trunk seizure, automatic 36

U

Unanswered calls 30
 Uniform Call Distribution 113
 User interface 14
 User password 81
 User support 11
 Using Ethernet switches 16
 Using network ports more efficiently 16

V






Variable call forwarding 40
 Voice encryption 12, 77

W

Waiting calls 88
 WBM URL 126
 Web interface 129, 135
 Wrap-up time 114

Overview of functions and codes (alphabetical)

The following table lists all available functions, as shown on the display. If configured (consult your administrator), functions can be activated interactively (select and confirm) or via the **Service Menu** (select and confirm or enter a code).

Functions (=display)	... Interact- ively	... Via the Service Menu		... With Press
	 	 → Page 31	  Code	
Call waiting	✓	✓	*55	X
Waiting tone off	✓	✓	*87	X
Waiting tone on	✓	✓	#87	X
Call wait.trm.on		✓	*490	X
Call wait.trm.off		✓	#490	X
Headset				X
Answer call	✓			
Reject calls	✓			
Release				X
Caller list	✓	✓	#82	X
Save number	✓	✓	*82	X
DND on	✓	✓	*97	X
DND off	✓	✓	#97	X
Uniform Call Distribution				
Log on		✓	*401	X
Log off		✓	#401	X
Available		✓	*402	X
Not available		✓	#402	X
Work on		✓	*403	X
Work off		✓	#403	X
UCD night on		✓	*404	X
UCD night off		✓	#404	X
Calls in queue		✓	*405	X
Advisory msg. on	✓	✓	*69	X
Advisory msg. off	✓	✓	#69	X
Associated services		✓	*83	X
Associated dialing		✓	*67	X
Override	✓	✓	*62	X
Room monitor		✓	*88	X
En-bloc dialing				
Dialing	✓			

Functions (=display)	... Interact- ively	... Via the Service Menu → Page 31	Code	... With Press
	▲ ▼	▲ ▼		
Data I/O service			*494	X
Resetting services		✓	#0	X
Speaker call		✓	*80	X
HF answerback on	✓	✓	*96	X
HF answerback off	✓	✓	#96	X
DISA				
DISA internal	✓	✓	*47	X
Discreet calling			*945	X
Shift				X
Phone test		✓	*940	
Trace call		✓	*84	X
Temporary phone		✓	*508	X
Join group	✓	✓	*85	X
Leave group	✓	✓	#85	X
Rejoin all groups	✓	✓	*85*	X
Leave all groups	✓	✓	#85#	X
Hotline				
Send message	✓	✓	*68	X
View sent message	✓	✓	#68	X
View messages	✓	✓	#68	X
Mailbox				X
Keypad dialing		✓	*503	
Conference	✓	✓	*3	X
Start conference	✓			
Adding a party	✓			
End conference	✓	✓	#3	
View conf parties	✓	✓		
Remove party	✓	✓		
Drop last conf. party			*491	
Show call charges (own phone)		✓	*65	X
Query call charges (third-party phone)				X
Use speed dialing		✓	*7	X
Change speed dialing (station)		✓	*92	X
Reserve trunk	✓			X
Toggle/connect	✓	✓	*2	X
DTMF dialing		✓	*53	X
Mute on		✓	*52	X
Mute off		✓	#52	X

Functions (=display)	... Interact- ively	... Via the Service Menu ☰ → Page 31	Code	... With Press
	▲ ▼	▲ ▼		
Mobile Login (log off)			#9419	X
Mobile Login (log on)			*9419	X
Night answer on	✓	✓	*44	X
Night answer off	✓	✓	#44	X
Parking a call		✓	*56	X
Retrieve call		✓	#56	
Page				
Answer page (not for U.S.)		✓	*59	
Account code		✓	*60	X
Consultation	✓			X
Return to held call	✓	✓	*0	
Quit and return	✓	✓	*0	
Transfer/Pick up call	✓			
Callback	✓	✓	*58	X
View callbacks/delete	✓	✓	#58	
Suppress call ID	✓	✓	*86	X
Restore caller ID	✓	✓	#86	X
Temporary MSN (not for U.S.)	✓	✓	*41	X
Ring Transfer: On		✓	*502	X
Ring Transfer: Off		✓	#502	X
Ringing group on		✓	*81	X
Ringing group off		✓	#81	X
Ringer cutoff on	✓	✓	*98	X
Ringer cutoff off	✓	✓	#98	X
Control Relay On (only for HiPath 3000)		✓	*90	X
Control Relay Off (only for HiPath 3000)		✓	#90	X
Trunk flash		✓	*51	X
Select language		✓	*48	
Lock phone	✓	✓	*66	X
Unlock phone	✓	✓	#66	X
Change PIN		✓	*93	
Directory				
1=internal	✓		*54	X
2=LDAP	✓		*54	X
Telephone data service			*42	

Functions (=display)	... Interact- ively	... Via the Service Menu ☰ → Page 31		... With Press
	▲ ▼	▲ ▼	Code	
Timed reminder on		✓	*46	X
Timed reminder off		✓	#46	X
Door opener on		✓	*89	X
Door opener off		✓	#89	X
Door opener		✓	*61	X
Transferring	✓			
Pickup - directed		✓	*59	X
Pickup - group	✓	✓	*57	X
Picking up a call	✓			
Forwarding on	✓	✓	*1	X
1=all calls	✓	✓	*11	X
2=external calls only	✓	✓	*12	X
3=internal calls only	✓	✓	*13	X
Forwarding off	✓	✓	#1	X
CFNR on		✓	*495	X
CFNR off		✓	#495	X
Trunk FWD on	✓	✓	*64	X
Trunk FWD off	✓	✓	#64	X
Redial	✓			X
Retrieve line		✓	*63	X
Lock all phones		✓	*943	X