



OpenScape Desk Phone CP600/CP600E OpenScape Key Module 600 OpenScape Business

User Guide HFA

A31003-C1000-U111-4-7619

Provide feedback to further optimize this document to edoku@unify.com.

As reseller please address further presales related questions to the responsible presales organization at Unify or at your distributor. For specific technical inquiries you may use the support knowledgebase, raise - if a software support contract is in place - a ticket via our partner portal or contact your distributor.

Our Quality and Environmental Management Systems are implemented according to the requirements of the ISO9001 and ISO14001 standards and are certified by an external certification company.

Copyright © Unify Software and Solutions GmbH & Co. KG 03/2019

All rights reserved.




Reference No.: A31003-C1000-U111-4-7619

The information provided in this document contains merely general descriptions or characteristics of performance which in case of actual use do not always apply as described or which may change as a result of further development of the products. An obligation to provide the respective characteristics shall only exist if expressly agreed in the terms of contract.

Availability and technical specifications are subject to change without notice.

Unify, OpenScape, OpenStage and HiPath are registered trademarks of Unify Software and Solutions GmbH & Co. KG. All other company, brand, product and service names are trademarks or registered trademarks of their respective holders.

Important Notes

	<p>For safety reasons, the phone should only be supplied with power as follows:</p> <ul style="list-style-type: none">• using the appropriate original power supply unit,• over a LAN with PoE (Power over Ethernet), which complies with the IEEE 802.3af standard.
	<p>Never open the telephone! Should you encounter any problems, consult system support.</p>
	<p>Use only original accessories! The use of other accessories is hazardous and will render the warranty, extended manufacturer's liability, and the CE and other markings invalid.</p>

Symbol



The device conforms to the EU Directive as attested by the CE marking. The CE Declaration of Conformity and, where applicable, other existing declarations of conformity as well as further information on regulations that restrict the usage of substances in products or affect the declaration of substances used in products can be found in the Unify Expert WIKI at <http://wiki.unify.com/> under the "Declarations of Conformity" section.



The adjacent symbol indicates that any electrical and electronic products installed and sold in countries of the European Union to which the WEEE2 Directive 2012/19/EU applies should be disposed of separately from the municipal waste stream in appropriate collection systems.

Information concerning the proper disposal of your Unify product in the business-to-business market segment is available from your local sales representative in Unify or partner sales.

Software update

During a software update, the phone must not be disconnected from the power supply unit and/or the LAN. An update action is indicated by messages on the display and/or by flashing LEDs.

Care and cleaning instructions

- Never spray the phone with liquids as the penetrating fluids can lead to malfunctions or may damage the device.
- Do not use substances such as alcohol, chemicals, solvents or scouring agents, as these substances can lead to surface damage.

Clean the phone with a soft and slightly damp cloth.

Online resources

This document along with additional information is available online at: <http://www.unify.com/Support>.

Technical notes, current information about firmware updates, frequently asked questions, and lots more can be found on the Internet at: <http://wiki.unify.com/>.

License information

More information about the EULA and Open Source licenses you can find on the Web interface, section "Licenses" → page 195.

Installation location information

- The telephone may only be operated using the LAN cabling internally in the building. The device should be connected to the IP infrastructure using a shielded LAN cable: Cat-5 for 100 Mb/s or Cat-6 for 1000 Mb/s. Make sure in the building installation that this cable shielding is earthed.
- The telephone is designed for operation in a sheltered environment within a temperature range of 5 °C to 40 °C.
- Putting the telephone in a room with higher levels of dust can result in a reduced service life of the device.
- Do not place the device in direct sunlight or other sources of direct heat. This is liable to damage the electronic components and the casing.
- Do not install the phone in bath or shower rooms.

Table of Contents

Important Notes	3
Symbol	3
Software update	4
Care and cleaning instructions	4
Online resources	4
License information	4
Installation location information	4
General information	11
About this manual	11
Icons used in the manual	12
Displays for describing operation	12
Selected action	12
Action not selected	13
Conversation display	13
Service	15
Intended use	15
Telephone type information	15
Speakerphone quality and display legibility	15
Getting to know the OpenScope Desk Phone CP600/CP600E	16
The User Interface of Your Telephone	16
Ports on the underside of the phone	17
Using network ports more efficiently	18
OpenScope Key Module 600	18
Keys	19
Softkeys	19
Audio controls	19
Mode keys	19
Navigator	20
Dialpad	21
Different display interfaces	23
Conversations	23
Main menu	23
Presence	24
Context-dependent displays	26
Action with Softkey	26
Action via dialpad	27
Action with navigation key	27
Action for Dialogue	28

Operating your OpenScape Desk Phone CP600/CP600E . . . 29

Navigating in menus	29
Conversations	30
Opening details of a conversation or conducting a call	31
Editing conversations	32
Searching for conversations or contacts	36
Filtering conversations	37
Display the history of a conversation	39
Deleting conversations	40
Telephony interface	41
Telephony view	41
Programmable keys	43
Programmable keys in the Favorites menu	43
Programmable keys on the OpenScape Key Module 600	46
Meaning of LED displays on Feature keys	46
Display function of the function keys	47
User settings	48
User settings	49
Administration	53

Setting up the phone 56

Display	56
Display adjustment	56
Display brightness	56
Select language for display user guidance	57
Energy saving mode	58
Contrast for the OpenScape Key Module 600E	59
Brightness for the OpenScape Key Module 600E	60
Idle screen	61
Idle screen activate	61
Upload your images for Idle screen	62
Screen type set-up for the Idle screen	62
Automatic start of the Idle screen	63
Set up display time for Idle screen	64
Audio	65
Change connection volumes	65
Adjust ringer volume in call or while idle	65
Deactivate the ringer	66
Activate alert tone	66
Room acoustic	67
Ringer	68
Setting headset port use	69
Set Presence	70
PresenceSetting Status	70
Switch off away status	71
Call settings	72
Rejecting/accepting second calls (call waiting)	72
Activating/deactivating call waiting	72
Door release	73
Set up speed-dial keys	74
Switch night answer on and off	75

Programming function keys 76

Function keys setup	76
Overview of functions.	77
Set procedure key	79
Selected dialing key configuration	80
Deleting key programming	81

Making calls 82

Receiving a call	82
Answering a call via the handset	82
Answering a call via the loudspeaker (speakerphone mode)	82
Answering a call via the headset	82
Rejecting calls	82
Taking calls for colleagues.	83
Spoken via loudspeaker.	84
Answer calls from the door terminal / press the door opener	85
Switch microphone on/off.	86
Ending a call	86
Dialing/Calls	87
Off-hook dialing	87
Dial with the handset on-hook	87
Dial with connected headset	88
Choose from conversations	89
Dialing with the selected dialing key	89
Redial	89
Calling back a missed call	89
Dial with central speed dial numbers	90
Dial with speed-dial keys	90
Speaking to colleagues directly via loudspeaker	91
Automatic connection setup/hotline	91
Send information (message)	91
Leave messengeresponse text	93
Deleting response texts	94
Assign phone number (not for U.S.)	94
Rollover	94
Forwarding calls	95
Use variable call forwarding	95
Use CFNR	97
Switch on forwarding to the office	99
Using callback	100
Save callback	100
Accepting a callback	100
Check/delete saved callback	101
During the call	102
Switch to speakerphone.	102
Switch to handset.	102
Open listening in the room during a call.	102
Using second call (call waiting)	103
Call second individual (request).	104
Parking a call	105
Call holding	106
Being on hold	107
Start a conference	108
Carry out DMTF-suffix/dial tone	110

Using Bluetooth	111
Discoverability	111
Pairing	111
Pairing NFC-enabled devices	111
Using a Bluetooth headset	112
Connecting the Bluetooth headset	112
Testing a Bluetooth headset	113
Transferring contacts	114
Receiving a vCard	114
Sending a vCard	115
Using a Bluetooth conference phone	116
Connecting a Bluetooth conference phone	116
Testing the Bluetooth conference phone	117
Using a Bluetooth device	118
Incoming HFAG call	118
Connected HFAG call	118
Outgoing HFAG call	119
HFAG call states in Main Menu Screen	120
HFAG call states in Conversations Screen	121
Anonymous mode	122
Using Bluetooth keyboard	123
Keyboard pairing modes	124
Using Bluetooth "Remote button"	125
Trigger on reconnect	127
Bluetooth settings	128
Activating and deactivating Bluetooth	128
Changing the Bluetooth name of your OpenScape CP600	128
Managing Bluetooth devices	129
Blacklist for Bluetooth devices	134
Removing a Bluetooth device from the blacklist	135
Eddystone Beacon	135
Making calls in the team/manager/secretary's office	137
Trunks	137
Line Seizure	137
Line/trunk keys	138
Accepting calls on the line/trunk keys	138
Dialing with line/trunk keys	138
Hold a call on a line/trunk key and then accept again	139
Alternately phone on several lines	139
MULAP conference release	140
Direct station selection keys	141
Directly call team members	142
Transferring an existing call	142
Pick up call for another member	142
Forwarding calls for lines	143
Switch calls directly to manager	145
Group calls / hunt group	147
Group call on/off	147
Accepting calls for a colleague in the team	149
Connecting call	149
Calls on Universal Call Distribution (UCD)	151

Private sphere/security 154

Activating/deactivating idle function	154
Activating/deactivating do not disturb	154
Caller ID suppression	155
Security	156
Protecting the phone from misuse	156
Locking a different phone to prevent misuse	157
Saving personal lock code	158
User password	159
Locking the phone	161

Other settings and functions 163

Connection costs	163
Display connection costs for your phone (not for U.S.)	163
Query connection costs for another phone (not for U.S.)	164
Calling with call charge assessment	165
Appointment function	166
Save appointment	166
Using timed reminders	167
Using a different phone for a call in the same way as your own	168
Using a mobile connection to a different phone	169
Mobility variants	169
Logging on to the "guest phone"	170
Transfer connection to next phone	171
Logging off from the "guest phone"	171
Incoming fax message/message on the answering machine	172
Resetting services/functions (complete phone deletion)	172
Activating functions for another phone	173
Using system functions externally	
DISA (Direct Inward System Access)	174
Controlling connected computers/programs/phone information service	175
Searching for people (not for U.S.)	176

Special functions with networking 177

Logging out from hunt group/group call	177
Tracing call forwarding	178
Using night service	179
Ringling group	180
Releasing the door	181

Local phone settings 182

Audio settings	182
Volumes	182

Set local ringtones	183
Select and configure call type	183
Ringtone mode	184
Insecure call alert	185
Block dialing for outgoing calls	185
Setting up Exchange access	186
Configuring the connection to UC	187
UC Journal	187
OpenScape UC Voicemail	188
SD-Card	191
Displaying network information	192
Resetting user data	194
Initiating the reset	194
Web interface	195
General	195
Launching the web interface	195
Licenses	195
Administrator pages	195
User pages	196
User menu	196
Fixing problems	199
Responding to error messages on the display	199
Contact partner in case of problems	200
Local user menu	201
Opening the user menu on the phone	201
User menu display	201
Key terms	203
Functions and codes in overview (alphabetical)	207
Display icons in the Notification area	211

General information

About this manual

This document contains general descriptions of the technical options, which may not always be available in individual cases. The required features must therefore be individually defined in the terms of the contract.

If a particular function on your phone is not available to you as described, this may be due to one of the following reasons:

- The function is not configured for you and your telephone. Please contact your system administrator.
- Your communication platform does not feature this function. Please contact your sales partner for information on how to upgrade.

This User Guide is intended to help you familiarize yourself with the OpenScape Desk Phone CP600/CP600E and all of its functions. It contains important information on the safe and proper operation of the OpenScape Desk Phone CP600/CP600E. These instructions should be strictly complied with to avoid operating errors and ensure optimum use of your multifunctional telephone in the network.

This User Guide should be read and followed by every person installing, operating or programming the OpenScape Desk Phone CP600/CP600E.



For your own protection, please read the section dealing with safety in detail. Follow the safety instructions carefully in order to avoid endangering yourself or other persons and to prevent damage to the unit.

These operating instructions are designed to be simple and easy to understand. Providing clear step-by-step instructions for operating the OpenScape Desk Phone CP600/CP600E.

Administrative tasks are dealt with in a separate manual. The Quick Reference Guide contains quick and reliable explanations of frequently used functions.

Icons used in the manual

Tips



Refers to a setting established via the web-interface.



Indicates additional important information in relation to handling.



Indicates required intervention by the administrator.

Displays for describing operation

Selected action



Original illustration on display




Step-by-step illustration in the User Guide

A dark background is not used in the step-by-step illustration in order to ensure legibility in the User Guide.

The information area on the left is shown in a left-aligned field.



When an action is selected, it will be shown right-aligned in green. The action is executed by selecting the Softkey.

The selected function can alternatively be confirmed using the  key on the navigator (→ page 20).

Action not selected

Illustration on display



Step-by-step illustration in the User Guide


Decline call



If an action is not selected, it is shown right-aligned in a light color. The associated Softkey is also shown. The action can be executed by pressing the softkey without the action being selected.

Conversation display


When the phone is idle, the first entry in the conversation list is selected.

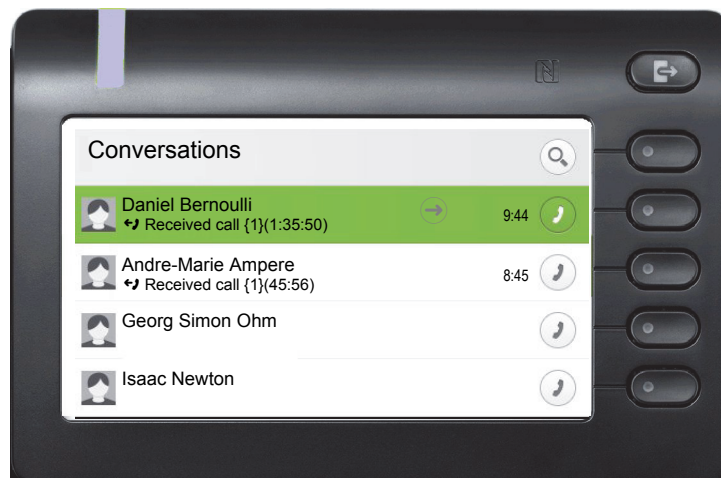


Information displayed for a selected conversation

Daniel Bernoulli 11:22
 Received call {1} (1:35:50)

If a conversation (contact and history at the same time) is selected in the list, it is highlighted in green. This description is only used if it aids understanding. This is the usually what is displayed:

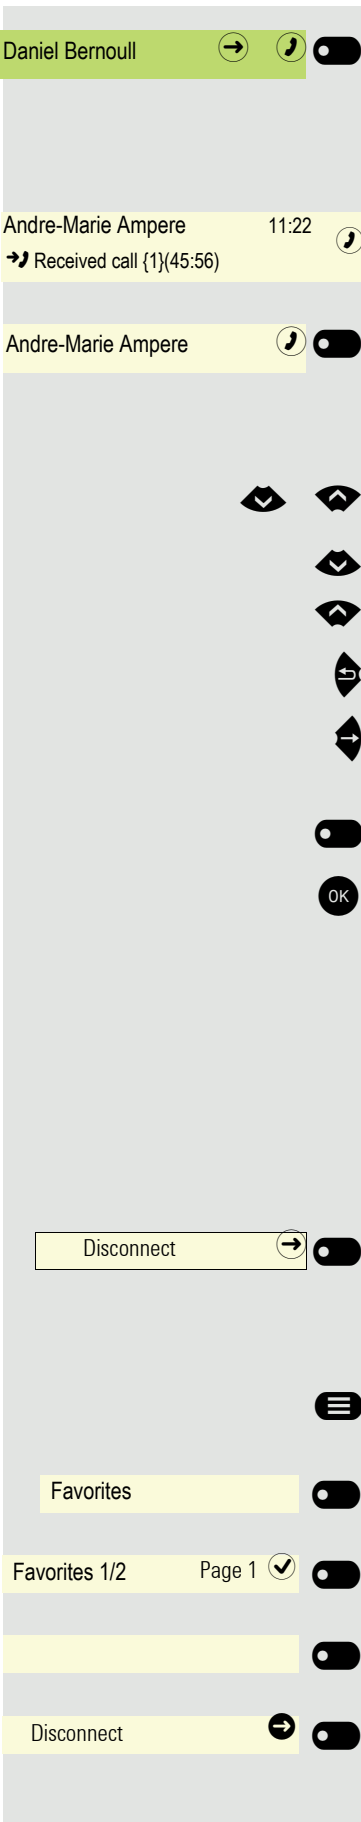

Confirm the selected conversation with the Softkey to establish the connection or with the  key to open the context menu.

Information displayed for a non-selected conversation

Conversations are displayed in a light color if they are not selected. This description is only used if it aids understanding. This is the usually what is displayed:

Call directly with the Softkey to establish the connection.

Navigation and action in lists

Make selection from the list and move entries in the list using the navigator keys.

Press and hold to skip to the end of the list.

Press and hold to skip to the start of the list.

Go back.

Open contacts and details. Switch to next lower level.

Execute the Softkey action in the list element.

Performs the same function as with the Softkey but only affects a selected element.

OpenScape Key Module 600

If an OpenScape Key Module 600 is connected, functions and phone numbers can be programmed on the keys.

The programmed function and selected dialing keys are illustrated as follows in the User Guide:

The OpenScape Key Module 600 key shown here is referred to as a Function key in the User Guide.

Function keys in the menu Favorites

If nec. Press key for main menu.

Open using the Softkey.

Select the required page with Softkey.

An unused function key in the Favorites menu.

An example being with the Function key assigned to the disconnect function,

Service



The service department can help you only if you experience problems or defects with the phone itself.

Should you have any questions regarding operation, your specialist retailer or network administrator will be glad to assist you. For queries regarding connection of the telephone, please contact your network provider.

If you experience problems or defects with the phone, please dial the service number for your country.

Intended use

The OpenScape Desk Phone has been developed as a device for voice transmission and connection via a LAN, and should be placed on a desk or mounted on a wall. Any other use is regarded as unintended.

Telephone type information

The identification details (exact product designation and serial number) of your telephone can be found on the underside of the base unit. Specific details concerning your communication platform can be obtained from your administrator. Please have this information ready when you contact the service department regarding faults or problems with the product.

Speakerphone quality and display legibility


- To ensure good speakerphone quality, the area in front of the telephone (front right) should be kept clear.
The optimum handsfree distance is approx. 50 cm.
- Proceed as follows to optimize display legibility:
 - Turn the phone and tilt the display so that you have a frontal view of the display while eliminating light reflexes.

Getting to know the OpenScape Desk Phone CP600/CP600E


The following sections describe the most frequently used controls and displays.

The User Interface of Your Telephone



1	You can make and receive calls as normal using the handset .
2	The graphic display permits intuitive operation of the phone → page 23. Please note that the screen is greyscale on CP600E.
3	Use the Menu key to open the main menu.
4	Use the Navigator to navigate through the applications on your telephone → page 20.
5	You can use the Softkeys to activate a function or open a menu → page 19.
6	The audio keys are provided to allow you to optimally configure the audio features on your telephone → page 19.
7	Incoming calls, new voice messages or missed calls are visually signaled via the Notification LED → page 46.
8	The dialpad can be used to enter phone numbers and write text → page 21.
9	Use the Out-of-Office / Call forwarding key to open a menu, for example in order to set up the variable call forwarding if UC is not used → page 24.
10	NFC transmitter (logo: ) for simple Bluetooth pairing → page 111 Please note that Bluetooth and NFC are available only on CP600.

Ports on the underside of the phone

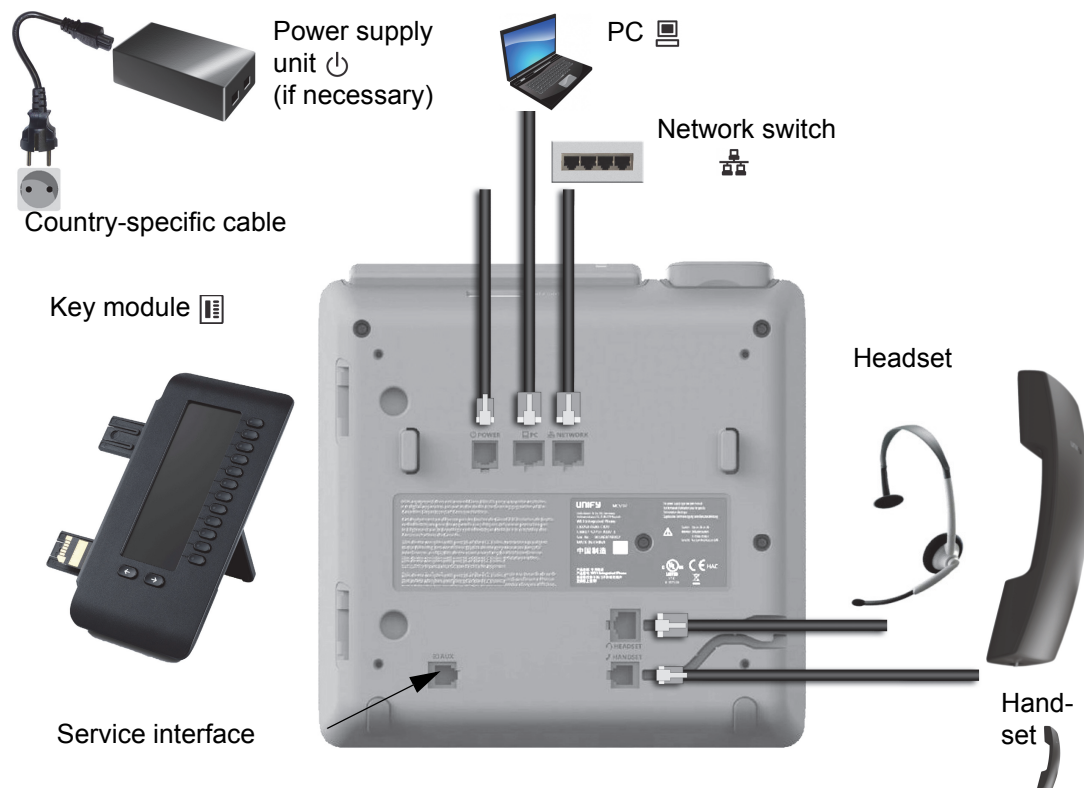

Properties of your OpenScape Desk Phone CP600/CP600E

Display type	4.3" color graphic display, 480 x 272 pixels. Please note that the screen is greyscale on CP600E.
Illuminated display	✓
Full-duplex hands-free listening	✓
Headset	✓
Bluetooth 2.1 BR/EDR Bluetooth 4.1 LE → page 111	✓ Please note that Bluetooth is not available on CP600E.
10/100/1000 Mbps Switch → page 18	✓
Web-Based Management (WBM) → page 195	✓
Notification LED (red/green/orange)	✓
OpenScape Key Module 600 Optional	✓

Using network ports more efficiently

The OpenScape Desk Phone CP600/CP600E has a Gigabit Ethernet switch. This means that you can also connect a PC with a Gigabit LAN port to the LAN directly via the phone. The option for connecting the telephone and PC must first be activated on the telephone by your administrator.



Using this connection option saves one network port for each switch used and requires shorter network cables.

OpenScape Key Module 600

The OpenScape Key Module 600 is a key module attached to the side of the phone that provides an additional 12 illuminated, programmable Feature keys at two levels. These keys can be populated and used according to your needs → page 43.



The diagram shows the OpenScape Key Module 600. You can attach up to four OpenScape Key Module 600 to OpenScape Desk Phone CP600 and up to two OpenScape Key Module 600s to OpenScape Desk Phone CP600E.

Keys

Softkeys



Key	Function when key is pressed
	Activates the function of the left display option or opens another menu. Used in the Favorites menu as a Feature key → page 43.

Audio controls

Audio keys



Key	Function when key is pressed
	Activate/deactivate the loudspeaker → page 82.
	Use headset → page 82.
	Activate/deactivate microphone (also for speakerphone mode) → page 86.

Volume

Use the controls to adjust the properties of your phone, for example the volume.



Mode keys











You can switch to the relevant application using these keys.



Key	Function when key is pressed
	Switch to the main menu → page 23.
	Switch to Presence and back → page 24.

Navigator


This control allows you to navigate in lists and perform actions in the selected area.

Operation	Functions when key is pressed
 Press the  key.	In conversation mode: <ul style="list-style-type: none"> • Open the subscriber information In settings: <ul style="list-style-type: none"> • Go down one level
 Press the  key.	In lists and menus: <ul style="list-style-type: none"> • One level back In input fields: <ul style="list-style-type: none"> • Delete character to the left of the cursor
 Press the  key.	In lists and menus: <ul style="list-style-type: none"> • Scroll down • Press and hold: Skip to the end of the list/menu
 Press the  key.	In lists and menus: <ul style="list-style-type: none"> • Scroll up • Press and hold: Skip to the start of the list/menu
 Press the  key.	Execute an action for the selected entry.

Dialpad

Numeric input

If you enter a number when the telephone is in idle mode, for example, an input field opens automatically for numeric input. Only the digits 0 to 9 as well as the * and # characters can be entered via the keypad in "123 mode" (indicated at the left margin of the input field).

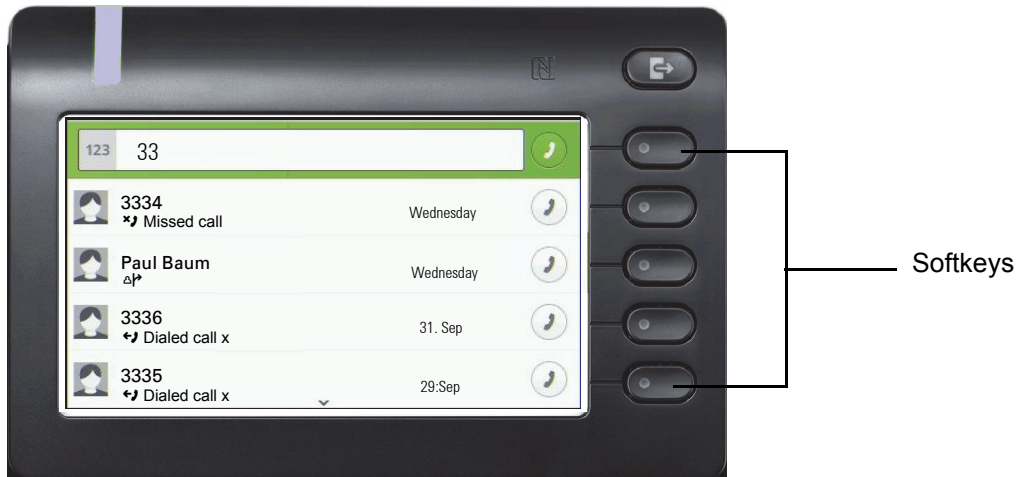


➡ Alphabetic labeling of dial keys is also useful when entering vanity numbers (letters associated with the phone number's digits as indicated on the telephone spell a name, e.g. 0700 - PATTERN = 0700 - 687837).

Text input

In cases where text input is possible, you can use the dialpad to input text, punctuation, and special characters in addition to the digits 0 to 9 and the hash and asterisk symbols. To do this, press the numerical keys repeatedly.

Example: To enter the letter "U" in the "Company" field, press the number **8 TUV** key on the dialpad twice. All available characters for this key are displayed during input. After a short while, the character in focus is displayed in the input field.

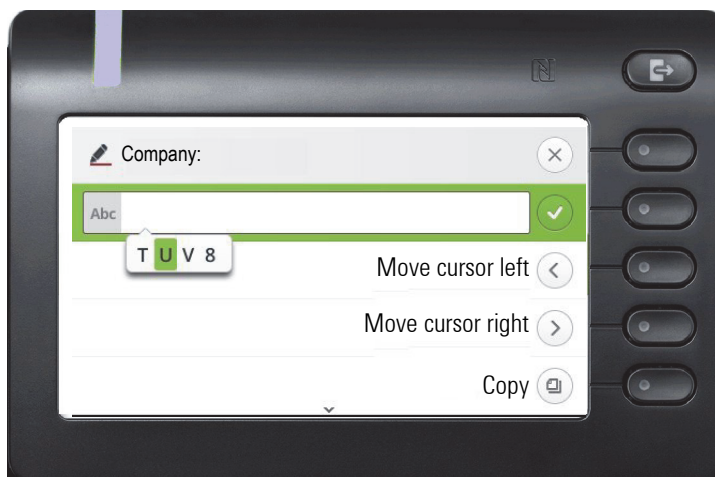

➡ If you want to enter a number in an alphanumeric input field, hold down the corresponding key to bypass the character selection.

Complete your input:



Press the Softkey for to complete your input.

Character overview (depends on the current language setting)

Key	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x	14x	15x	16x	17x
	1	␣	;	=	\$	\	&	[]	{	}	%					
	a	b	c	2	ä												
	d	e	f	3													
	g	h	i	4													
	j	k	l	5													
	m	n	o	6	ö												
	p	q	r	s	7	ß											
	t	u	v	8	ü												
	w	x	y	z	9												
	0	+															
	.	*	¹	#	,	?	!	'	"	+	-	()	@	/	:	-

Multi-function keys


Key	Function during text input	Function when held down
	Type special characters.	<ul style="list-style-type: none">• 2 seconds: Ringer off• 3 seconds: Beep sound instead of ringer
	Switch between uppercase and lowercase text and number entry. <ul style="list-style-type: none">• Abc mode• ABC mode• 123 mode	Activate the telephone lock → page 161.
	Type special characters (not in 123 mode)	

Different display interfaces


Your OpenScape Desk Phone CP600/CP600E is fitted with a color/greyscale graphic display → page 17, in which different contents are displayed depending on the particular situation.


Conversations


The conversations list is called in the main menu with the Conversations option and is a collection of contact data and data from the call log. See from → page 30 for detailed information.

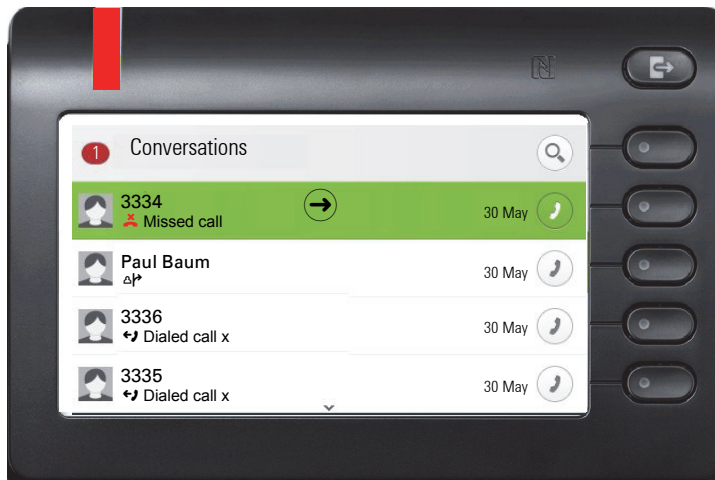

Main menu

Use the  key to access the main menu from any situation. The time, day of the week, and date, as well as the subscriber's own phone number, are displayed in the Notification area. The main menu can do much more, as can be seen from the screenshot. As the name suggests it is the starting point for the entire menu tree.

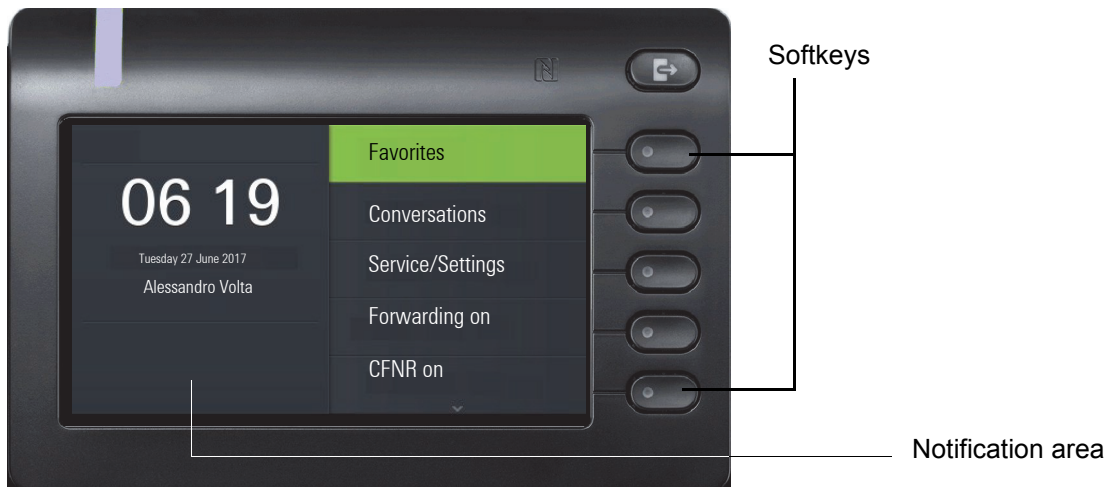

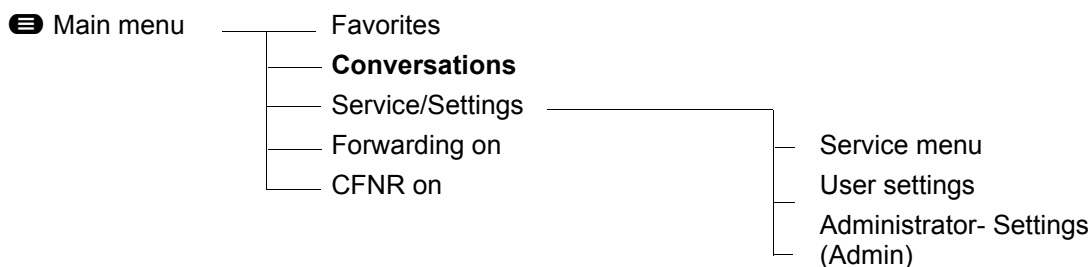


Moreover, different icons represent different situations and options:


Icon	Meaning
	The ringer is deactivated → page 22
	The ringer is set to a beep → page 22
	The "Do not disturb" function is activated → page 154
	The phone lock is activated → page 161

Presence

If the access is configured as UC user on your phone (ask administrator) and you are logged on to this server → page 187, you will see for example in the top left in the Notification area Presence the status symbol for Office → page 70.

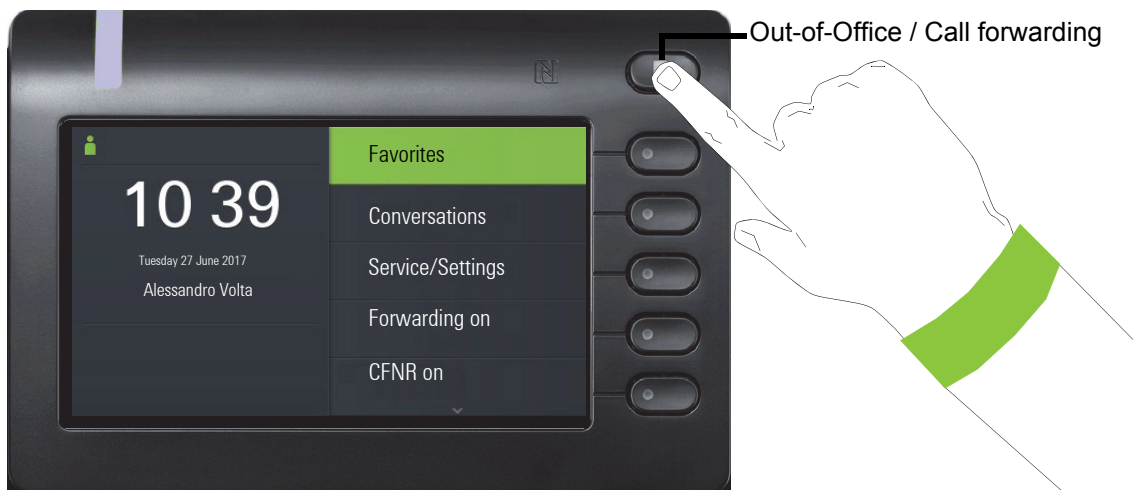

To access the "Presence" menu, press the Out-of-Office / Call forwarding key via the Soft-keys. then you will see the following menu:

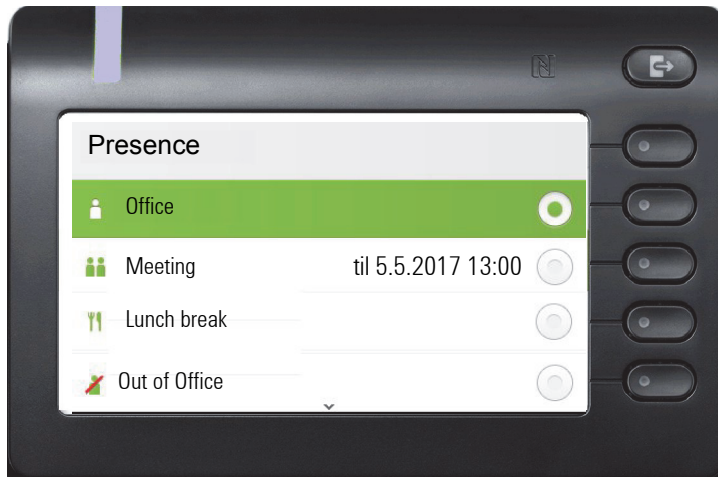

The menu has another five options.

- Break
- Sick
- On vacation
- At home
- Do not disturb

In the submenus of the options you can choose from different values for the duration → page 70. Personal Presence via the phone is temporarily suspended with call forwarding or do not disturb.

If UC is not set up, you get a menu for variable call forwarding with the options: Variable: All calls
Variable: External Calls
Variable: Internal calls.




Context-dependent displays

Depending on the situation, the graphic display on your OpenScape Desk Phone CP600/CP600E shows different content, to which you can respond intuitively.




Action with Softkey

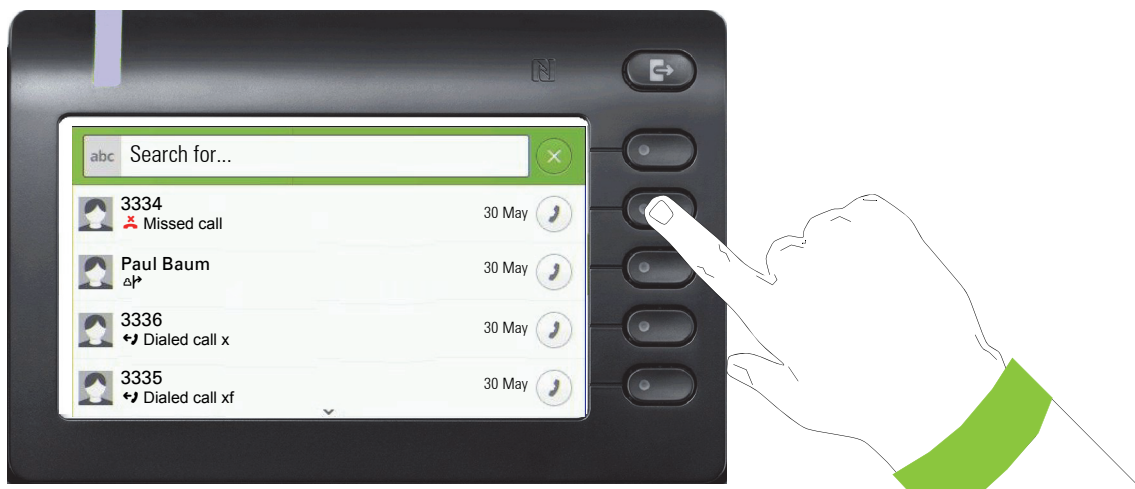

Press the top softkey to start an alphanumeric search.



Use the Softkey to dial the respective subscriber.

You can choose a conversation beforehand using the navigator keys  and  and open the details of the conversation with the  key → page 31.


Action via dialpad


Press any key on the dialpad to start dialing a phone number with automatic phone number search.



As soon as you enter the first digits, an input field opens for selecting the phone number and you will be shown conversations that match the input to date in the corresponding positions. If the conversation is already shown in the list before your input is complete, you can dial the number immediately using the associated Softkeys → page 31 or start a call with a new number.


Action with navigation key

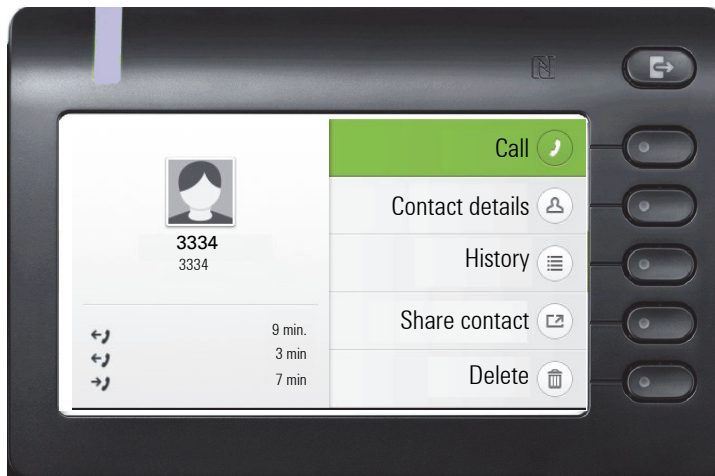


You can open a selected conversation using the navigator's  key in order to see the associated details → page 26.

Action for Dialogue

Choose an option such as "Send message" from the main menu, open it in the Notification area of the "Feature dialog" with the input prompt "Message to:."

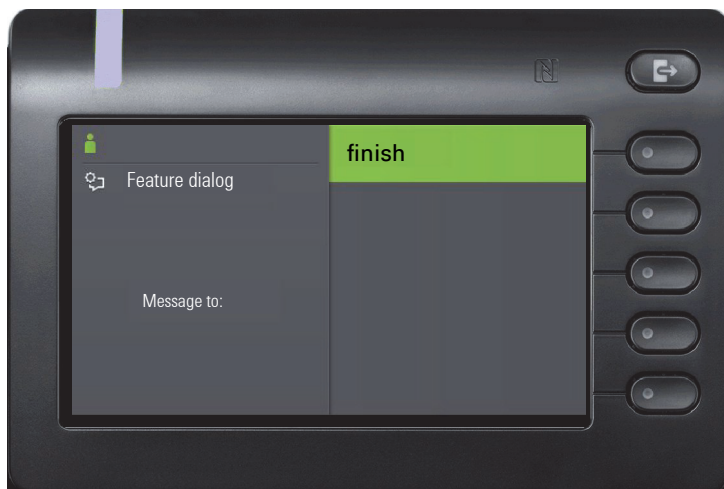

Enter the number of the target subscriber here,

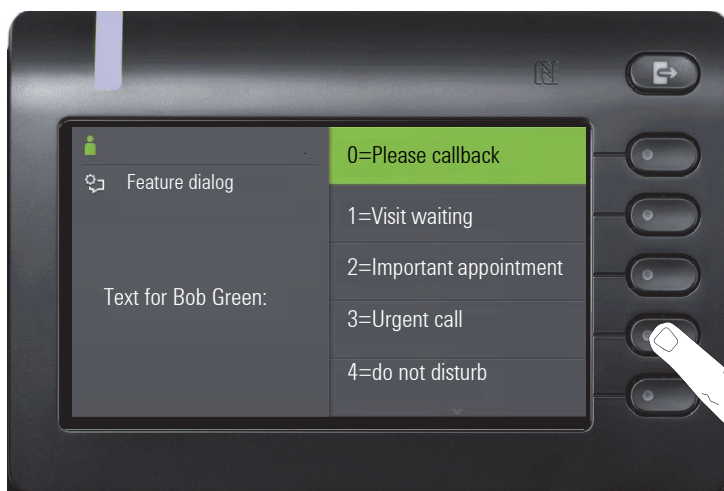

Select the desired option



And send the info to the target subscriber.

Operating your OpenScape Desk Phone CP600/CP600E

The following descriptions provide an overview of how to operate your phone.



Before looking at the functions and settings, you should set up the User password to protect your phone against unauthorized use → page 159.

Navigating in menus


Activating an application

You can use the mode keys → page 19 to toggle, for example, between the main menu and Conversations or to open the Presence menu.

Browsing lists

You can use the navigator keys to scroll through entries and confirm the functions you want → page 20.

Opening context menus

If the arrow  appears beside a selected entry, a context menu is available for this entry → page 26.


Conversations

A conversation is a contact with a call history. New conversations are created or updated

- a previously answered call
- a outgoing call
- a missed call
- a new voicemail
- an Exchange entry following automatic synchronization

A telephone number is automatically supplemented with a name if this information comes from the communication system or the telephone number is found in the system telephone book or in a company directory (LDAP).



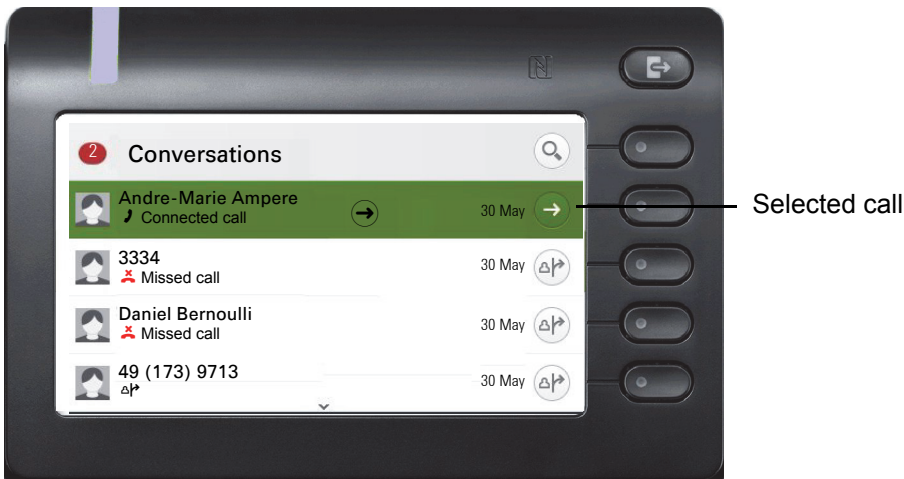

The list is ordered chronologically based on the last interaction. The latest interaction appears at the top of the list. Active calls are displayed before the conversations.





The status of a conversation is displayed with icon and text.


Icon	Text
	Connected call
	Missed call (current)
	Missed call (old)
	Dialed call
	Answered call
	New voicemail
	Old voicemail

Opening details of a conversation or conducting a call


You can open a selected conversation using the navigation key  or start a call using the softkey  or the navigation key . You start a call using the softkey  if the conversation has not been selected.

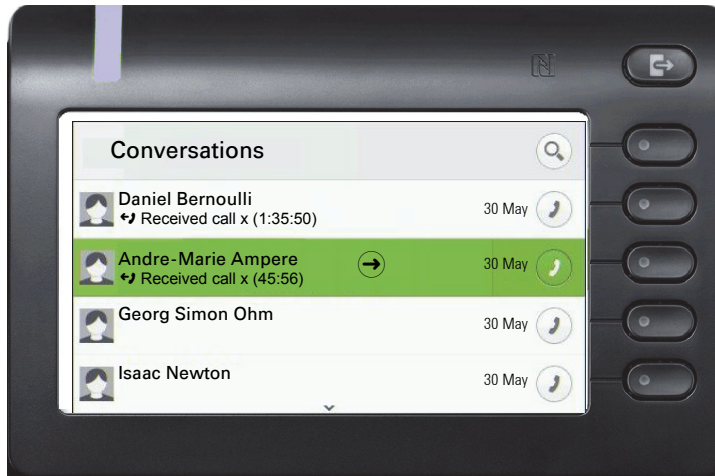


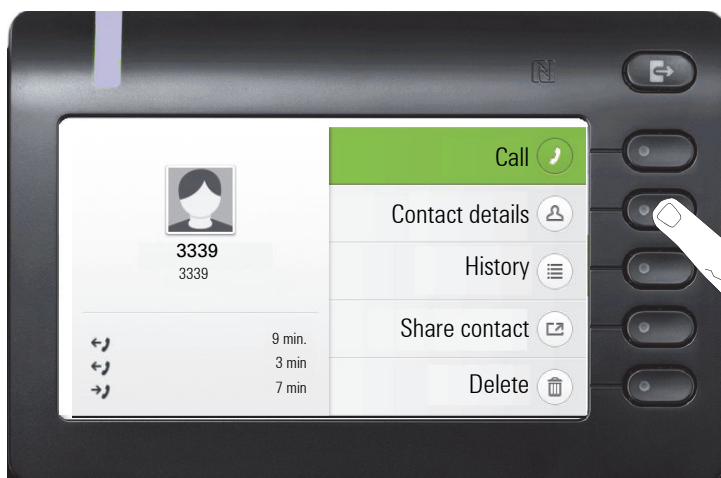
If you open the details of the conversation using the  key, you will be shown the following for example:

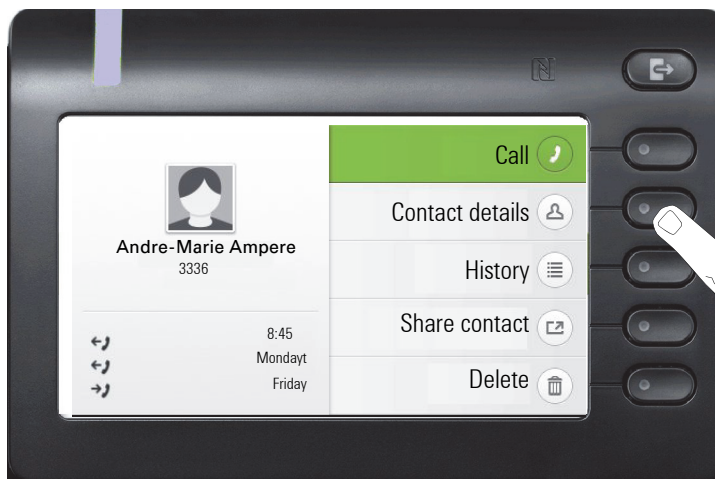

Editing conversations

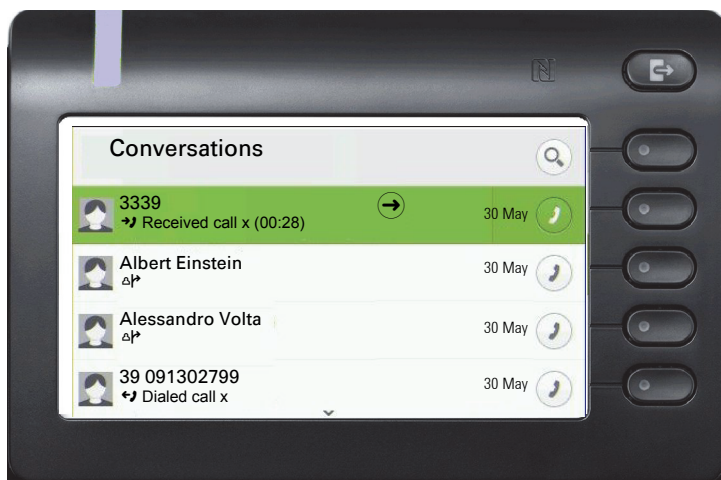


Open the details of the conversation using the  key.




Use the Softkey to open the "Contact details" menu.




Press the Softkey for  to access edit mode. You can complete the following fields for a contact:


- Last name:
- First name:
- work


- work
- Mobile:
- Home:
- Company:
- Address 1
- Address 2
- Role:
- E-mail:
- Avatar:

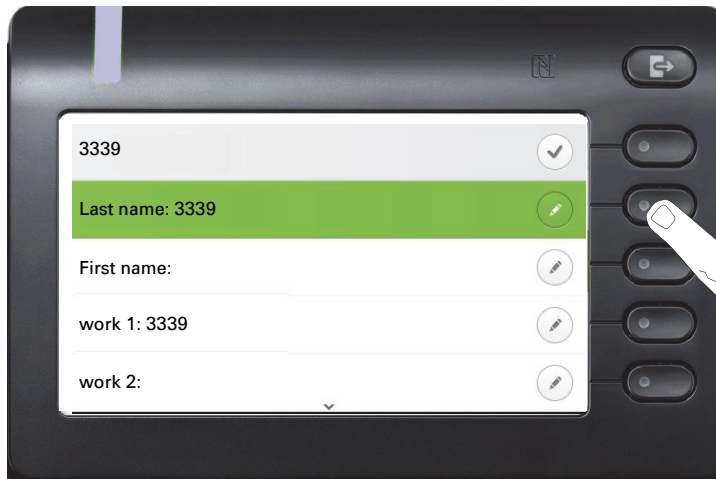

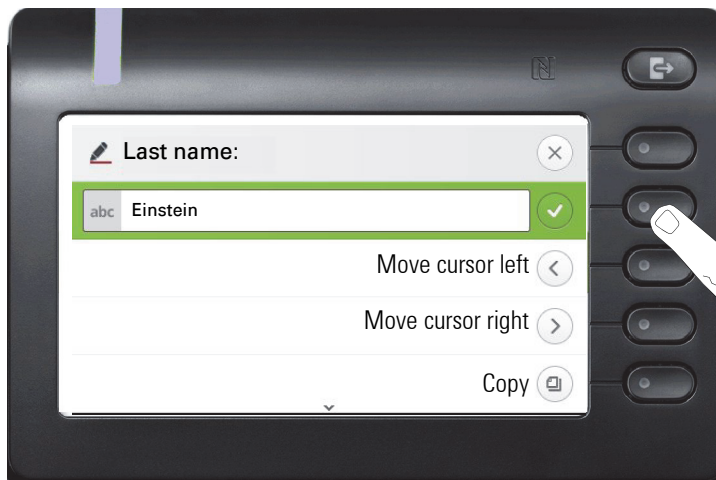


Press the Softkey for  to enter the last name.

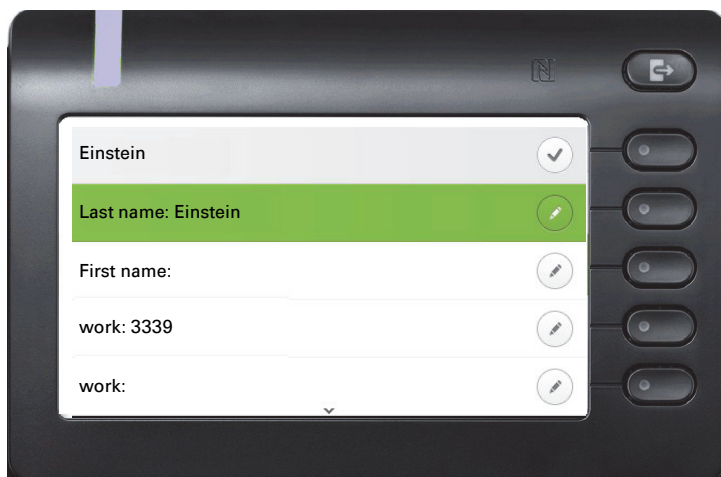


Delete the digits using the  key and enter the last name. Press the Softkey in the input field to complete the input for this field.



Use the  or  key to switch, for example, to "First name" and enter the first name here if appropriate.

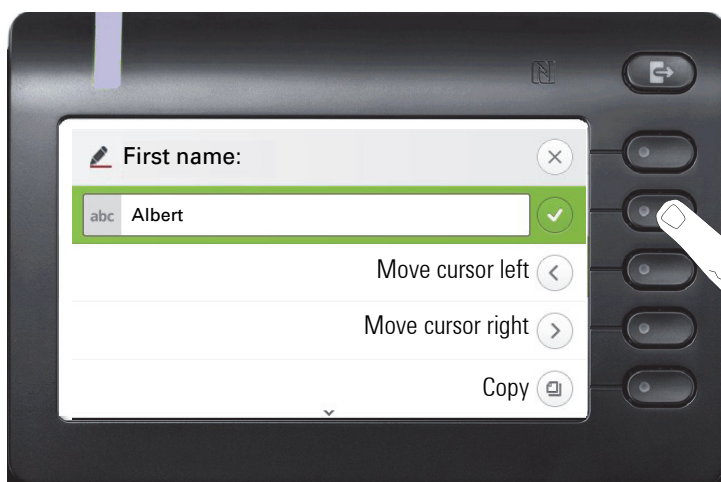

Enter the first name and complete the input for this field with the Softkey.

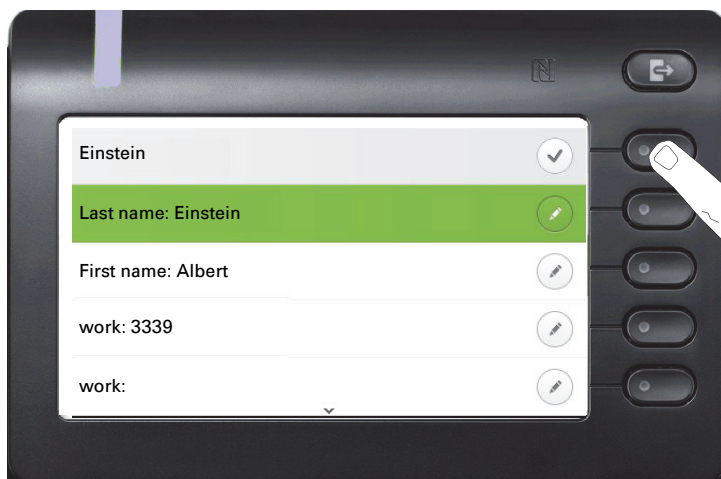

Save the contact data. You can add missing entries subsequently. The following information is shown on the display, for example, the next time you call this contact:



These inputs or changes to existing information are stored locally in the phone.

Searching for conversations or contacts

There are several ways to search for conversations or contacts. If you know the telephone number, you can,

lift the handset or


press the speaker key or


press the headset key

and begin entering the digits.



You can immediately dial a located subscriber whose phone number contains the number 33 in this case, for example, by pressing the Softkey.

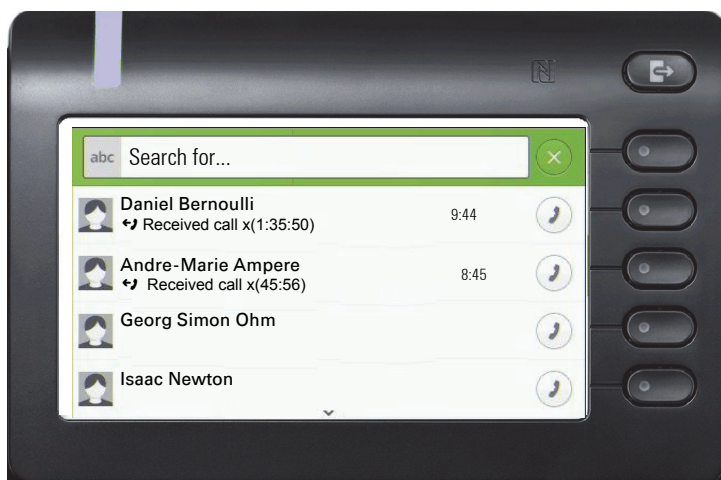

You can start a targeted alphanumeric search for a contact in any directory (telephone, system telephone book, Exchange or LDAP server) using the first softkey  in the conversation list.

Use the  key to change from alphanumeric to numeric.

Filtering conversations


When you want to filter conversations, it is possible to do so from the List options screen. Initially, the filter is non-applied, which means it is set to "Show all calls (All)" and will display all conversation list entries of any call type.

Use the "Filter" action on top shortcut key. This key is used to switch between conversation types.

Pressing the top key will display a filtering tooltip box that shows possible call records and types:

- All - all conversation list entries of any call type
- Missed - list of all missed calls
- Received - list of all received and forwarded calls
- Dialed - list of all dialed calls
- Contacts - contacts with no associated call records
- Other calls - active call, voice mails and ignored pickup


After selecting filter, header should be changed according to selecting.

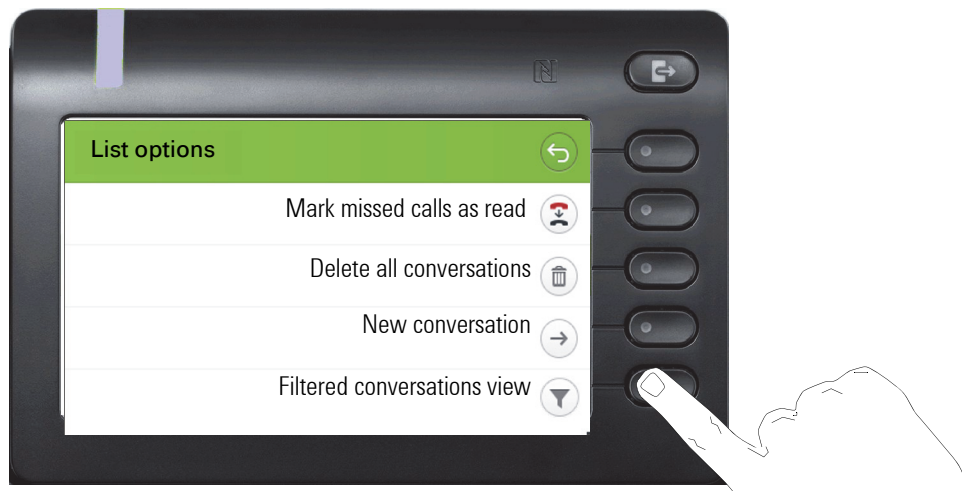







Display the history of a conversation

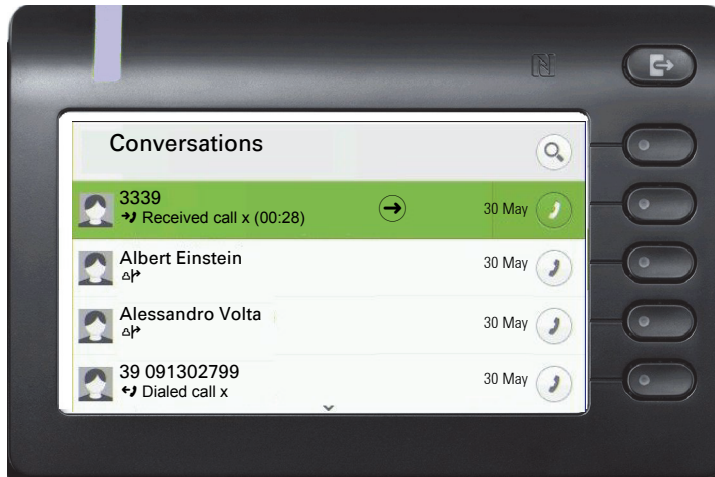
The current history of a conversation is shown directly in the conversation list. The histories of other calls can be viewed under Details or also directly with the History option during a call.

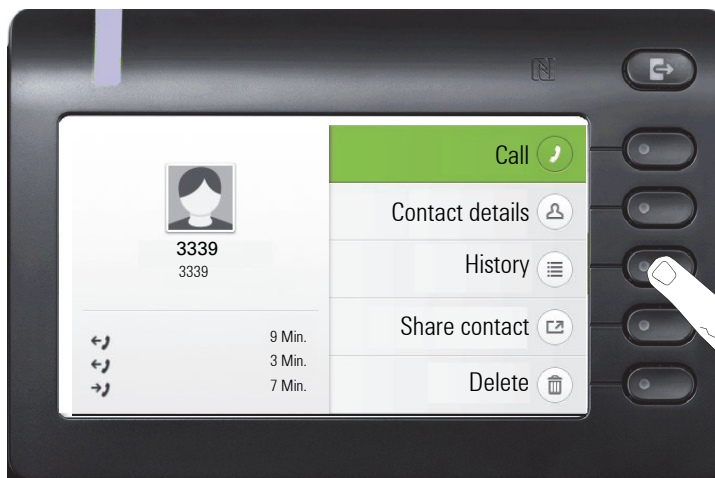

Open the details of the conversation using the  key.





The last three histories are shown in the field on the left below the name/subscriber number. Press the Softkey for  to view a list of the last 10 possible histories. Then scroll if appropriate using the  or  key.

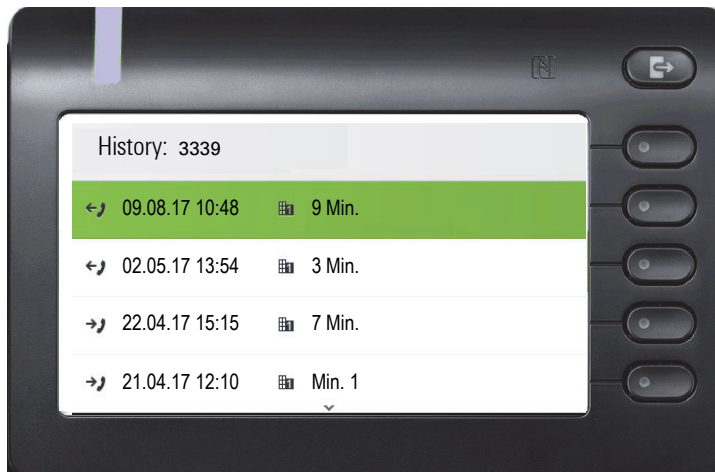



Deleting conversations

If you have for example selected a subscriber mistakenly and you do not wish to call them and must hang up, this call will appear in your call history. You can delete this entry again immediately. Entries for incoming calls that you no longer need or entries from V-Cards can also be removed from the list.

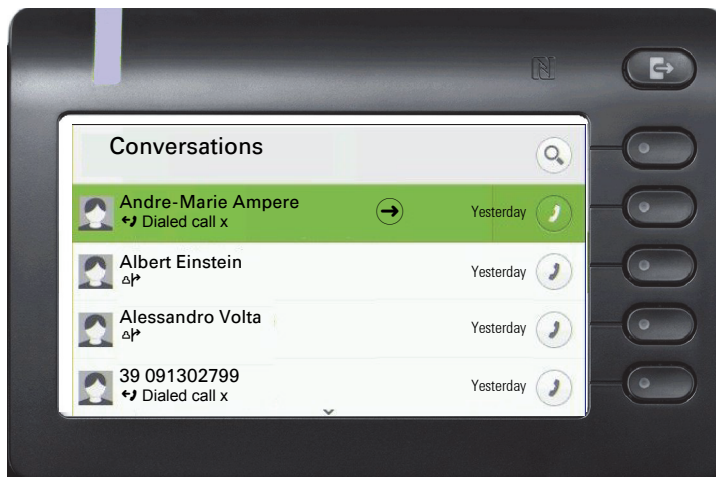

Open the relevant entry using the navigator key .

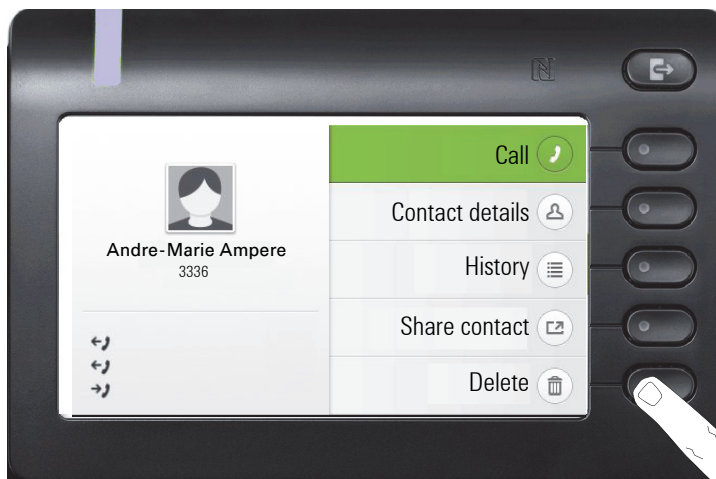


Press the Softkey for  to delete the entry. There is no confirmation prompt.

Telephony interface

Telephony view

Incoming call


Your phone rings and the Notification LED flashes. In addition to the "classic" telephone features, additional information and functions are offered on the display:

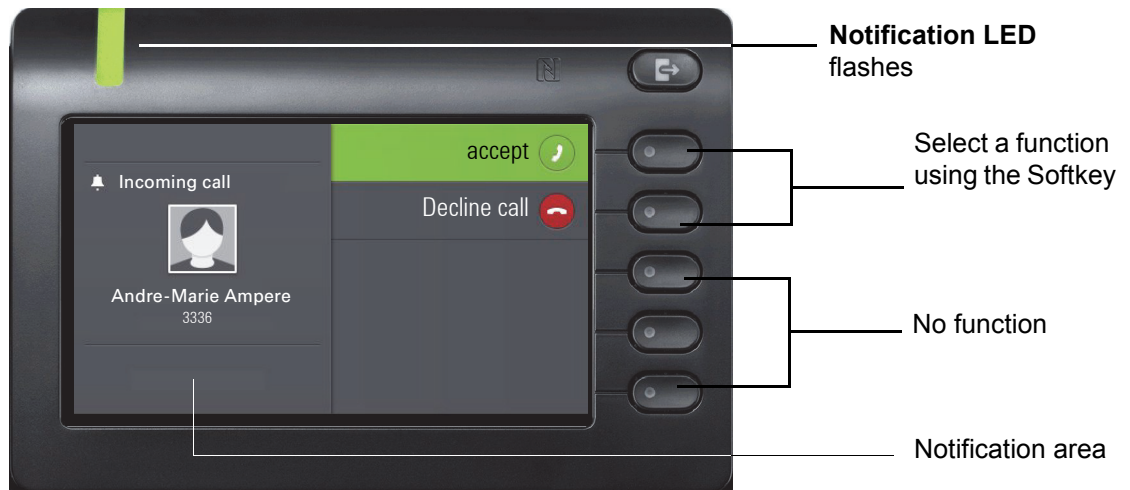




When conducting a call:




Switching to a different menu during a call

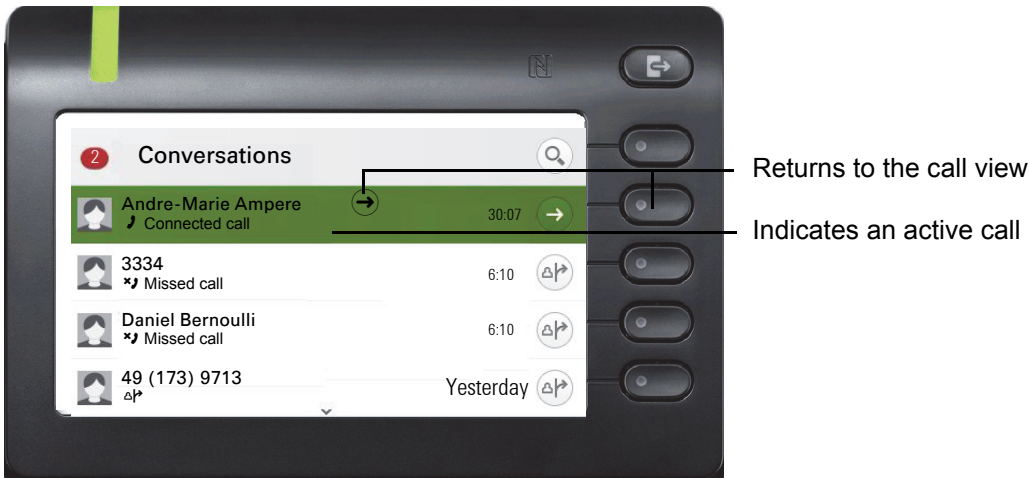





You can use the  key while on a call to switch to the Conversations menu.

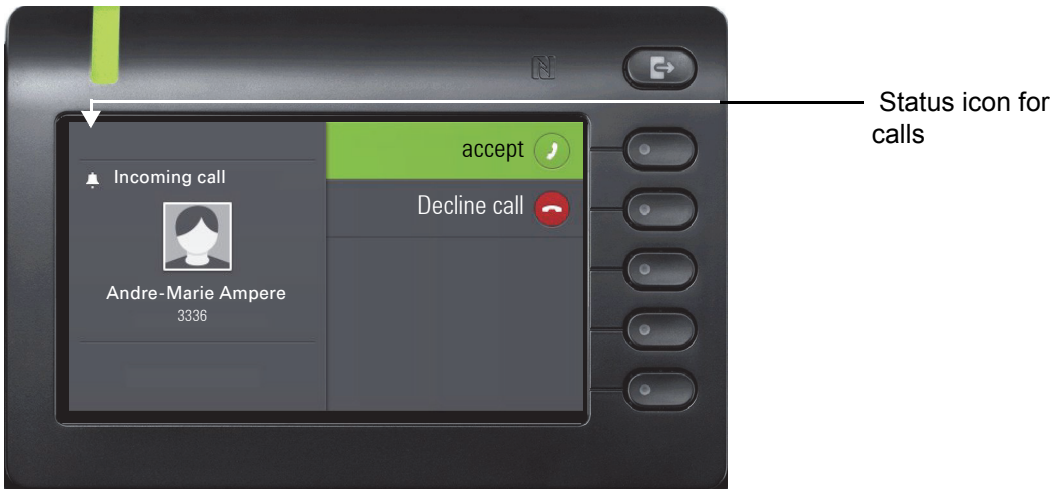

Use the  key to open the main menu and from there, for example, change the Brightness of the display in the Settings. If you want to activate Do not disturb quickly, you can use the  key to switch temporarily to the Presence menu and then return.

Icons in call states



Icon	Meaning
	The phone rings
	After dialing, the other subscriber's phone rings
	The call is active.
	Your call partner has placed the call on hold.
	The voice connection is secure.
	The voice connection is not secure.

Programmable keys

Programmable keys are available to you in the Favorites menu or on an optionally connected OpenScape Key Module 600 → page 46.


Programmable keys in the Favorites menu

Through the Favorites menu you have 16 programmeable keys (four sites for each of the four keys), which you can save functions and phone numbers to. You can program preferred functions that are not offered in menus. It makes sense to assign a key to "Layer switching" to reach the second level. To program this key, follow these steps:




Open the following menu using the Softkey for Favorites:



Press the Softkey for  to set up the first page with four possibilities.




Press the second Softkey to populate the first of four function keys on page 1.

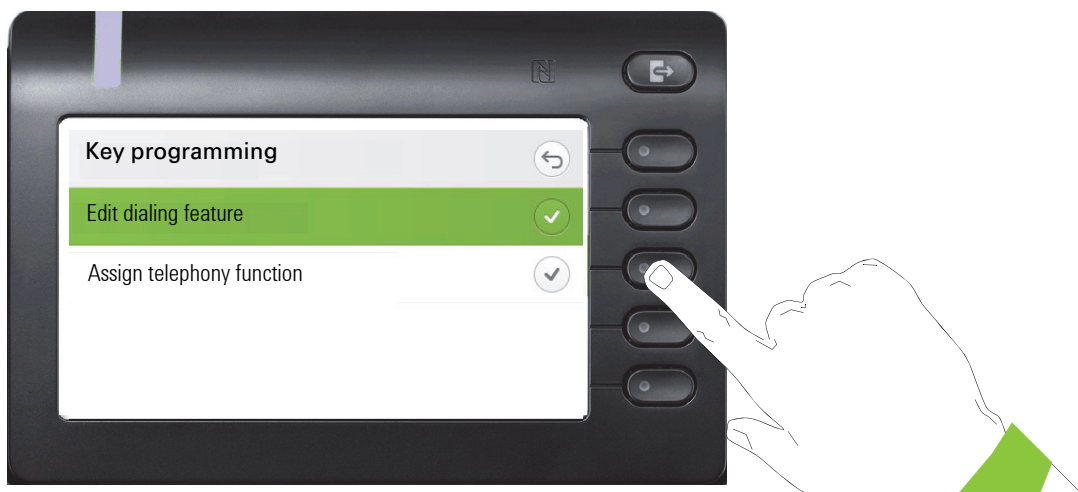


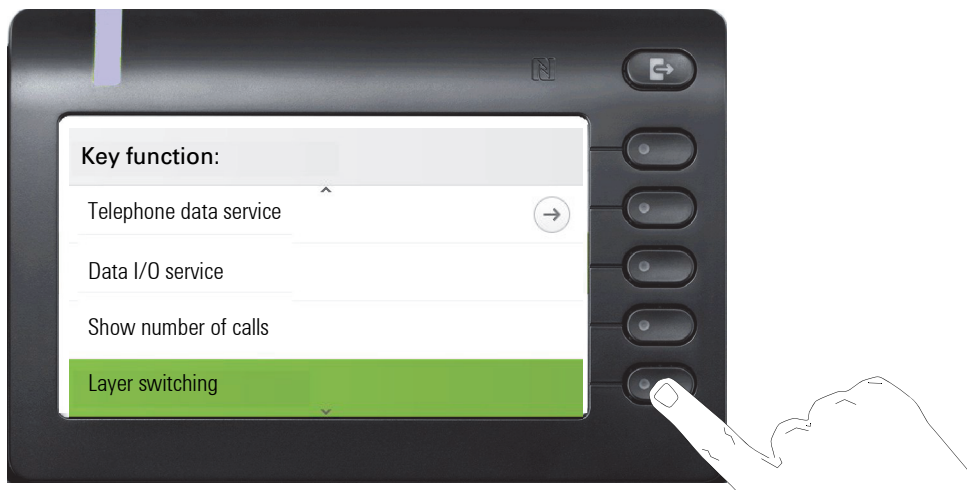
Press the second Softkey to switch to the list of functions.




Use the  key to select the "Modify key." Confirm with the Softkey.

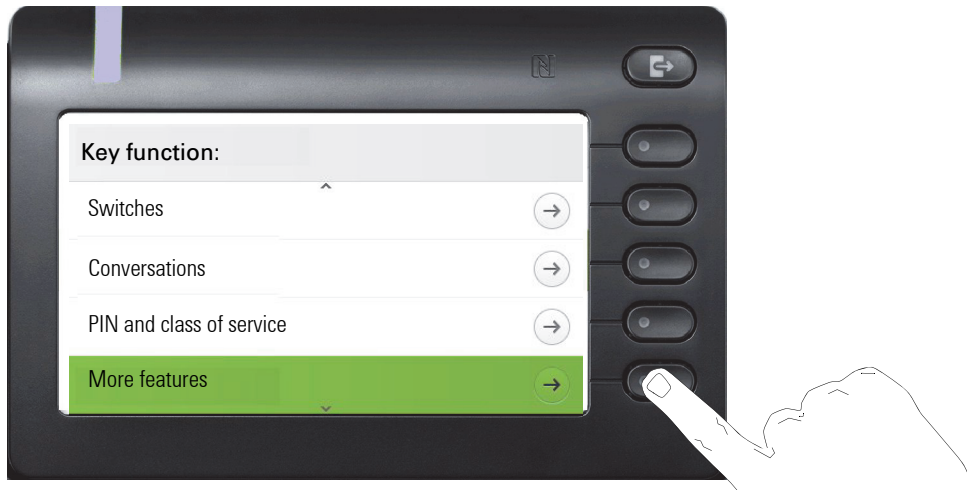

Use the  key to select "More features." Confirm with the Softkey.



Use the  key to select "Layer switching." Confirm with the Softkey.




If you prefer not to change the standard "Layer switching" label, simply finish with "finish."



The "Layer switching" function key is now configured and can be used.

Programmable keys on the OpenScope Key Module 600

The OpenScope Key Module 600 has 12 keys to which you can assign functions or numbers at two levels. As such the first level can be assigned with frequently used functions and the second level can only be assigned with RNR keys.

 Increase the number of programmable function or selected dialing keys by connecting an additional key module → page 18.




Depending on how they are programmed, you can use the keys as:

- Feature key → page 76
- Selected dialing key → page 80
- Linekey → page 138
- Direct station selection (DSS)key → page 141

The OpenScope Key Module 600 has display lines, each of which is assigned to a key. The name of the function or a destination, an action icon, and a status icon are displayed.


The status of a function is shown by the LED display for the corresponding key.

Meaning of LED displays on Feature keys


Status LED		Meaning of Feature key
	Off	The function is deactivated.
	LED is flashing ¹	Indicates the status of the function (e.g. green or red).
	On	The function is activated (e.g. green or red).

¹ In this manual, flashing key LEDs are identified by this icon, regardless of the flashing interval. The flashing interval represents different statuses, which are described in detail in the corresponding sections of the manual.

Display function of the function keys

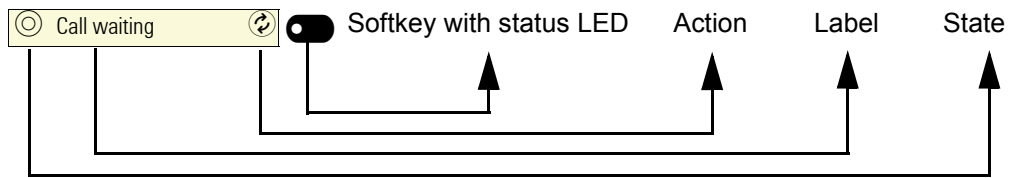


User settings

Use the  key to open the main menu and then switch to the settings.



The menu consists of a configuration area for system, local user, and local administrator settings.

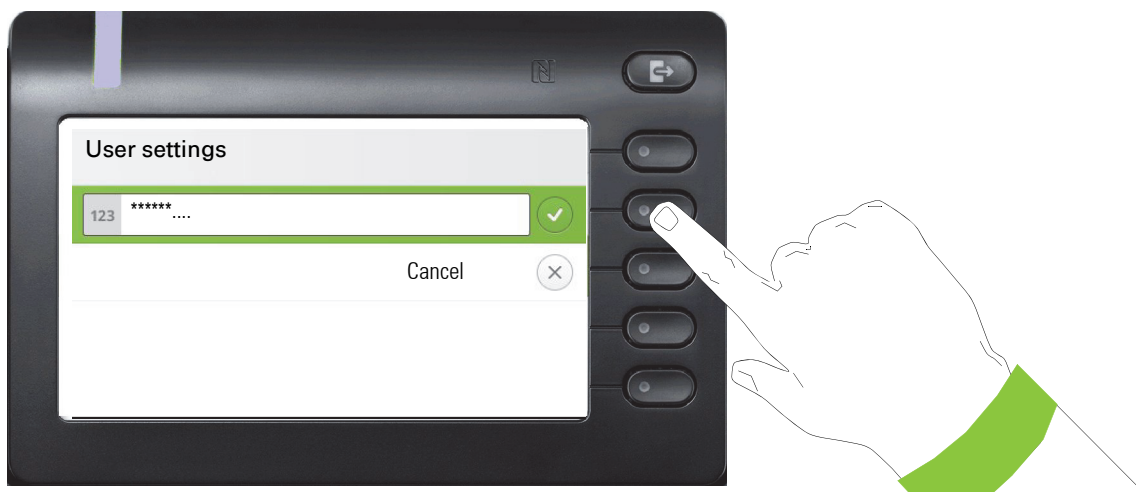


The first time you open the user settings you have to enter the User password → page 159.

User settings

Menu

You can adjust local settings for your OpenScape Desk Phone CP600/CP600E using the "User settings" menu.

The menu structure consists of several levels.

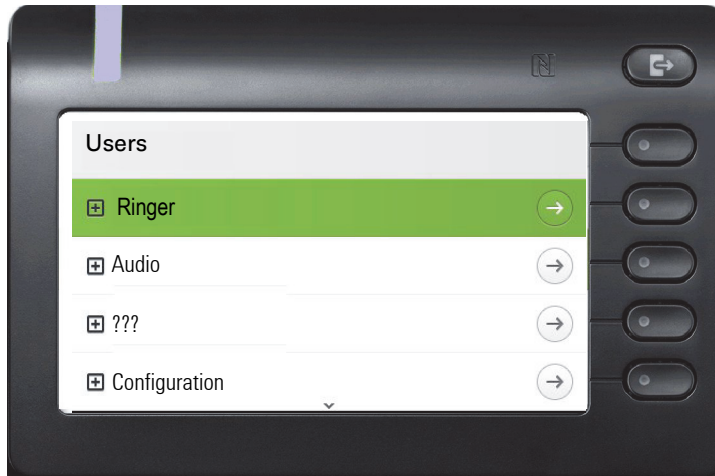


➡ You can also configure all settings via the **web interface** of your OpenScape Desk Phone CP600/CP600E → page 195.

Switches

The menus contain switches for activating and deactivating functions. Example:




Press the Softkey on "Insecure call alert" to enable the function. The switch is moved to the right. Alternatively you can use  to operate the switches.




Press the Softkey for ✓ to save your new setting.

Parameters

You can set values in some submenus.

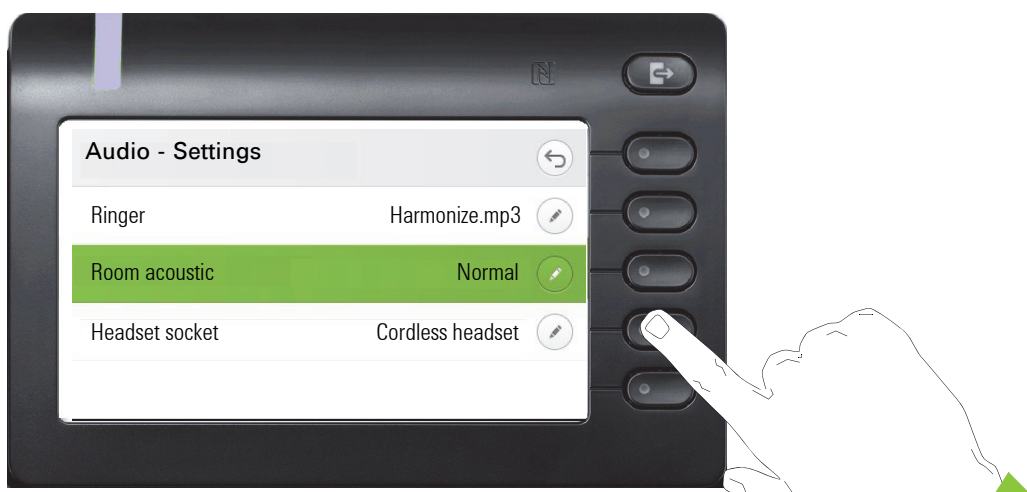

Press the Softkey for ✎ to open the setting.

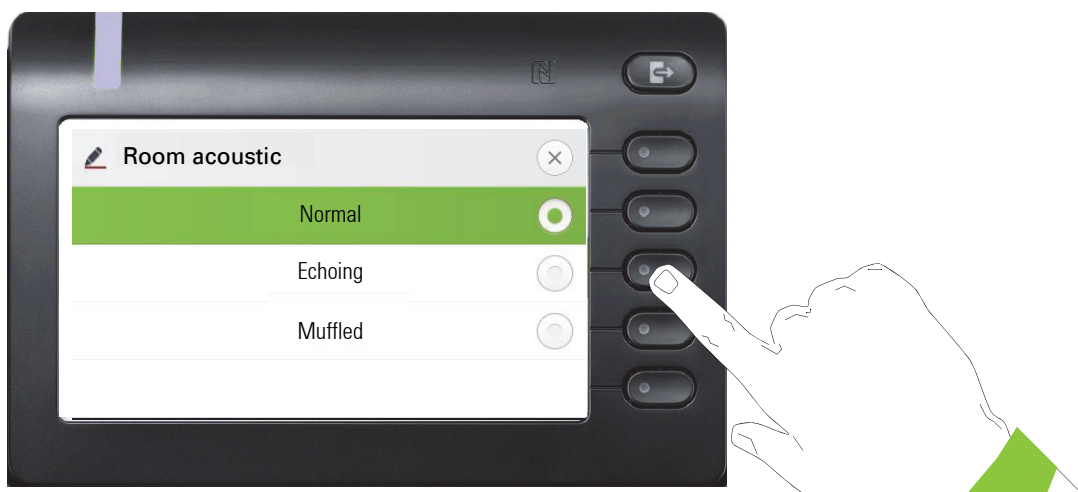

Press the Softkey for example on Echoing. The setting is changed and you return to the previous menu.



Exit the menu.

Level

You can use menus with levels to adjust the volume or brightness, for example. An example of display brightness is given here. Switch to the telephone settings menu



and open the display menu with the Softkey.



Open the menu for the brightness setting



Adjust the brightness to the desired level. Use the **- +** key to do this. The display is adjusted immediately.



Complete the setting by pressing the Softkey for **✓**.




Save your new settings.


Administration


You can access the administration area via the "Admin" function and by entering the administration password.

Refer to the administration manual for your phone for more detailed information on this topic.

 During a software update, the phone must not be disconnected from the power supply unit, the LAN line or the phone line.

An update action is indicated by messages on the display and/or by flashing LEDs.





Setting up the phone

Display

Display adjustment

You can tilt the display unit. Adjust the display unit so that you can clearly read the screen.

Display brightness

You can customize the display brightness according to your current lighting conditions.

You can also configure this setting via the Web interface → page 195

If nec. Press Main Menu key.

Open using the Softkey

Select "Users".

Open using the Softkey

Enter and confirm the User password.

Select "Phone".

Open using the Softkey.

Open using the Softkey

Open using the Softkey ¹.

Use the Softkey to brighten the display.


Use the Softkey to dim the display

Adjust using the toggle key

Confirm the setting with the Softkey.

Save the settings.

1. The display shows the current setting

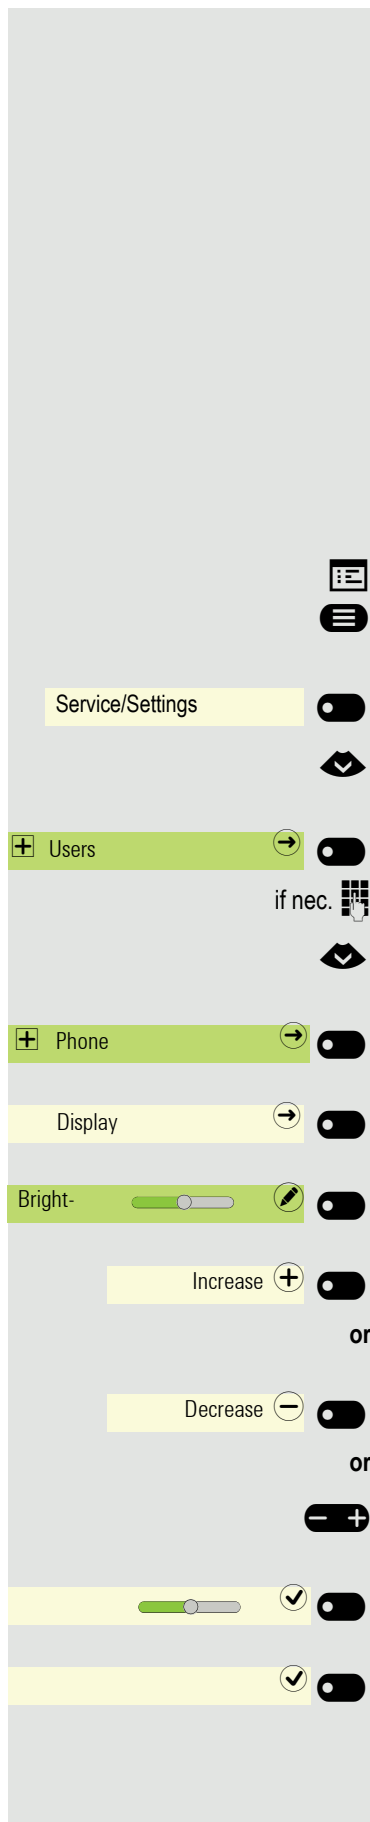

Select language for display user guidance

Change language for user guidance if necessary.

If nec. Press Main Menu key.

Open using the Softkey.

Open using the Softkey.

Select "more features"


and confirm.

Select "Language selection"

Confirm.

Select e.g. "English"

and confirm.

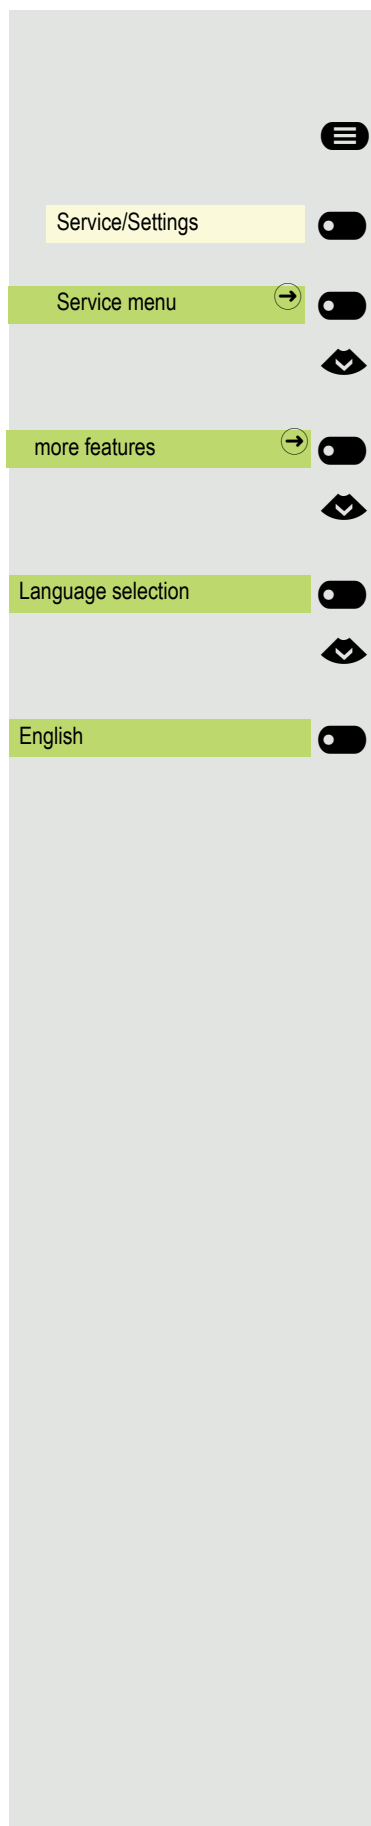

Energy saving mode

Select the inactivity time after which the OpenScape CP 600/600E should automatically dim or turn off the backlight.

You can select the following time combinations for backlight dim / switch off :

- 1 minute/5 minutes
- 5 minutes/20 minutes
- 30 minutes/2 hours
- 45 minutes/4 hours
- 60 minutes/8 hours

You can also configure this setting via the Web interface → page 195.

If nec. Press Main Menu key.

Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Select "Phone".

Open using the Softkey.

Open using the Softkey

Open using the Softkey ¹.

Select the new time in the list

Using the Softkey, confirm the new background lighting settings.

Save the setting with the Softkey.


1. The display shows the current setting

Contrast for the OpenScape Key Module 600E

If you have connected an OpenScape Key Module 600E, you can adjust the key label contrast to suit your ambient lighting.

You can also configure this setting via the Web interface → page 195

If nec. Press Main Menu key.

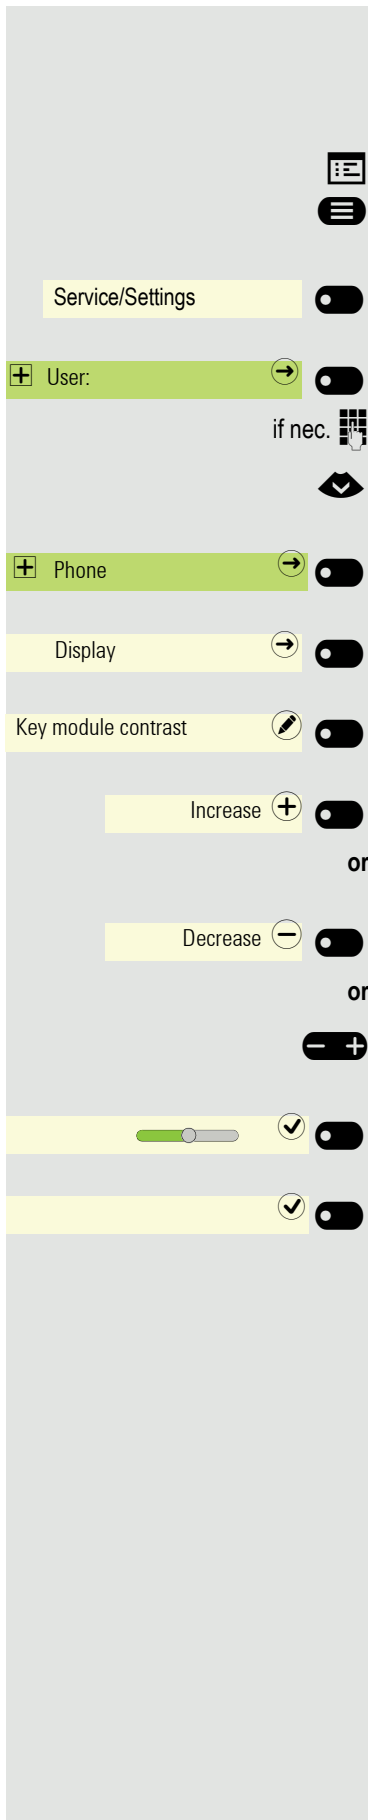

Open using the Softkey

Open using the Softkey

Enter and confirm the User password.

Select "Phone".

Open using the Softkey.

Open using the Softkey

Open using the Softkey ¹.

Use the Softkey to increase the contrast.

or

Use the Softkey to reduce the contrast.

or

Adjust using the toggle key

Confirm the setting with the Softkey.

Save the settings.

1. The display shows the current setting

Brightness for the OpenScape Key Module 600E

When you have connected a OpenScape Key Module 600E, you can adjust the key label brightness to suit your ambient lighting.

You can also configure this setting via the Web interface → page 195.

If nec. Press Main Menu key.

Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Select "Phone".

Open using the Softkey.

Open using the Softkey.

Open using the Softkey ¹.

Use the Softkey increase the brightness

or

Use the Softkey to dim the display.


or

Adjust using the toggle key

Confirm the setting with the Softkey.

Save the settings.

1. The display shows the current setting

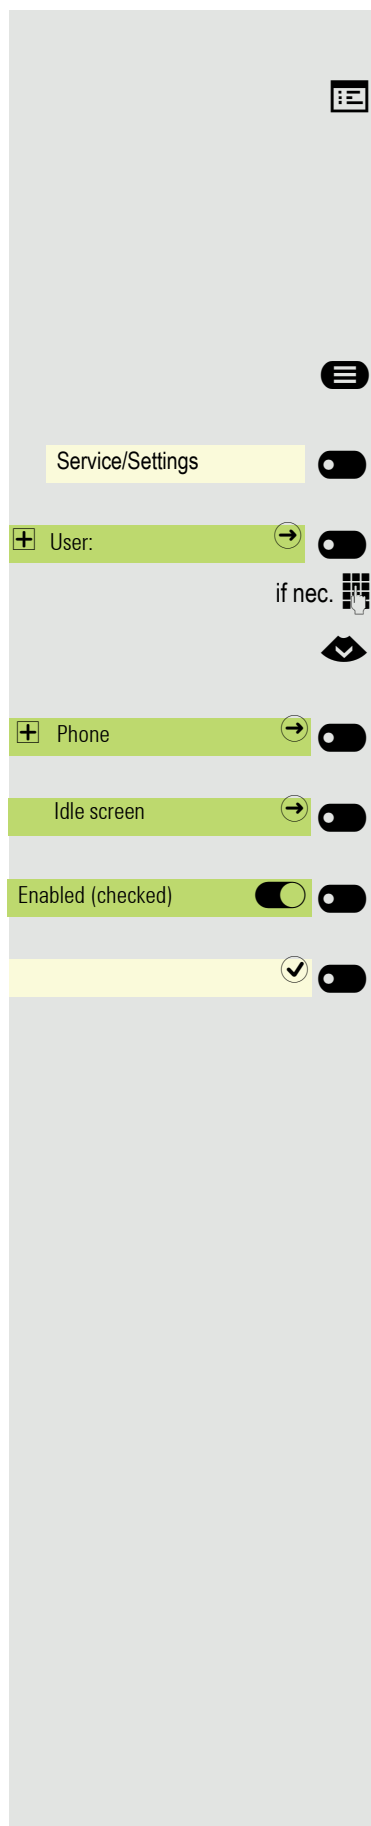

Idle screen

You can also configure the screensaver settings via the Web interface→ page 195.

Idle screen activate

Activate a Idle screen for idle mode.

If nec. Press Main Menu key.

Open using the Softkey.

Open using the Softkey.

if nec.  Enter and confirm the User password.


Select "Phone".

Open using the Softkey.

Open using the Softkey.

Activate with the Softkey.

Save the setting by selecting the Softkey.

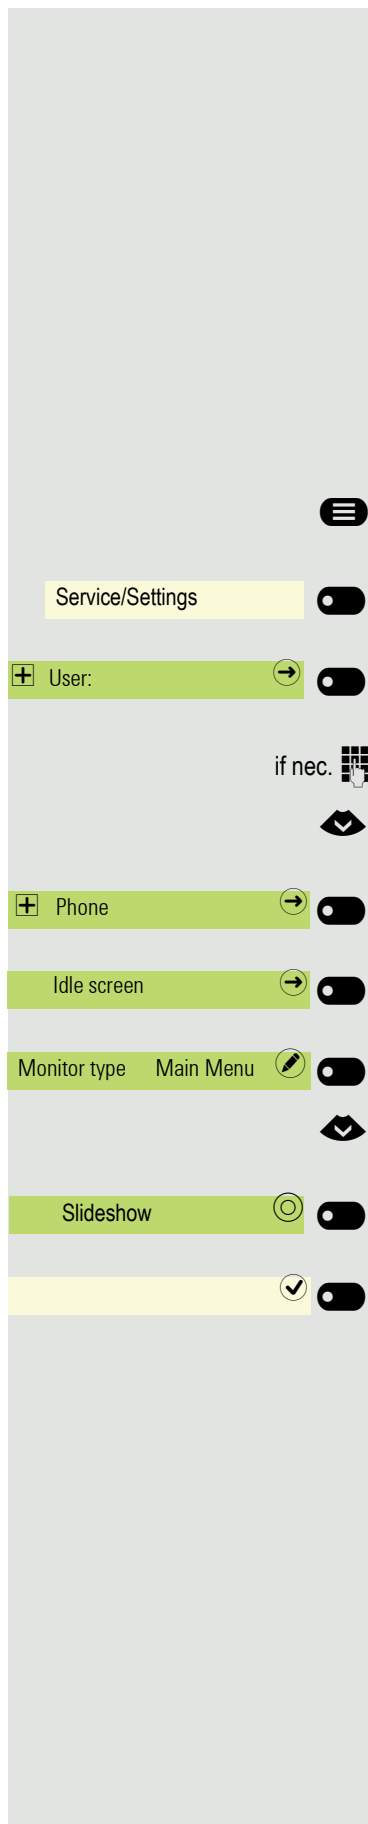

Upload your images for Idle screen

To install your own images for Idle screen, transfer the images using the Web interface → page 195.

Once you have opened the web interface click "file transfer" and "slideshow images", then clickSelect the relevant image file.

Search for suitable images on your computer or in the network and save your search results. You can upload several images in succession.

Your new images will be used next time you start the Idle screen.

Screen type set-up for the Idle screen

If nec. Press Main Menu key.

Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Select "Phone".

Open using the Softkey.

Open using the Softkey.

Open using the Softkey ¹.

Select other option

Confirm using the Softkey to set up a slide show, for example.

Save the setting by selecting the Softkey.

1. The display shows the current setting

Automatic start of the Idle screen

Select how long OpenScape CP 600/600E should be idle before the Idle screen screensaver automatically activates.

You can choose from the following settings:

- 0 minutes (deactivated)
- 5 minutes
- 10 minutes
- 20 minutes
- 30 minutes
- 60 minutes
- 120 minutes

If nec. Press Main Menu key.

Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Select "Phone".

Open using the Softkey.

Open using the Softkey.

Open using the Softkey ¹.

Select the new time in the list

Confirm with the Softkey to set the new time.


Save the setting with the Softkey.

1. The display shows the current setting

Set up display time for Idle screen

Set the intervals at which the Idle screen images change here.
The following fade times are possible:

- 5 seconds
- 10 seconds
- 20 seconds
- 30 seconds
- 60 seconds

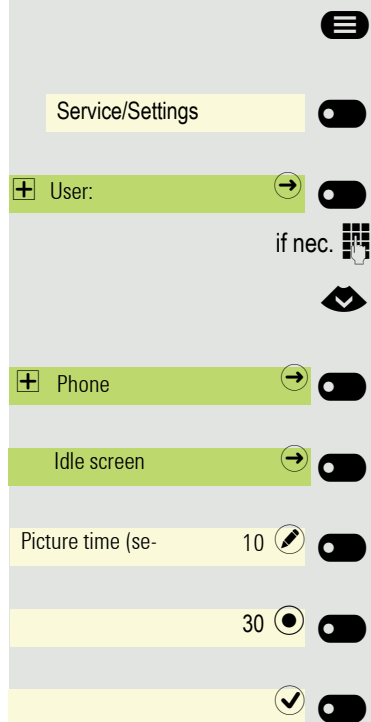

If nec. Press Main Menu key.

Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Select "Phone".

Open using the Softkey.

Open using the Softkey.

Open using the Softkey ¹.

Confirm with the Softkey to set the new time.

Save the setting with the Softkey.

1. The display shows the current setting


Audio

Change connection volumes

Change the following settings:

- Handset volume
- Speaker volume
- Headset volume
- Call loudspeaker volume


You can also adjust volume settings from the user menu → page 182.



Set volume louder or quieter. Press the key until you reach the desired volume.

Adjust ringer volume in call or while idle

You can also adjust volume settings from the user menu → page 182.



Press the key until you reach the desired volume.

Deactivate the ringer

If you do not want to be disturbed by the phone ringing for an incoming call, you can switch the ringer off.

Deactivating



Hold down the key until the "ringer off" icon appears.



Activating



Hold down the key until the "ringer off" icon goes out.



Mute active ringer



You can mute the active ringer for an incoming call and only for that call. Long press the key while the phone is ringing and only the active ringer is muted. Ringer mode is not changed.


If you want to change the ringer mode, see the section "Deactivating" → Page 66 and "Activating" → Page 66.


Activate alert tone

You can turn the ringer off and select a short alert tone instead.



Hold down the key until the notification and icon for "Activate alert tone" appears on the display.



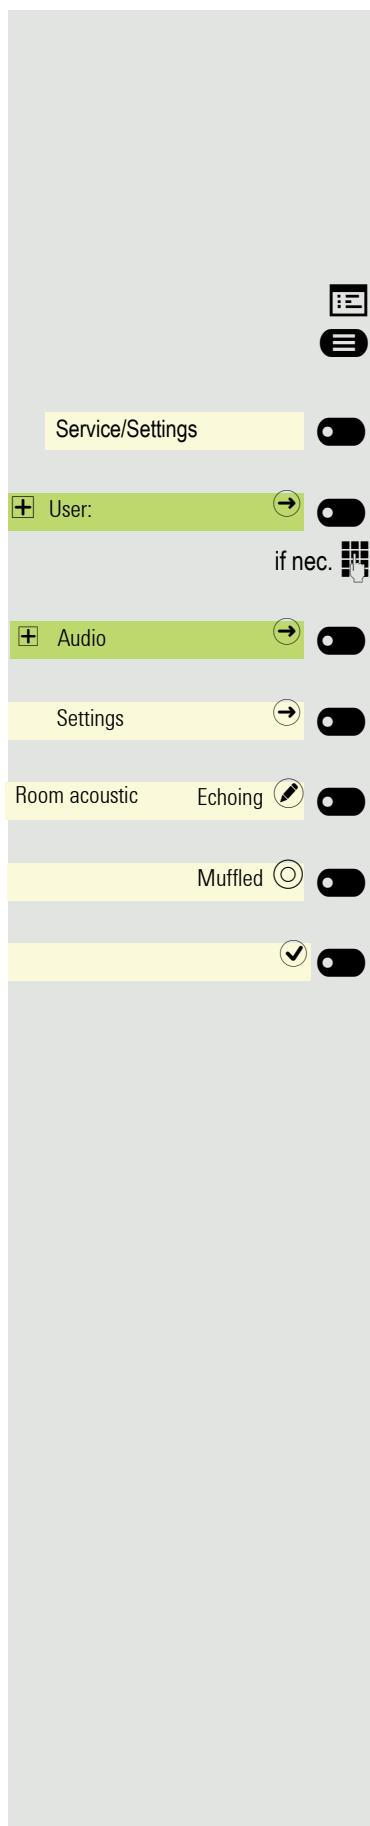

Room acoustic

To ensure that the other party can hear you properly in speakerphone mode, you can adjust the phone to the room acoustics by choosing one of the following room character conditions:

- Normal
- Echoing
- Muffled

You can also configure this setting via the Web interface → page 195.

If nec. Press Main Menu key.

Open using the Softkey.

Open using the Softkey

Enter and confirm the User password.

Open using the Softkey


Open using the Softkey

Open using the Softkey ¹.

Use the Softkey to set to Muffled, for example.

Save the setting by selecting the Softkey.

1. The display shows the current setting

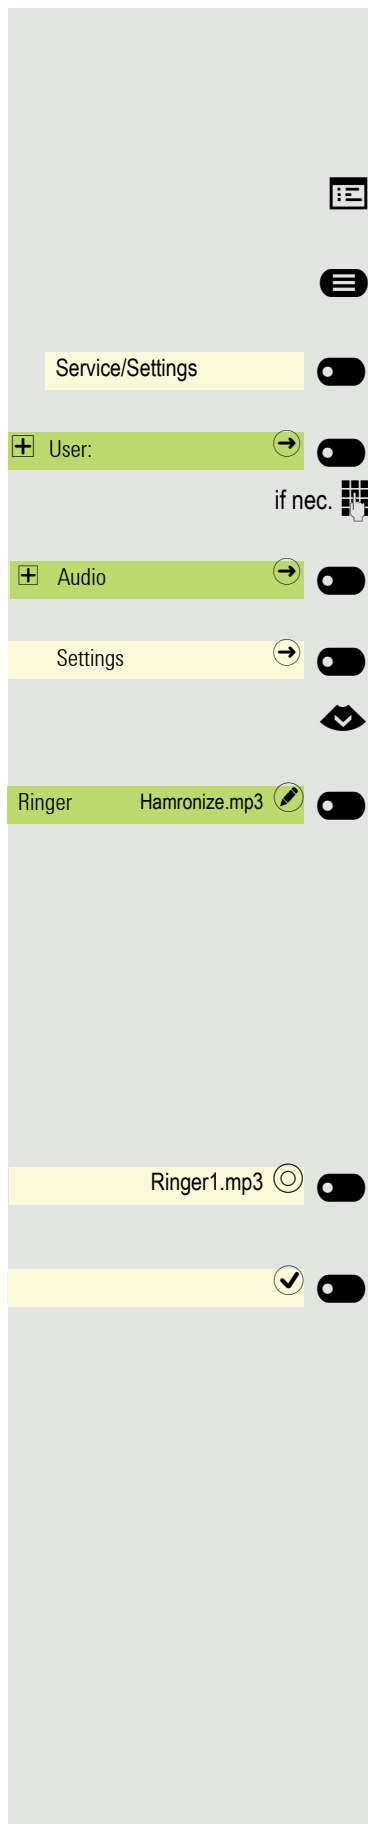

Ringer

Select your preferred ringer from the available audio files. If no individual audio files are available, the "Pattern" ringer is preset. To upload your own files in ".mp3" or ".wav" format, please consult your administrator.

You can also configure this setting via the Web interface → page 195.

If nec. Press Main Menu key.

Open using the Softkey.

Open using the Softkey

Enter and confirm the User password.

Open using the Softkey

Open using the Softkey.

Switch to Ringtone.

Open using the Softkey ¹.

You will be offered the following default options:

- Pattern
- Harmonize.mp3
- Ringer1.mp3
- Ringer2.mp3
- Ringer3.mp3
- Ringer4.mp3
- Ringer5.mp3
- Ringer6.mp3

Confirm with the Softkey to switch. You will immediately hear the associated ringer melody.

Save the setting with the Softkey.

1. The display shows the current setting

Setting headset port use

You can also configure this setting via the Web interface → page 195.

If nec. Press Main Menu key.

Open using the Softkey.

Open using the Softkey

Enter and confirm the User password.

Open using the Softkey

Open using the Softkey.

Select the headset port.

Open using the Softkey ¹.

You will be offered the following options:

- Wired headset
- Cordless headset
- Conference device


Confirm with the Softkey to switch.










Save the setting with the Softkey.

1. The display shows the current setting

Set Presence

PresenceSetting Status

Once you have used the Out-of-Office/Call forwarding  key to call up the Presence menu → page 24, you can set your current Presence status. You can choose from the following options and set the duration:

-  • Office
 - Select variants
 - Office
 - CallMe
-  • Meeting
 - Meeting – Return after
 - 30 minutes
 - 1 hour
 - 2 hours
 - All day
-  • Lunch break
 - Lunch break – Return after
 - 20 minutes
 - 30 minutes
 - 1 hour
 - 45 minutes
-  • Out of Office
 - Out of Office - Return after
 - 30 minutes
 - 45 minutes
 - 1 hour
 - All day
-  • Break
 - Break – Return after
 - 10 minutes
 - 15 minutes
 - 20 minutes
 - 30 minutes
-  • Sick
 - Sick – Return after
 - All day
 - 2 days
 - 3 days
 - 1 week
-  • At home
 - At home – Return after
 - All day
 - 2 days
 - 3 days
 - 4 days
-  • On vacation
 - On vacation – Return after
 - All day
 - 1 week
 - 2 weeks
 - 3 weeks
-  • Do not disturb
 - Do not disturb – Return after
 - 30 minutes
 - 1 hour
 - 2 hours
 - 4 hours

If the Presence status is set to:


- At home
- On vacation
- Sick
- Do not disturb

callers are redirected to a media server. Depending on the status, a caller will receive a message with the reason for and duration of absence and will be offered the option to leave a message.

With the Presence status

- Meeting
- Lunch break
- Out of Office
- Break

there is no redirection and the called will not receive a message.

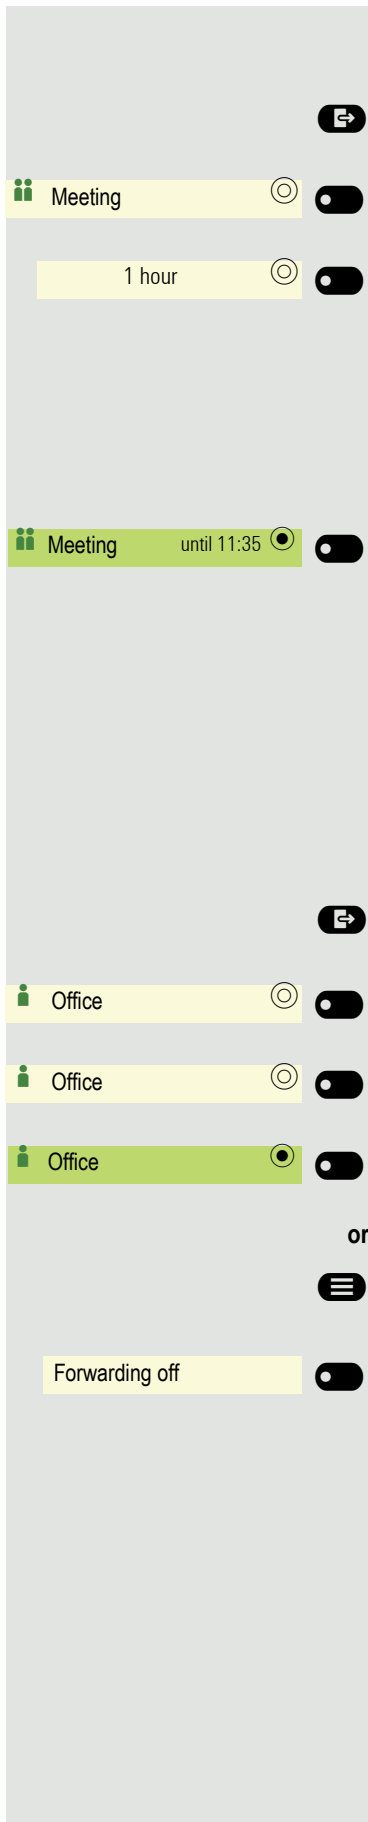


Example Meeting

Set your absence duration for a Meeting:

Press the key.

Open using the Softkey.

press Softkey to select and hour, for example. You will receive a confirmation like the following:

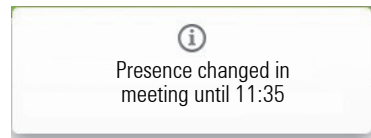

The setting is displayed.

The Presence icon for Meeting on your phone's idle display is changed accordingly. The status is updated on "MyPortal" and will appear alongside your details.

Switch off away status

Delete your absence status and, if necessary, forwarding to the media server by setting the Presence status in the Presence menu to Office or if necessary switching off forwarding.

Press the key.

Open using the Softkey.

Confirm with Softkey.

The setting is displayed. The Presence symbol in idle menu changes accordingly. The status in "MyPortal" is also adjusted.

a forwarding function to the media server is enabled.

If nec. Press Main Menu key.

Confirm.

Call settings

Rejecting/accepting second calls (call waiting)

If configured (ask relevant technician), you can reject/accept automatic call waiting signaling for a second call → page 103 during a telephone conversation.

If nec. Press Main Menu key.

Open using the Softkey.

Open using the Softkey.

select the option shown.

Select "Automatic call wait off"

and confirm,

or

select and confirm the option shown.

Activating/deactivating call waiting

You can suppress call waiting for a second call (approx. every six seconds). A special tone alerts you to the second call.

Activating signal tone


If nec. Press Main Menu key.

Press the Softkey .

Switching off signal tone

If nec. Press Main Menu key.

Press the Softkey .

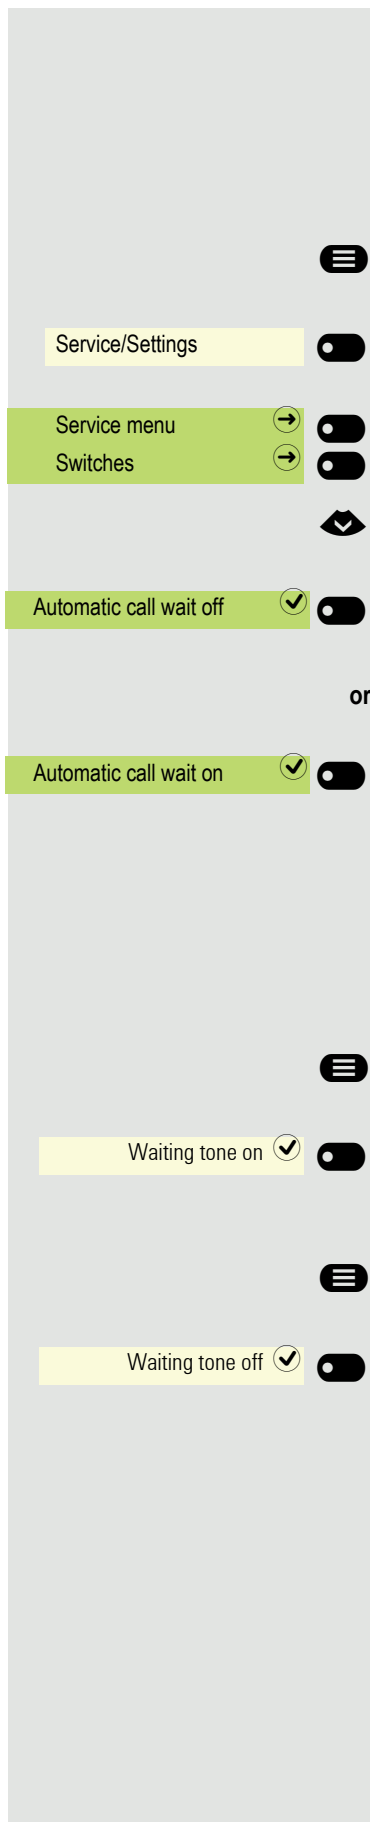

Door release

Activating the door release

If nec. Press Main Menu key.

Open using the Softkey.

Open using the Softkey.

Select "more features"

and confirm.

Confirm.

Enter door terminal phone number.

Confirm 5-figure code to modify code.

or

Select and confirm code change.

Select and confirm.

or

Select and confirm. The door can be opened without a signal tone.

Deactivating the door opener

If nec. Press Main Menu key.


Open using the Softkey.


Open using the Softkey.

Select "more features"

and confirm.

Confirm.

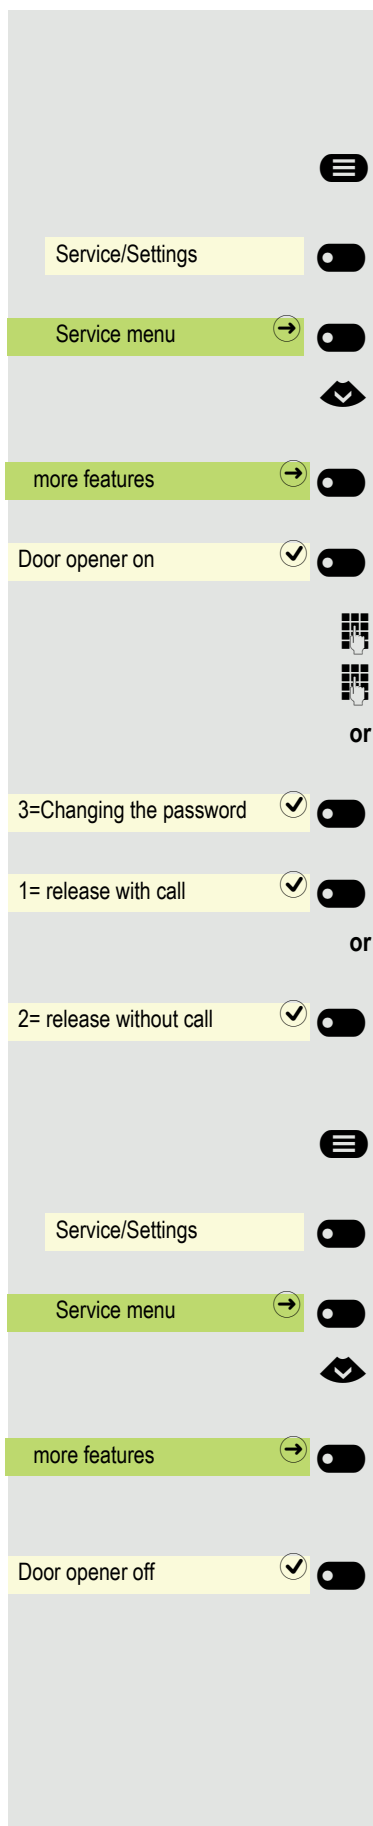

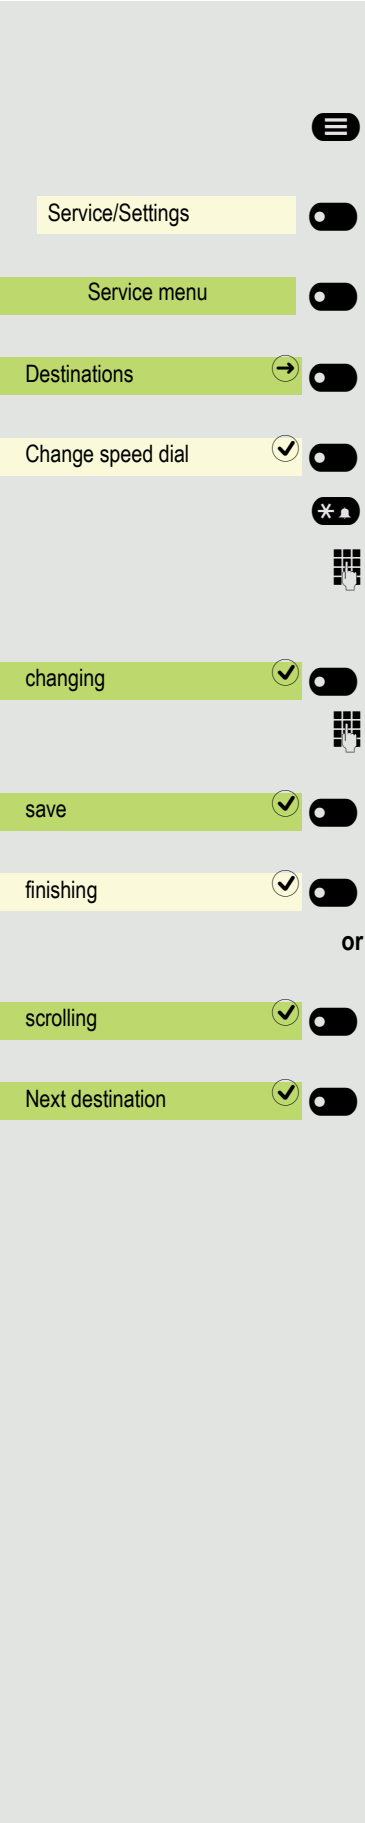

Set up speed-dial keys

From keys **0 +** to **9 wxyz** you can select 10 saved speed dial numbers.

If nec. Press Main Menu key.

Open using the Softkey.

Open using the Softkey.

Confirm.

Confirm the option shown

Press key.

Press the required line key. When the relevant key is selected, the call number is displayed.

Confirm.

Enter the external code and then the external phone number.

Confirm the option shown

Confirm to forget the function

or

Confirm the option shown

Confirm to search and assign another key.

Switch night answer on and off

In night answer mode, for example, during lunch breaks or after office hours, all external calls are forwarded to a particular internal telephone (night station). The night station can be defined by the relevant service engineer (= standard night answer) or by you (= temporary night answer).

If nec. Press Main Menu key.

Open using the Softkey.

Open using the Softkey.

Confirm.

Activating

Select "Night answer on"

and confirm.

Confirm to switch on night answer.


Deactivating

Select "Night answer off"

and confirm to switch off night answer

The technical professional can also set up "automatic night answer". Depending on programming, the automatic night answer on your phone turns on at specific times.

You can switch off or disconnect automatic or custom night answer settings.

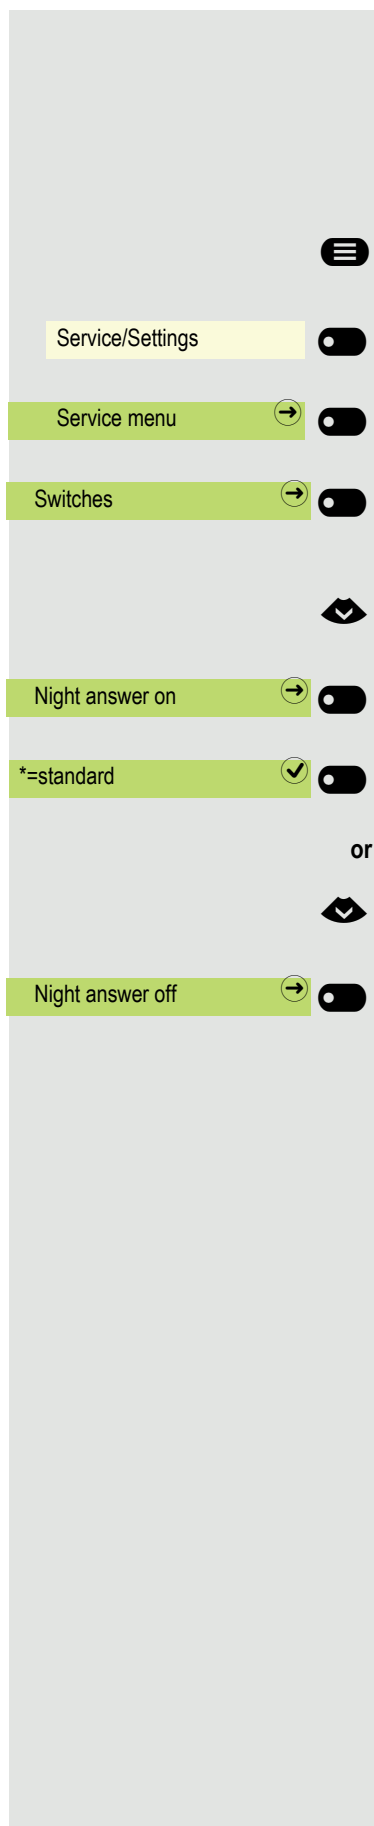

Programming function keys

You can assign frequently used functions, numbers or services to the keys of your OpenScape Key Module 600E. You can save destination call numbers to the second level.

The keys can be programmed in three ways:

- Press and hold selected key
- Call up via the Service menu
- Call up via user settings

The following is a description of the set up by pressing and holding the selected key.

Function keys setup

See also the information in → page 43.

Example: "Disconnect key" set up

Hold down the Function keys on the OpenScape Key Module 600E to which a function is to be assigned until the programming prompt is displayed.

If nec. Press Main Menu key.

Open using the Softkey.

Select desired page (1 to 4).

Press and hold the Function keys to be programmed.

Select "Assign telephone function"

Confirm.

Confirm.

Select "Calls:"


Confirm.


Confirm. The key is programmed.

You can also change the standard key label

Select "Key labelling "

Confirm.

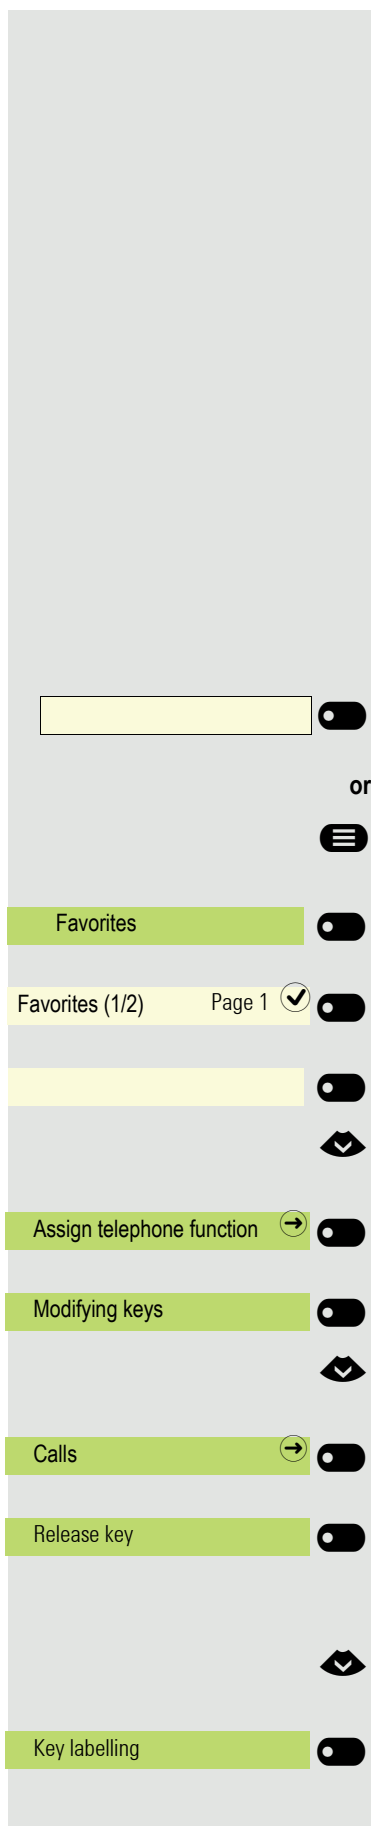

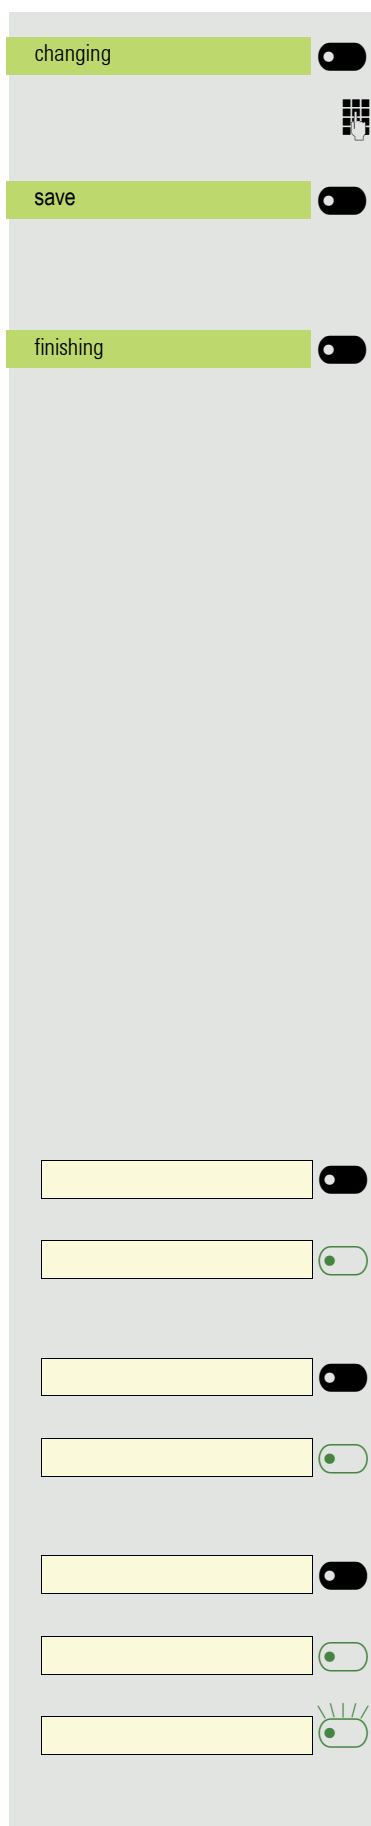

Confirm.

Change text.

Confirm to save input.

Finishing the procedure

Confirm to leave edit.

Overview of functions

The functions are classified under the following menus:

- Destinations
- Switches
- PIN and license of service
- Calls
- more features



The selection of available functions depends on configuration. Consult your administrator if you are missing a function. The keys of the OpenScape Key Module 600E are shown below. The LED displays for the keys are also displayed in Favorites.

LED displays of saved functions

Forwarding, Forwarding in department, Forwarding MULAP, Night answer, Do not disturb, Telephone lock, Response text, Silent ringing, Direct answer on/off, Group call on/off, Block phone number, Call waiting released, Waiting tone off, Ring transfer executive/secretary, Recording, Door release on/off, Group ringing, Layer switching, Universal Call Distribution (Available on/off, postprocessing on/off), Night destination on/off, MULAP conference Released by:: Hold key

Saved function is not switched on.

Saved function is switched on.

Callback:

You have not registered a callback.

You have registered a callback.

Call number (internal), Direct station selection (DSS):


Participant not on the phone.

Participant on the phone or do-not-disturb enabled.

Flashes quickly – I am in a call, please accept.

Flashes slowly – another participant is on a call and has not yet accepted.

Call keys, general call keys, Line key, MULAP key, Assign call number:

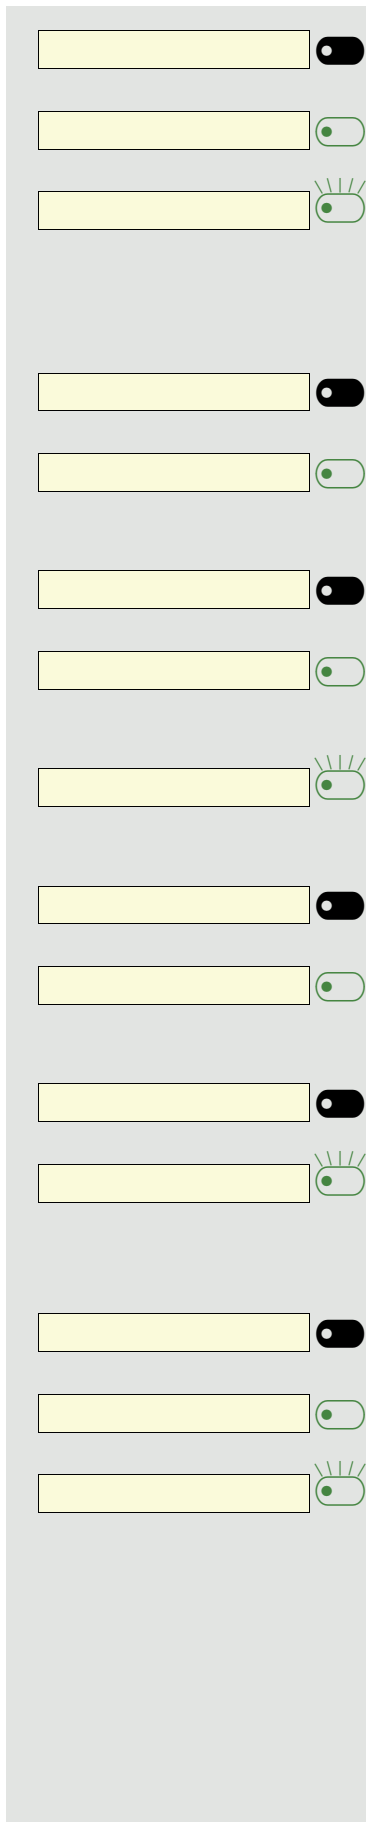

No call on relevant line.

Active call on relevant line.

Blinking quickly – Call on current line, call pickup is possible through key selection.

Blinking slowly – call on current line on hold.

Direction keys:

At least one line is free.

All lines in this direction in use.

Check costs:

There have been no fee-based connections since the last query was made.

Since the last query was made there have been fee-based connections.

Forwarding, Forwarding MULAP:

Blinking slowly – Your line is the destination for a call line.

Fax/answering machines information.:

No incoming fax or messages on answering machine.

Incoming fax or message on answering machine.

Show calls in queue:

No callers waiting.

Flashing quickly – caller waiting (certain number is exceeded).

Flashing slowly – caller waiting (certain number is reached).

DATA I/O Service:

No connection to an application.

Active connection to an application.

Flashing slowly – Connection to application temporarily suspended.

Following functions saved to keys have no LED function:

Call number (external), Procedure key, Tracing a call, Fast access, Disconnect, Management function, Central code lock, Send message, Accept call waiting (camp-on), Toggle/connect, Conference, Speaker call, Reconnect, Ln, Line queuing, Activate line, Temporary phone, Override, Parking a call, Call pickup, directed, Call pickup in pickup group, Project code, Show call charges, Paging, Answering, Appointment, Door opener, DTMF dialing, Signal key, Audio baby monitor, Internal consultation, Consultation, associated dialing, assoc. Services, Telephone data service, Mobile login, Discreet calling .

Set procedure key

You can save call numbers and functions to your phone that require additional input and therefore more set-up steps. The relevant Administrator must have the relevant license.

For example, the "assoc. Services" function → page 173 along with the relevant input (the phone number and the selected call number) can be saved to a key. Call numbers that involve further input can also be stored.

See also the information in → page 43.

Hold down the Function keys on the OpenScape Key Module 600E to which a function is to be assigned until the programming prompt is displayed.

If nec. Press Main Menu key.

Open using the Softkey.

Select desired page (1 to 4).

Function keys, that is programmed should be held for long period.

Select "Assign telephone function"

Confirm.

Confirm.

Select "more features"

and confirm.

Select "Procedure key"

Confirm the option shown

Procedure input. Example: ***67 231 123456**


Code for Assoc. dialing


Call number of phone to be called

phone number to be dialed.

Confirm to save input.


Confirm to end the process.

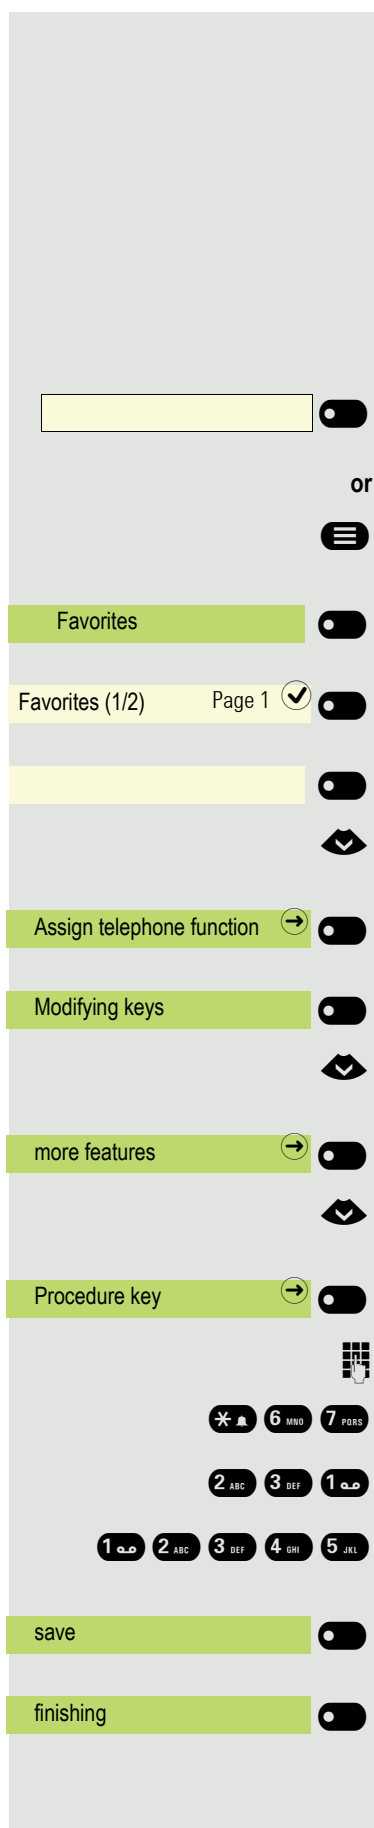

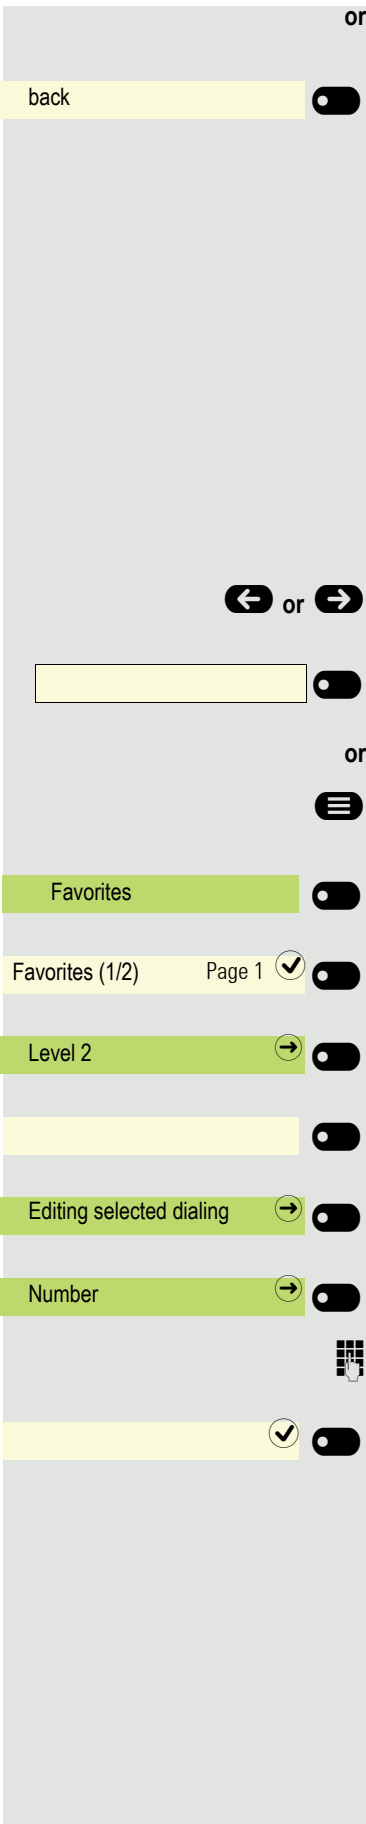

If you have mistyped:

Select and confirm. All entered digits will be deleted.
Re-enter the value and save the result.

 Select the saved procedure with a keystroke.
For procedures with on/off functions, switch the function on with a keystroke and off again with another.

You can also operate procedure keys during a call; the saved figures are automatically sent as DTMF signals → page 110. Display notifications during procedure saving → page 87.

Selected dialing key configuration

If you want to configure a selected dialing key on the second level of the OpenScape Key Module 600E, you can switch to this level beforehand.
Switch to the second level if necessary.

Hold down the Function keys on the OpenScape Key Module 600E to which a function is to be assigned until the key programming menu is displayed.

If nec. Press Main Menu key.

Open using the Softkey.

Select desired page (1 to 4).

Switch to the second level if necessary.


Press and hold the Function keys to be programmed.

Confirm.

Confirm the option shown

Enter the phone number and confirm.

Save the setting with the Softkey. The key is programmed.

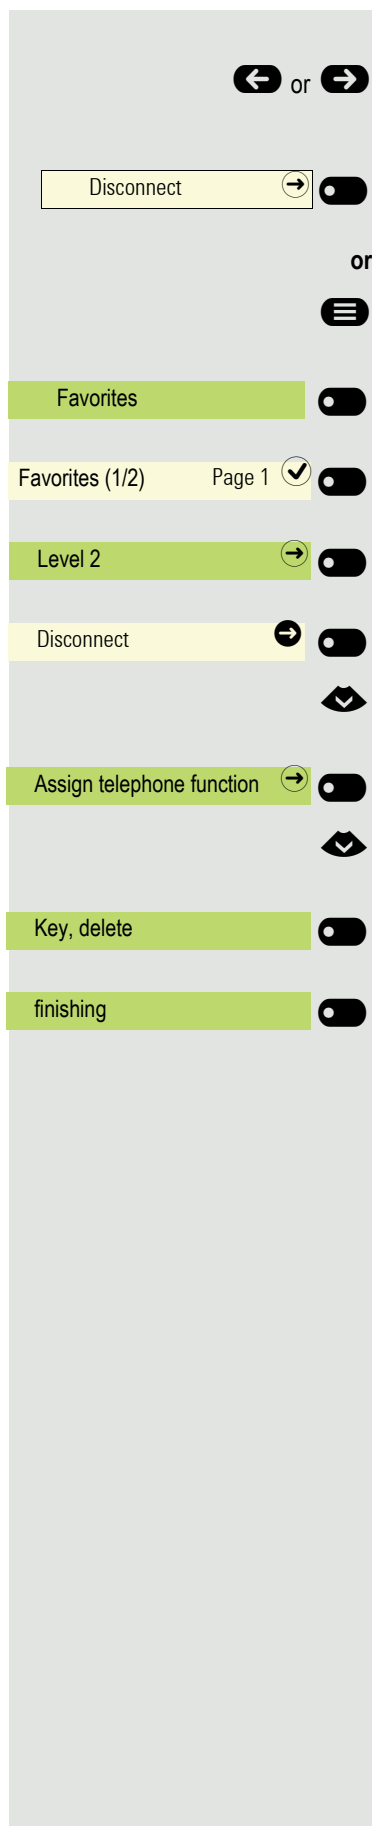

Deleting key programming

If necessary switch to another level

Hold down the Function keys on the OpenScape Key Module 600E to be deleted until the key programming menu is displayed.

If nec. Press Main Menu key.

Open using the Softkey.

Select desired page (1 to 4).

Switch to the second level if necessary.

Hold down the Function keys to be deleted.

Select "Assign telephone function"

Confirm.

Select "Key, delete"

Confirm. The key programming is deleted.

Confirm to end the process.

Making calls



To better understand the steps described here, it is recommended that you read the introductory chapter "Getting to know the OpenScape CP 600/600E" → page 16 .

Receiving a call

The call number or name of caller will be shown on the display.

Answering a call via the handset

The phone rings.


Lift the handset¹.

Answering a call via the loudspeaker (speakerphone mode)

The phone rings.

Press key. LED is lit¹.

or

accept 

Press the Softkey shown.

Answering a call via the headset

Prerequisite: A headset is connected.


The phone rings. The  key flashes.

Press key¹.

Rejecting calls

You can reject a call you do not wish to accept. The call is then sent to another definable phone (consult relevant Administrator).

Press the Softkey shown.

Decline call 



1. Set volume → page 182

Call pickup, directed

Page 10 of 10

Favorites

Favorites 1/2 Page 1

Call pickup, directed  

Downloaded from <http://ajph.org/>

Service/Settings

Service menu



Calls

Downloaded from <http://ajph.org/> on November 10, 2015

Call pickup, directed? ☐

Party

Enter the phone number.



Spoken via loudspeaker

You are being spoken to directly by a colleague over speakerphone. Before this happens you will hear an alert tone. The partner's name or phone number is shown on the display. You can answer directly with the handset or via loudspeaker .



or

Microphone on



or



Lift handset and answer.

Confirm.

Press the illuminated microphone key.



When answering hands-free (see below), upon answering you must not switch on the microphone. You can answer hands-free immediately. If hands-free answering is blocked (default), proceed as described above. Speak directly to your colleagues → page 91.

Allow/block handsfree answerback

If nec. Press Main Menu key.

select "Handsfree answerback on" or "Handsfree answerback off".

Confirm.

or

Confirm.

Answer calls from the door terminal / press the door opener

If the service engineer has set up an entrance telephone, you can speak to the door intercom and activate the door opener from your handset.

If authorized (ask your relevant Administrator), you can set up the **Door release**, and visitors can then enter using a 5-digit code (e. g. through a DTMF transmitter or installed keypad).

Speak with visitor over the door terminal

Prerequisite: Telephone is called from a door terminal.

Lift the handset within 30 seconds. You are connected to the entrance telephone immediately.

or

Lift the handset after 30 seconds.

Enter door terminal phone number.

Open the door from telephone during call through the door intercom

Confirm.

Open door from telephone outside of call with door intercom

If nec. Press Main Menu key.

Open using the Softkey.

Open with softkey.

Enter *61 for "Door opener?"

Enter door terminal phone number.



If your telephone is connected to system network, there are special features to observe → page 181!

Switch microphone on/off

To prevent the other party from listening in while you consult with someone in your office, for example, you can temporarily switch off the handset microphone or the handsfree microphone (see → page 16)

Ending a call



or



or



or



Disconnect



Press the key if it is set up.

Dialing/Calls

You make a call by entering the phone number of the relevant party using the dial pad or by searching for this party in the permanent **Conversations** list. Conversations include:

- Dialed and received calls
- Participants from Circuit
- Participants from Exchange
- Participants from a company-wide directory.

Off-hook dialing

Lift the handset.

The input field in Conversations is opened in numeric mode.

Internal: Enter the phone number.

External: Enter external code and phone number.

Confirm when the complete number has been entered.

The required contact is shown in the list. Confirm with the Softkey. The connection is set up.

Participant does not answer or is busy:

Replace the handset.

Dial with the handset on-hook

Enter digits via the dial pad.


Press the key if a headset is connected.


Press key.

The input field in Conversations is opened in numeric mode.

Internal: Enter or complete the phone number.

External: Enter or complete the external code and phone number.

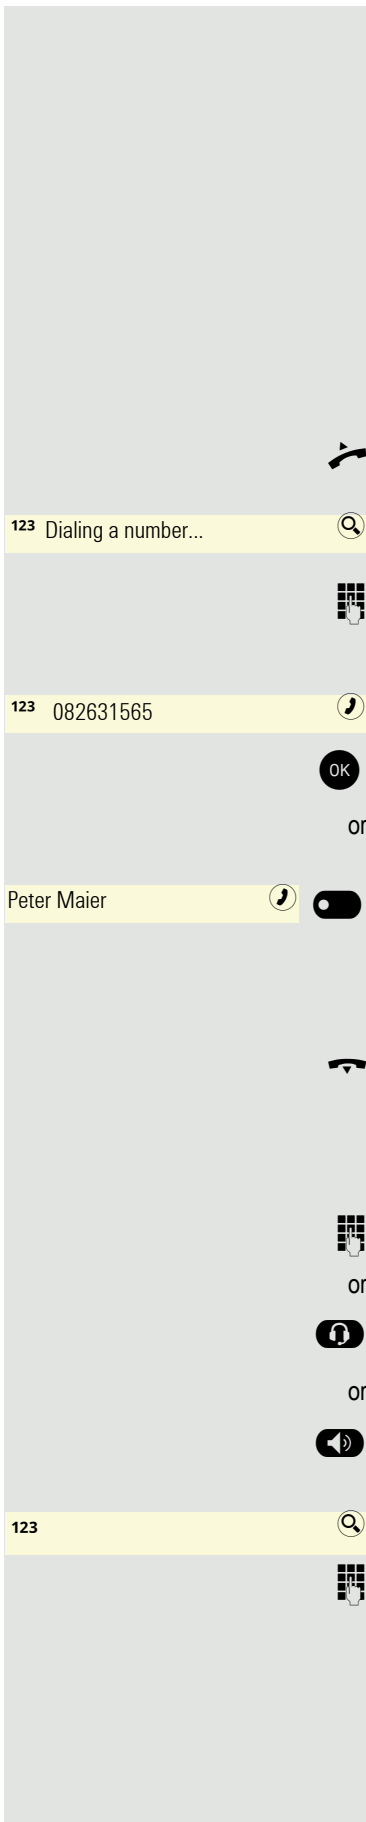

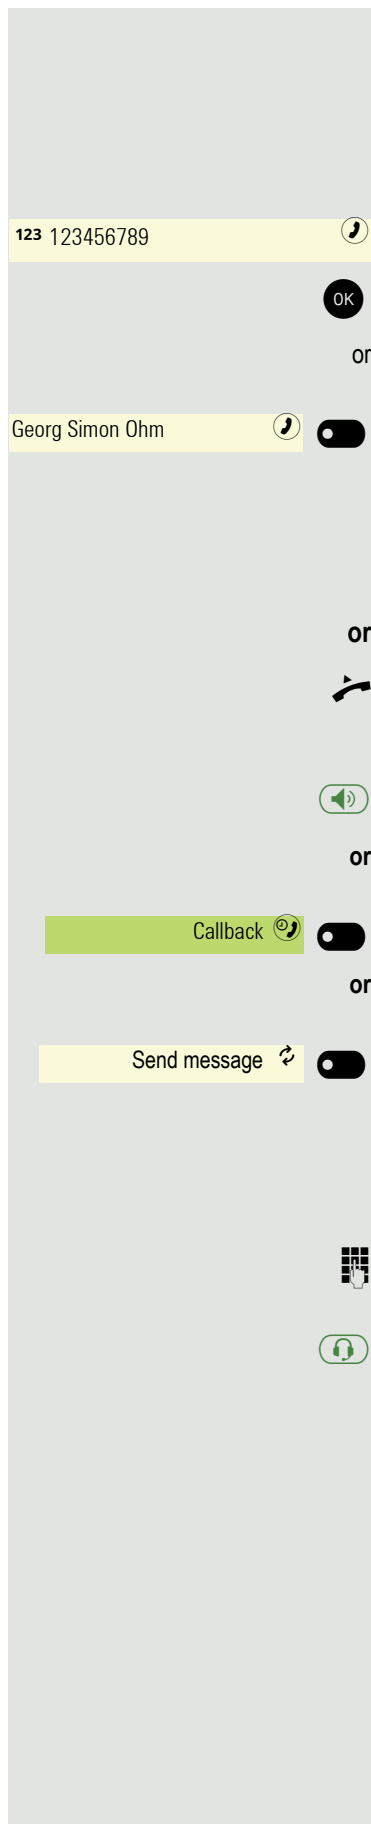

Your system can be programmed so that before you call an internal number you must press the "Internal" key.

As such, when you call an external number you do not have to enter an external code (simplified dialing is switched on; ask relevant Administrator).

Confirm when the complete number has been entered.

The required conversation is shown in the list. Confirm with the Softkey. The connection is set up.

Participant answers over loudspeaker:

With handset on hook: Speakerphone mode.

Lift the handset.

Participant does not answer or is busy:

Press key. LED goes out.

Softkey press to arrange a callback. (see also → page 100)

Softkey press to send a message (see also → page 91)

Dial with connected headset

Prerequisite: The headset is connected.

Internal: Enter the phone number.

External: Enter external code and phone number.

The headset key is lit.

The connection is set up as soon as you finish your input.



Choose from conversations

The conversations list is displayed on the screen. If the contact you want is not visible, then select with

or search by entering the phone number or name.

Confirm the selected contact with the Softkey. The phone number is dialed.

If visible, confirm immediately with the Softkey for the contact. The phone number is dialed.

Dialing with the selected dialing key

Requirement: You have saved a call number on a selected dialing key
→ page 80.

If necessary switch to another level.

Press key with saved number.



You can also confirm the selected dialing key during a call, which will automatically start a callback → page 104 .

Redial

You can use conversation list to call your last connected party. You can do this via the history of a conversation (for more information, see "Display the history of a conversation" → Page 39) or via contact details (for more information, see "Opening details of a conversation or conducting a call" → Page 31).


Calling back a missed call

Contacts who have tried to reach you are identified accordingly in the conversations list and appear at the top of the list. In addition to the menu name, i.e. Conversations, the number of missed calls is shown against a red background → page 23.

The notification LED is red. In addition to the menu name, i.e. "Conversations", the number of missed calls is shown.


If nec. Press Main Menu key.

Open using the Softkey.

A contact is indicated as a "New missed call" with . Select the contact and confirm to call the contact.

Dial with central speed dial numbers

Prerequisite: You know the central speed dial numbers (ask your relevant Administrator).

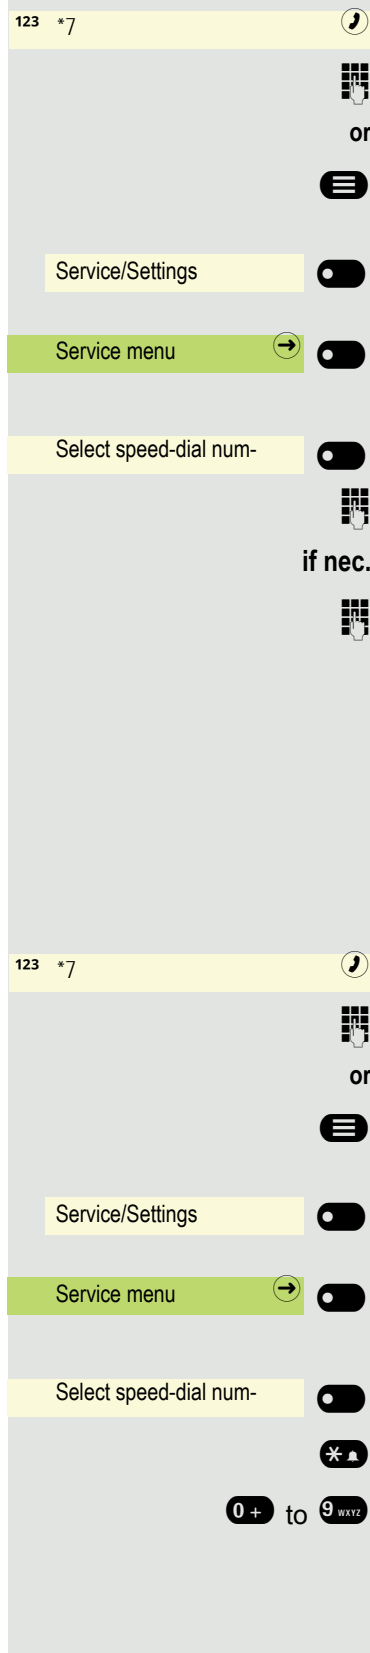

Enter and confirm mode *7 for "Select speed-dial number" .

If nec. Press Main Menu key.

Open using the Softkey.

Open with softkey.

Open with softkey.

Enter 4-digit speed dial number.


Post-dialing

Depending on requirements, you can post dial more digits in addition to saved numbers (e.g. extension to participant).

If configured, post dial is automatically selected if you do not dial any further numbers within 4-5 seconds (e.g. "0" for central).

Dial with speed-dial keys

Prerequisite: You have set up speed dial → page 74.

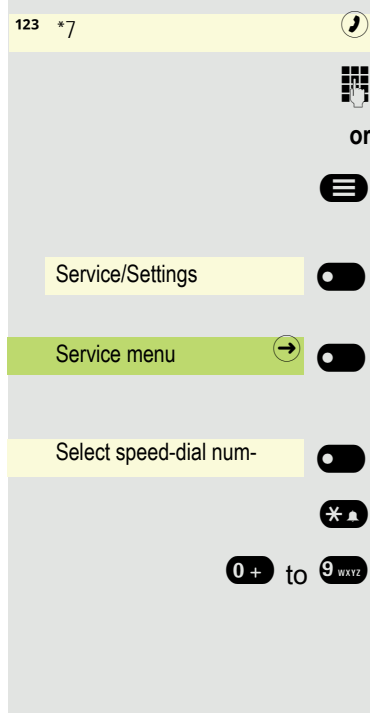

Enter and confirm code *7 for "Select speed-dial number" .

If nec. Press Main Menu key.

Open using the Softkey.

Open with softkey.

Open with softkey.

Press key.

Press the required line key.

Speaking to colleagues directly via loudspeaker

You can speak to an internal party directly using the loudspeaker on their telephone.

If nec. Press Main Menu key.

Open using the Softkey.

Open with softkey.

Open with softkey.

Select "Speaker call".

Confirm.

Enter the phone number.

 Respond to Speaker call → page 84.

Automatic connection setup/hotline

If configured, (ask relevant Administrator) after lifting the handset the connection to an internal or external destination is automatically made.

Lift the handset.

According to the set up the connection is made **immediately** or **after** a specified time .

Send information (message)

You can send short text messages to individuals or groups of participants.

Creating and sending messages

If nec. Press Main Menu key.

Select "Send message"

Open using the Softkey. The Functions dialog opens.

Enter internal phone number of recipient or group.

Select predefined text (can be modified by Administrator)

and confirm.



Service/Settings



Service menu



Select speed-dial num-



Speaker call




Send message



0=Callback request



or

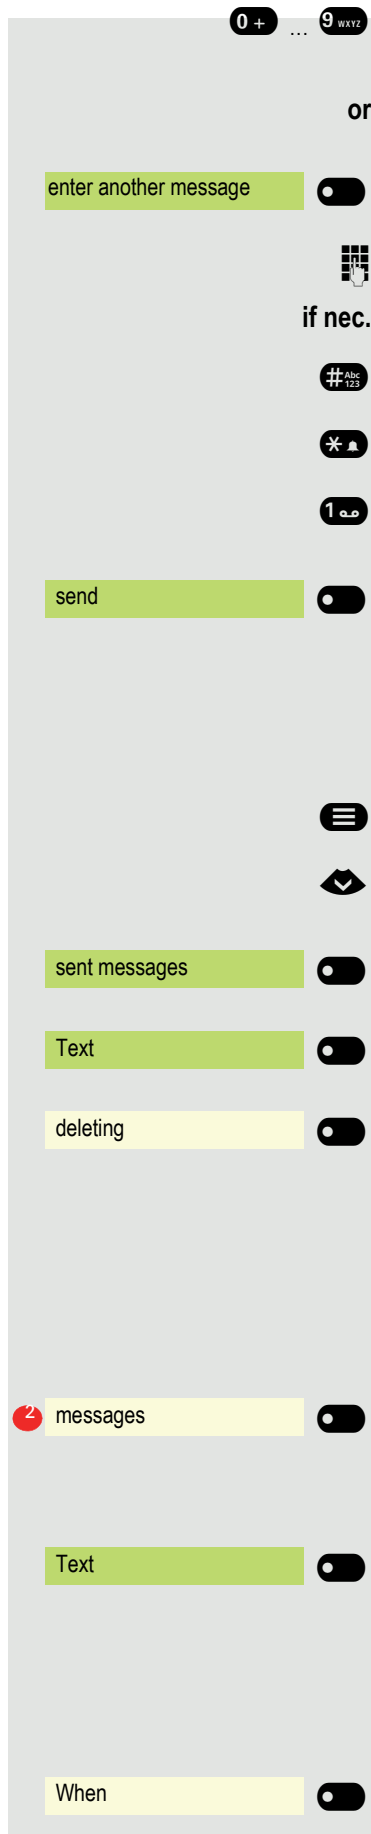

Enter code directly.

The display will show codes with relevant text.

Select and confirm.

Text input (maximum 24 characters) → page 21.

Delete last letter.

Switch between upper-case and lower-case letters.

Insert space.

Confirm.



On system phones without display, impulse or tone dial telephones, sent text messages are saved as callback requests.

Delete or display sent message

If nec. Press Main Menu key.

Select "sent messages"

Open using the Softkey. The Functions dialog opens.

Confirm. Text message is displayed.

Confirm. The message is deleted.

View and edit received messages

Pay attention to the notes on → page 100.

The notification LED flashes red. The "messages" option is shown in idle display with relevant number.

Press Softkey to open the messages list


In the Notification area under "Message from:" the first participant to have sent a message is displayed

Confirm.

The text message is displayed in the Notification area, e.g. "Please bring coffee".

View transmission time

Confirm.

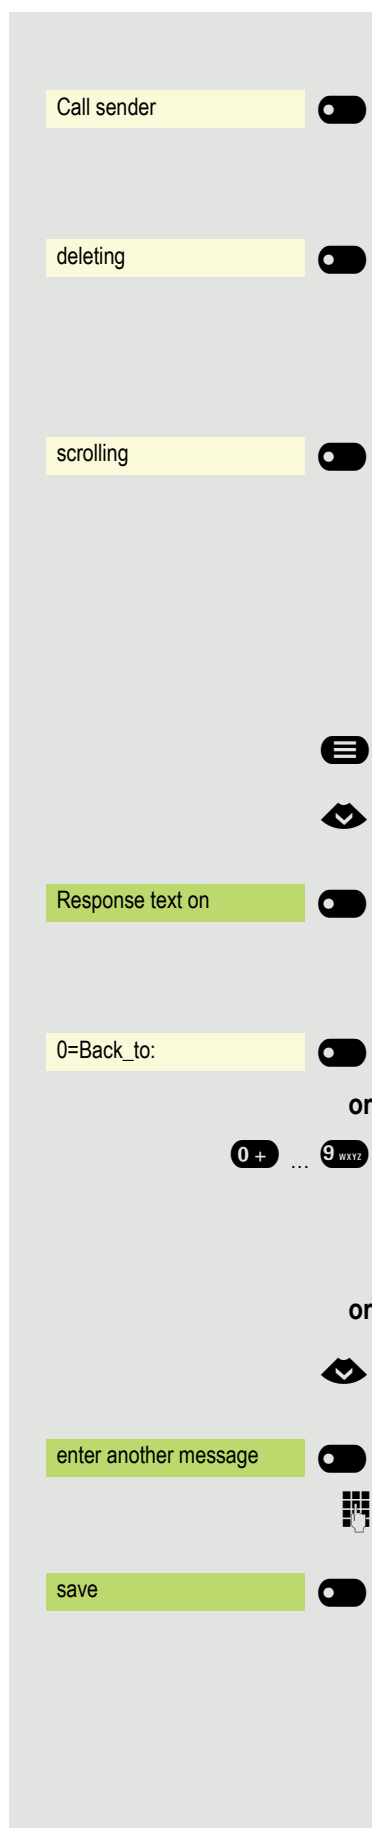

Call sender

Confirm.

Delete message

Confirm.

Switch to next message

Confirm if more messages are available.

Leave messageresponse text

Internal callers who want to reach you in your absence can leave messages / response texts on your display. When a call is received, the message appears on the caller's display. The answer text can also be displayed in the main menu's Notification area.

If nec. Press Main Menu key.

Select "Response text on"

Open using the Softkey. The Functions dialog opens.

Predefined text

Select and confirm predefined text (can be changed by relevant Administrator).

Directly enter the code for a predefined text (if known).



Predefined texts with a double point can be supplemented with a numerical input, e.g. 12:30 (enter a double point with #).

Own text

Select "enter another message"

and confirm

Enter text (up to 24 characters).

Confirm the option shown

Deleting response texts



If nec. Press Main Menu key.



Select "Response text off"

Response text off



Confirm.

Assign phone number (not for U.S.)

If configured (ask relevant Administrator), you can assign a specific number (dial-up number) to your telephone line before dialing an external number. The assigned number then appears on the called party's display.



If nec. Press Main Menu key.

Service/Settings



Open using the Softkey.

Service menu



Open with softkey.

Calls



Open with softkey.

Assign call number



Confirm.



Enter the number you wish to dial.



Dial external number.

Rollover

You can set up the volume for all notifications, which occur during your call. For more information, see "Volumes" → Page 182.

Forwarding calls

Use variable call forwarding

You can immediately forward internal and/or external calls to your lines to different internal or external telephones (destinations) (external destinations are also possible if the system is configured accordingly).

➡ If call forwarding is activated, a special dial tone sounds when the handset is lifted.

If DTMF dial-in (ask relevant Administrator) is active, you can also divert calls there. Destinations: Fax = 870, Direct inward dialing = 871, Fax-Direct inward dialing = 872.

If you are the end caller of a forwarded call, you can see the call number or the name of the forwarding party in the Notification area of the display (first line) and the those of the caller below it.

➡ If your telephone is connected to a system network, pay attention to any specific features → page 178!

Setting up call forwarding via the call forwarding menu

Prerequisite: The Presence menu is not available → page 70

Open the Forwarding menu.

➡ In the menu, you immediately have an overview of call forwarding currently set-up. This menu is also available via the user settings.

Confirm.


Confirm.

Confirm.

Use the Softkey to open the editor for the destination phone number

Enter the destination phone number on the dial pad.

Enter destination phone number. Confirm your input with the Softkey.

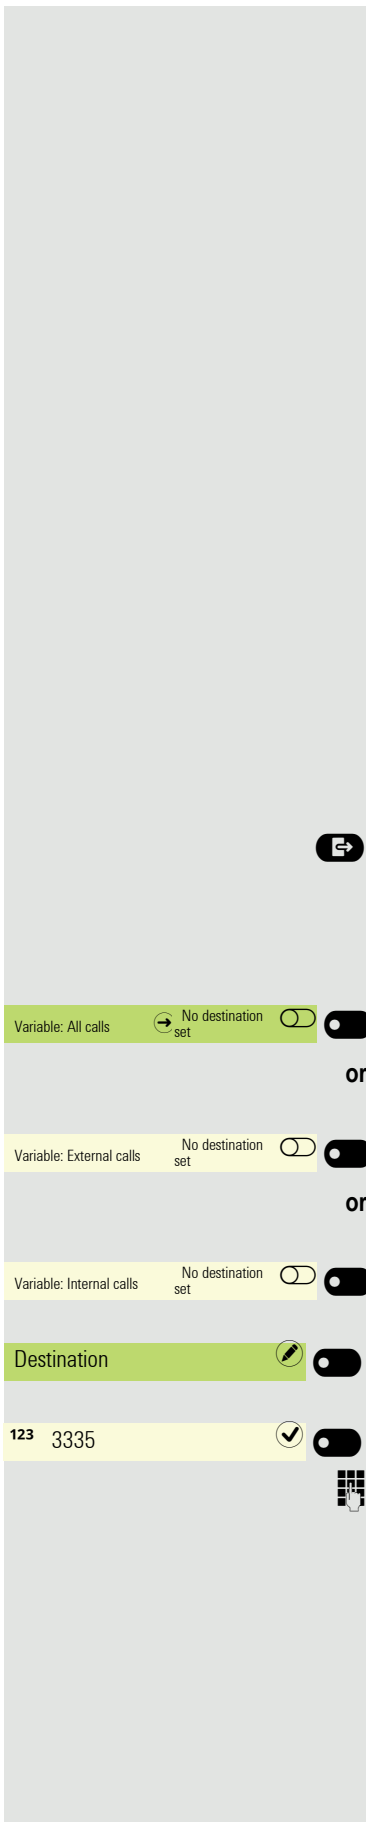

Activate call forwarding with key

The advantage of a specific key for call forwarding is that you do not have to re-enter a phone number every time. The programmed key already contains a destination. You can therefore set up several keys with different forwarding destinations.

Press the key if it is set up. The LED is illuminated.

Set up call forwarding via the idle menu

If nec. Press Main Menu key.

Select "Forwarding on".

Confirm. The Functions dialog opens.

Confirm.

Confirm.

Confirm.

Enter the destination number.

The number or the name of the forwarding destination is displayed in Notification area.

Confirm.

The LED of the call forwarding button flashes on the destination telephone.


Switch off call forwarding via the key


Press the key if it is set up. The LED goes out.

Switch off call forwarding via the idle menu

If nec. Press Main Menu key.

Confirm.

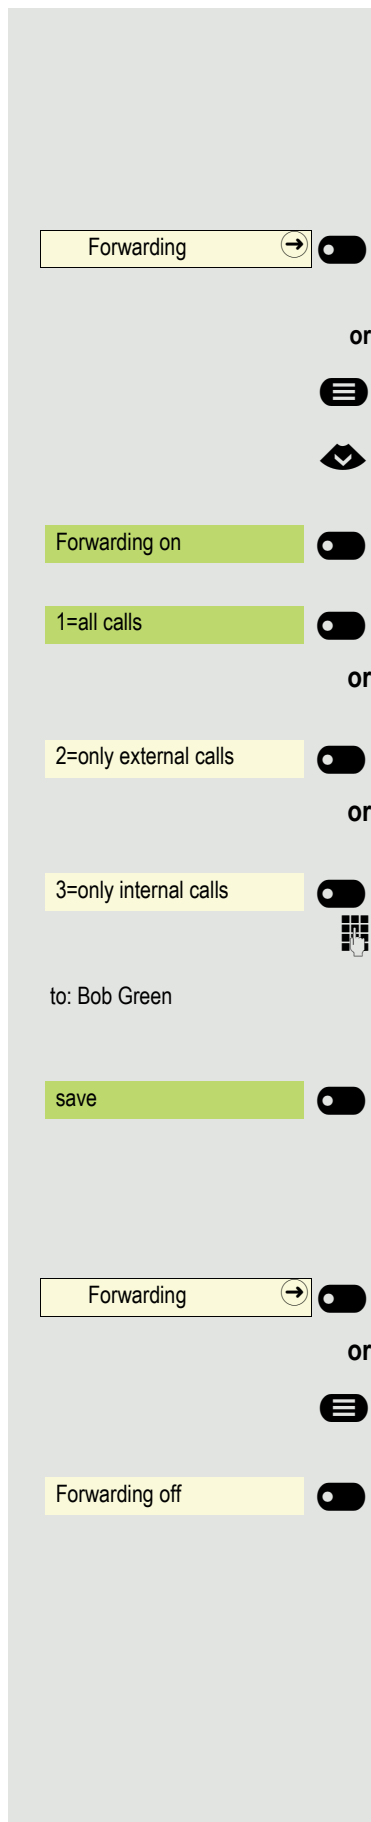

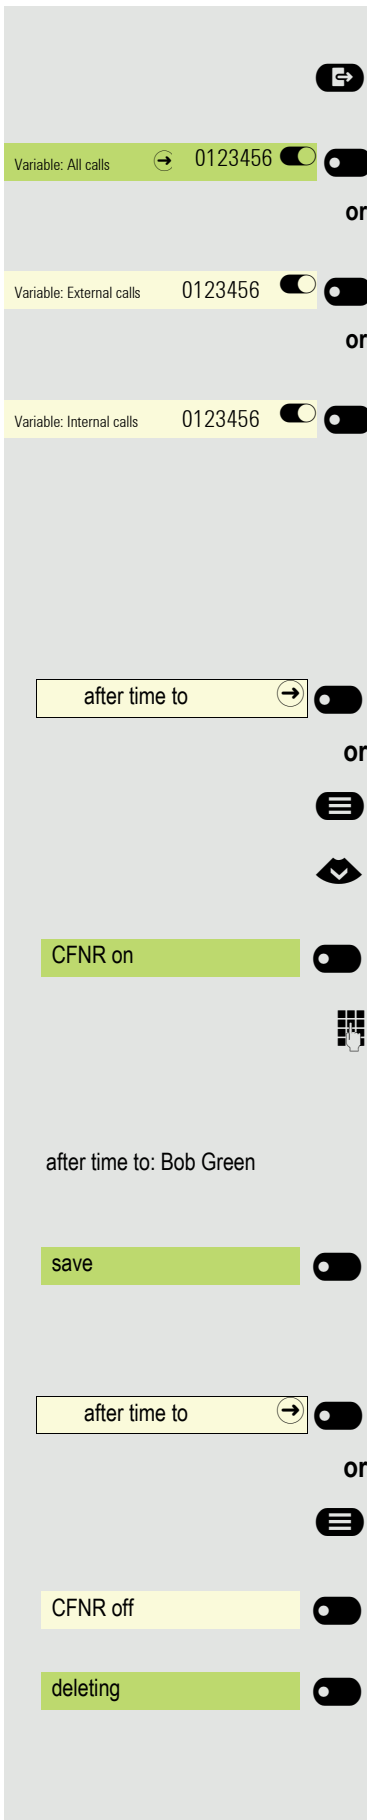

Switch off call forwarding via the forwarding menu

Open the Forwarding menu.

Confirm. Call forwarding is switched off and the destination is deleted.

Confirm. Call forwarding is switched off and the destination is deleted.

Confirm. Call forwarding is switched off and the destination is deleted.

Use CFNR

Calls that you cannot answer after ringing three times (= default, can be modified by Administrator) or any calls you receive while currently on the phone can be automatically forwarded to a defined phone of your choice.

Press the key if it is set up. The LED is illuminated.

If nec. Press Main Menu key.

Select "CFNR on".

Confirm. The Functions dialog opens.

Enter the destination number.

- Enter internal number for internal destinations
- Enter the external code and the external number for external destinations

The number or the name of the forwarding destination is displayed in the Notification area.

Confirm.


Switch off call forwarding after time

Press the key if it is set up. The LED goes out.

If nec. Press Main Menu key.

Confirm.

Confirm.



Select and confirm to return to the idle state and to not turn off call forwarding.



If call forwarding is activated after a certain period of time, the "forwarding after time" appears on the display for a short time after the handset has been replaced.

Switch on forwarding to the office

The advantage of a specific key for call forwarding is that you do not have to re-enter the call forwarding to office mode every time. The programmed key already contains the call forwarding to office mode. You can therefore set up several keys with different forwarding destinations.

Press the key if it is set up. The LED is illuminated.

Set up call forwarding via the idle menu

If nec. Press Main Menu key.

Select "Forwarding on".

Confirm. The Functions dialog opens.

Confirm.

Confirm.

Confirm. A destination is required in the Functions dialog.

Enter the destination number.

Confirm.


Switch off call forwarding via the key

Press the key if it is set up. The LED goes out.

Switch off call forwarding via the idle menu

If nec. Press Main Menu key.

Confirm.

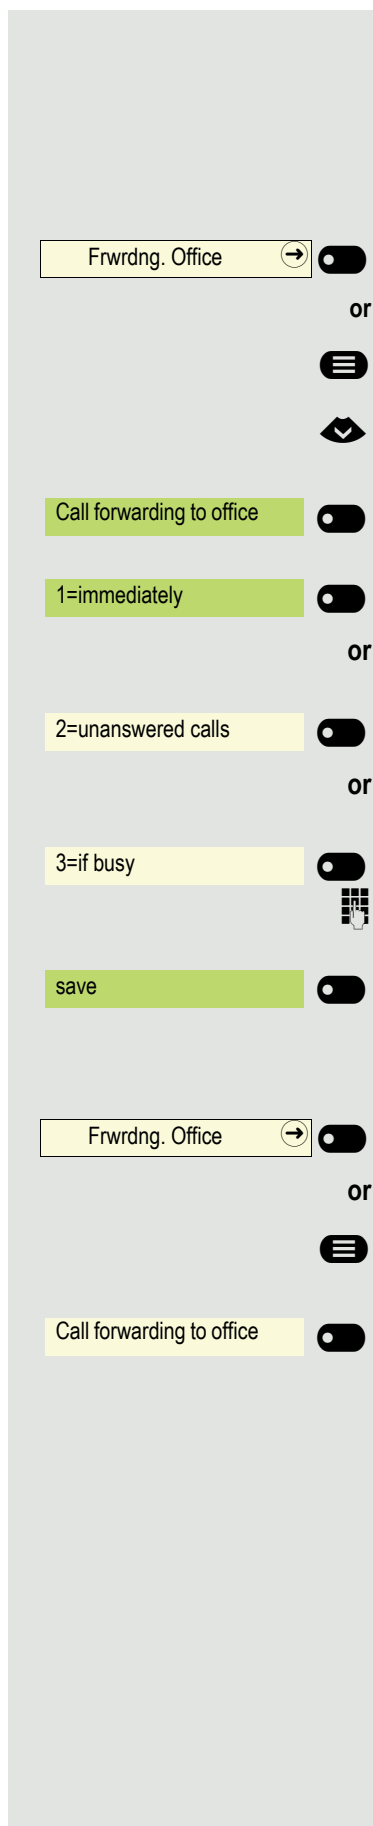

Using callback

You can request a callback if the individual called is busy or if nobody answers. This also applies to external calls via switching centers. This will save you from repeatedly attempting to call someone.

You receive a callback

- you receive a callback when the other party's line becomes free.
- as soon as the party who did not reply has held another conversation.



If configured (ask relevant Administrator), all callback requests are automatically deleted overnight.

Save callback

Prerequisite: The line is currently busy or nobody answers.

Confirm.

Accepting a callback

An participant for whom a callback was saved is now no longer busy or has phoned in the meantime. Your phone now rings.

Lift the handset.



or



Press key. LED lights up.

or

Callback



accept



Check/delete saved callback



If nec. Press Main Menu key.



Select "Callback requests"

Callback requests



Confirm.

Show next entry



Confirm to display additional entries if applicable.

Deleting an entry that is displayed

deleting



Confirm.

End query

finishing



Confirm

or



Press key.

or



Press key. LED goes out.

During the call

Switch to speakerphone

Prerequisite: You are conducting a call via the handset.

Press and hold the key, hang up handset, and then release the key and continue the call.

US mode

If the country setting is set to US (ask relevant Administrator), you do not need to press the loudspeaker key when you hang up the phone.

Press key.

Replace the handset. Proceed with your call.

Switch to handset

Prerequisite: You are conducting a call via speakerphone mode.

Lift the handset. Proceed with your call. The hands-free microphone is switched off.

Open listening in the room during a call

You can allow other people in the room to listen in on the call. Let the other party know that you have turned on the loudspeaker.

Prerequisite: You are conducting a call via the handset.

Activating

Press key. LED lights up. The hands-free microphone remains off.

Deactivating

Press key. LED goes out.

Using second call (call waiting)

You are still available to other callers, even though you are on the telephone. A warning tone and the notification "Call: <x>" in the display indicate the waiting call.

You can ignore or accept the second call.

Before you accept the second call, you can end the first call or place it on hold for subsequent retrieval.

You can also block the second call or the signal tone (→ page 72).

Prerequisite: You are on the phone and hear a warning tone (approx. every six seconds).

End the first call and answer the second call

Replace the handset. Your phone rings.

Accept second call. Lift the handset.

Place first call on hold and answer second call

Confirm. You are connected to the second caller. The first party is placed on hold.


Ending the second call, resuming the first call:

Confirm the option shown


Replace the handset.

Recall the first individual. Confirm.

Lift the handset.

Accept call waiting 



end and back 



or




accept 



or



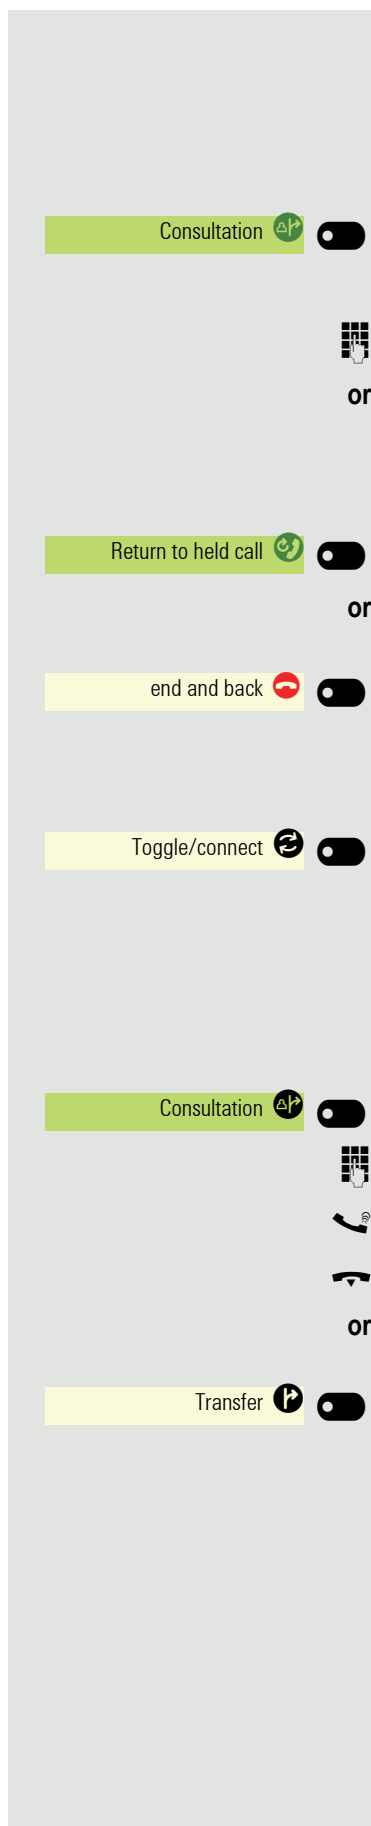

Call second individual (request)

You can call a second party while a call is in progress. The first individual is on hold.

Confirm.

Calling a second participant:

Enter the phone number of the desired participants.

Select one from the conversations list.

Back to the first participant, second participant does not answer:

Confirm.

Ending a consultation call:

Confirm the option shown

Switching to the held party (alternating)

Confirm the option shown

Transferring a call

If the person you are speaking to wishes to be forwarded to one of your colleagues, you can transfer the call.

Confirm.

Enter the phone number of the desired participants.

Potential announce call.

Replace the handset.

Confirm the option shown

Parking a call

You can park up to 10 internal and/or external calls. You can resume the parked calls on another telephone. In this way, you can continue a call on another phone.

Requirement: You are conducting a call.

Press the Function keys of the OpenScape Key Module 600E, if configured.

If nec. Press Main Menu key.

Open using the Softkey.

Select the required page with Softkey.

If visible, press the Softkey of the Function keys .

If nec. Press Main Menu key.

Open using the Softkey.

Open with softkey.

Confirm.

Select "Parking a call".

Confirm.

Enter and note a parking position number between 0 and 9. If the entered parking position number is not accepted, it is already busy; please enter a different number.

Retrieving a parked call


Prerequisite: One or more calls have been parked. The phone is idle.


Press the Function keys of the OpenScape Key Module 600E, if configured.


If nec. Press Main Menu key.

Open using the Softkey.

Select the required page with Softkey.

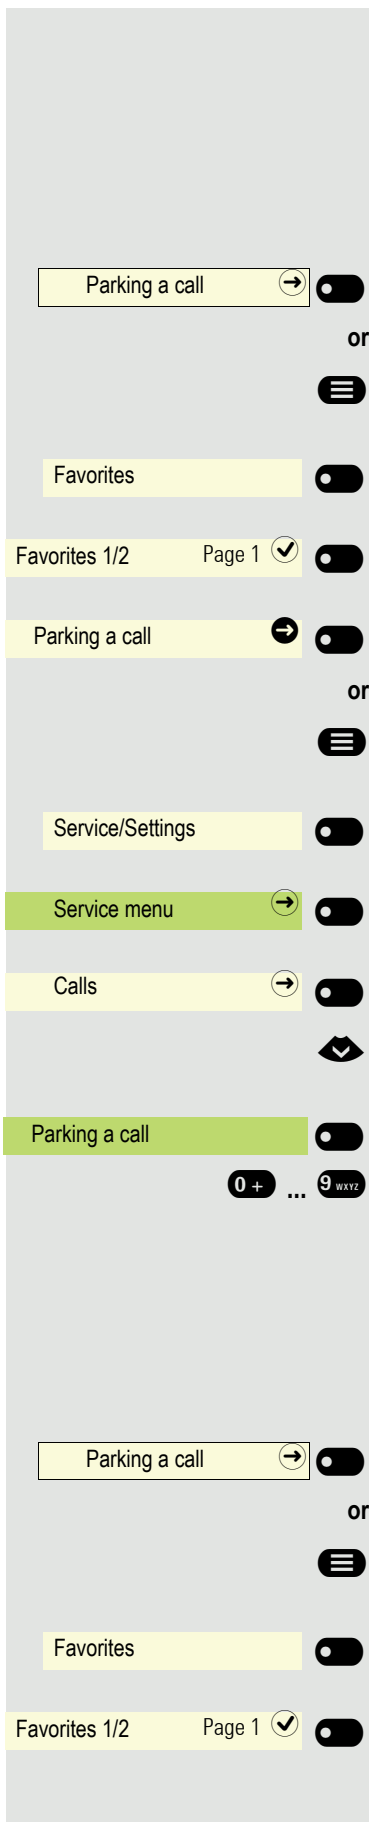

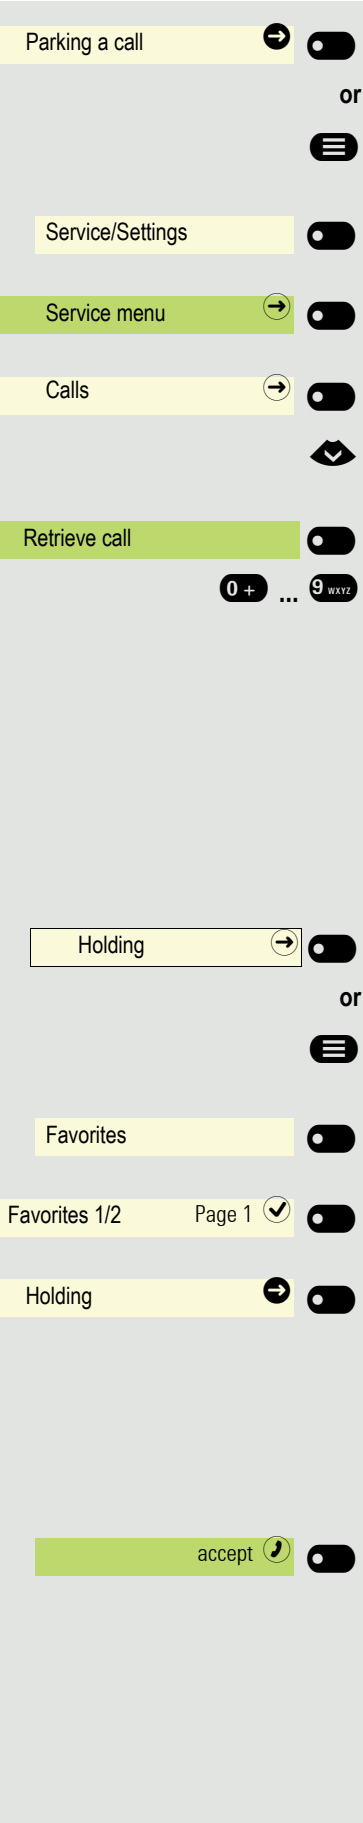

- If visible, press the Softkey of the Function keys .
- or
- If nec. Press Main Menu key.
- Open using the Softkey.
- Open with softkey.
- Confirm.
- Select "Retrieve call".
- Confirm.
- Enter the parking position number you have noted.
If the entered park position number is not assigned, you cannot answer the call.
-  If a parked call is not picked up, it returns to the station from which it was parked after a certain time (= recall).

Call holding


- You can place a call partner on hold. They will hear music on hold.
- Press Function keys of the OpenScape Key Module 600E, if configured.

- If nec. Press Main Menu key.
- Open using the Softkey.
- Select the required page with Softkey.
- When visible, press the Softkey of the Function keys .
- You can now perform a consultation call or hang up.

Recall


- If you have hung up, a recall occurs after a set time.
- Confirm recalling the parties.

" External call holding

Outstanding calls 



or

Send message 




Being on hold


You have been placed on hold by your call partner and informed accordingly in the Notification area.

Confirm to receive information about the call partner in "Conversations".


Softkey Press to send info (see also → page 91)

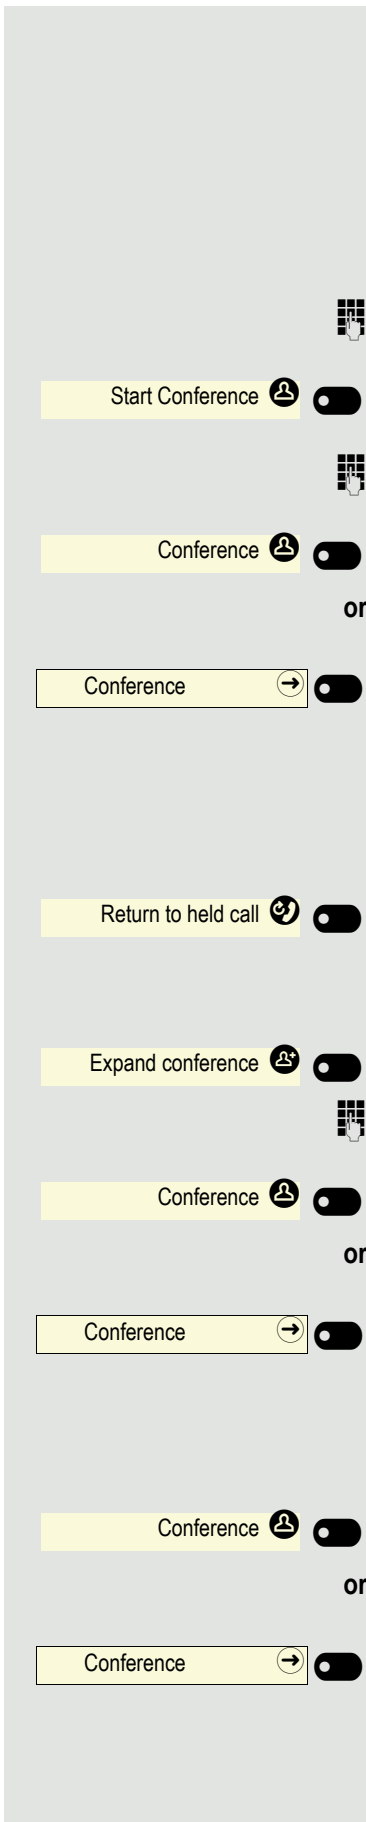

Start a conference

 Pressing the function key again resumes the conversation.

Talk to up to seven other call partners at the same time during a conference call. These can be external or internal participants.

 Only the conference call initiator can connect and disconnect participants.

Call first individual.

Confirm the option shown

Call second individual. Announce that a conference is to be set up.

Confirm.

Press Function keys of the OpenScape Key Module 600E, if configured.

A notification tone sounds every 30 seconds (can be switched off, ask relevant Administrator), to signal a conference call is taking place.

If the second individual does not answer

Confirm.

Expand conference for up to five participants

Confirm.

Call the new party. Announce that a conference is to be set up.

Confirm.


Press Function keys of the OpenScape Key Module 600E, if configured.

Connect call partner to a conference

Prerequisite: You are on a consultation call (→ page 104).

Confirm.

Press Function keys of the OpenScape Key Module 600E, if configured.

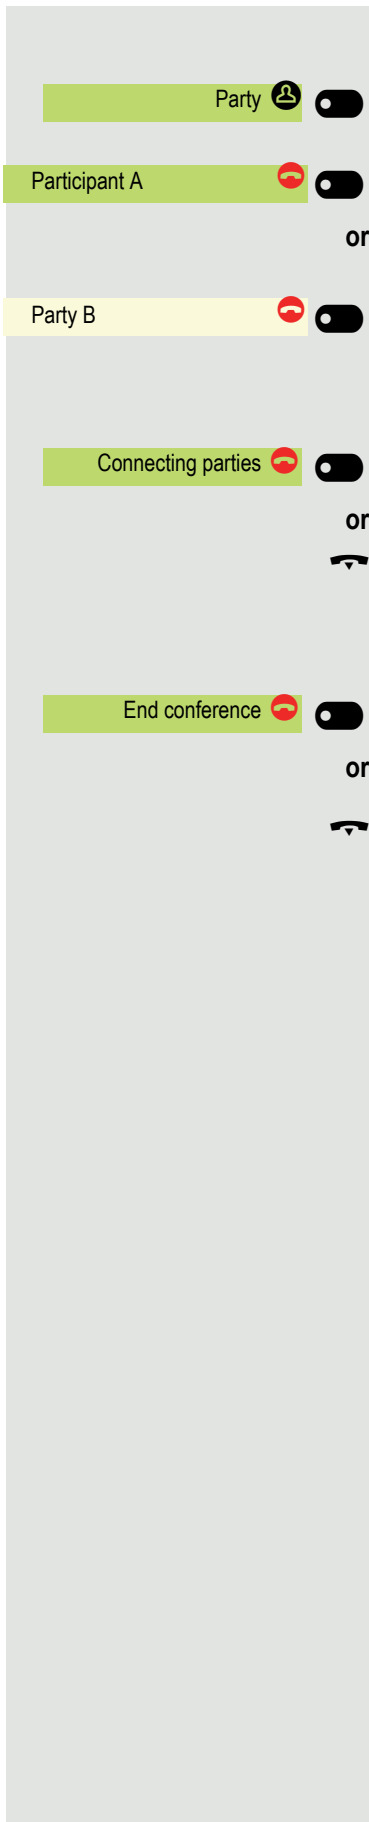

Disconnect participants from the conference

Confirm. The participants are displayed.

Confirm to disconnect participant A.

Confirm to disconnect participant B.

Leaving a conference


Confirm.

Hang up the phone, when instructed (ask relevant Administrator).

End conference

Confirm.

Hang up the phone, when instructed (ask relevant Administrator).

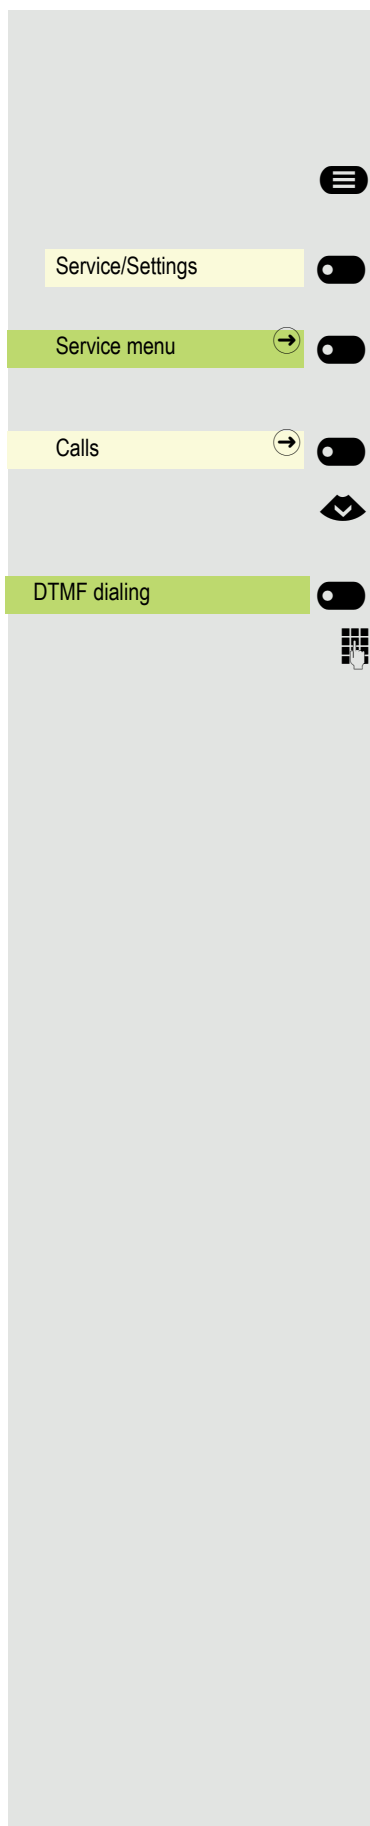

Carry out DTMF-suffix/dial tone

For controlling devices, such as answering machines or automatic information systems, you can send out DTMF signals (**D**ual **T**one **M**ulti- **F**requency).

If nec. Press Main Menu key.

Open using the Softkey.

Open with softkey.

Open with softkey.

Select "DTMF dialing".

Confirm.

You can now send out DTMF-signals with the **0+** to **9 WXYZ**, *** *** and **# ABC 123** keys.



Ending the call also deactivates DTMF suffix dialing.

Your system can also be configured in such a way that you can start the DTMF dial-up immediately after establishing the connection. You can also set-up a key for DTMF dialing.

Using Bluetooth

Bluetooth is used for wireless communication, e.g. between PCs or tablets and smartphones or headsets. Bluetooth can be used at a distance of up to 10 meters. To exchange data between Bluetooth-enabled devices, the devices need to undergo a once-off pairing procedure.

➡ Please note that Bluetooth and NFC are not available on CP600E.

Discoverability

When first enabling a connection to a Bluetooth device, this function must be switched on → page 129.

The OpenScape CP600 is recognizable by default for other Bluetooth devices once you have opened the pairing menu.

The OpenScape CP600 discoverability feature is disabled on exiting the pairing menu in order to prevent misuse.

➡ A connection is established for devices that are already connected even if the "Discoverable" function is deactivated.

Pairing

Pairing is the process used by two Bluetooth-enabled devices to "see" one another and to "recognize" that they can exchange data. It is therefore used for checking the access authorization of a Bluetooth device in a Bluetooth network. A connection key is generated for later identification.

➡ Pairing is only performed the first time contact is established between a Bluetooth device and your OpenScape CP600/CP600E. If the Bluetooth device is successfully paired, no further access authorization checks are necessary. Instead, each subsequent check uses the previously created link key.

Pairing NFC-enabled devices

If your Bluetooth device has an NFC reader (**N**ear **F**ield **C**ommunication), it can be very easily connected to your OpenScape CP600 (often smartphones, but not headsets).

The NFC transmitter on the OpenScape CP600 is located in the top right area of the display, to the left of the Presence key and below the "N" logo.



To pair the Bluetooth device, hover over this logo and follow the instructions (see instructions for Bluetooth device).

Using a Bluetooth headset

You can connect a Bluetooth headset to your OpenScape CP600, which is approved for use with the OpenScape CP600. Ask your administrator about approved headset types.

Connecting the Bluetooth headset

Prerequisite: The Bluetooth function on your OpenScape CP600 is activated → page 128.

If nec. Press Main Menu key.

Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Open using the Softkey.

Open using the Softkey.

Finding and connecting the Bluetooth headset

Now switch your Bluetooth headset to pairing mode (see the user manual supplied with the device).

Paired devices are displayed. Start the search for new devices with the Softkey. If nec. Start or set the paging function on the Bluetooth device if appropriate.


Located devices are displayed. Repeat the search if appropriate with the Softkey.


Select the relevant headset and open with the Softkey.

Confirm the pairing prompt with the Softkey. The Bluetooth device is paired and added to the list.

A pairing PIN is requested

Enter the pairing PIN and confirm with the Softkey. The Bluetooth device is paired and added to the list.

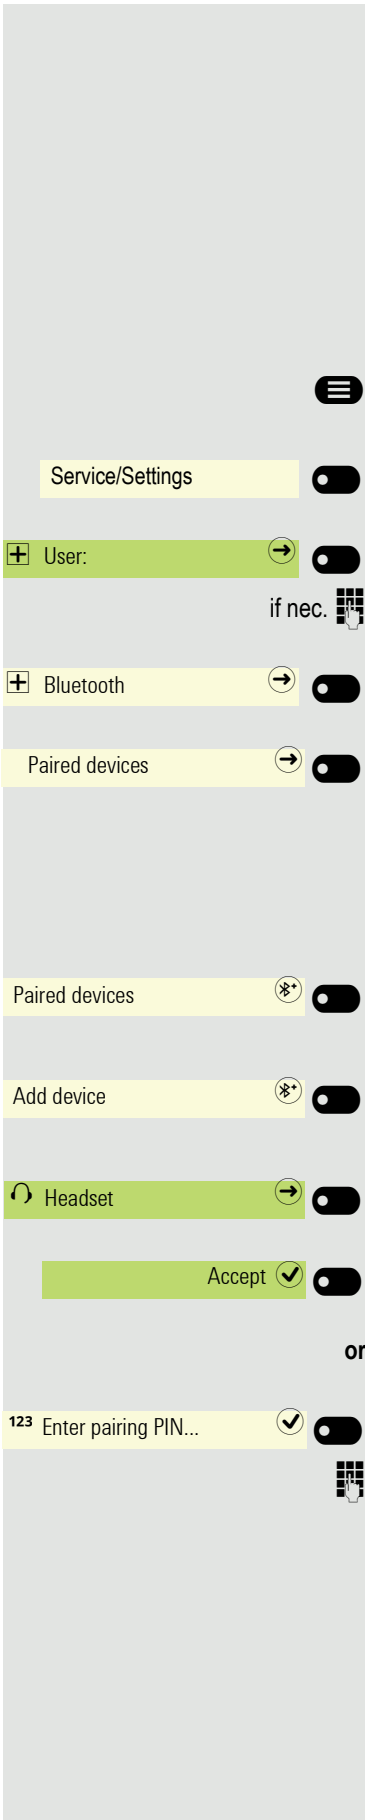

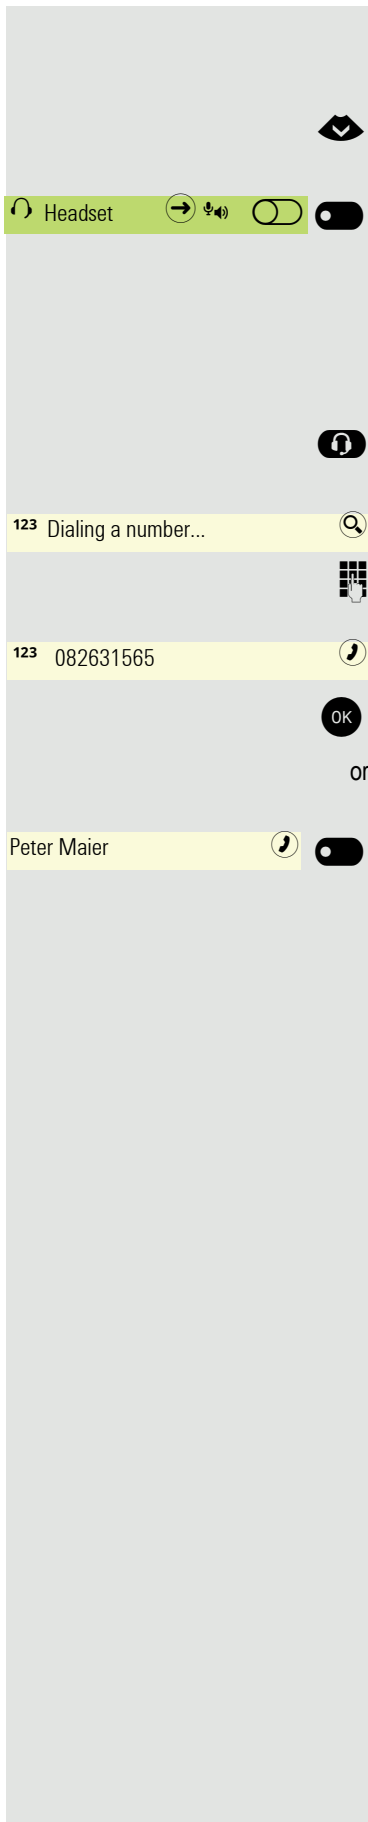

Connecting a Bluetooth headset to OpenScape CP600

The Bluetooth headset must now be connected to the OpenScape CP600.

Select the Bluetooth headset in the list.

Confirm with the Softkey to connect. You will receive a corresponding confirmation. The connection is immediately established and the headset is ready for operation.

Testing a Bluetooth headset

Press key. You should now hear the on-hook signal in the headset.

The input field is opened.

Enter the phone number.

Confirm when the complete number has been entered.

The required contact is shown in the list. Confirm with the Softkey. The connection is set up.

If nec. Set-up call volume on headset.

Transferring contacts

The Bluetooth function on your OpenScale CP600 allows you to transfer contacts in **vCard format** (file extension: vcf) from other Bluetooth devices to your OpenScale CP600 and save them in the Conversations list. You can also send entries from the Conversations list as vCards to other Bluetooth-enabled devices.

➡ Due to the diverse range of PCs, smartphones and PDA devices currently available, we are unable to provide universal instructions on how to transfer vCard files in this manual.

The instructions for data transfer via Bluetooth provided in the relevant manufacturer documentation should be observed.

Receiving a vCard

Prerequisite: The Bluetooth function on your OpenScale CP600 is activated → page 128. A vCard file is stored on your Bluetooth-enabled device (PC, tablet, mobile telephone, etc.). Start the data transfer.

If a vCard is transmitted, you will be prompted to accept the data transfer.

Example:



Accept ✓



Press the Softkey to allow the data transfer.

Saving contacts

Press the Softkey again to save the vCard(s) to the contact list. You will receive confirmation.

Save ✓



Sending a vCard

Sending to a paired device

Prerequisite: The receiving device is included in the list of paired devices, Bluetooth is activated on the device and can receive vCards.

Select the required contact from the Conversations menu.

The selected contact is highlighted.

Open the contact.

Press the Softkey. The menu for paired devices opens. A search is initiated for devices.

Use the Softkey to confirm sharing on the relevant paired device. The vCard for the entry is sent. (You will receive confirmation).

Perform the necessary steps on the destination device to save the vCard data.

Sending to an unpaired device

Prerequisite: Bluetooth is activated on the device and the device can receive vCards.

Select the required contact from the Conversations menu.

The selected contact is highlighted.

Open the contact.

Press the Softkey . The menu for paired devices opens. A search is initiated for devices. Wait until the relevant unpaired device appears.

Use the Softkey to confirm sharing on the relevant device. The vCard for the entry is sent (you will receive confirmation).

Perform the necessary steps on the destination device to save the vCard data. Detected devices are then deleted from the list.



Using a Bluetooth conference phone

You can connect a Bluetooth conference phone to your OpenScape CP600, which is approved for use with the OpenScape CP600. Ask your administrator about approved conference devices.

Connecting a Bluetooth conference phone

Below is an example of connecting and operating a conference phone.

Prerequisite: The Bluetooth function on your OpenScape CP600 is activated → page 128. The conference phone is ready for use but **switched off** (see conference device User Guide).

If nec. Press Main Menu key.

Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Open using the Softkey.

Open using the Softkey.

Finding and pairing the Bluetooth conference phone

Hold down the **trim** key on the conference phone for two seconds until the blue display light flashes (Warning: the device must be switched off first – observe the instructions in the operating instructions of the conference equipment).


Start the search for new devices with the Softkey. If nec. Start or adjust the paging function on the Bluetooth device.

Located devices are displayed. Repeat the search if appropriate with the Softkey.

Select the conference phone and press Softkey to open.

Pairing PIN for the conference equipment is requested.

Enter the pairing PIN ("0000") and confirm with the Softkey. Following successful pairing, the device is added to the list of paired devices. You hear a short confirmation tone from the conference device before it switches itself off again.

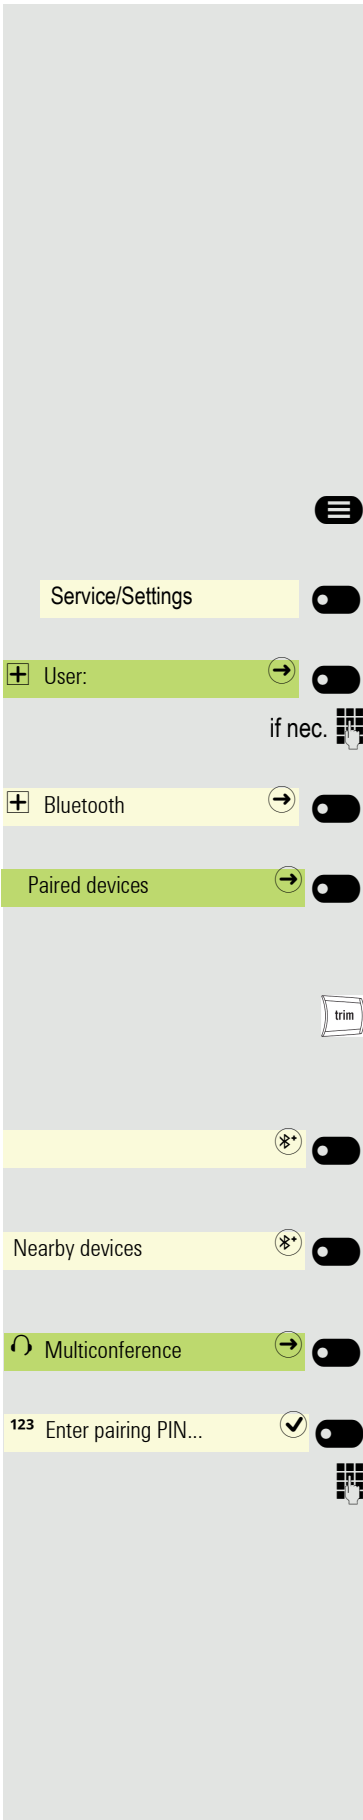

Connect/disconnect the conference device with OpenScape CP600

The conference device must still be connected to the OpenScape CP600. If you want to subsequently use the conference phone at another location, for example, you should first disconnect it from the OpenScape CP600.

Select the conference device from the list of paired devices.

Confirm with the Softkey to connect. The connection is immediately established and the is ready for use.

Confirm with the Softkey to disconnect. You will receive a corresponding confirmation.

Exit the menu if appropriate.

Testing the Bluetooth conference phone

Answering a call

Prerequisite: The conference device is ready for operation and the OpenScape CP600 is in idle mode.

Both the phone and the "conference device" ring. The caller is displayed. To answer the call, you can now:

Press key.

Press the Softkey shown.

Press the On/Off key on the "conference device".


You are connected with the other party. The "conference device" is switched on. You can now, for example, initiate a consultation call or accept a second call to set up a conference.

Calling a participant

Prerequisite: The conference phone is ready for use but **switched off**. The OpenScape CP600 is in idle mode.

Press key.


Enter the phone number. The "conference device" switches on automatically. Once the subscriber answers, you can set up a conference via a consultation or second call.

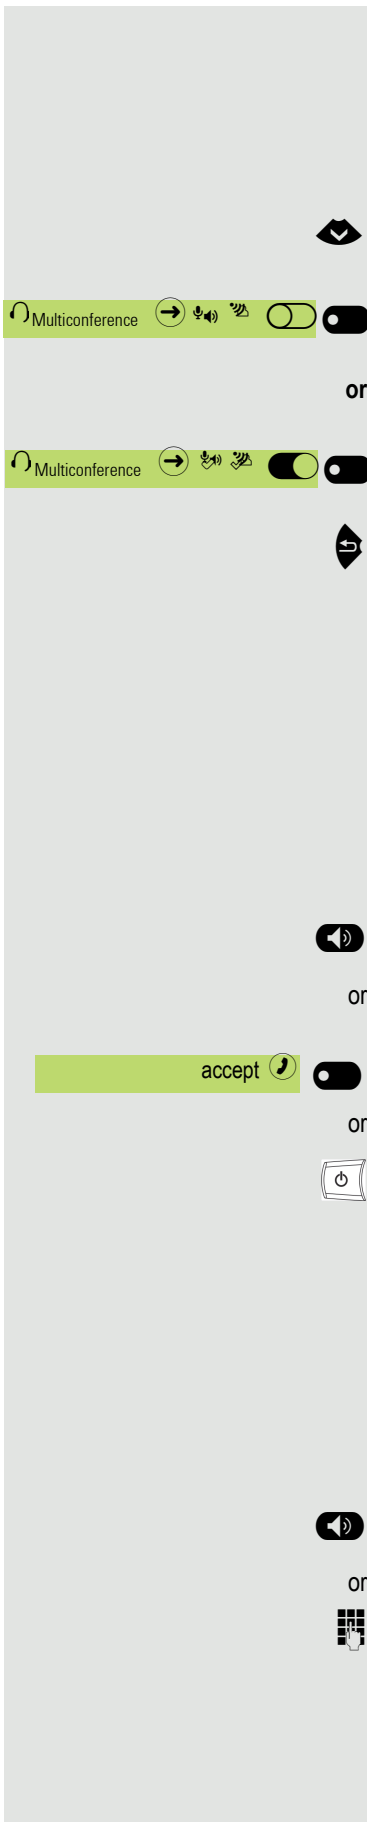

Using a Bluetooth device

You can control calls on the HFAG (hands-free audio gateway, e.g. mobile device) from your OpenScape CP 600 phone via Bluetooth.


Incoming HFAG call

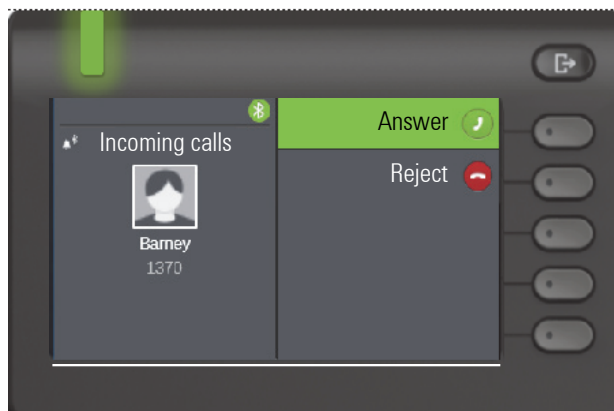


Bluetooth status bar icon indicates an HFAG call.

For more information about how to proceed during incoming call, see "Receiving a call" → Page 82.

Connected HFAG call

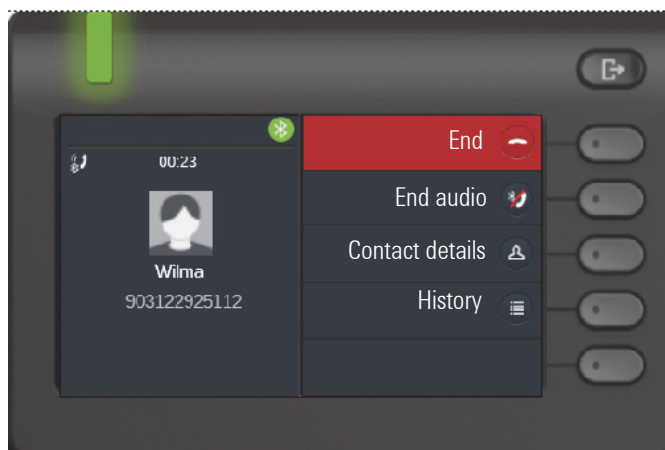

Bluetooth status bar icon indicates an HFAG call. The "End audio" button transfers the HFAG call audio from the OpenScape CP 600 to the HFAG.

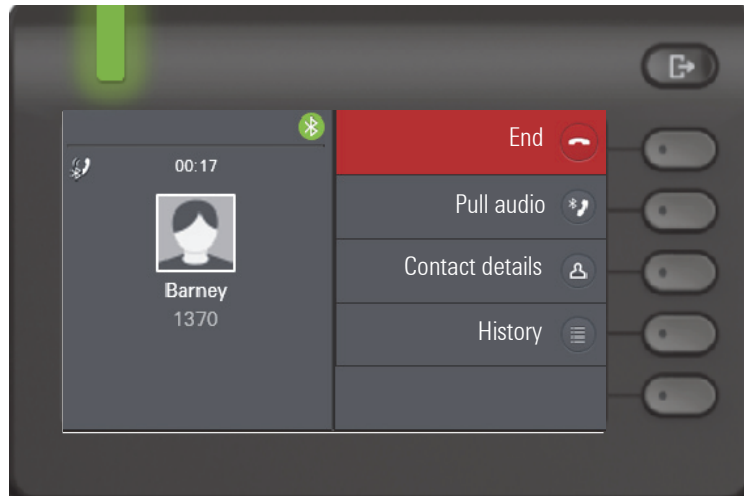


The “Pull audio” button reroutes the audio stream from HFAG back to OpenScape CP 600.

The “Move to mobile” button reroutes the audio stream from OpenScape CP 600 to the HFAG. Call is removed from the CP phone.

For more information about how to proceed during a call, see “During the call” → Page 102.

Outgoing HFAG call

Outgoing Call Dialling

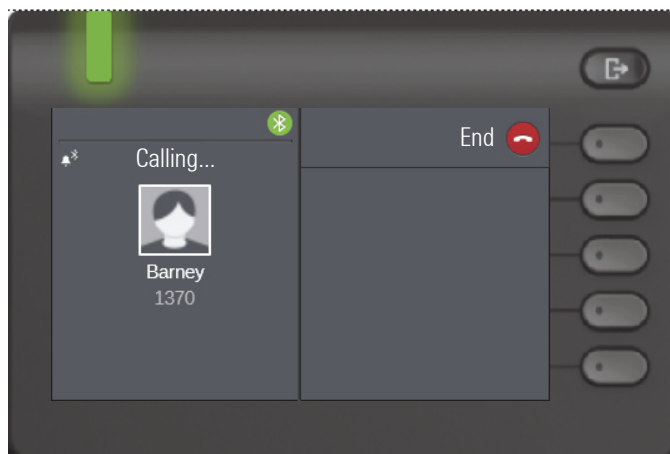


Bluetooth status bar icon indicates an HFAG call.

Failure in dialling the outgoing HFAG call is indicated by the HFAG by one of the unsolicited extended response indication codes:


- NO CARRIER
- BUSY
- NO ANSWER
- DELAYED
- BLACKLISTED

Outgoing Call Ringing

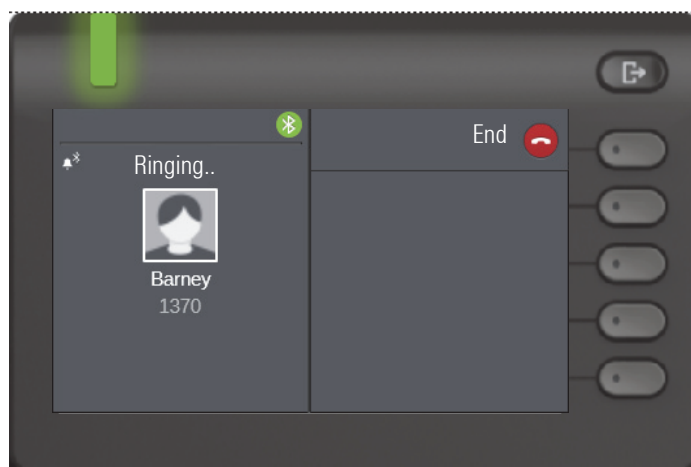


HFAG call states in Main Menu Screen

Incoming HFAG call in the Main menu screen

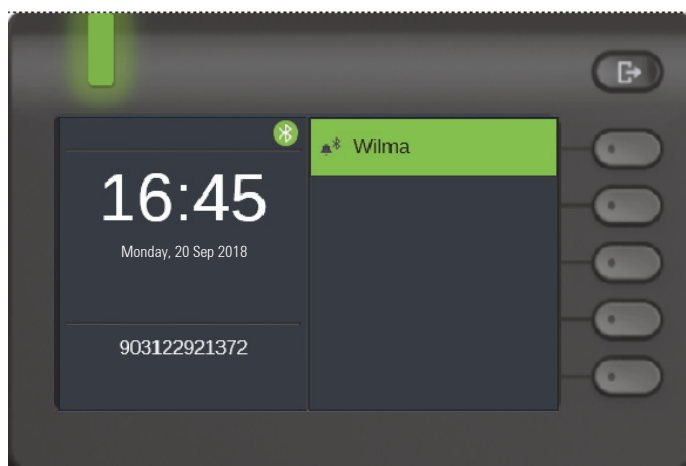


The icon with the Bluetooth rune index indicates incoming HFAG call.

Connected HFAG call in the Main menu screen

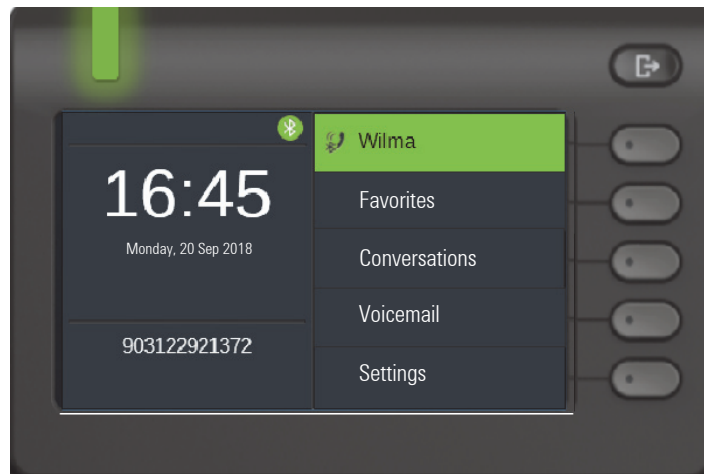

The icon with the Bluetooth rune index indicates connected HFAG call.


HFAG call states in Conversations Screen

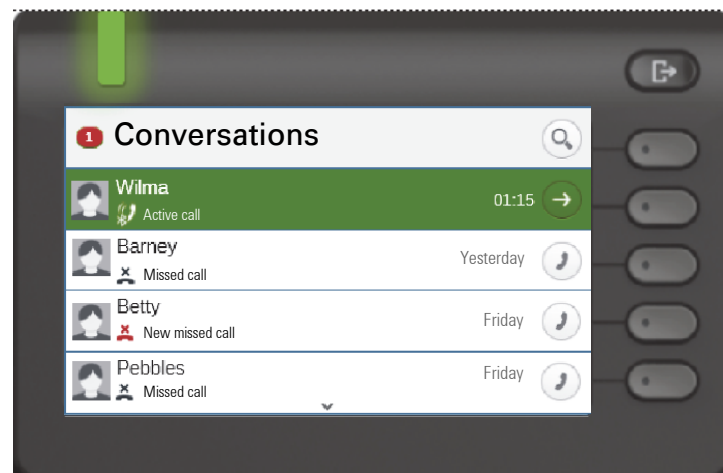

Connected HFAG calls are displayed in the conversation list. The HFAG call is distinguished from native calls by a special call state icon under the user name.

Anonymous mode

As a User, you are able to configure “Hide mobiles data”. In this mode, no caller information will be presented, only presence and state of the call. All Bluetooth calls are logged to Anonymous conversation.

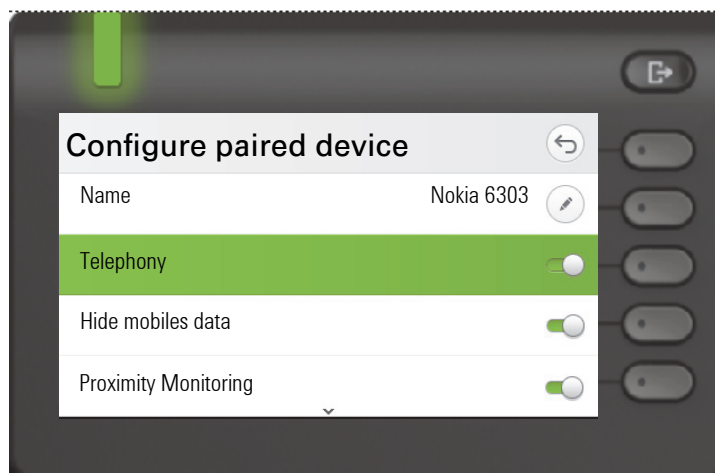


Using Bluetooth keyboard

Bluetooth keyboard can be paired with phone in User section under "Paired devices". After successful pairing keyboard appears in paired devices list.

There can be only one Keyboard device connected at the same time.

Special "keyboard" icon should be shown in status bar when Bluetooth keyboard is connected.

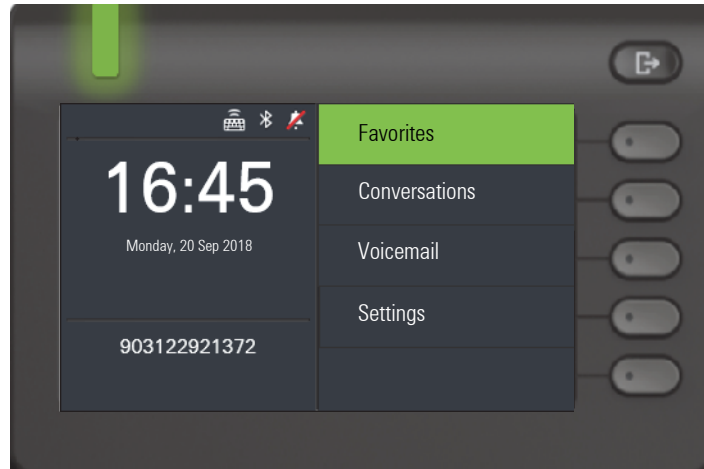

Parallel usage of Bluetooth keyboard and phone keypad is possible. Phone interface differentiates between events from Bluetooth keyboard and phone's keypad and shows speller and its settings only for phone's keypad.

Supported languages

- German, English, French, Italian and Spanish
- For other languages, English layout will be used.

Navigation keys

Navigation keys work as following:

- Direction keys → should work as direction keys on 5-way navigator
- Enter → OK
- Backspace → Back
- Esc → Go to landing screen
- Volume keys → Volume keys
- Mute key → Microphone mute
- Page down key → moves highlight down by the number of screen lines. Since this is only CP600 that is equivalent to 5 down nav. key presses
- Page Up key → equivalent to 5 up navigation key presses
- Home key → equivalent to long press Up navigation key presses
- End key → equivalent to long press Down navigation key presses

When phone is in Idle state, pressing number keys on keyboard initiate dialing in the same way as number keys on keypad do.

When phone is in call, pressing number keys on keyboard sends DTMF tones in the same way as number keys on keypad do.

Keyboard pairing modes

Keyboard initiates pairing and sets the pairing mode. The pairing mode differs depending on the keyboard type and manufacturer.


There are three possible pairing modes supported:

- Simple pairing (passkey entry) - if keyboard initiates "simple pairing", PIN is generated by keyboard and CP600 shows this PIN on display and waits until the number is typed on the keyboard.
- Legacy (numeric comparison) - if keyboard initiates "legacy" pairing, CP600 generates random number, displays it to user and waits until the number is rewritten on the keyboard.
- Just works - if keyboard initiates "just works" pairing, CP600 displays Bluetooth keyboard pairing request and waits until it is confirmed.

Using Bluetooth “Remote button”

Bluetooth Remote button can be paired with the phone in User section under "Paired devices". After successful pairing, the Remote button is shown with a keyboard profile in paired devices list.

The Remote button device behaves as Bluetooth keyboard device until the user configures it to be a Remote button. When Remote button is enabled then the device appears, and behaves, as a Bluetooth Remote button device.

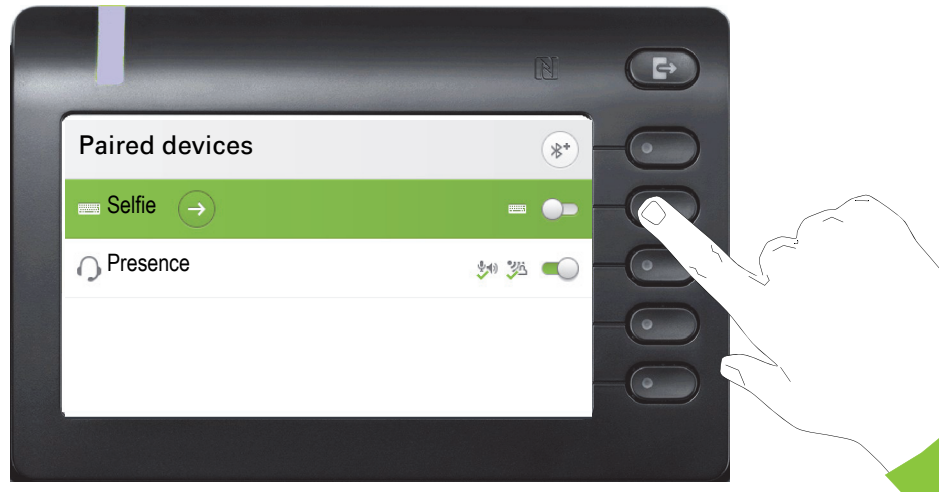


By pressing the Remote button, you can trigger certain action (e.g. under the Function keys or on OpenScape Key Module 600E) configured by you on your OpenScape CP 600. You can choose from the following keys:


- Function keys s.
- Key Module keys

Please note that the shifted level function of an Function keys cannot be selected.


Using the Configuration option leads to the Configuration Menu for that device. The device name is "Selfie" in the screens shown.

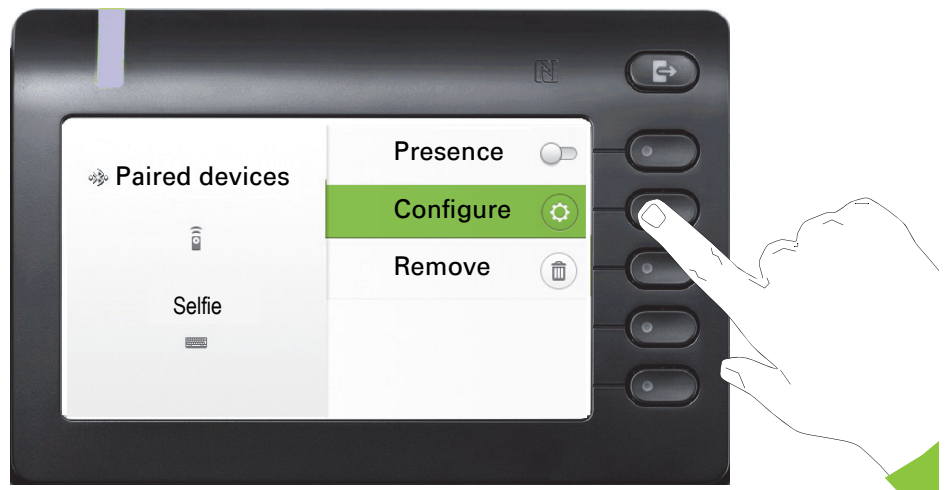


In this Configuration Menu the device can be identified as a Bluetooth Remote button device via the "Remote button" status. The action of the entry allows the Bluetooth Remote button device to be configured.

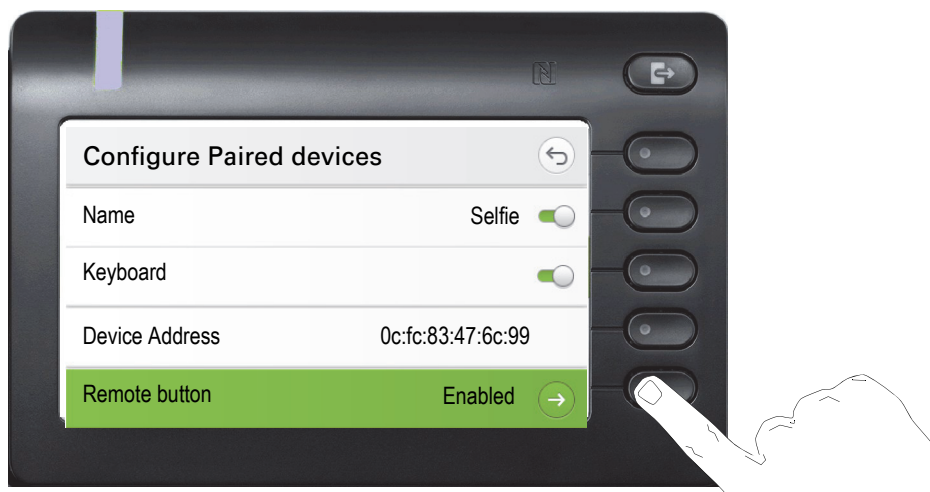

Selecting the "Remote button" menu above leads to the screen that allows this Bluetooth Remote button device (called Selfie) to be configured. The Function keys are identified by their key label in the "Select key" screen.

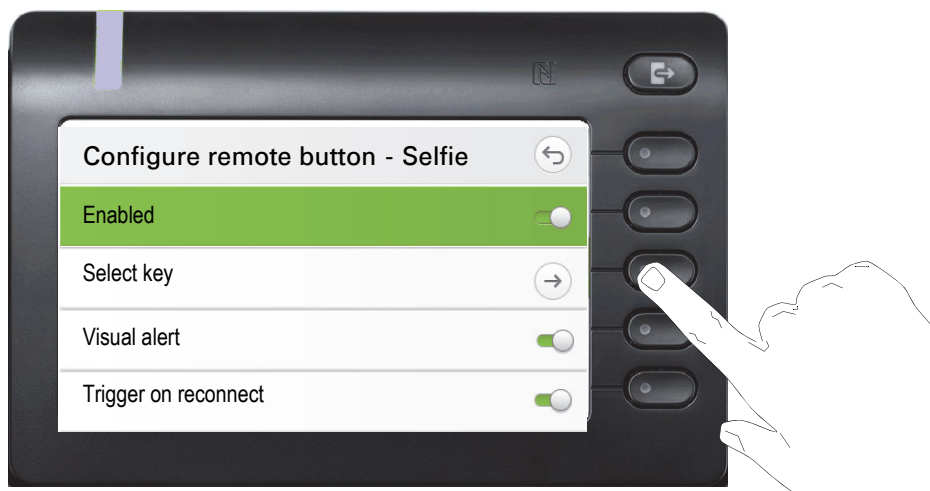


Selecting the "Select key" menu above leads to the screen that allows the Function keys for this Bluetooth Remote button device to be configured.

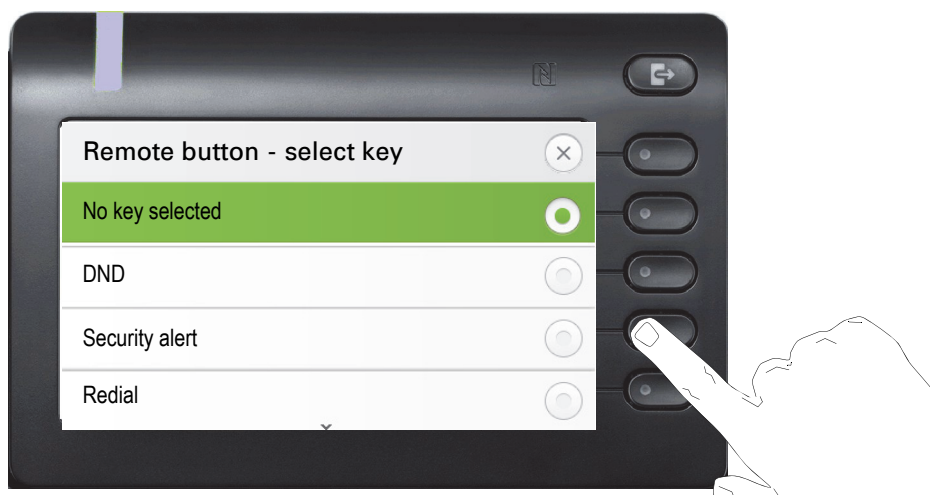

Only a Function keys with a function configured can be selected to be triggered by the Bluetooth Remote button click. All unallocated keys are hidden.

Function keys from any attached Key Module are potentially available to be selected. No shifted level keys can be selected.

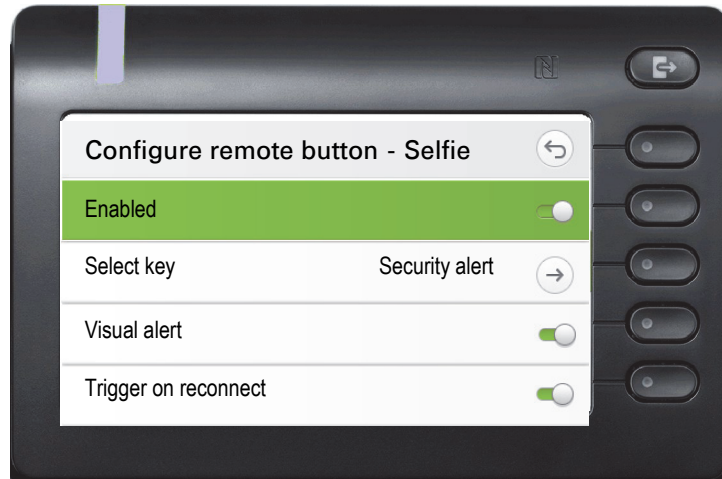


The "Configure remote button" screen now shows the label for the Function keys that has been configured to be triggered by this Bluetooth Remote button device.

Trigger on reconnect

If the Bluetooth Remote button is disconnected (e.g. the device is in energy saving mode) and you want to reconnect it, the following may happen based on the settings of the functionality "Trigger on reconnect".

- If enabled, the remote button will connect and trigger the configured Function key at the same time. You need to press the Remote button only once.
- If disabled, you need to press the Remote button twice. First time it will reconnect and second it will trigger the configured Function key.

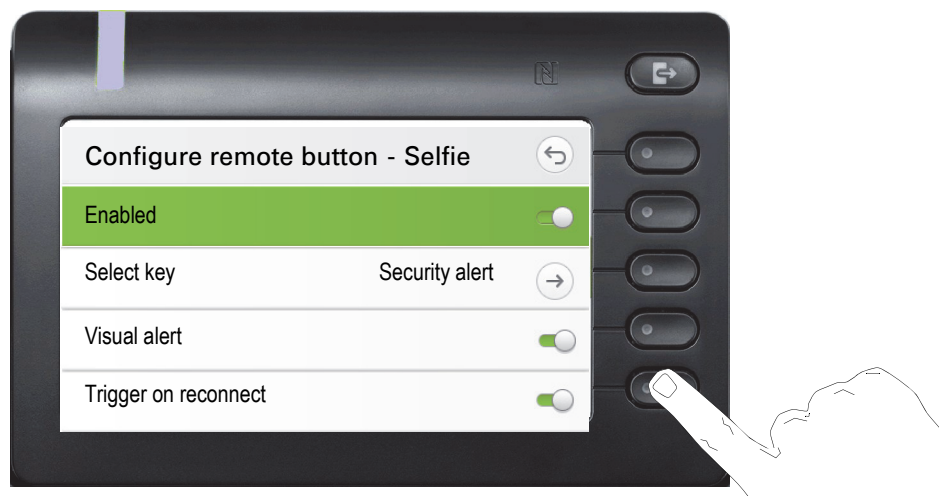

Bluetooth settings

Activating and deactivating Bluetooth



The Bluetooth function was activated for your phone by the administrator.

You can also configure this setting via the Web interface → page 195.

If nec. Press Main Menu key.

Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Open using the Softkey.

Open using the Softkey.

Activate with the Softkey. The Bluetooth function is activated and is now available.

Save the setting by selecting the Softkey.

Changing the Bluetooth name of your OpenScape CP600

Here you can determine which name your OpenScape CP600/CP600E should use to register at other Bluetooth devices.

You can also configure this setting via the Web interface → page 195.



By factory default, the Bluetooth name is: IntegratedPhone.

If you are currently in the Bluetooth configuration, then the phone is visible.

If you exit the menu, it will be hidden again after a short time.

If nec. Press Main Menu key.


Open using the Softkey.


Open using the Softkey.

Enter and confirm the User password.

Open using the Softkey

Open using the Softkey

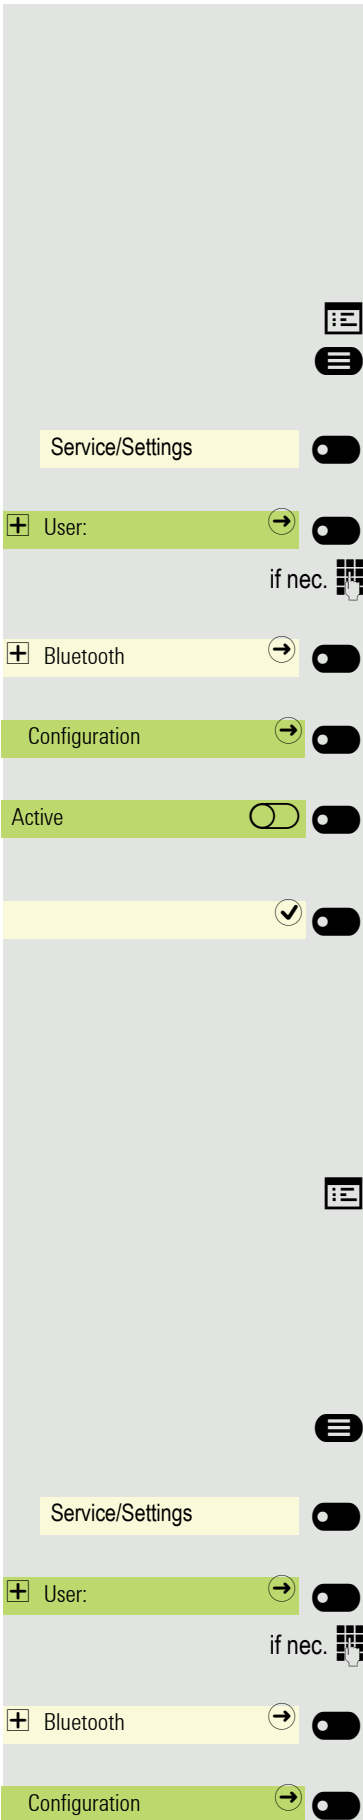

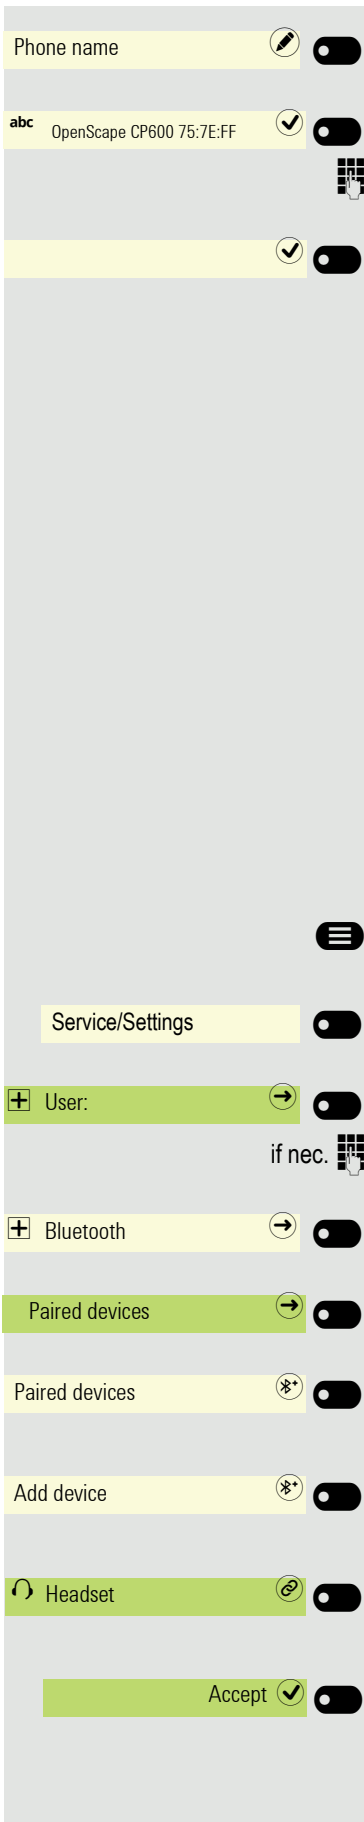

Open using the Softkey. The current name is displayed.

The predefined name is entered.


Change to the desired name and conclude your input with the Softkey.

Save the setting by selecting the Softkey.


Managing Bluetooth devices

The following functions are available in the Bluetooth pairing manager:

- Adding Bluetooth devices
- Delete Bluetooth device list
- Connect or disconnect paired Bluetooth devices
- Remove single Bluetooth devices from the list
- Rename Bluetooth devices in the list

 The OpenScape CP600 is visible for other Bluetooth devices in the vicinity when you are in this menu.

Adding Bluetooth devices

 If your Bluetooth device has a NFC reader (**N**ear **F**ield **C**ommunication), it can be paired very easily with your OpenScape CP600, see → page 111.

If nec. Press Main Menu key.

Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Open using the Softkey.


Open using the Softkey.

Paired devices are displayed. Start the search for new devices with the Softkey. If nec. Start or set the pairing function on the Bluetooth device.

Located devices are displayed. Repeat the search if appropriate with the Softkey.

If at least one new device was found, select the relevant Bluetooth device and open with the Softkey.

Confirm the pairing prompt with the Softkey. The Bluetooth device is paired and added to the list.

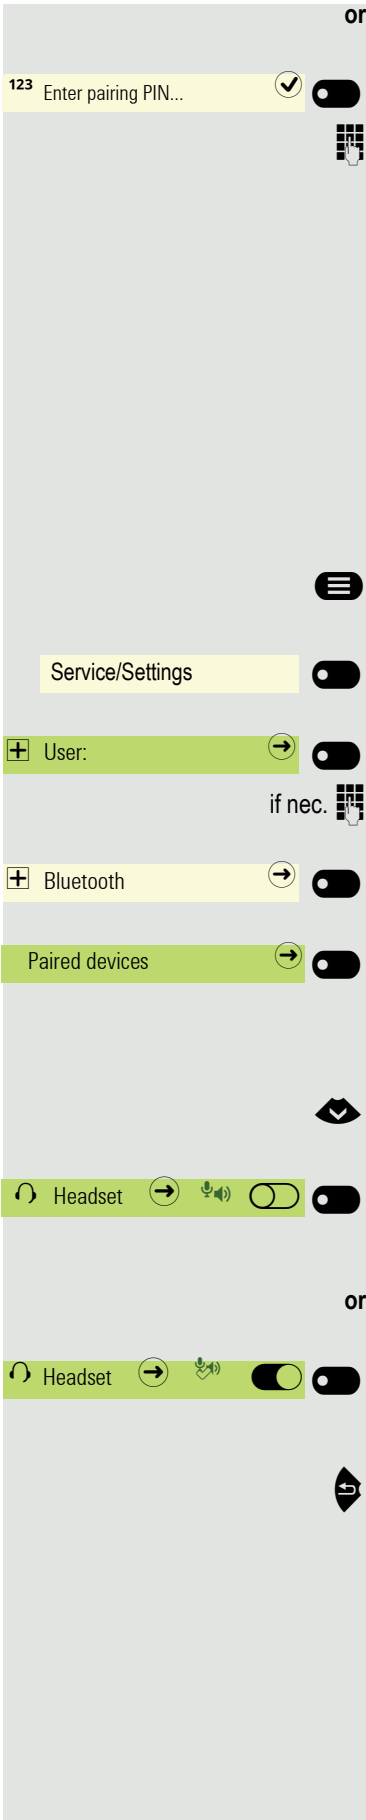

A pairing PIN is requested

Enter the pairing PIN and confirm with the Softkey. The Bluetooth device is paired and added to the list.

Your OpenScape CP600 is now "paired" with the Bluetooth device, but not yet connected → page 130.

➡ Pairing is only performed the first time contact is established between a Bluetooth device and your OpenScape CP600. If the Bluetooth device is successfully paired, no further access authorization checks are necessary. Instead, each subsequent check uses the previously created link key.

Connecting/disconnecting a Bluetooth device

Prerequisite: At least one Bluetooth device is listed.

If nec. Press Main Menu key.

Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Open using the Softkey.

Open using the Softkey. Paired devices are displayed.


➡ You receive a message that the OpenScape CP600 is now visible for other Bluetooth devices while you are in this menu.

Select the relevant Bluetooth device.

Confirm with the Softkey to connect. You will receive a corresponding confirmation. It often suffices to switch on the Bluetooth device in order to establish the connection automatically.

Confirm with the Softkey to disconnect. You will receive a corresponding confirmation. The connection is dropped automatically if you switch off the Bluetooth device.

Exit the menu using the backspace key.

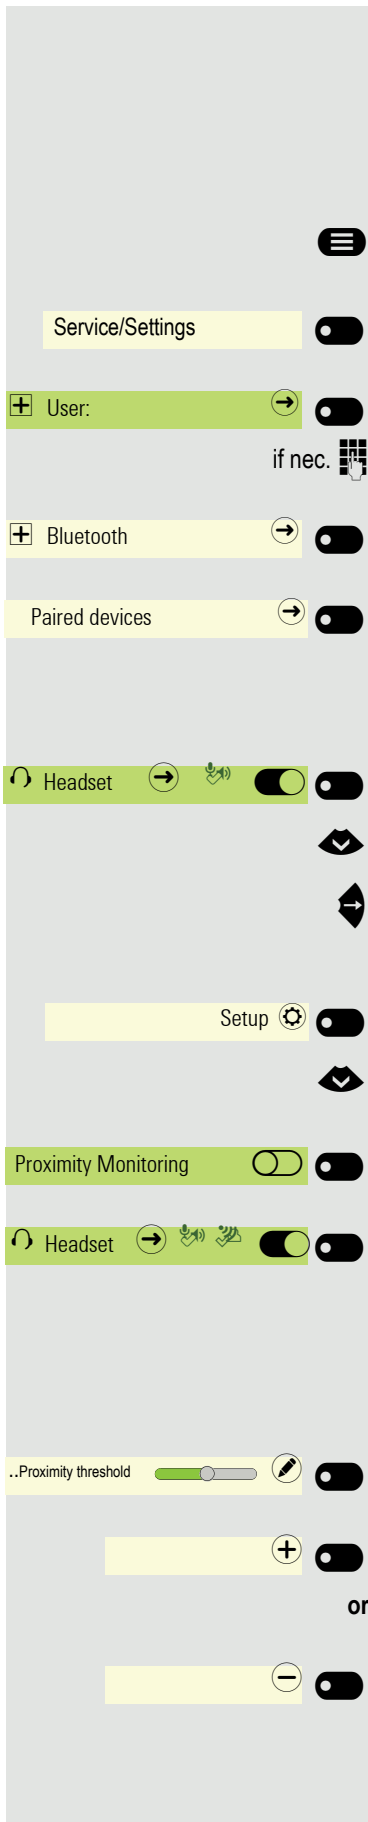

Connecting/disconnecting a Bluetooth device automatically

If your Bluetooth device is proximity-system enabled, you can activate Proximity Monitoring. If the paired device comes into the immediate vicinity of the OpenScape CP 600/600E, the connection is established automatically. If the device is removed from the vicinity, the connection is dropped automatically. The default setting is for Proximity Monitoring to be disabled.

If nec. Press Main Menu key.


Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Open using the Softkey.

Open using the Softkey.

 You receive a message that the OpenScape CP600 is now visible for other Bluetooth devices while you are in this menu.

Paired devices are displayed.

Select the relevant Bluetooth device.

and open it. The status of the device is displayed and activated, for example, with "{aud)".

Open the Configuration menu with the Softkey.

Select the "Proximity Monitoring" function.

Activate with the Softkey.

Proximity Monitoring Is activated.

Setting the Proximity threshold


You can set the "Proximity threshold" if appropriate to suit the required circumstances.

Open the setting for the Proximity threshold by selecting the Softkey¹.

Use the Softkey to increase the proximity.

Use the Softkey to reduce the proximity.

1. The display shows the current setting

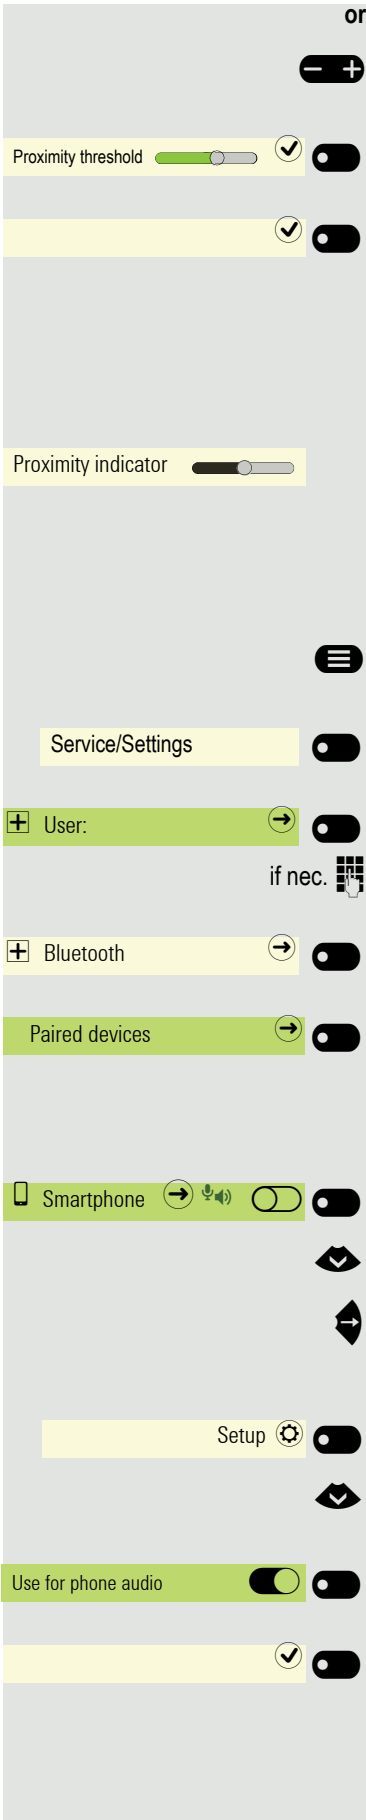

Adjust using the toggle key

Confirm the setting with the Softkey.

Save the setting with the Softkey and exit the menu.

Checking the proximity display

Check different positions of your Bluetooth device at which the connection can still be maintained.

This is a read-only setting.

Activating/deactivating audio

If no audio function is provided for your Bluetooth device, you should disable audio in your device's settings. The function is always activated by default.

If nec. Press Main Menu key.


Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Open using the Softkey.

Open using the Softkey.

 You receive a message that the OpenScape CP600 is now visible for other Bluetooth devices while you are in this menu.

Paired devices are displayed.


Select the relevant Bluetooth device.

and open it. The status of the device is displayed and activated, for example, with "pxp" for "Proximity Monitoring".

Open the Configuration menu with the Softkey.

Select the "Audio" function.

Deactivate with the Softkey.

Save the setting by selecting the Softkey. The icon  for the device name was removed.

Deleting a Bluetooth device from the list

You can delete a single Bluetooth device from the list, for example, if it will no longer be in the vicinity for an indefinite period.

If nec. Press Main Menu key.

Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Open using the Softkey.

Open using the Softkey. You receive a message that the OpenScape CP600 is now visible for other devices in the vicinity as long as the menu is open.

Paired devices are displayed.

Select the relevant Bluetooth device.

and open it.

Confirm deletion with the Softkey.

Confirm deletion again with the Softkey.

Renaming a Bluetooth device in the list

A Bluetooth device is entered in the list with the name set in the device. This is often the device type. You can change this name.

If nec. Press Main Menu key.

Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Open using the Softkey.


Open using the Softkey. You receive a message that the phone is now visible for other devices.


Paired devices are displayed.

Select the relevant Bluetooth device.

and open it.

Open the Configuration menu with the Softkey.

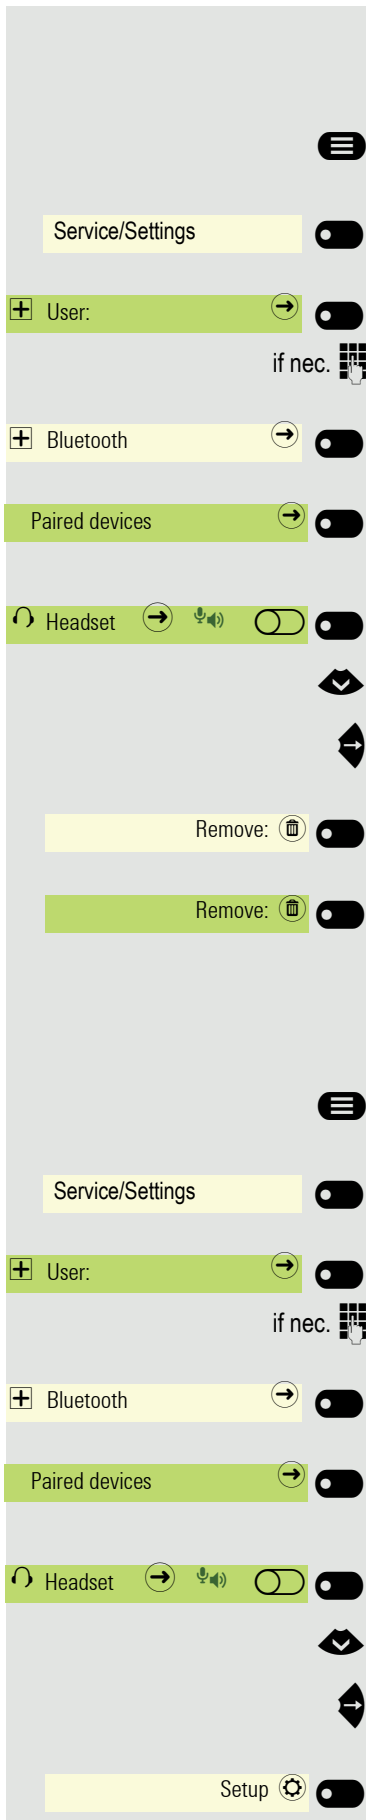

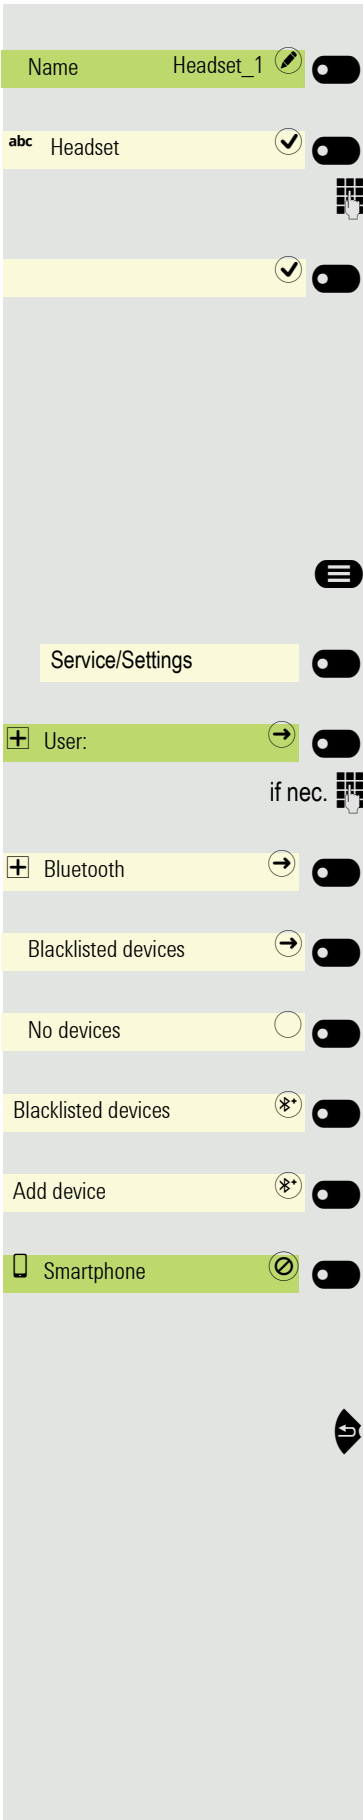

The current name is displayed. Open the field name with the Softkey.

The predefined name is entered.

Change to the desired name and conclude your input with the Softkey.

Save the setting by selecting the Softkey.

Blacklist for Bluetooth devices

The blacklist contains the Bluetooth devices for which a connection setup attempt should be rejected by the OpenScape CP 600/600E. The connection will only be allowed if the setup attempt comes from the OpenScape CP600.

Adding Bluetooth devices

If nec. Press Main Menu key.

Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Open using the Softkey.

Open using the Softkey.

No Bluetooth devices are entered, for example.


Start the search for the devices in the vicinity with the Softkey.

Repeat the search if necessary with the Softkey.

Open a located device in the search list with the Softkey. You will see the following message, for example: "Smartphone was added to Blacklisted devices". The device is deleted from the search list.

Add another device to the Blacklisted devices if appropriate.

or exit the search menu.

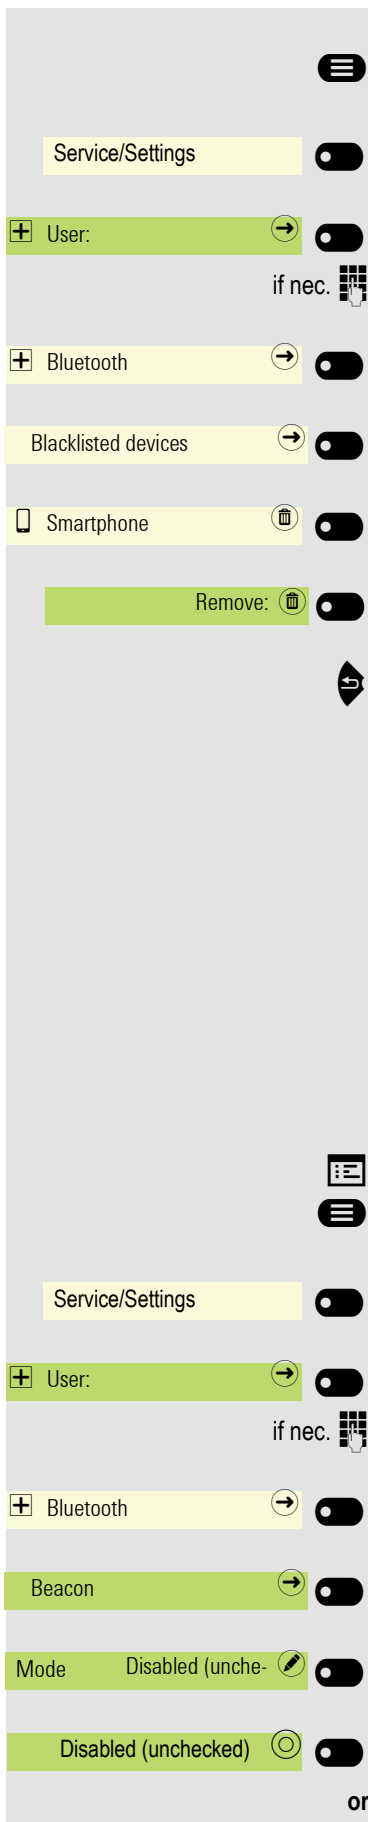

Removing a Bluetooth device from the blacklist

If nec. Press Main Menu key.

Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.

Open using the Softkey.

Open using the Softkey.

Open the device Softkey.

Confirm deletion with the Softkey. The entry is deleted.

Exit the menu.

Eddystone Beacon

Beacons are small devices that use Bluetooth to connect to smartphones or tablets in the environment. In the retail sector, for example, they are used to present personalized special offers to customers.

The phone can use Beacons to connect to smartphones or tablets in the area via Bluetooth. You can then, for example, exchange information between the phone and a smartphone. Eddystone is an open source project by Google for Beacon applications.

Set-up/deactivate Eddystone Beacon

You can also configure this setting via the web interface -> page 195.

If nec. Press Main Menu key.

Open using the Softkey.

Open using the Softkey.

Enter and confirm the User password.


Open using the Softkey.

Open using the Softkey.


The current status is displayed. Open the mode with Softkey.



Deactivate with Softkey,



or


Eddystone 

or

iBeacon 

URI  

Interval (ms)  



Activate with Softkey,

Activate with Softkey.

Set up connection for telephone beacon to a server

Select input for URI

Current address is displayed. Open URI field with Softkey

If necessary, an address is entered. If necessary, an address is entered. This should be an HTTPS address that is as short as possible. For long addresses, use a URL shortener to shorten it. Cannot be changed when setting up iBeacon.

Change to the desired address and press Softkey to end the entry.

Set up interval

Select input for Interval (ms)

Current interval is displayed. Open Interval (ms) field with Softkey

Enter new value if necessary.

Change to the desired value and press the Softkey key to end the entry.

Save changed entries with Softkey.

Making calls in the team/manager/secretary's office

When configured (ask relevant Administrator), you will belong to a team of members with multiple lines. Line/trunk keys (MULAP keys) → page 138 are available on your phone.

Trunks

A distinction is made here between primary, secondary, and phantom lines. Each of these line types can be used on a private or shared basis → page 137.

Primary line

All multi-line telephones have a primary line. This line can be reached in the usual manner via your public phone number. Incoming calls to your number are signaled on this line.

Secondary line

A secondary line on your phone is used as a primary line by another participant. Your primary line, which is configured on another telephone, simultaneously functions as the secondary line on that telephone.

Private line

A line that is used by a single telephone. This line cannot be used as a secondary line by another telephone.

Shared line

A line that is configured on multiple telephones. The line status is displayed for all telephones that share this line. If, for example, a shared line is being used by a telephone, a status message indicating that this line is busy is displayed on all other telephones sharing the line.

Direct call line

A line with a direct connection to another telephone. You can see the status of the line from the LED.

Line Seizure

The line assignment is dependent on the configuration (ask your responsible Administrator). If the automatic line seizure is configured, a line is automatically assigned upon lifting the handset or pressing the loudspeaker key.

Line/trunk keys




On a MultiLine phone the freely programmable keys function as line/trunk keys. Every key configured as a "line/trunk key" (key marking: Ln: X) corresponds to a line.

As a team member, you yourself can assign the following functions to keys
→ page 76:

- Direct station selection (DSS)
- Group call on/off
(not for main phone in the management/administration team)
- Ring transfer on/off
(only in management/administration team)

Otherwise, you can assign a key with the "MULAP forwarding" (call forwarding) function for each line.

LED displays for line/trunk keys

LED		Meaning
	Off	– the line is in idle mode.
	flashes ¹	– Incoming call on the line – "Hold reminder" is activated – the line is on "Hold".
	On	– the line is busy.

¹ Flashing keys are represented by this icon in this manual, without reference to the frequency of flashes. The flashing interval represents different statuses, which are described in detail in the corresponding sections of the manual.

Accepting calls on the line/trunk keys

Requirement: Your phone rings and/or the line/trunk key flashes quickly.

Press quickly flashing line/trunk key on the OpenScope Key Module 600E.

Lift the handset.

With handset on hook: Speakerphone mode.


Dialing with line/trunk keys

Press the free line/trunk key of the OpenScope Key Module 600E or via which you wish to establish your connection.

Dial phone number.

If the participant answers: Lift the handset.

With handset on hook: Speakerphone mode.

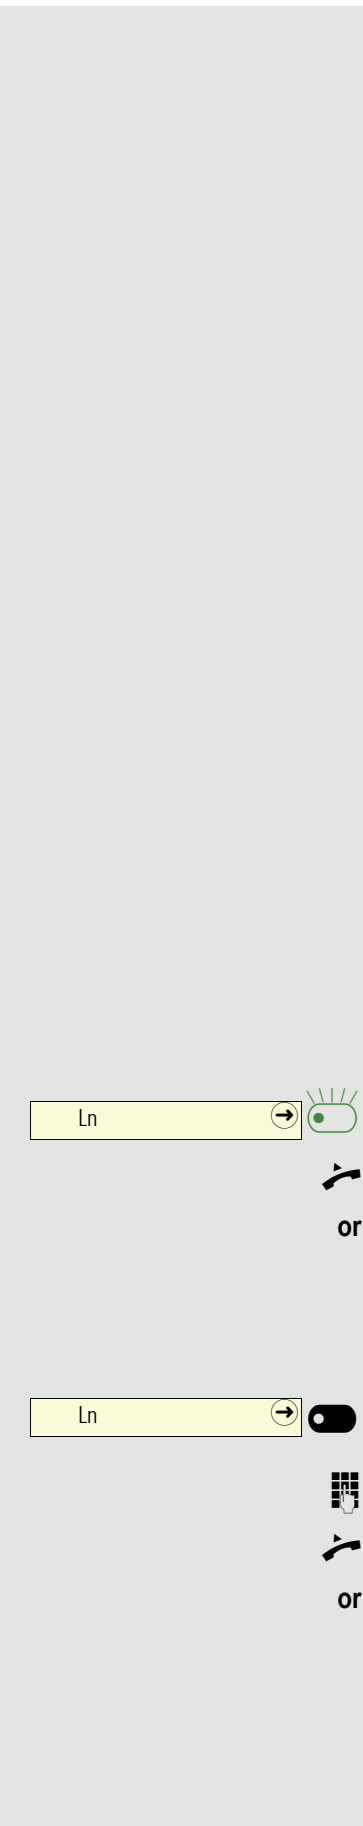

Hold a call on a line/trunk key and then accept again

Prerequisite: You are conducting a call via one of your group's lines.

Holding

Press the key if it is set up.

Replace the handset.

Press the key if it is set up.

As required per configuration (ask relevant Administrator), so that other team members can also accept the call on hold.

Accept again

Press the slowly flashing line/trunk key.


Alternately phone on several lines

Prerequisite: You are conducting a call via one of your group's lines. Another line key flashes.

Press the flashing line key. The first call partner is waiting on the other line.

Press the slowly flashing line/trunk key. Second call partner waiting.

You can change as often as you like. Press the slowly flashing line key.

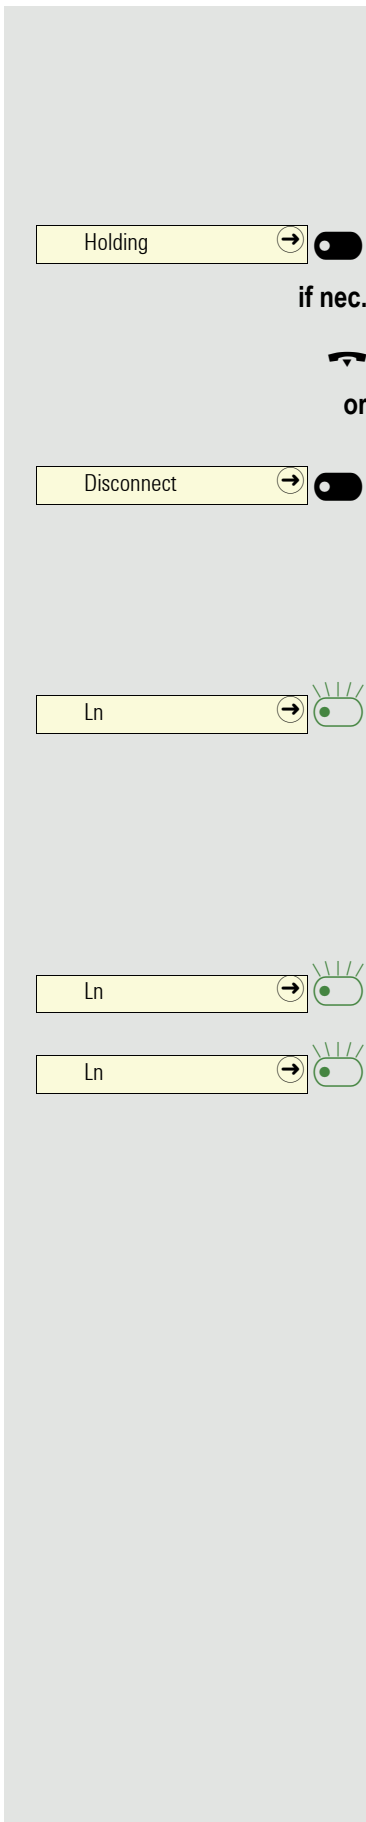

MULAP conference release

If authorized (ask relevant Administrator), you can assign the "MULAP conference Released by:" function to a key on your phone → page 76.

Setting up a conference via the menu is no longer required in this case. Your team partner simply has to press the flashing line/trunk key for your line on his/her phone and can then immediately take part in the conference.



You are conducting a call.

Disconnect



Press key. LED lights up.

Up to 3 team members can now enter the conference.

Prerequisite: The line on which you are speaking is configured as a line/trunk key on the other phone.

Ln



Press the flashing line key.


Direct station selection keys

Each team member has a DDS key for every other team member.


As a result, each team member is directly accessible to the other team members by the simple press of a key.

Unlike a name key, a DSS key signals to you the status of the other extension via the LED.


Understanding DSS key LED notifications




or



or



or




LED on the DSS key is dark – no team member is phoning.

LED on the DSS key lights up – a team member is phoning or has activated DND.


LED on the DSS key flashes **quickly** – I am being called, please accept.

LED on the DSS key flashes **slowly** – another team member is being called and has not yet answered.

Directly call team members




Press the DSS key.




LED

or



If the desired team member is on the phone, the DSS key on your phone lights up. In this case you can still call if second calling (call waiting) is permitted to team members.



LED




If the participant answers: Lift the handset.

or

With handset on hook: Speakerphone mode.

Transferring an existing call




Press direct station select (DSS) key, if nec. announce call.




Replace the handset.

or



Press disconnect key.

Pick up call for another member



Press the blinking direct station select (DSS) key or line/trunk key.



Lift the handset.

or

With handset on hook: Speakerphone mode.

Forwarding calls for lines

You can immediately forward internal and/or external calls to your lines to different internal or external phones (destinations).

If you activate call forwarding for a line, this shall apply to all line keys of your group for this line.

If nec. Press Main Menu key.

Open using the Softkey.

Open with softkey.

Open with softkey.

Select "Frwrng. MULAP on".

Confirm.

or

If available, press the key. (You have incompletely saved the "Fwd. MULAP" key without type and destination of the forwarding → page 76).

Press the required line key.

or

Enter and confirm the desired line/trunk number.

Confirm.

or

Select "2=only external calls".

Confirm the option shown

or

Select "3=only internal calls".


Confirm.

Enter the destination number.

Confirm.

or

If available, press the key. (You have also saved the type and destination of the forwarding to the "Fwd. MULAP" key, → page 76.)

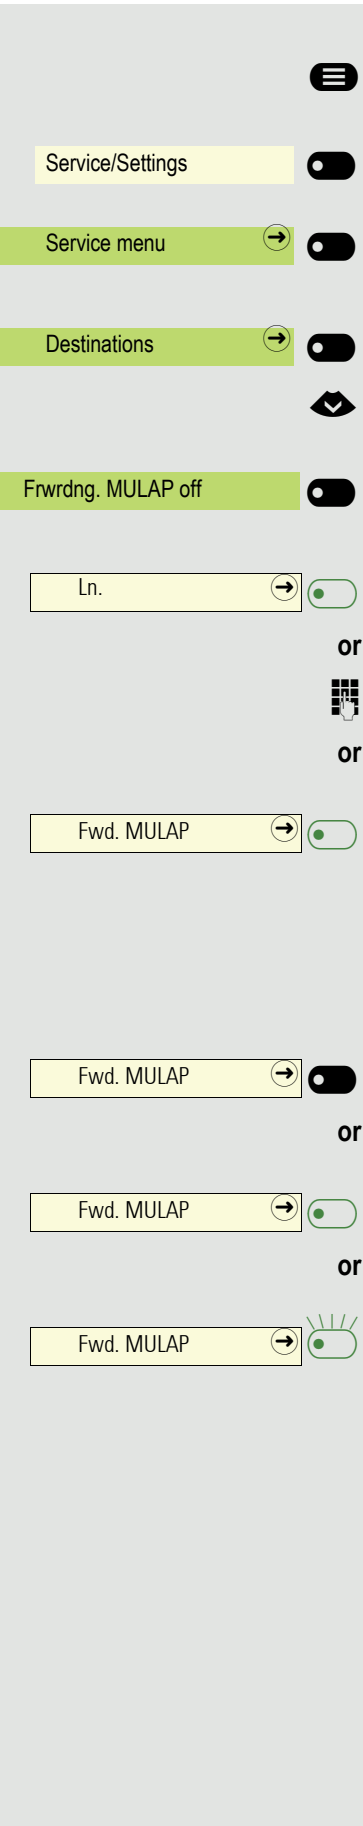

Deactivate call forwarding

If nec. Press Main Menu key.

Open using the Softkey.

Open with softkey.

Open with softkey.


Select "Fwrdrng. MULAP off".

Confirm.

Press the required line key.

Enter the desired line/trunk number.

If available, press the key.

 If call forwarding is activated for a line, a special dial tone rings when occupied.

Understanding LED notifications for the key "MULAP forwarding"

LED on the "Fwd. MULAP" is dark – no call forwarding active for this line.

LED on the "Fwd. MULAP" lights up – call forwarding active for this line.

LED on the "Fwd. MULAP" flashes **slowly** – line is the destination of a forwarded call.

Switch calls directly to manager

All calls for the manager are usually only acoustically signaled in the admin office.

You can set the acoustic signaling so that the calls are only acoustically signaled on the main phone or on an assigned second phone.

Requirement: On your phone there is a key assigned with the "Ring transfer executive/secretary" function.

Activating

Press key. LED lights up.

or

If nec. Press Main Menu key.

Open using the Softkey.

Open with softkey.

Open with softkey.

Select "Call transfer on".

Confirm.

Press the required line key.

or

Enter the desired line/trunk number.

Deactivating

Press key. LED goes out.

or

If nec. Press Main Menu key.

Open using the Softkey.

Open with softkey.

Open with softkey.

Select "Call transfer off".

Ring transfer executive/secretary →



Service/Settings



Service menu →



Destinations →



Call transfer on



Ln. →



Ring transfer executi- →



Service/Settings



Service menu →



Destinations →



Call transfer off



Confirm.

Ln.



Press the required line key.

or




Enter the desired line/trunk number.

Group calls / hunt group

If configured (ask relevant Administrator), your connection is part of a team. The team consists of internal phone connections that can make use of particular functions.

Group call on/off

 If your phone is connected to a system network via LAN, pay attention to specific features → page 177!

If this has been configured (ask relevant Administrator), you will belong to one or more groups of members who can be reached via a hunt group or group call phone number.

Calls are signaled on all telephones in the group either in succession (=hunt group) or simultaneously (=group call), until a member of the group answers the call.

Every party in the group can also remain available under his/her own phone number.

You can activate and deactivate the call for the hunt group, group call, or for the individual lines of a group.

You belong to a hunt group or group call group



If nec. Press Main Menu key.



Select "Group calls off".

Group calls off



Confirm.

or



Select "Group calls on".

Group calls on



Confirm.

or

Group call on/off



Press key.

or

Group call on/off



Press key.

You belong to multiple groups



If nec. Press Main Menu key.



Select "Group calls off".

Group calls off



Confirm.

or



Select "Group calls on".

Group calls on



Confirm.

or

Group call on/off



Press key.

or

Group call on/off



Press key.

In the Notification area of the display you can see if a selected group is active or inactive.

301 X Group names

If an "X" appears between the group/line number (e.g. 301) and the group name, the call is active for this group/line.

or

301 Group names

No "X" means that the call is deactivated.

scrolling



Confirm to select another group/line number.

or

Group calls off



Confirm. The call is deactivated for the displayed group/line.

or

Group calls on



Confirm. The call is activated for the displayed group/line.

or

#=All groups off



Confirm. The call is deactivated for all groups/lines.

or

*=All groups on



Confirm. The call is activated for all groups/lines.



If you have activated the call for another group/line, or deactivated the call for all groups/lines to which you belong, a special dial tone rings when you lift up the handset.

Accepting calls for a colleague in the team

You can pick up calls for phones within a team (Call pickup group; ask relevant Administrator), on your phone; also during a call.

In contrast to the direct station select function, you do not need any configured direct station select (DSS) to do this, see Page 141.

Prerequisite: Your phone rings briefly. In the top row of the display, "Call with:" appears, with the phone number or name of the initiator and, on the bottom row, the phone number or name of the caller.

Confirm to pick up the call for your colleagues.

Connecting call

You can have calls to your handset signaled acoustically on up to five other telephones. The call is received by the person who answers the call first.



If your phone is connected to a system network via LAN, pay attention to specific features → page 180!

Saving/displaying/deleting phone for group ringing

If nec. Press Main Menu key.

Open using the Softkey.

Open with softkey.

Open with softkey.

Select "Group ringing".

Confirm.


Confirm.


Enter the internal phone number of the party to be added. The party name is displayed.

Confirm.

Confirm to add further parties.

Confirm to display or delete parties.

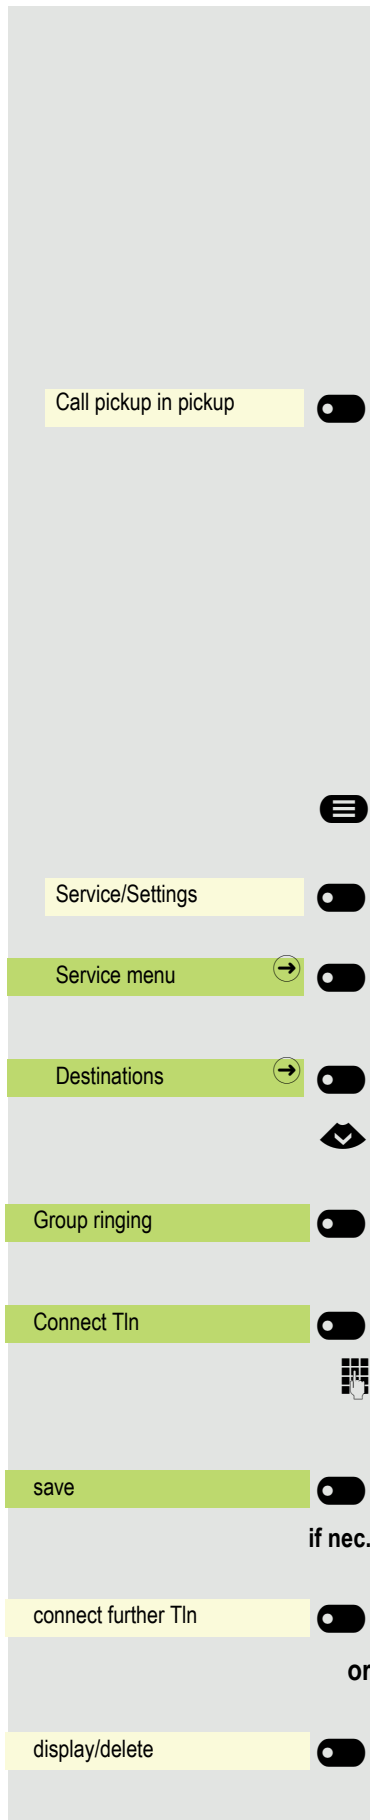

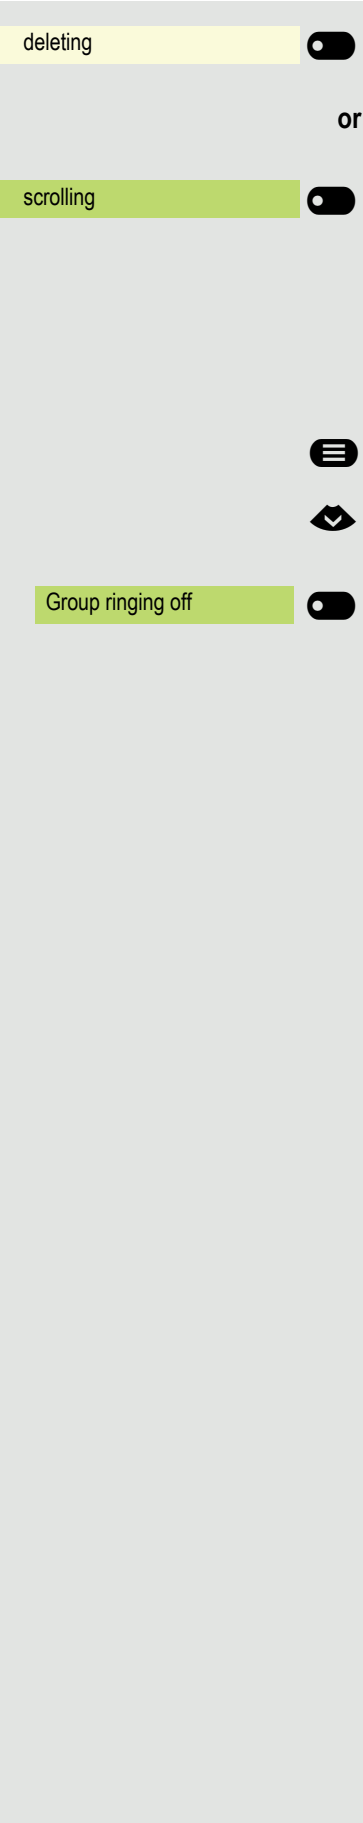

Confirm to, for example, delete the currently displayed party from the ringing group.

Confirm to select another party.

➡ If your phone is connected to a ringing group, you can see the phone number or name of the initiator on the display (top row) and that of the caller (bottom row).

Delete from all ringing group phones

If nec. Press Main Menu key.

Select "Group ringing off".

Confirm.

Calls on Universal Call Distribution (UCD)

If configured (ask relevant Administrator), you will belong to a group of members (agents) to whom calls will be assigned.

An incoming call is always delivered to the agent who has been idle the longest.

Login/logout at beginning/end of use

If nec. Press Main Menu key.

Open using the Softkey.

Open with softkey.

Open with softkey.

Select "Universal Call Distribution".

Open with softkey

Confirm.

or

Confirm.

Enter your identification number ("Operator") when logging in (ask relevant Administrator).

Log in/out during working hours

If nec. Press Main Menu key.

Open using the Softkey.

Open with softkey.

Open with softkey.


Select "Universal Call Distribution".


Open with softkey.

Confirm.

or

Confirm.

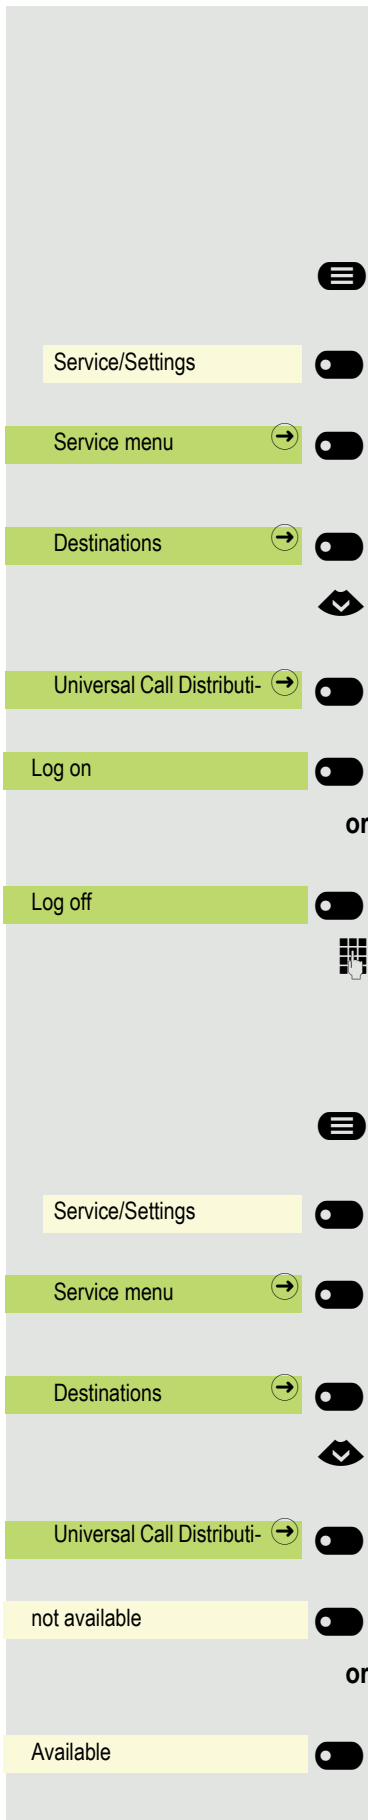

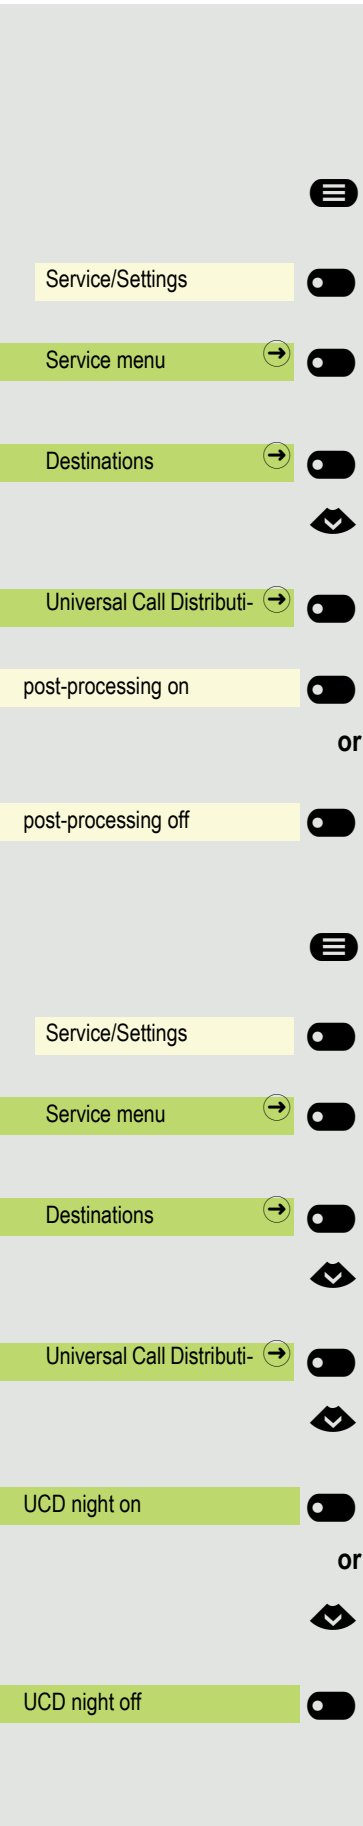

Requesting/activating post-processing time

If you want to follow-up on your last call without being disturbed, you can request/activate a post-processing time. Your phone is removed from the call distribution for a set amount of time, or until you log back in.

If nec. Press Main Menu key.

Open using the Softkey.

Open with softkey.

Open with softkey.

Select "Universal Call Distribution".

Open with softkey

Confirm.

or

Confirm.

Activating/deactivating night service for Universal Call Distribution

If nec. Press Main Menu key.

Open using the Softkey.

Open with softkey.

Open with softkey.

Select "Universal Call Distribution".

Open with softkey

Select "UCD night on".

Confirm.

or

Select "UCD night off".

Confirm.

Display the number of waiting calls



If nec. Press Main Menu key.

Service/Settings



Open using the Softkey.

Service menu



Open with softkey.

Destinations



Open with softkey.



Select "Universal Call Distribution".

Universal Call Distributi-



Open with softkey

Calls in queue



Confirm.

Private sphere/security

Activating/deactivating idle function

If you do not wish to take calls, you can activate idle mode. Calls are only displayed via **one** call symbol and on the display.

Activating/deactivating



If nec. Press Main Menu key.



Select "Silent mode on"

Silent mode on



Confirm.

or



Select "Silent mode off"

Silent mode off



Confirm.

Activating/deactivating do not disturb

If you do not wish to take calls, you can activate do not disturb. Internal callers hear the busy tone, while external callers reach another pre-defined phone (ask relevant Administrator).

Activating/deactivating



If nec. Press Main Menu key.



Select "DND on"

DND on



Confirm.

or



Select "DND off"

DND off



Confirm.



A special dial tone (whirring continuous tone) reminds you that DND is on when you lift the handset.

Authorized internal callers automatically override the DND feature after five seconds.

Caller ID suppression

You can stop your phone number or name from appearing on the display of those you phone externally. This remains active until you reverse it.

Activating



If nec. Press Main Menu key.



Select "Block phone number"

Block phone number



Confirm.

Deactivating



If nec. Press Main Menu key.



Select "Forward phone number"

Forward phone number



Confirm.



The relevant Administrator can activate/deactivate phone number suppression for all phones.

Security

Protecting the phone from misuse

You can stop unauthorized parties from using certain functions on your phone while you are away. E.g. the dialing of external phone numbers and access to your mailbox can be prevented. Ask your Administrator which functions are locked.

Locking the phone



If nec. Press Main Menu key.



Select "Lock phone"

Lock phone



Confirm. The Functions dialog opens.



Enter code (lock code) → page 158.



In locked mode a special dial tone rings when you lift the handset. You can dial internal numbers as usual.

Your phone can also be (un)locked from an authorized station
→ page 157.

Unlocking the phone



If nec. Press Main Menu key.



Select "Open phone"

Open phone



Confirm. The Functions dialog opens.



Enter code (lock code) → page 158.

Locking a different phone to prevent misuse

If configured (ask relevant Administrator), you can lock other phones against unauthorized use and then unlock them.

If the phone user has locked his/her phone and forgotten his/her personal lock code, you can unlock the phone using this function.

If nec. Press Main Menu key.

Open using the Softkey.

Open with softkey.

Select "PIN and license of service".

Open with softkey.


Confirm.

Enter the internal phone number of the phone that should be (un)locked.

Confirm.

or

Confirm.

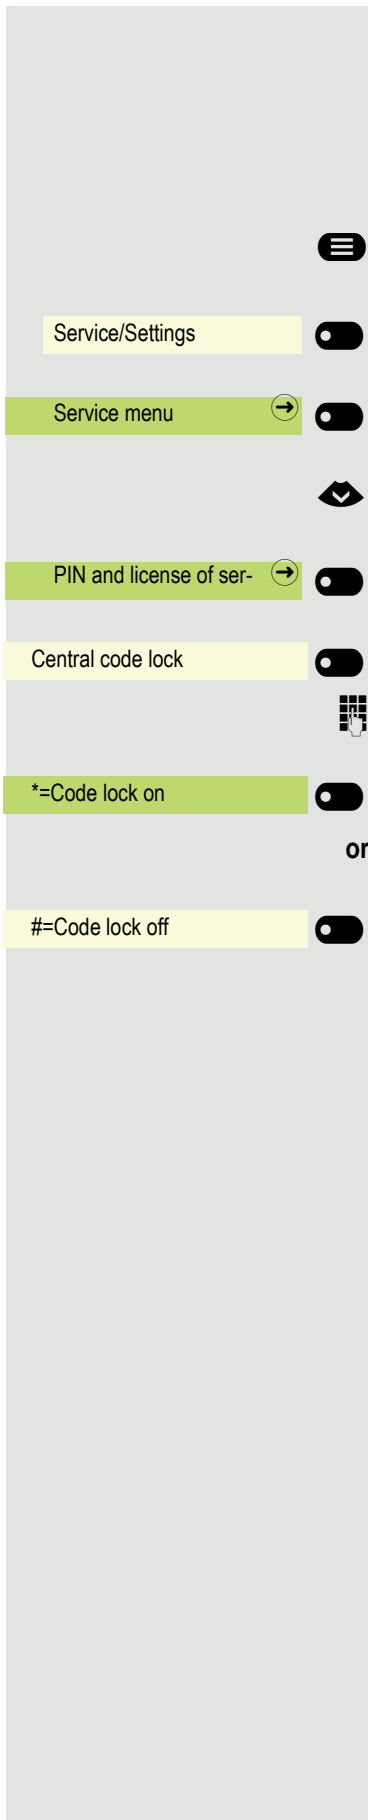

Saving personal lock code

For the functions

- Locking the phone to prevent misuse → page 156
- Using a different phone in the same way as your own → page 168

in order to assign, you must enter a personal code which you can define yourself.

If nec. Press Main Menu key.

Open using the Softkey.

Open with softkey

Select "PIN and license of service".

Open with softkey.

Confirm.

Request for current code.

Enter current 5-digit code.
If you have still not assigned a code, on first input use "00000".

Request for new code.

Enter the new code.

Request for repetition of the new code

Re-enter the new code.



If you have forgotten your code, contact the relevant Administrator for help. Your PIN can be reset to "00000".

User password

Your User password protects your user settings. You can also use the User password to fully lock your telephone → page 161.

The administrator may have configured the following settings:

- The password is deactivated: You do not have the option of configuring user settings. The message "Password is deactivated" is displayed.
- The password is temporarily locked: You do not have the option of configuring user settings at this time. The message "Password is blocked" is displayed.
- After initially logging on to a user area, you may have to replace the default password with a new password.
- A password can have a predefined period of validity: You will have to create a new password when the period ends. The message "Change password (x days remaining)" will alert you to this at the appropriate time. The message "Password has expired" appears when the validity period has expired. Confirm "Change password" and change the password as described in this section.
- If you repeatedly enter the wrong password (2 to 5 times), additional attempts are blocked. You can make another attempt after a predefined time.
- It is possible that you will not be able to re-use a previously used password for a period of time, which means you have to create another "new password".
- Your administrator can tell you about the rules for what and how many characters can or must be used in the password.

➡ The preset password "000000" corresponds to a blank password. In other words, the phone cannot be locked and the user menu is **not** password protected (see also → page 160).

You can also configure this setting via the Web interface → page 195.

If nec. Press Main Menu key.

Open using the Softkey

Open using the Softkey.

Enter and confirm the User password.

Select "Changing the user password".

Open using the Softkey

Open using the Softkey


The input field is displayed.

Enter the current password and conclude your input with the Softkey.

Open using the Softkey

The input field is displayed.

Enter the new password (at least 6 characters) and conclude your input with the Softkey.

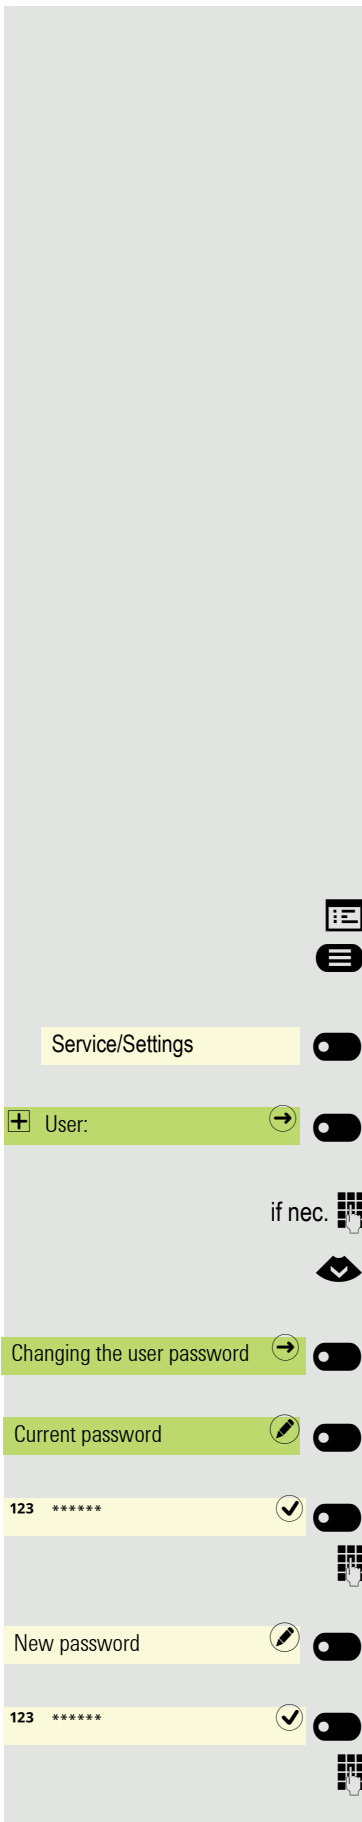

Save your input. The password is now deactivated.

Locking the phone

To protect the phone against unauthorized access, you can lock the phone so that nobody can make calls or change settings without knowing the User password.

➡ You can only lock the phone if you set a User password → page 159. The password for this must **not** be the default setting "000000". Check, if necessary, whether the telephone lock function has been activated for you by the administrator.

Activating the phone lock

Hold down the key shown until the "Lock phone" message appears.


Press the Softkey to activate the lock.


Dial emergency number

If an emergency number is entered on the phone by the administrator, Emergency call appears on the display for selection when you have activated the lock. You can also enter the emergency number via the dial pad.

Press the Softkey . The saved emergency number is dialed.

➡ The number will be dialed automatically without pressing the **OK** button. An empty option on the screen will be shown, therefore if you accidentally press the **OK** button, the call will not be canceled.

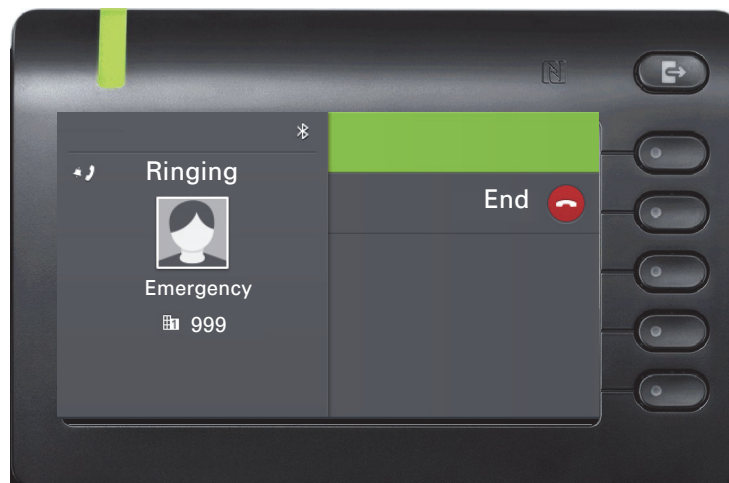

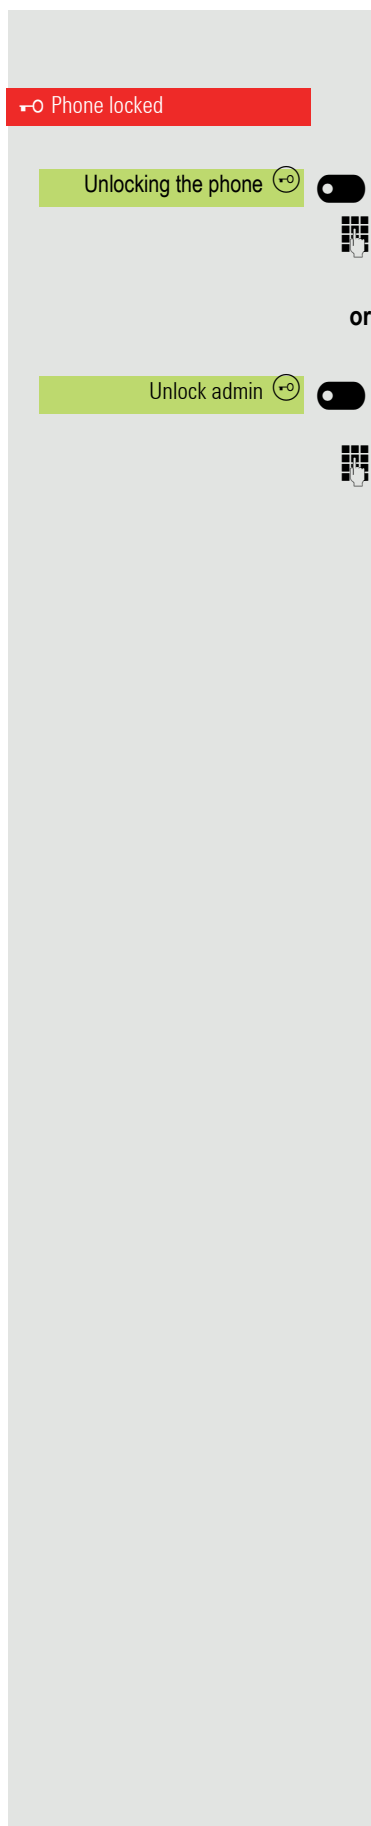

Unlocking the phone

The display shows: Phone locked.

Press the Softkey .

Enter and confirm the User password, the lock is released if the password was correct.

Press the Softkey .

Enter the administrator password if you do not know the User password. Confirm with the Softkey. The phone is unlocked if the password is correct.



If the telephone is locked, an emergency number entered by the administrator can be input using the dial pad or dialed with the Emergency call option. If the phone is locked, selected dialing keys (see → page 89) cannot be used. This also applies if the emergency number is saved on this key.

Other settings and functions

Connection costs

Display connection costs for your phone (not for U.S.)

For the current call:



If the costs are to be displayed continuously during an outgoing call, this function must be requested from the relevant Administrator of the network operator.

The display of the call costs must be applied by the network operator and configured by the relevant Administrator.

Depending on the setting, call costs are displayed during or after the call. Depending on the network provider, no-charge external calls will also be displayed. On the display, "no charge" appears before or during the call. If no cost display is set up, the phone number dialed and/or the call length appear in the display.



If a call is transferred, the costs are assigned to the phone to which the call was transferred.

For all calls and for the last call held

First the call charges for the last charged call are displayed. After five seconds the connection charges incurred (total) are displayed.



If nec. Press Main Menu key.

Service/Settings



Open using the Softkey.

Service menu



Open with softkey.



Select "more features".

more features




Open with softkey.

Show call charges



Confirm. The costs are displayed.

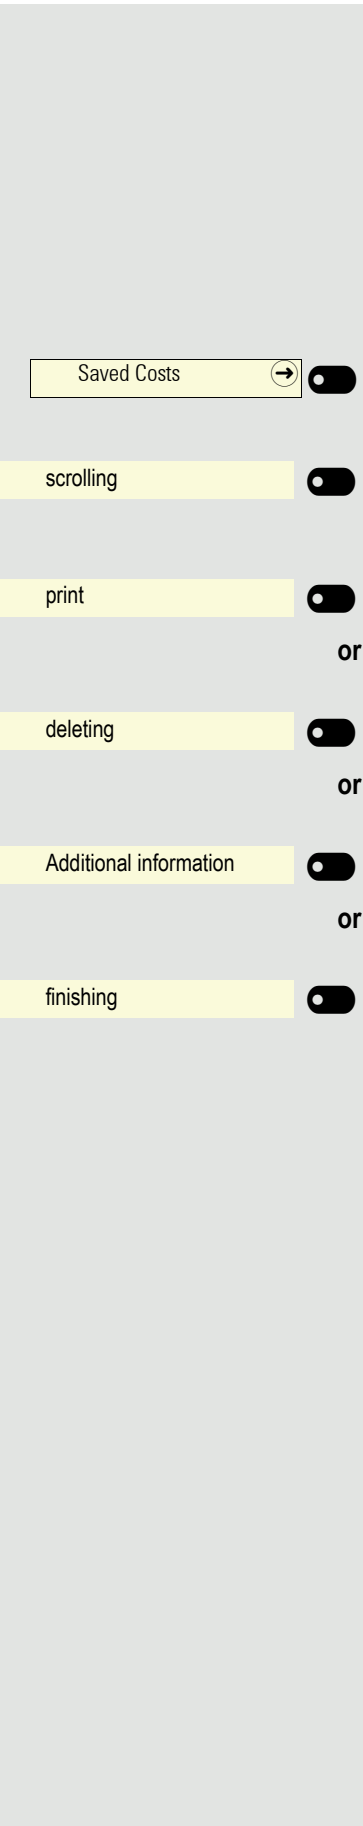

Query connection costs for another phone (not for U.S.)

If configured (ask relevant Administrator), you can also display the fee-based calls from other phones and print these too.

Requirement: You have programmed a key with the "Check costs" function → page 76.

If the LED lights up, a chargeable call has been made since the last query.

Press key. The fee-based calls are displayed.

Also confirm to display further fee-based connections.

Confirm with softkey.

or

Confirm with softkey.

or

Open with softkey.


or

Confirm with softkey.

Calling with call charge assessment

You can assign external calls to certain projects.

Requirement: The relevant Administrator has set account codes for you.

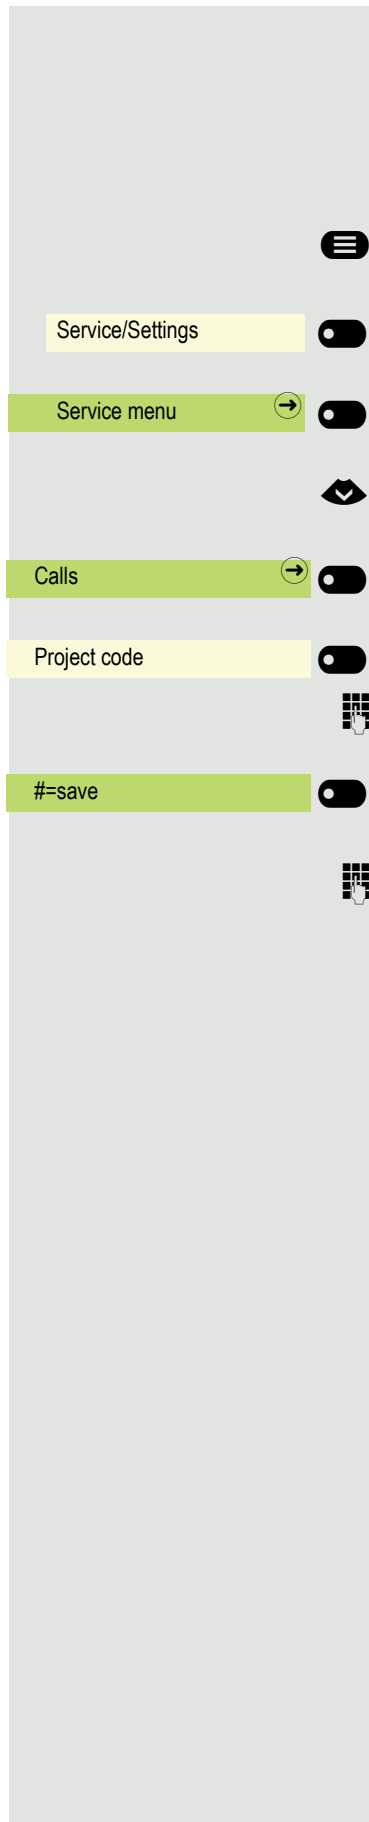

If nec. Press Main Menu key.

Open using the Softkey.

Open with softkey.

Select "Calls".

Open with softkey.

Confirm.

Enter account code.


Confirm.

As required per configuration; ask relevant Administrator.

Enter the external phone number.



You can also enter the account code during an external call in the same way.

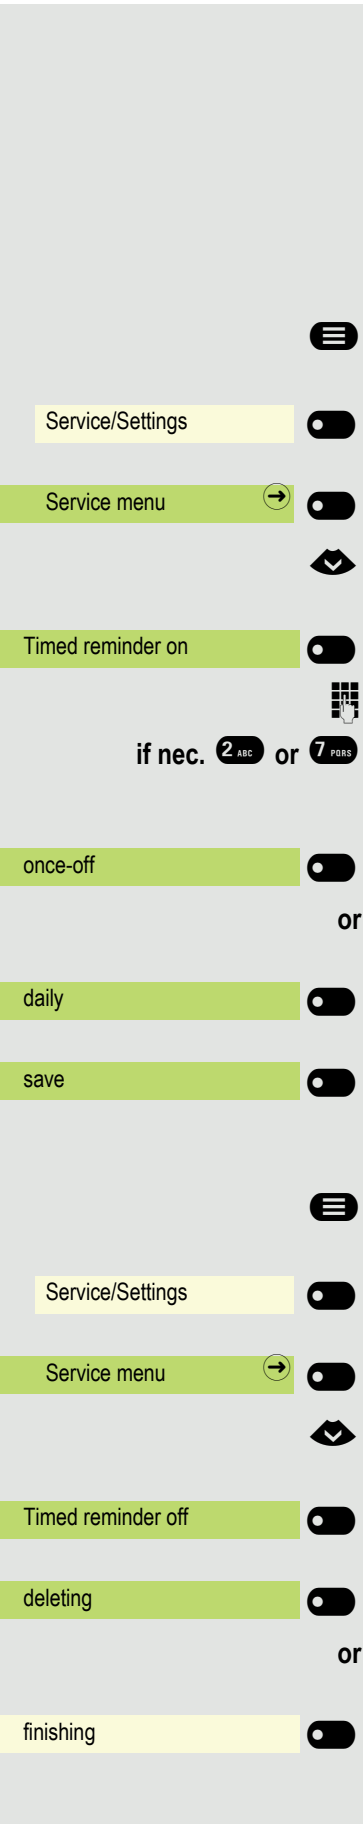

Appointment function

You can arrange for the communications system to remind you of an appointment → page 167. For this to happen, you need to save the desired times of the calls. This is possible for a period of up to 24 hours in advance or for a daily repeating appointment.

Save appointment

If nec. Press Main Menu key.

Open using the Softkey.

Open with softkey.

Select "Timed reminder on".

Confirm.

Enter a 4-figure time, e.g. 0905 for 9.05 a.m. or 1430 for 2.30 p.m.

With the "American" language setting (setting → page 57) you can enter Code 2 for "a.m." or 7 for "p.m." (default = "a.m.").

Confirm.

Confirm.

Confirm.

Deleting/querying a saved appointment

If nec. Press Main Menu key.

Open using the Softkey.

Open with softkey.

Select "Timed reminder off".

Confirm.

Confirm.

Confirm.

Appointment at 1200



or



Using timed reminders

Requirement: You have saved an appointment → page 166. The saved time arrives.

The phone rings. The appointment time is displayed.

Press key twice.

Lift the handset and put it back down.



If you do not accept the arranged call, this will be repeated five times before the appointment is deleted.

Using a different phone for a call in the same way as your own

Your phone can be temporarily used by others for an existing call, as if it were his/her own.

If nec. Press Main Menu key.

Open using the Softkey.

Open with softkey.

Select "PIN and license of service".

Confirm.

Select "Temporary phone".

Confirm.

Enter phone number of the other user.


Enter the other user's code. → page 158.

if nec.

If the other user has still not set a personal code, he/she is asked to do this on his/her phone.

Dial external number.

After the end of the call, this status is removed again.

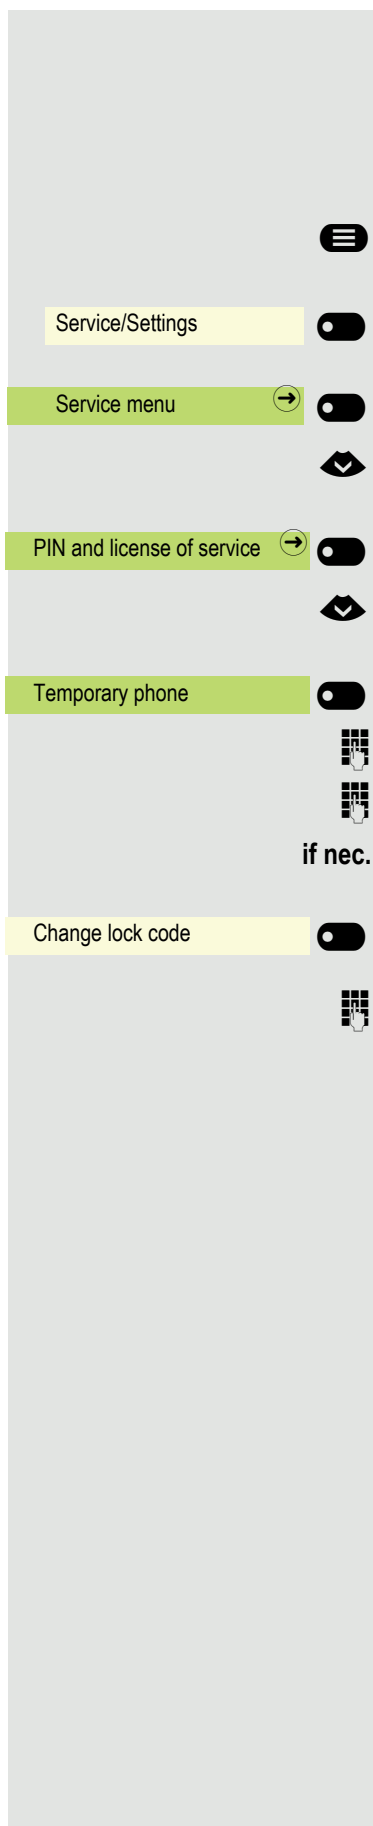

Using a mobile connection to a different phone

You can configure a mobile connection that your relevant technician has set up for you on a OpenScape CP 600/600E prepared for it on the system. The original connection to the "guest phone" is deactivated. The mobile connection remains available for as long as you are logged into the "guest phone".

Most of the functions and features (phone number, key assignment, authorizations) of your phone are available to you following login.

Mobility variants

There are two variants available for mobility:

- Basic
- Data privacy

Configuration is carried out by the technician.

Basic

When "logging on" to the "guest telephone", the following settings are transmitted from the mobile connection:

- Key assignment
- Authorizations
- Call forwarding

In addition, outstanding messages or texts are signaled.

"Guest phone" conversations are visible and can be used.

The conversations you have made in the meantime are automatically deleted from the phone following logging off.

Data privacy

When "logging on" to the "guest telephone", the following settings are transmitted from the mobile connection:

- Key assignment
- Call forwarding
- Authorizations (apart from user password)

In addition, outstanding messages or texts are signaled. The user password is not transferred, so you have to create a new password on the phone.

An empty conversation list is available to you which will be automatically deleted again after logging off from this phone.

Logging on to the "guest phone"

Log on to mobile connection to "guest phone". The phone thereby behaves like your own as regards cost allocation, key programming, call forwarding etc.



Requirement: A mobile connection with your own number and a password has been set up for you (ask relevant Administrator). The "Mobile login" key is configured on the OpenScape CP600/CP600E if nec.

Press the "Mobile login" key.

if no key is configured,

If nec. Press Main Menu key.

Open using the Softkey.

Open with softkey.

Select "more features".

Confirm.

Select "Mobile logon".

Confirm.

The "New phone no.:" request is displayed

Enter the "mobile phone number".


The request "Code for **nnn**" is displayed (e.g. 834):

Enter the code word and confirm it.

Confirm.

The login procedure starts.

After correct login you will see your mobile phone number on the left of the screen.

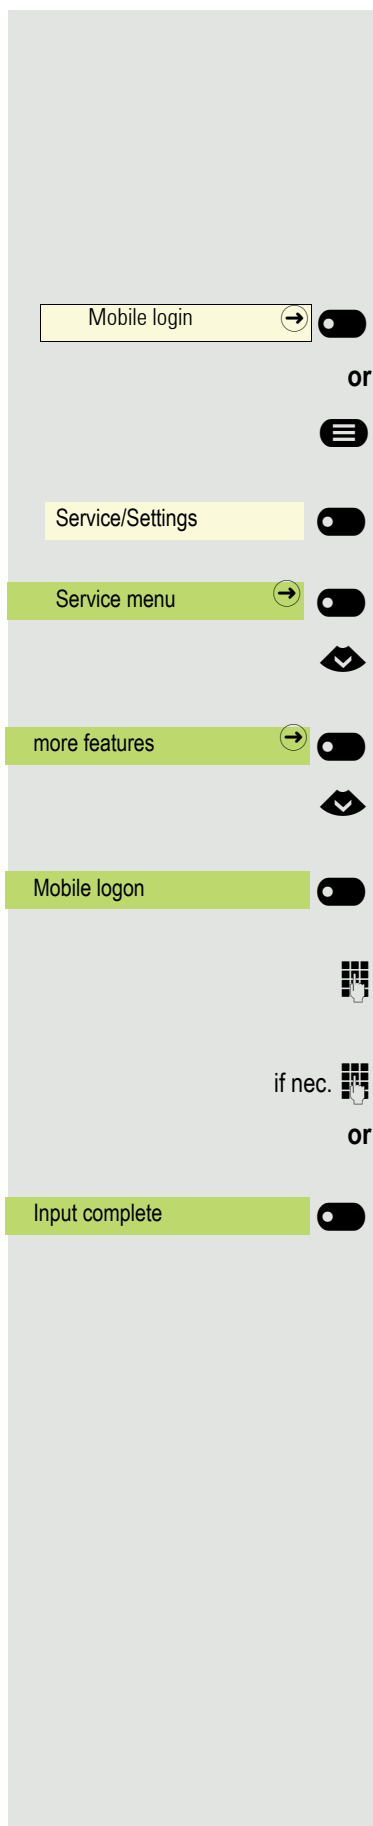

Transfer connection to next phone

If you want to transfer your connection from the first "guest phone" to a second "guest phone", log in to the second "guest phone" as normal (see → page 170).

If you log in to another phone with your PIN number, without first logging out of the other phone, logout will take place automatically.

Logging off from the "guest phone"

If you no longer require a connection to the "guest phone", and/or if you want to change to another phone, log off the "guest phone".

Mobile login



or



Service/Settings



Service menu



more features



Mobile logoff



Press the "Mobile login" key.

if no key is configured,

If nec. Press Main Menu key.

Open using the Softkey.

Open with softkey.

Select "more features".

Confirm.

Select "Mobile logoff".

Confirm. The logoff procedure starts.

The "guest phone" is now once more available with its original phone number, features, and functions. Any call forwarding that may have been set up can be removed.

Incoming fax message/message on the answering machine

If a fax or answering machine is connected to your system, and you have assigned the "Fax/answering machines information." function to a free key → page 76, this key lights up when a fax or message arrives.

Switching signaling off

Press the illuminated key "Fax/answering machines information.". LED goes out.

Resetting services/functions (complete phone deletion)

There is a general reset procedure for set functions. The following functions are deleted, if activated:

- Forwarding on
- Response text on
- Group ringing
- Block phone number
- Waiting tone off
- DND on
- Silent mode on
- Display messages
- Callback requests

If nec. Press Main Menu key.

Open using the Softkey.


Open with softkey.

Select "more features".

Confirm.

Select "Reset services".

and confirm.

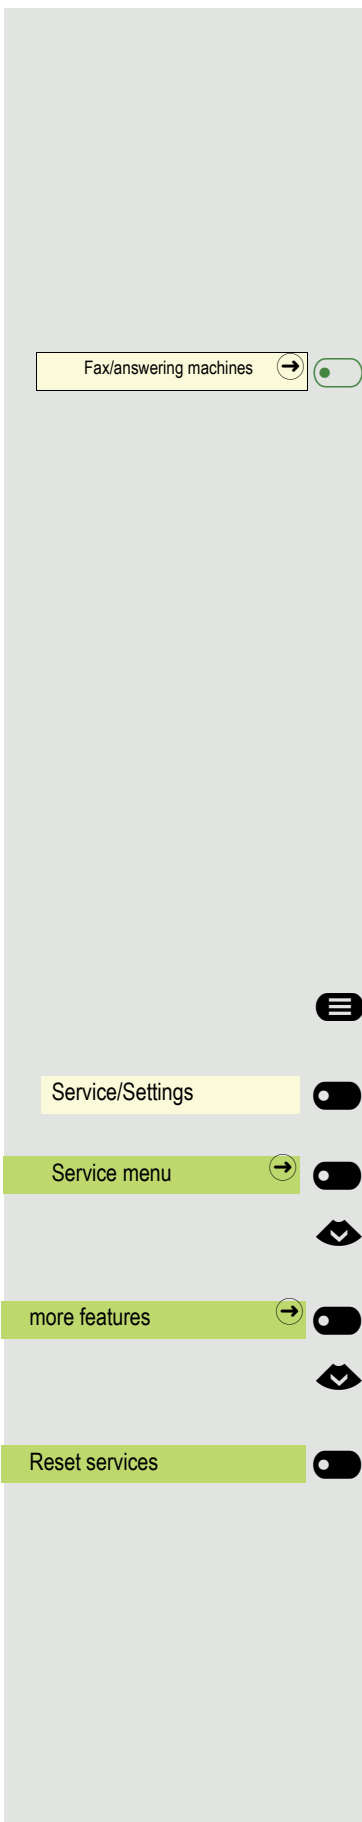

Activating functions for another phone

If configured (ask relevant Administrator), you can activate or deactivate the following functions for other phones (assoc. Services):

- DND on/DND off, Code *97/#97 → page 154
- Forwarding on, Code *11, *12, *13/#1 → page 95
- Lock phone/Open phone, Code *66/#66 → page 156
- Group ringing, Code *81/#81 → page 147
- Response text on/Response text off, Code *69/#69 → page 93
- Group calls on/Group calls off, Code *85/#85 → page 147
- Reset services, Code #0 → page 172
- Night answer on/Night answer off, Code *44/#44 → page 179
- Timed reminder on/Timed reminder off, Code *46/#46 → page 166

If nec. Press Main Menu key.

Open using the Softkey.

Open with softkey.

Select "more features".

Confirm.


Select "assoc. Services".

Confirm.

Enter the internal phone number of the phone for which the function is to be activated.

Enter code – e.g. *97 for DND on.

Follow the user prompting on the display for any possible further input.

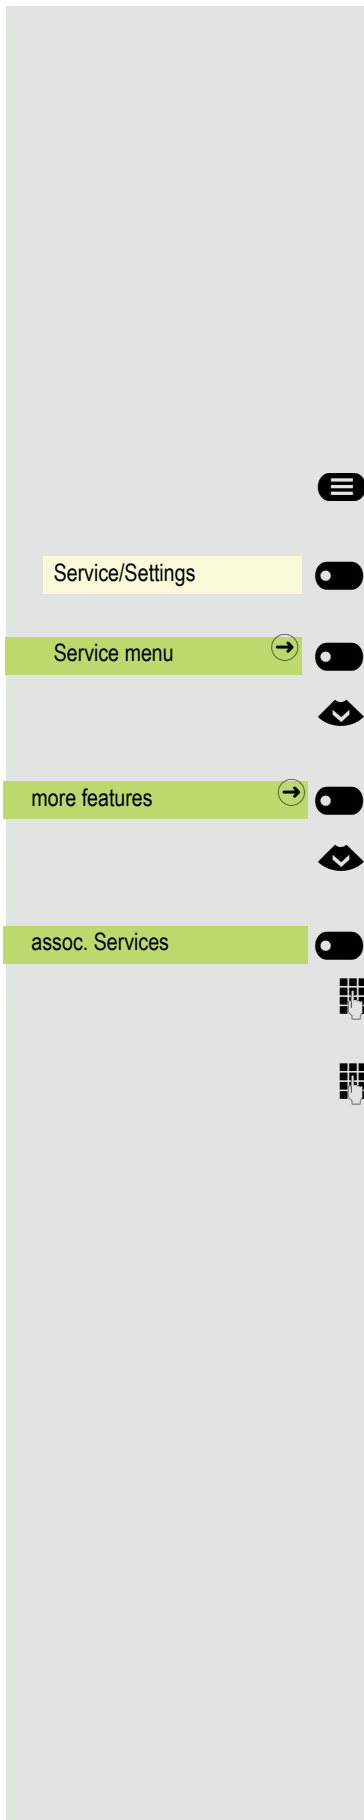

Using system functions externally DISA (Direct Inward System Access)

If configured (ask relevant Administrator), you can establish an outgoing external connection via your OpenScape Business both externally and as an internal party. Otherwise the following functions of your system can be activated and deactivated:

- Reset services, Code #0 → page 172
- Forwarding on/Forwarding off, Code *1/#1 → page 95
- Lock phone/Open phone, Code *66/#66 → page 156
- Change lock code, Code *93 → page 158
- Send message/Display messages, Code *68/#68 → page 91
- Response text on/Response text off, Code *69/#69 → page 93
- Group ringing/Group ringing off, Code *81/#81 → page 147
- Group calls on/Group calls off, Code *85/#85 → page 147
- Block phone number/Forward phone number, Code *86/#86 → page 155
- Waiting tone off/Waiting tone on, Code *87/#87 → page 72
- Door opener, Code *61 → page 85
- Door opener on/Door opener off, Code *89/#89 → page 73
- DND on/DND off, Code *97/#97 → page 154
- Silent mode on/Silent mode off, Code *98/#98 → page 154
- Select speed-dial number, Code *7 → page 90
- assoc. Services, Code *83 → page 173

Prerequisite: You have a phone with tone dialing (DTMF transmission) or you can switch your phone to tone dialing. The phone is not connected to OpenScape Business.



Creating a connection to OpenScape Business. Enter phone number (ask relevant Administrator).



Wait for continuous tone (if nec. switch phone to tone dialing), then enter the internal phone number assigned to you and the associated personal locking code.



Enter code (only necessary if programmed in system).



Wait for dialing tone and enter code – e.g. *97 for DND on. If nec. make further entries, see also user guide for pulse/DTMF phones).

or



Dial external number.



Each time only one function or one working call may be carried out. Following the successful activation of a function, the connection is immediately interrupted. The connection is ended in an external call as soon as one of the call partners leaves.

Controlling connected computers/programs/ phone information service

If configured (ask relevant Administrator), you can control, for example, hotel services or information systems with the computer connected to your telephone or its programs.

Requirement: You have established a connection.

If nec. Press Main Menu key.

Select "Open phone"

Confirm. You will now be prompted by the connected computer to input the data but you must, depending on the configuration (ask relevant Administrator) enter your input in one of two ways:

Input in block mode:

Enter data.


Confirm.

Input in online mode:

The connected computer directly processes your input.

Enter code.

Enter data.

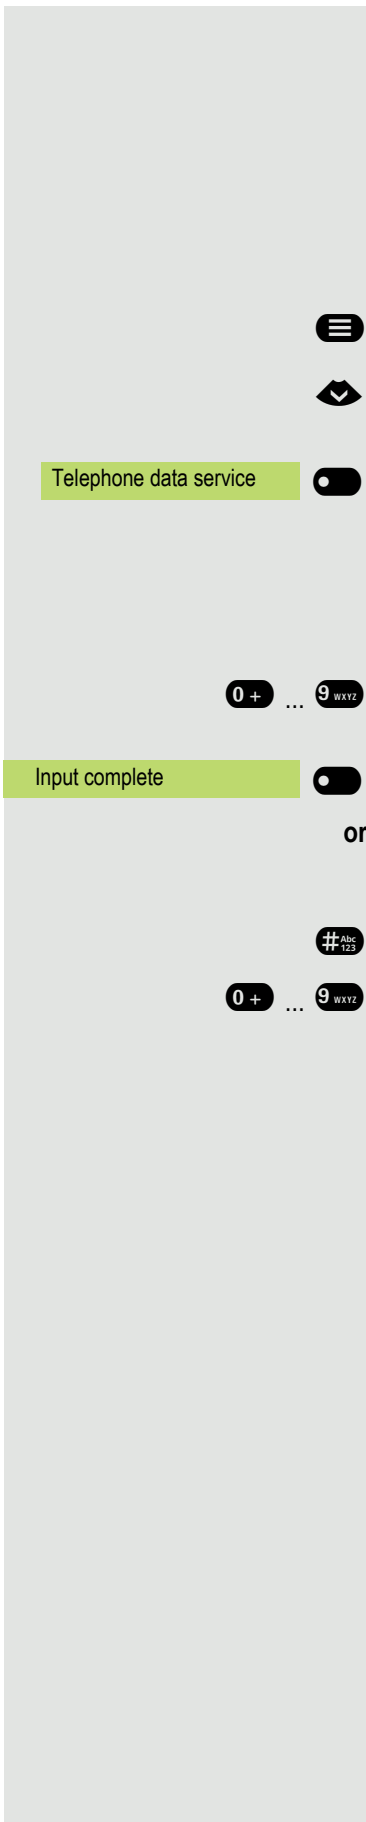

Searching for people (not for U.S.)

If radio paging equipment (RPE) is switched on in your system (ask relevant Administrator), you can search for people via your pocket receiver. The pocket receiver signals the call request to the sought-after person. The sought-after person can go to the nearest phone and answer.

Searching for people

To ensure you can be searched for, you must have activated a ringing group → page 149, call forwarding → page 95 or alternative call forwarding (service engineer) to the internal party phone number of your RPS.


A call request is then automatically signaled.

React to a search request

Lift the handset.

Enter code.

Enter your own phone number.

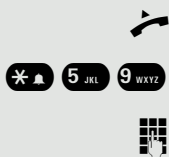

Special functions with networking

If the phone is integrated into an environment in which several OpenScape Business are connected in the one network, you will carry out calls via the network.

If this is the case, you must take note of the specific features of some functions. These are described below.

Logging out from hunt group/group call

Prerequisite: You belong to the hunt group/group call → page 147 of another OpenScape Business

If nec. Press Main Menu key.

Select Internal DISA.

Confirm with Softkey. The Functions dialog opens

Enter (DISA) phone number of the other OpenScape Business.

Confirm with Softkey.

Enter (DISA) phone number of your phone.

Confirm with Softkey.


Confirm with Softkey.

or

Confirm with Softkey.

You belong to multiple groups of another OpenScape Business

Enter group number for "targeted login/logout".

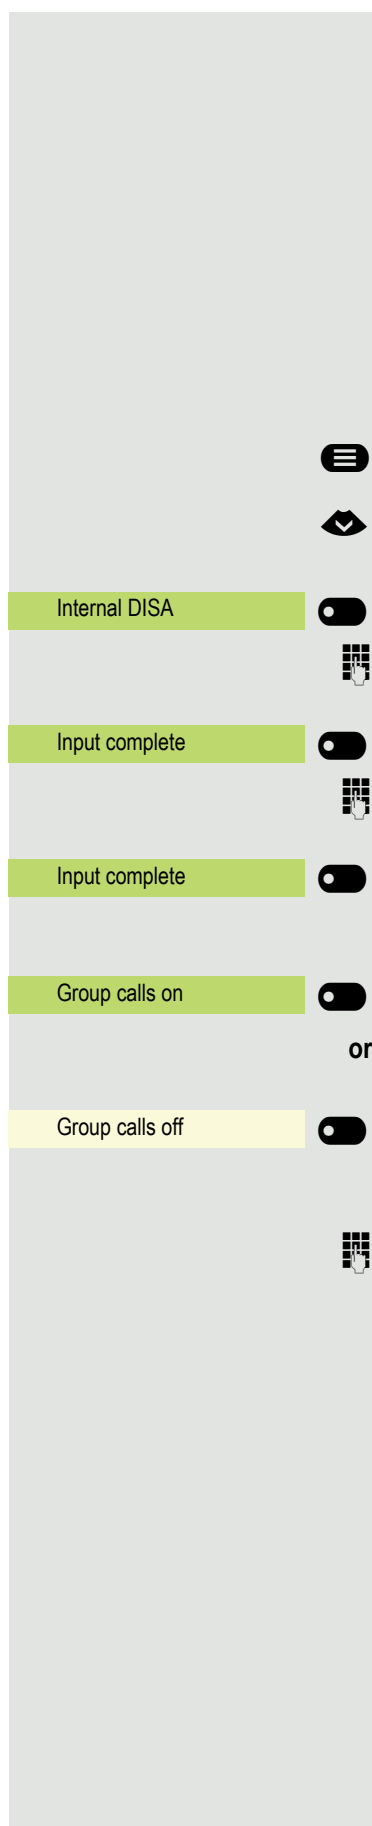

Tracing call forwarding

You can activate/deactivate call forwarding → page 95 for your phone from other phones in the network.

If nec. Press Main Menu key.

Select Internal DISA.

Confirm with Softkey. The Functions dialog opens

(DISA) phone number of your OpenScape Business.

Confirm with Softkey.

Enter (DISA) phone number of your phone.

Confirm with Softkey.

Activating

Select Forwarding on.

Confirm with Softkey.

Confirm with Softkey.

or

Confirm with Softkey.

or

Confirm with Softkey.


Enter destination phone number.

Confirm with Softkey.

Deactivating

Select Forwarding off.

Confirm with Softkey.

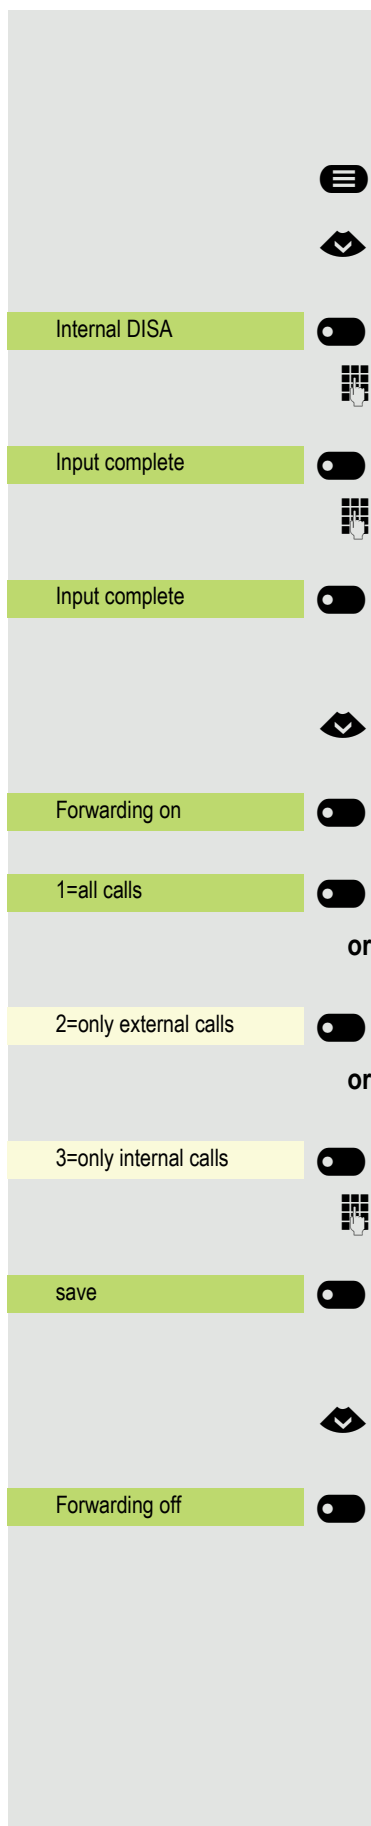

Using night service

If authorized (ask relevant Administrator), you can also set phones on other OpenScape Business systems as night destinations.

If nec. Press Main Menu key.

Select Internal DISA.

Confirm with Softkey. The Functions dialog opens

Enter (DISA) phone number for the OpenScape Business to which the night destination phone is connected.

Confirm with Softkey.

Enter (DISA) phone number of the phone from which you are activating/deactivating night answering.

Confirm with Softkey.

Activating

Select Night answer on.

Confirm with Softkey. The Functions dialog opens.


Enter destination number (= temporary night answer).

Confirm with Softkey.

Deactivating

Select Night answer off.

Confirm with Softkey.

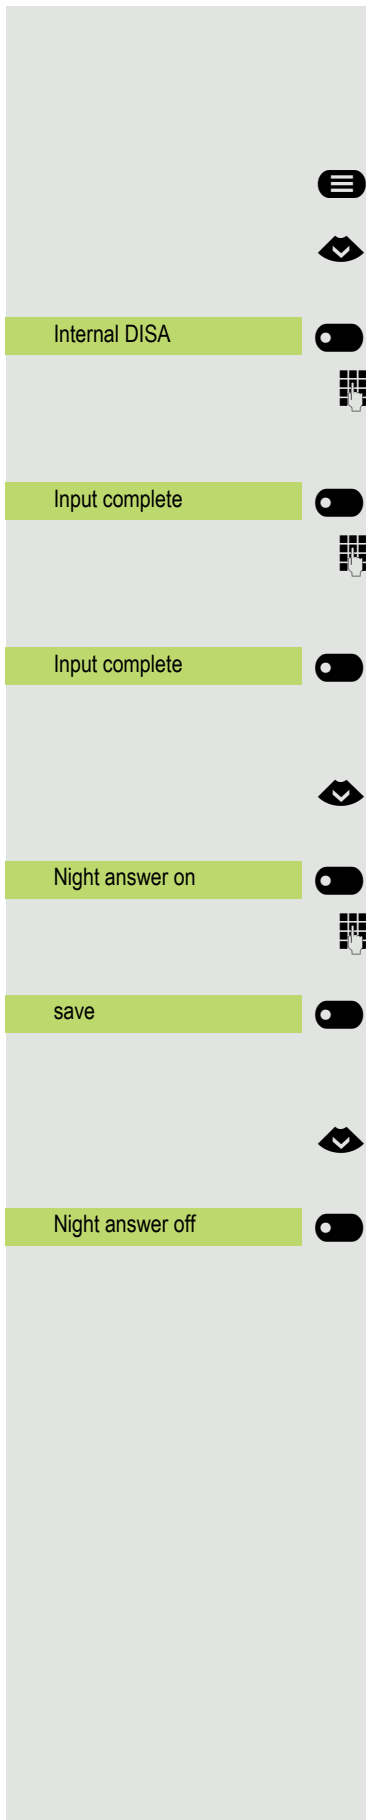

Ringing group

You can also have calls to your handset signaled on external phones or on phones in other OpenScape Business systems → page 149.

Saving/displaying/deleting phone for group ringing

If nec. Press Main Menu key.

Open using the Softkey.

Open with softkey.

Confirm.

Select "Group ringing".

Confirm.

Confirm.

Enter the phone number. The party's name is displayed.

Confirm.

or

Confirm.

or

Confirm, then follow the user prompting.

Confirm the option shown

Delete from all ringing group phones

If nec. Press Main Menu key.

Select Group ringing off.

Confirm with Softkey.

Releasing the door

If configured (ask relevant Administrator), you can also activate the door release
→ page 85 from other OpenScape Business systems.

If nec. Press Main Menu key.

Select Internal DISA.

Confirm with Softkey. The Functions dialog opens

Enter (DISA) phone number for the OpenScape Business to which the night destination phone is connected.

Confirm with Softkey.


Enter (DISA) phone number of the phone from which you are activating the door release.

Confirm with Softkey.

Confirm with Softkey.

Enter door terminal phone number.

Confirm with Softkey.

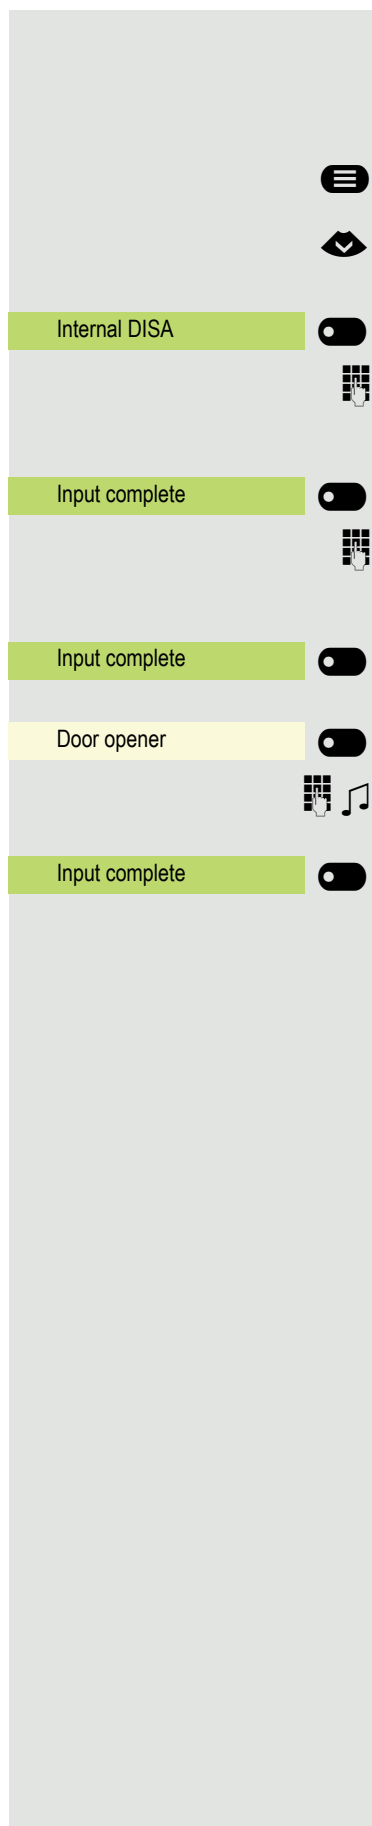

Local phone settings

Audio settings

Volumes

Set the volume here, for instance, for the loudspeaker, handset, or headset.

You can preset different volumes for the following microphones and signals in ten levels:

- Loudspeaker
- Ringer
- Handset
- Headset
- Handsfree
- Rollover
- Warning tone

You can also configure this setting via the Web interface → page 195.

If nec. Press Main Menu key.

Open using the Softkey

Open using the Softkey.

Enter and confirm the User password.

Open using the Softkey.

Open using the Softkey.

E.g. open the Ringer with the Softkey¹.

Use the Softkey to increase the volume.


Use the Softkey to decrease the volume

Adjust using the toggle key

Confirm the setting with the Softkey.

Save setting.

1. The display shows the current setting

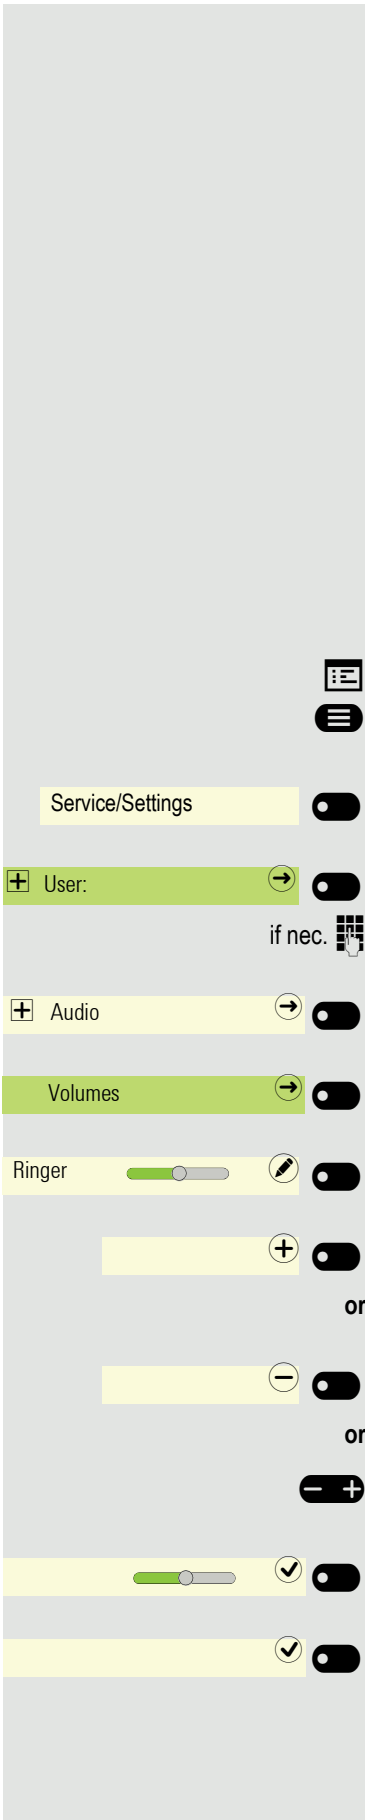

Set local ringtones

Select and configure call type


The ringer mode "local ringtone" is set. Not all of the following types have to be used:

- 1: Internal
- 2: External
- 3: Notification call 2

Select the desired call type and configure it according to your requirements.

You can also configure this setting via the Web interface → page 195.

If nec. Press Main Menu key.

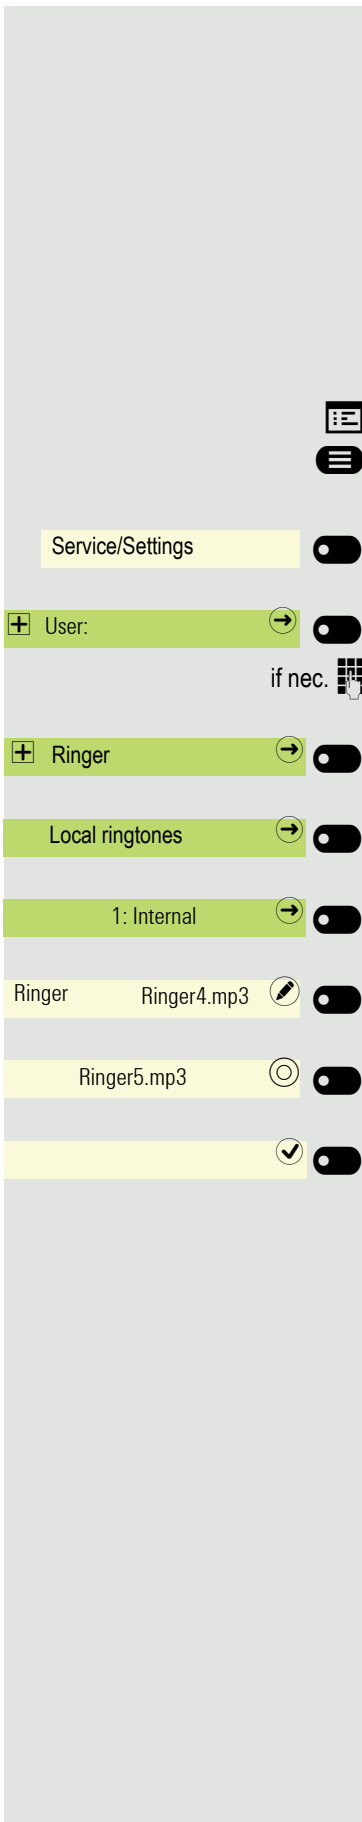

Open using the Softkey

Open using the Softkey.

Enter and confirm the User password.

Open using the Softkey.

Open using the Softkey.

Open with Softkey to e.g. execute settings for the internal ringtone.

Open using the Softkey.

Confirm with the Softkey to e.g. select this tone file.

Save setting.

If you have selected the "Pattern" instead of a ringer file, you can still set the values for "Sample melody" and "Sample sequence".

Ringtone mode

With both Ringtone mode options


- HiPath
- Local ringtone

determine who generates the ringer on the phone. With the "HiPath" setting the system emits the ringtone type and the related ringtone, which you can adjust later → page 182.

If "local ringer" is selected, the phone sends the ringer type and the you determine which ringer should ring with the respective ringer type in the "local ringer" menu yourself → page 183.

You can also configure this setting via the Web interface → page 195.

If nec. Press Main Menu key.

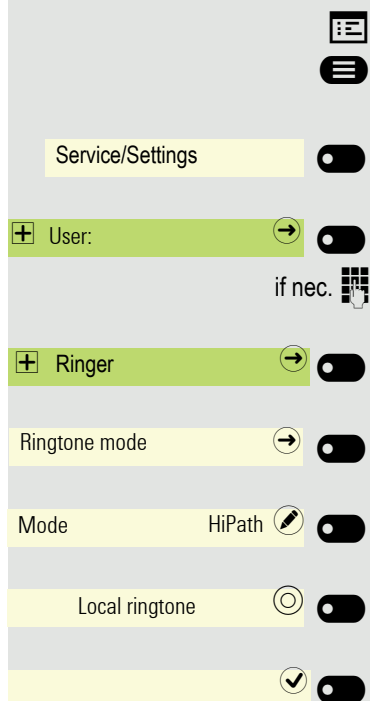

Open using the Softkey

Open using the Softkey.

Enter and confirm the User password.


Open using the Softkey.

Open using the Softkey.

Open using the Softkey.

Confirm with the Softkey to set "Local ringtone".

Save setting.

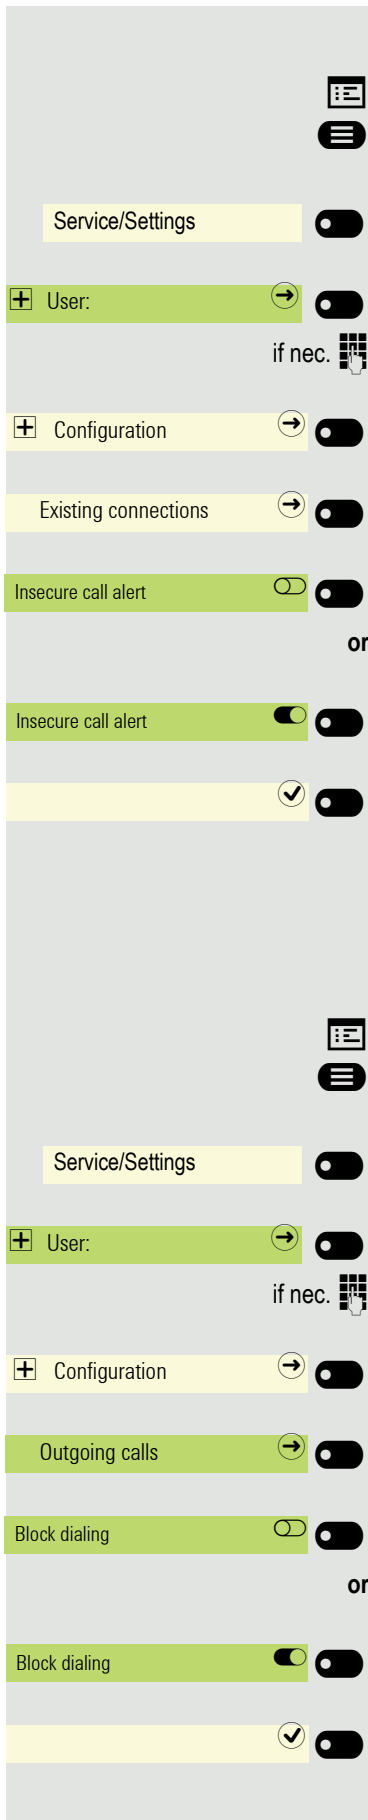

Insecure call alert

You can also configure this setting via the Web interface → page 195.

If nec. Press Main Menu key.

Open using the Softkey

Open using the Softkey.

Enter and confirm the User password.

Open using the Softkey.

Open using the Softkey.

Activate with the Softkey Insecure call alert.

Deactivate with the Softkey Insecure call alert.

Save setting.

Block dialing for outgoing calls

If block dialing is displayed, when deleting a phone number, for example, all of the characters available in the field are deleted at once. If block dialing is switched on, you can delete individual characters.

You can also configure this setting via the Web interface → page 195.

If nec. Press Main Menu key.

Open using the Softkey

Open using the Softkey.

Enter and confirm the User password.

Open using the Softkey.

Open using the Softkey.

Activate with the Softkey Block dialing.

Deactivate with the Softkey Block dialing.

Save setting.

Setting up Exchange access

To use your Exchange account in conversations you must enter the server address and your access details.

You can also configure this setting via the Web interface → page 195.

If nec. Press Main Menu key.

Service/Settings

User: if nec.

Configuration

Existing connections

Microsoft® Exchange

Server

EXACSY.com

User name

email@example.com

Password

123 *****

Folder (optional)

Output

Open using the Softkey

Open using the Softkey.

Enter and confirm the User password.

Open using the Softkey.

Open using the Softkey.

Open using the Softkey

Open using the Softkey

The input field is displayed.

Enter the URL for the Exchange server and conclude your input with the Softkey.

Open using the Softkey

The input field is displayed.

Enter your e-mail address used for Exchange and conclude your input with the Softkey.

Open using the Softkey

The input field is displayed.

Enter your password used for Exchange and conclude your input with the Softkey.

Open using the Softkey

The input field is displayed.

Enter the folder with the destination data and conclude your input with the Softkey.


Save the configuration.

Configuring the connection to UC

To use the Presence settings → page 70, you must be logged in to the UC server.

You can also configure this setting via the Web interface → page 195.

If nec. Press Main Menu key.

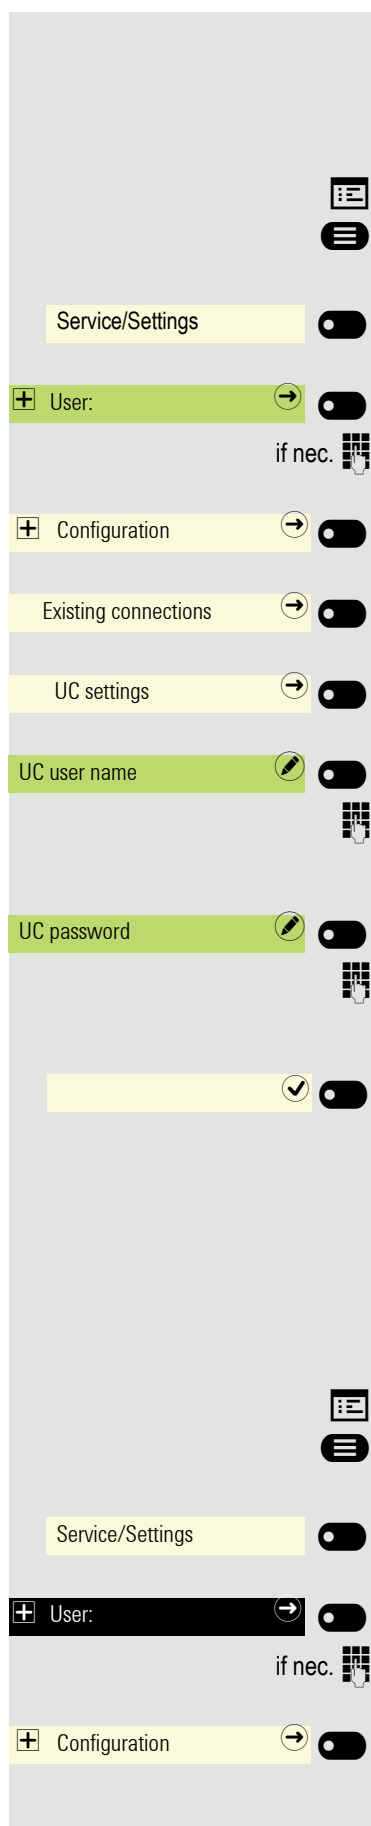

Open using the Softkey

Open using the Softkey.

Enter and confirm the User password.

Open using the Softkey.

Open using the Softkey.

Open using the Softkey.

Open using the Softkey.

Enter your name used for OpenScape Business and conclude your input with the Softkey.

Open using the Softkey.

Enter your password used for OpenScape Business and conclude your input with the Softkey.

Save the entries. You can now use the settings for UC → page 70.

UC Journal

You can access your UC Journal on your phone so you have the same list as on your other UC clients. The Conversations will be downloaded directly from the UC server and local conversation list will be replaced. As the Conversation list is controlled by UC server, there is no option to delete conversation or all conversations locally on phone.

You can also configure this setting via the Web interface → page 195.


If nec. Press Main Menu key.

Open using the Softkey

Open using the Softkey.

Enter and confirm the User password.

Open using the Softkey.

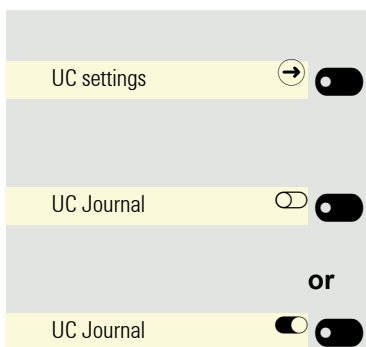

Open using the Softkey

Activate with the Softkey.


Deactivate with the Softkey.


OpenScape UC Voicemail


Prerequisite: UC mode is configured → page 187, and „Allow UC Journal“ is enabled → page 187.

When the OpenScape UC Voicemail is activated, the UC server provides all necessary data, including voice streams when playing messages.

When there are new voicemails from a contact, voicemail notifications are shown in the Conversation list.

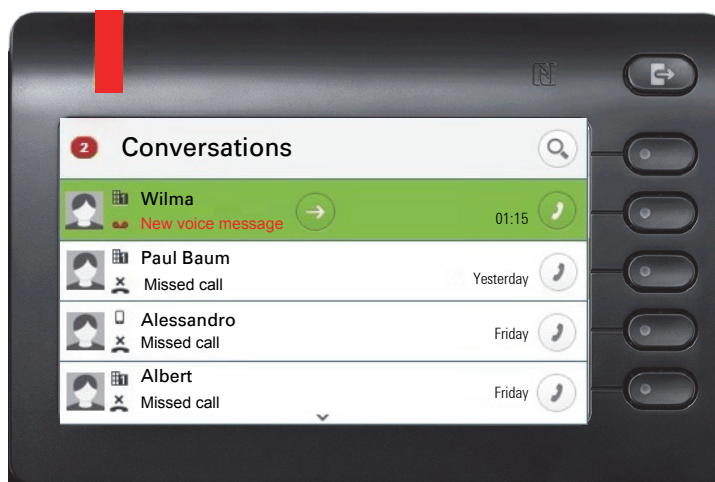


To access the Conversation details, press the  key.

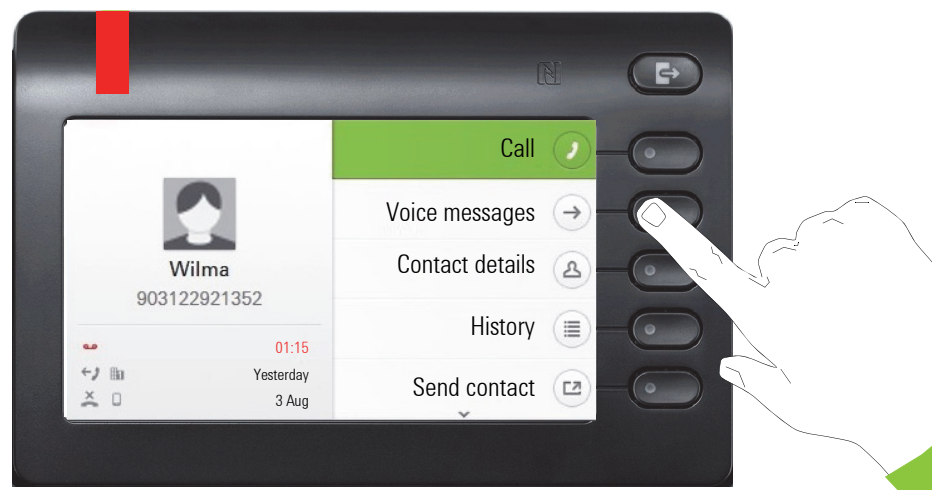


To show the list of voice messages for the particular contact, press the „Voice messages“. The Voice messages screen will be displayed.



The selected new voice message will be displayed with different options.

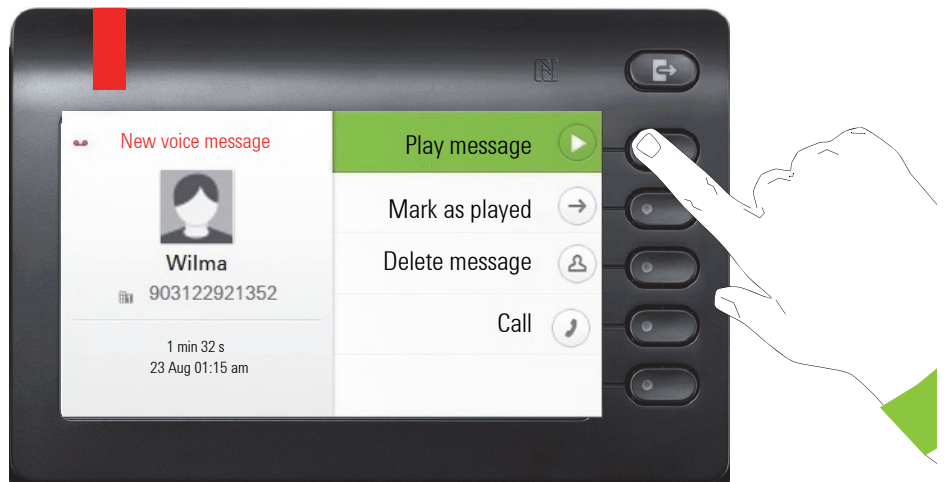

Select the desired option, e.g. „Play message“.

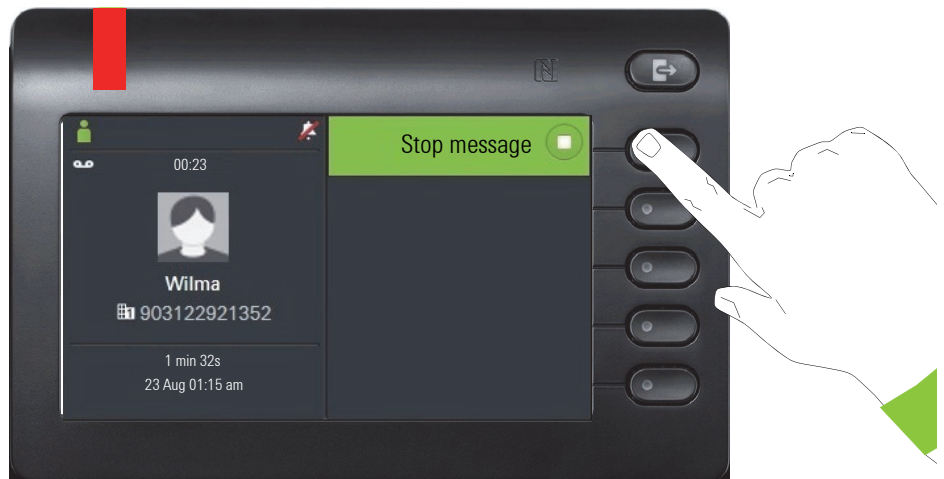


The Voice message playback screen appears. You can stop the message during playing.


Error messages

- The UC Presence (→ page 24) must be in “Office” state, otherwise playing voice message is not allowed by UC Suite. CallMe state also does not allow to play the voice message.
In this case when “Play message” command is selected, the display will stay in the Voice Message screen and show a standard error toast notification with the following text: "Not possible. Presence is not Office. To play voicemails your presence has to be Office".
- If the phone is not in idle state (e.g. because of the previous call and handset is still offhook), it is not possible to create voicemail call. You will get an error notification "Phone is busy".

SD-Card

You only see status information at present for a possible SD card. Usage is not yet possible.

 Please note that SD slot is available only on CP600.

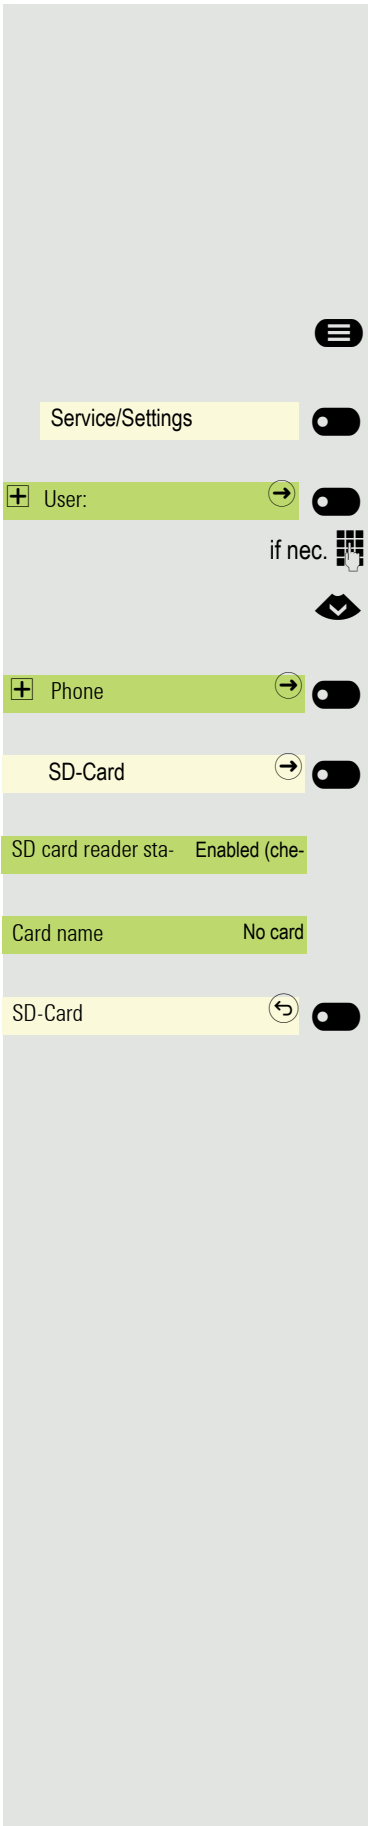

If nec. Press Main Menu key.

Open using the Softkey

Open using the Softkey.

Enter and confirm the User password.

Select "Phone".


Open using the Softkey.

Open using the Softkey.

The current status is displayed.

The current status is displayed.

Exit the menu.

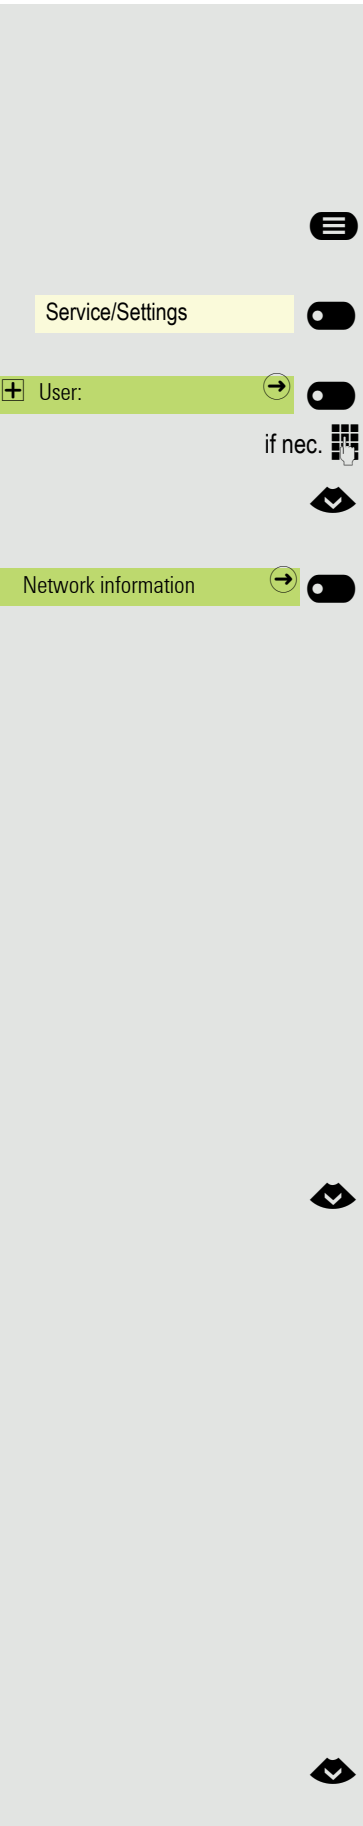

Displaying network information

This information overview in the user area of the service menu provides you with information about the IP address or name of the phone and the HTML address of the web interface. It also provides real-time data about the network activity of the phone.

If nec. Press Main Menu key.

Open using the Softkey


Open using the Softkey.

Enter and confirm the User password.


Select the "Network information" menu.

Open using the Softkey.


You can browse the following overview:

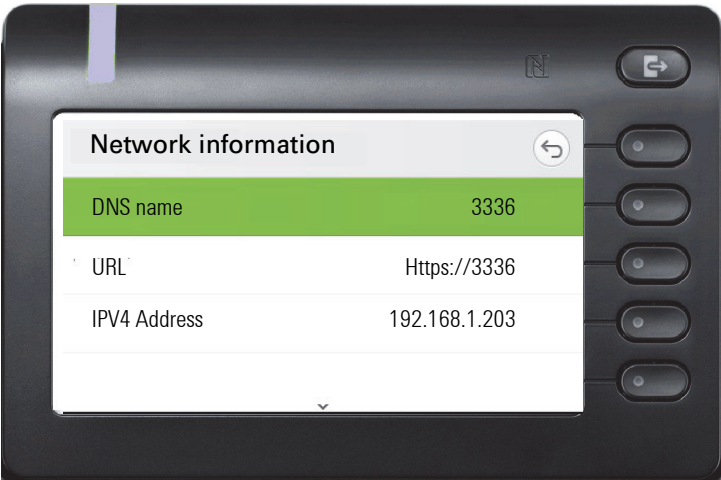


Scroll

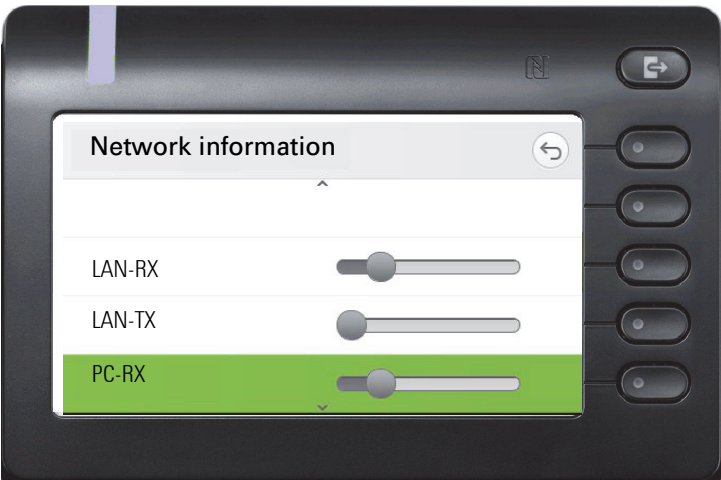

Scroll

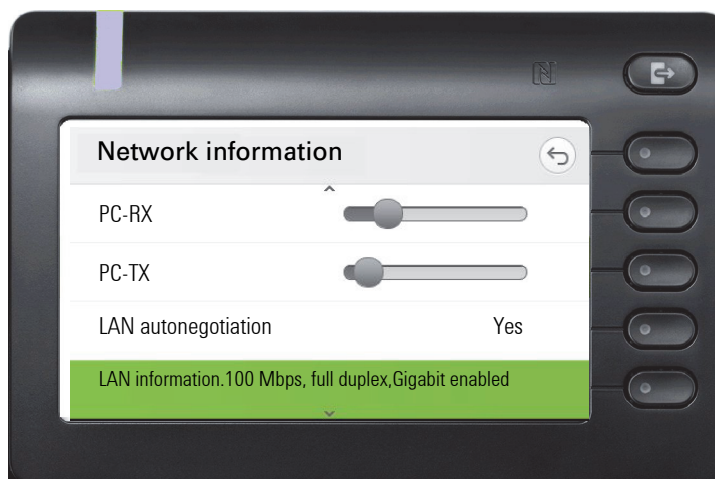

Scroll

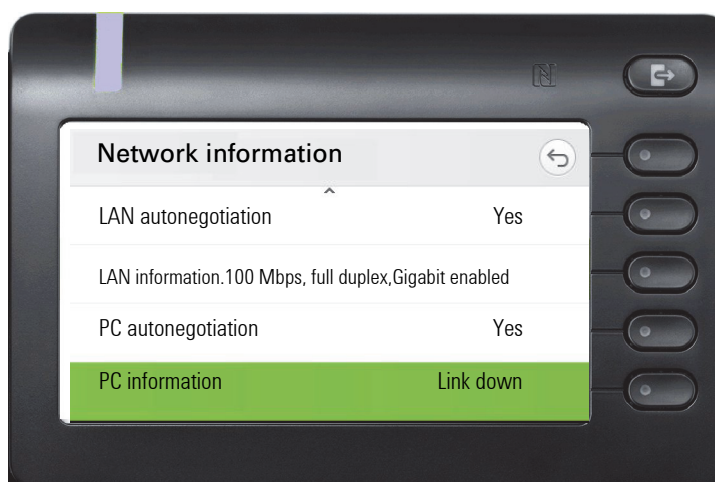

DNS name: Name or number of telephone.

URL: HTTP address of the web interface. This address is specified in the address line of the Internet browser and is used to call up the web interface of the phone in the browser.


IPv4 Address: Display of the IP address or name that was assigned to the phone in the network.

LAN-RX/PC-RX: The network or PC interface data packets received are illustrated dynamically in graphical form.

LAN-TX/PC-TX: The network or PC interface data packets sent are illustrated dynamically in graphical form.

LAN autonegotiation/PC autonegotiation [Yes][No]: Displays whether the network or PC interface data transfer rate is set to automatic (Yes) or manual (No).

LAN information/PC information: [10|100|1000] Mbit/s: Data transfer rate of the network or PC interface. If an interface is not in use, Link down is displayed.

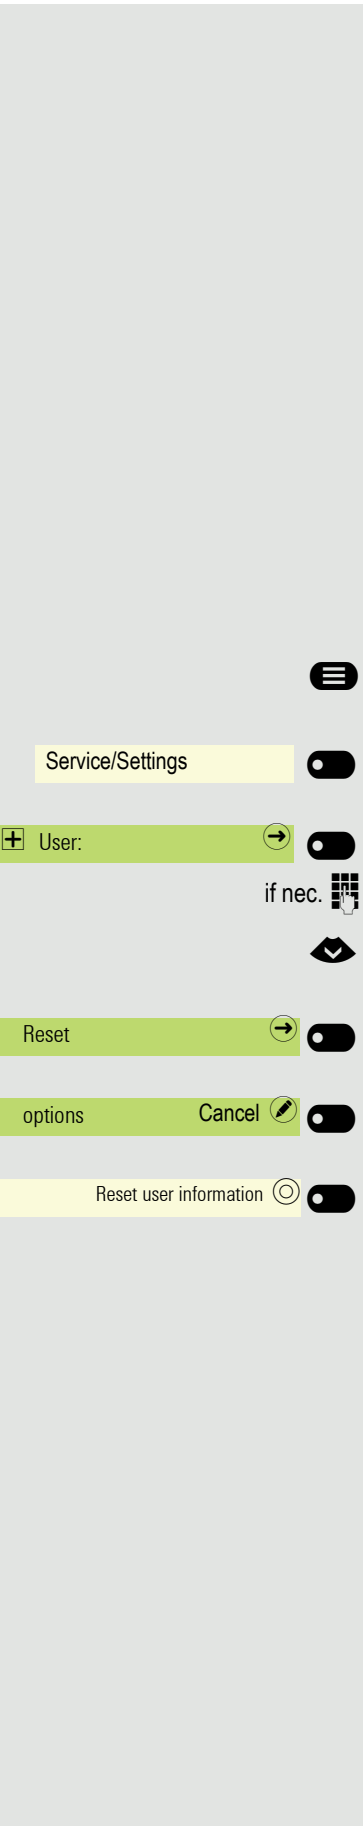

Resetting user data

All personal settings changed via the telephone menu or the web interface can be reset to factory settings.

➡ Some images for the screensaver will be deleted or deleted default images will be restored.

➡ Some ringer files will be deleted or deleted default ringer files will be restored.

➡ All of your personal information, and mainly your conversation list with contacts, is also deleted.

Important: All listed data is reset without a warning tone.

Initiating the reset

If nec. Press Main Menu key.

Open using the Softkey

Open using the Softkey.

Enter and confirm the User password.

Select the "Reset" menu.

Open using the Softkey.

Open using the Softkey.


Perform the reset **immediately** with the Softkey. The user data is reset to factory settings.

Web interface

General

You can configure a number of settings for your phone via the web interface. Communication occurs via a secure HTTPS connection. Access to the web interface must be activated by your administrator.

Launching the web interface

 For more information on the IP address, the web interface address, and how to connect the telephone to the network, refer to the section entitled "Network information" → page 192.

To launch the interface, open a web browser and enter the following:


https://[IP address of the phone]

[IP address of the phone] is the IP address of your phone.

or

https://[Name of the phone]

[Name of the phone] that was assigned by the administrator.

 You might receive a certificate notification from the browser. Follow the instructions to download the certificate.

You will be prompted to configure a user password the first time you call up the web interface → page 158. You must log in with this password in future every time you want to open the User pages.

Licenses


This area provides you with the information about EULA (End User License Agreement) and Open Source licenses. For further information, consult your administrator or refer to the administration manual.

Administrator pages

This area lets you configure settings for administering your phone and the network environment. Access to the Administrator pages is protected by the admin password. For further information, consult your administrator or refer to the administration manual.

User pages

All entries under the user menu on the web interface can also be found under the user menu on the telephone → page 48.

 You will be prompted to configure a user password the first time you call up the web interface → page 158. You must log in with this password in future every time you want to open the User pages.

- Click a menu heading to display the individual menu entries. Click the menu heading again to close the menu.
- Click a menu entry to open the corresponding website.
- Make the desired changes.
- Click the corresponding button to save or discard your changes.

Button functions

- "Login": Log in to the phone after you have entered the user password
- "Save": Applying changes
- "Reset": Reset original values
- "Update": Update the values
- "Log out": Log out from the phone



User menu

User Login



Password  → page 159

- Old password
- User password
- Confirm password






Ringer

- Local ringers
- Call type  → page 183
 - Internal call
 - Ringer sound
 - Pattern melody
 - Pattern sequence
 - External
 - Ringer sound
 - Pattern melody
 - Pattern sequence
 - Attention
 - Ringer sound
 - Pattern melody
 - Pattern sequence
- Ringer mode ( → page 184)
 - HiPath
 - Local ringer



Audio

- Audio Settings
 - Ringer  → page 68
 - Room Character  → page 67
 - Headset socket → page 69

Configuration

- Outgoing calls
 - Autodial delay (seconds)
 - Block dialing  → page 185
- Forwarding  → page 95
 - Forwarding favorites
 - Destination
- Connected calls  → page 185
 - Insecure call alert
- Bluetooth
 - Configuration
- UC login information  → page 187
 - UC username
 - UC- Password
 - UC Journal
- Microsoft® Exchange  → page 186
 - Server
 - User name
 - Password
 - Folder to sync (optional)

Phone

- Display  → page 56
 - Display Brightness
 - Key module contrast
 - Key module brightness
 - Idle menu mode
- Inactivity
 - Screen type
 - Idle time (mins)
 - Slide time (secs)
- Energy saving mode  → page 58
 - Activate after:
 - Backlight dim
 - Backlight off

File transfer → page 62

- Slideshow images

Slideshow images

Select the image file you wish to use as slideshow images

Closing or navigating away from this page will cancel the file transfer

Delete all user slideshow images

Default slideshow images will be restored

<input type="button" value="Delete"/>	Users image no 01
<input type="button" value="Delete"/>	Users image no 02
<input type="button" value="Delete"/>	Users image no 03
<input type="button" value="Delete"/>	Users image no 04
<input type="button" value="Delete"/>	Users image no 05
<input type="button" value="Delete"/>	Users image no. 06
<input type="button" value="Delete"/>	Users image no. 07
<input type="button" value="Delete"/>	Users image no. 08
<input type="button" value="Delete"/>	Users image no. 09
<input type="button" value="Delete"/>	Users image no. 10
<input type="button" value="Delete"/>	Users image no. 11
<input type="button" value="Delete"/>	Users image no. 12
<input type="button" value="Delete"/>	Users image no. 13
<input type="button" value="Delete"/>	Users image no. 14
<input type="button" value="Delete"/>	Users image no. 15
<input type="button" value="Delete"/>	Users image no. 16
<input type="button" value="Delete"/>	Users image no. 17

You can delete your installed images in full or individually.

- Ringtones
- Contacts

Diagnostic information

Fixing problems

Responding to error messages on the display

Incorrect input

Possible causes:

Number is not correct.

Possible response:

Enter correct number.

No authorization

Possible cause:

Locked function attempted.

Possible response:

Apply for authorization to execute function from manager.

Currently not possible

Possible cause:

Dialing a non-existent number. Phone you are trying to reach is not in use.

Possible response:

Enter correct number. Call again later.

Phone number invalid

Possible cause:

Own number entered.

Possible response:

Enter correct number.

Key memory is full

Possible cause:

External phone number memory space in system currently full.

Possible response:

Try again later.

Conflict on another level

Possible 1st cause:

If "delete other level" shows in menu:

You have tried to save a function or internal phone number with LED-display using a key on an already occupied level (e.g. an external phone number).

Possible response:

Confirm "delete other level" to save the phone number/function.

Possible 2nd cause:

If "clear LED support" shows in menu:
You have tried to save a number without LED-display or an external number using a key that already has an internal number with LED-display.

Possible response:

Confirm "clear LED support" to save the call number. The existing internal number remains on the other level without LED-display.

Pressed key does not respond:


Check if the key is stuck.

Phone doesn't ring when called:

Check if your phone is on silent (silent icon appears on status screen → page 23). If so, turn off silent mode.

To correct any other problems:

Contact your administrator if a fault persists for more than 5 minutes, for example. Pass on the message displayed in the red field, if appropriate, as shown in the next example. Problems that cannot be corrected should be referred to Customer Service.

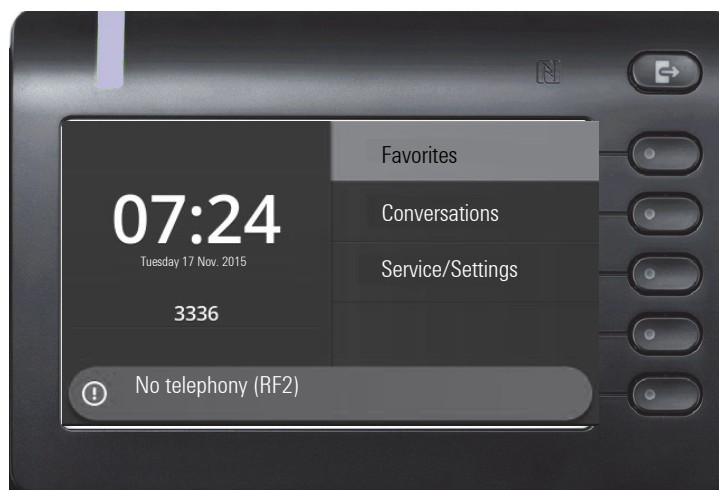


Contact partner in case of problems

Contact your administrator if a fault persists for more than 5 minutes, for example.

Local user menu

Opening the user menu on the phone










Select and confirm the **Users** menu option. You are prompted to enter the User password. Confirm your input with the  key. The user menu options are available.

User menu display

















Most of the settings that are configured from the user menu can also be accessed via the web interface → page 197.

⊞ Users






⊞ Ringer

- Local ringers → page 183
 - 1: Internal call
 - Name Internal call
 - Ringer 
 - Pattern melody 
 - Pattern sequence 
 - 2: External
 - Name External
 - Ringer 
 - Pattern melody 
 - Pattern sequence 
 - 3:Alert tone 2
 - Name Alert tone 2
 - Ringer 
 - Pattern melody 
 - Pattern sequence 
- Ringer mode












⊞ Audio

- Volumes → page 182
 - Loudspeaker  
 - Ringer  
 - Handset  
 - Headset  
 - Speakerphone mode  
 - Rollover  
 - Warning tone  
- Settings
 - Ringer Ringer2.mp3 → page 68
 - Room acoustic Normal  → page 67
 - Normal
 - Echoing
 - Muffled
 - Headset socket Cordless headset  → page 69
 - Wired headset
 - Cordless headset
 - Conference device




⊞ Configuration

- Outgoing calls?
 - Block  → page 95
- Call forwarding → page 185
 - ☐ Variable: All calls 
 - ☐ Variable: External calls 
 - ☐ Variable: Internal calls 
- Connected calls
 - Insecure call alert  → page 185

⊞ Phone

- Idle screen → page 61
 - Enabled 
 - Monitor Type Slideshow 
 - Wait time 5 
 - Screen change (se.. 10 
- Display → page 56
 - Brightness  
 - Key module contrast  
 - Key module brightness  
- Key programming → page 76
 - Edit dialing feature
 - Assign phone function
- Energy saving mode
 - Activate after 5 Minutes / 20 Minutes  → page 58
 - Dim light 5 Minutes
 - Light out 20 Minutes

User password changing

- Current password 
- New password 
- Confirm password  → page 159

Network information

→ page 192

Diagnostic information

Reset

- options Cancel  → page 194

Key terms

A

Accept arranged call	167
Account language	165
ACCT Account code	165
Activating/deactivating call waiting	72
Administration	53
Agents	151
Announcement	56, 91, 154
Answering machine	172
Applications	29
Calling an application	29
Open context menu	29
Selecting an entry	29
Applications menu	48
Appointment	166
Assign free keys	76
Assigning calls	151
Assigning function keys	
Function	76
Associated services	173
Audio	
Room acoustic	67
Audio controls	19
Automatic connection set up	91
Automatic connection setup	91
Automatic line seizure	88

B

Background lighting	58
Beacon	135
Bluetooth	111
NFC	111

C

Call	
accept	82
assign	151
Door terminal	85
Exit	86
forwarding	95
forwarding in the team	143
holding	106
in the team with line/trunk keys	138
park a call	105
pick up in the team	142
pick up, directed	83

pick up, group	149
retrieve parked call	105
transfer	104, 142
Call charge assignment	165
Call duration	163
Call forwarding	95
Call number	
Deactivating display	155
suppress	155
Call number suppression	155
Call second individual	104
Call waiting	
accept	103
Reject/accept	72
Without Tone	72
Callback	100
Calling departments	87
Calls in queue	151
CE marking	3
Central code lock	157
Change password	159
Changing the user password	159
Charges	
for a different phone	163
for your phone	163
Code lock	
central	157
for a phone	156
Complete deletion	172
Conference	108
Configuring the connection to UC	187
Connecting call	149
Connection costs	
for a different phone	163
for your phone	163
Connection options	17
Connection setup	
Automatic	91
Contact, deleting	40
Context-dependent displays	26
Conversations	30
search,	36

D

Data mobility	169
Data privacy	169
Deactivate password	160
Deactivating the user password	160
Deleting a contact	40
Dialing	
Internal / external	87
with handset on hook	87

with redial	89
with speed dialing	90
with the selected dialing key	89
Dialog	28
Dialpad	21
Direct Inward System Access	174
Direct station selection (DSS)	77, 141
DISA	174
Display icons	211
Connection status	42
Do not disturb	154
Door terminal	85
DTMF dial tone (Tone dialing)	110
During a consultation	104

E

Eddystone Beacon	135
Emergency call	161
Emergency number	161
Exchange	186
External code	87

F

Fast access	
central	90
post-dialing	90
selecting	90
Fax message received	172
Feature dialog	28
Feature keys	
Display function	47
Forwarding	95
Functions	
on/off for a different phone	173
reset	172
using externally	174

G

General information	11
Graphic display	23
Icons for connection status	42
Group call	147, 177

H

Handsfree answerback	84
Authorize	85
to lock	85
Holding	106
In the team	139
Hotline	91
Hunt group	147, 177

I

Icons	211
Connection status	42
Idle function	154
Incoming fax message	172
Info (text)	
accept	92
delete/display	91
receive	92
Sending	91
Insecure call alert	185
IP telephony	177

K

Key modules	18
Keys	
assign	76
program	76

L

LAN telephony	177
LED displays	46
Line/trunk keys	138
Level	51

M

Making external calls	87
Menu "Users"	196
Message (text)	
accept	92
delete/display	91
receive	92
Sending	91

Microphone	86
Missed calls	89
Mobile phone calls	168
Mobile phone number, guest phone	169
Mobility	169
Mobility variants	169
Mode keys	19
MULAP conference release	140
MULAP keys, line/trunk keys	137

N

NFC	111
Night answer	179

O

Open door	85, 181
Open listening	102
OpenScape Desk Phone CP600	
Provides hands-free listening	82, 102
OpenScape Key Module 600	18
Operate door terminal	85
Operation notes	3

P

Parameters	50
Park (call)	105
Personal identification number	158
Phone	
central (un)locking	157
lock other	157
locking/unlocking	156
Set-up	56
to lock	156
using another as your own	168
Phone programming	56
Phone Settings	56
Pickup (Call)	83, 149
PIN	158
post-dialing	
Automatic	90
Tone dialing DTMF	110
Post-processing time	152
Presence	24
Presence status	70
Primary line	137
Private line	137
Procedure	
programming a key	79
Program free keys	76
Programmable keys	43, 46
Programming free keys	76

R

Radio paging system RPS	137, 176
Receiving a call	82
Redial	89
Reset services	172
Resetting functions	172
Response text	93
deleting	94
leave	93
Ringer off	66
Ringling group	180

S

Safety notes	3
Save lock code	158
Second call	
allowing	72
Rejecting	72
Secondary line	137, 192
Service menu	48
Set presence	70
Setting headset port	69
Shared line	137
Signal tone for call waiting on/off	72
Simplified dialing	88
Softkey	26
Softkeys	19
Speaker	82
Speaker call	56, 91, 154
Speakerphone mode	
Function	82, 102
Special dial tone	154
Switch call	
with manager/secretary	145
Switches	49
System speed dial	90

T

Telephone data service	175
Telephony interface	
SingleLine	41
Temporary phone	168
Toggle/connect	104
In the team	139
Tone dialing	110
Trace call forwarding	178
Transfer (call)	104, 142

U

UC	187
Understanding LED displays	77
Understanding LED notifications	141, 144
Universal Call Distribution	151
User interface	16
User menu	196
User page	
programming a key	79
User support	15
Using a mini switch	18
Using network ports more efficiently	18

V





Variable call forwarding	95
--------------------------------	----





W


Web interface	195
---------------------	-----





Functions and codes in overview (alphabetical)

The following table shows all possible functions, as shown on the display. When configured (ask your service personnel), you can initiate the functions in the direct dialog (select + confirm), via the service menu (select + confirm or code) or via keys configured as function keys.

















Functions Displays	... in the direct Dialog	... via the Service menu → page 48	Code	... with Key
	 	 		
Accept call waiting (camp-on)	✓	✓	*55	X
Waiting tone off	✓	✓	*87	X
Waiting tone on	✓	✓	# 87	X
Automatic call wait.on		✓	*490	X
Automatic call wait.off		✓	# 490	X
Headset (Headset)				X
Accept call	✓			
Reject call	✓			
Disconnect				X
DND on	✓	✓	*97	X
DND off	✓	✓	# 97	X
Universal Call Distribution				
Log on		✓	*401	X
Log off		✓	# 401	X
Available		✓	*402	X
Not available		✓	# 402	X
post-processing on		✓	*403	X
post-processing off		✓	# 403	X
UCD night on		✓	*404	X
UCD night off		✓	# 404	X
Calls in queue		✓	*405	X
Advisory msg. on	✓	✓	*69	X
Advisory msg. off	✓	✓	# 69	X
assoc. Services		✓	*83	X
associated dialing		✓	*67	X
Recording				X
Override	✓	✓	*62	X
Audio baby monitor		✓	*88	X
DATA I/O Service			*494	X
Reset services		✓	# 0	X
Speaker call		✓	*80	X

Functions Displays	... in the direct Dialog	... via the Service menu → page 48		... with Key
	 	 	Code	
Handsfree answerback on	✓	✓	*96	X
Handsfree answerback off	✓	✓	# 96	X
DISA				
Internal DISA	✓	✓	*47	X
Discreet calling			*945	
Shift (Shift)				X
Telephone test		✓	*940	
Tracing a call		✓	*84	X
Temporary phone		✓	*508	X
Group calls on	✓	✓	*85	X
Group calls off	✓	✓	# 85	X
All Groups on	✓	✓	*85*	X
All Groups off	✓	✓	#85#	X
Hot line				
Send message	✓	✓	*68	X
View sent messages	✓	✓	# 68	X
Show messages	✓	✓	# 68	X
Mailbox				X
Keypad dial		✓	*503	
Conference	✓	✓	*3	X
Start Conference	✓			
Adding a party	✓			
End conference	✓	✓	# 3	
Release participants	✓	✓		
Disconnect TLN conference			*491	
Show call charges (own Phone)		✓	*65	X
Check costs (other Phone)				X
Select speed-dial number		✓	*7	X
Select speed-dial (individual)		✓	*92	X
Line queuing	✓			X
Toggle/connect	✓	✓	*2	X
DTMF dialing		✓	*53	X
Microphone off			*52	X
Microphone on			#52	X
Mobile login log off			#9419	✓
Mobile login login			*9419	✓
Night answer on	✓	✓	*44	X
Night answer off	✓	✓	# 44	X

Functions Displays	... in the direct Dialog	... via the Service menu → page 48		... with Key
	 	 	Code	
Parking a call		✓	*56	X
Retrieve call		✓	#56	
Paging				
Report (not for U.S.A)		✓	*59	
Project code		✓	*60	X
Consultation	✓			X
Return to held call	✓	✓	*0	
end and back	✓	✓	*0	
Transfer/Accept	✓			
Callback	✓	✓	*58	X
View/delete callbacks	✓	✓	# 58	
Block phone number	✓	✓	*86	X
Forward phone number	✓	✓	# 86	X
Assign phone number (not for USA)	✓	✓	*41	X
Call transfer on		✓	*502	X
Call transfer off		✓	# 502	X
Group ringing		✓	*81	X
Group ringing off		✓	#81	X
Silent mode on	✓	✓	*98	X
Silent mode off	✓	✓	# 98	X
Switch on (only with OpenScape Business)		✓	*90	X
Switch off (only with OpenScape Business)		✓	# 90	X
Network signal (Flash)		✓	*51	X
Language selection		✓	*48	
Key assignment		✓	*91	X
Lock phone	✓	✓	*66	X
Open phone	✓	✓	#66	X
Change PIN		✓	*93	
Phone book				
1=Internal	✓		*54	X
2=LDAP	✓		*54	X
Telephone data service		✓	*42	
Timed reminder on		✓	*46	X
Timed reminder off		✓	# 46	X
Door opener on		✓	*89	X
Door opener off		✓	# 89	X
Door opener		✓	*61	X
Transfer	✓			

Functions Displays	... in the direct Dialog	... via the Service menu → page 48		... with Key
	 	 	Code	
Call pickup, directed		✓	*59	X
Call pickup in pickup group	✓	✓	*57	X
Picking up a call	✓			
Forwarding on	✓	✓	*1	X
1=all calls	✓	✓	*11	X
2=only external calls	✓	✓	*12	X
3=only internal calls	✓	✓	*13	X
Forwarding off	✓	✓	#1	X
CFNR on		✓	*495	X
CFNR off		✓	# 495	X
Trunk FWD on	✓	✓	*64	X
Trunk FWD off	✓	✓	# 64	X
Forwarding MULAP on		✓	*501	X
Forwarding MULAP off		✓	# 501	X
Redial	✓			
Reconnect, Ln		✓	*63	X
Central code lock		✓	*943	X

Display icons in the Notification area

	The ringer is deactivated → page 22
	The ringer is set to a beep → page 22
	The "Do not disturb" function is activated → page 154
	The phone lock is activated → page 161
	The phone rings → page 82
	You are connected → page 102
	Call a party → page 87
	Presence status for Office → page 70
	Presence status for Meeting → page 70
	Presence status for Lunch break → page 70
	Presence status for Out of Office → page 70
	Presence status for Break → page 70
	Presence status for Sick → page 70
	Presence status for At home → page 70
	Presence status for On vacation → page 70
	Presence status for Do not disturb → page 70